


LORIS 160x200

(HR) ŠEMA MONTAŽE
(GB) ASSEMBLY INSTRUCTION
(DE) AUFBAUANLEITUNG




13cm A x6	M8 B x4	8x80mm C x2	6x100mm D x4	M6 E x4	M6 F x4	 G x2	M8 H x2	 30 min
-------------------------	-----------------------	---------------------------	----------------------------	-----------------------	-----------------------	----------	-----------------------	------------


13cm I x2	8x40mm J x4
-------------------------	---------------------------

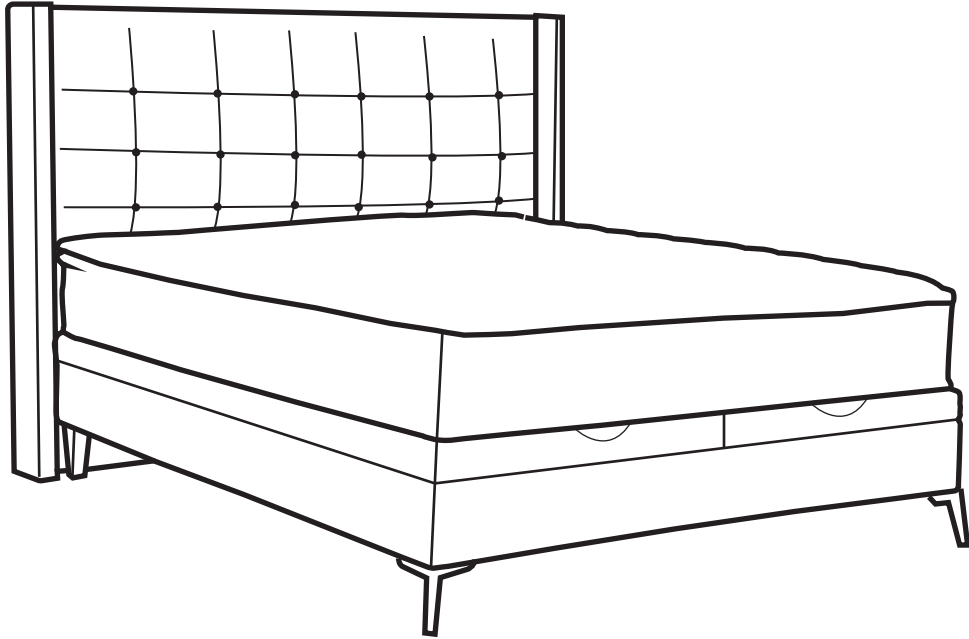

1

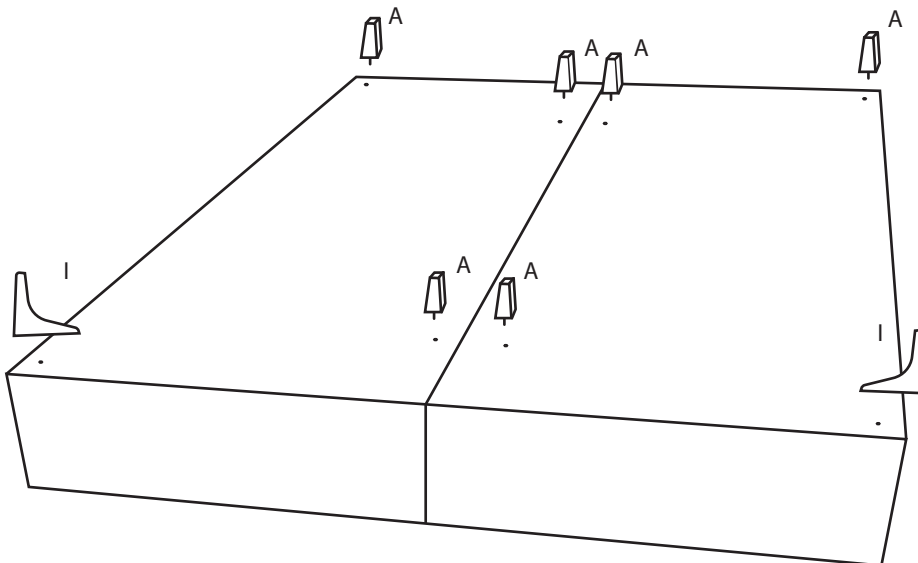

2

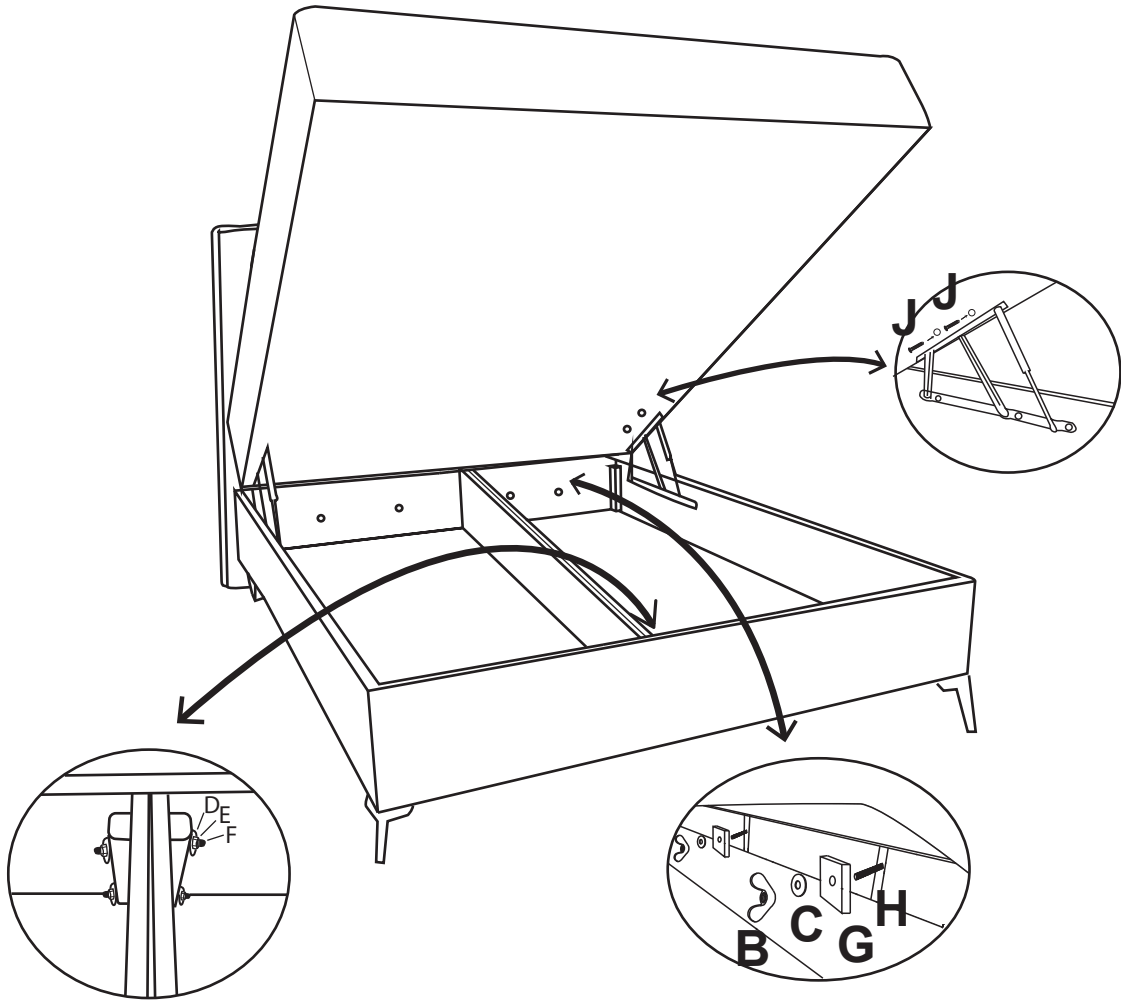

3

