
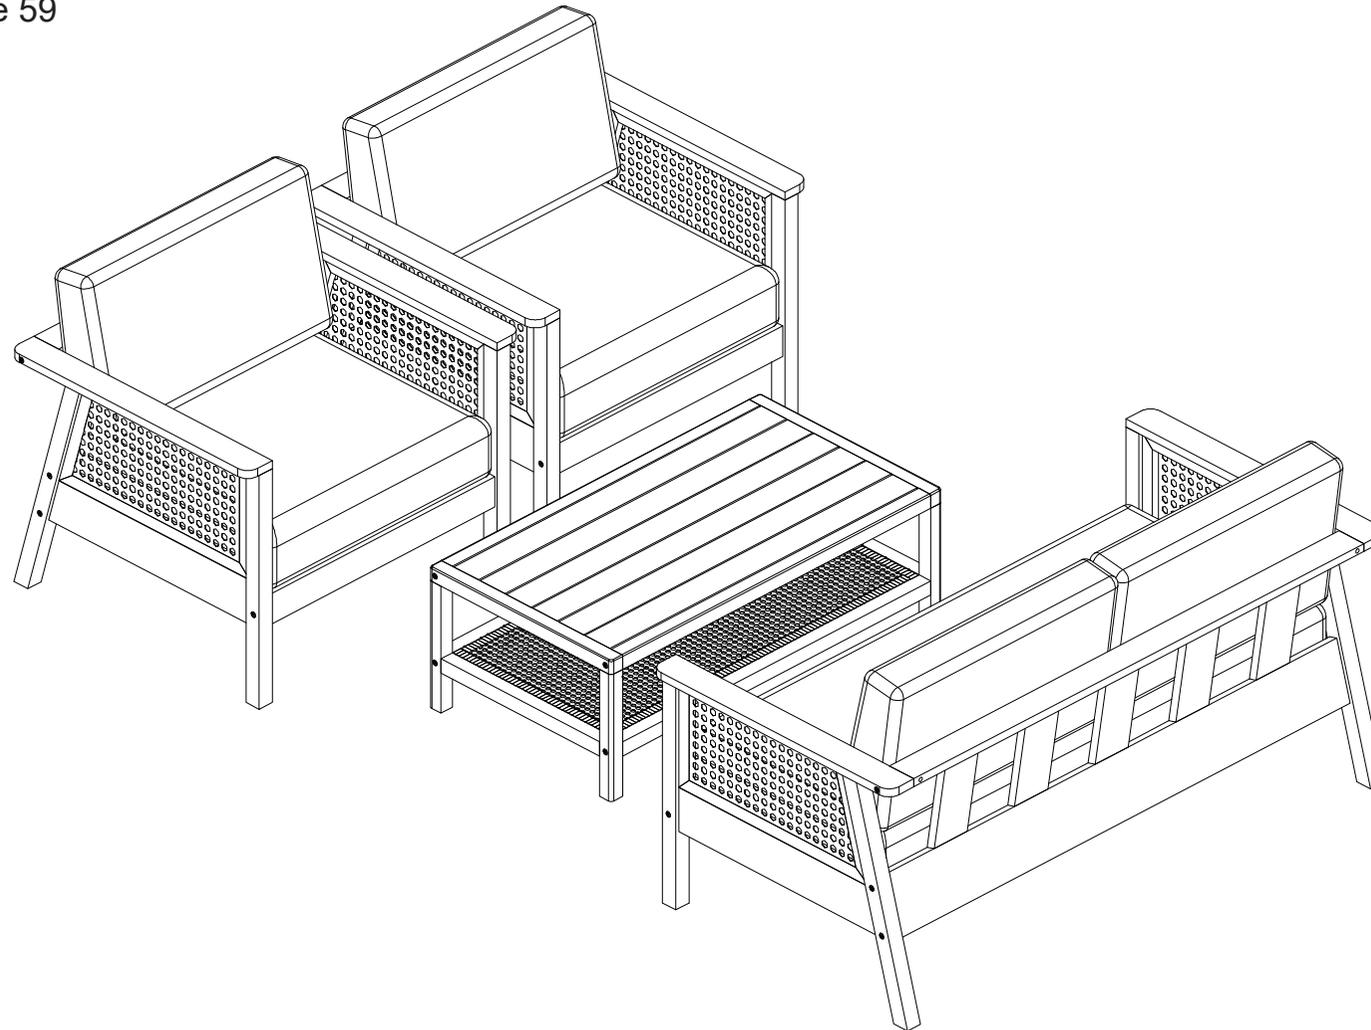
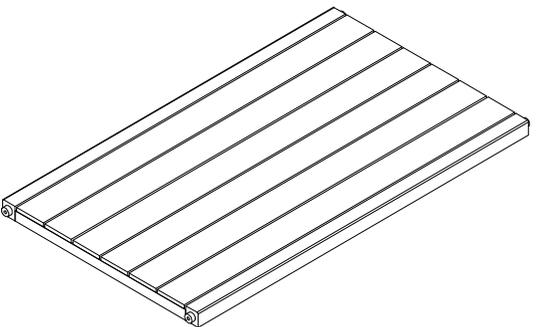
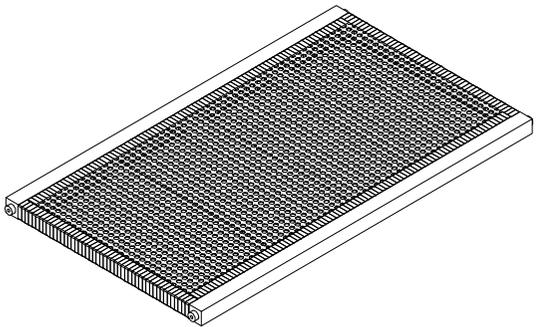




ambia. GARDEN

BDSK Handels GmbH & Co. KG
Mergentheimer Straße 59
DE-97084 Würzburg

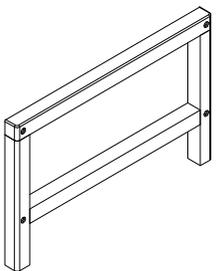



ASSEMBLY INSTRUCTIONS: 12540089/01

No	Name of Hardware	Fig	Q.ty	A	B	C
1	Screws M6x60		8			
2	Screws M4x35		2			
3	Allen Key		1			
				1x	1x	2x

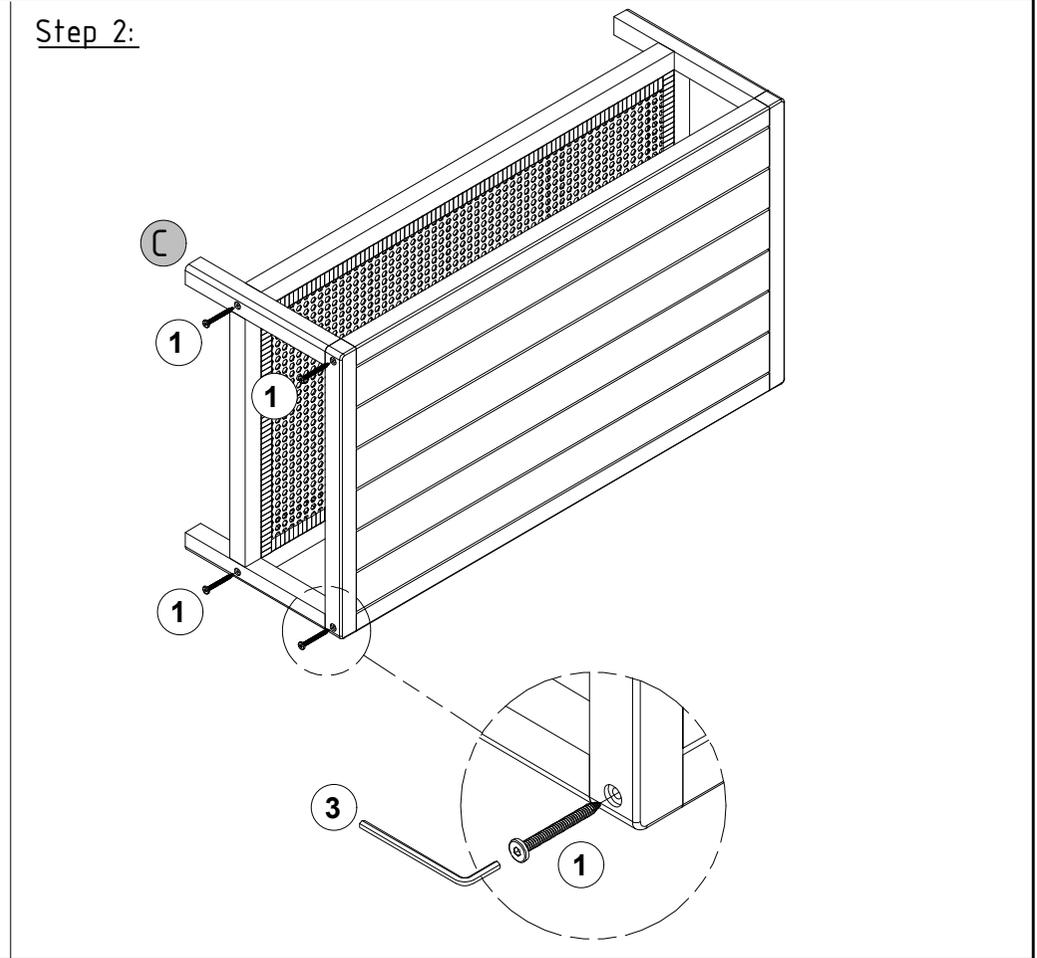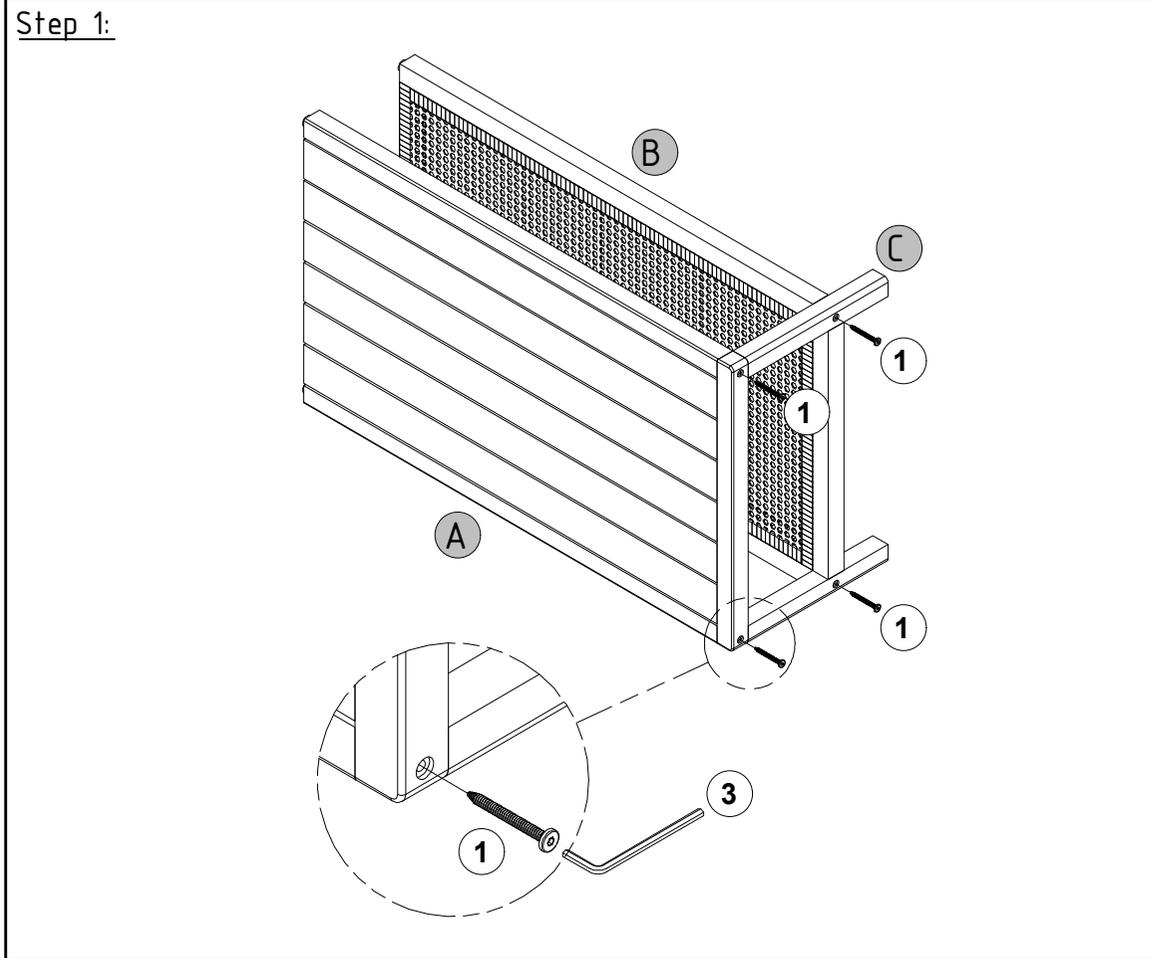


ASSEMBLY INSTRUCTIONS: 12540089/01




Step 3:

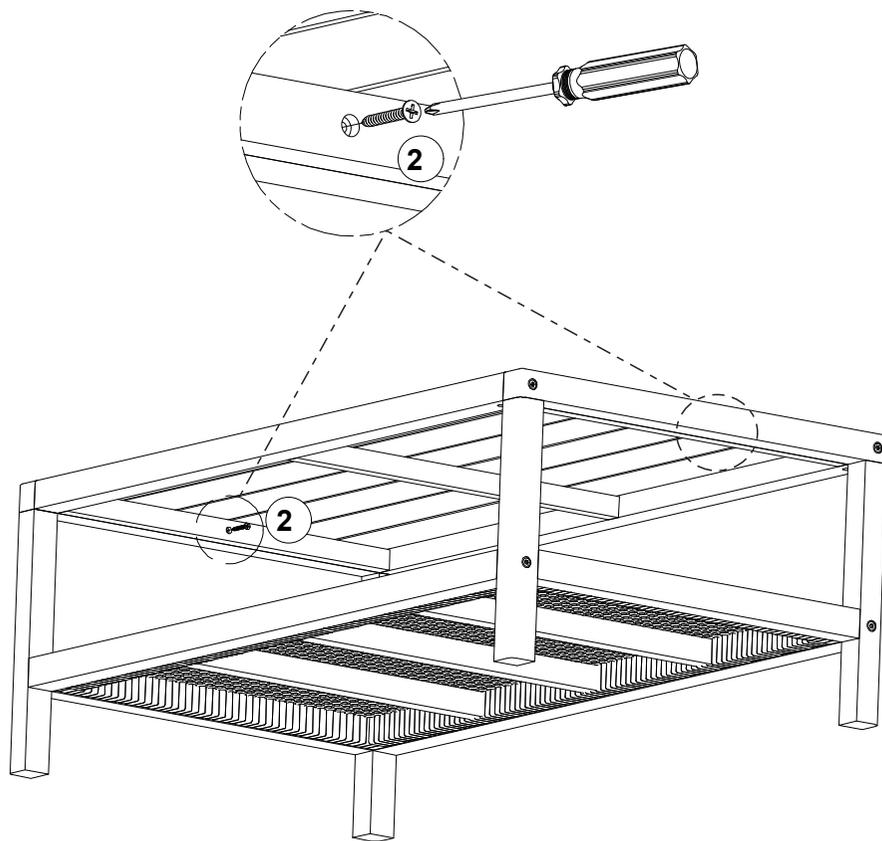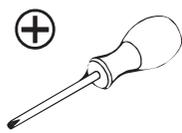

Step 4:







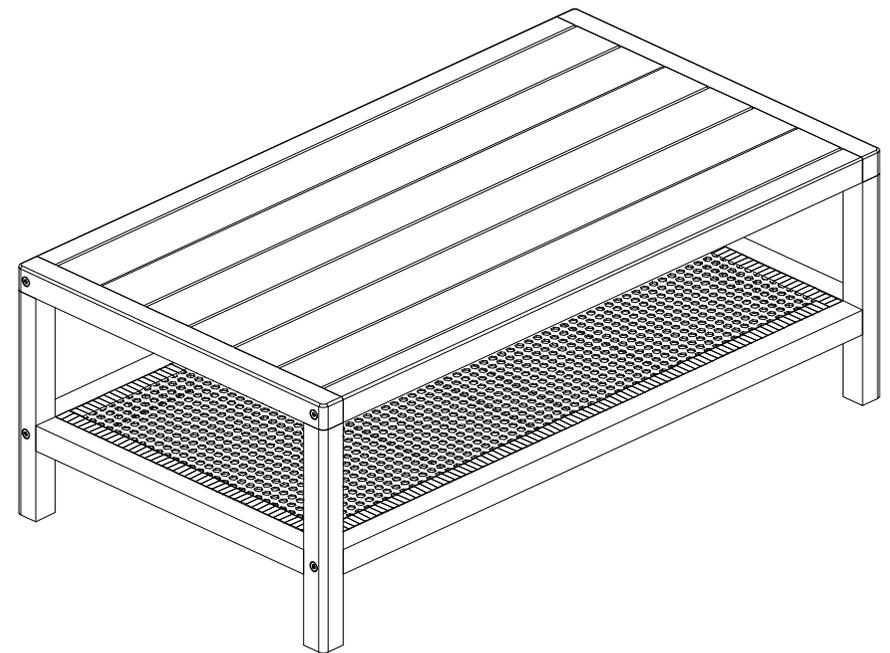


ASSEMBLY INSTRUCTIONS: 12540089/01

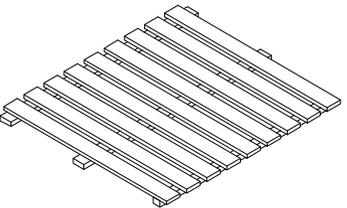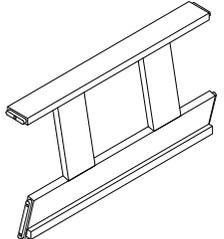No	Name of Hardware	Fig	Q.ty	A	B
1	Screw M6x90		4		
2	Screw M6x70		8		
3	Screw M6x35		4		
4	Allen Key		1		


x2

x2

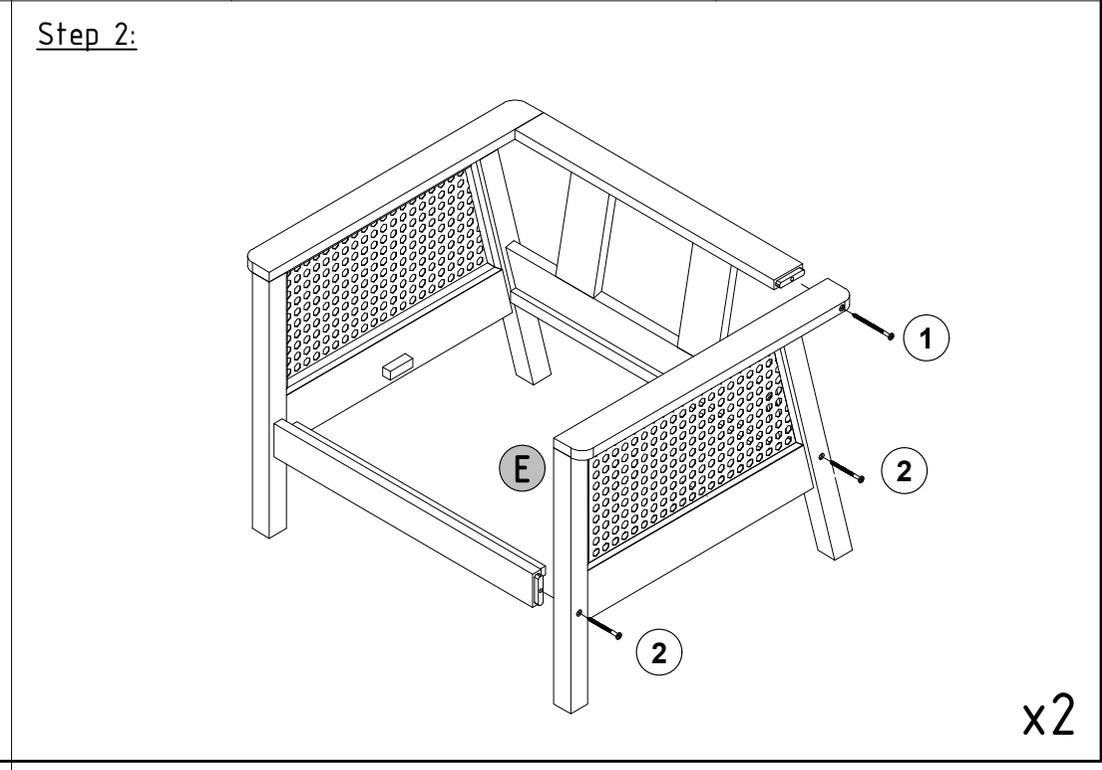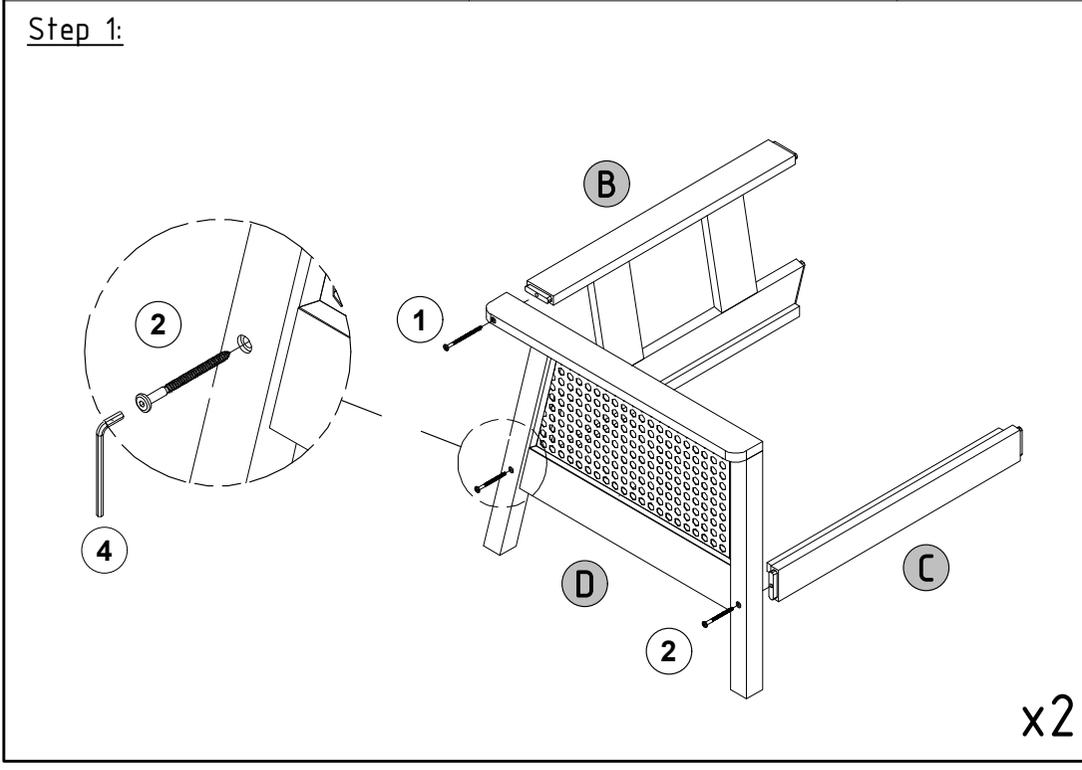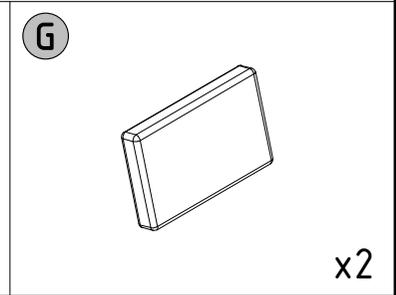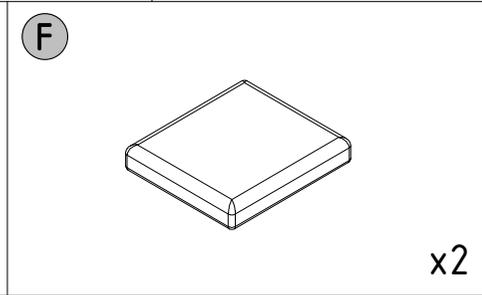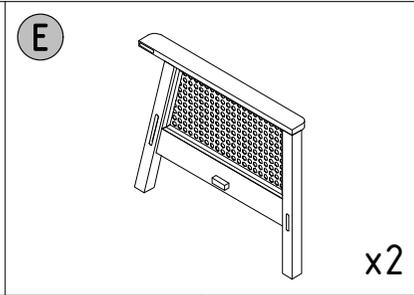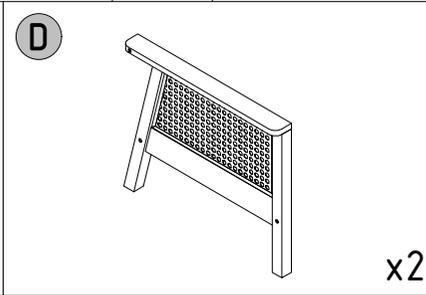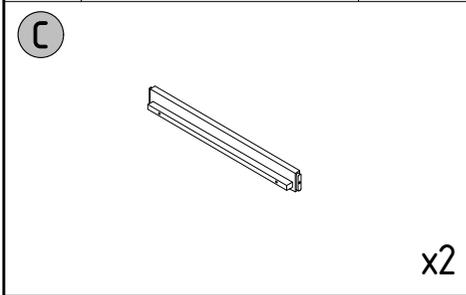


ASSEMBLY INSTRUCTIONS: 12540089/01

Step 3:

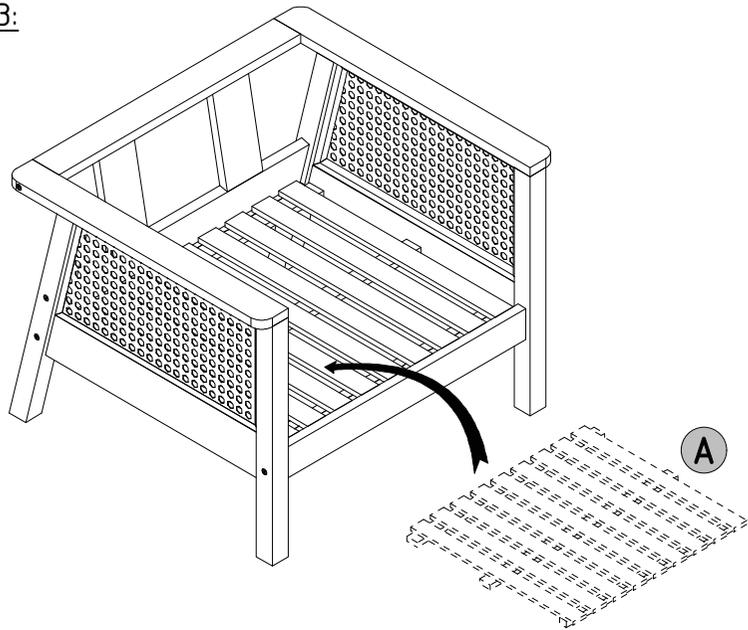


x2

Step 4:

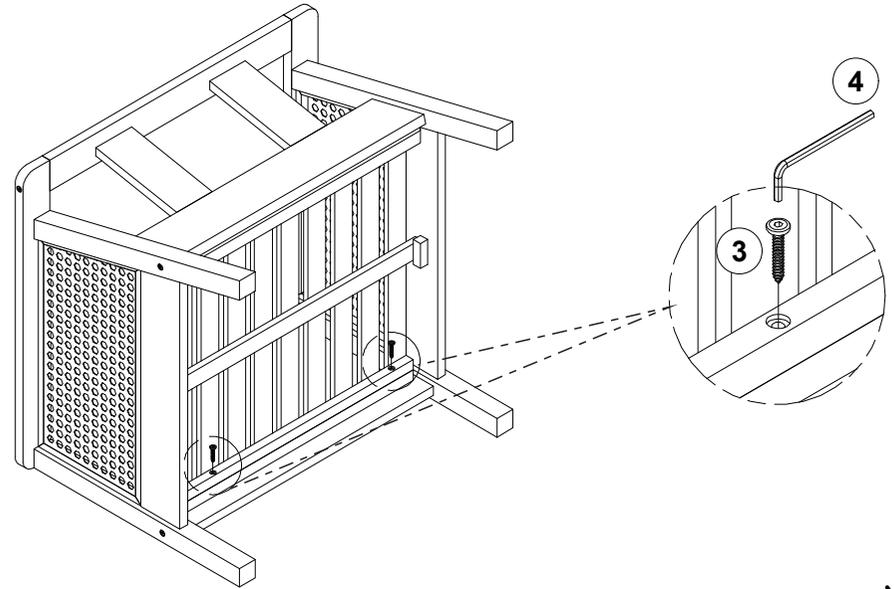


x2

Step 5:

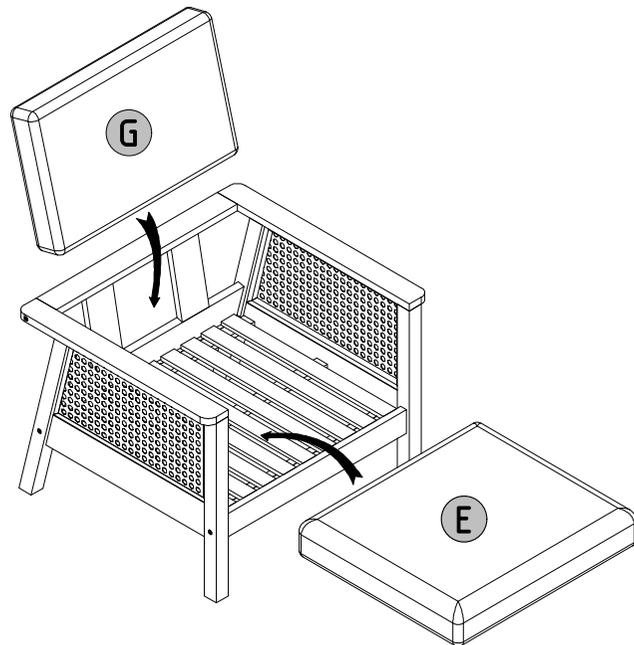




x2

Step 6:

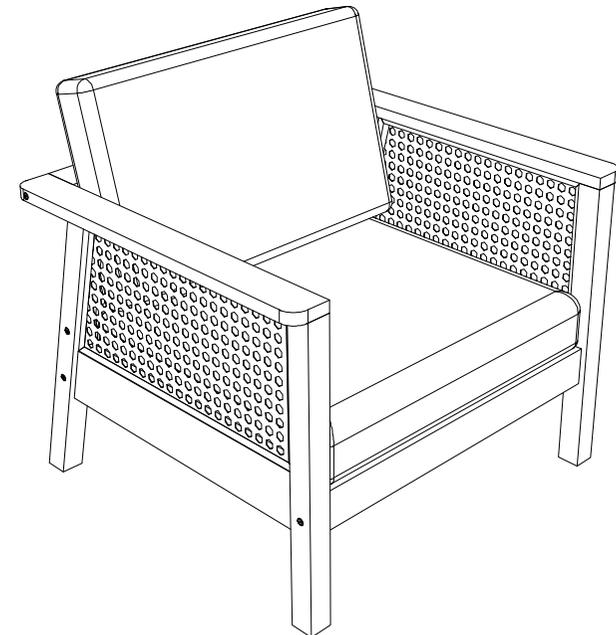






x2

ASSEMBLY INSTRUCTIONS: 12540089/01

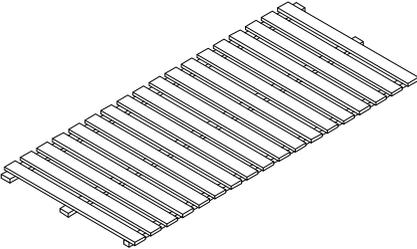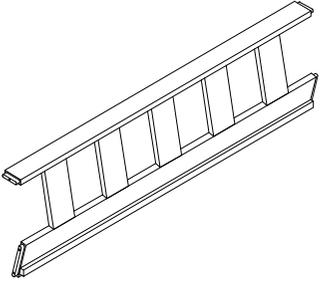
No	Name of Hardware	Fig	Q.ty	(A)	(B)
1	Screw M6x90		2		
2	Screw M6x70		4		
3	Screw M6x35		3		
4	Allen Key		1		

1x


1x

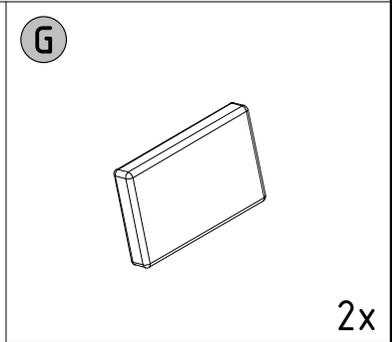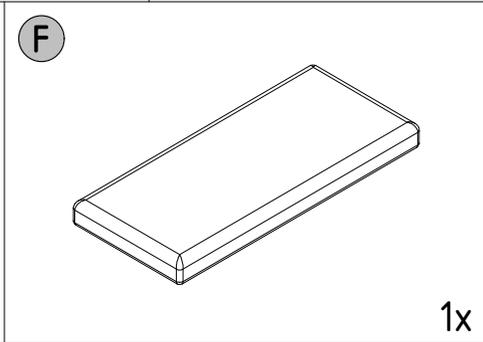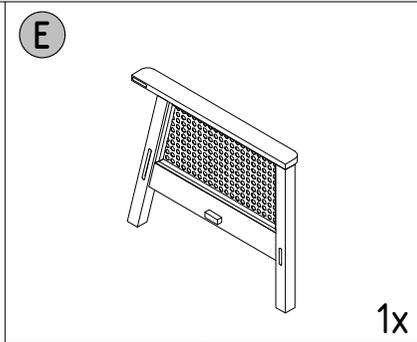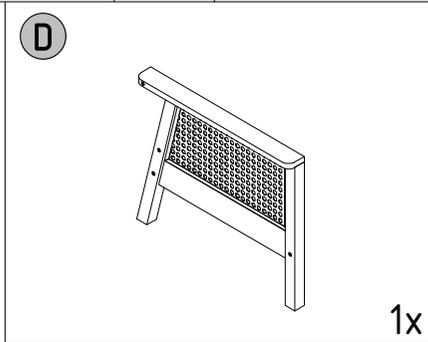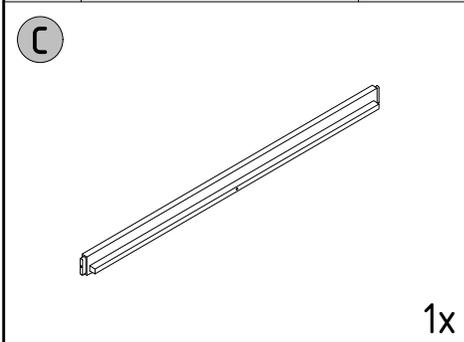

Step 1:

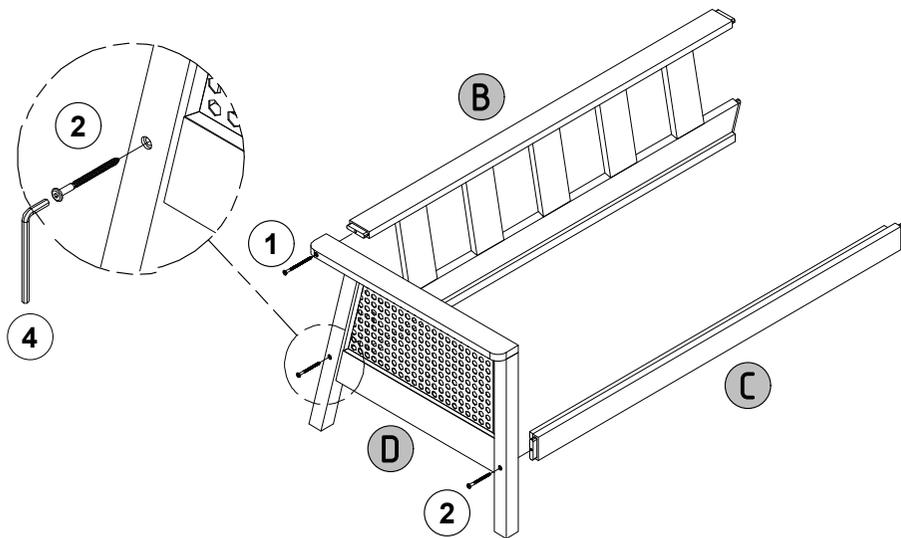


Step 2:

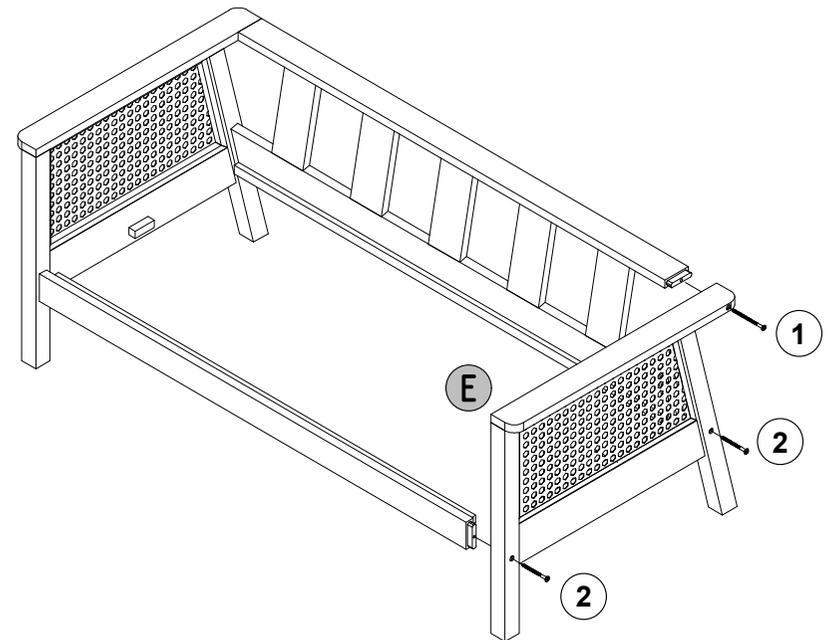


ASSEMBLY INSTRUCTIONS: 12540089/01


Step 3:

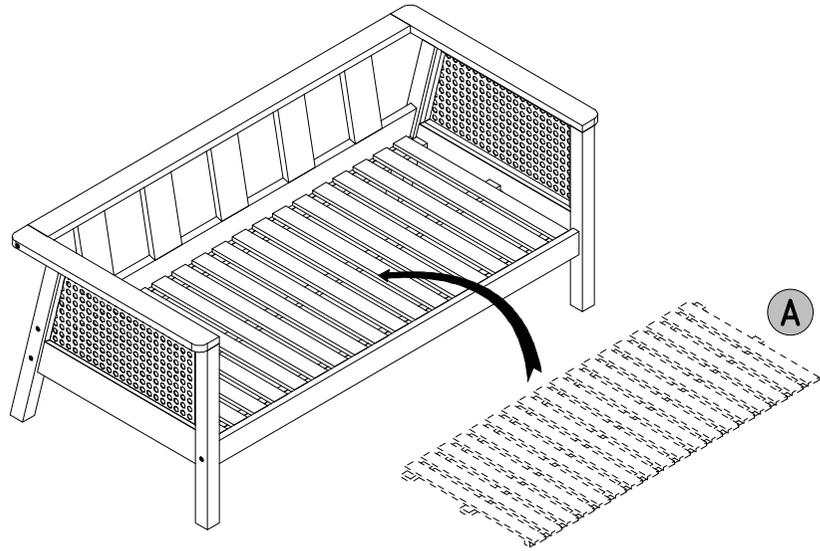

Step 4:

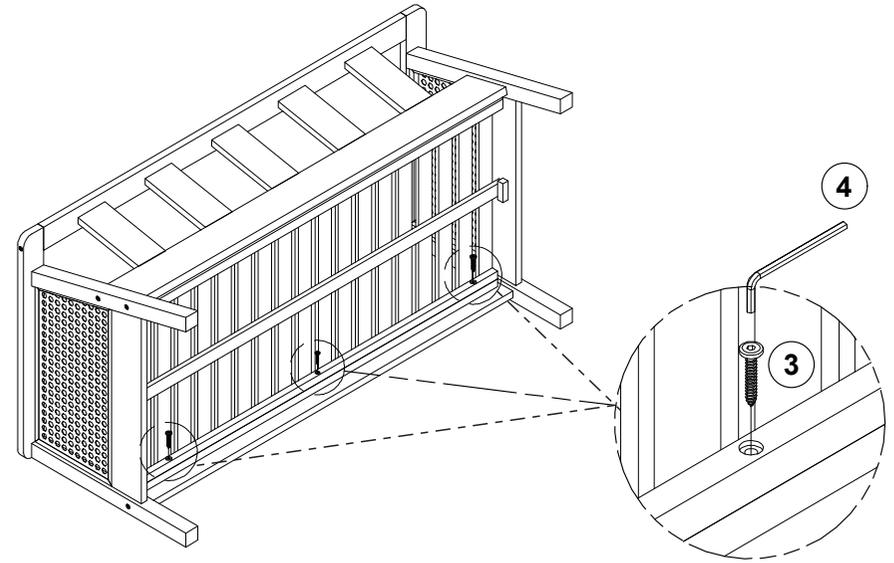

Step 5:

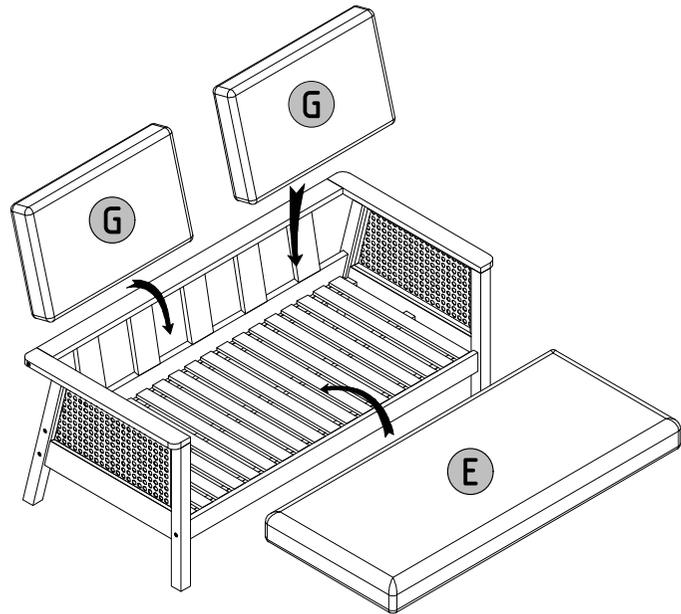

Step 6:

