
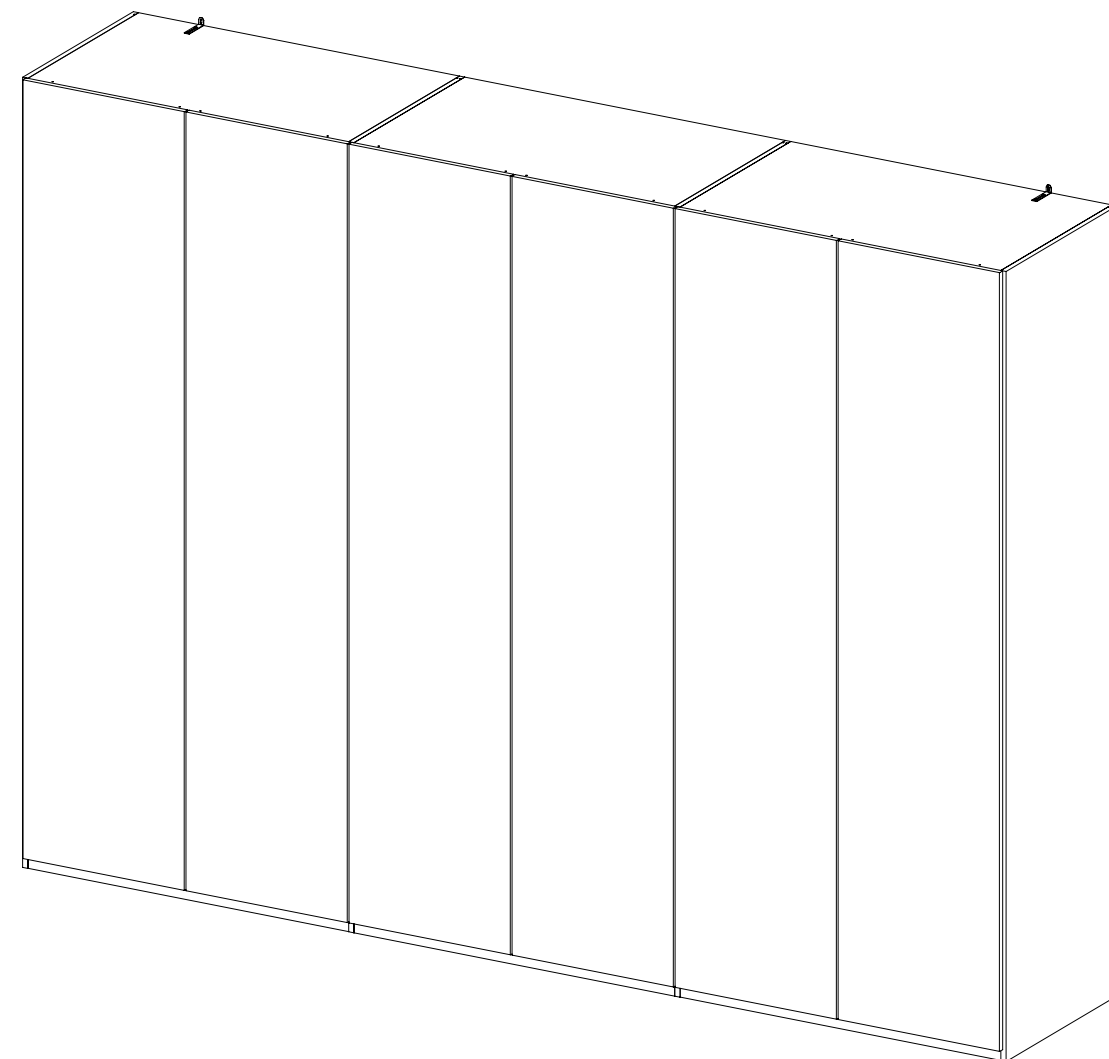
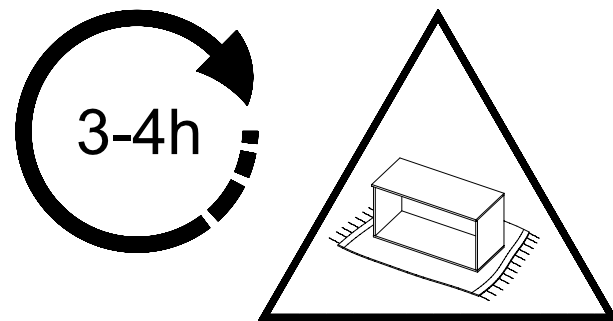










1.

MD106_04

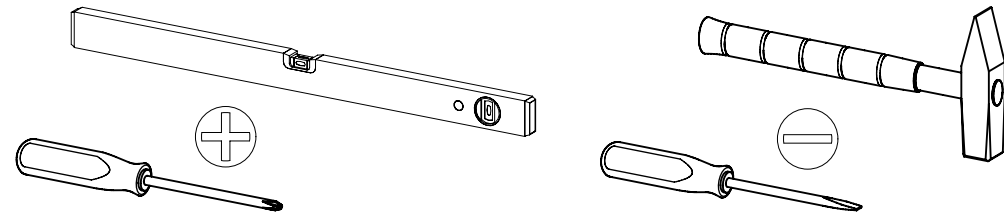







MD106

2.

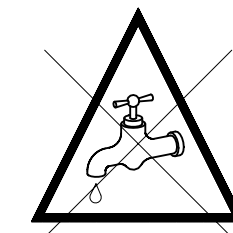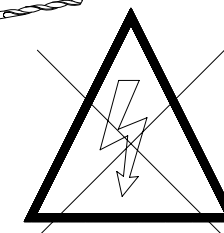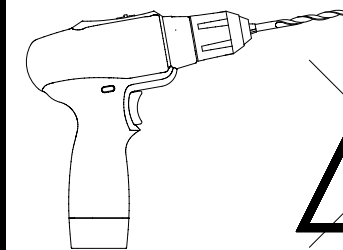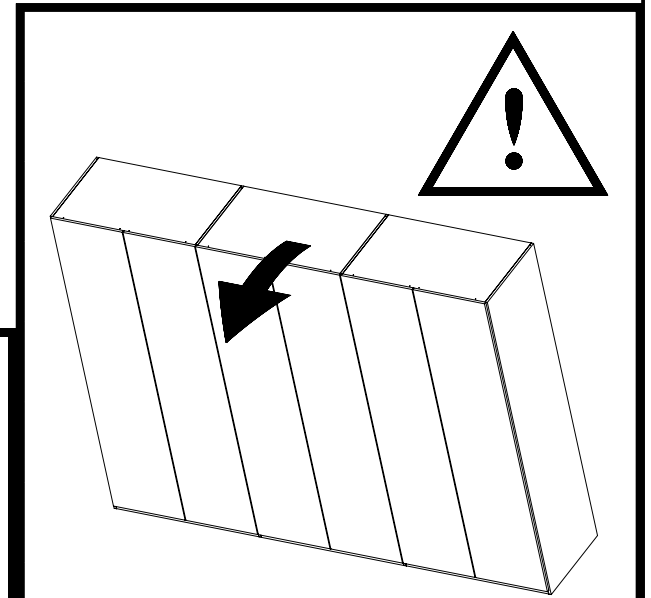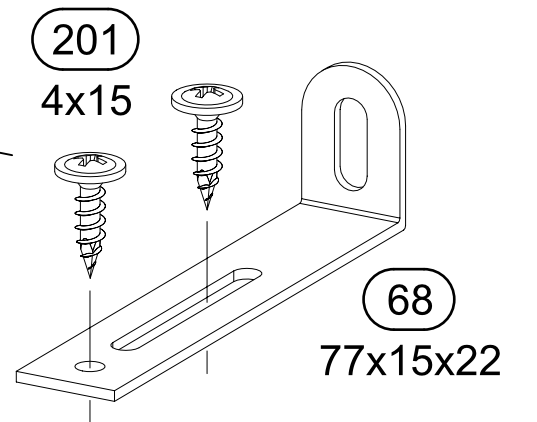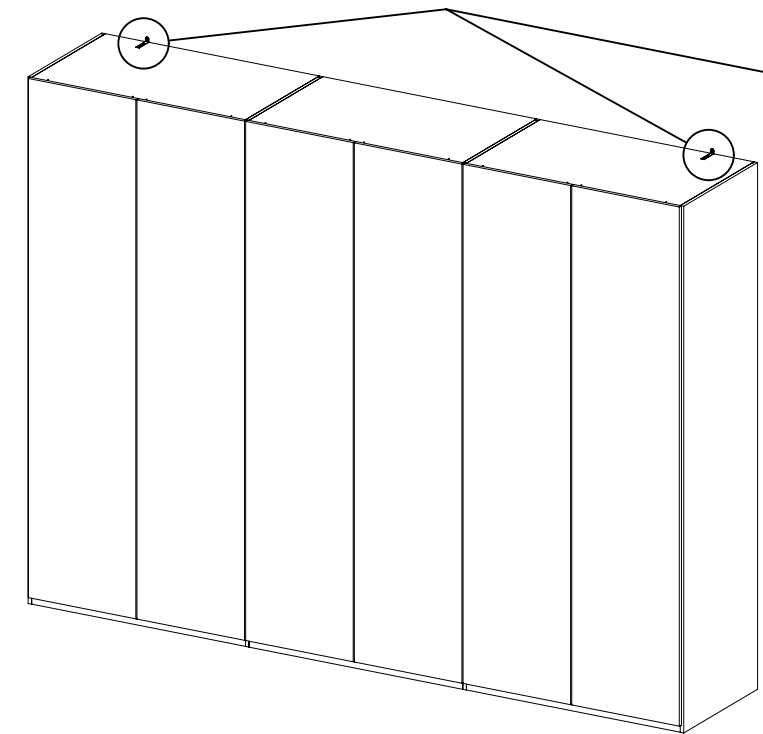


?

ØXmm

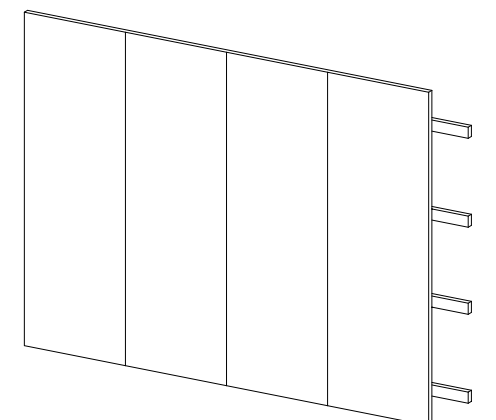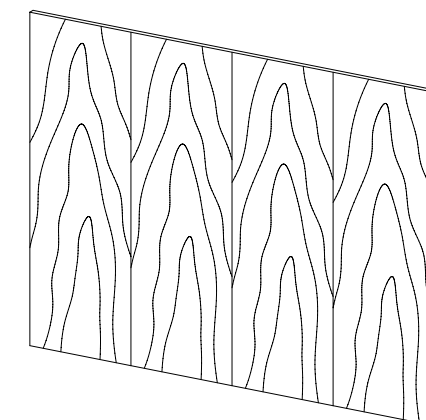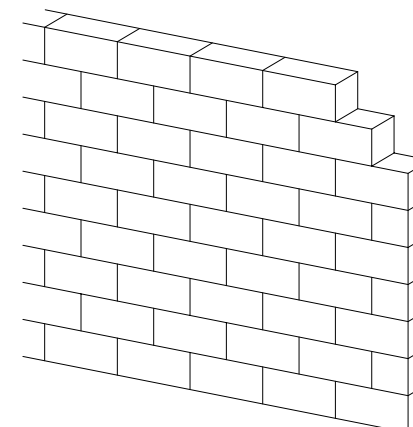


MD106

3.

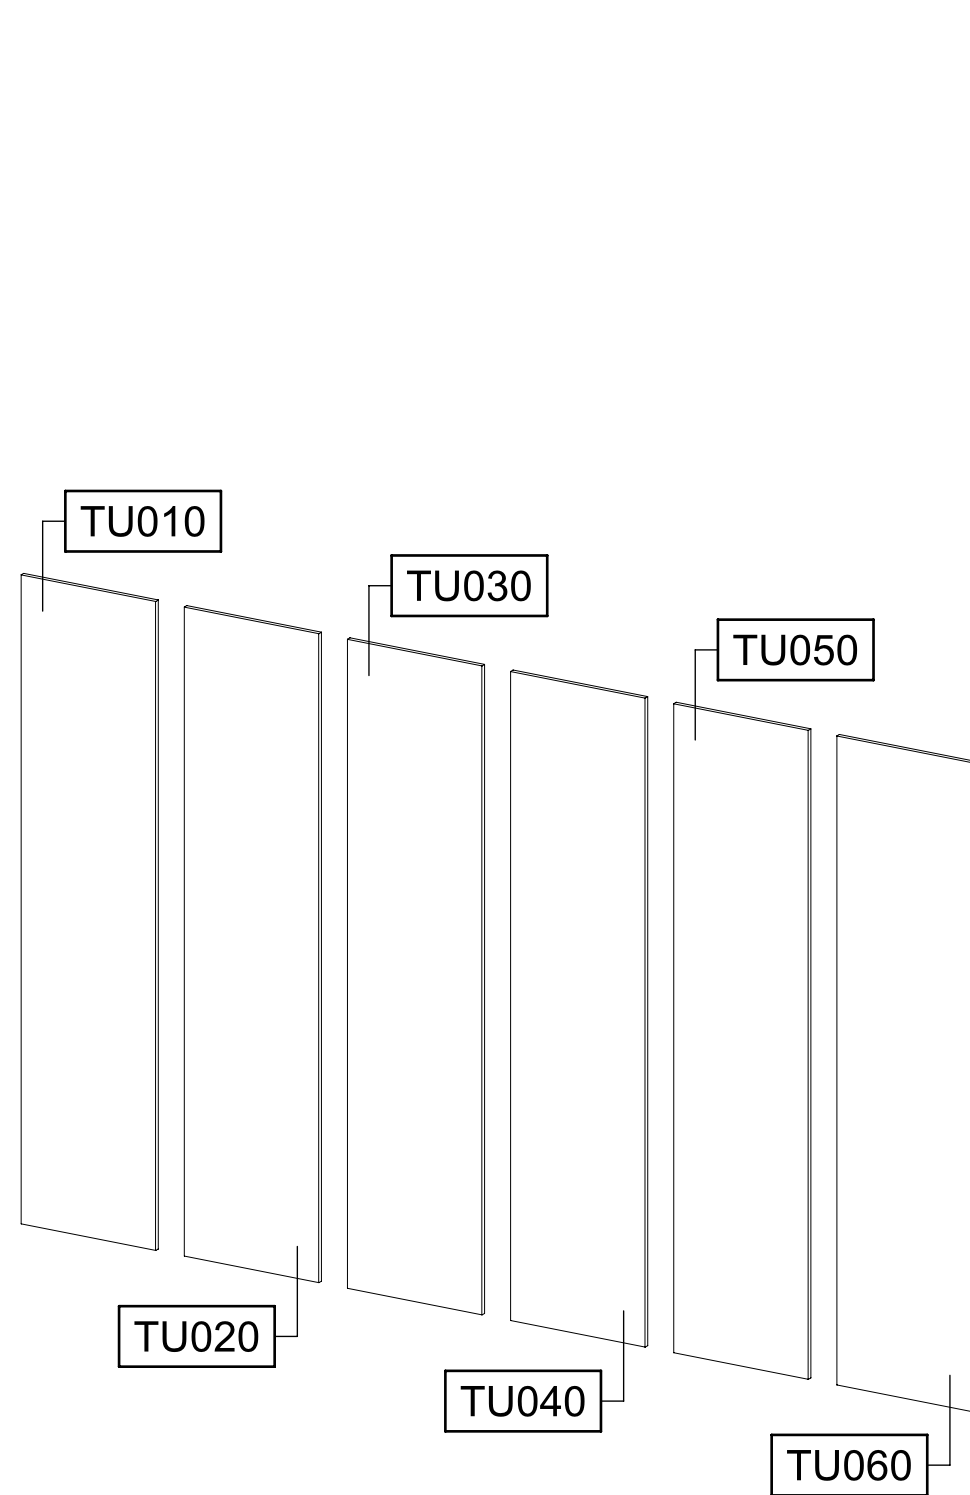

MD106

4.

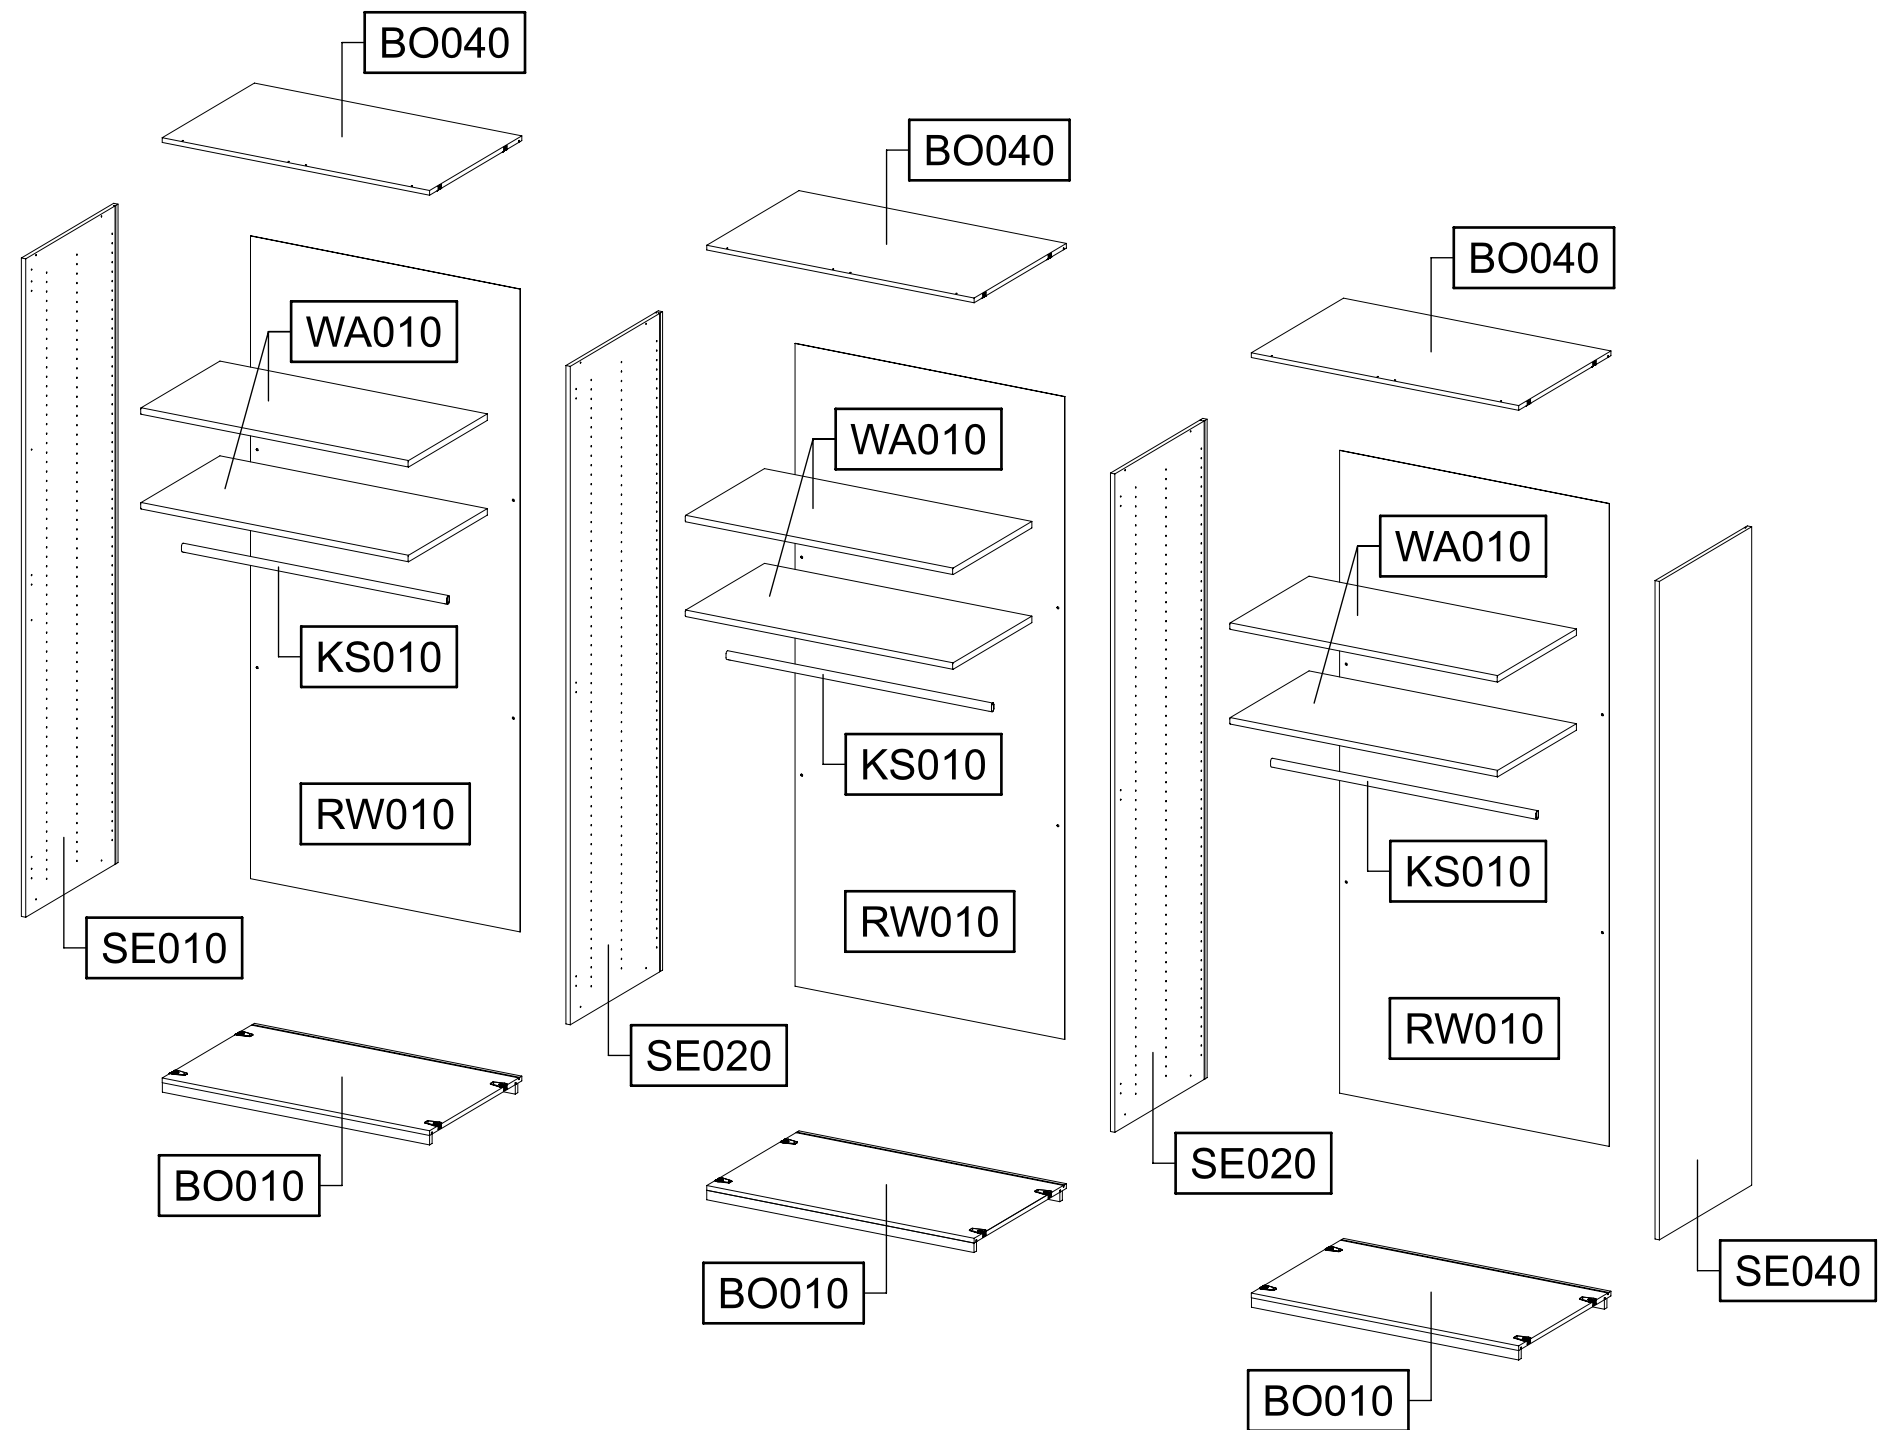


MD106


8x 55x16x6,2 12	6x 29
12x 47	2x 77x22x15 68
4x 4x15 201	6x 3,5x15 205
36-48x 4x13 621	12x 6,5x12 779
8x 1085	8x 1086
24x 1089	18-24x 1291
18-24x 1292	



1	8x 1085	



7.


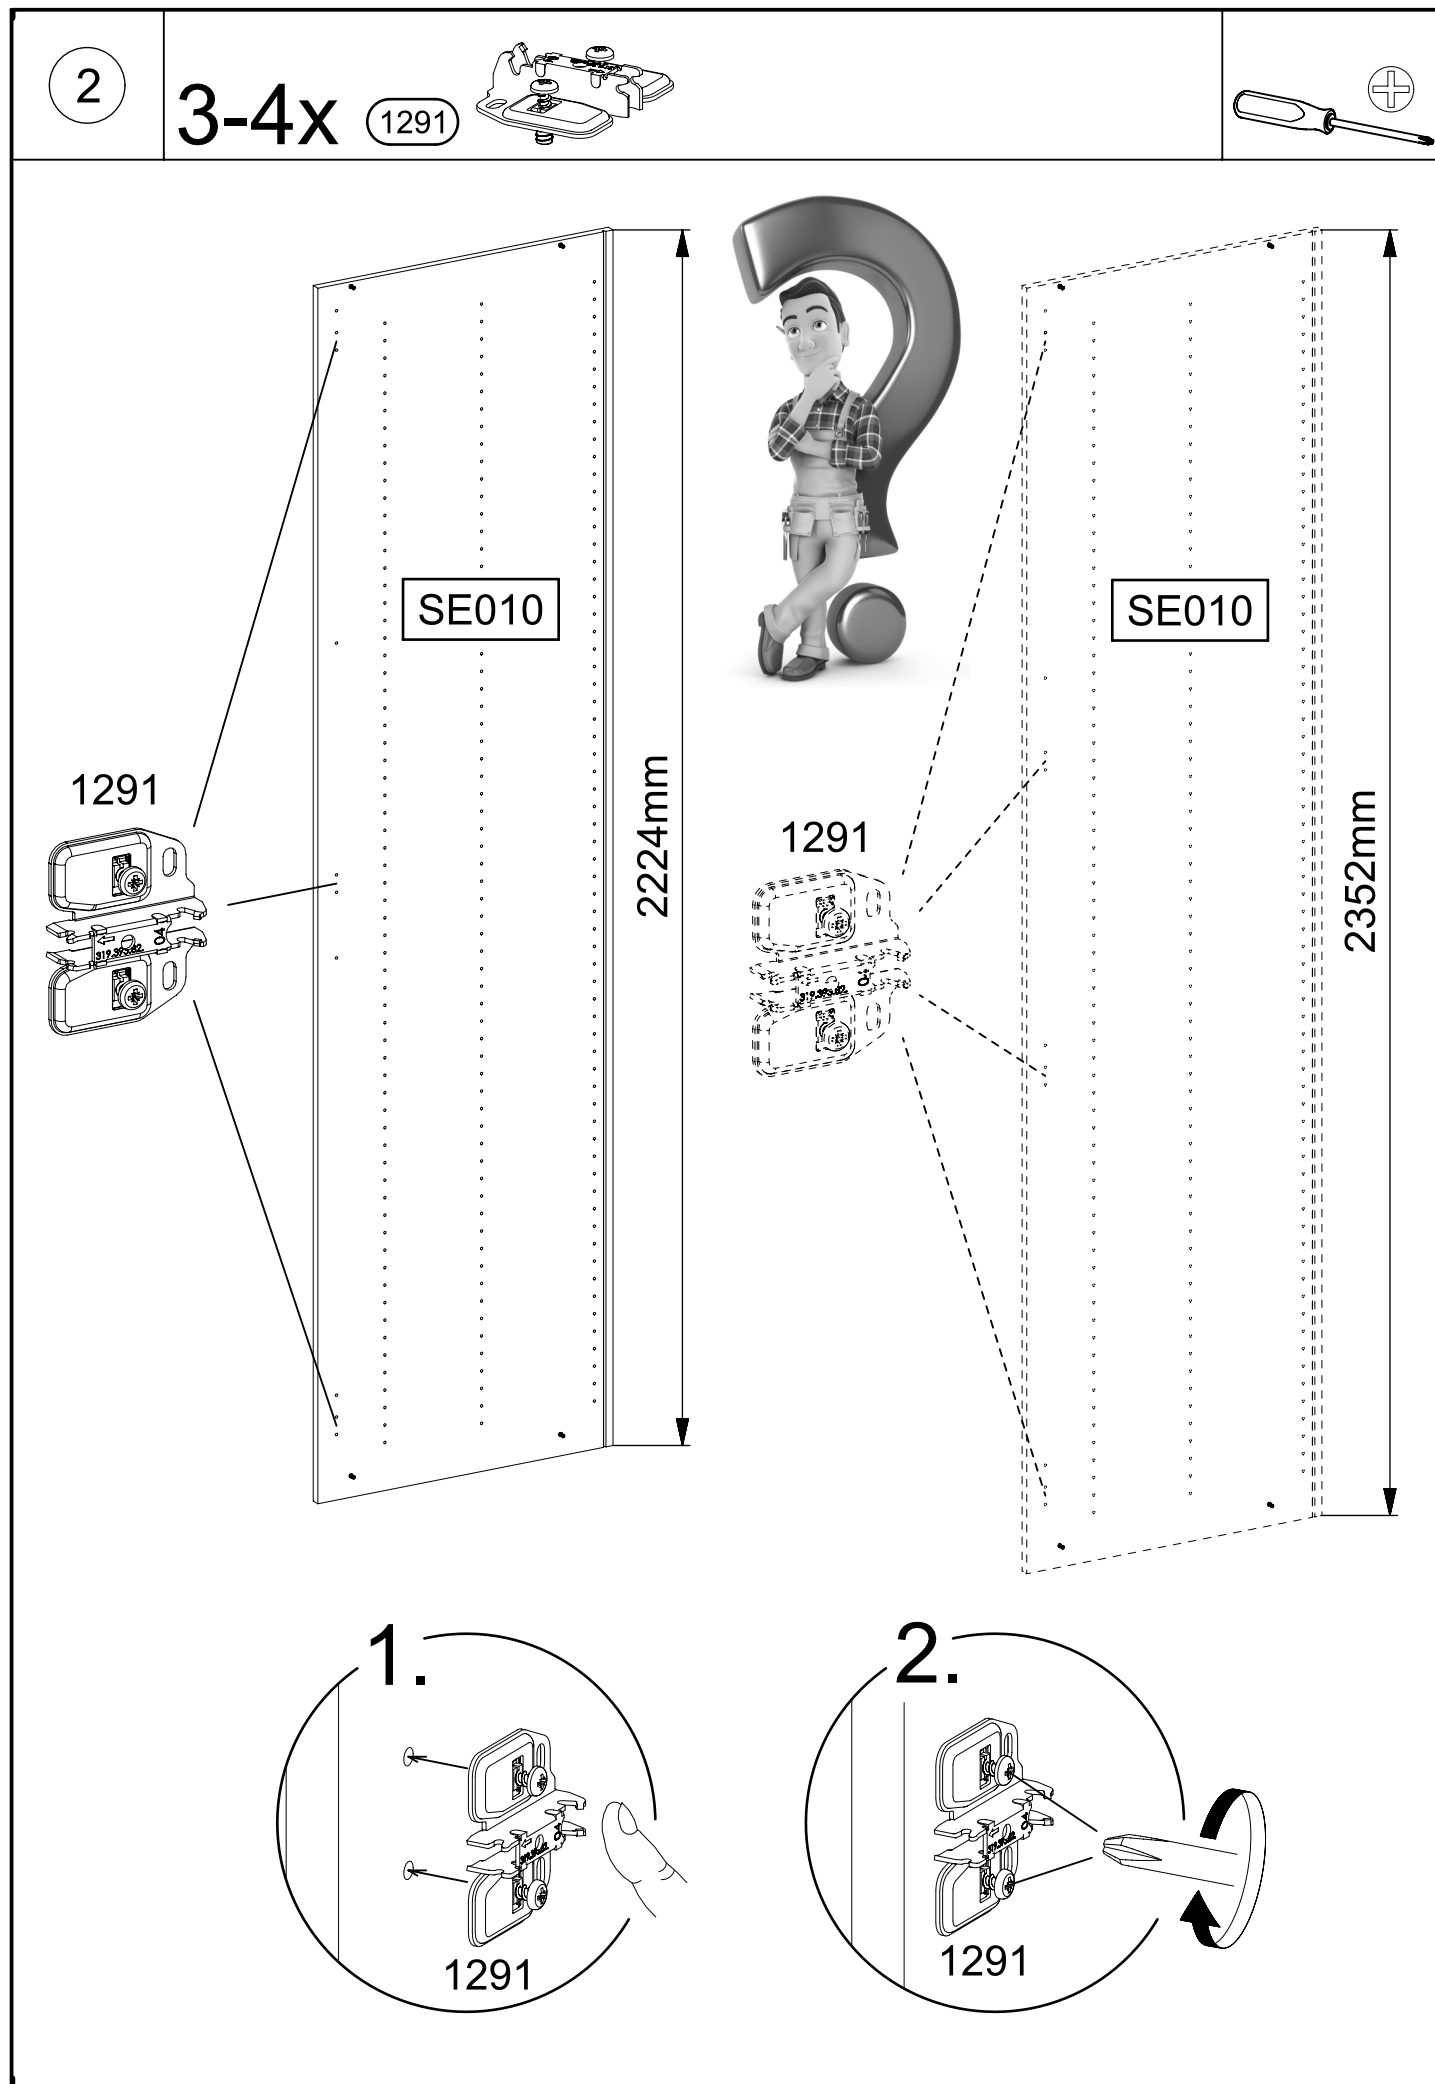




8.


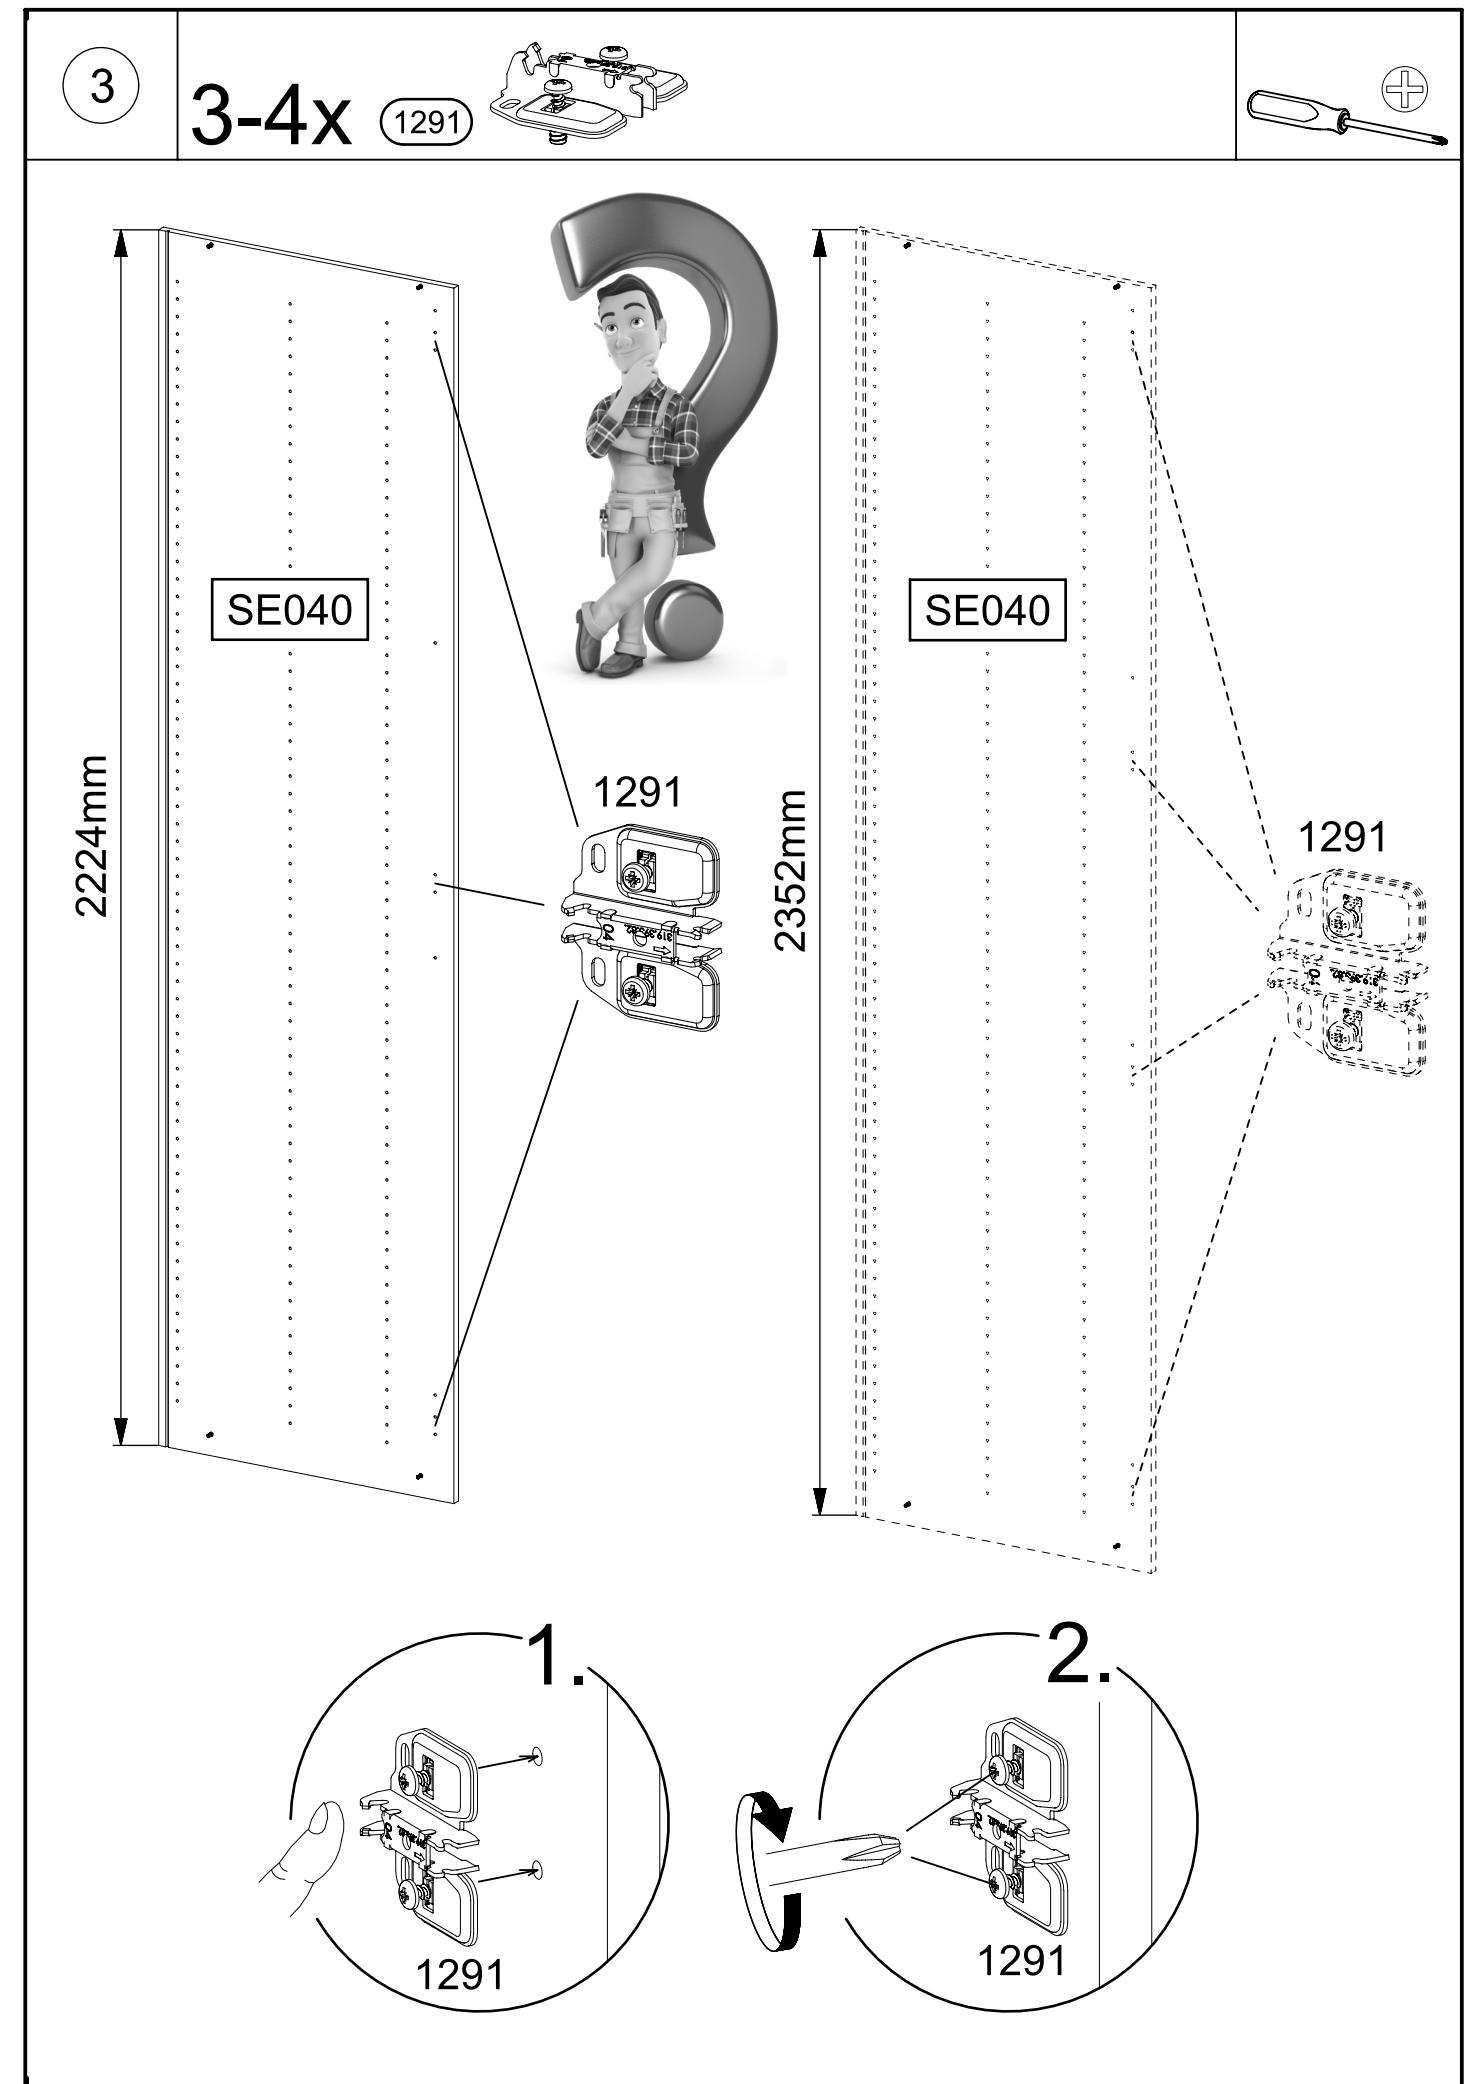


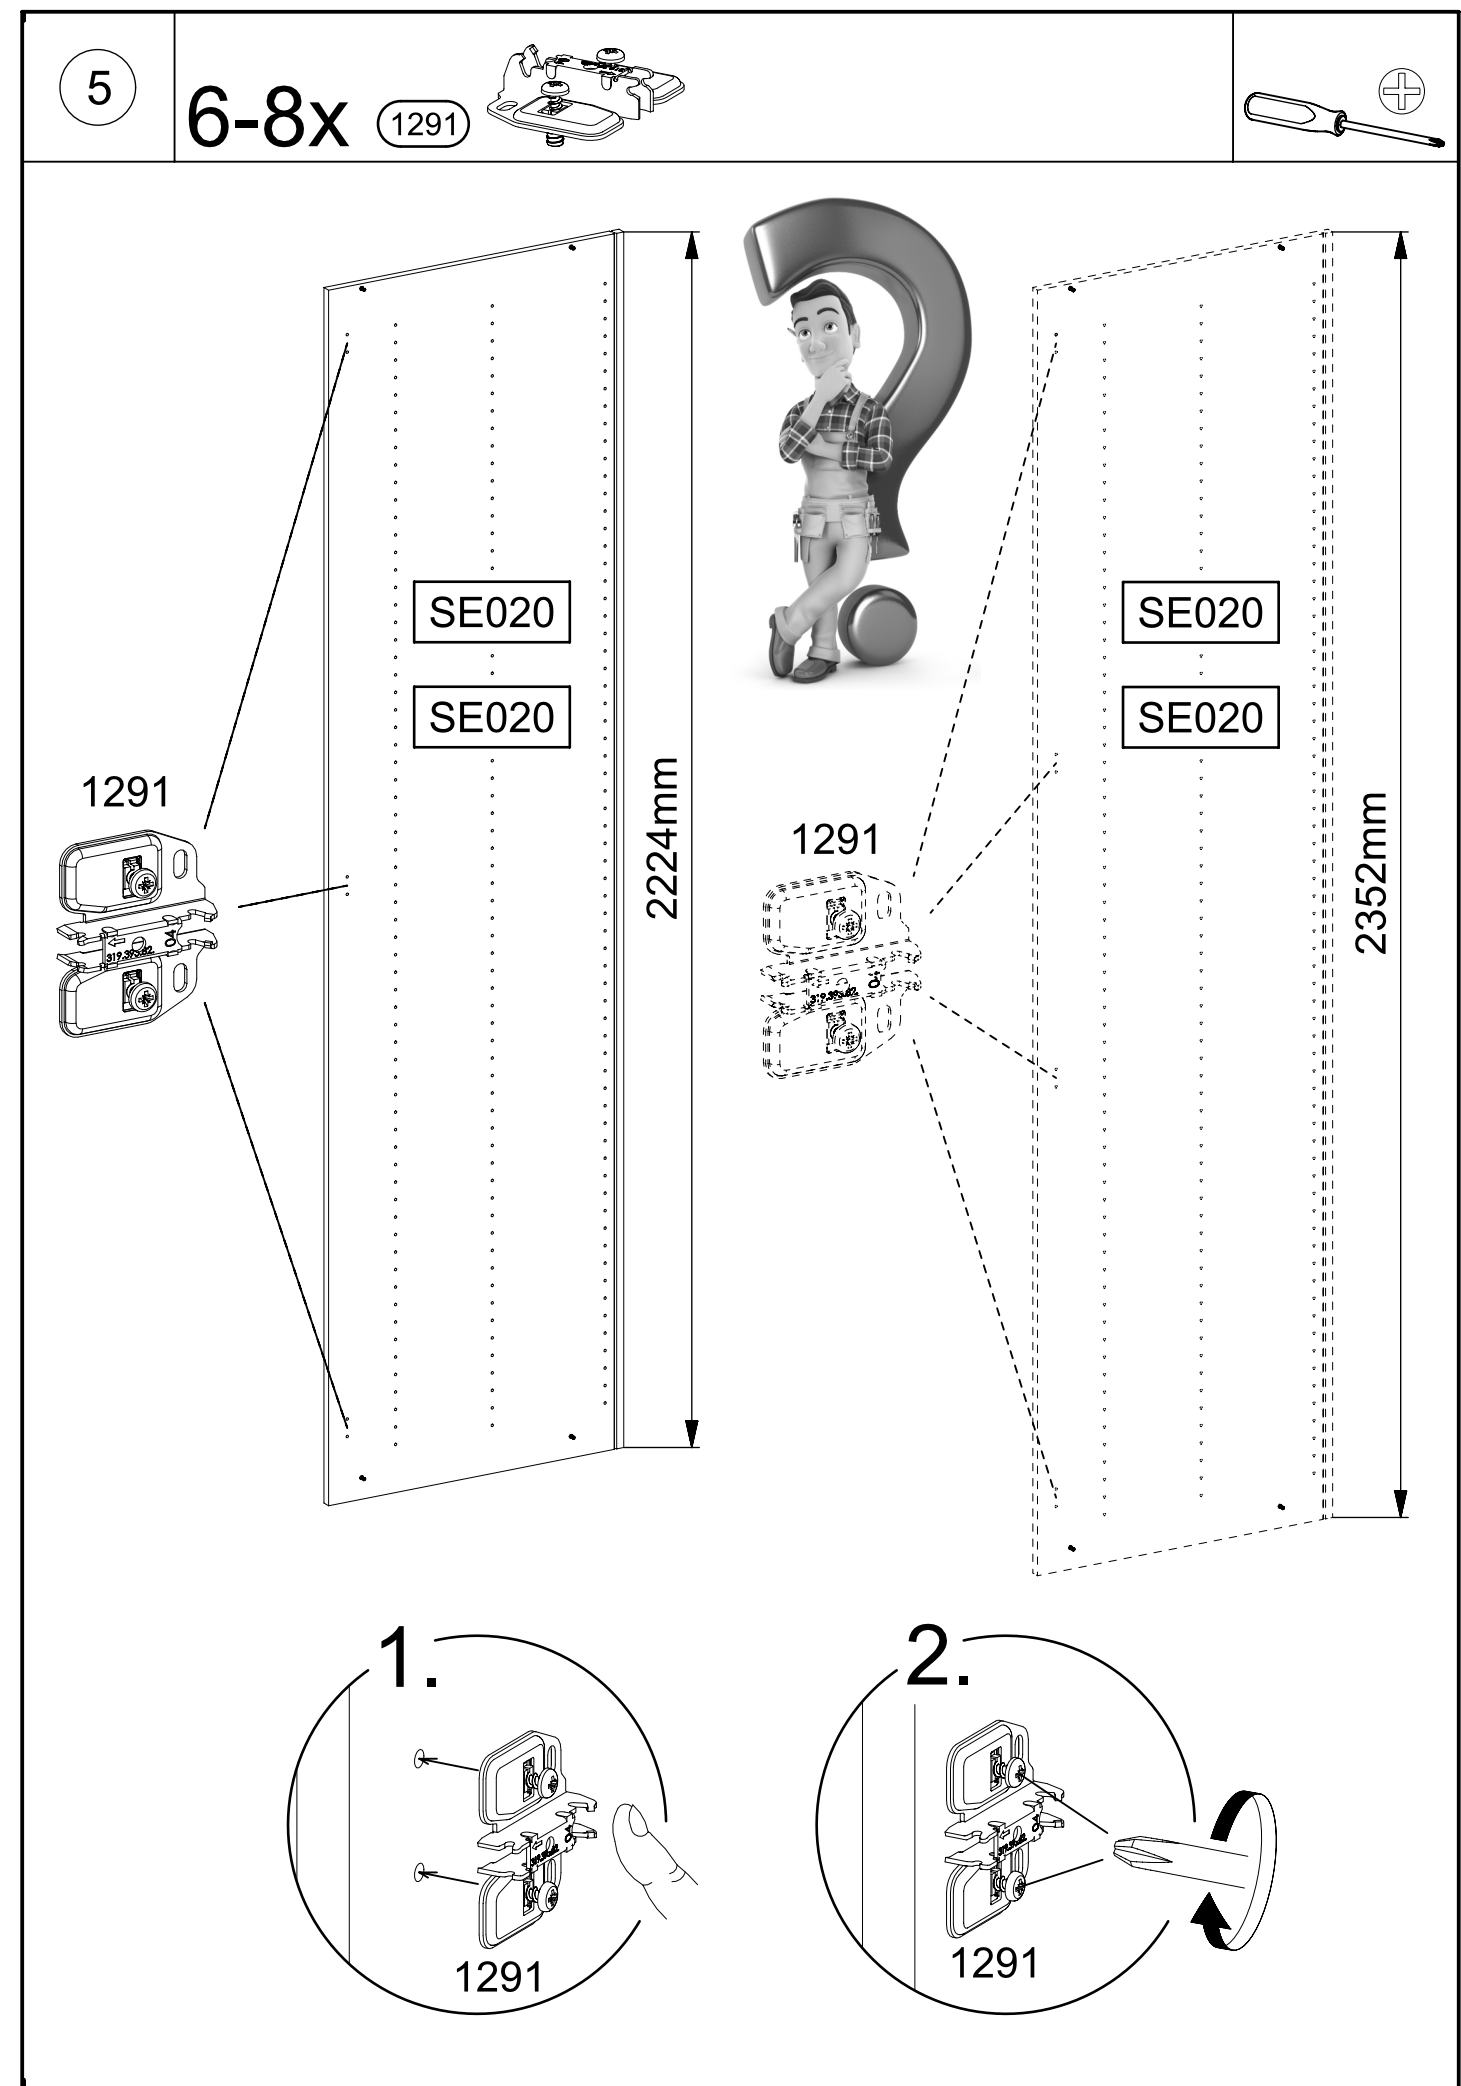
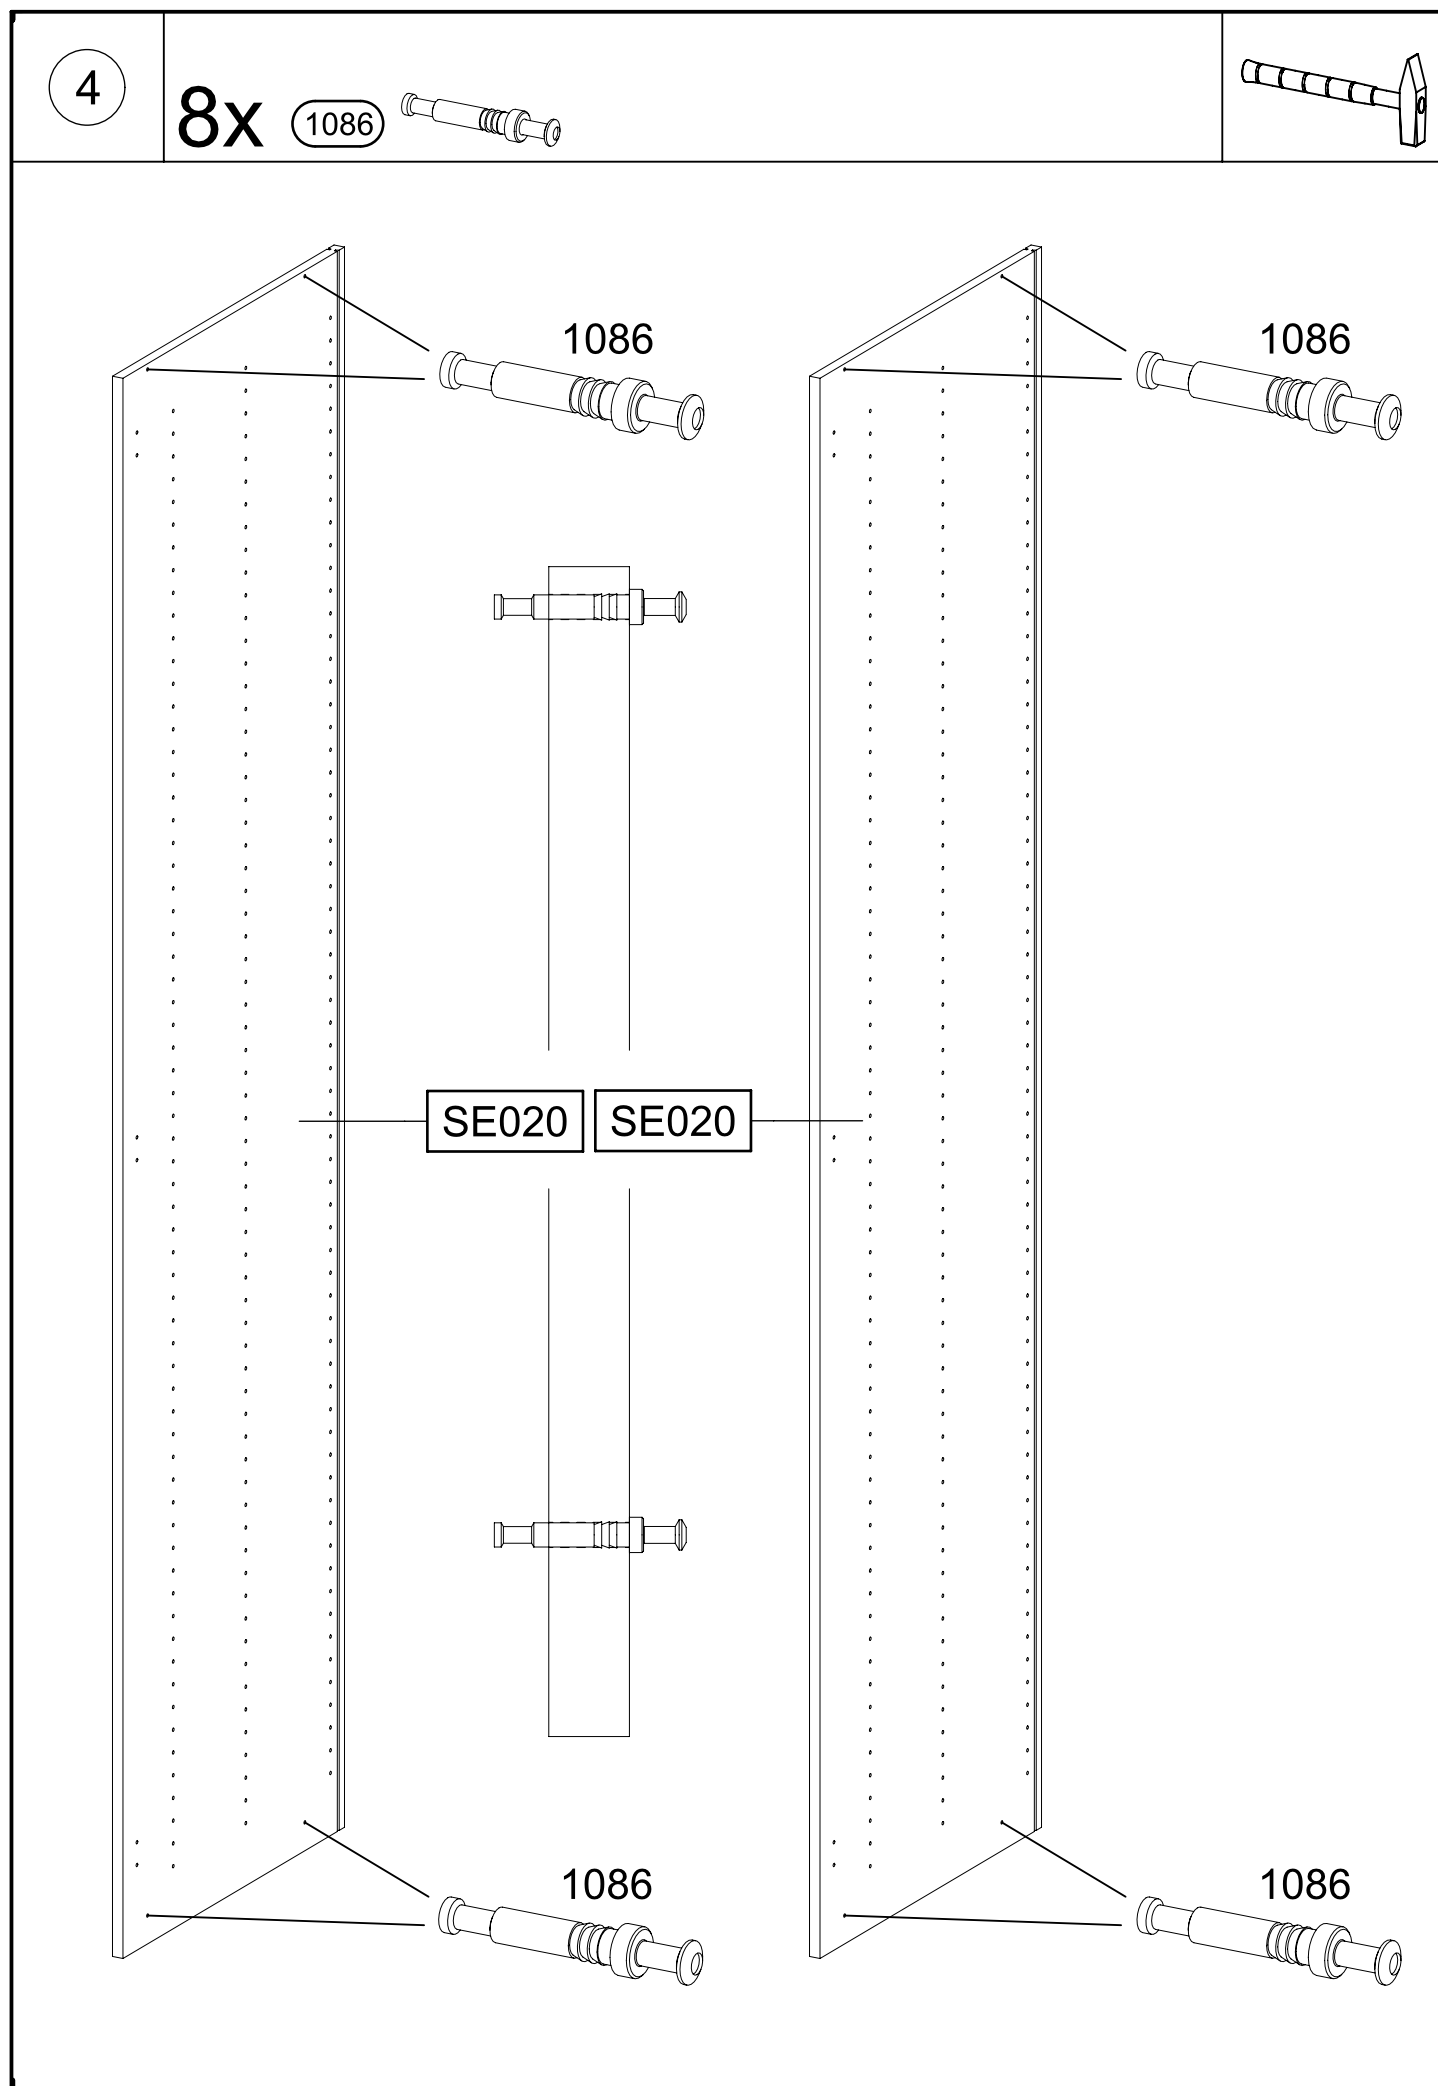


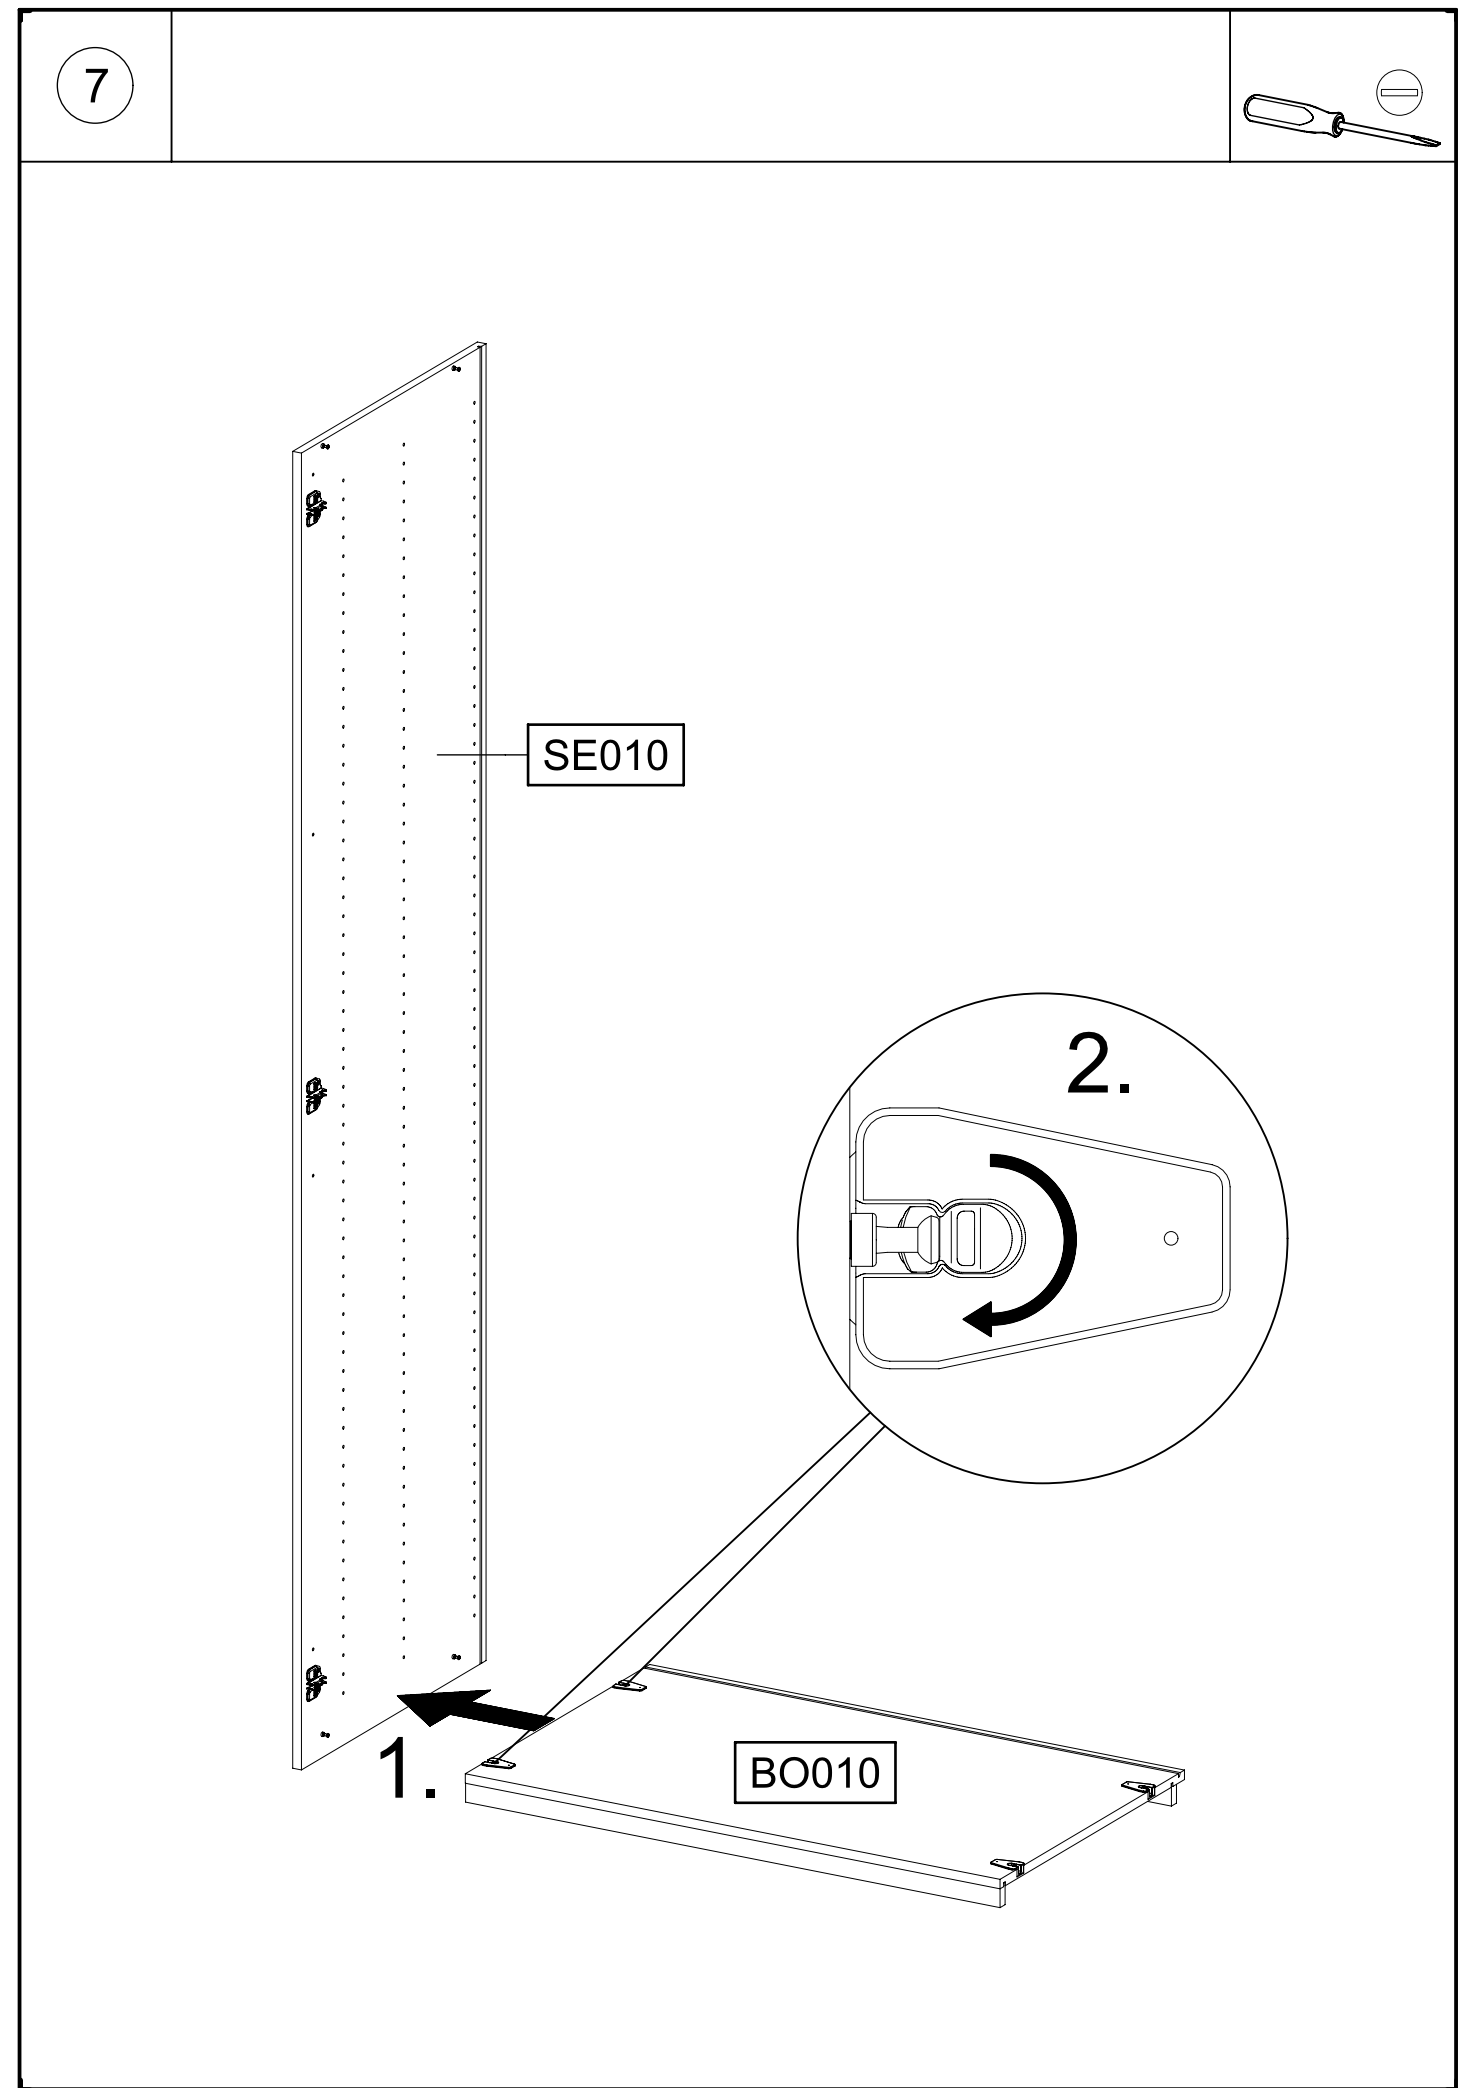
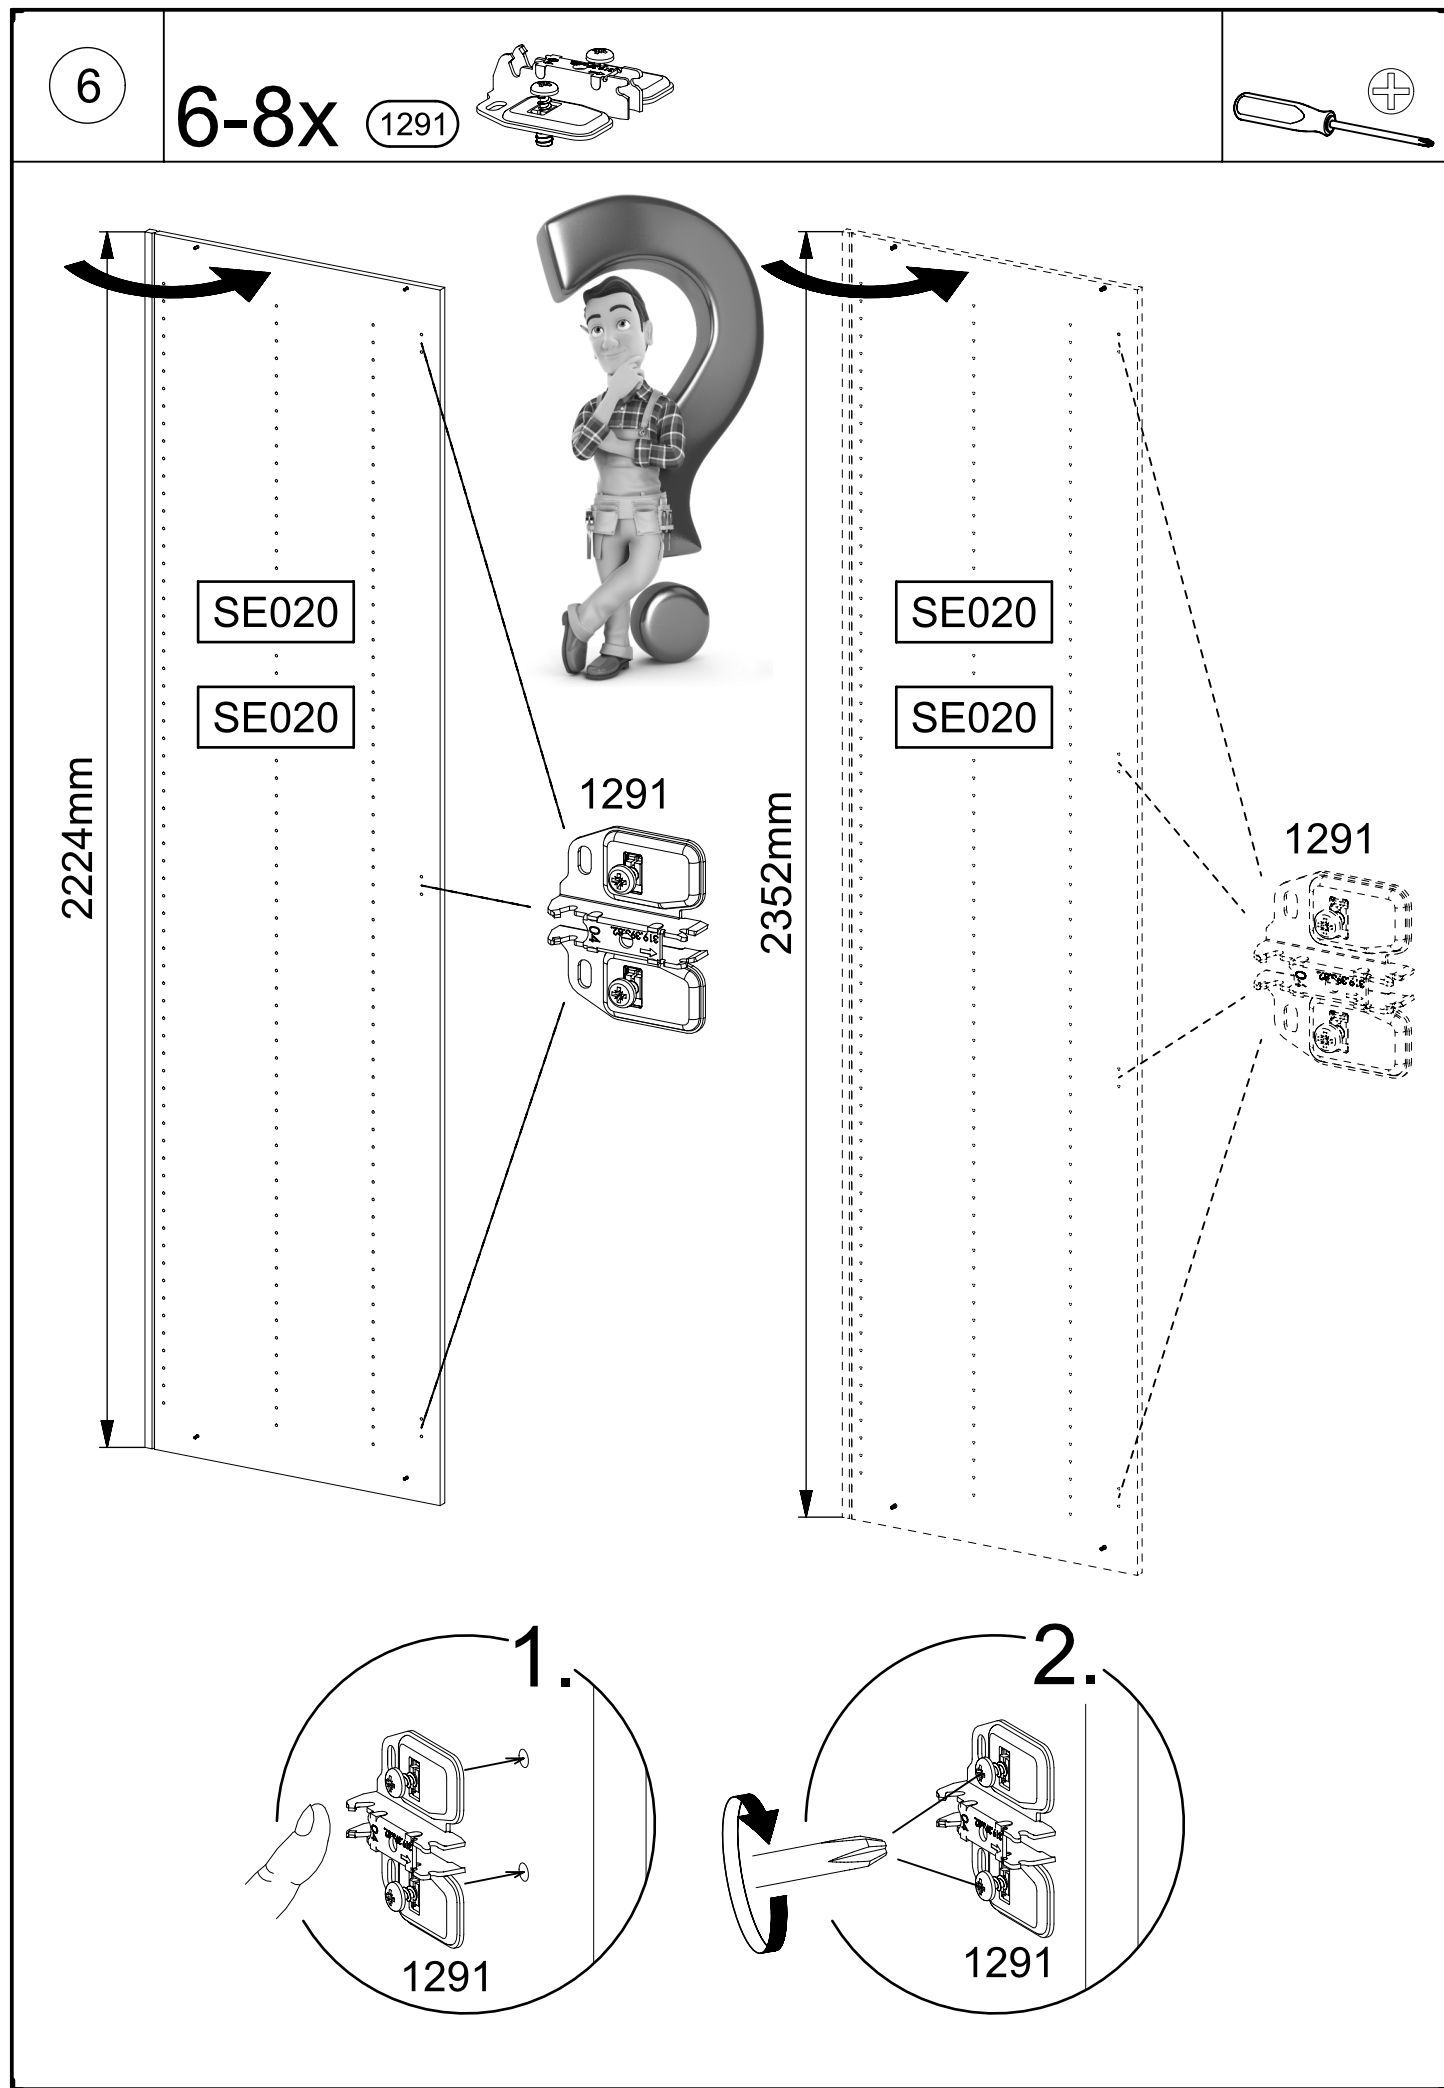


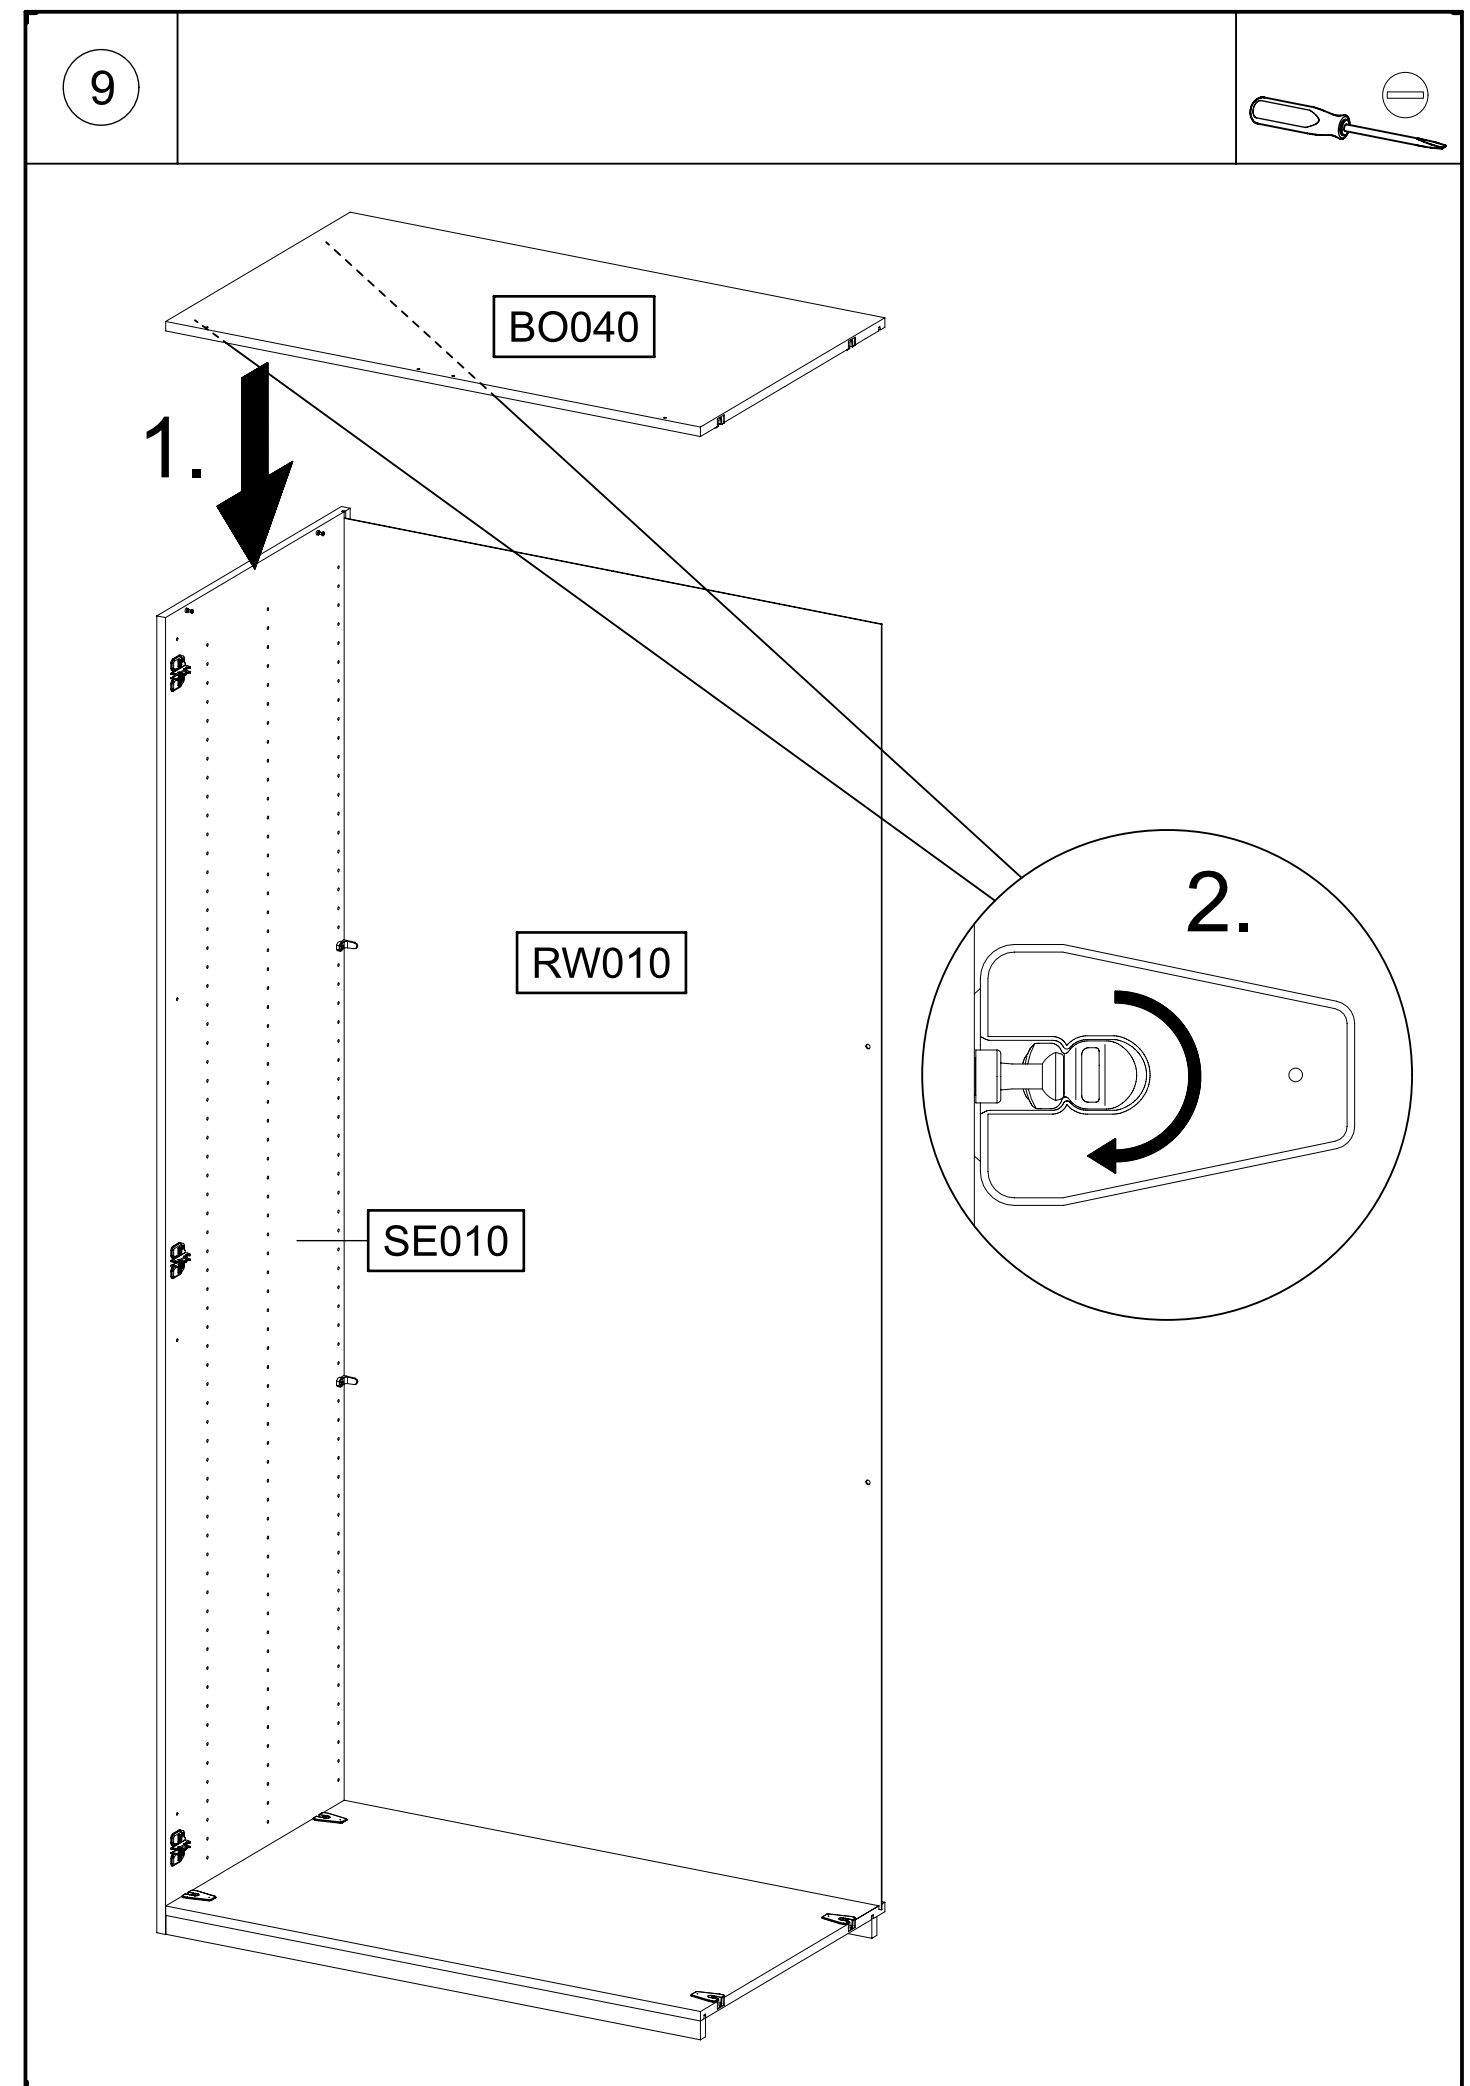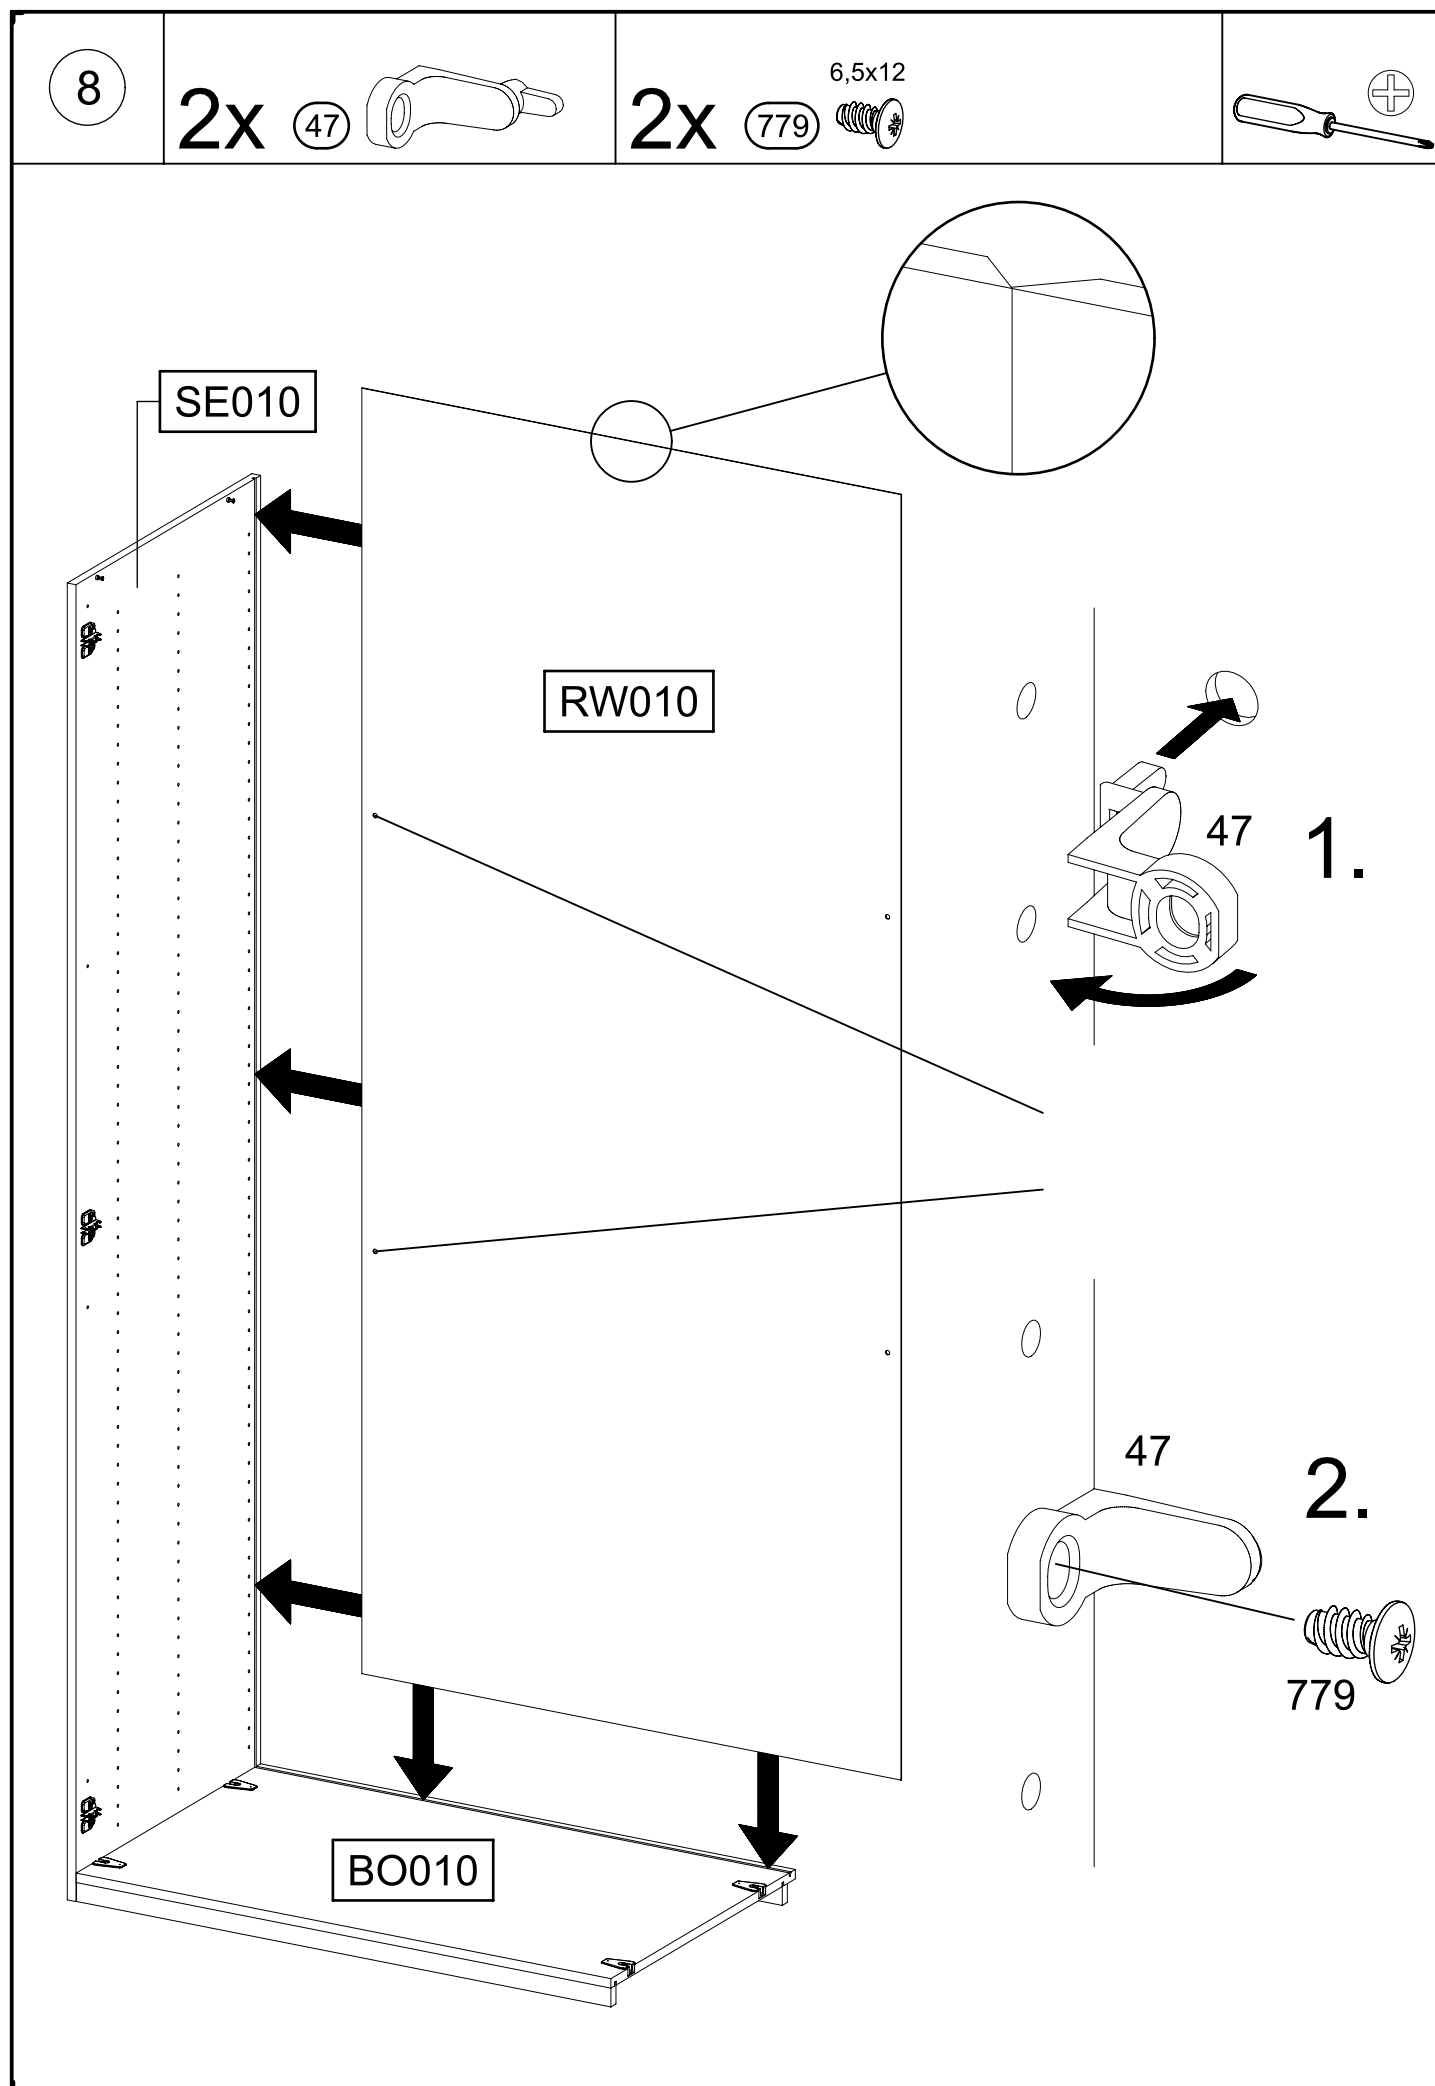

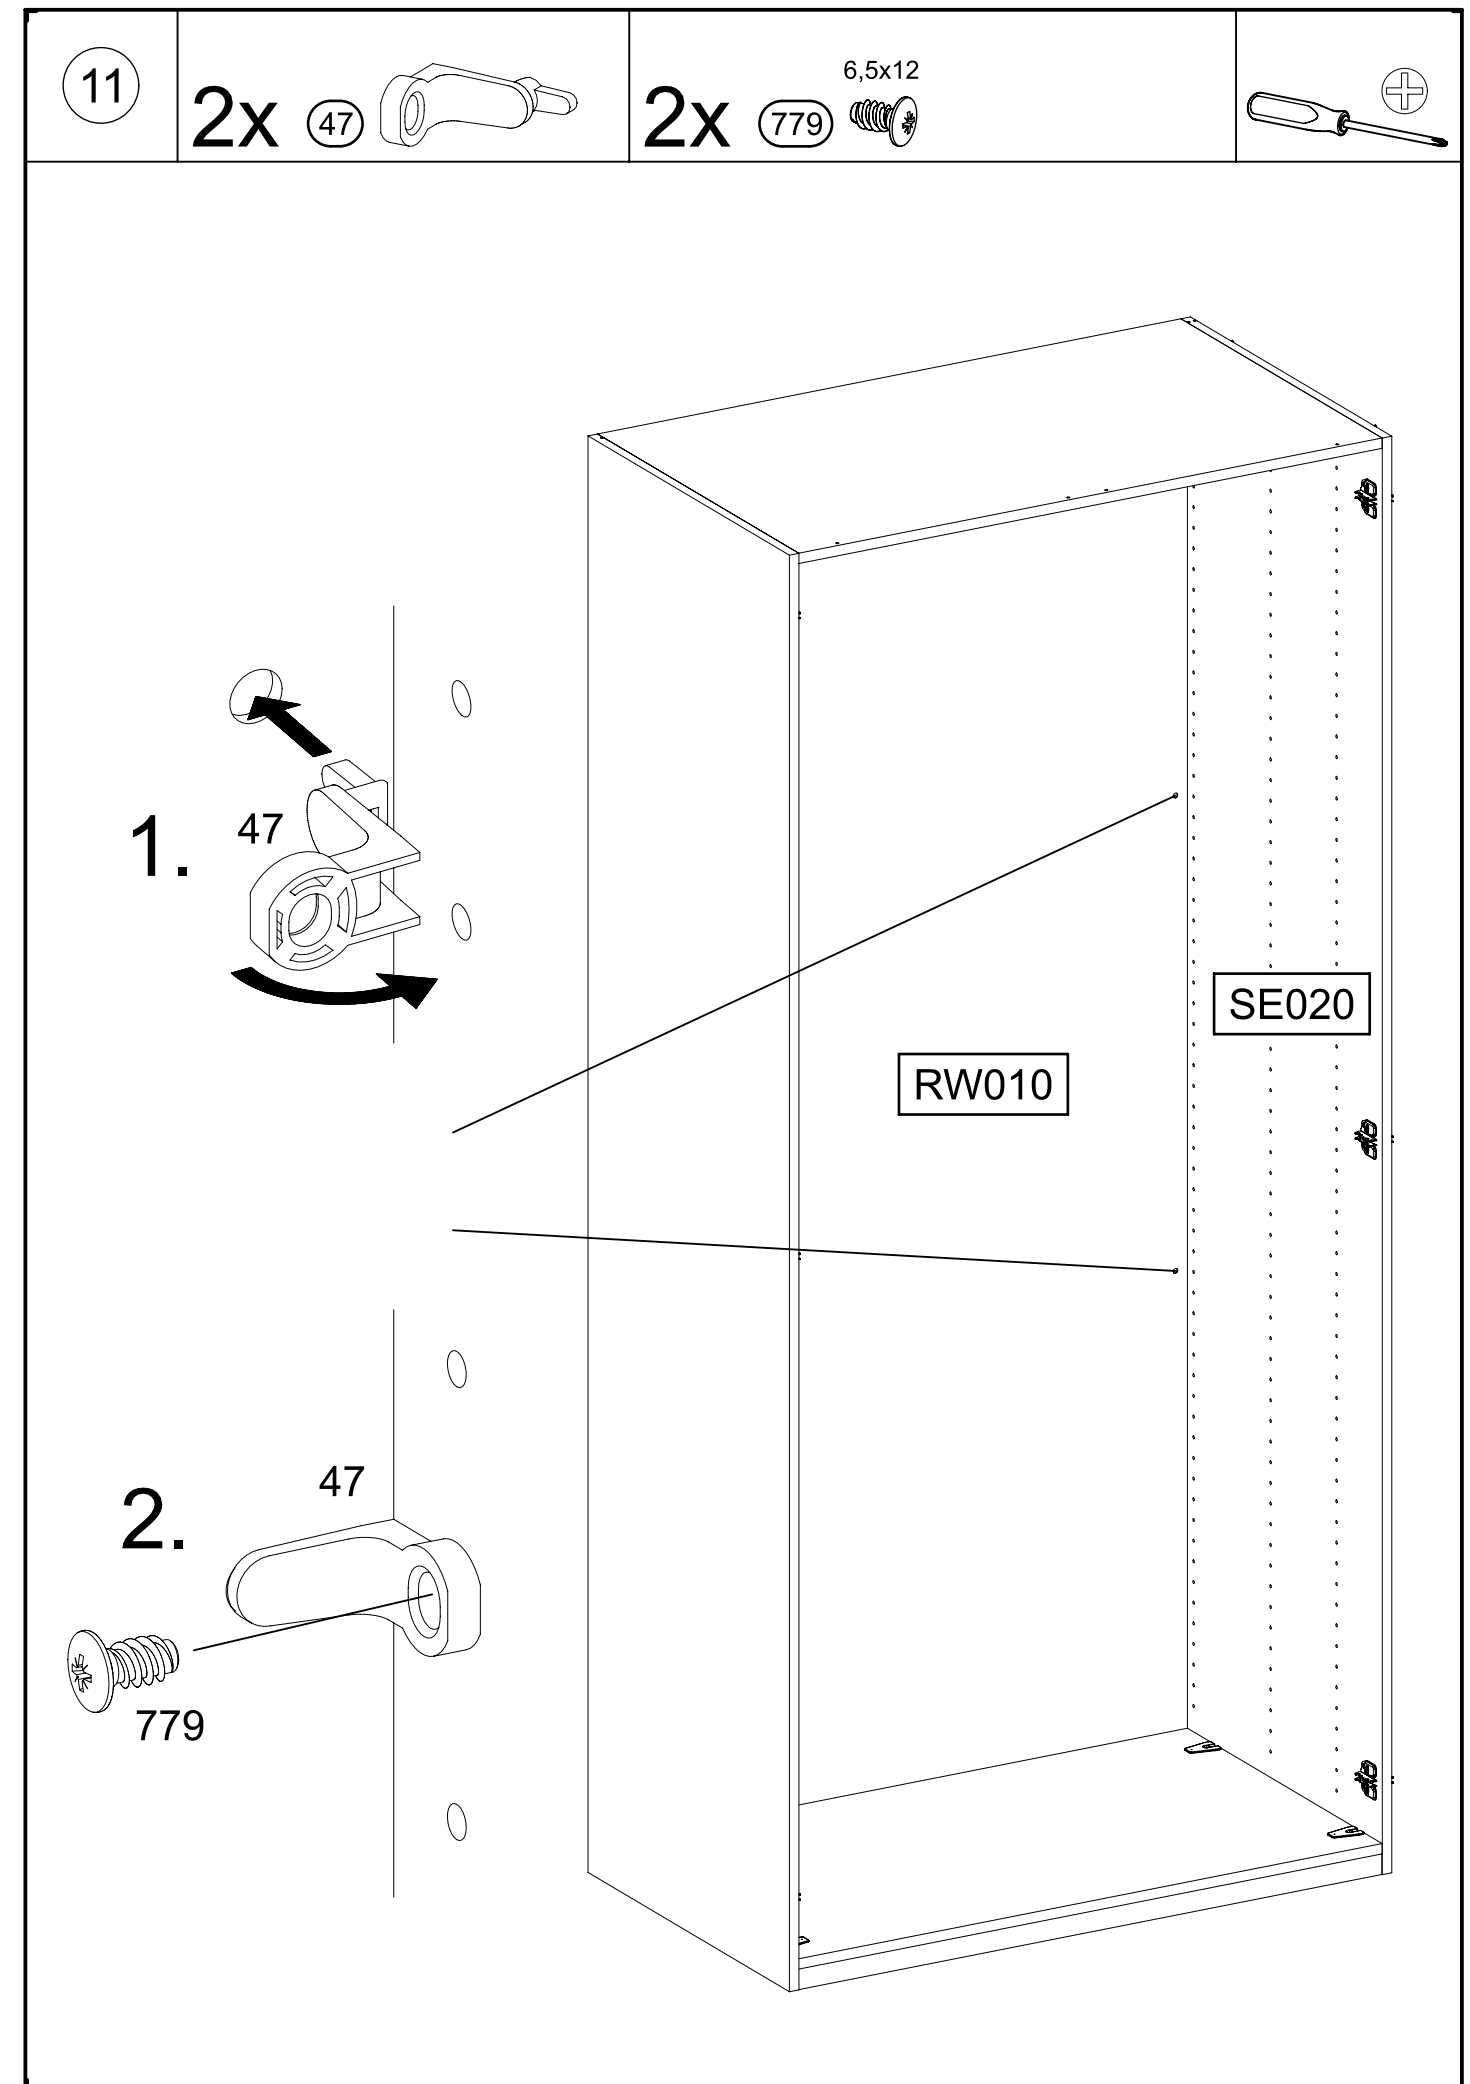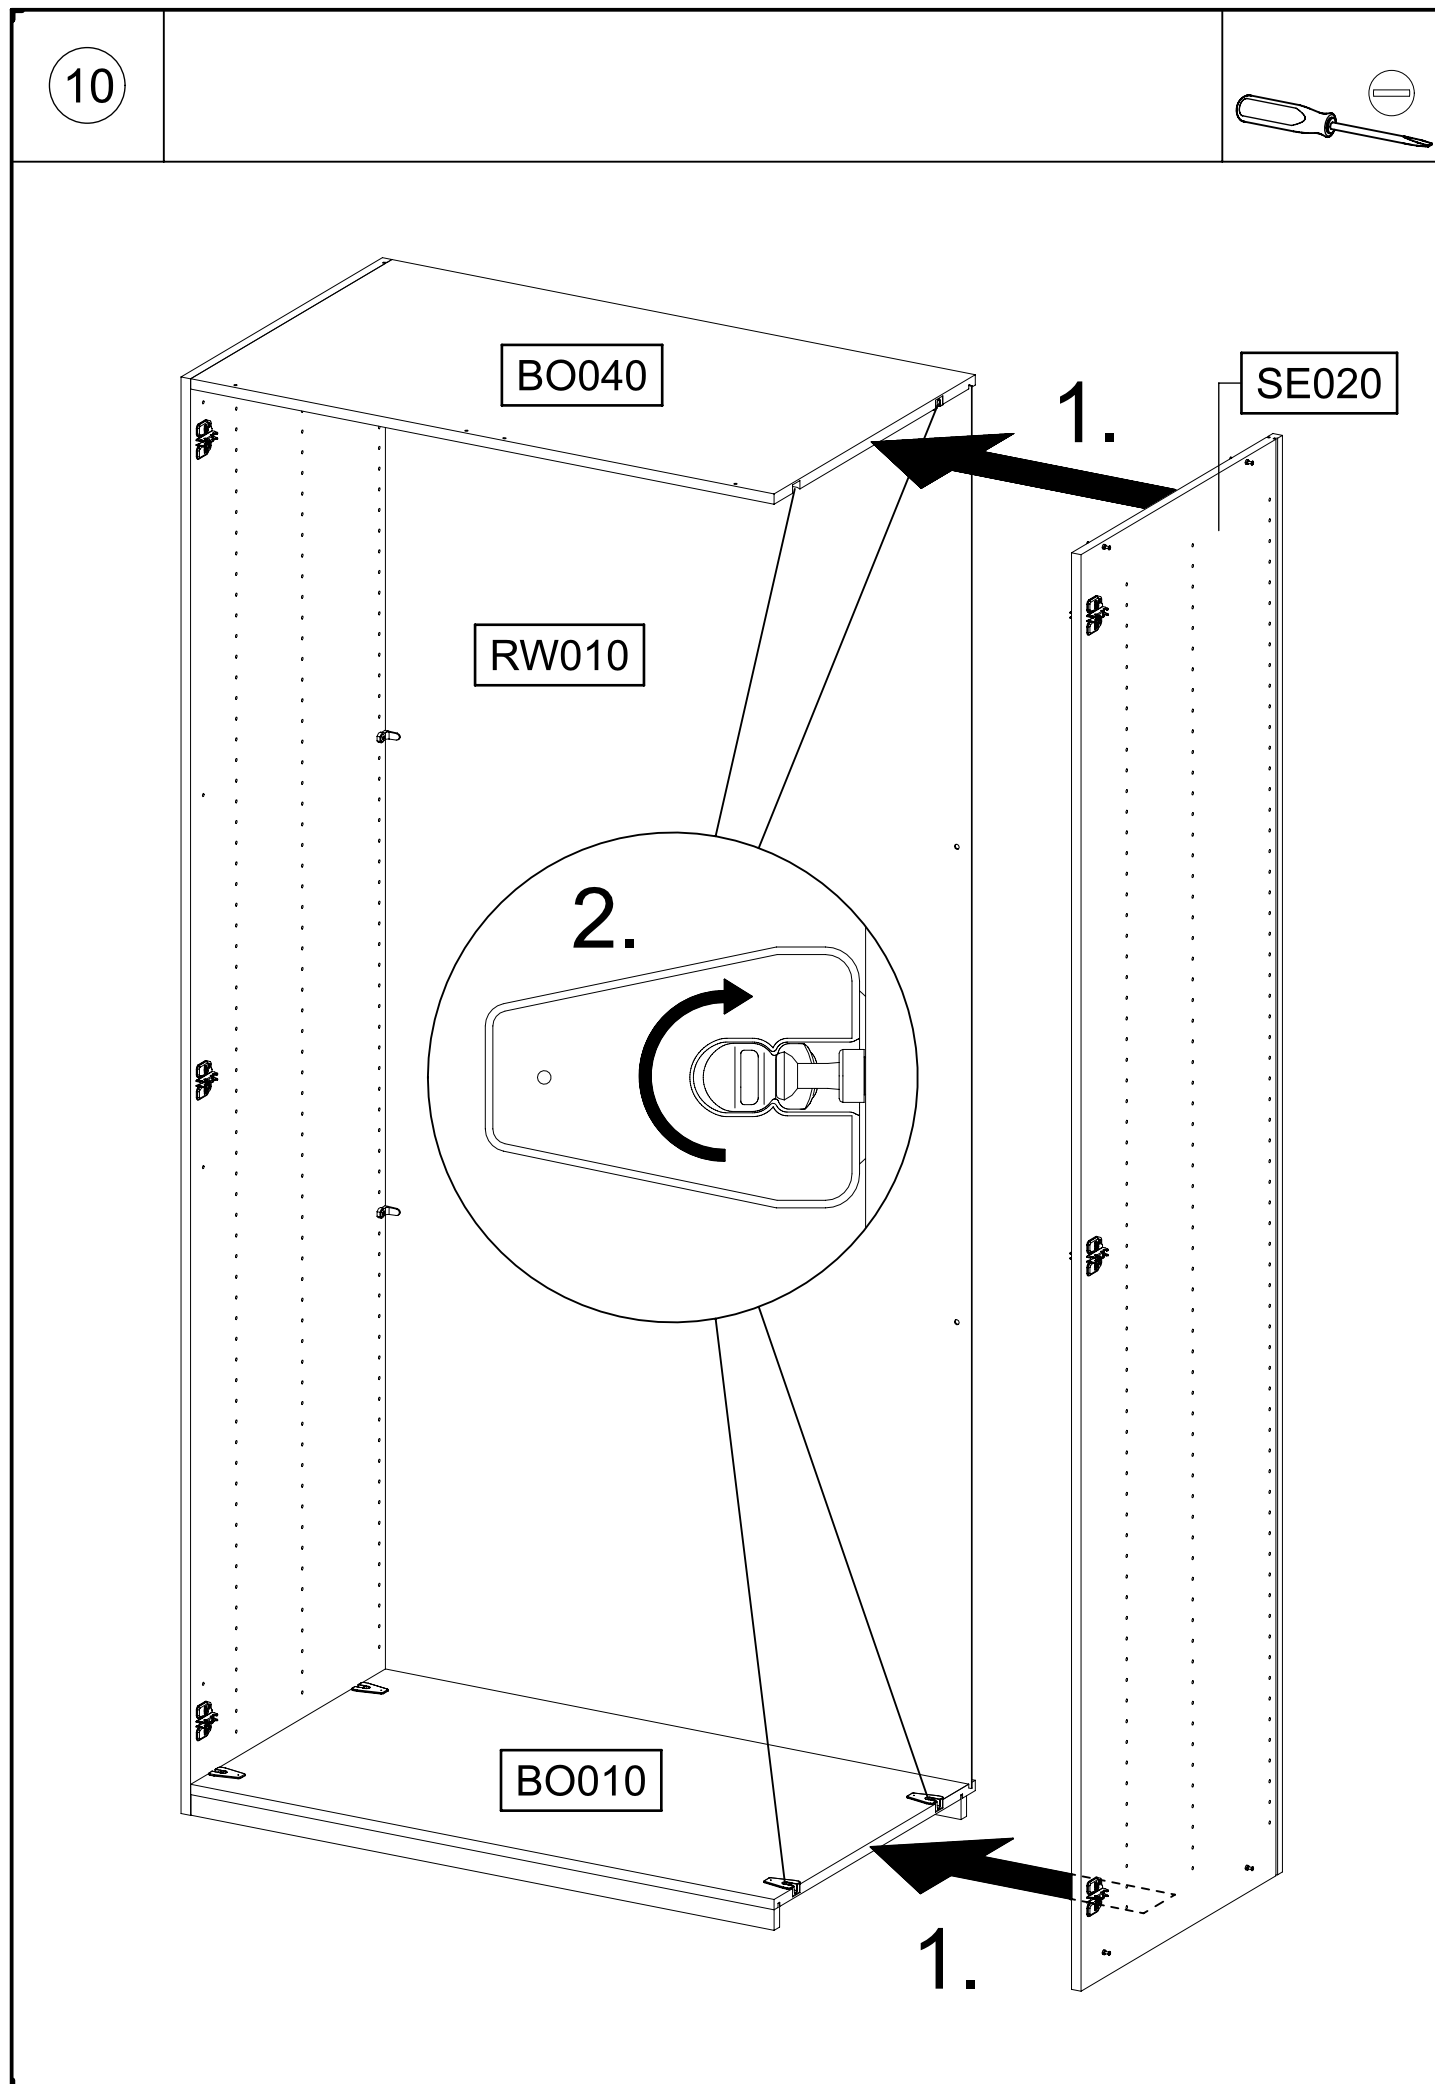

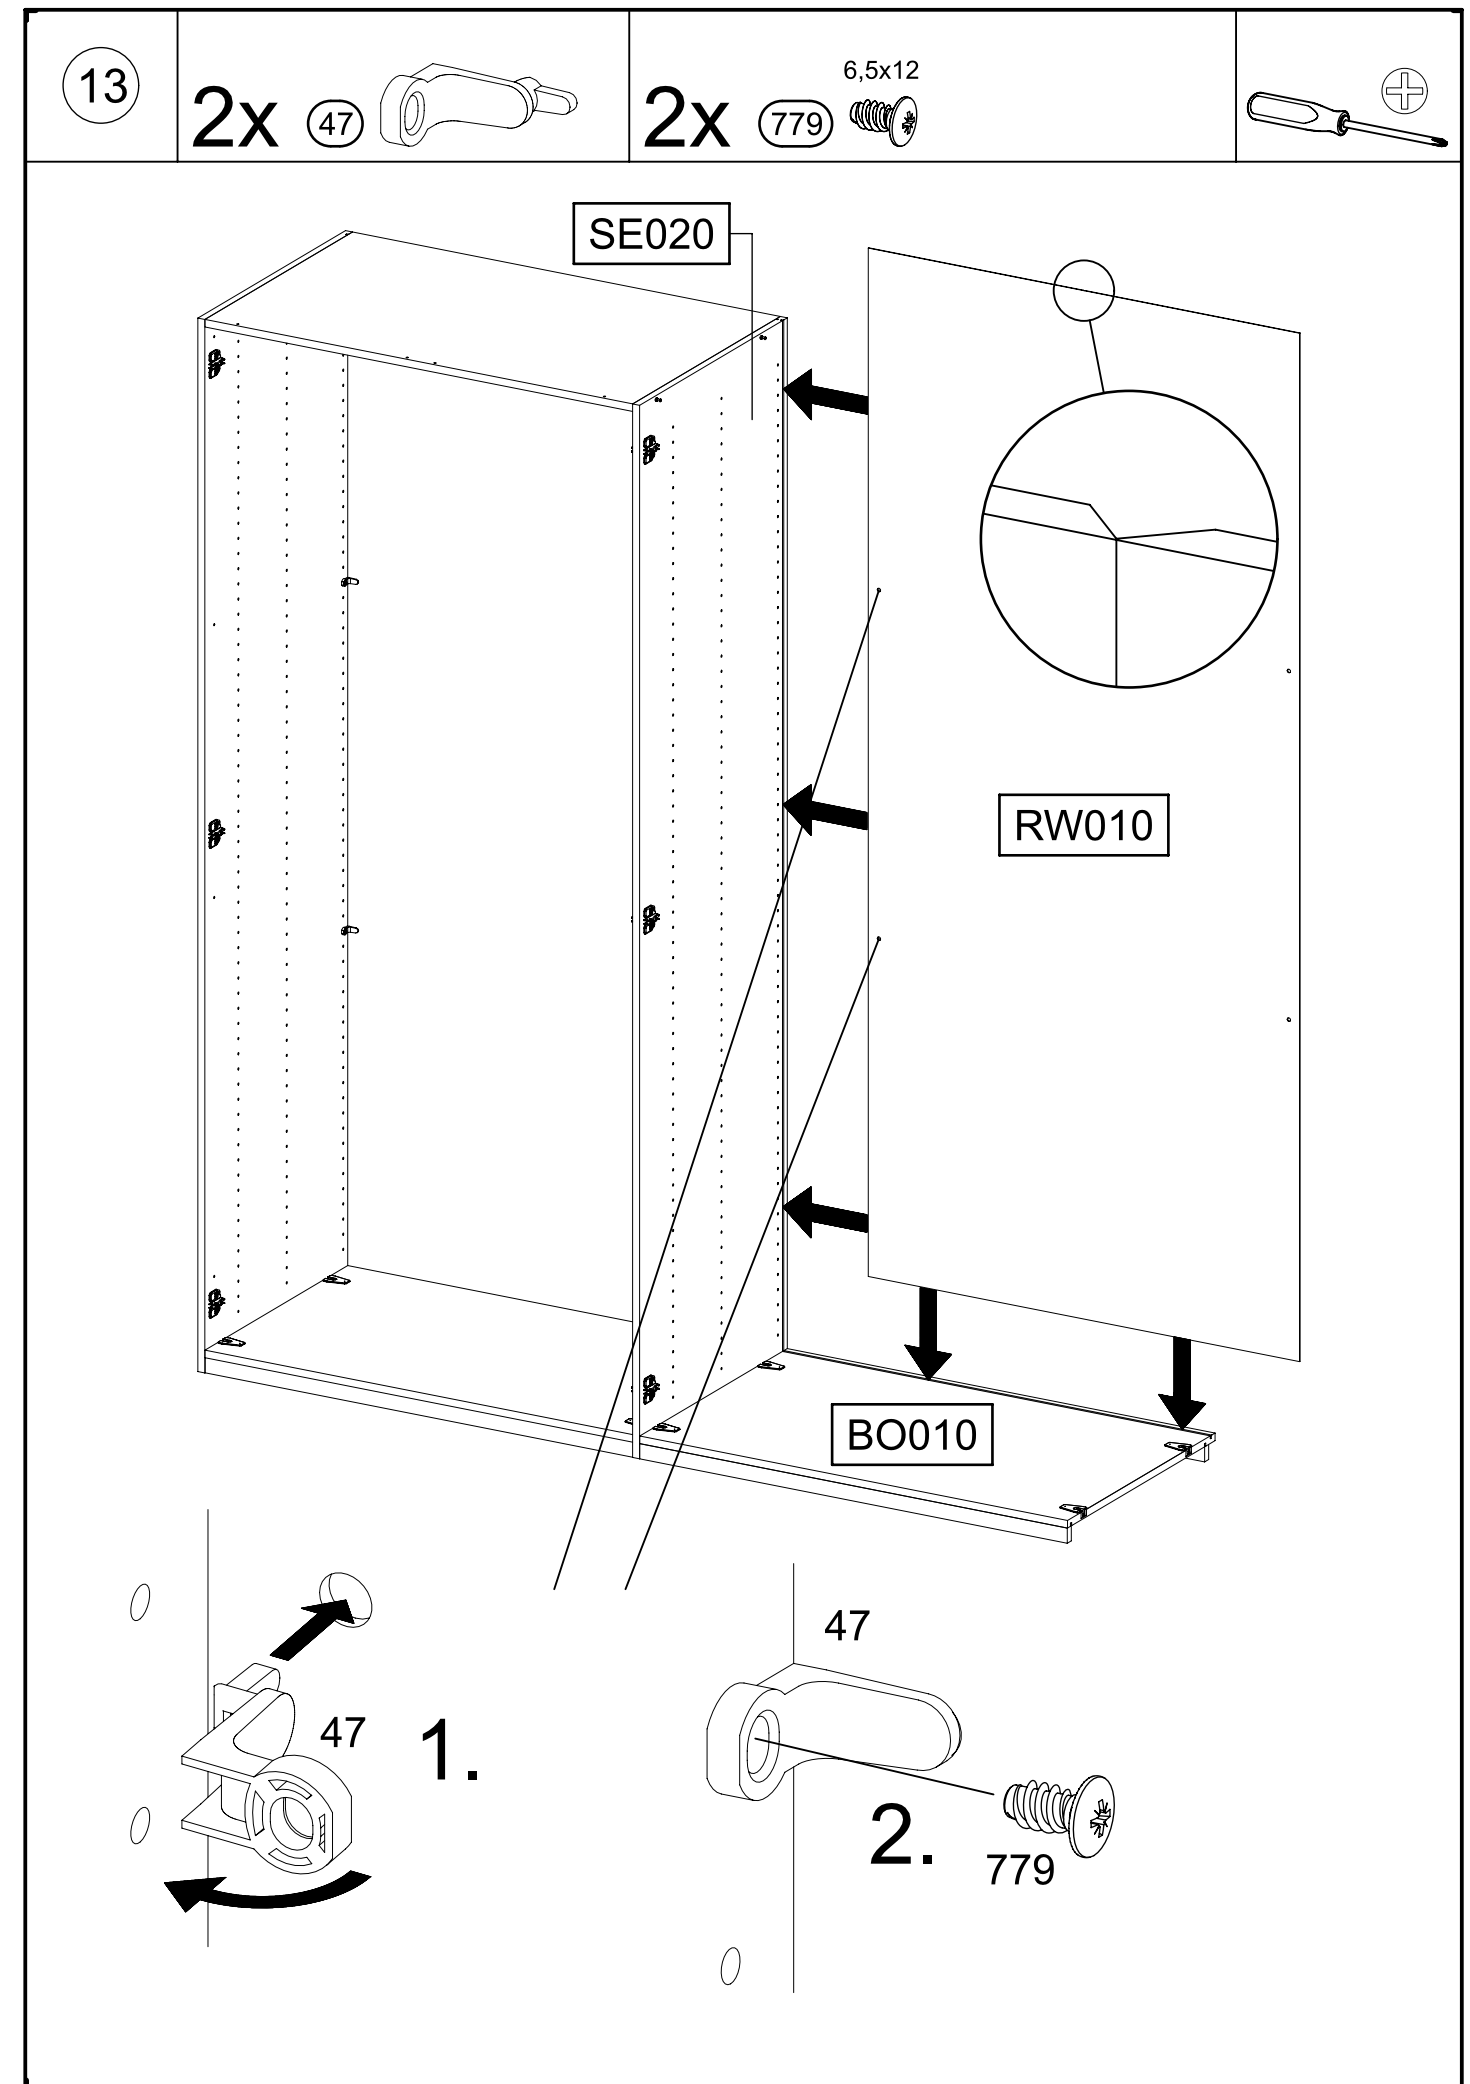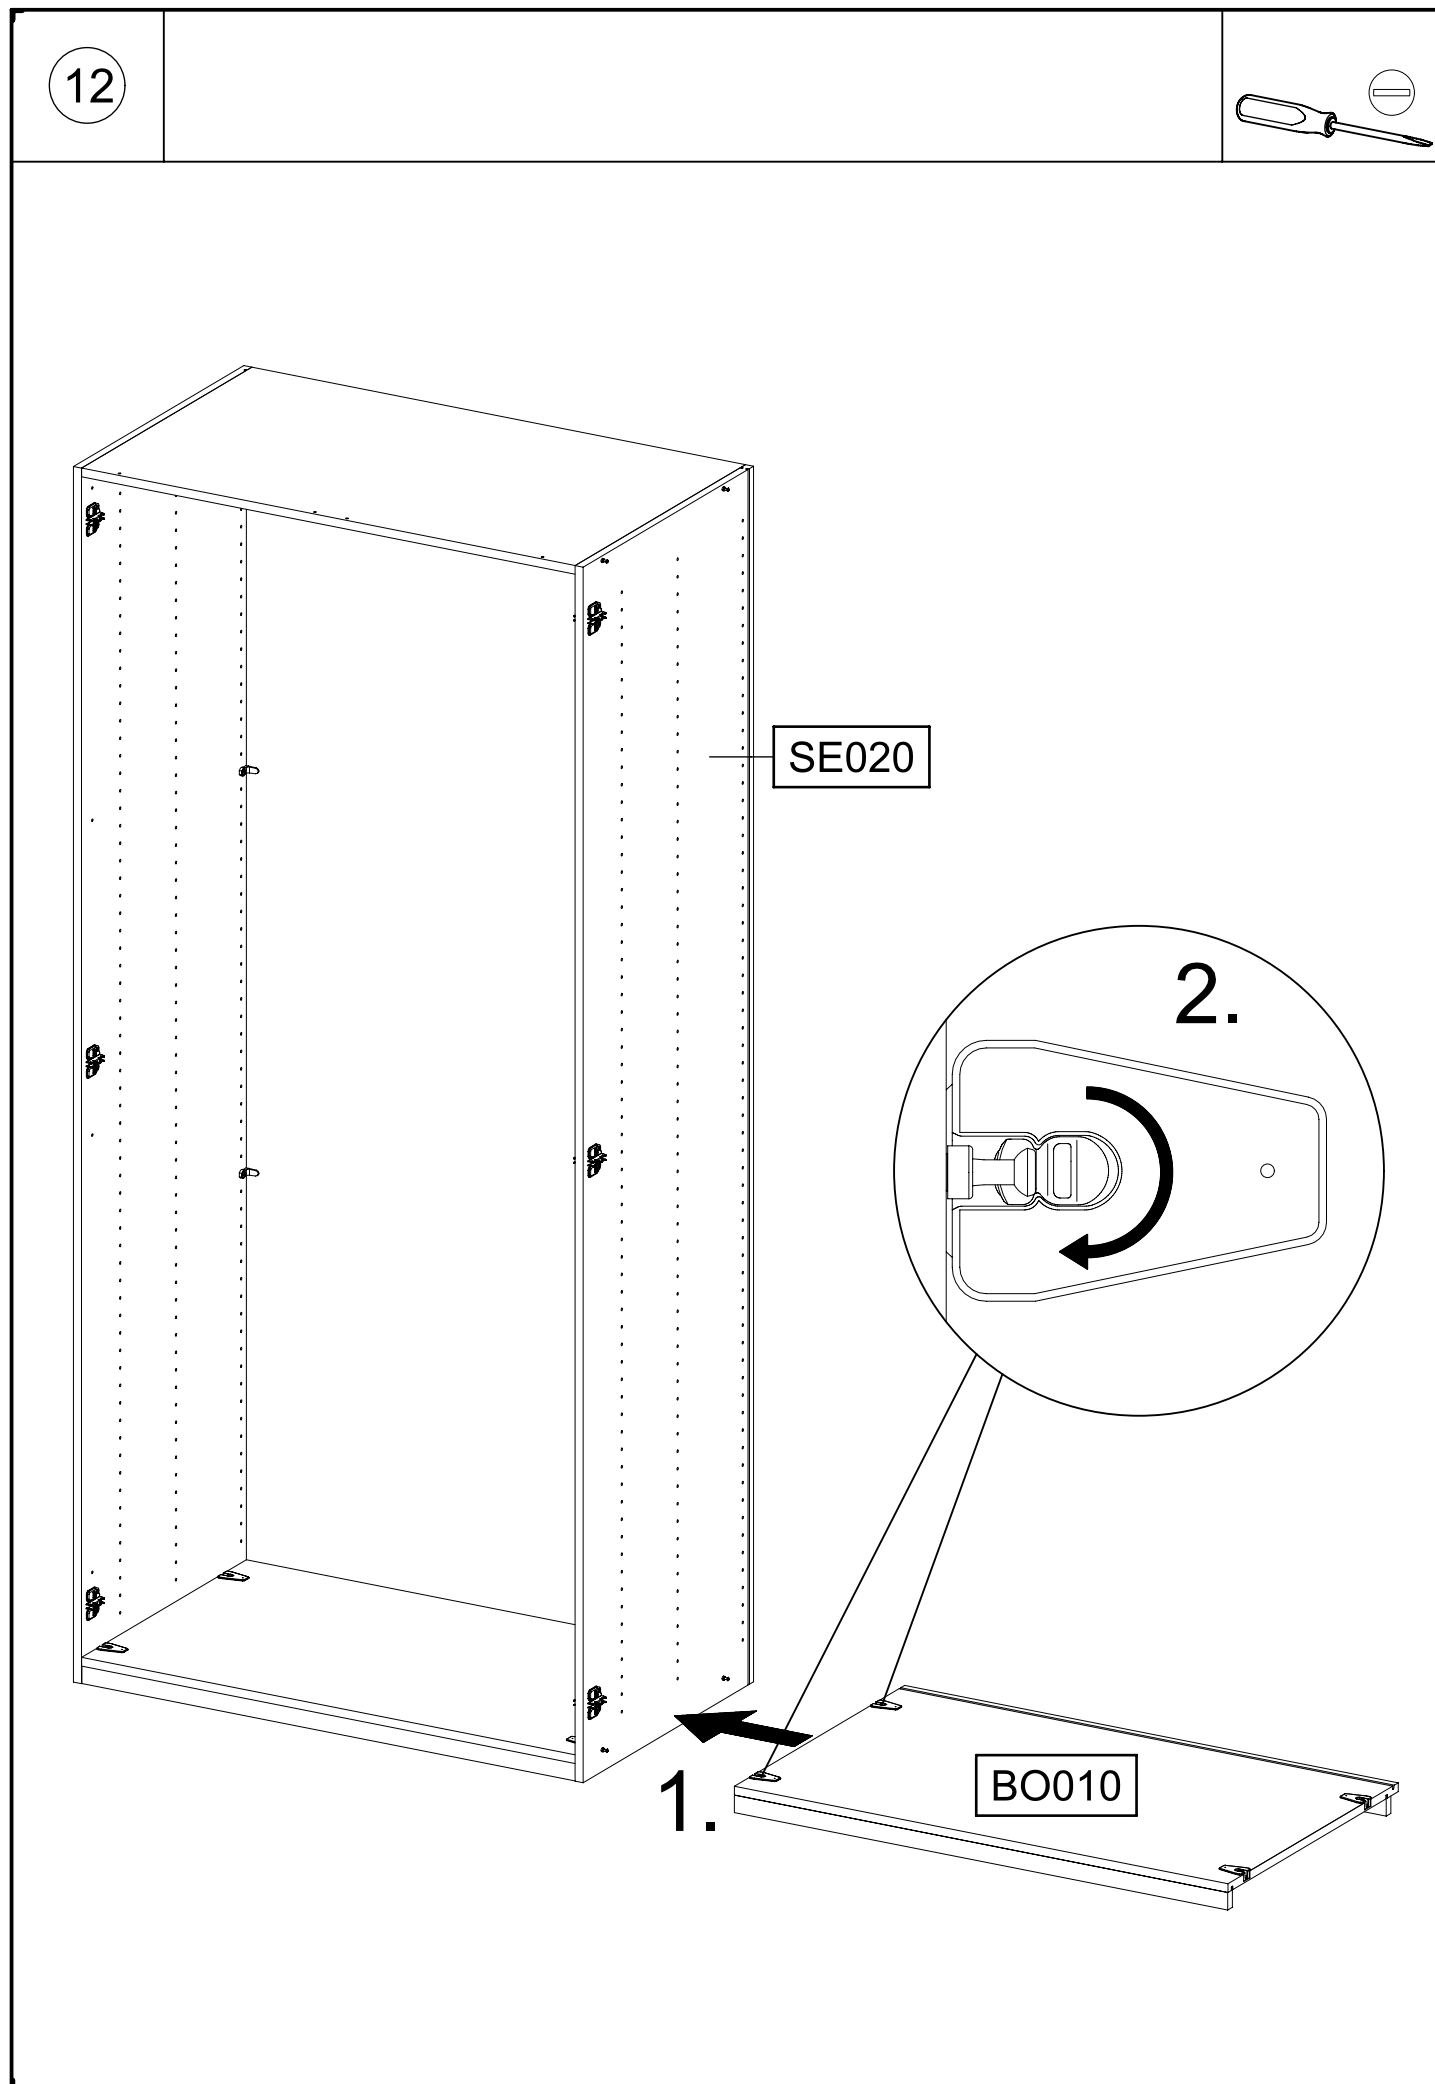

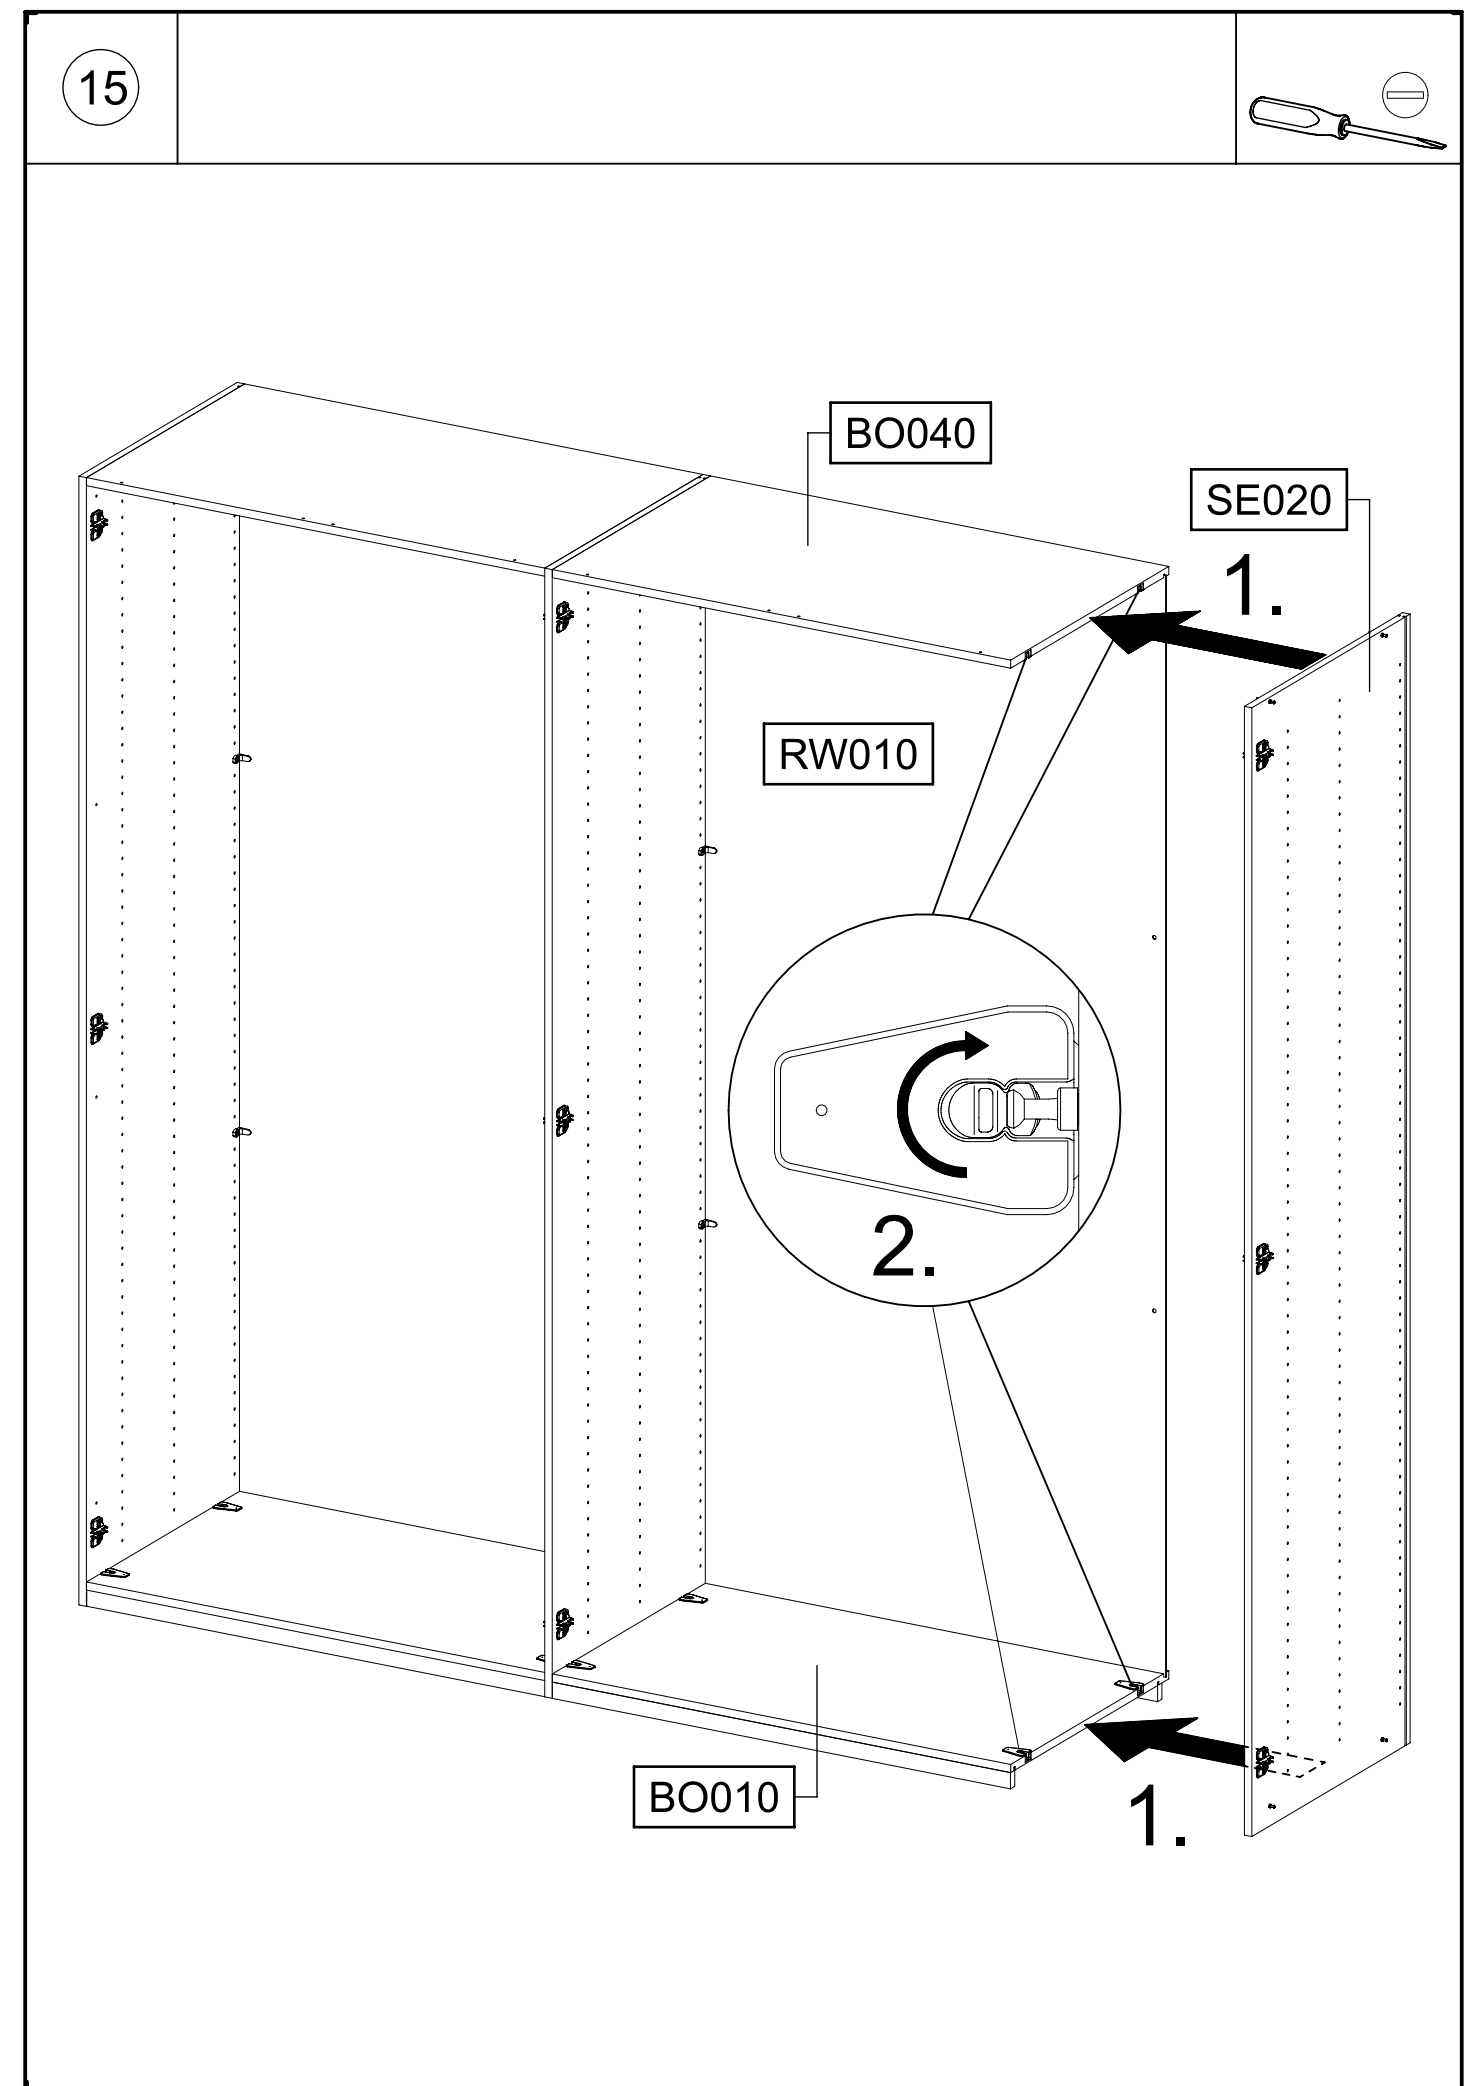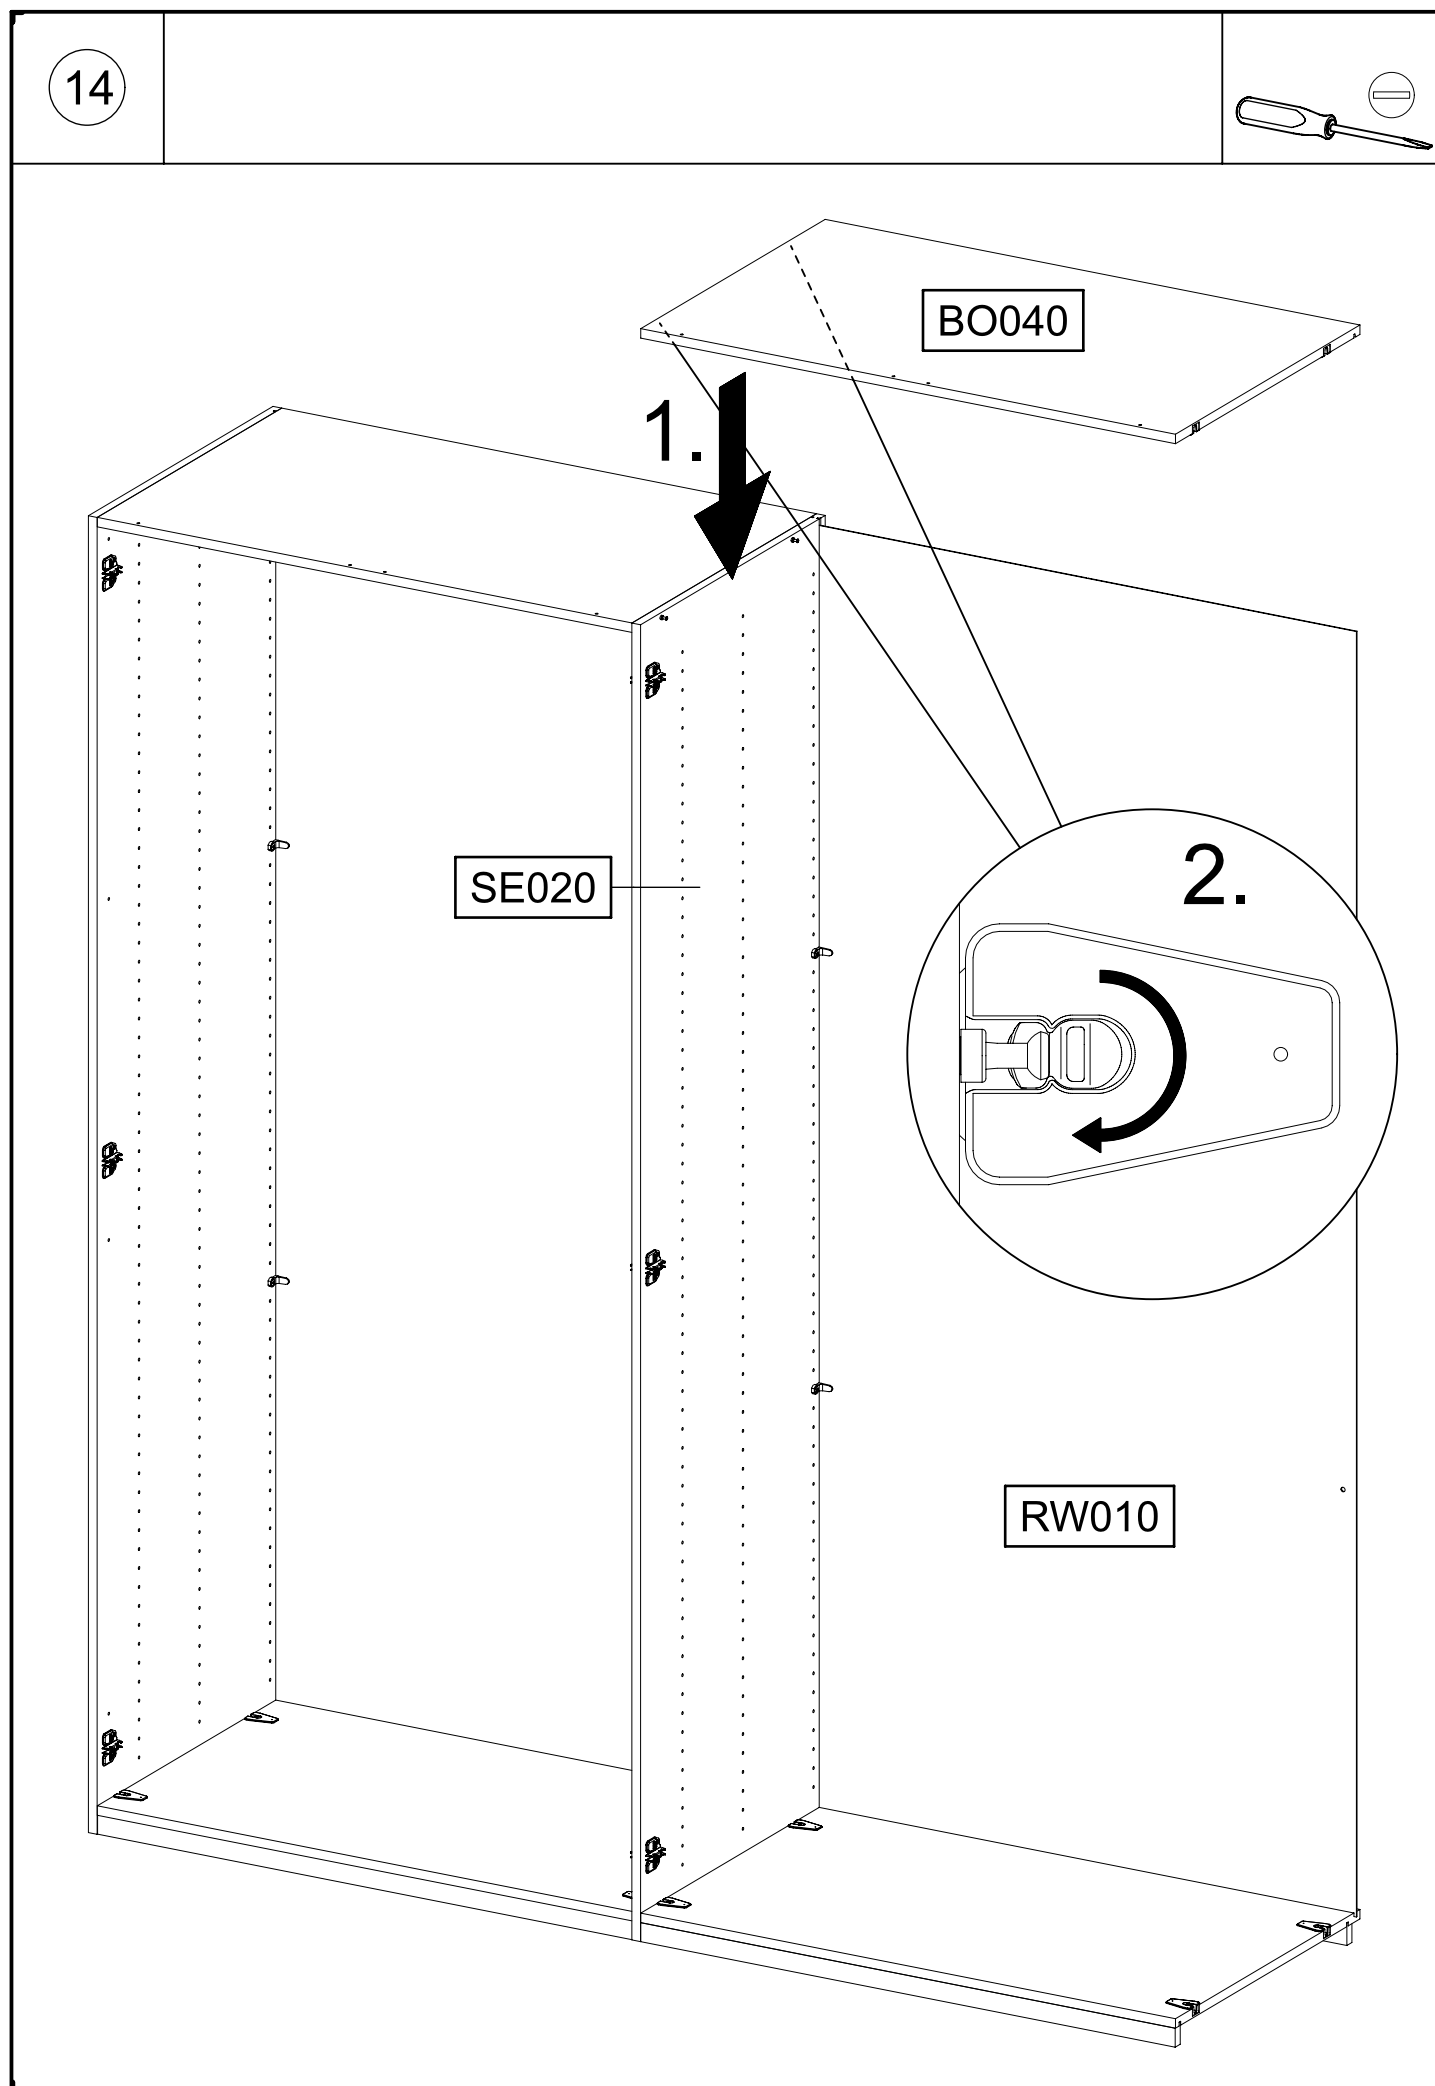

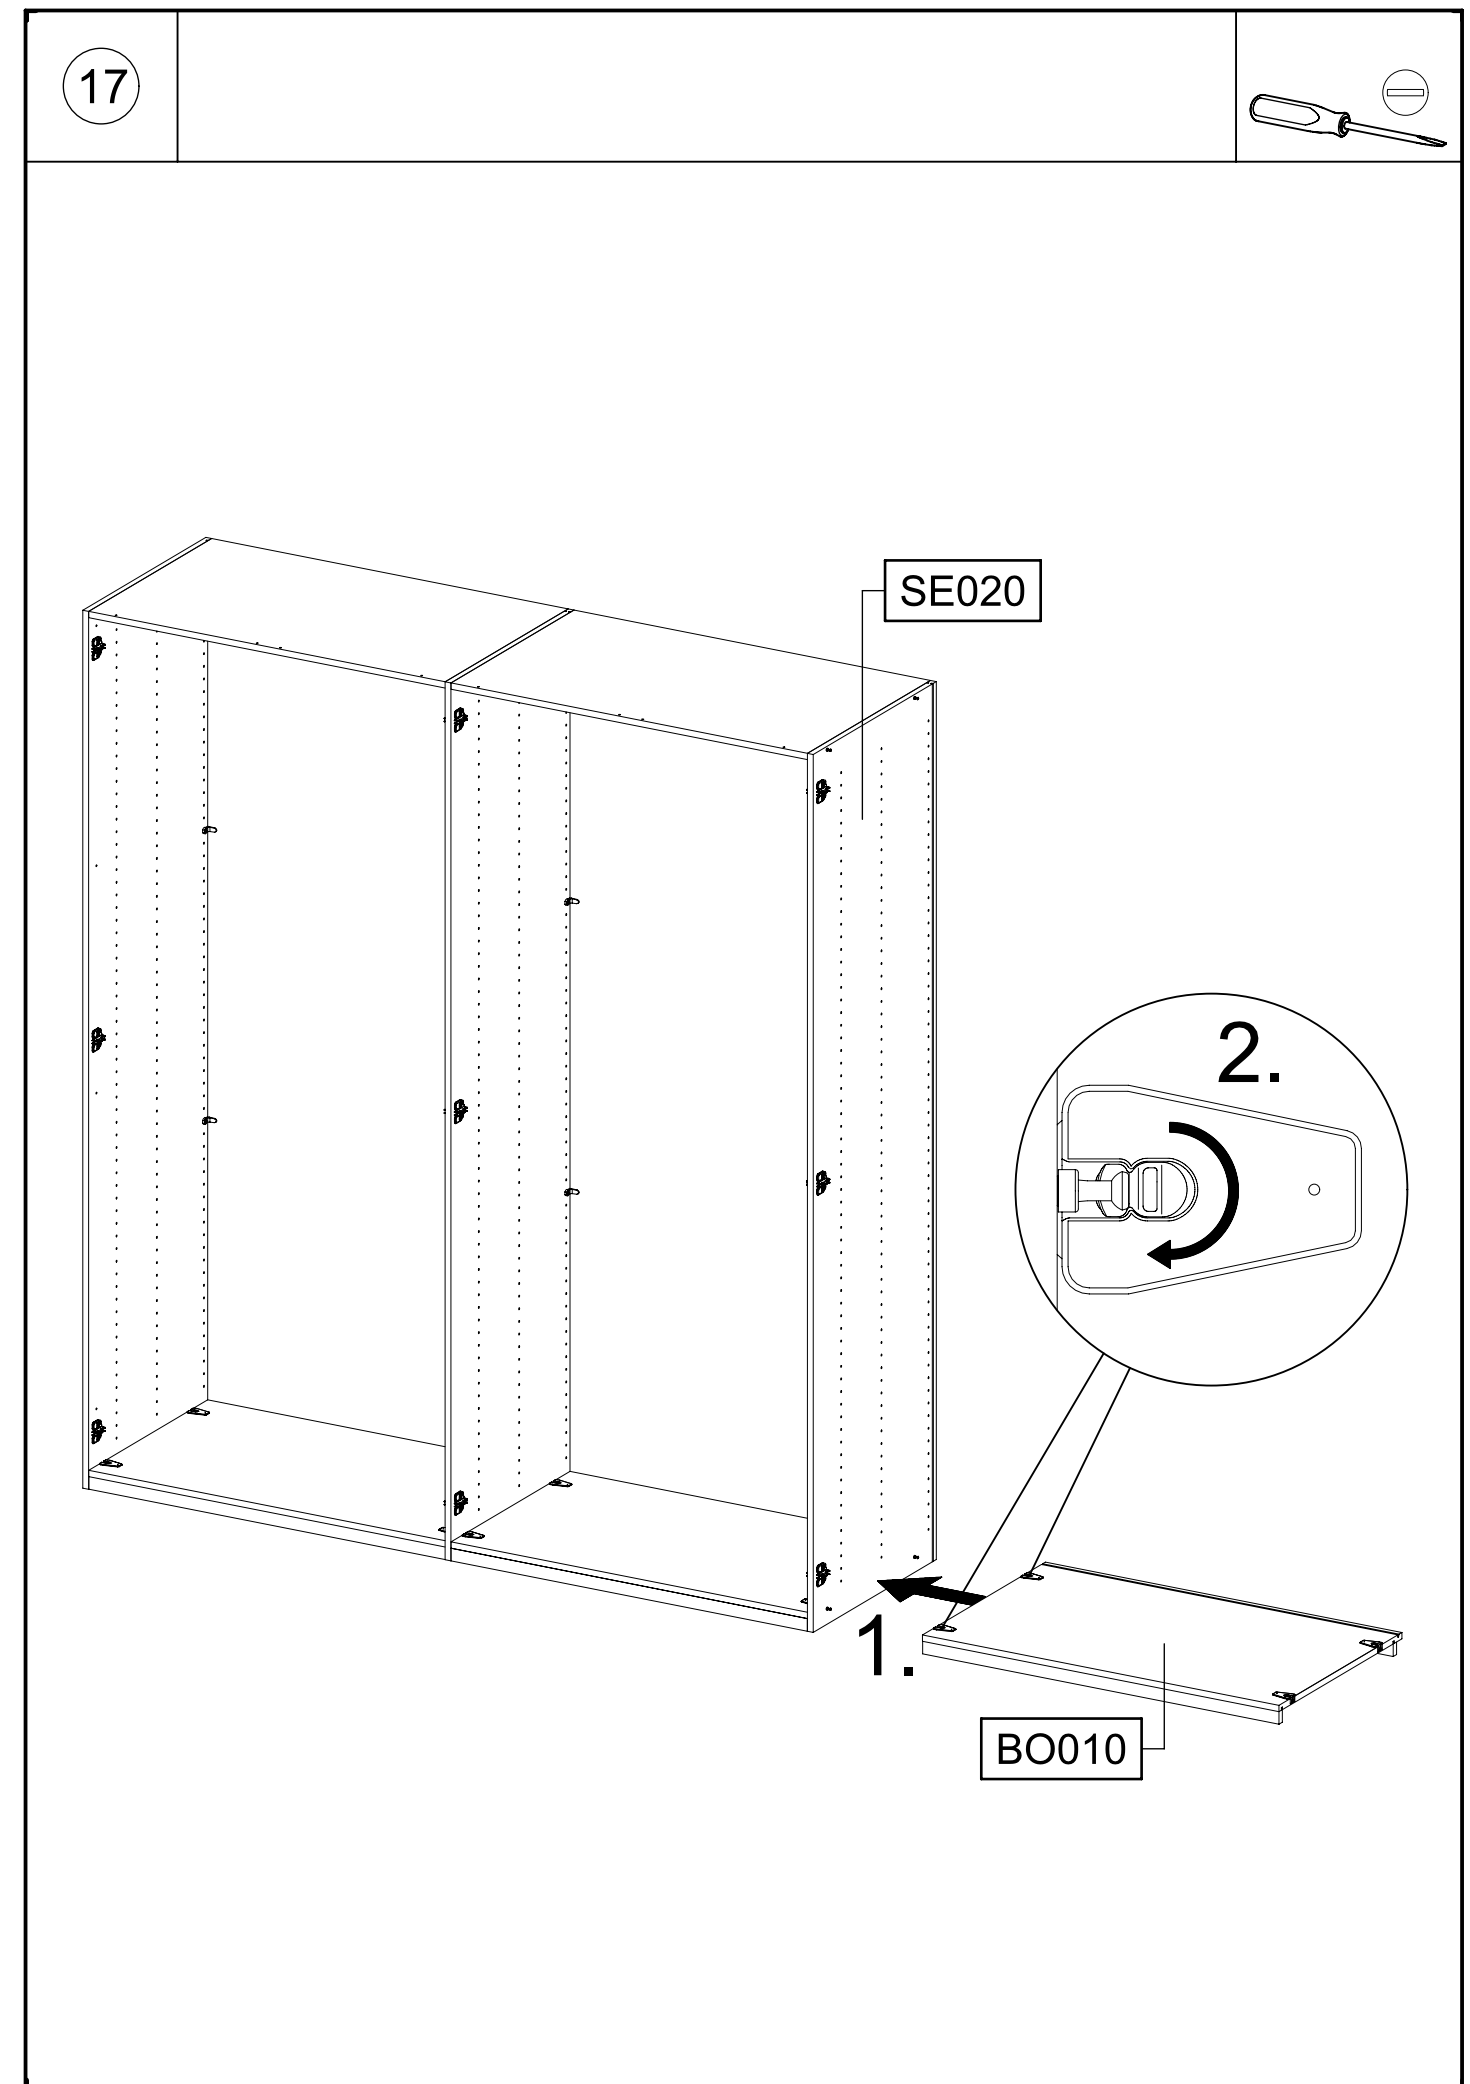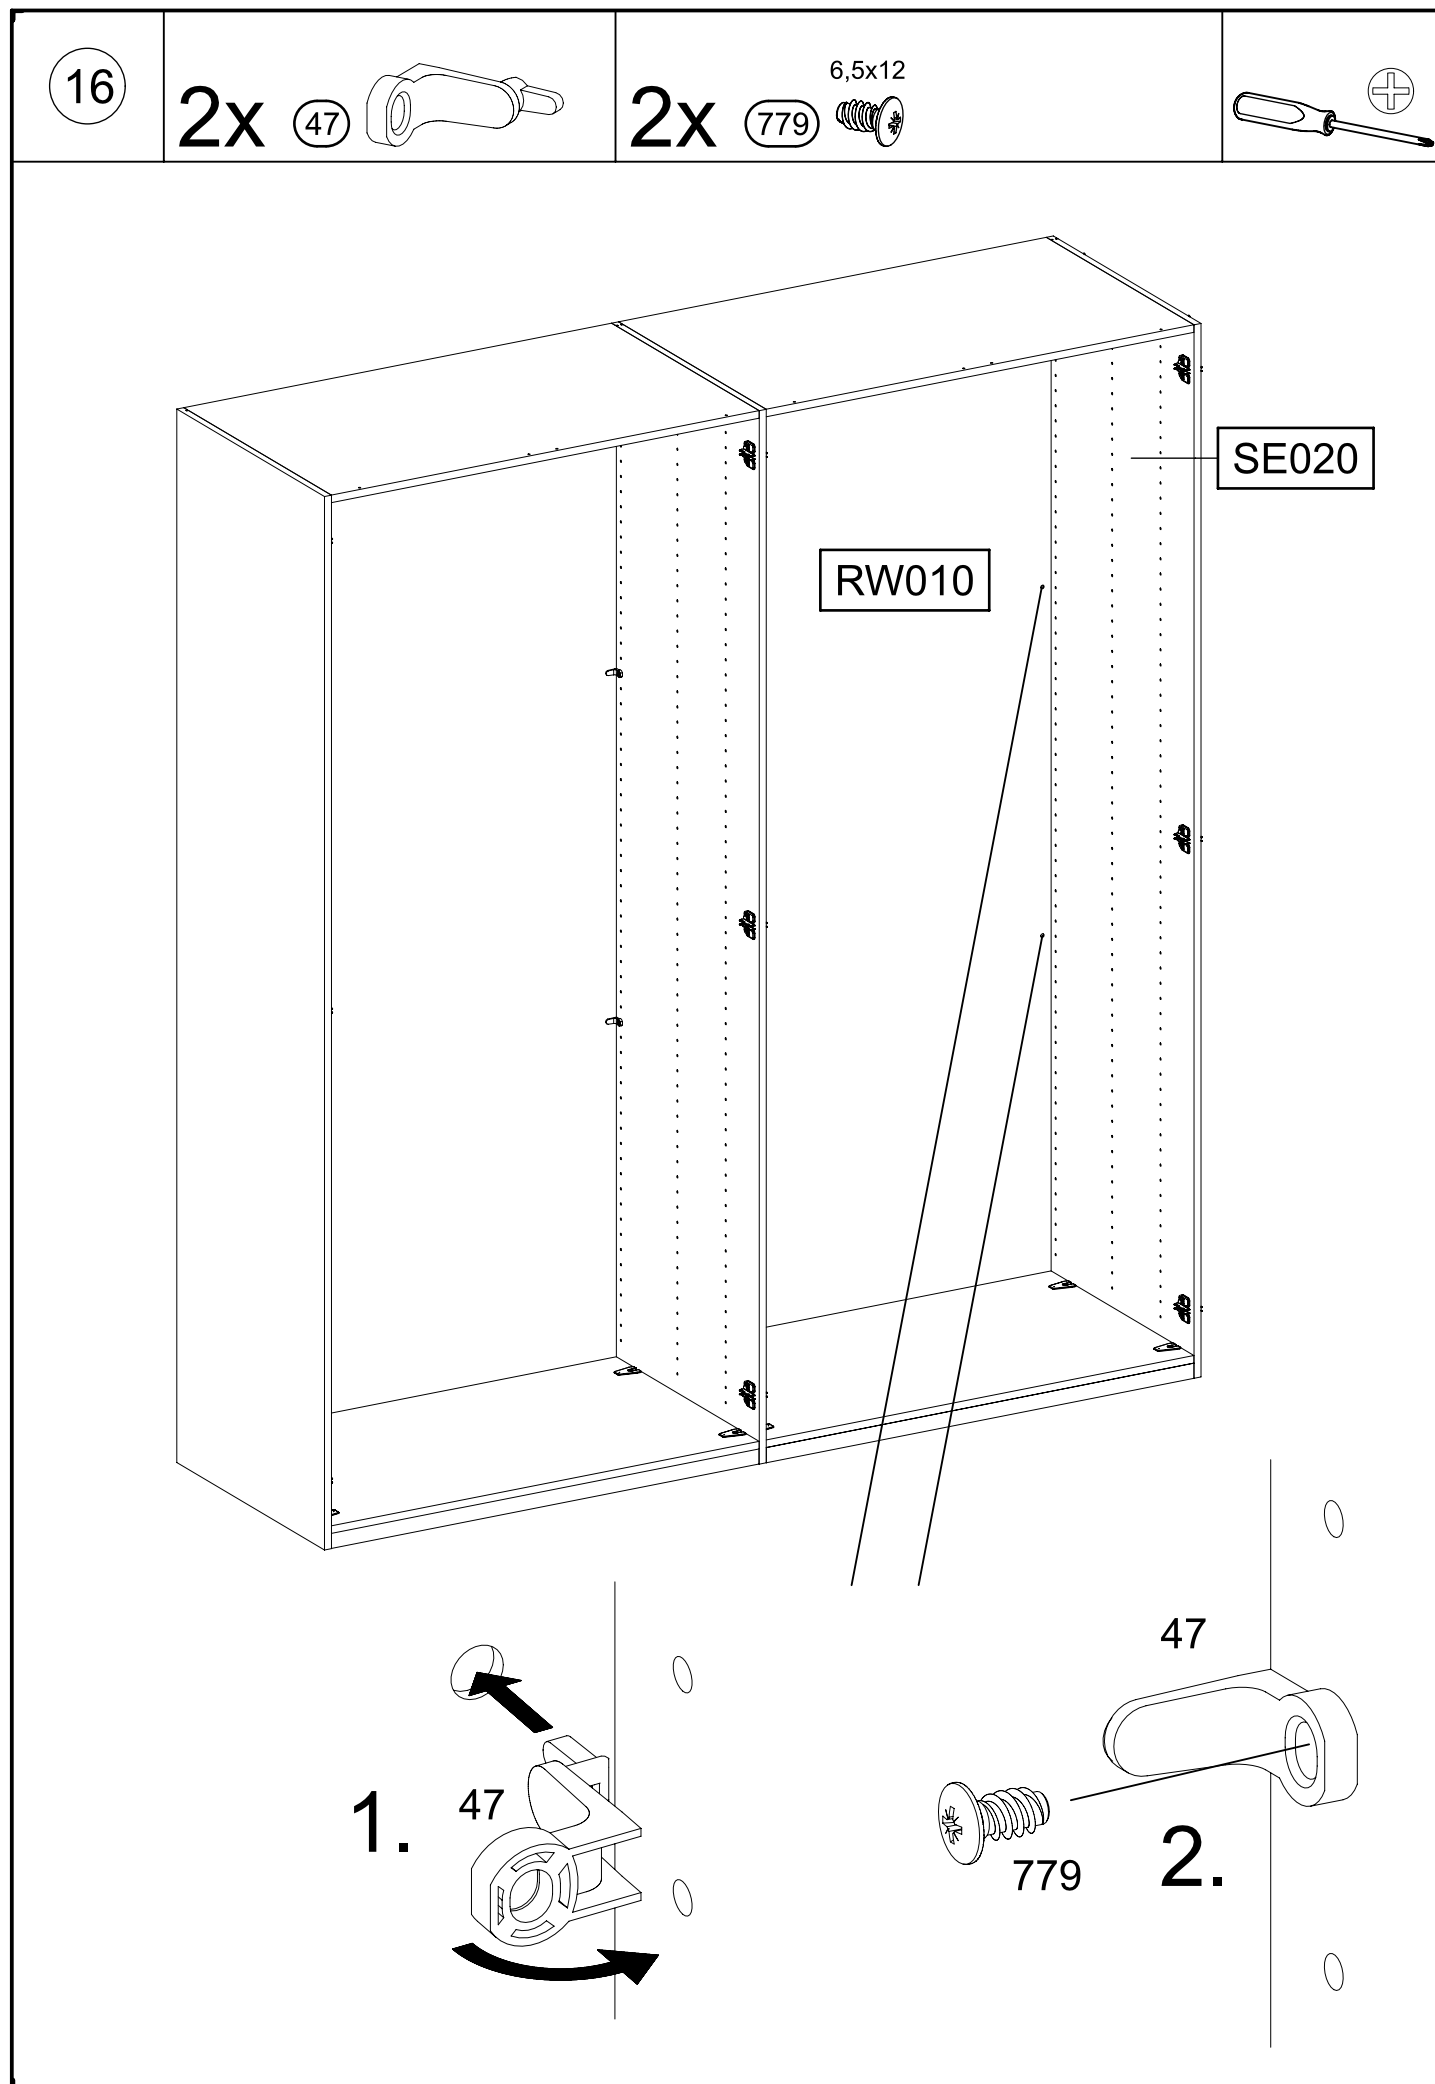

18

2x



47





2x

779


6,5x12

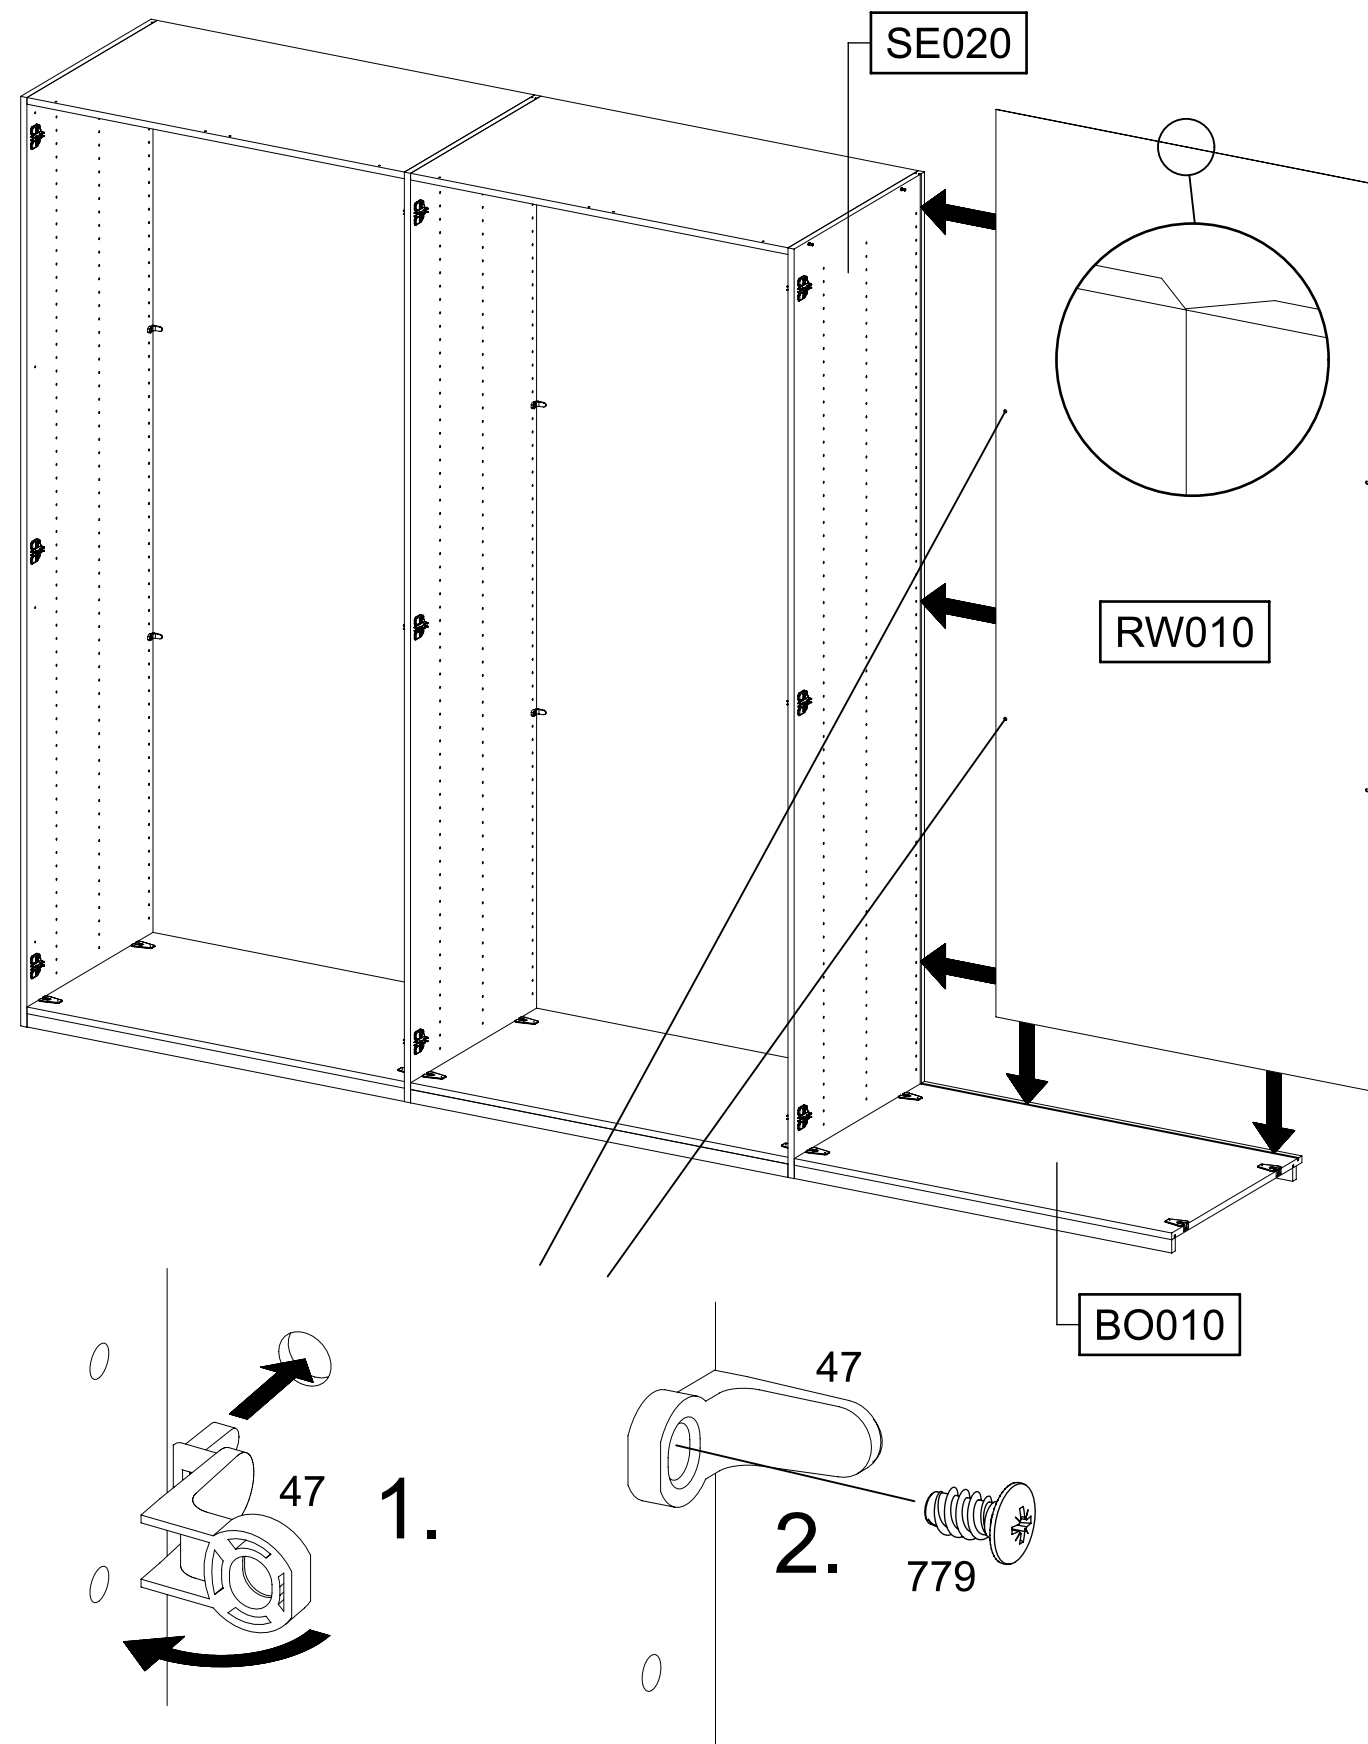

19

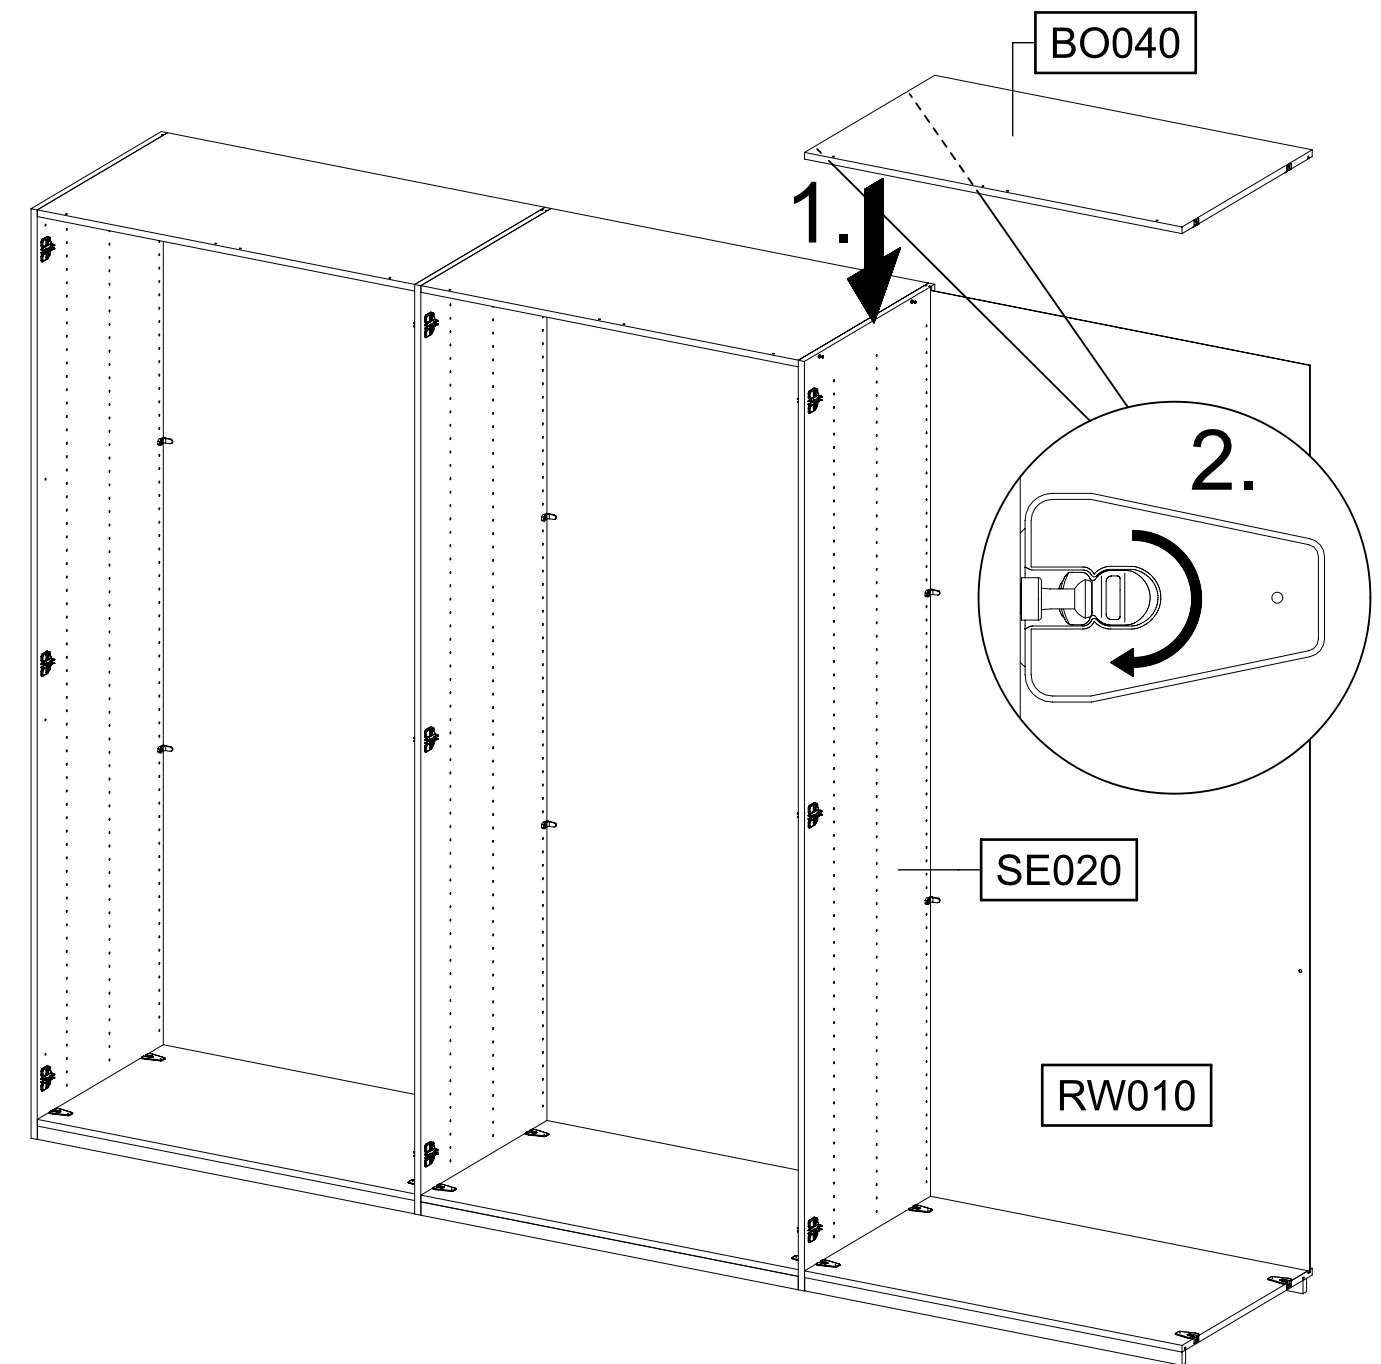


25.

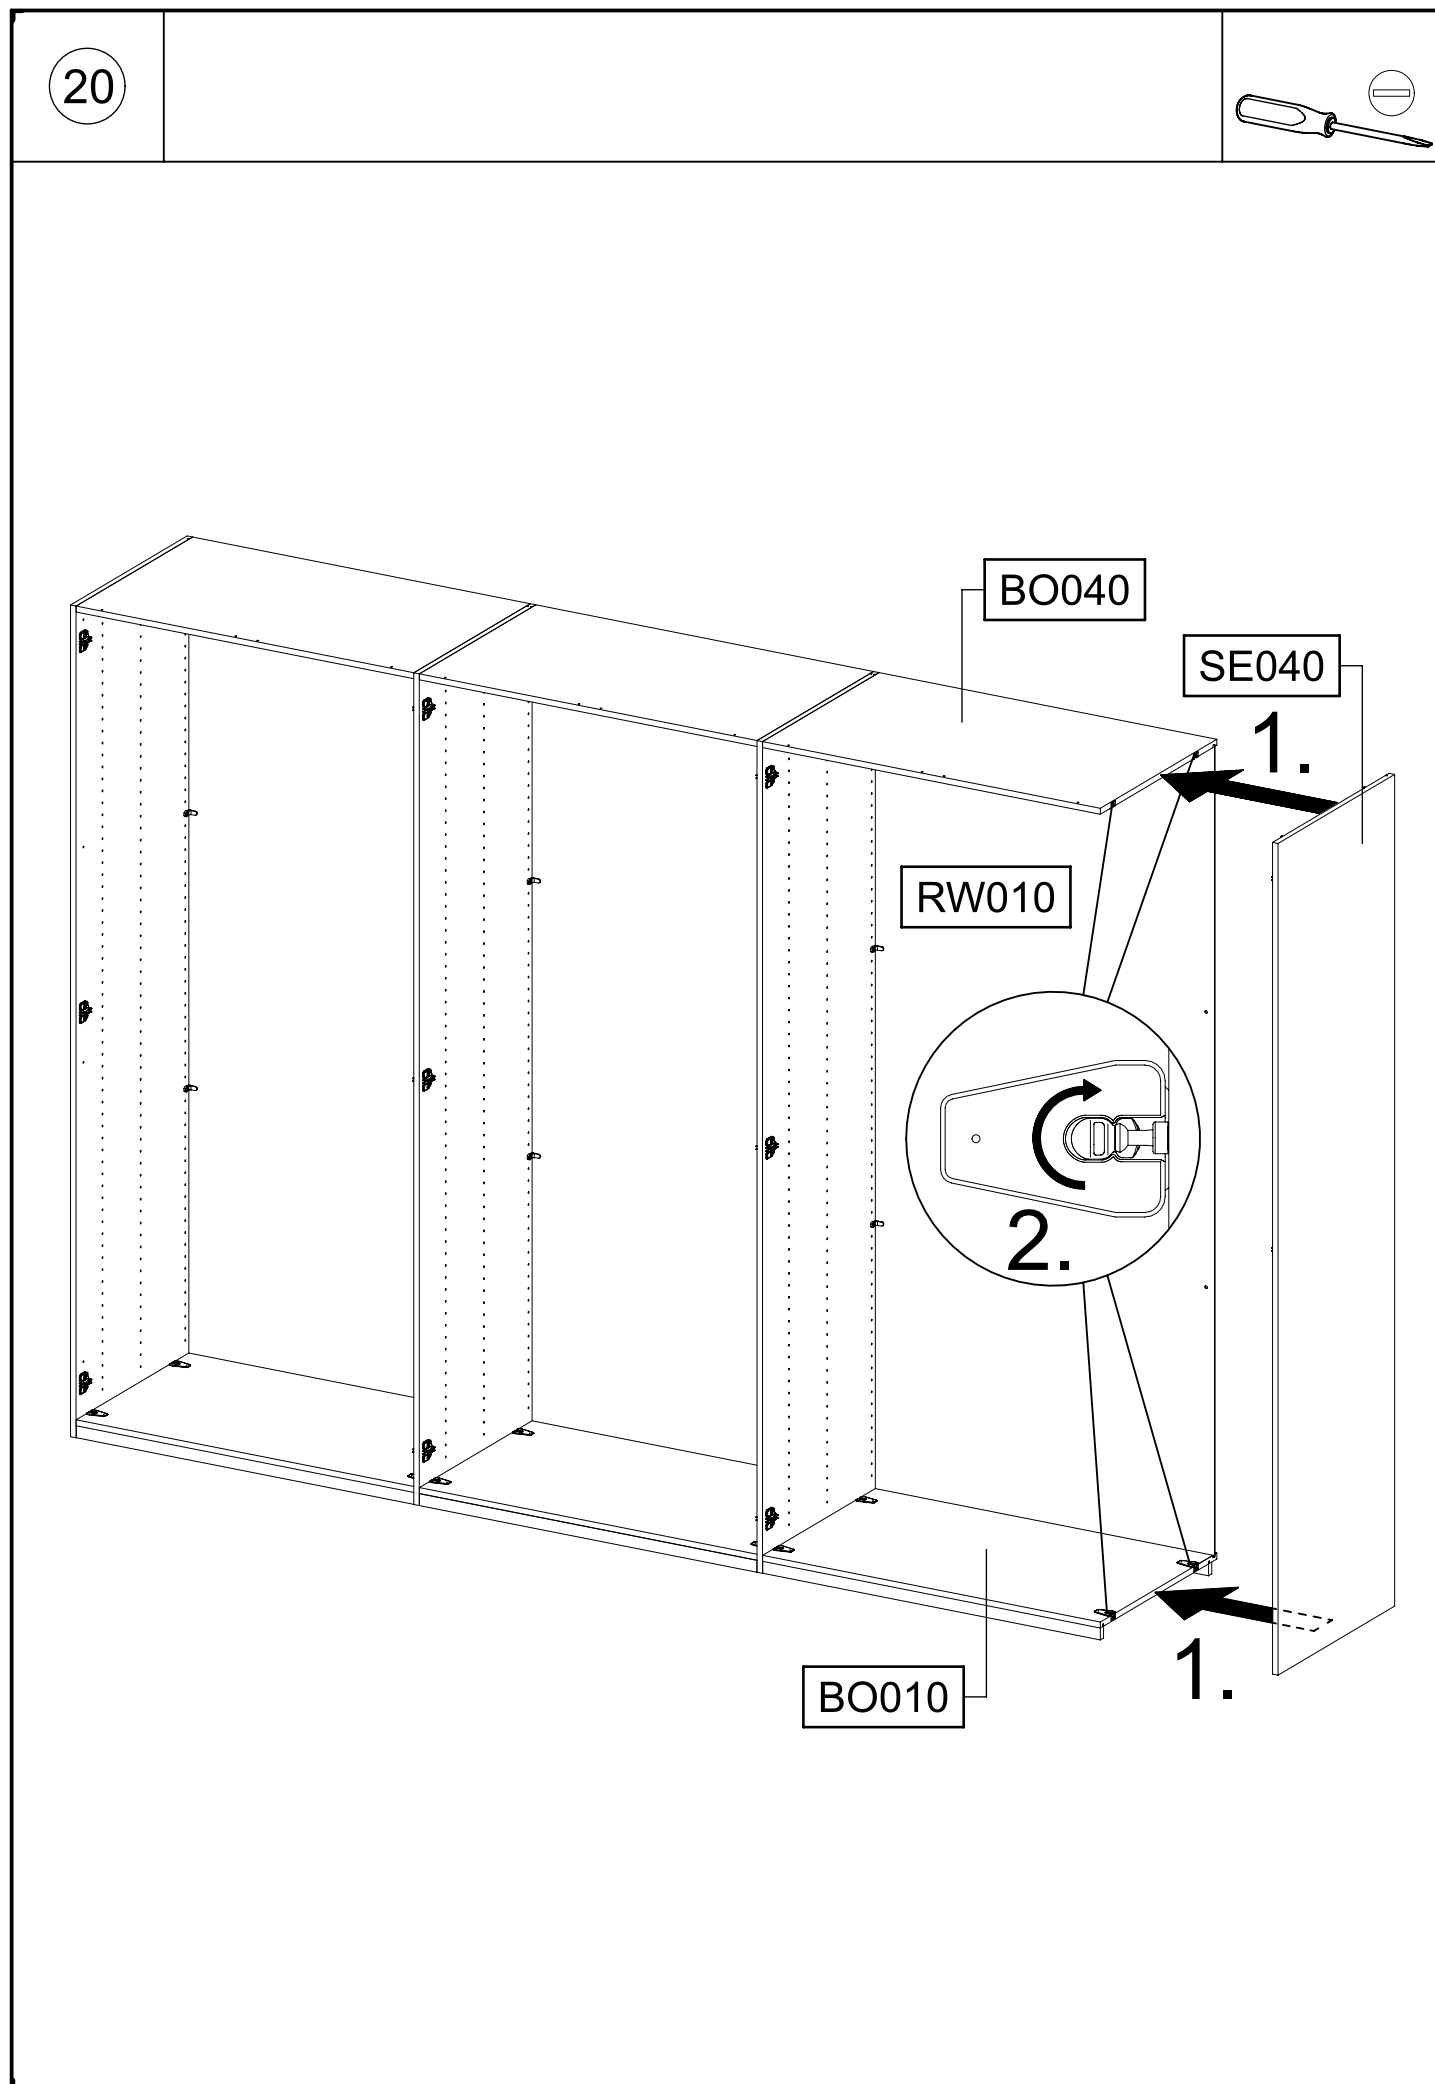

MD106

26.



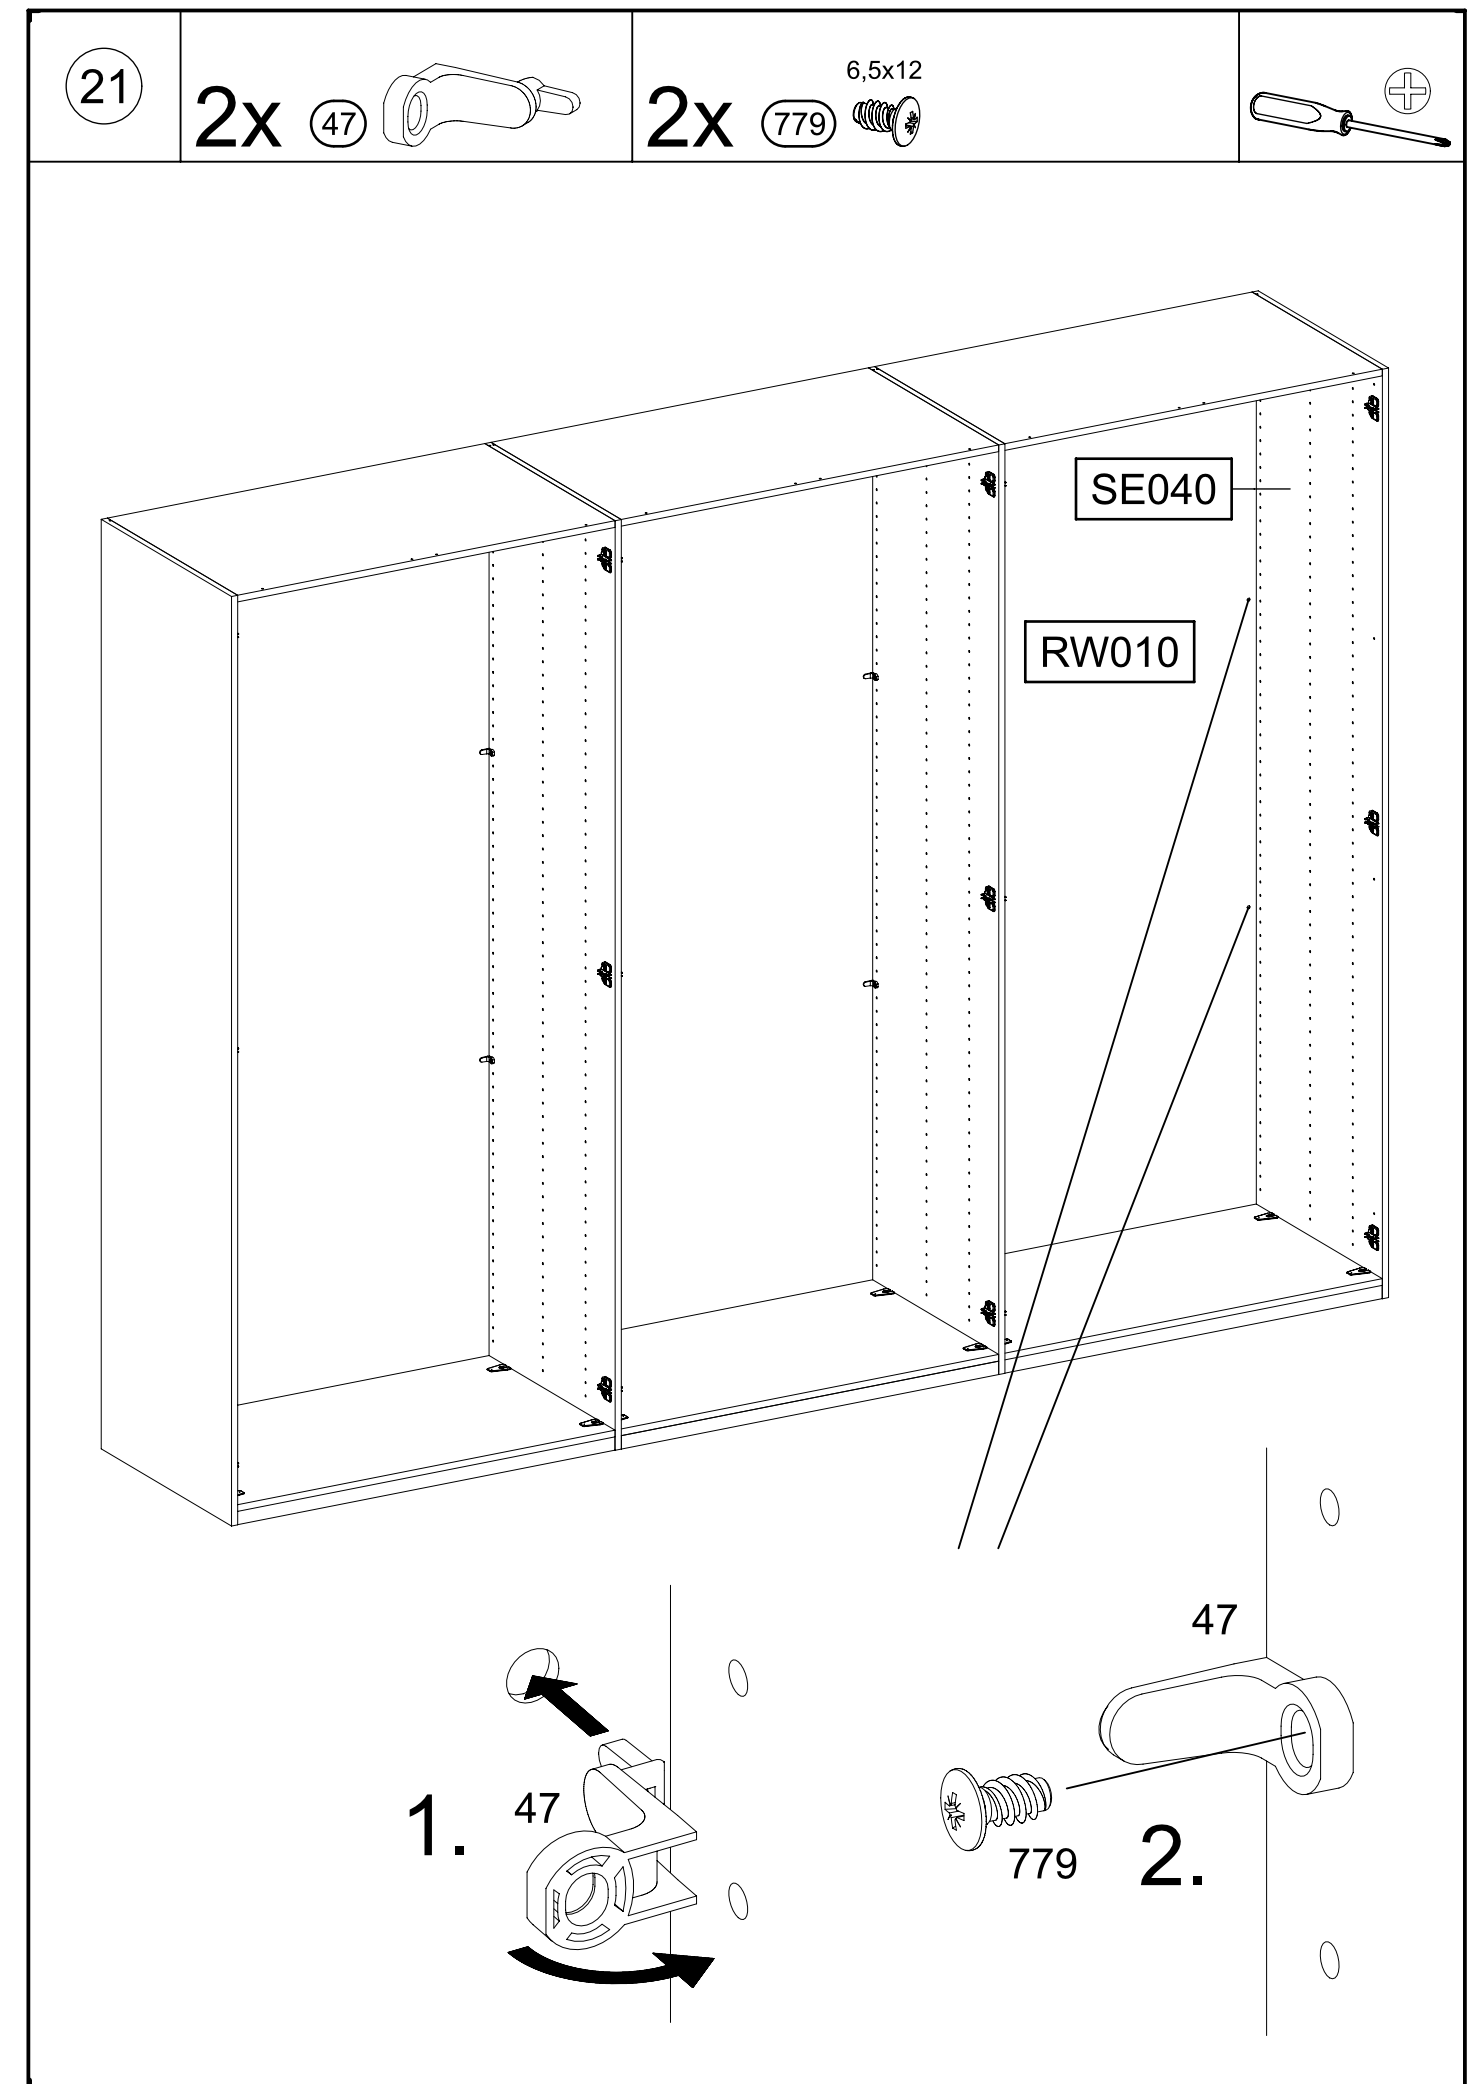


MD106

22

24x


1089

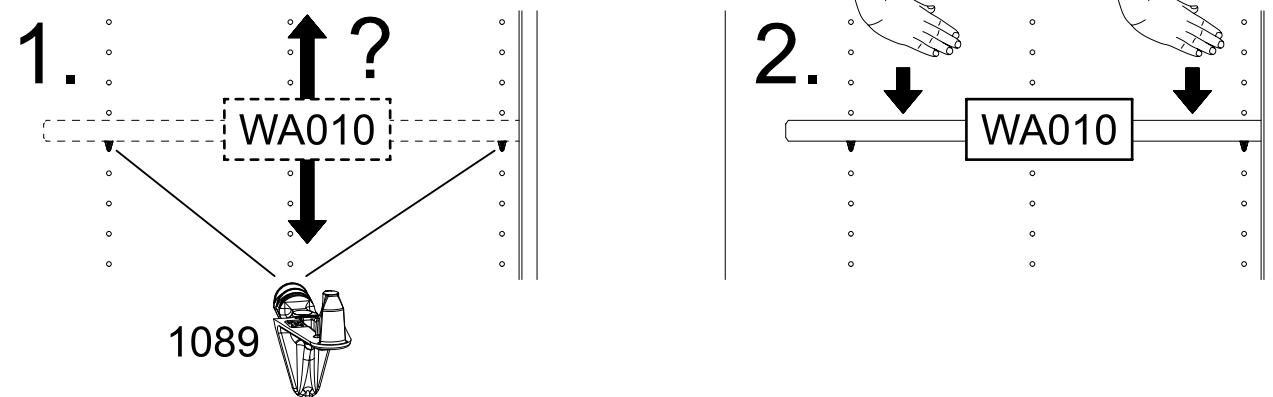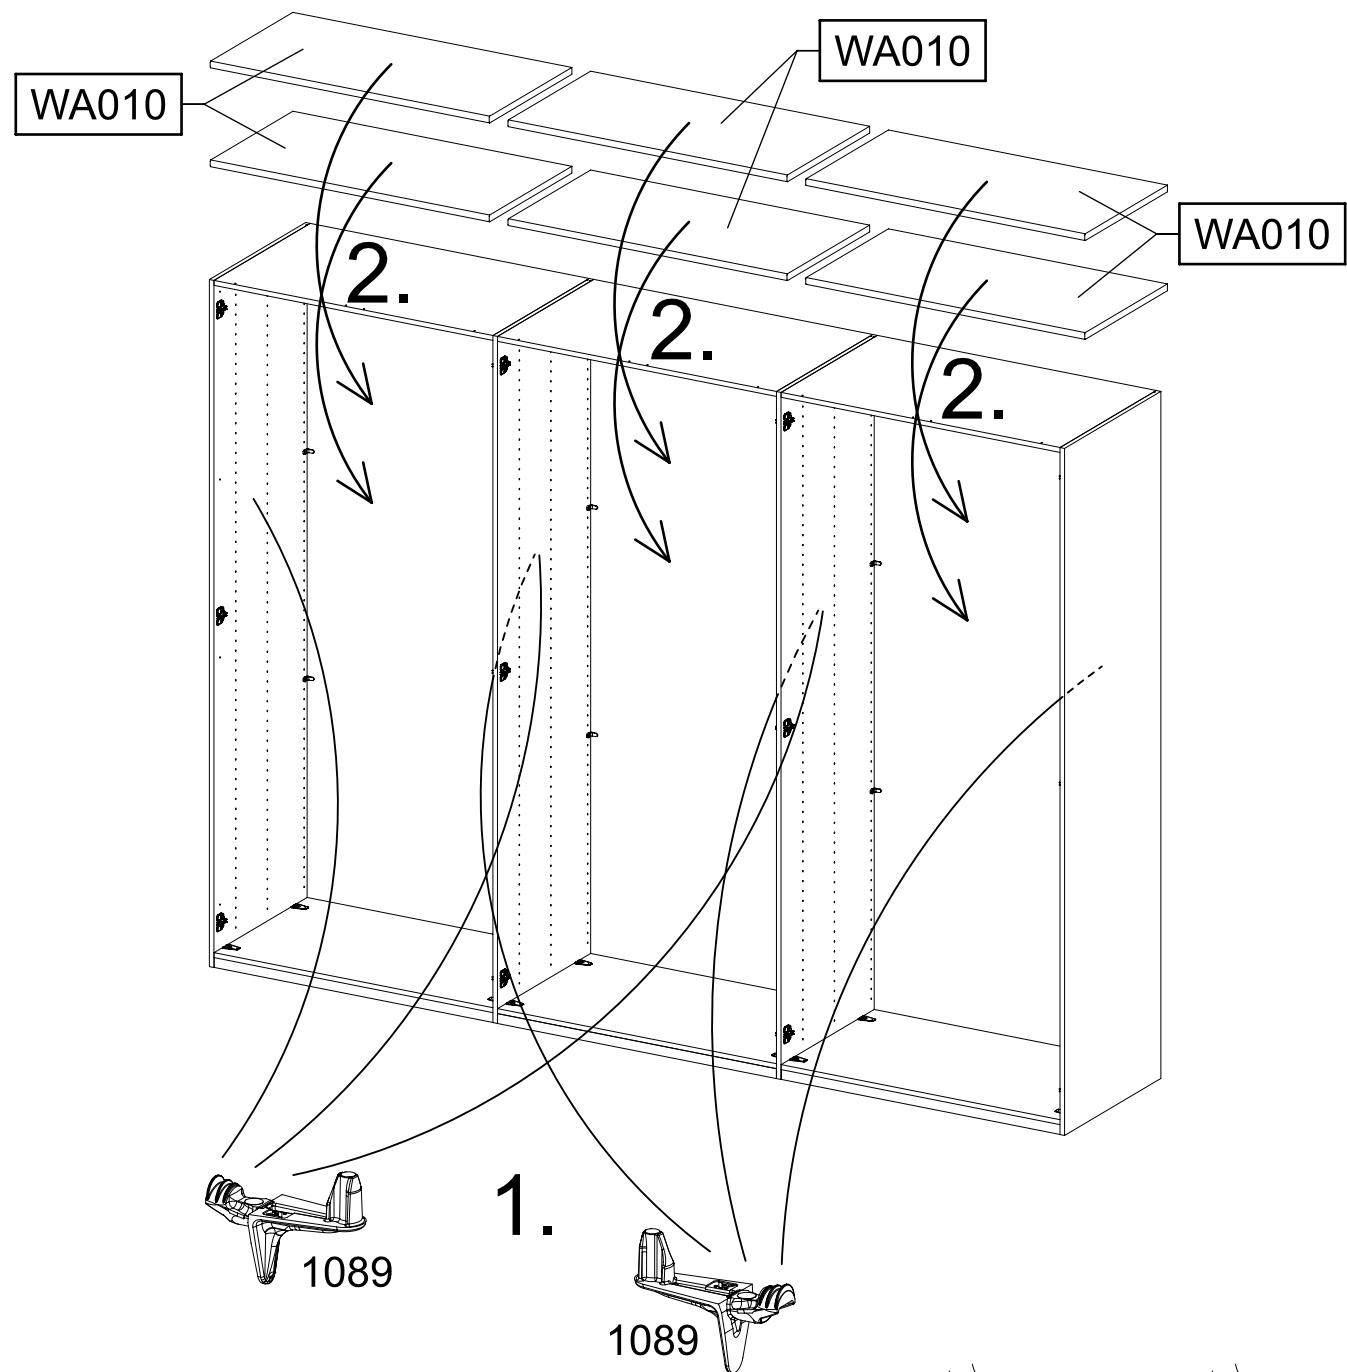

23

6x




29

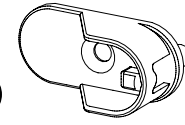

6x




205

3,5x15

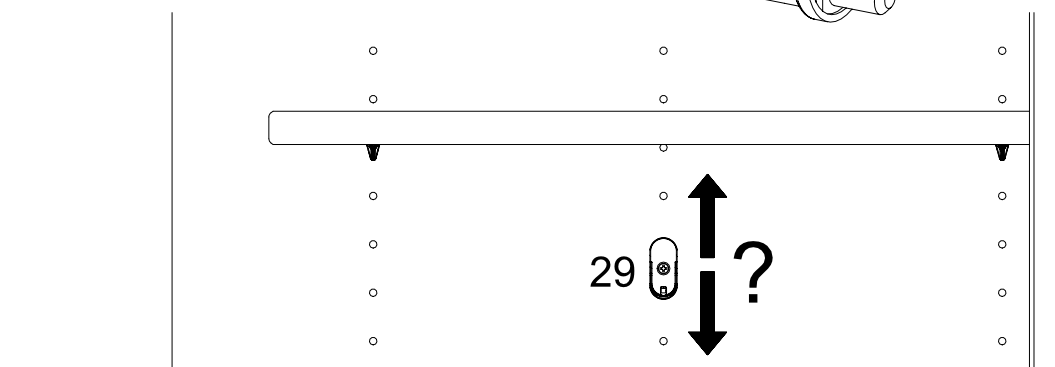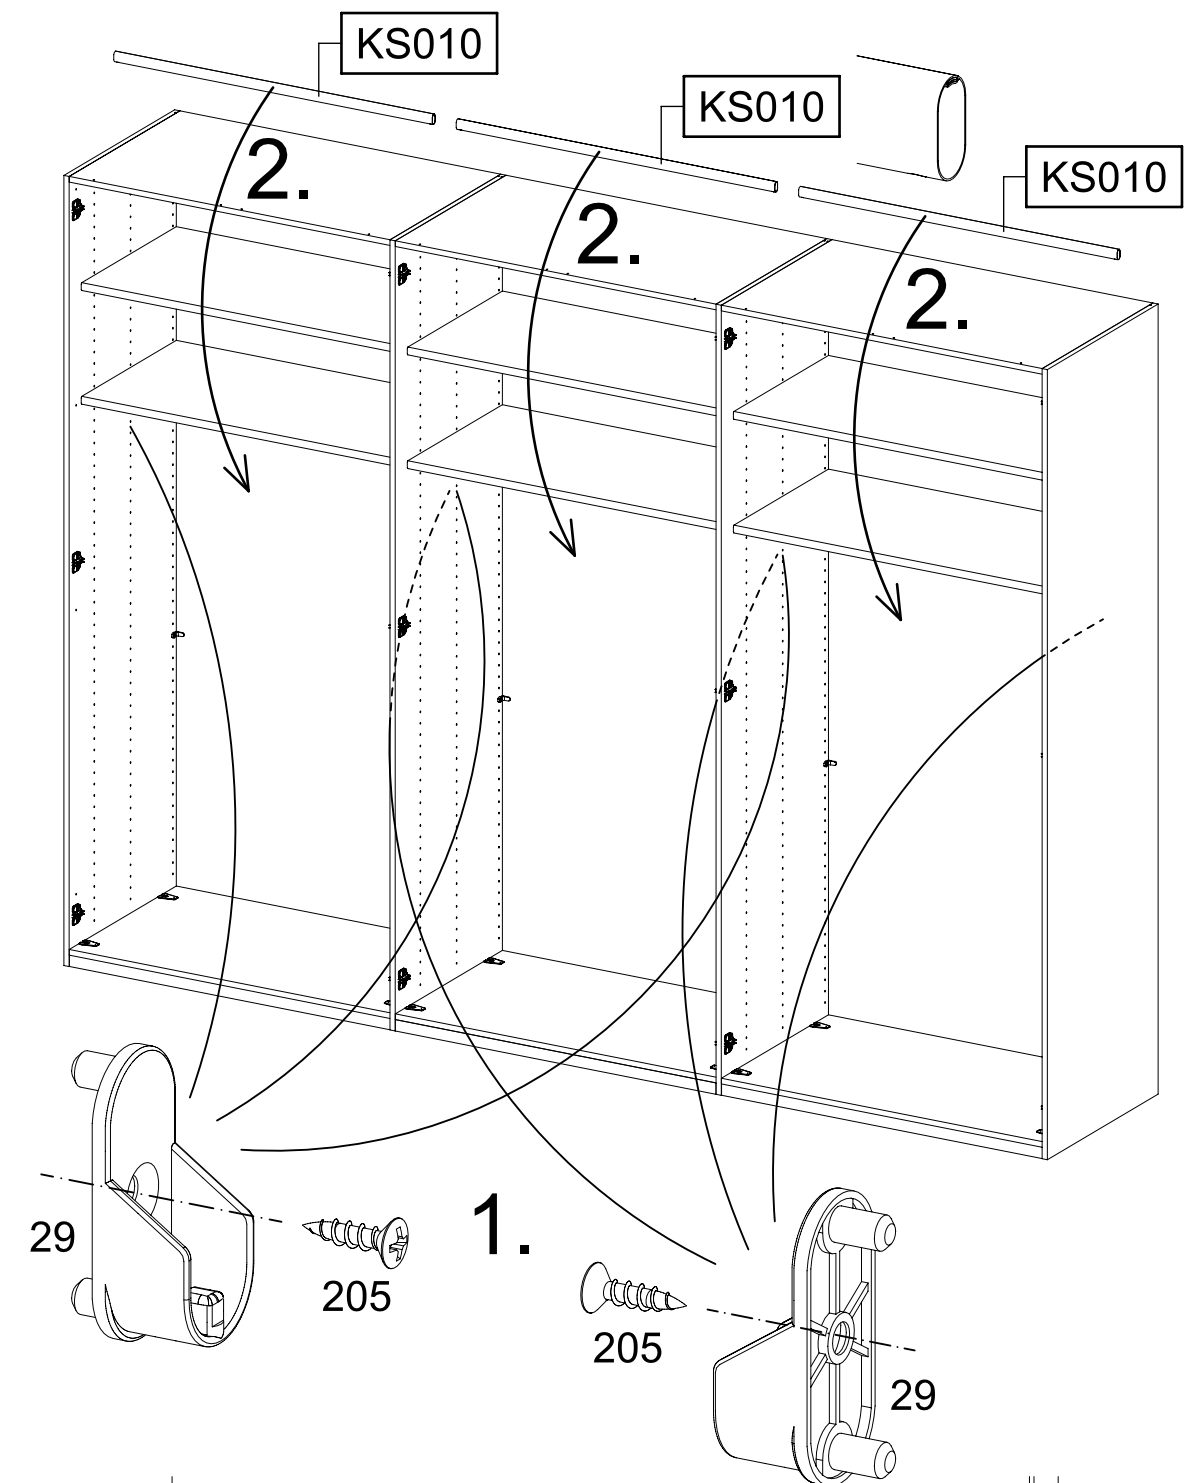


24


18-24x (1292)

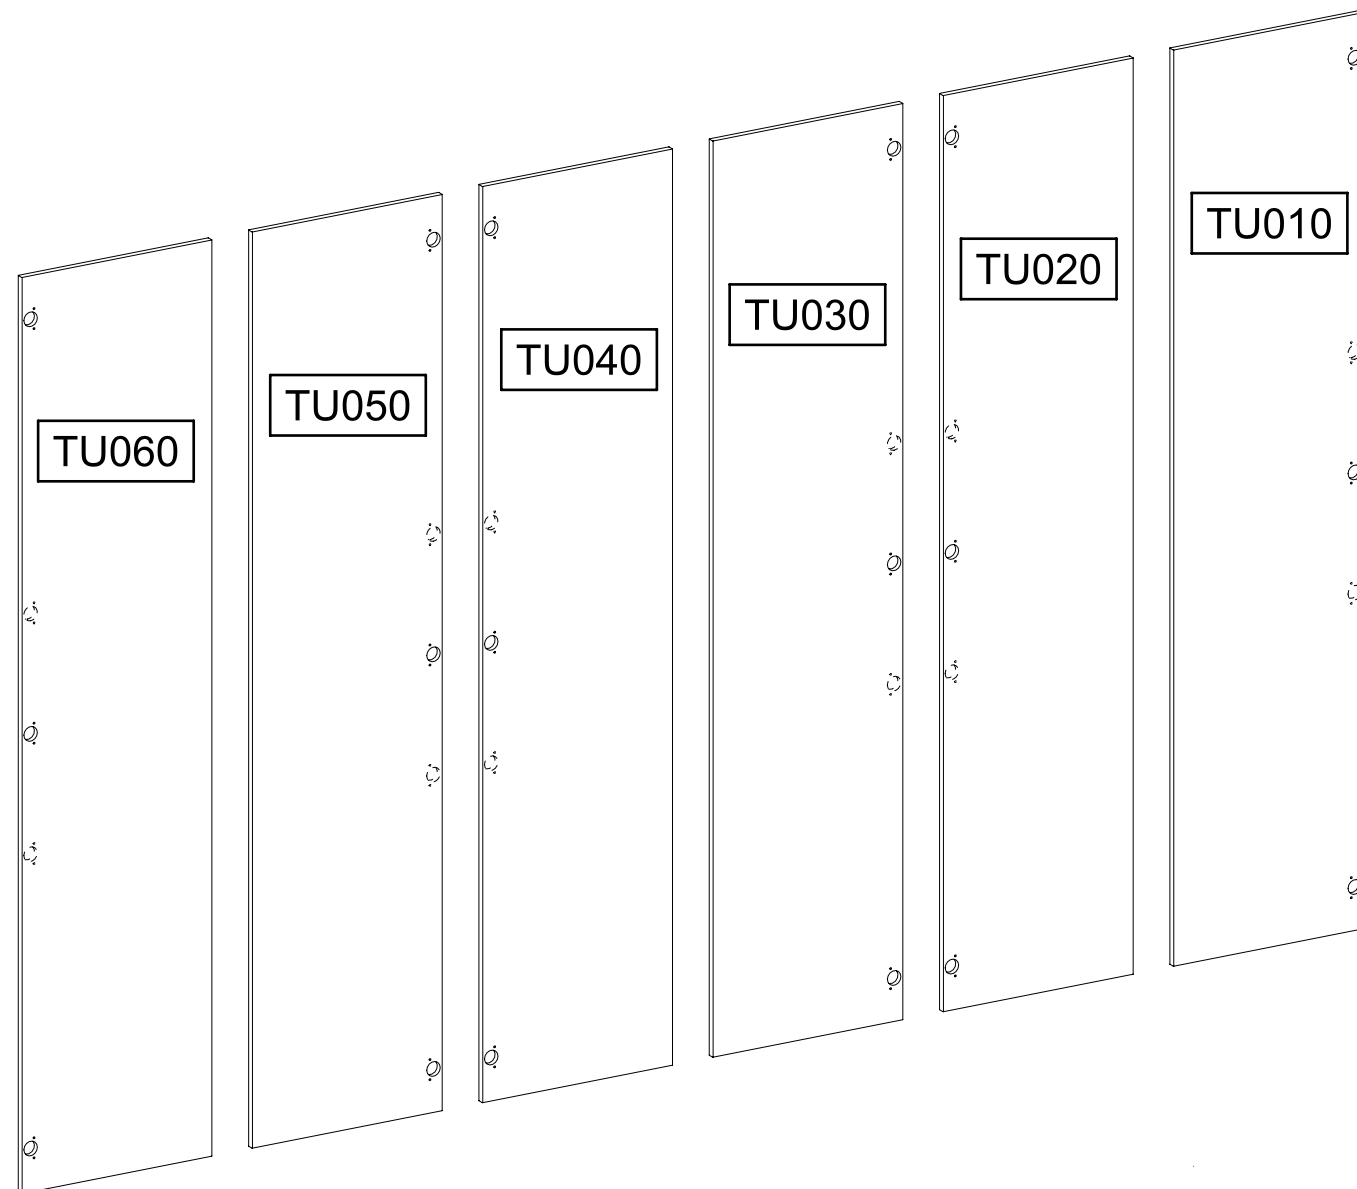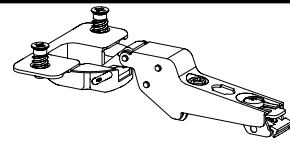


1.

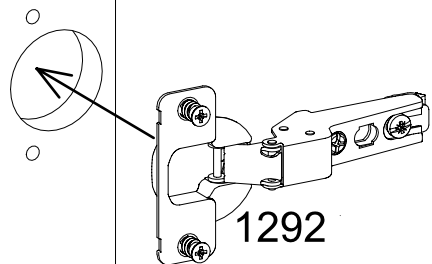


2.

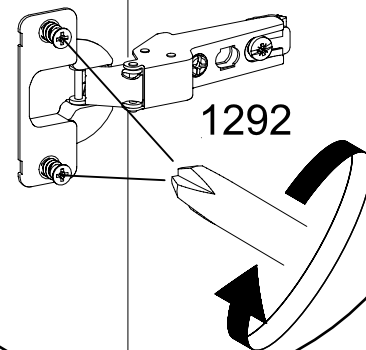


25

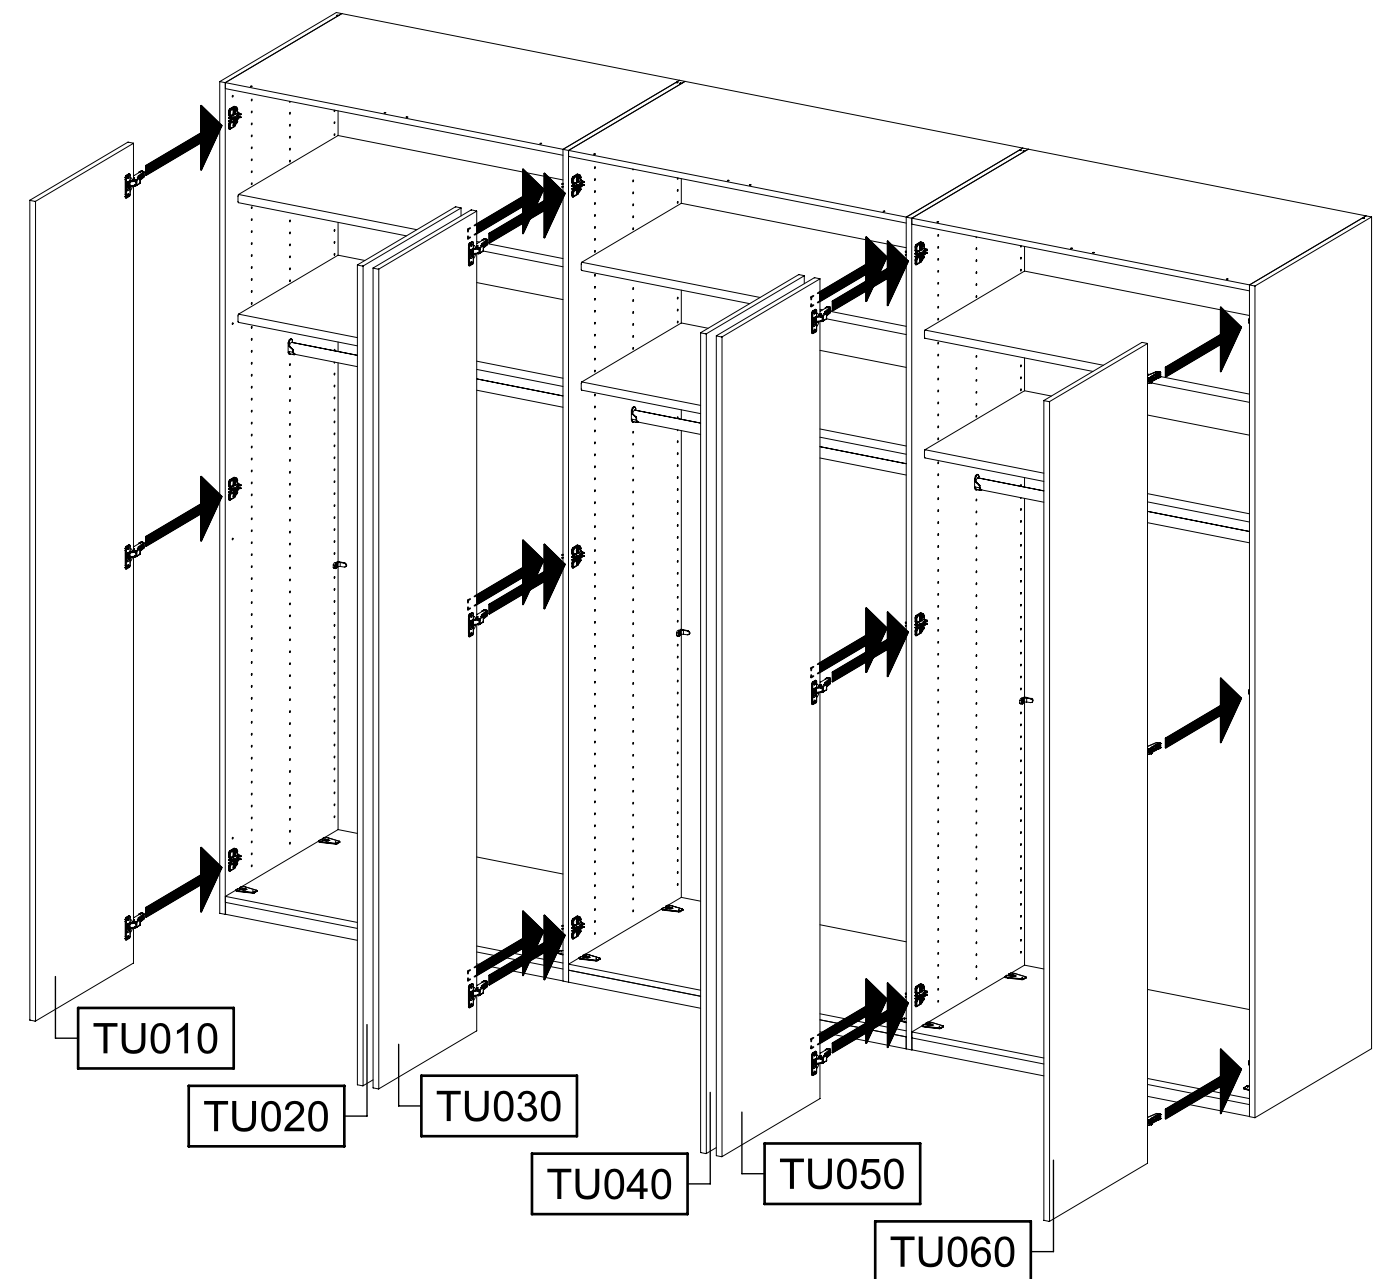

1.

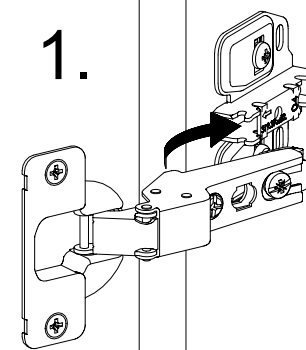

2.



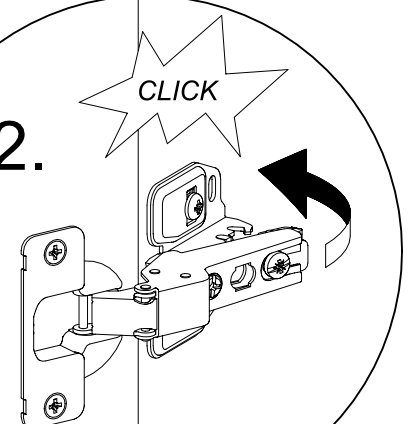


26


0-8x

12








55x16x6,2

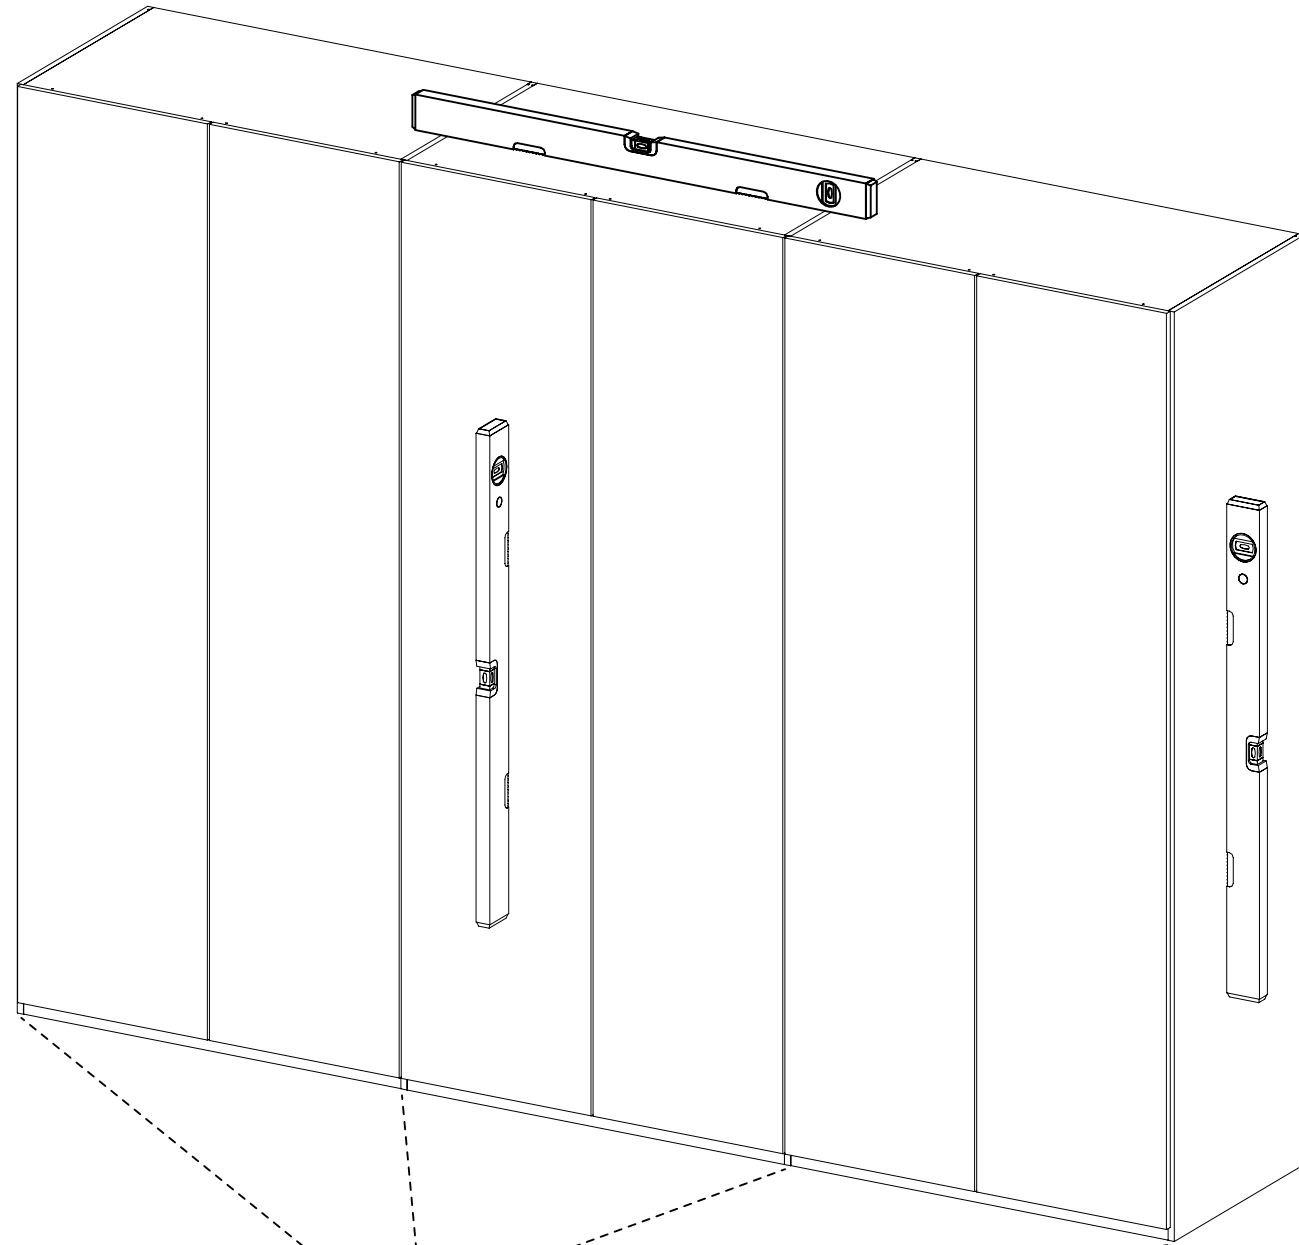

12

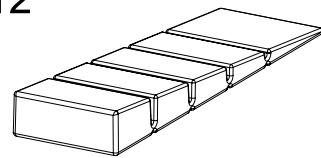

27

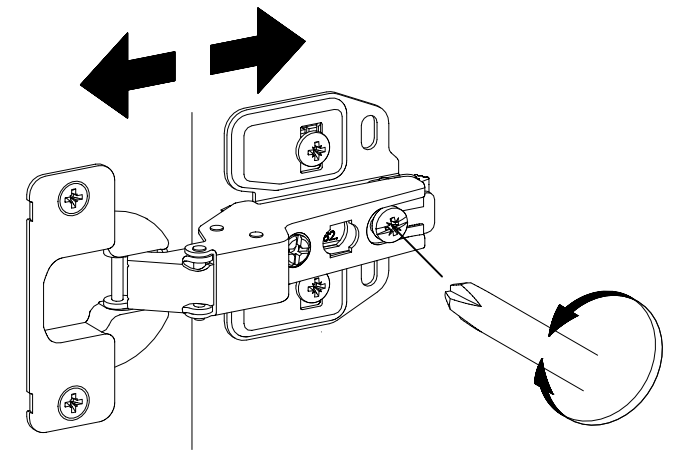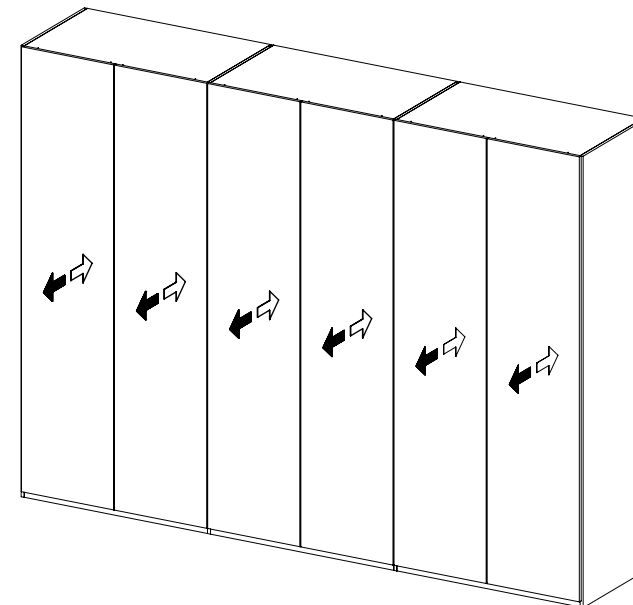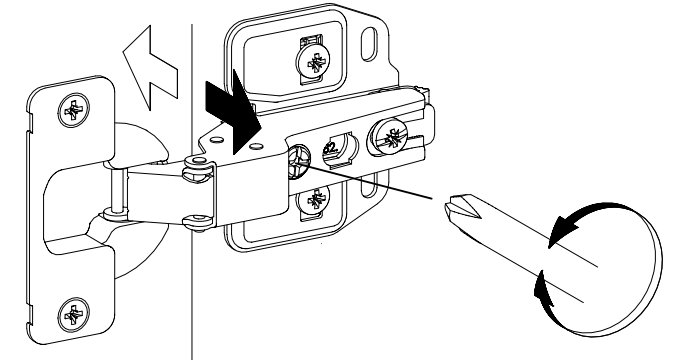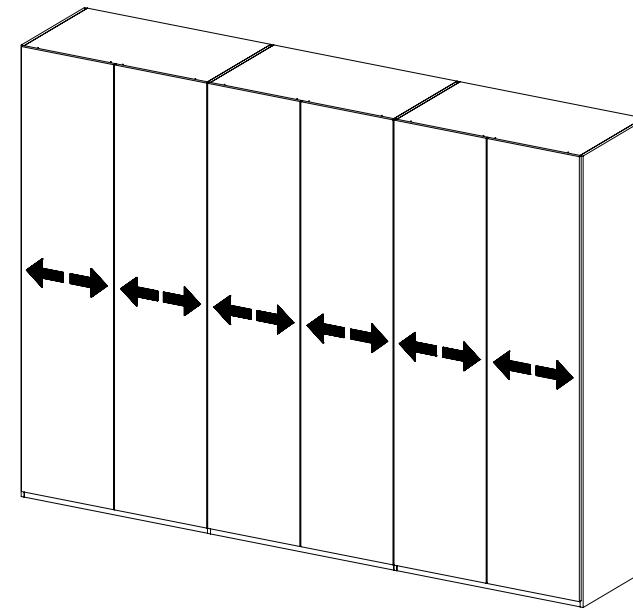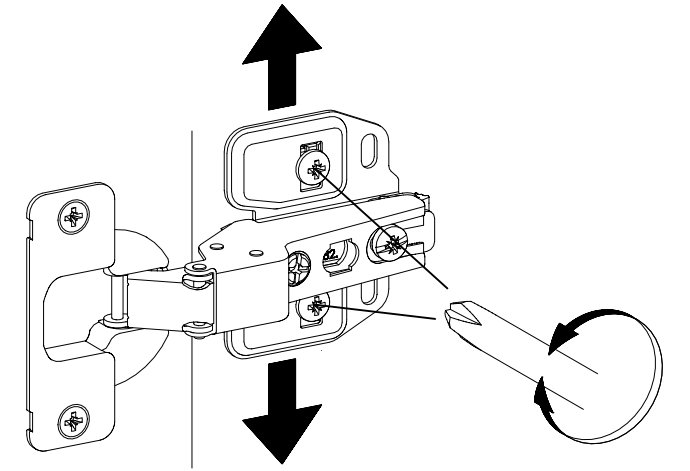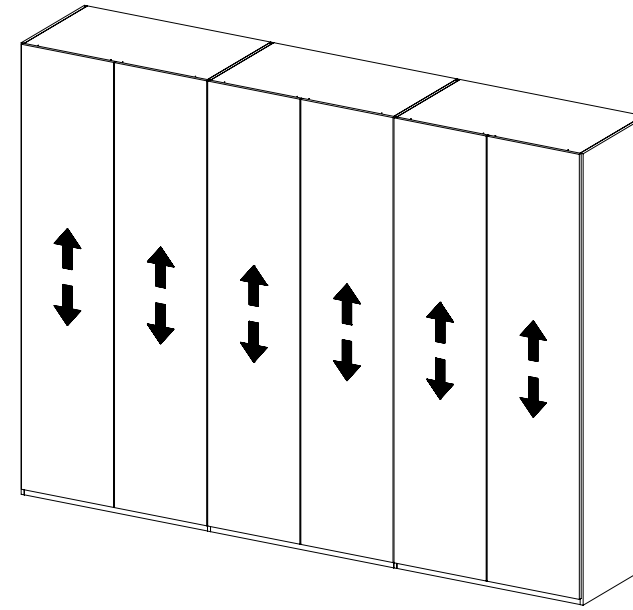


28


36-48x

621

4x13




1291

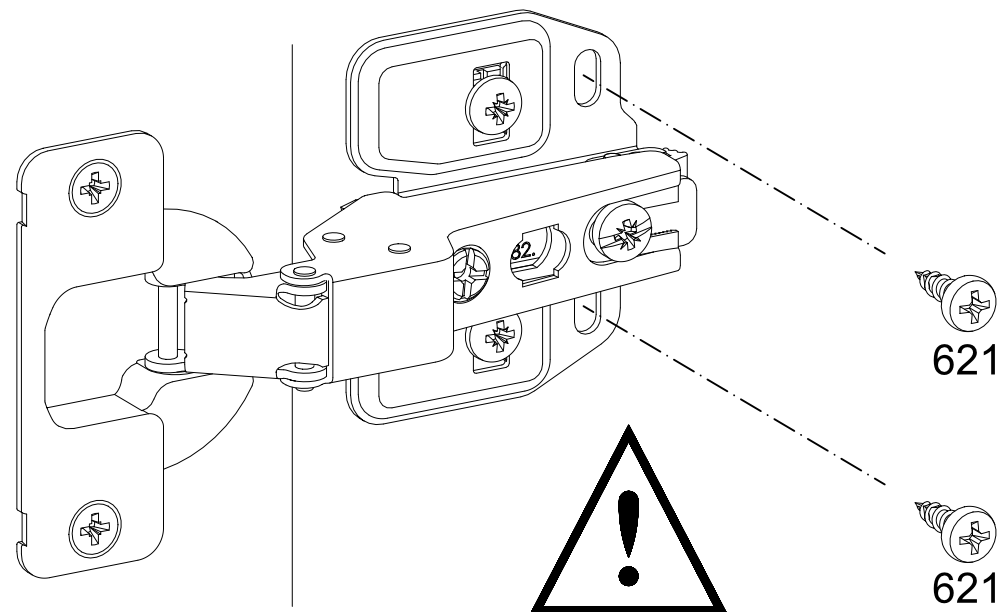

29

2x

68



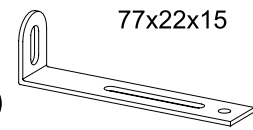





77x22x15

4x

201

4x15

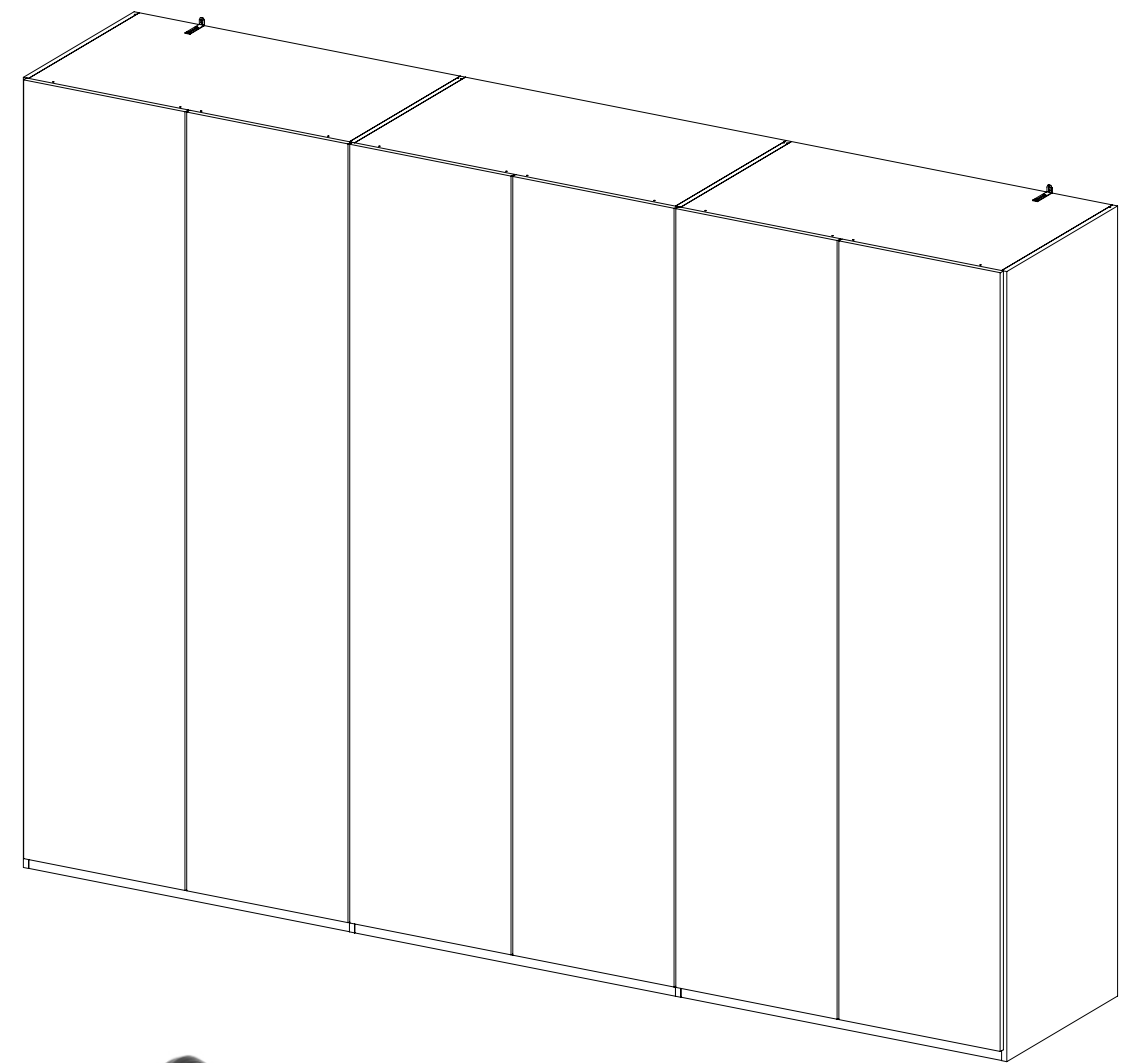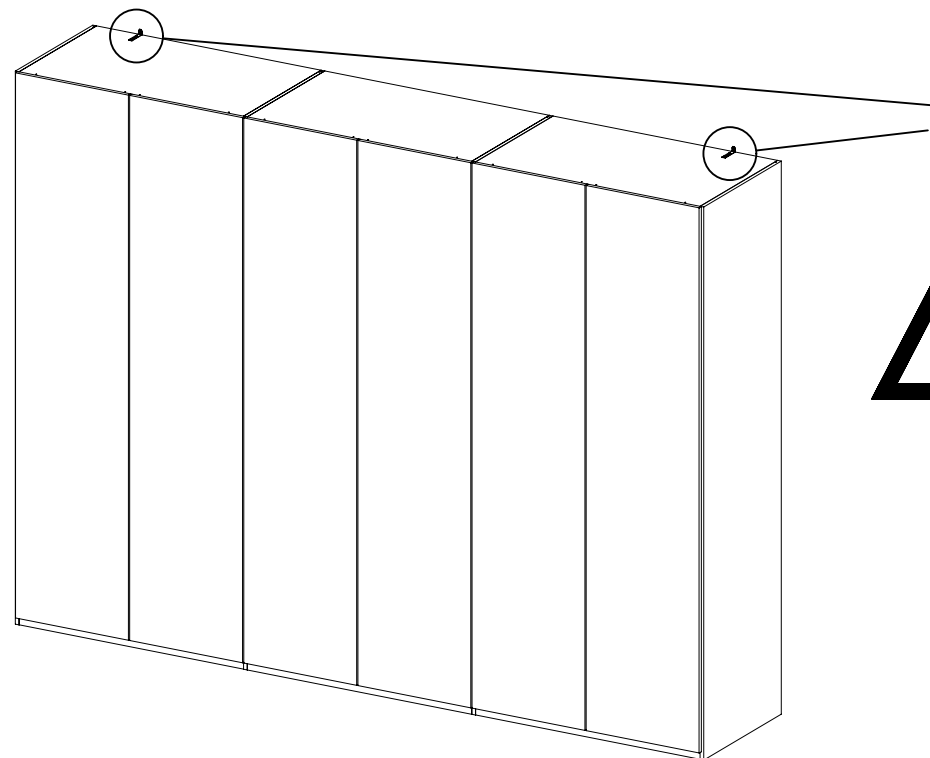


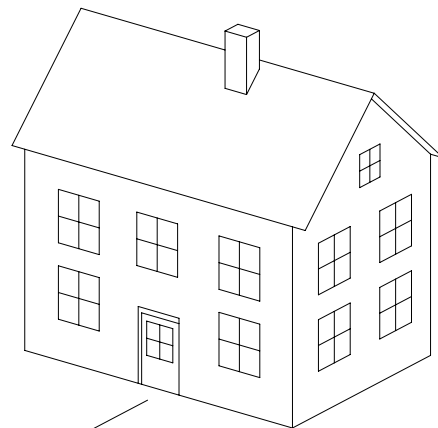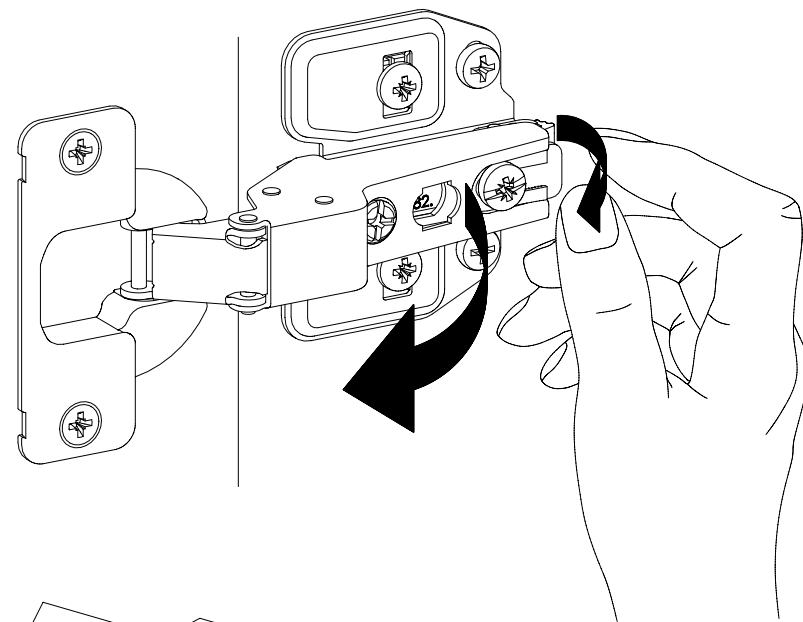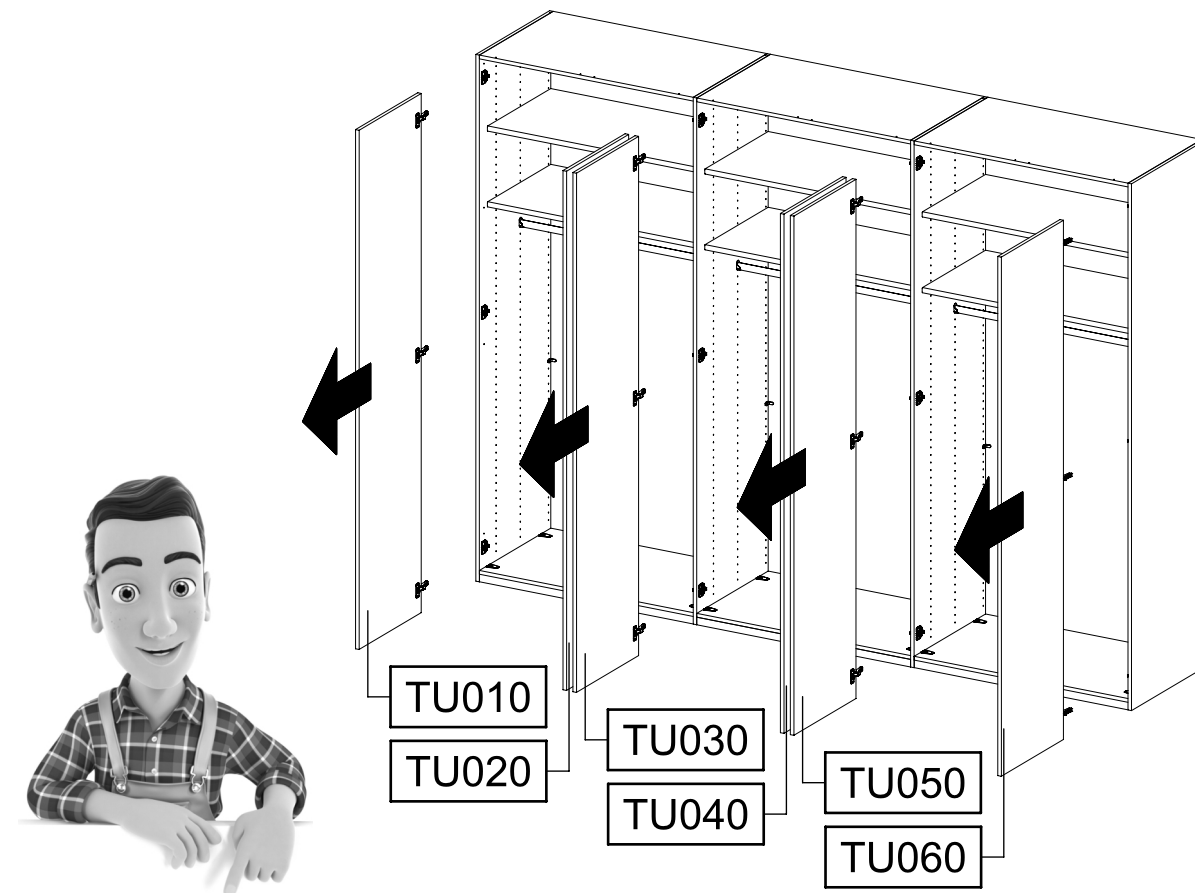



Montageanleitung / Mounting Instruction

Zuerst Türeinstellung vornehmen / Make door adjustments first



1

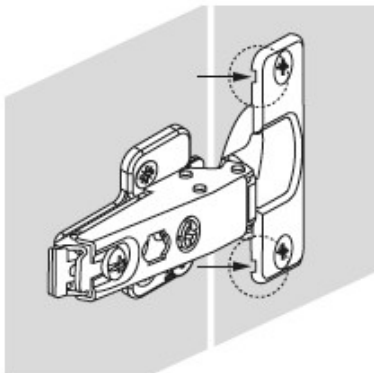



2

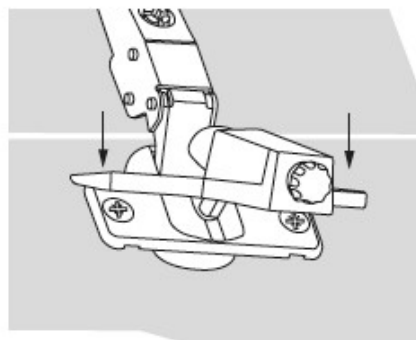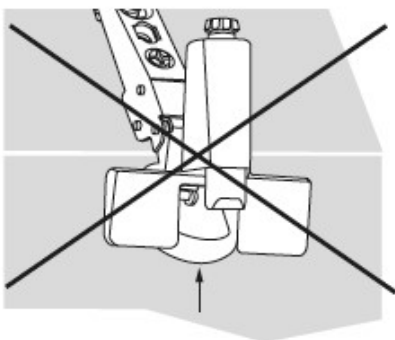


3

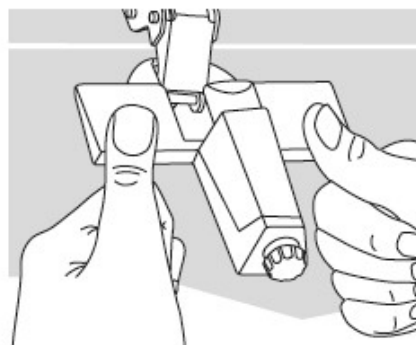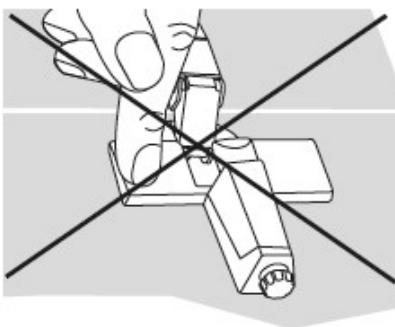

4

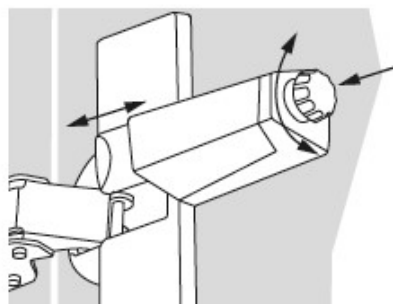
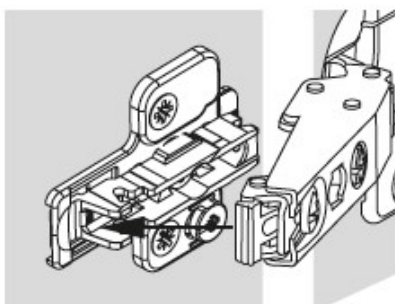


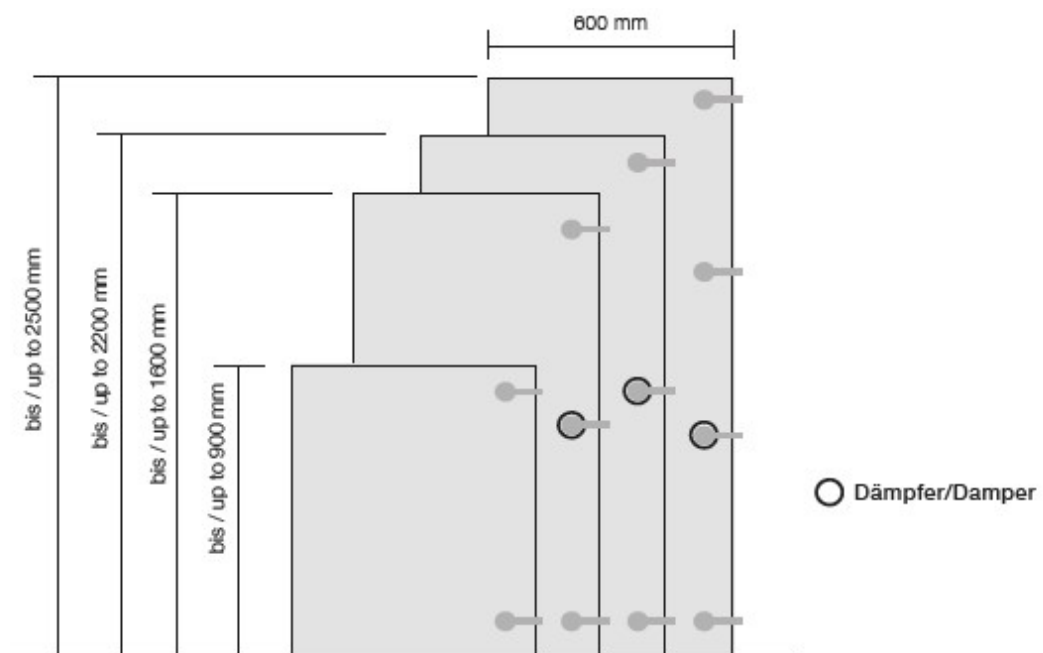

1.

ME190_03


rauch

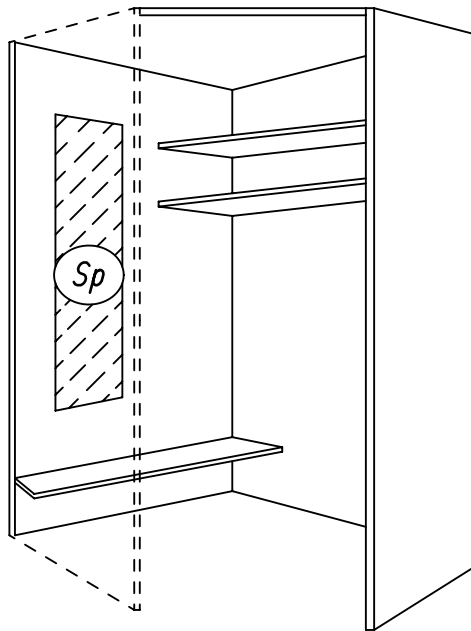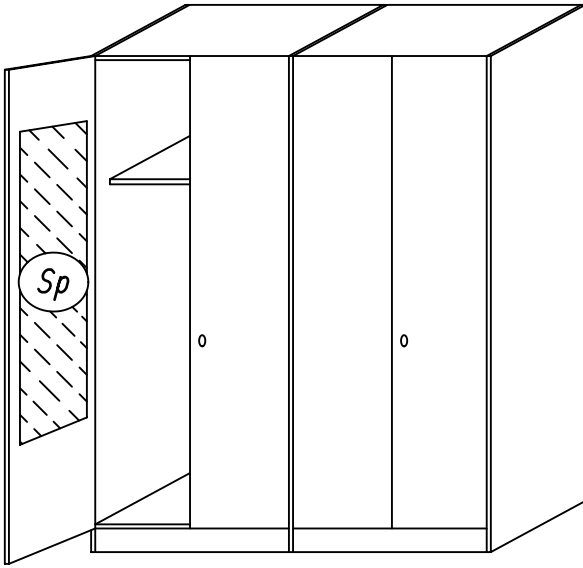


637





492




3x15

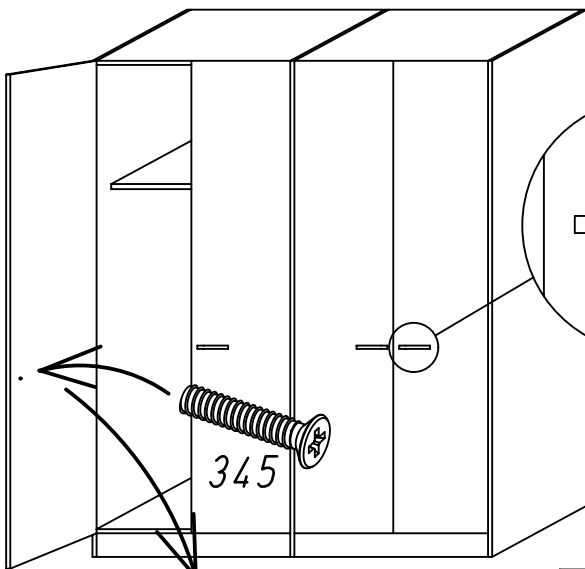


?

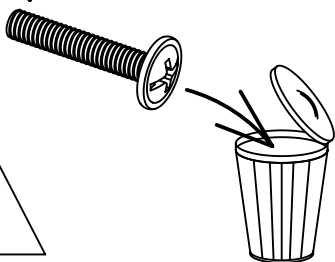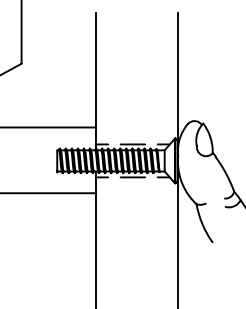


1

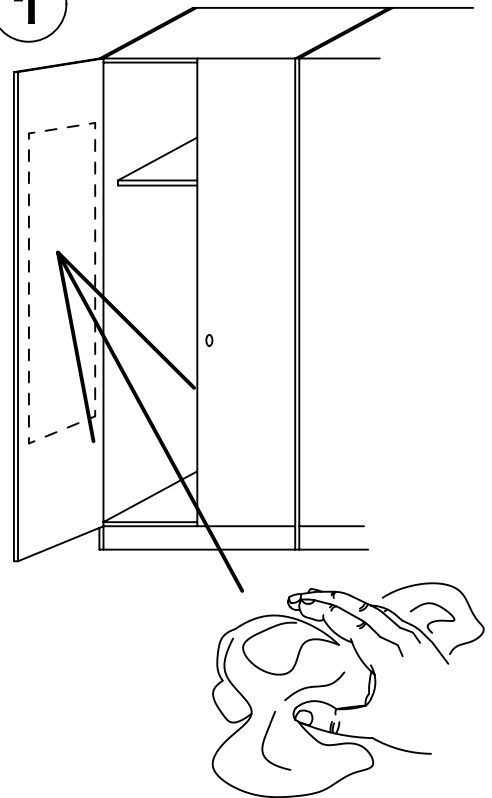


2

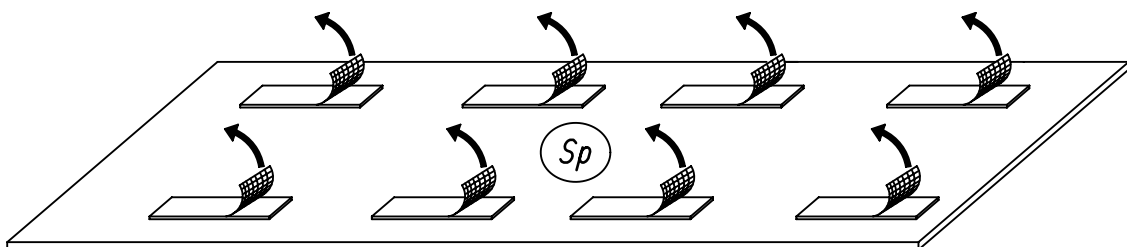

3

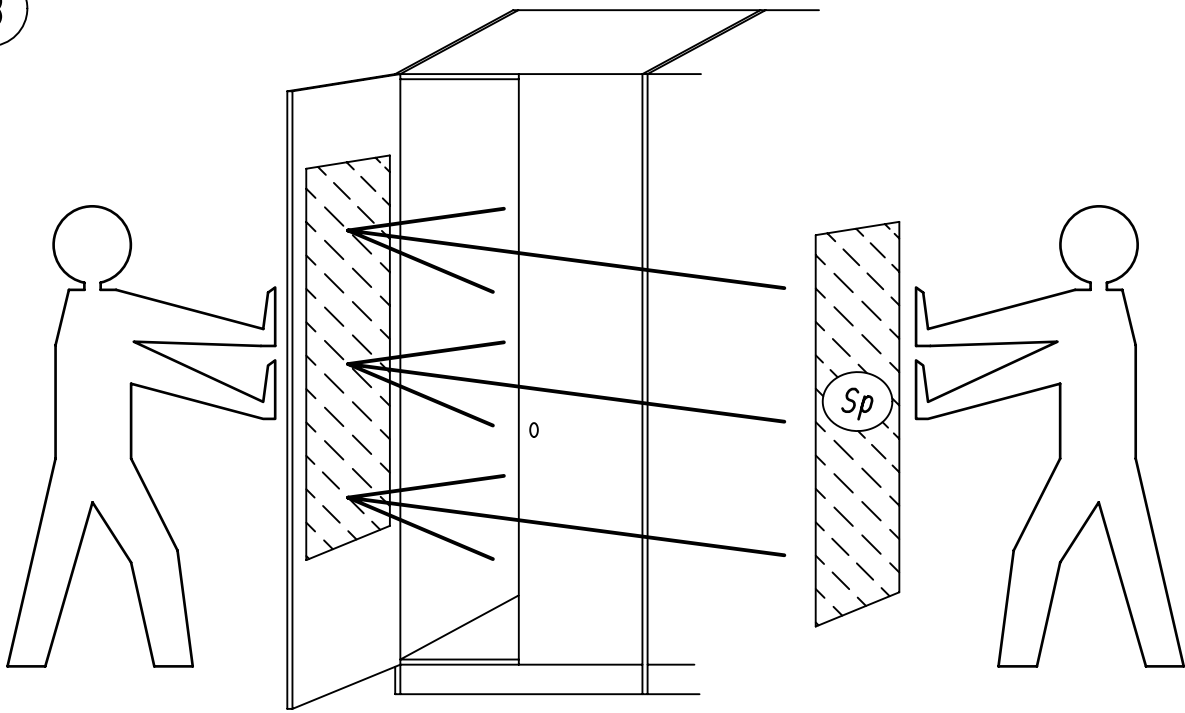



4

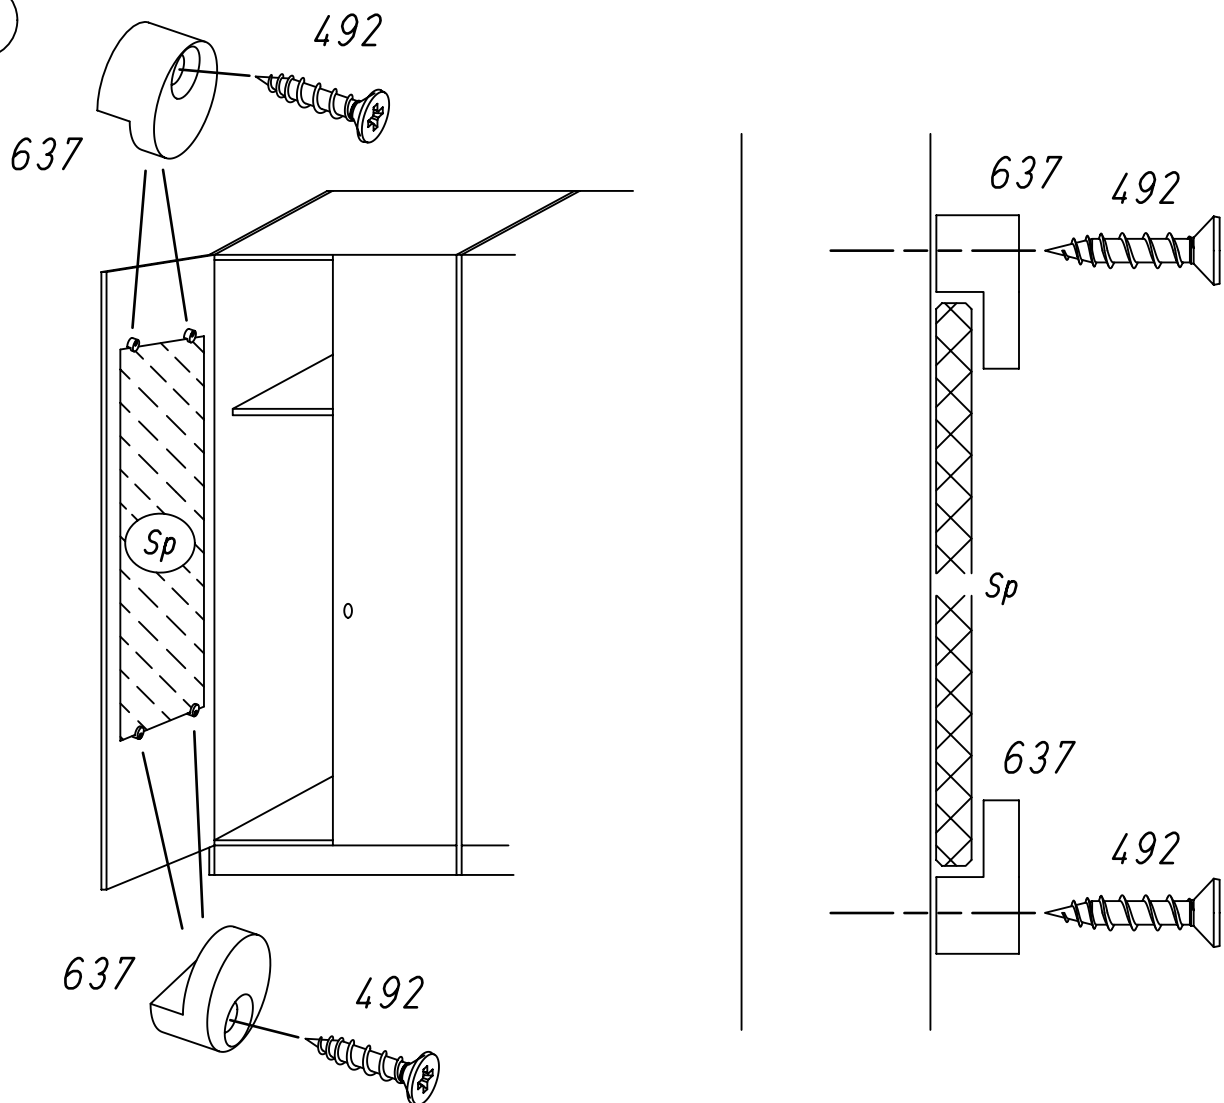

1.



M0861_02

rauch

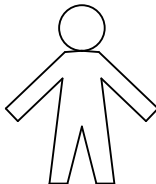




Typ I

Typ II

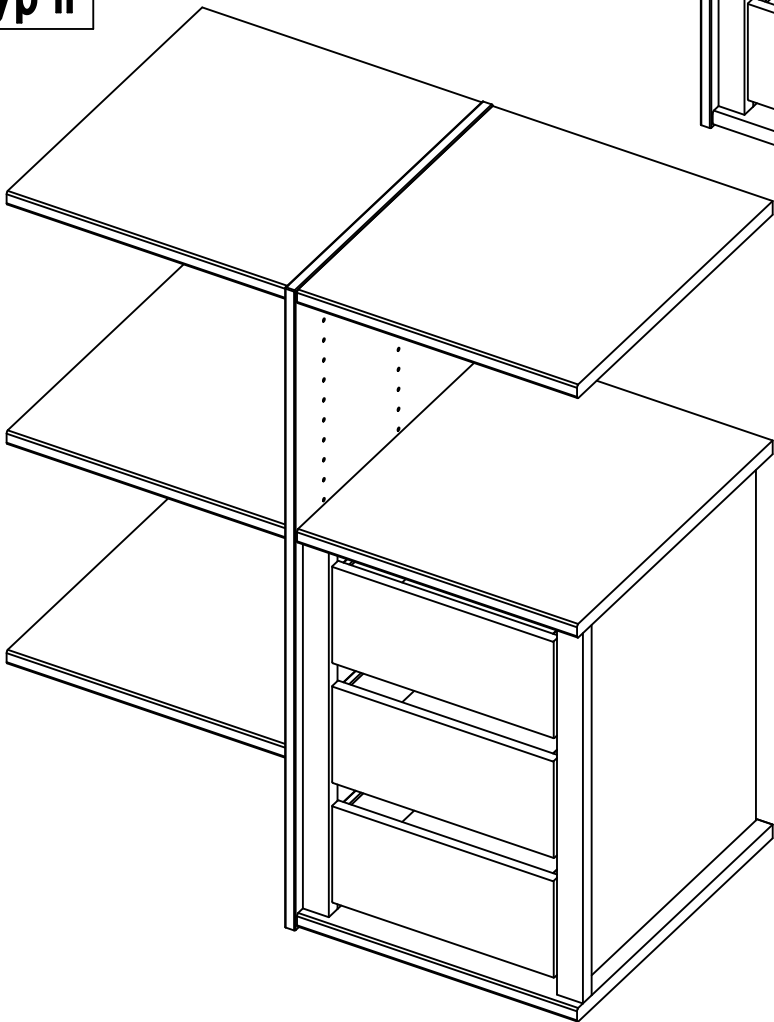
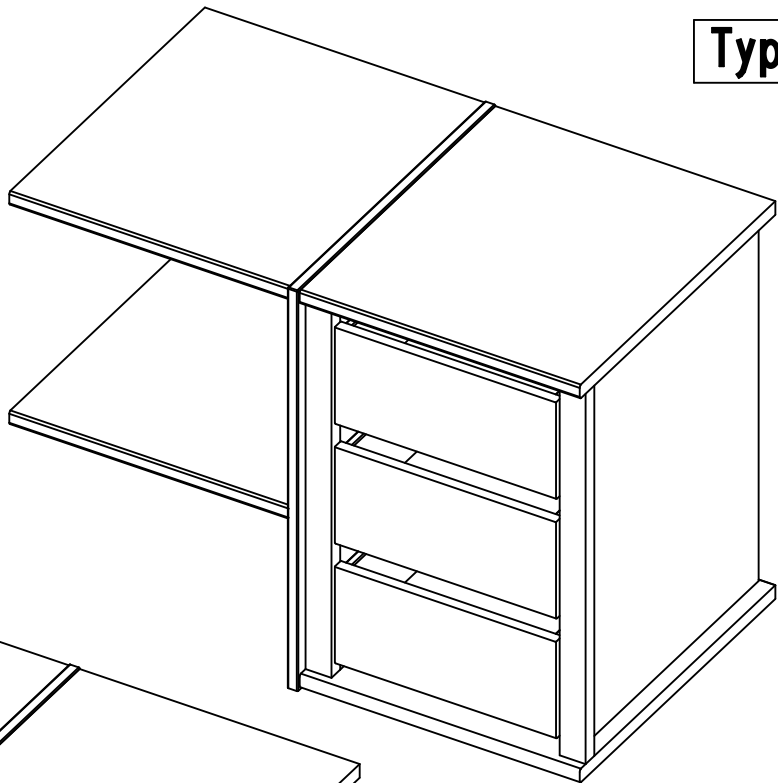


2.

Typ I

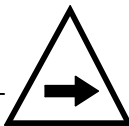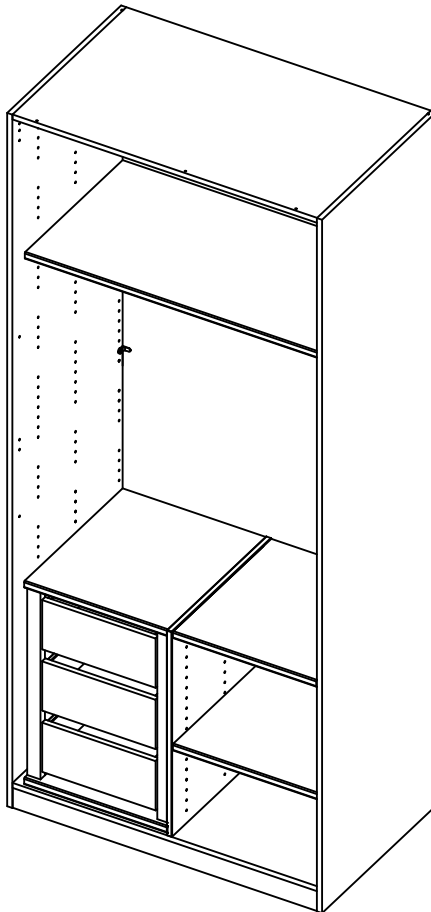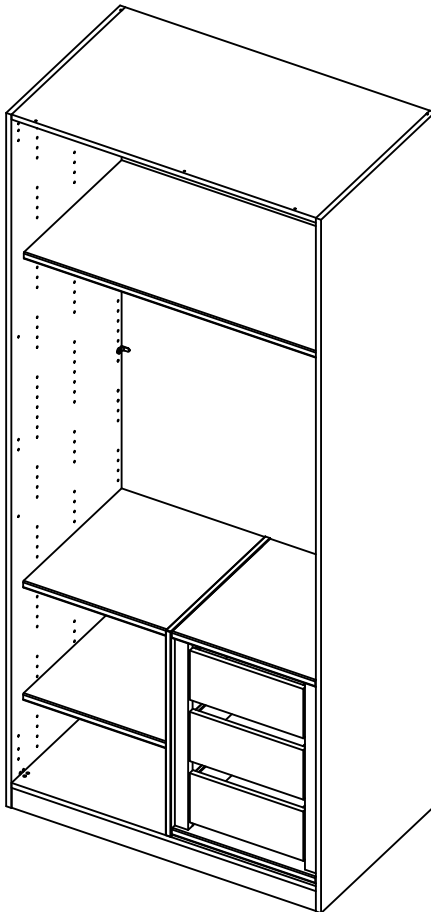


Typ II

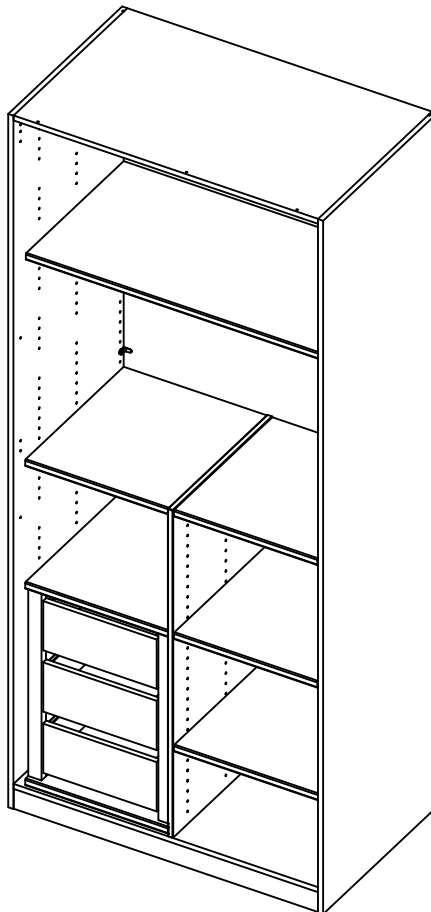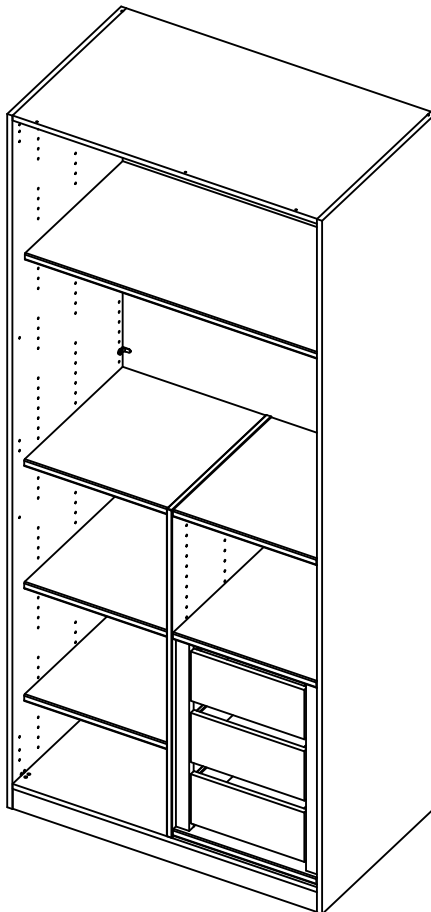


3.

Typ I

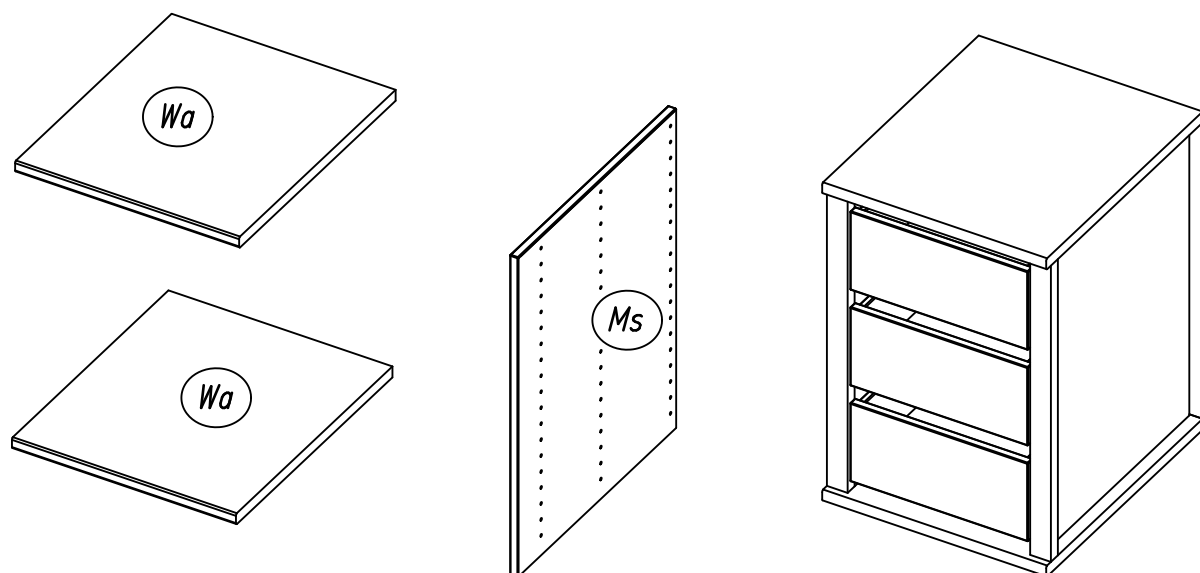

Typ II

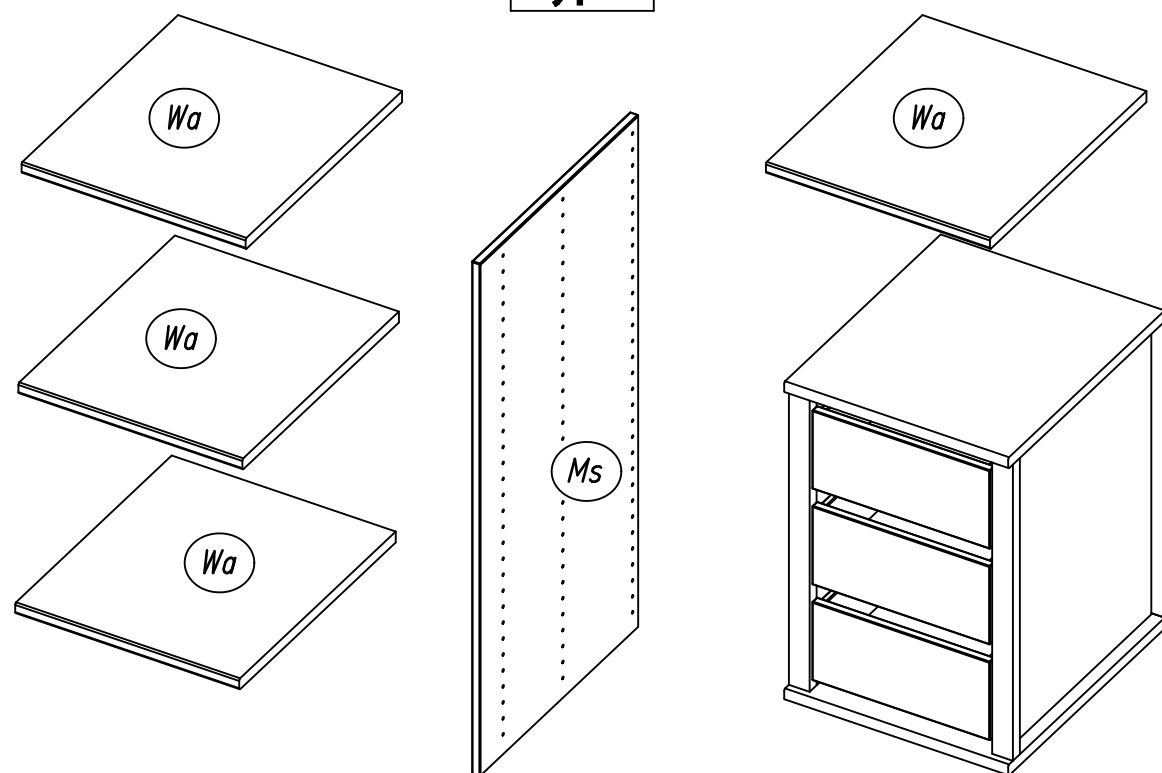


M0861

4.



1089

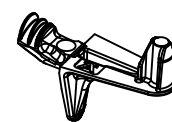


Kn



1


Kn



Typ I

Typ II



1.

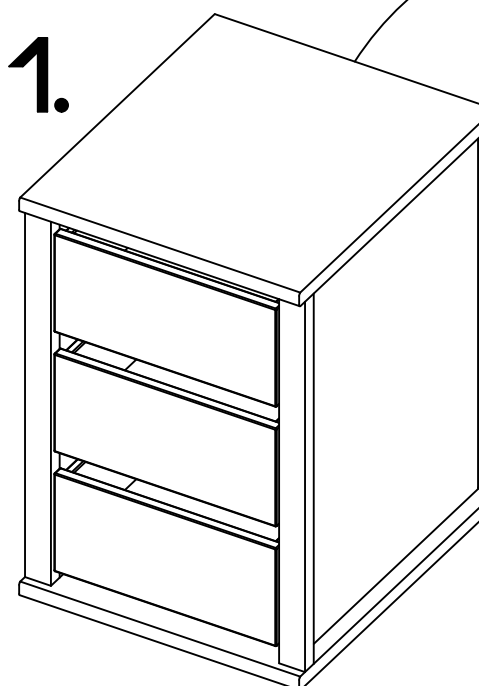

2.

4x


Kn

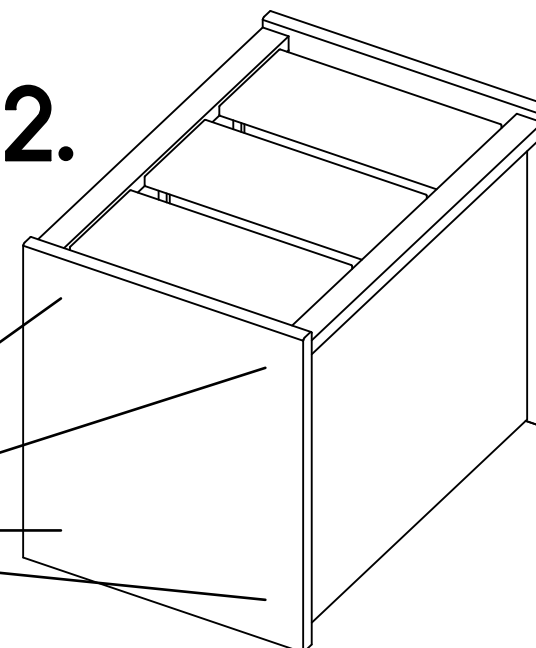

M0861

5.

2


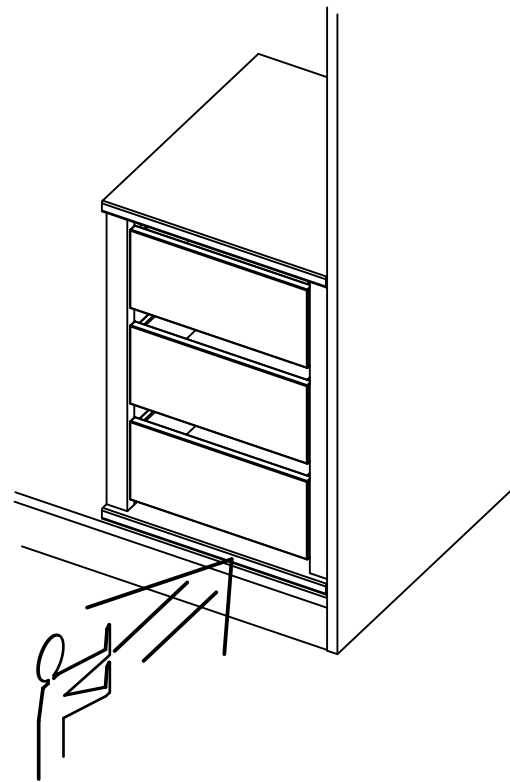


Typ I

Typ II

3

1089

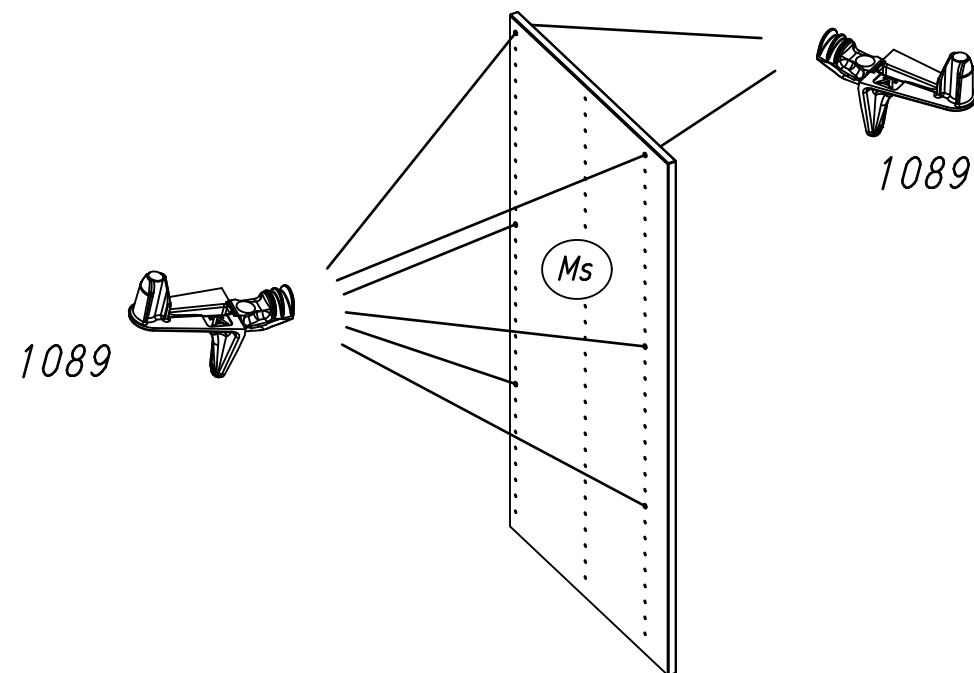


Typ I

Typ II

M0861

6.

4

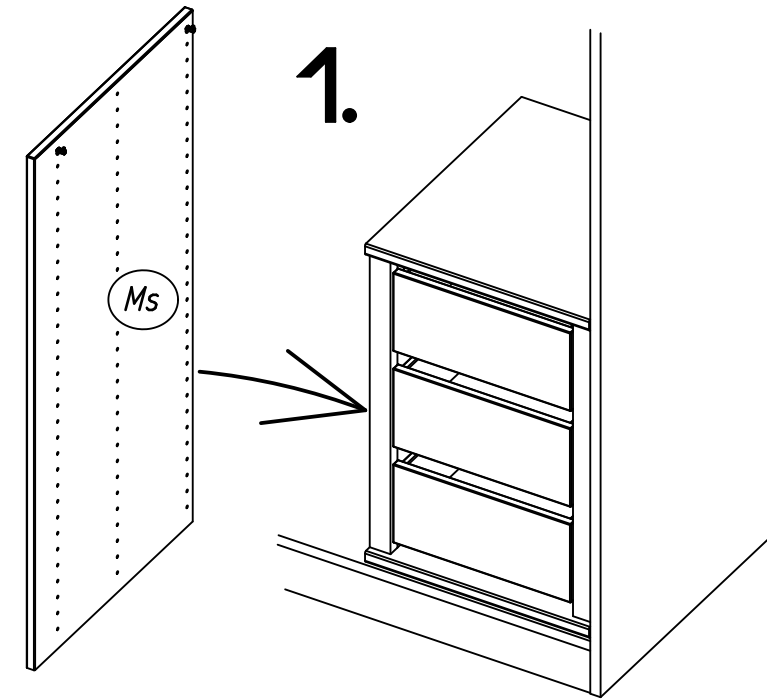


1.

Typ I

Typ II

2.

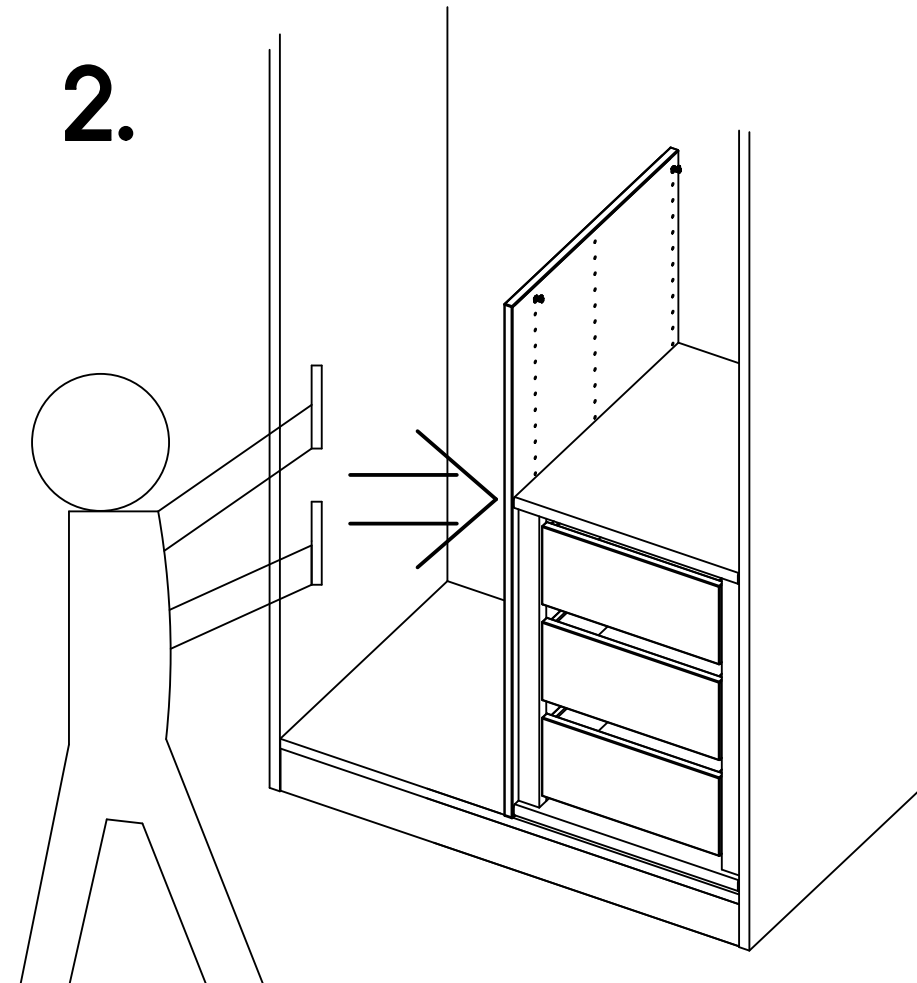


M0861

7.


5

1089

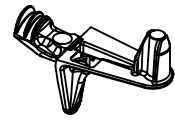

Typ I

Typ II

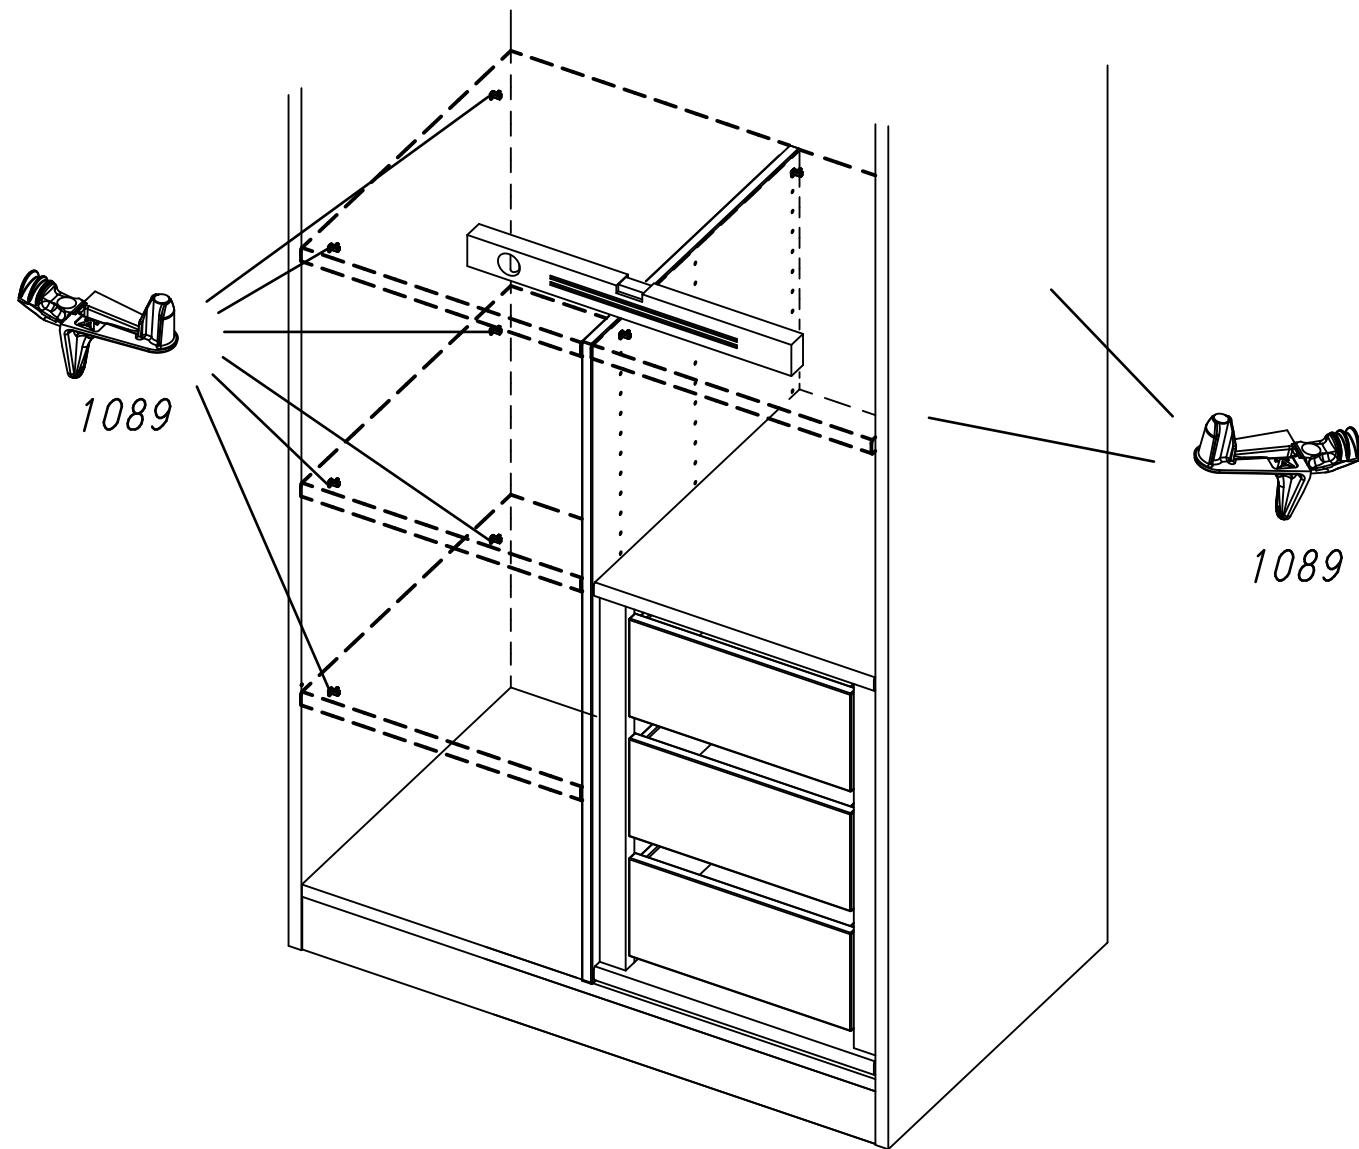


M0861

8.

6

Typ I



Typ II

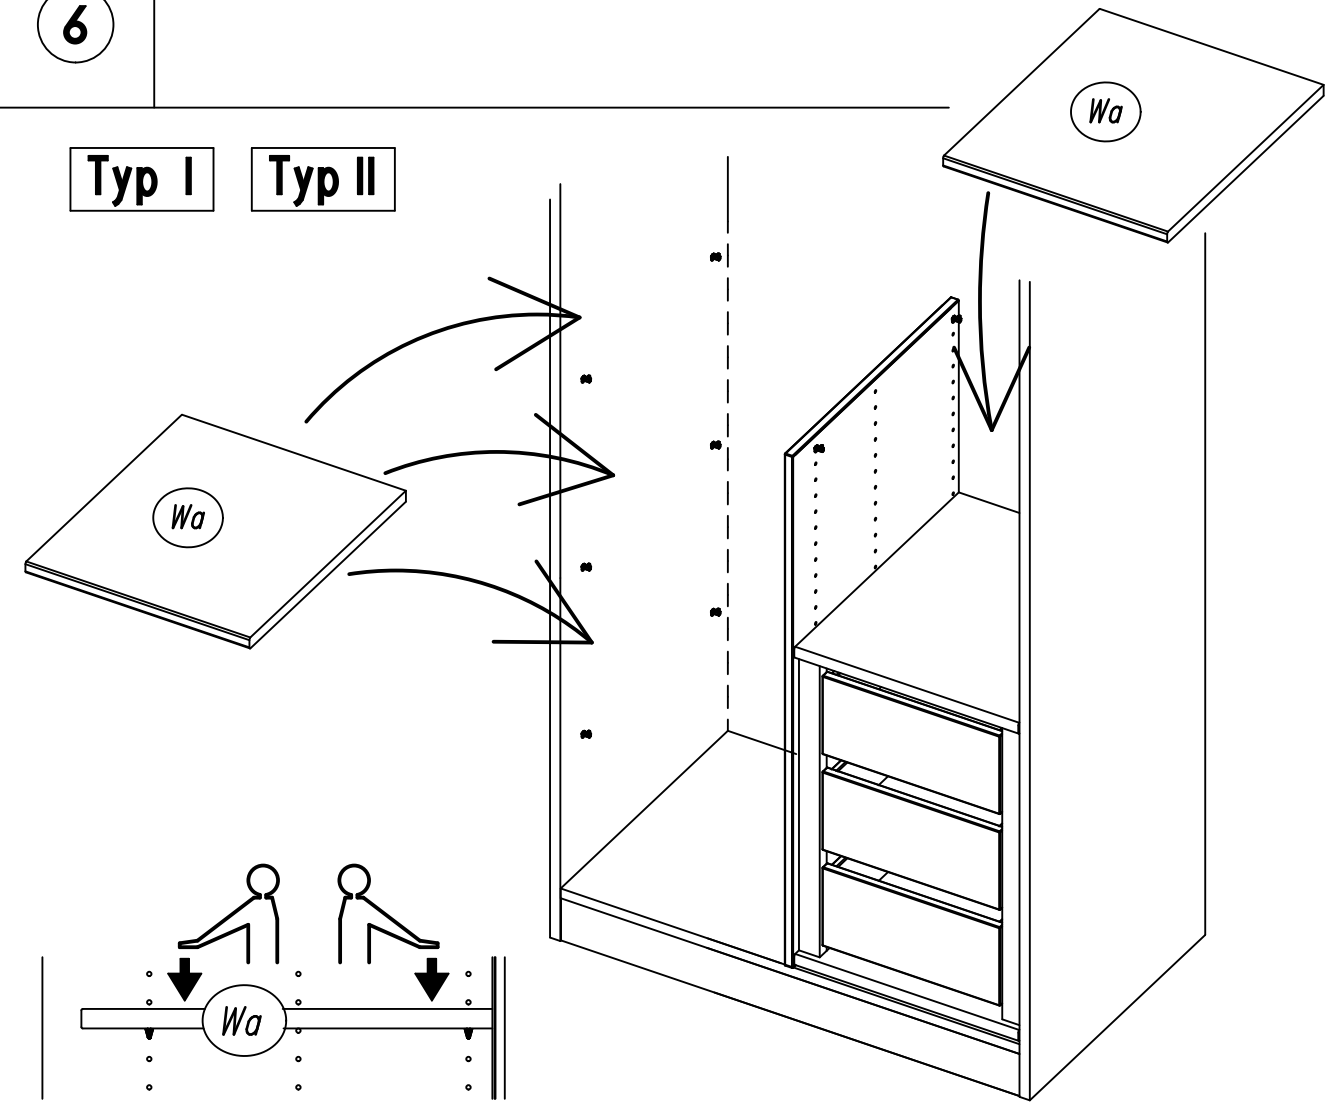

7

Typ I





Typ II

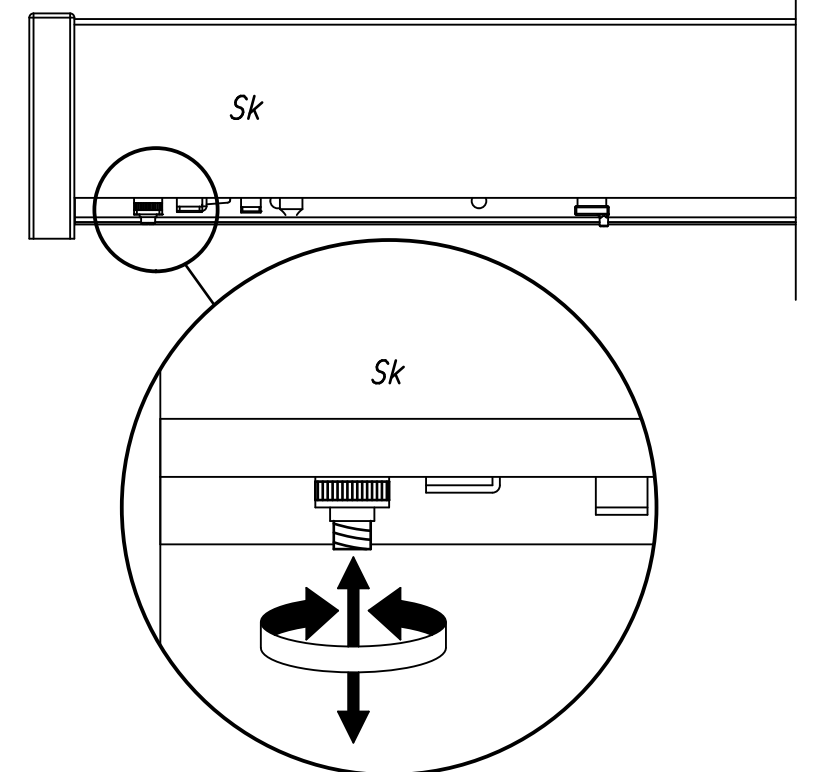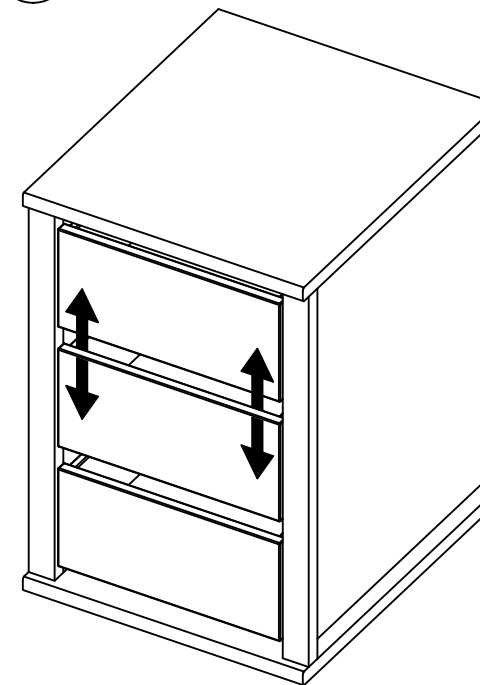



M0861

M0323_04


1089

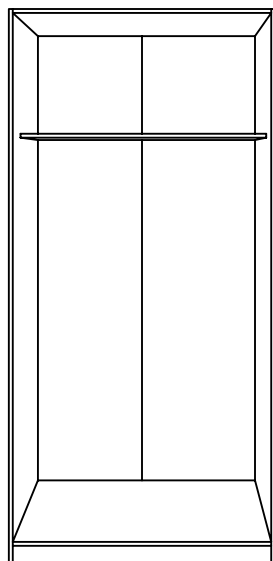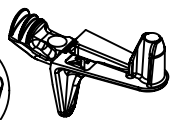



1

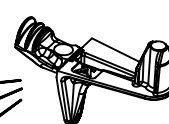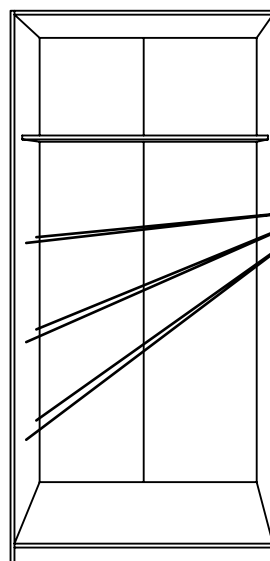

1089



2

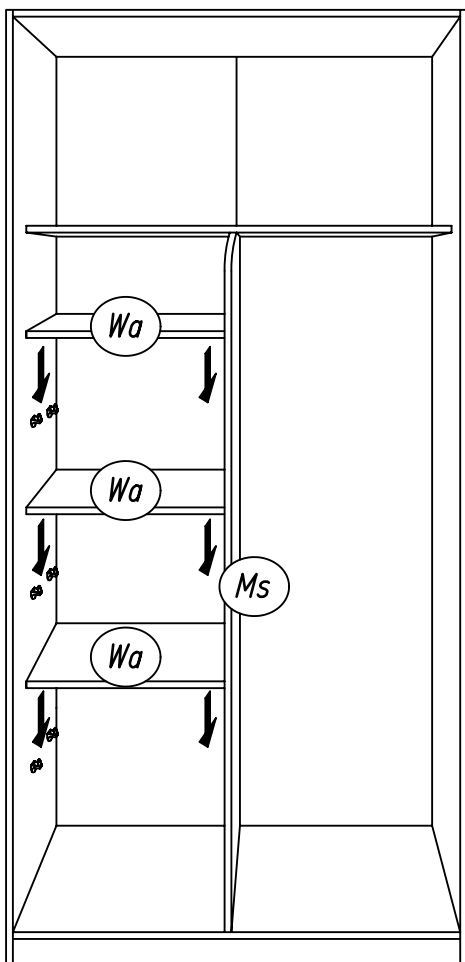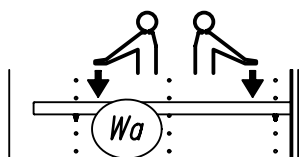

3

