


VENTURE DESIGN

HOME & INTERIOR

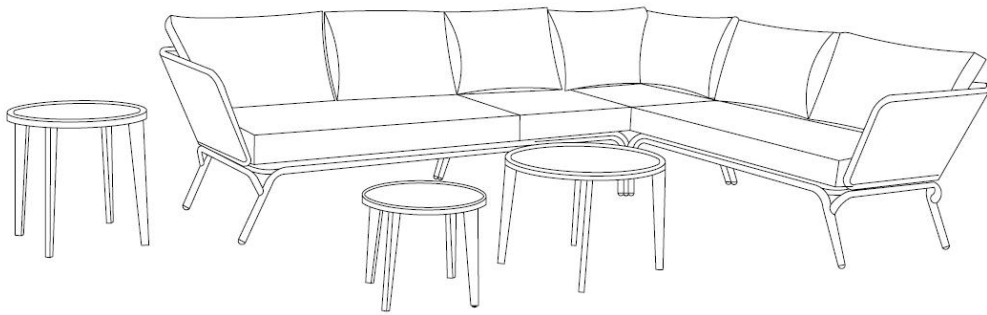

9051-319


Roxo Corner sofa - Black Alu/Black Wicker
/ Grey Cushion

Monteringsanvisning - Assemblyinstruction - Einbauzeichnung



CAUTION


- A. Check the package having all items shown in the parts list
B. Read the instruction before assembling

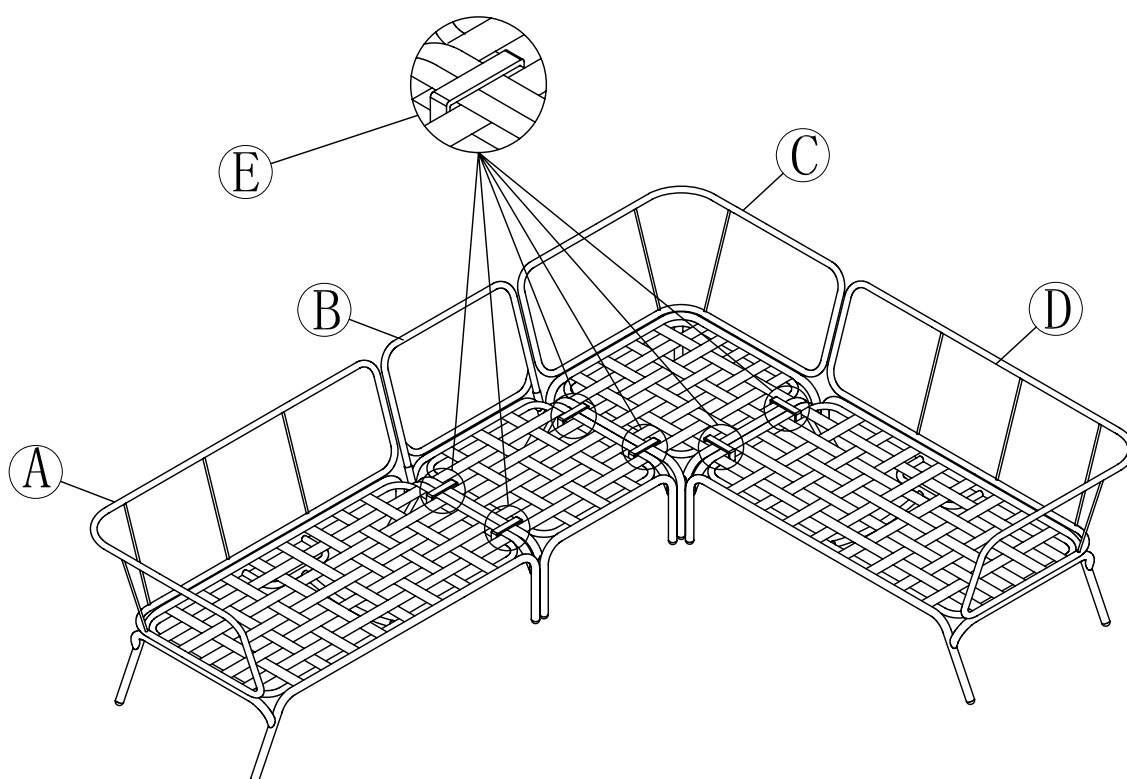


A  1pc	B  1pc	C  1pc	D  1pc	E  6pcs
---	---	---	--	--

A	B	C	D	E	F	G
						
1PC	1PC	1PC	1PC	5PCS	5PCS	5PCS


STEP 1:

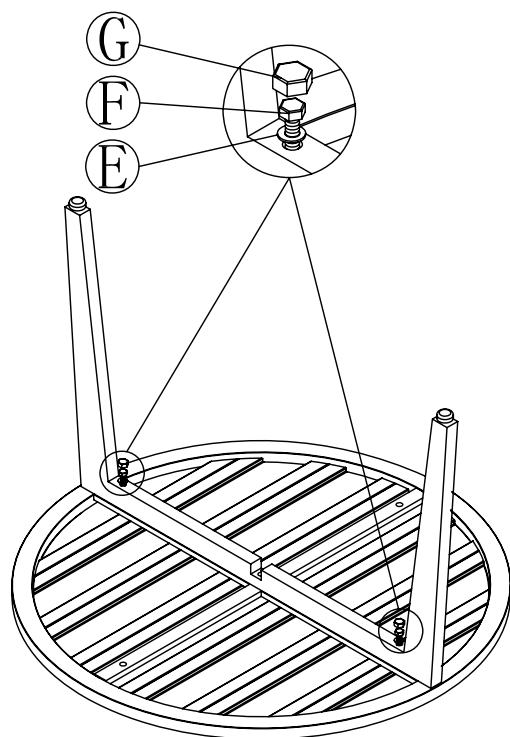

STEP 2:

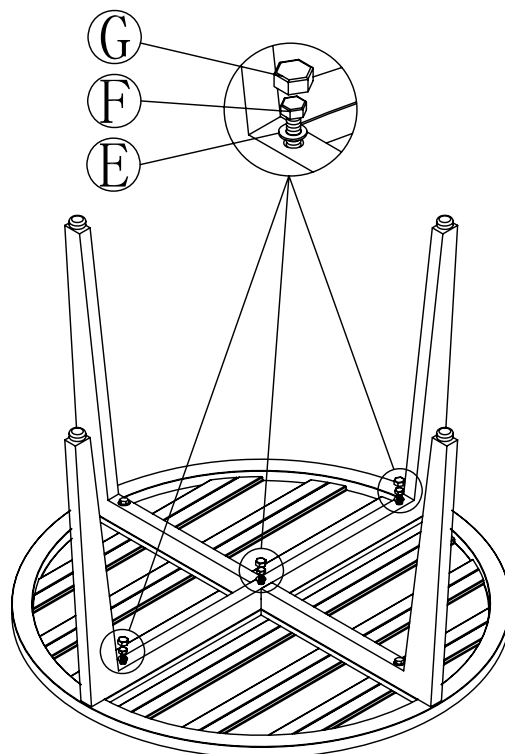

STEP 3:

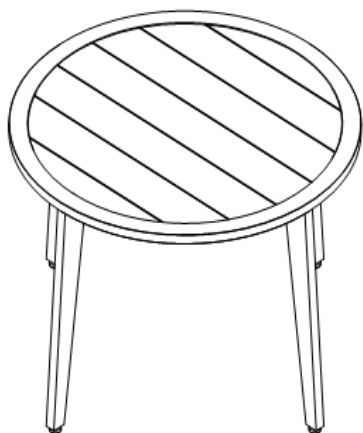

CAUTION


A: Check the package having all items shown in the parts list
 B: Read the instruction before assembling

NOTE:


DO not tighten screws completely until assembling is completed

A  1PC	B  1PC	C  1PC	D  1PC	E  5PCS	F  5PCS	G  5PCS
---	---	---	---	--	---	--


STEP 1:

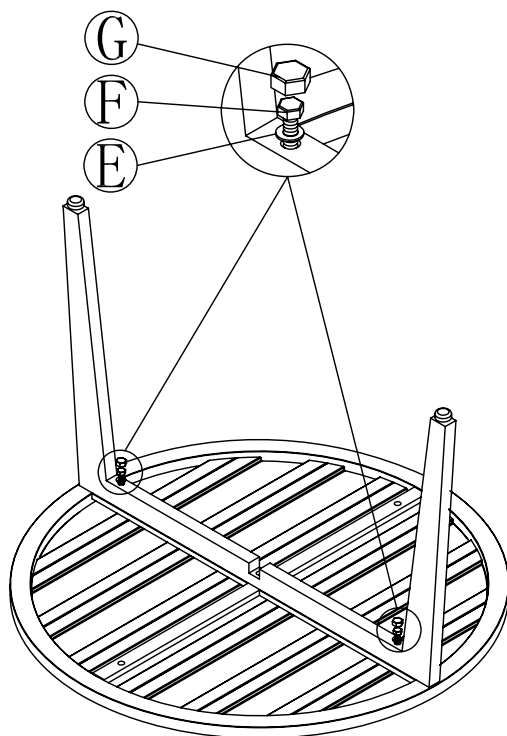

STEP 2:

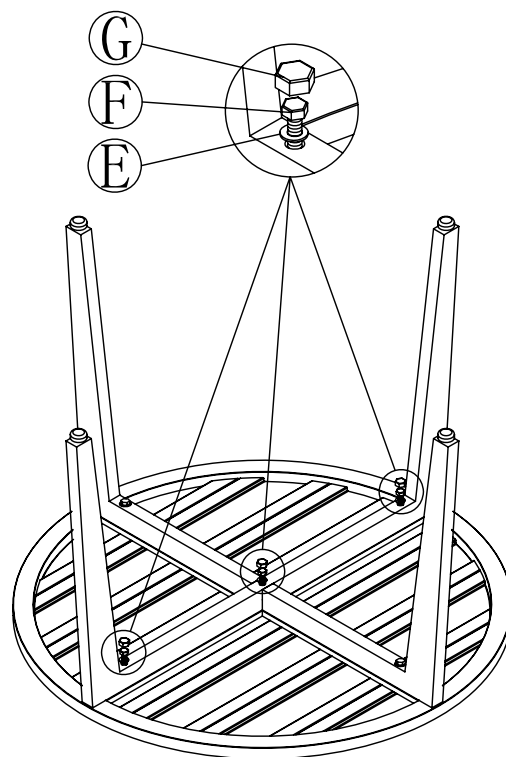

STEP 3:

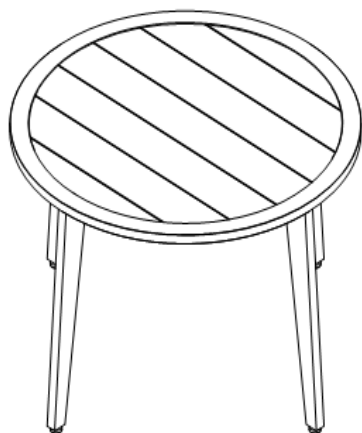

CAUTION


A: Check the package having all items shown in the parts list
B: Read the instruction before assembling

NOTE:


DO not tighten screws completely until assembling is completed

A  1PC	B  1PC	C  1PC	D  1PC	E  5PCS	F  5PCS	G  5PCS
---	---	---	---	--	---	--


STEP 1:

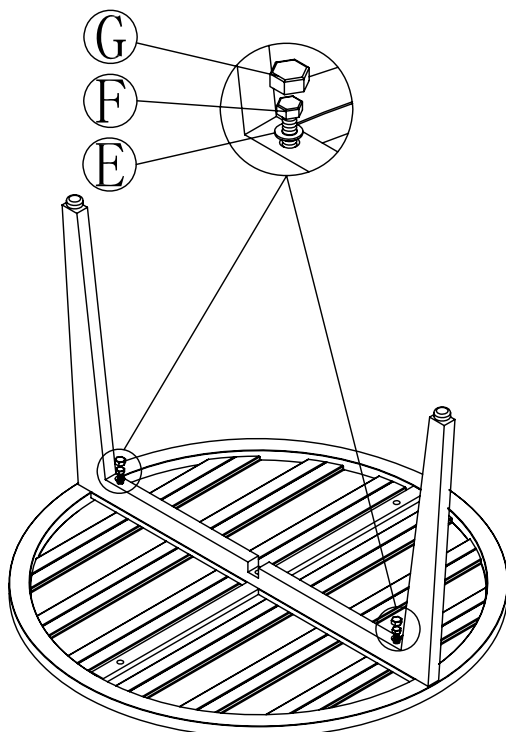

STEP 2:

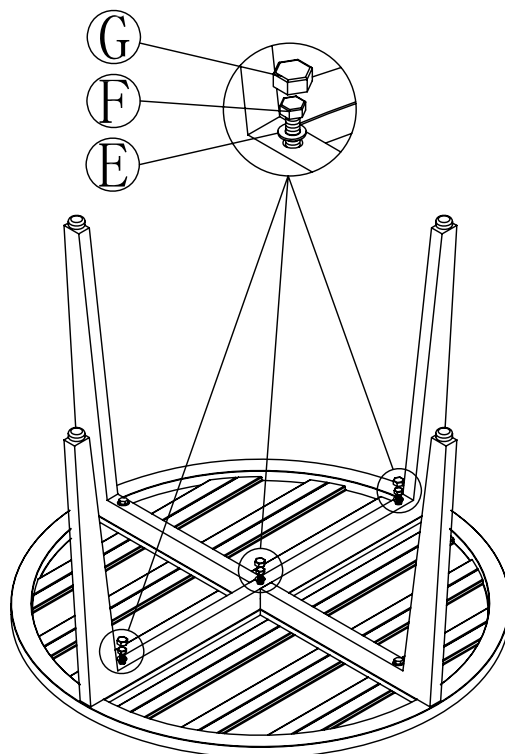

STEP 3:

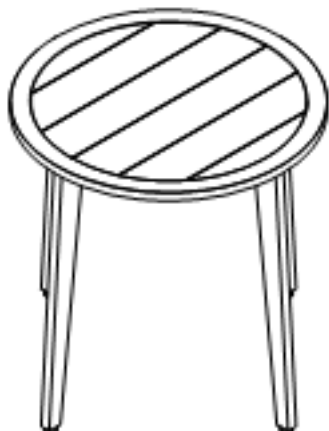

CAUTION

A: Check the package having all items shown in the parts list
B: Read the instruction before assembling

NOTE:

DO not tighten screws completely until assembling is completed