

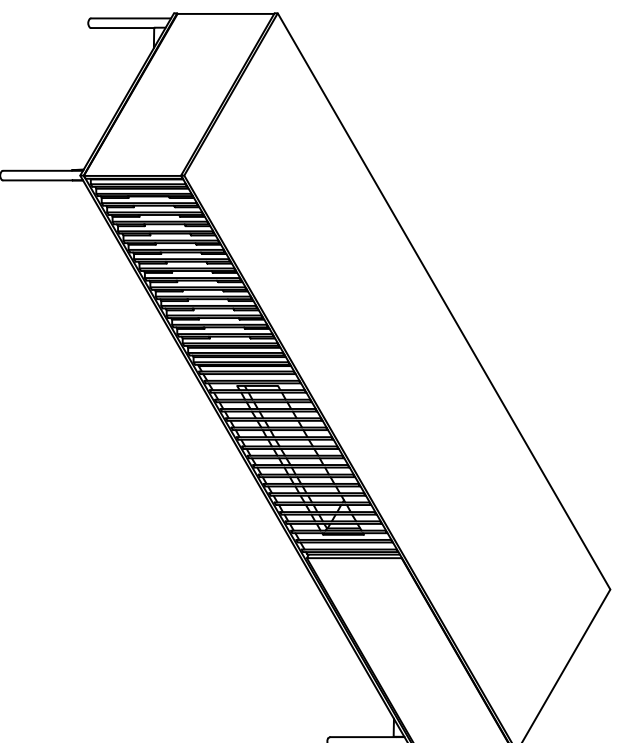


ASSEMBLY INSTRUCTION


27290010/02


XXXLutz KG
Roemerstrasse 39
AT-4600 Wels
Austria

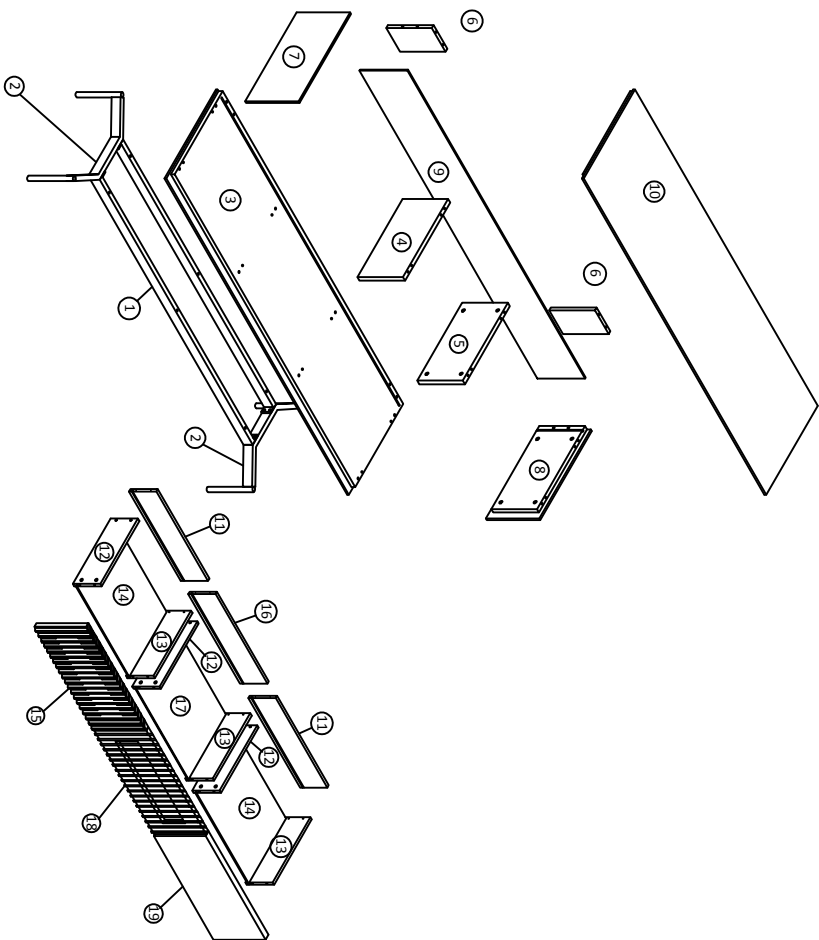

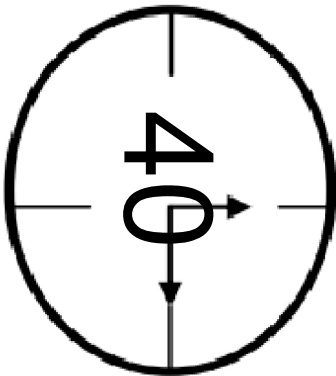


Ax28 Φ15*12	Bx28 M6*32	Cx16 Φ8*30	Dx8	Ex28 Φ20
Fx12 Φ12*10	Gx12 M6*25	Hx12 M3.5*14	Ix3	Jx6 M6*5.5
Kx8 M8*20	Lx1 #4	Mx1 #5	Nx12 M3.5*25	Ox3 L=300
Px24 M3.5*12	Qx6 Φ6*16*2.0	Sx8 M3*16		




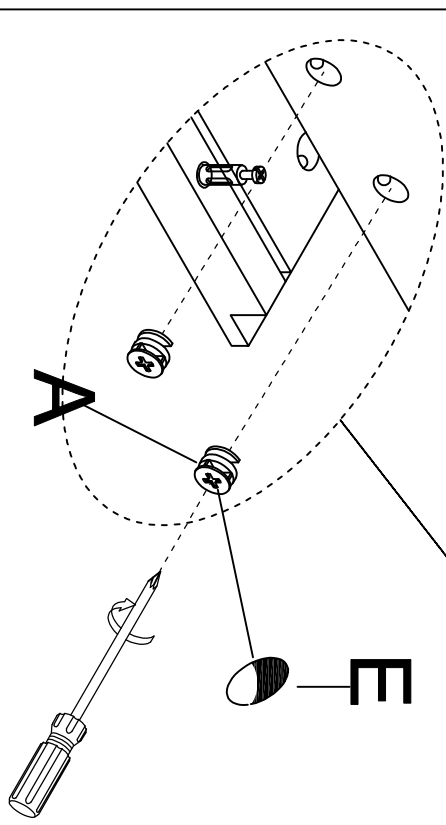



05

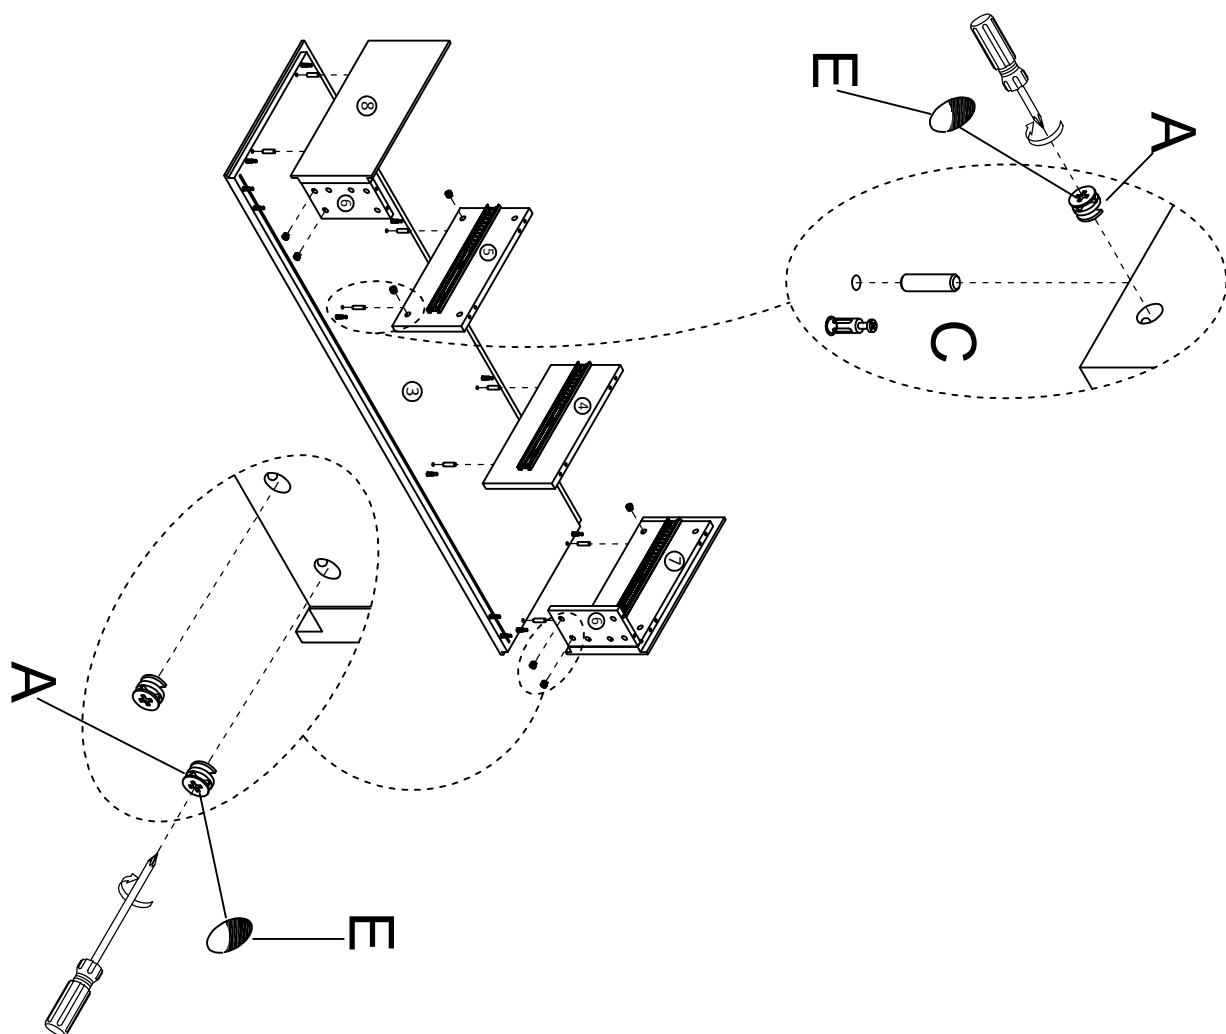


06

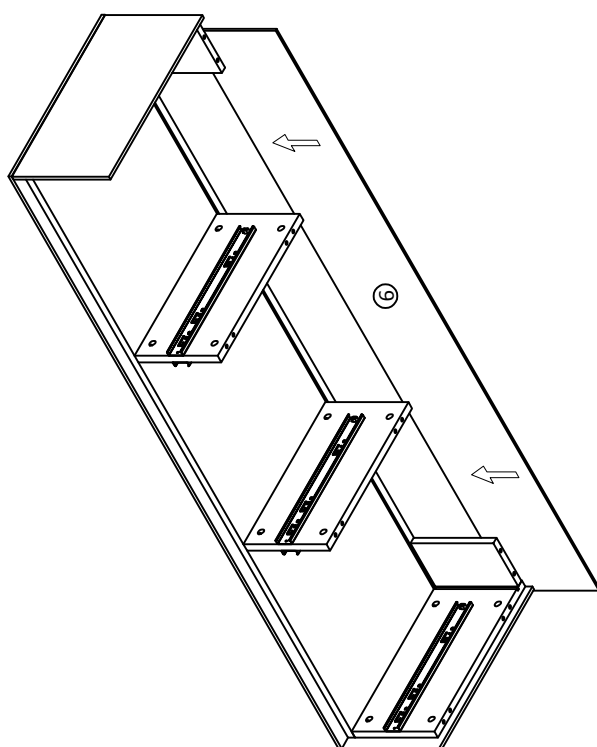


07

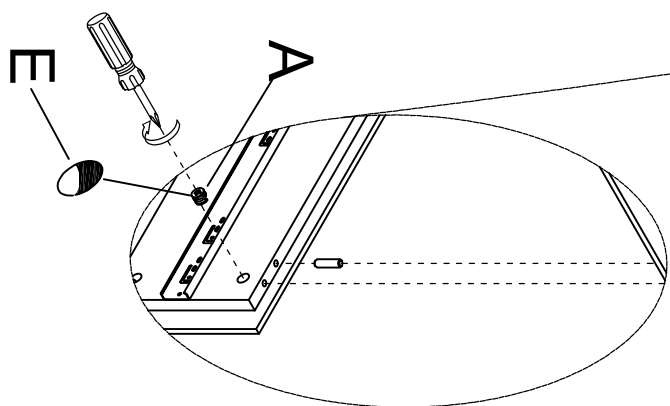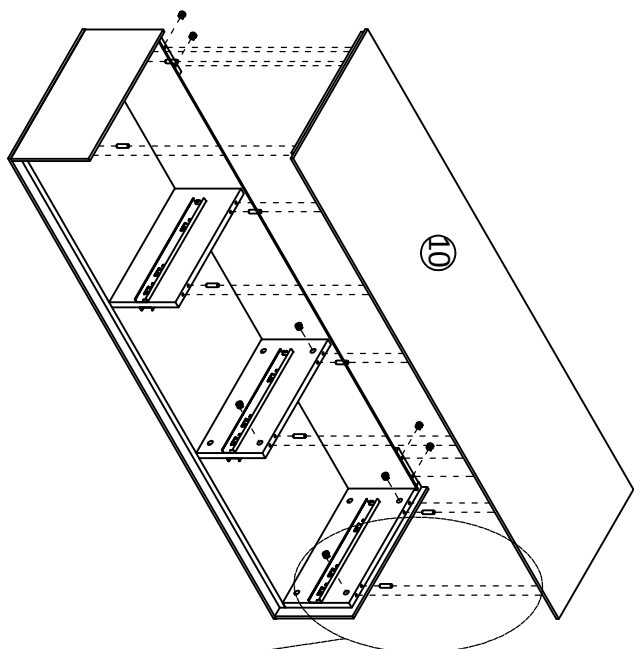

08

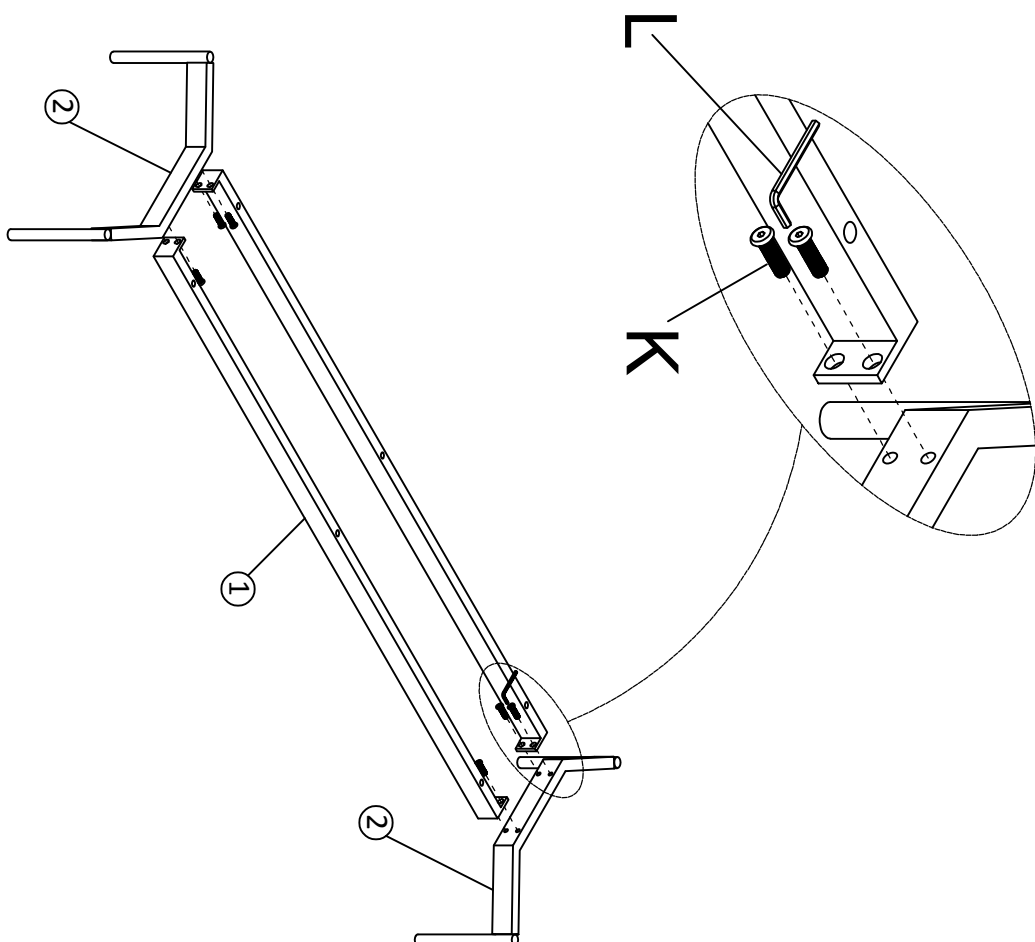




09

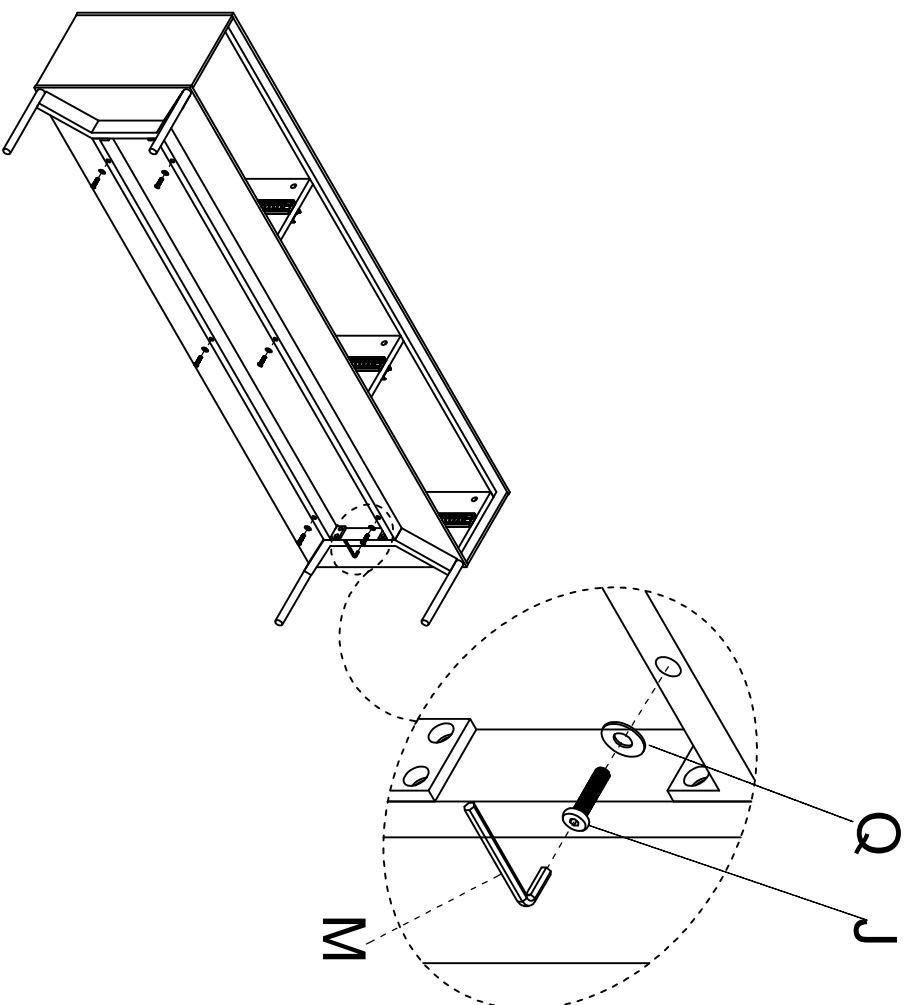


Install the screw 50% on the hardware foot first.
and then tighten the screw after the hole is correct.

10

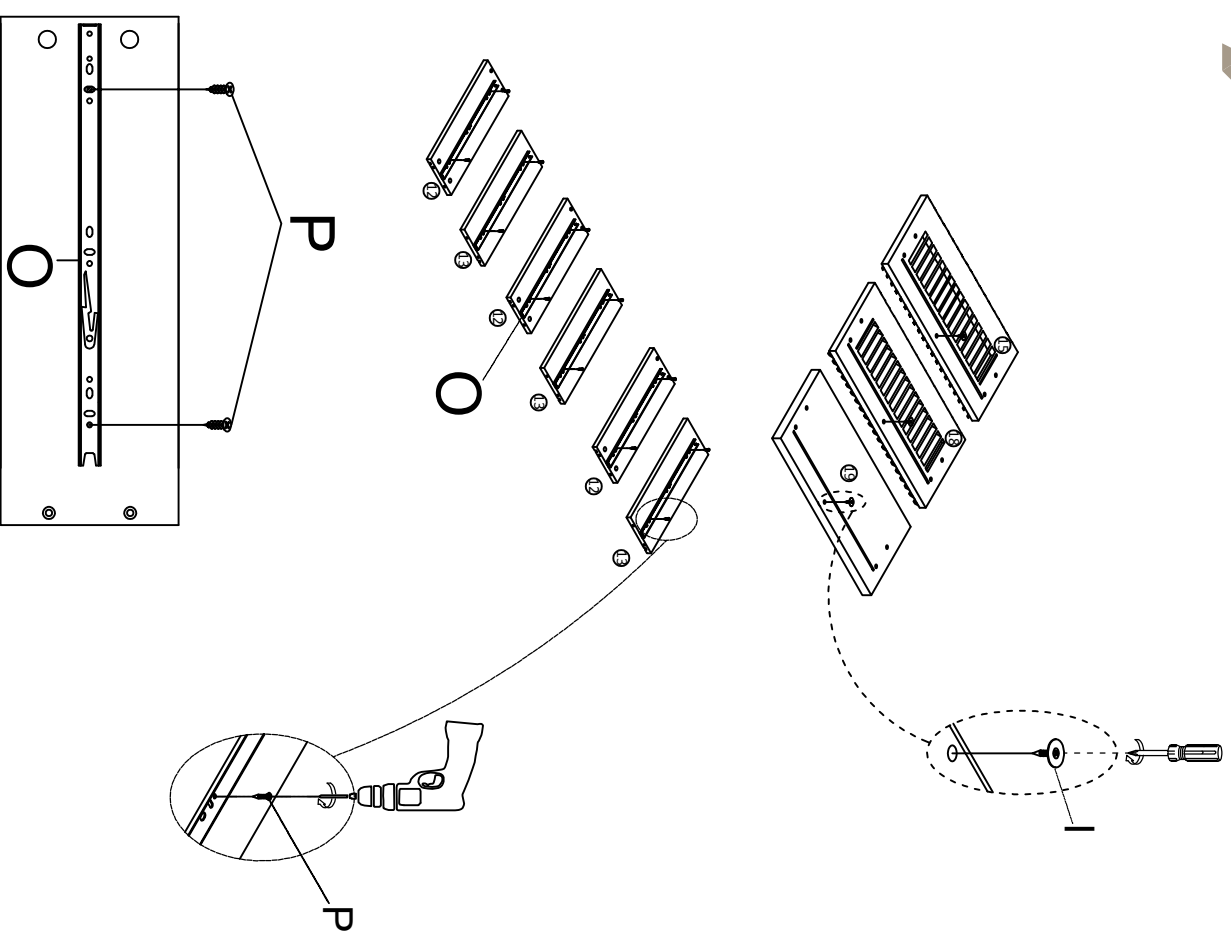

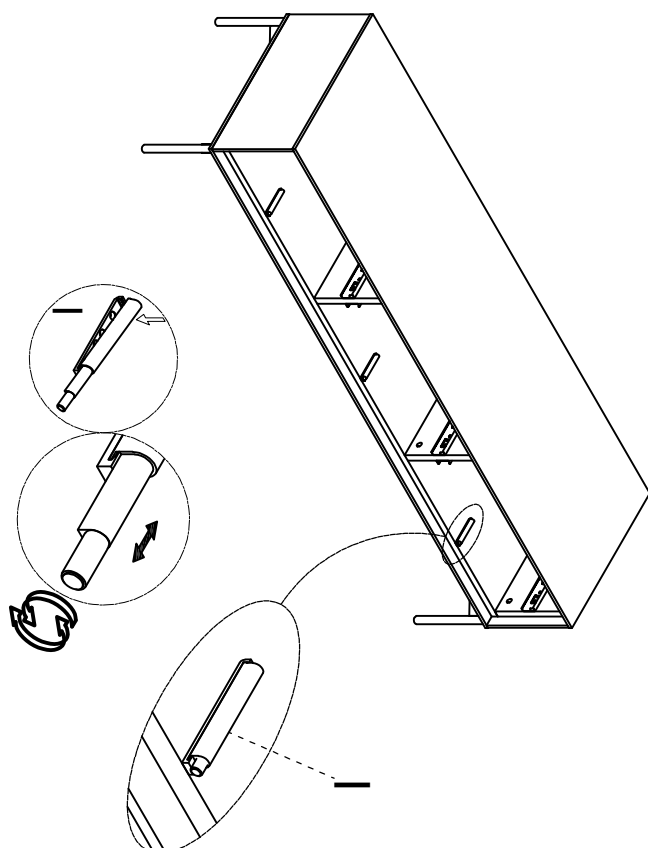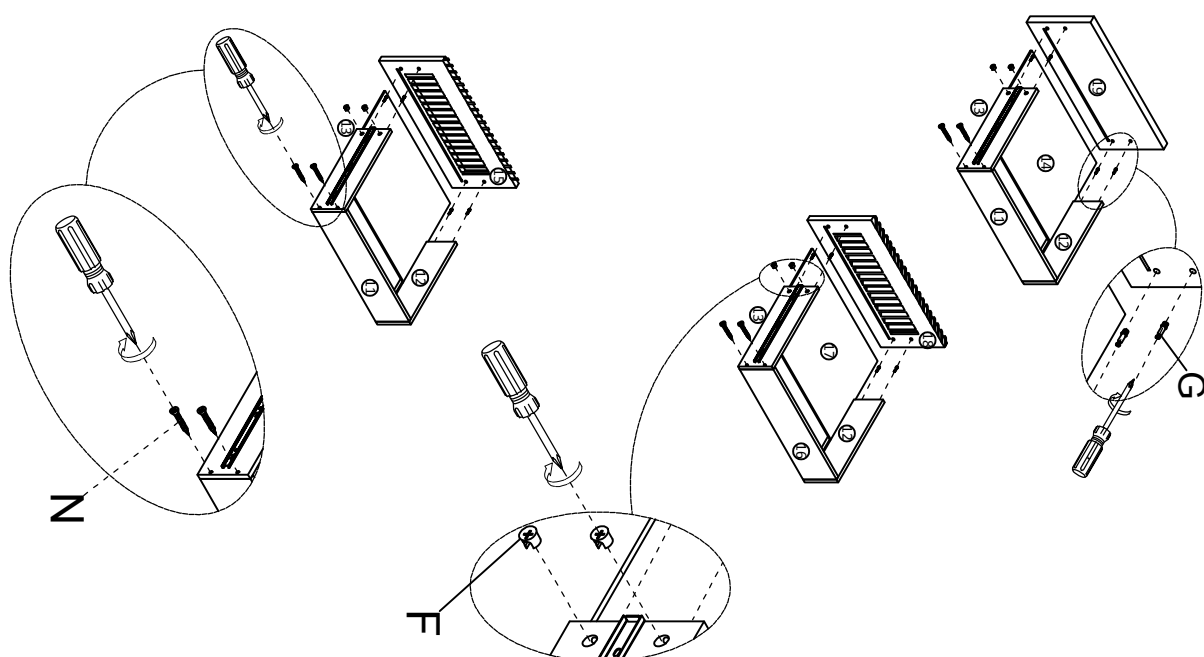

13

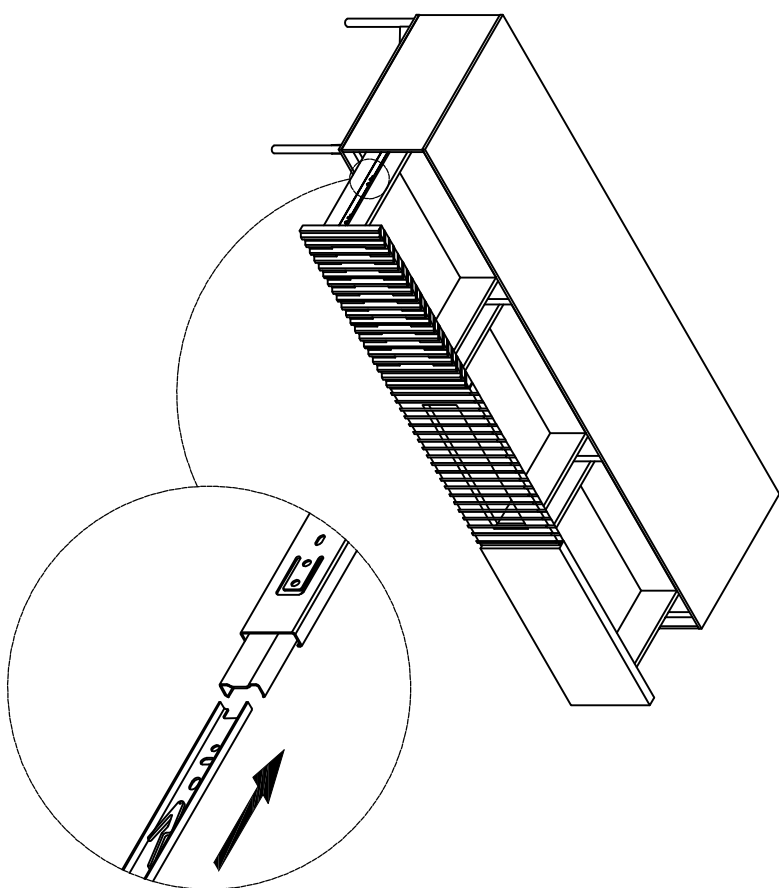

14

