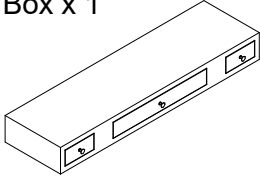







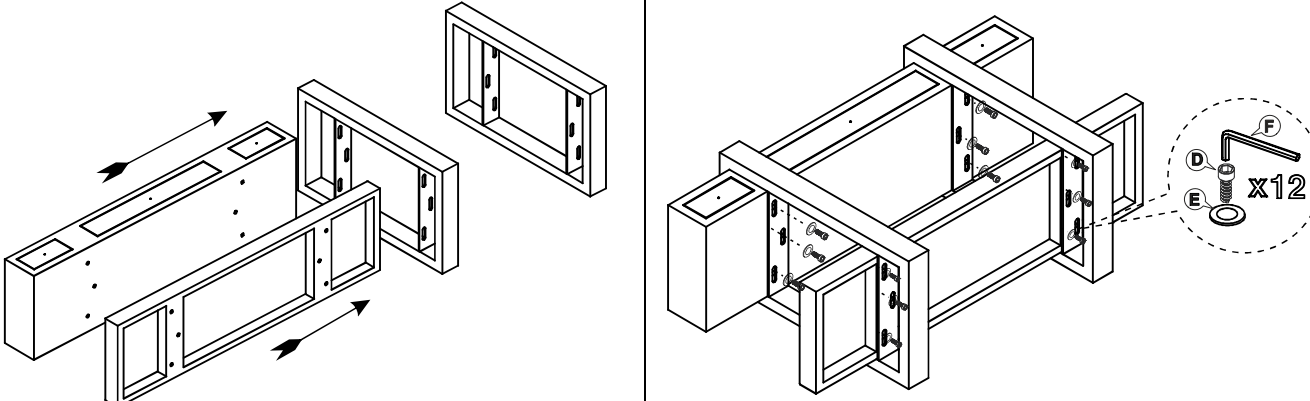


Cocina 69011

ASSEMBLY INSTRUCTIONS.

A. Wooden Box x 1 	B. Iron Legs x 2 	C. Marble Top x 1 
D. Allen Bolt x 12 M 6 x 40 MM 	E. Washer x 12 	F. Allen Key x 1 6 MM 

1  



2

