
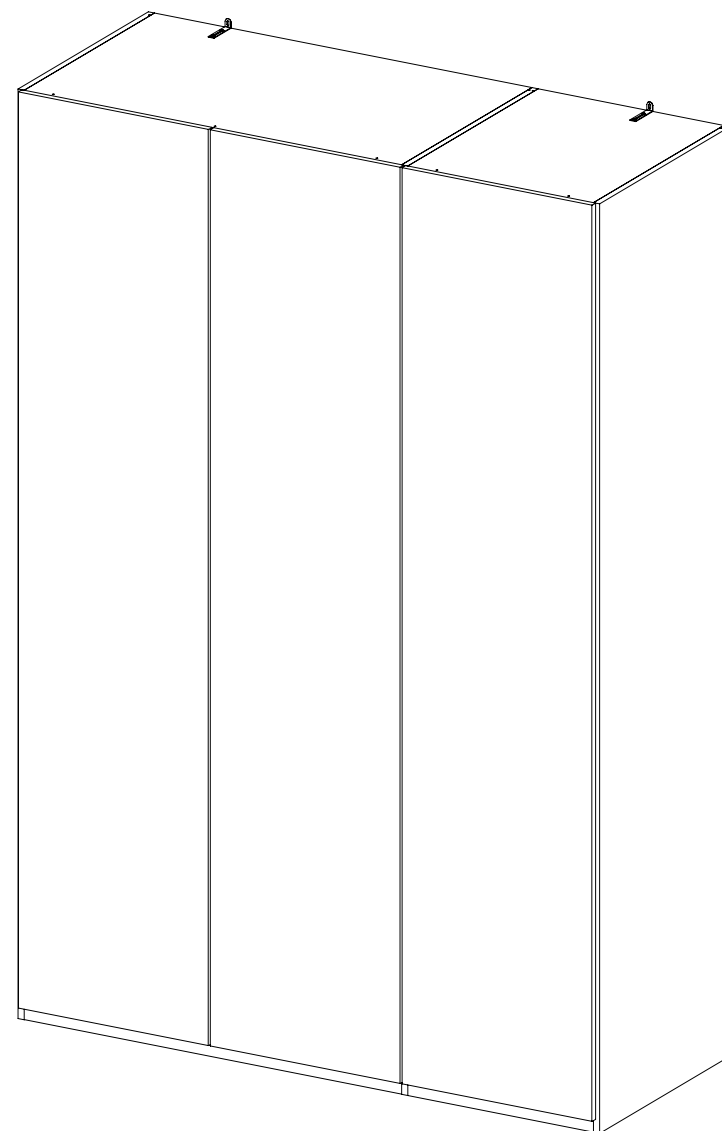
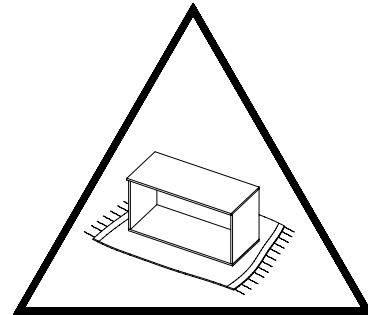
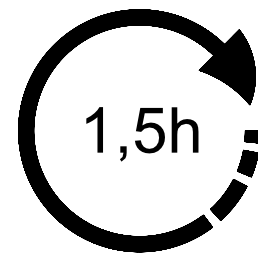










1.

MD162_01






rauch

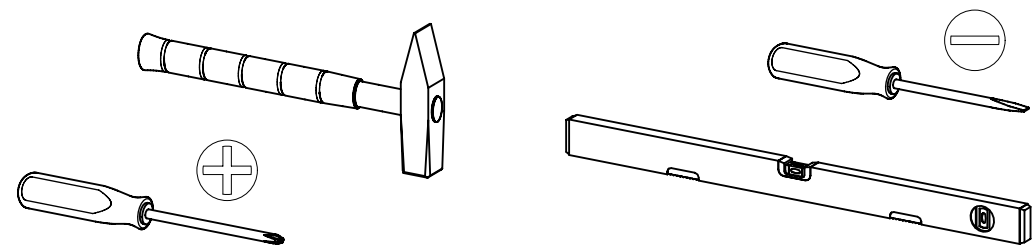


2.

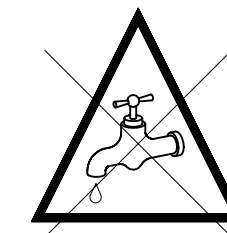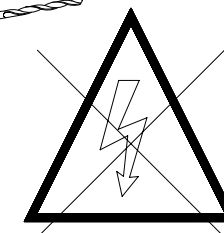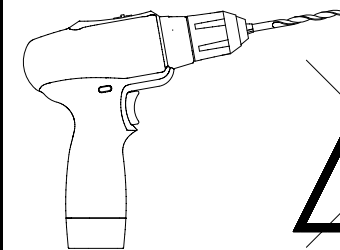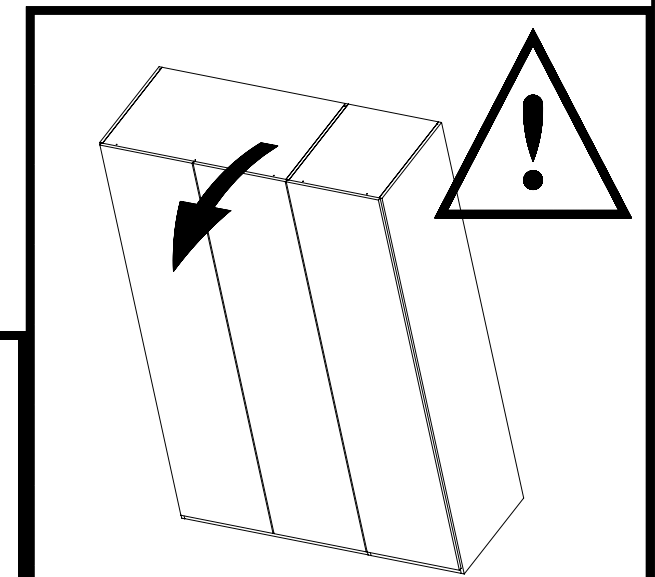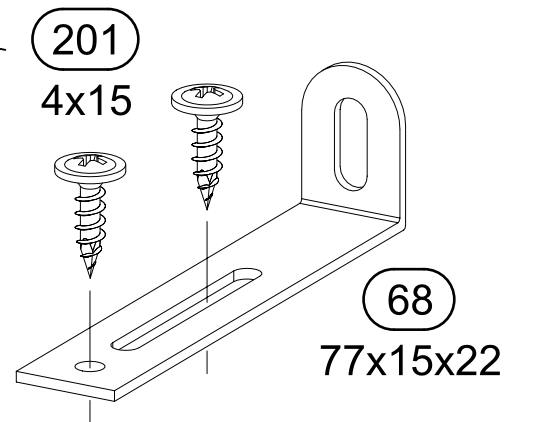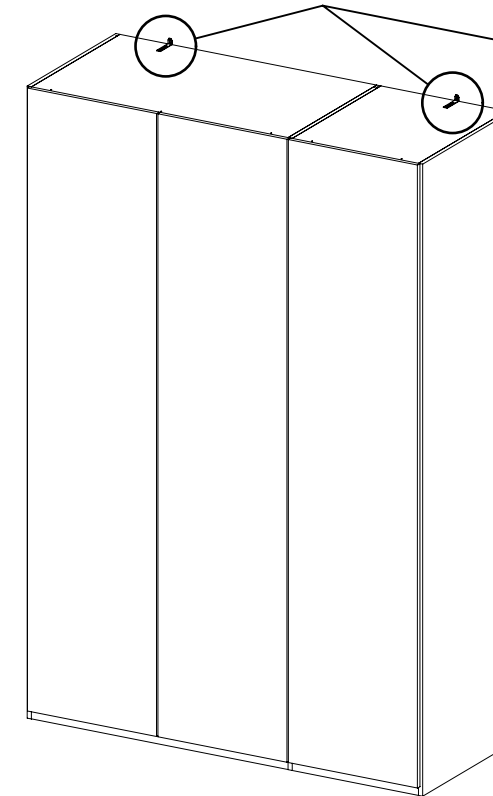


ØXmm

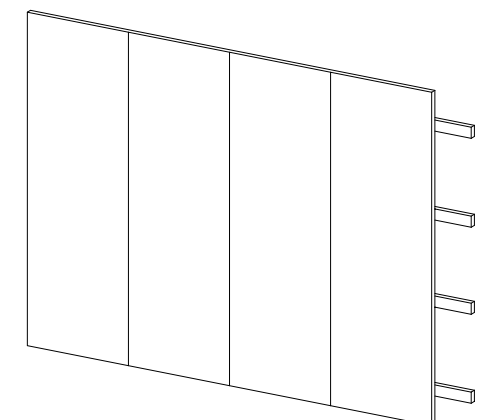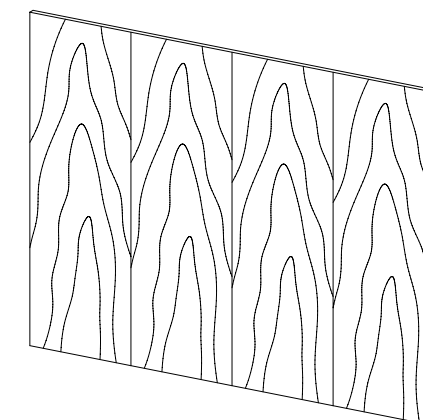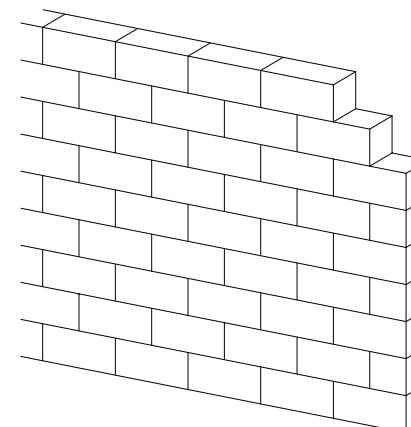


3.

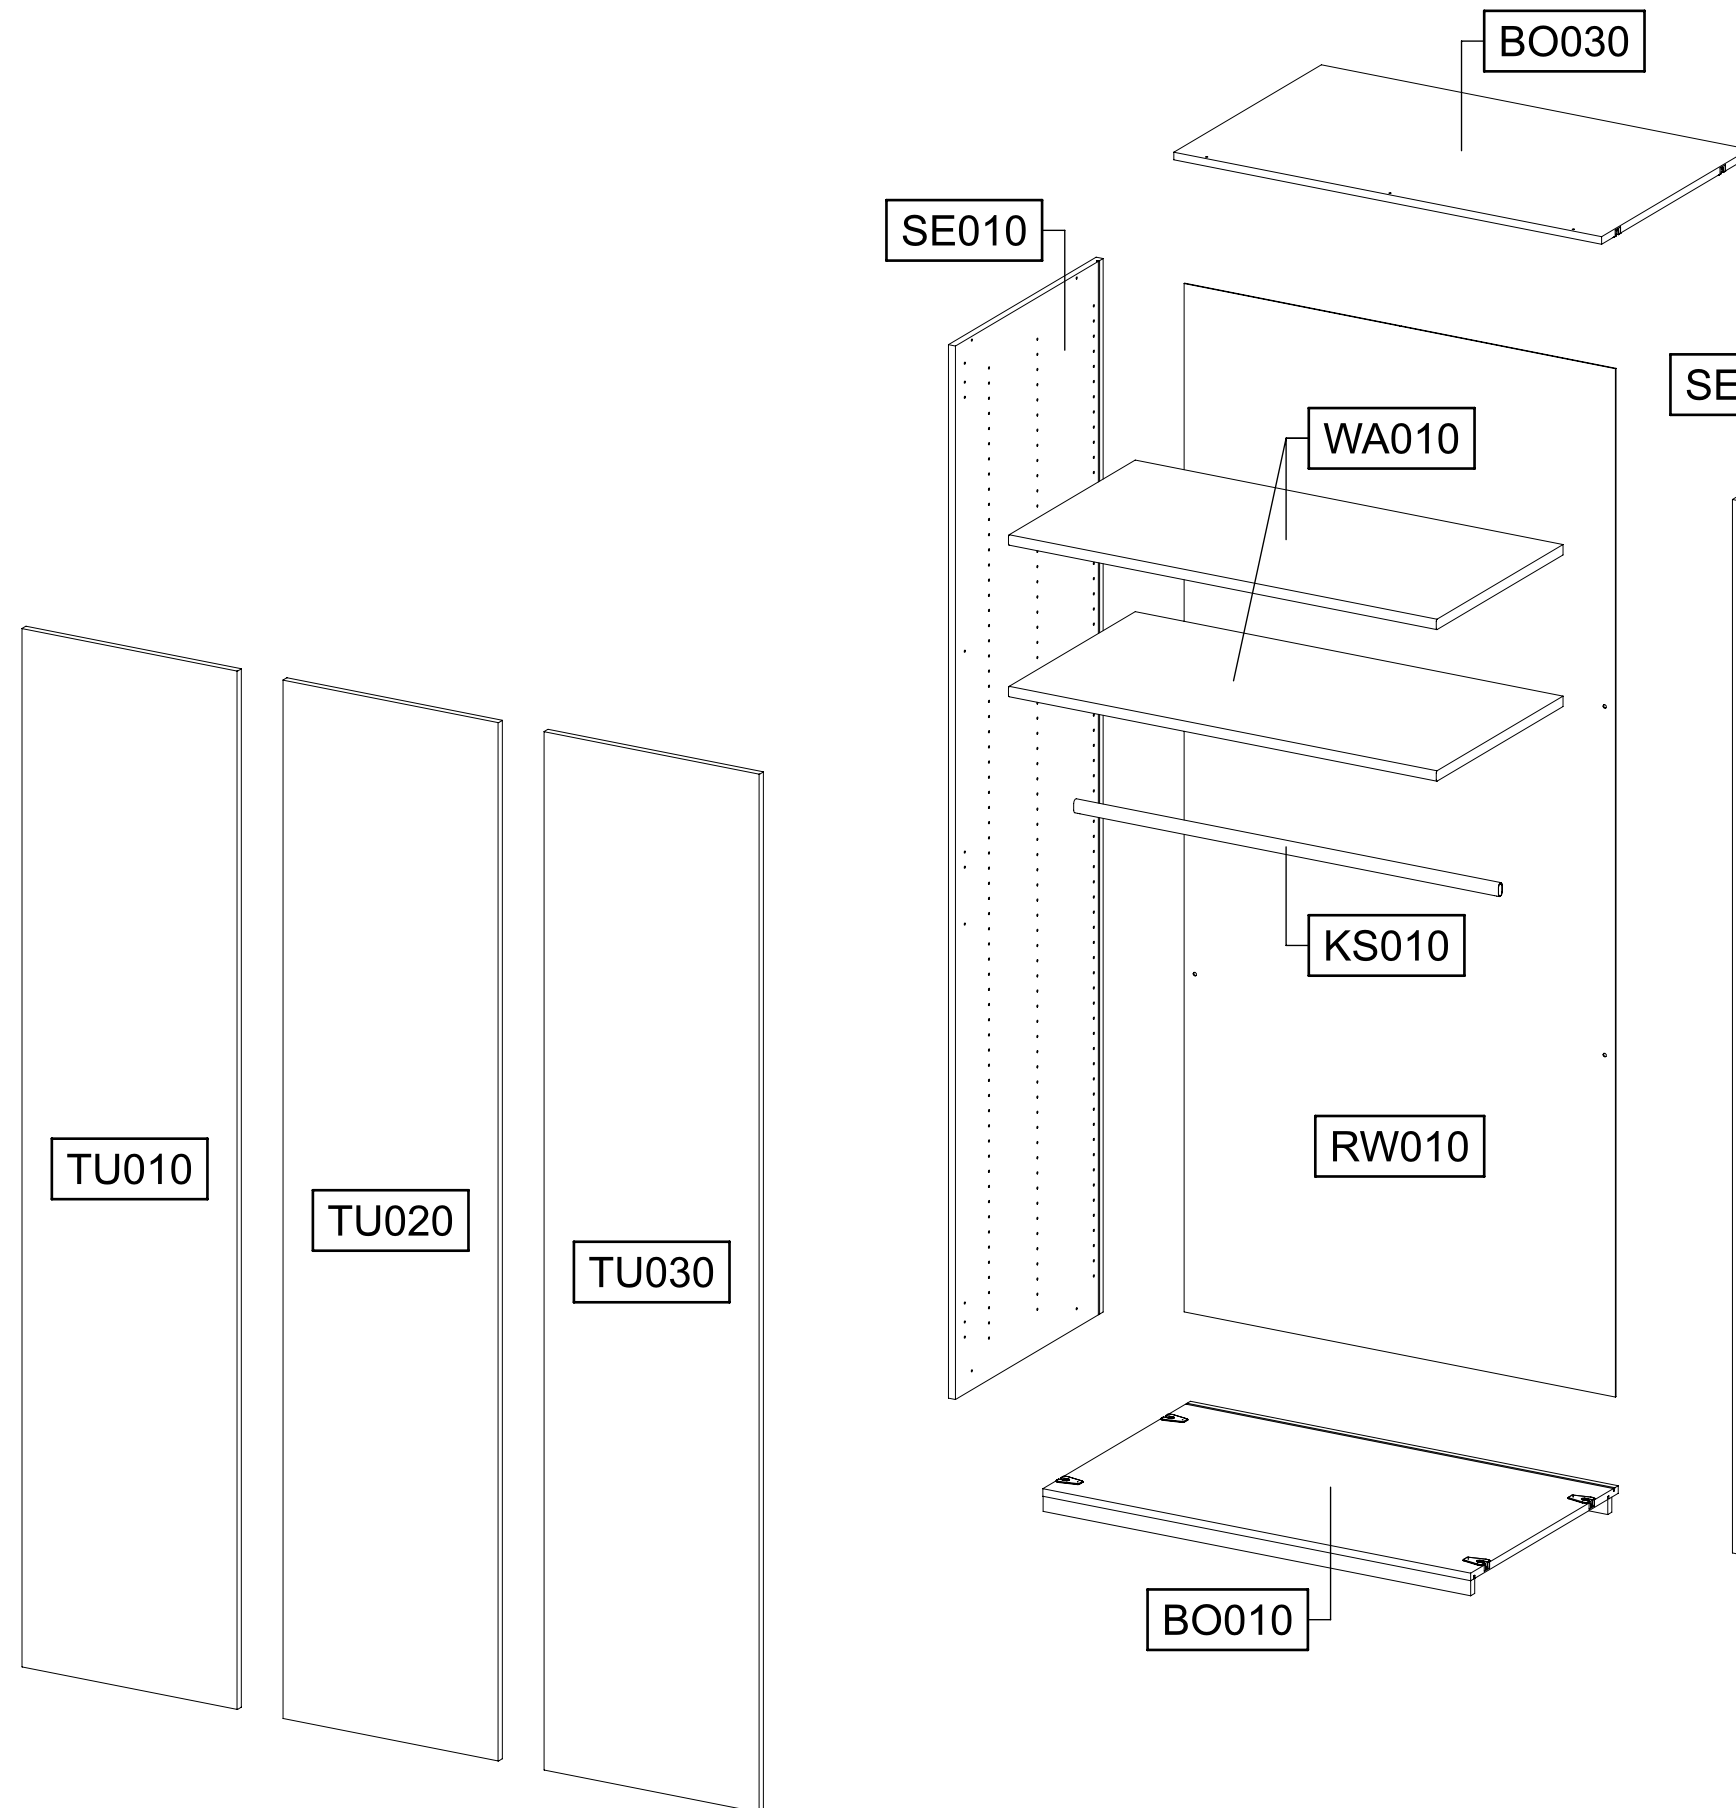


4.

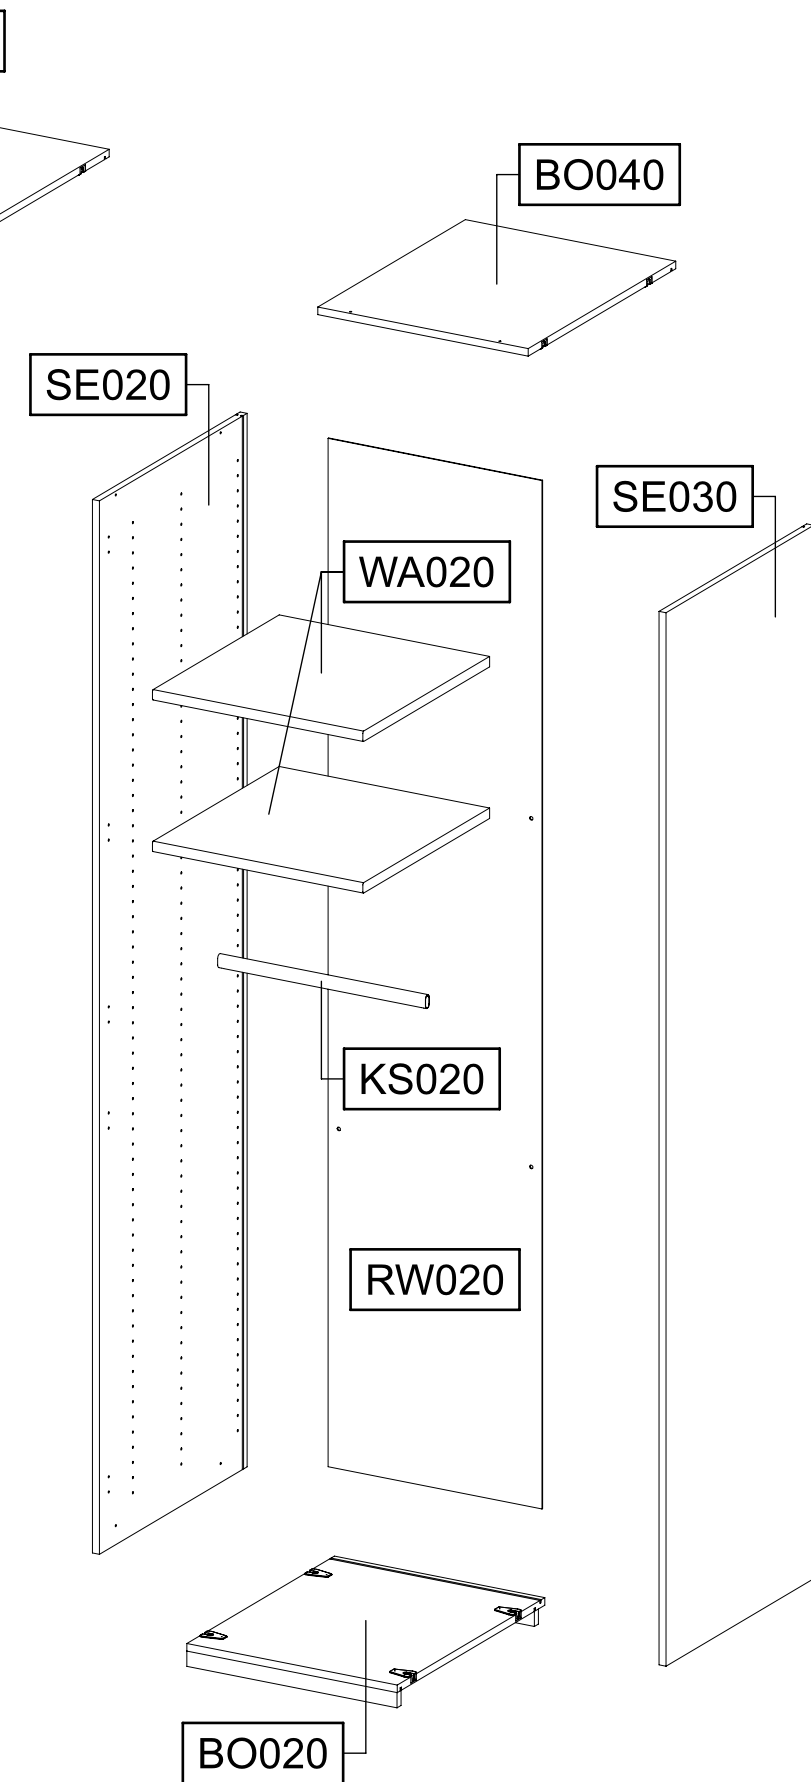


0-6x 55x16x6,2 12	4x 29
8x 47	2x 77x22x15 68
4x 4x15 201	4x 3,5x15 205
18-24x 4x13 621	8x 6,5x12 779
8x 1085	4x 1086
16x 1089	9-12x 1291
9-12x 1292	


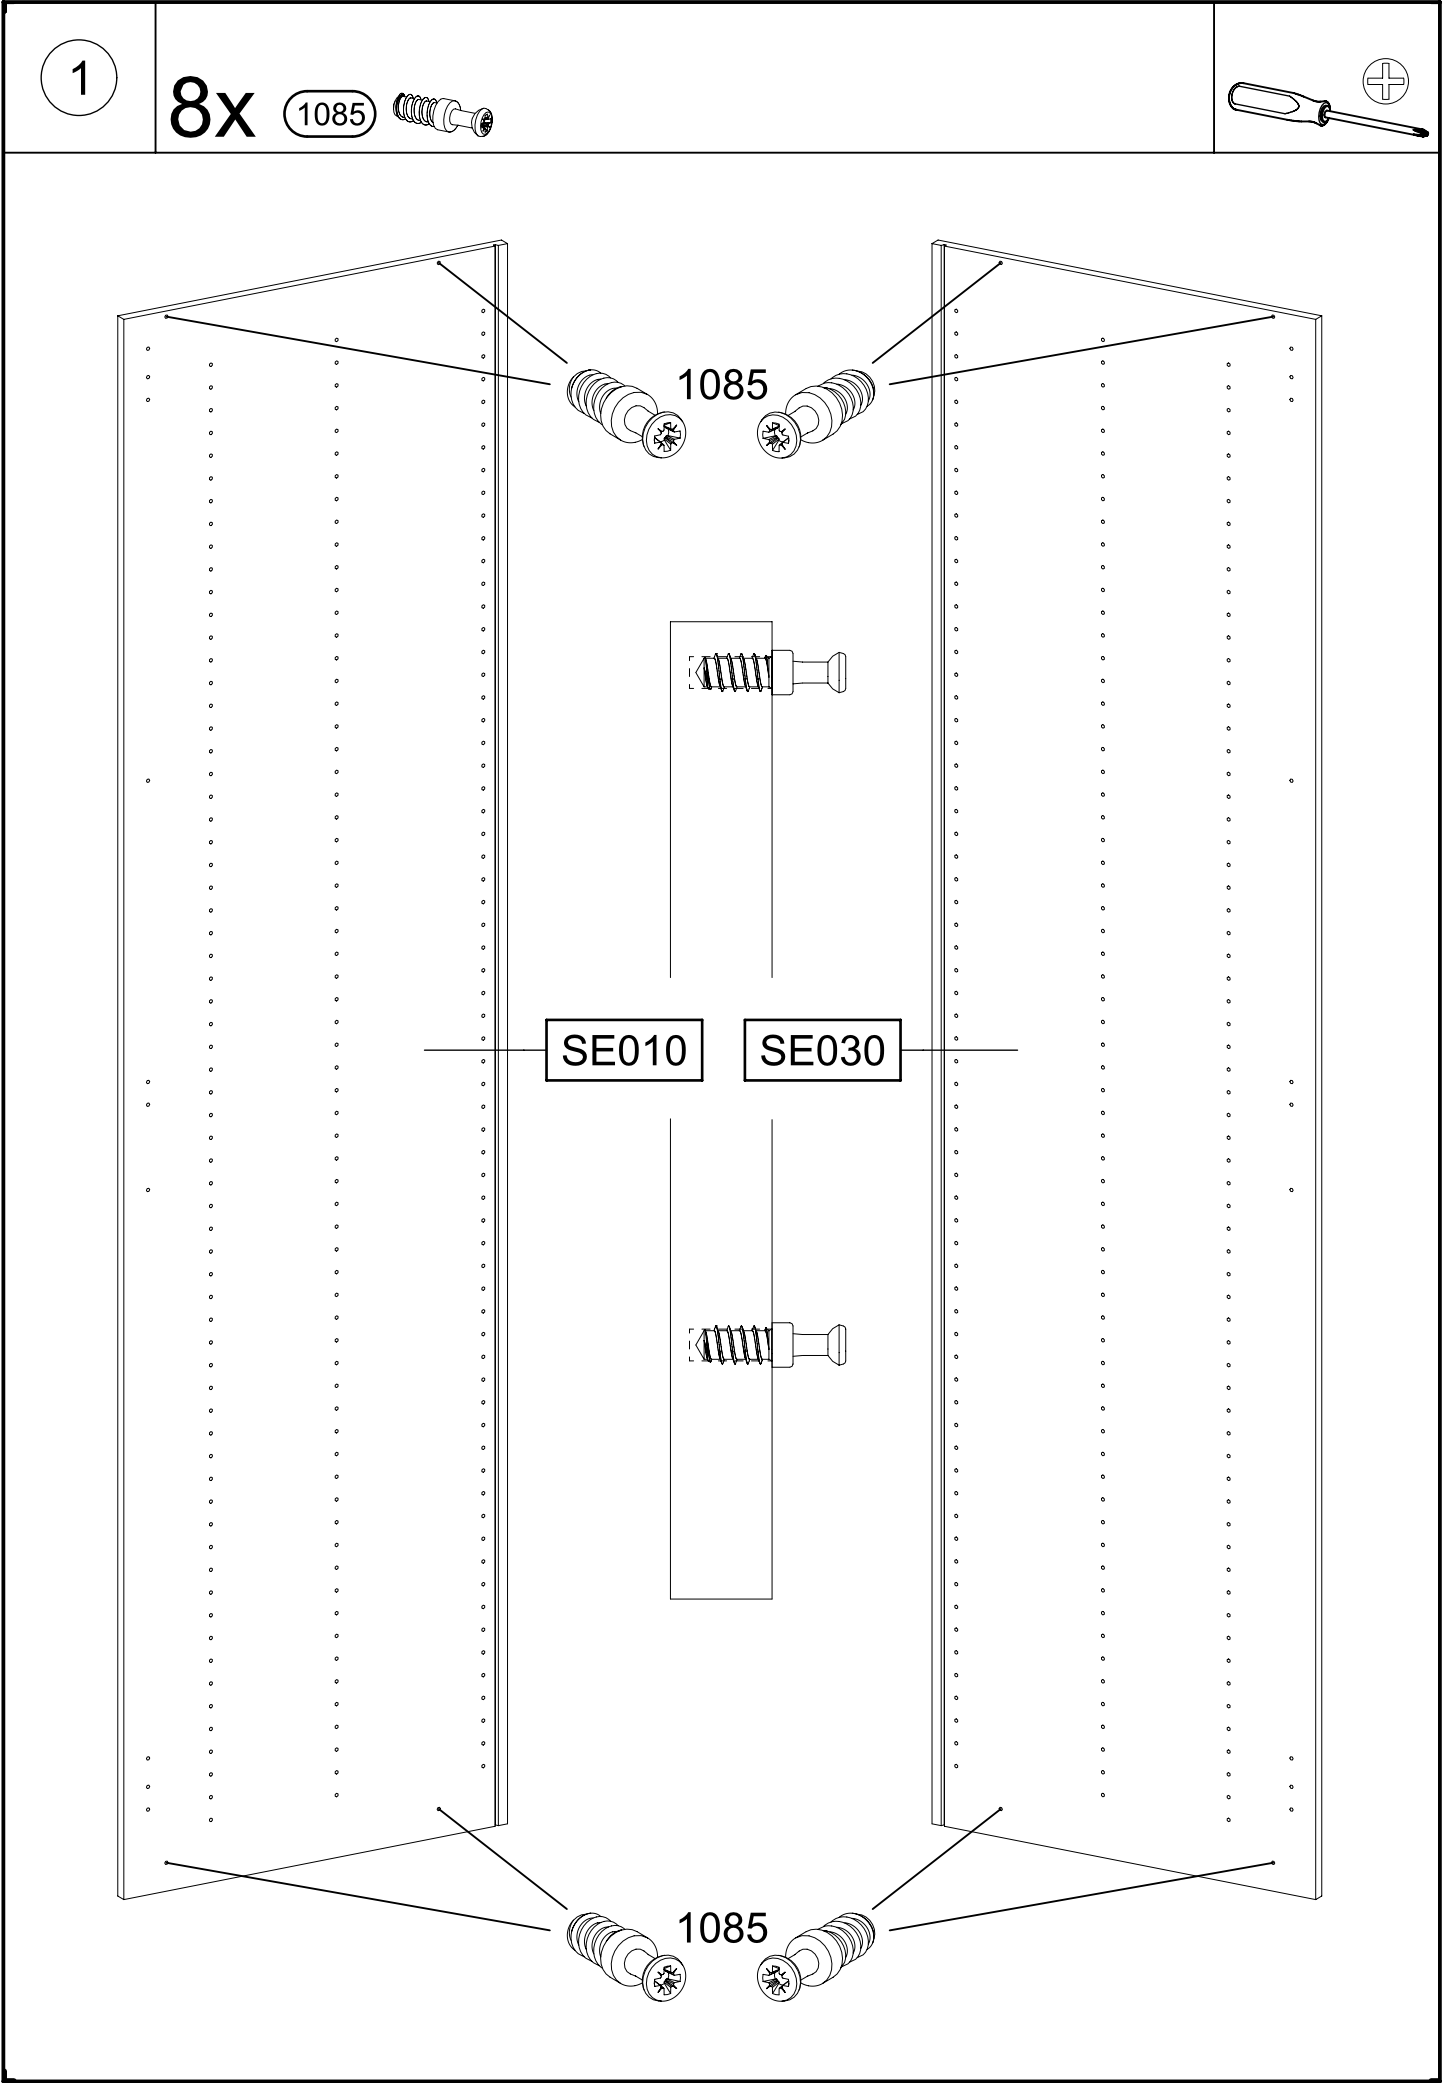




7.

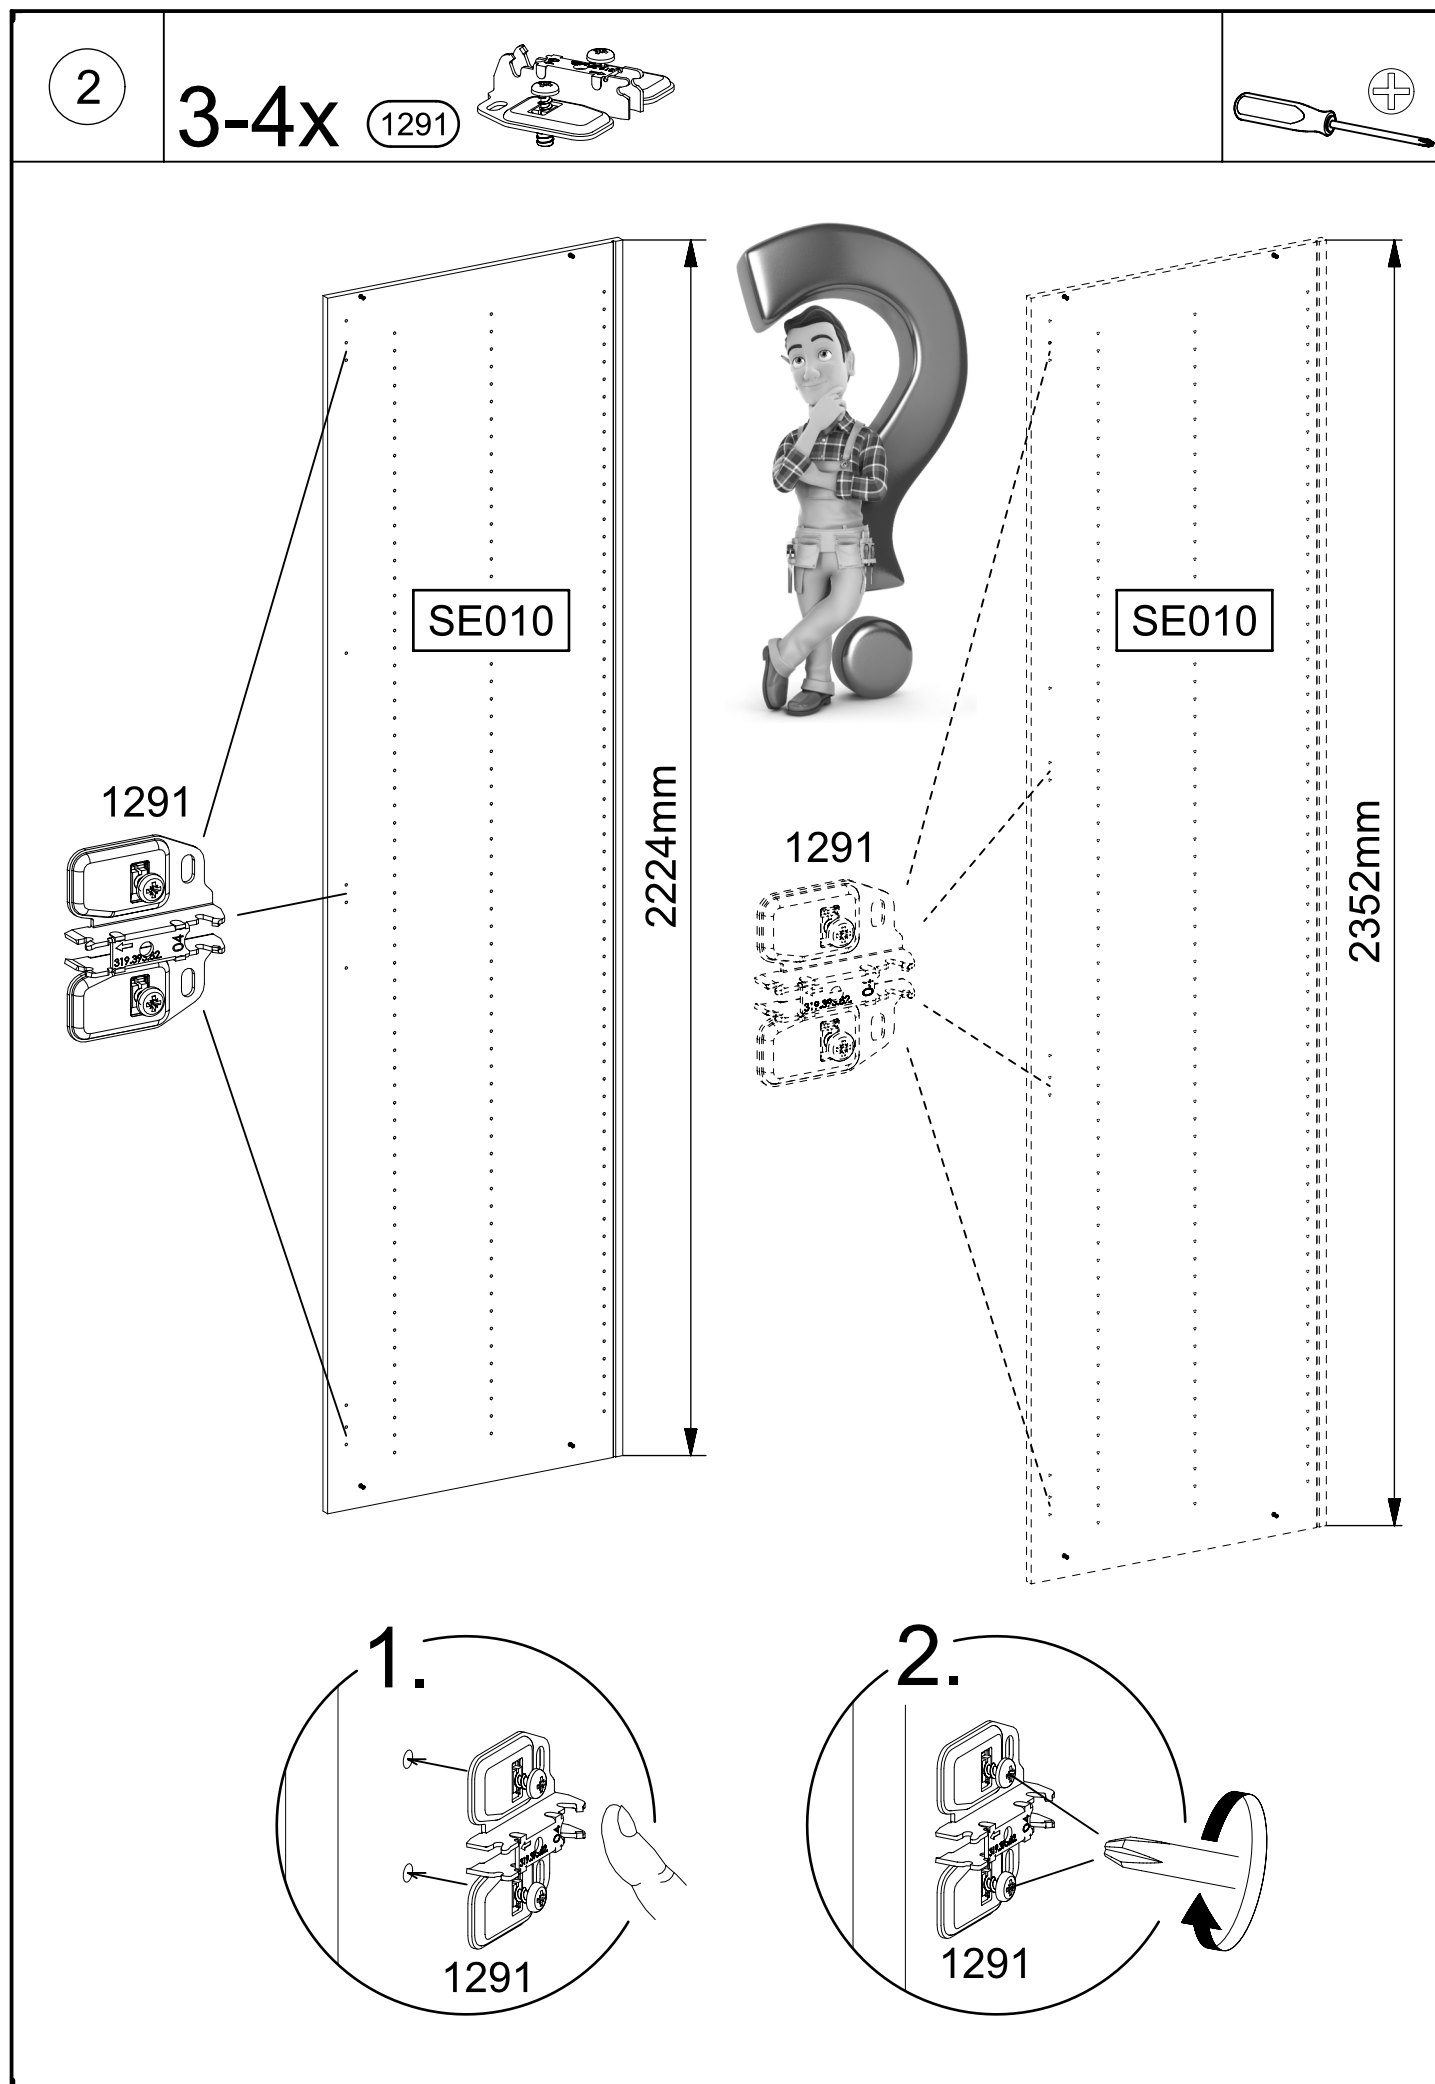


8.

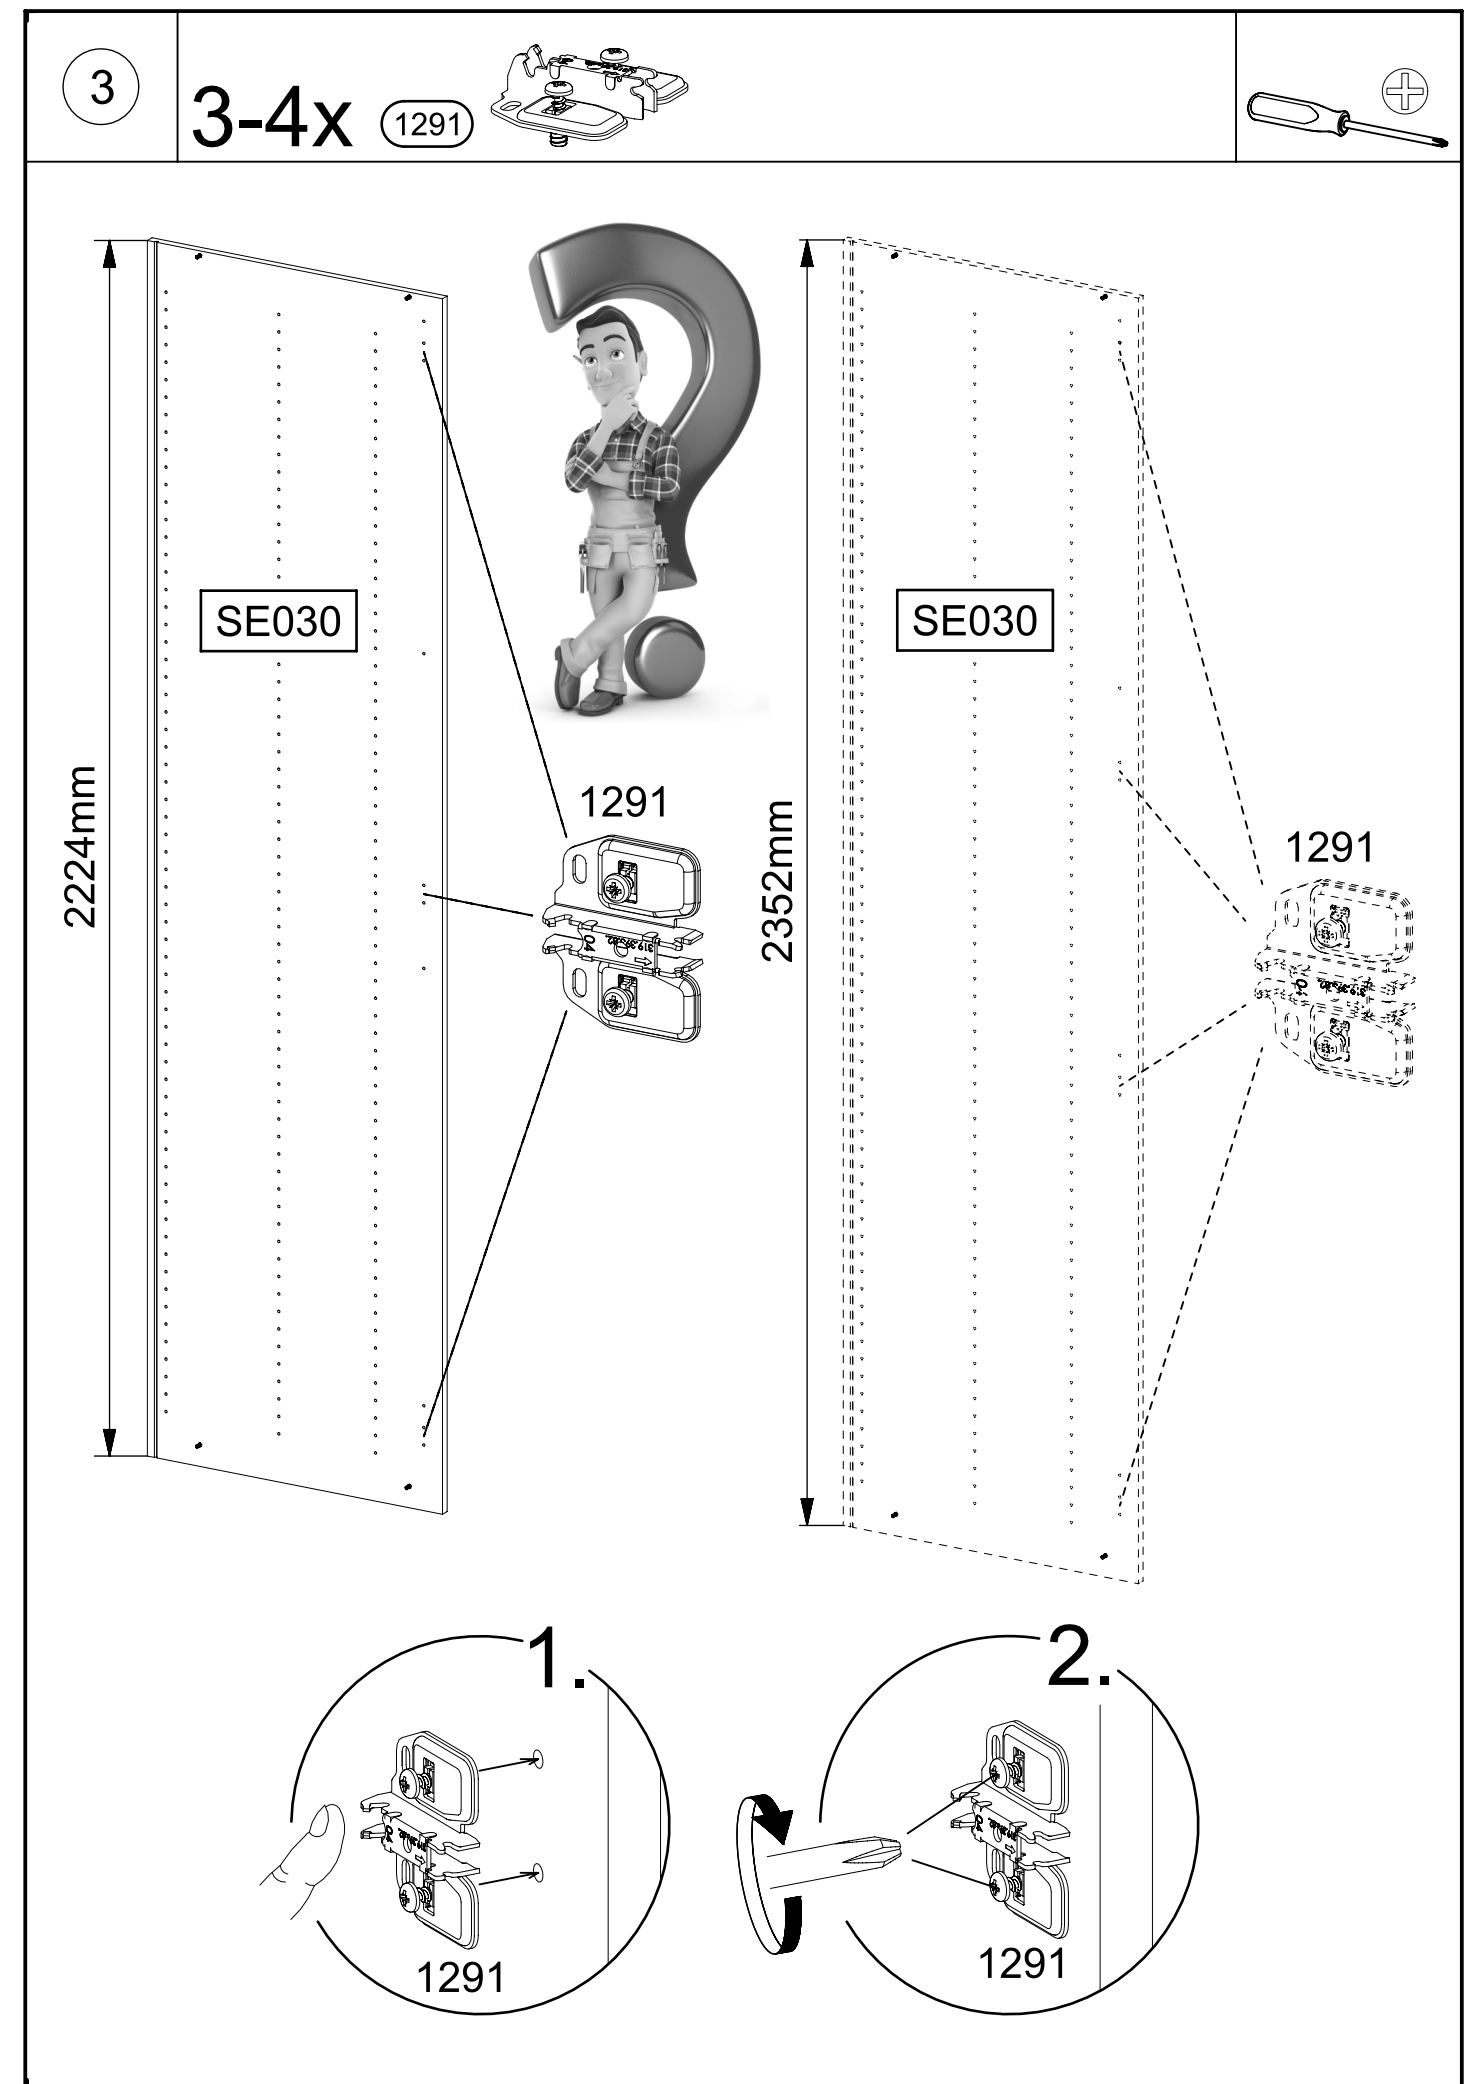

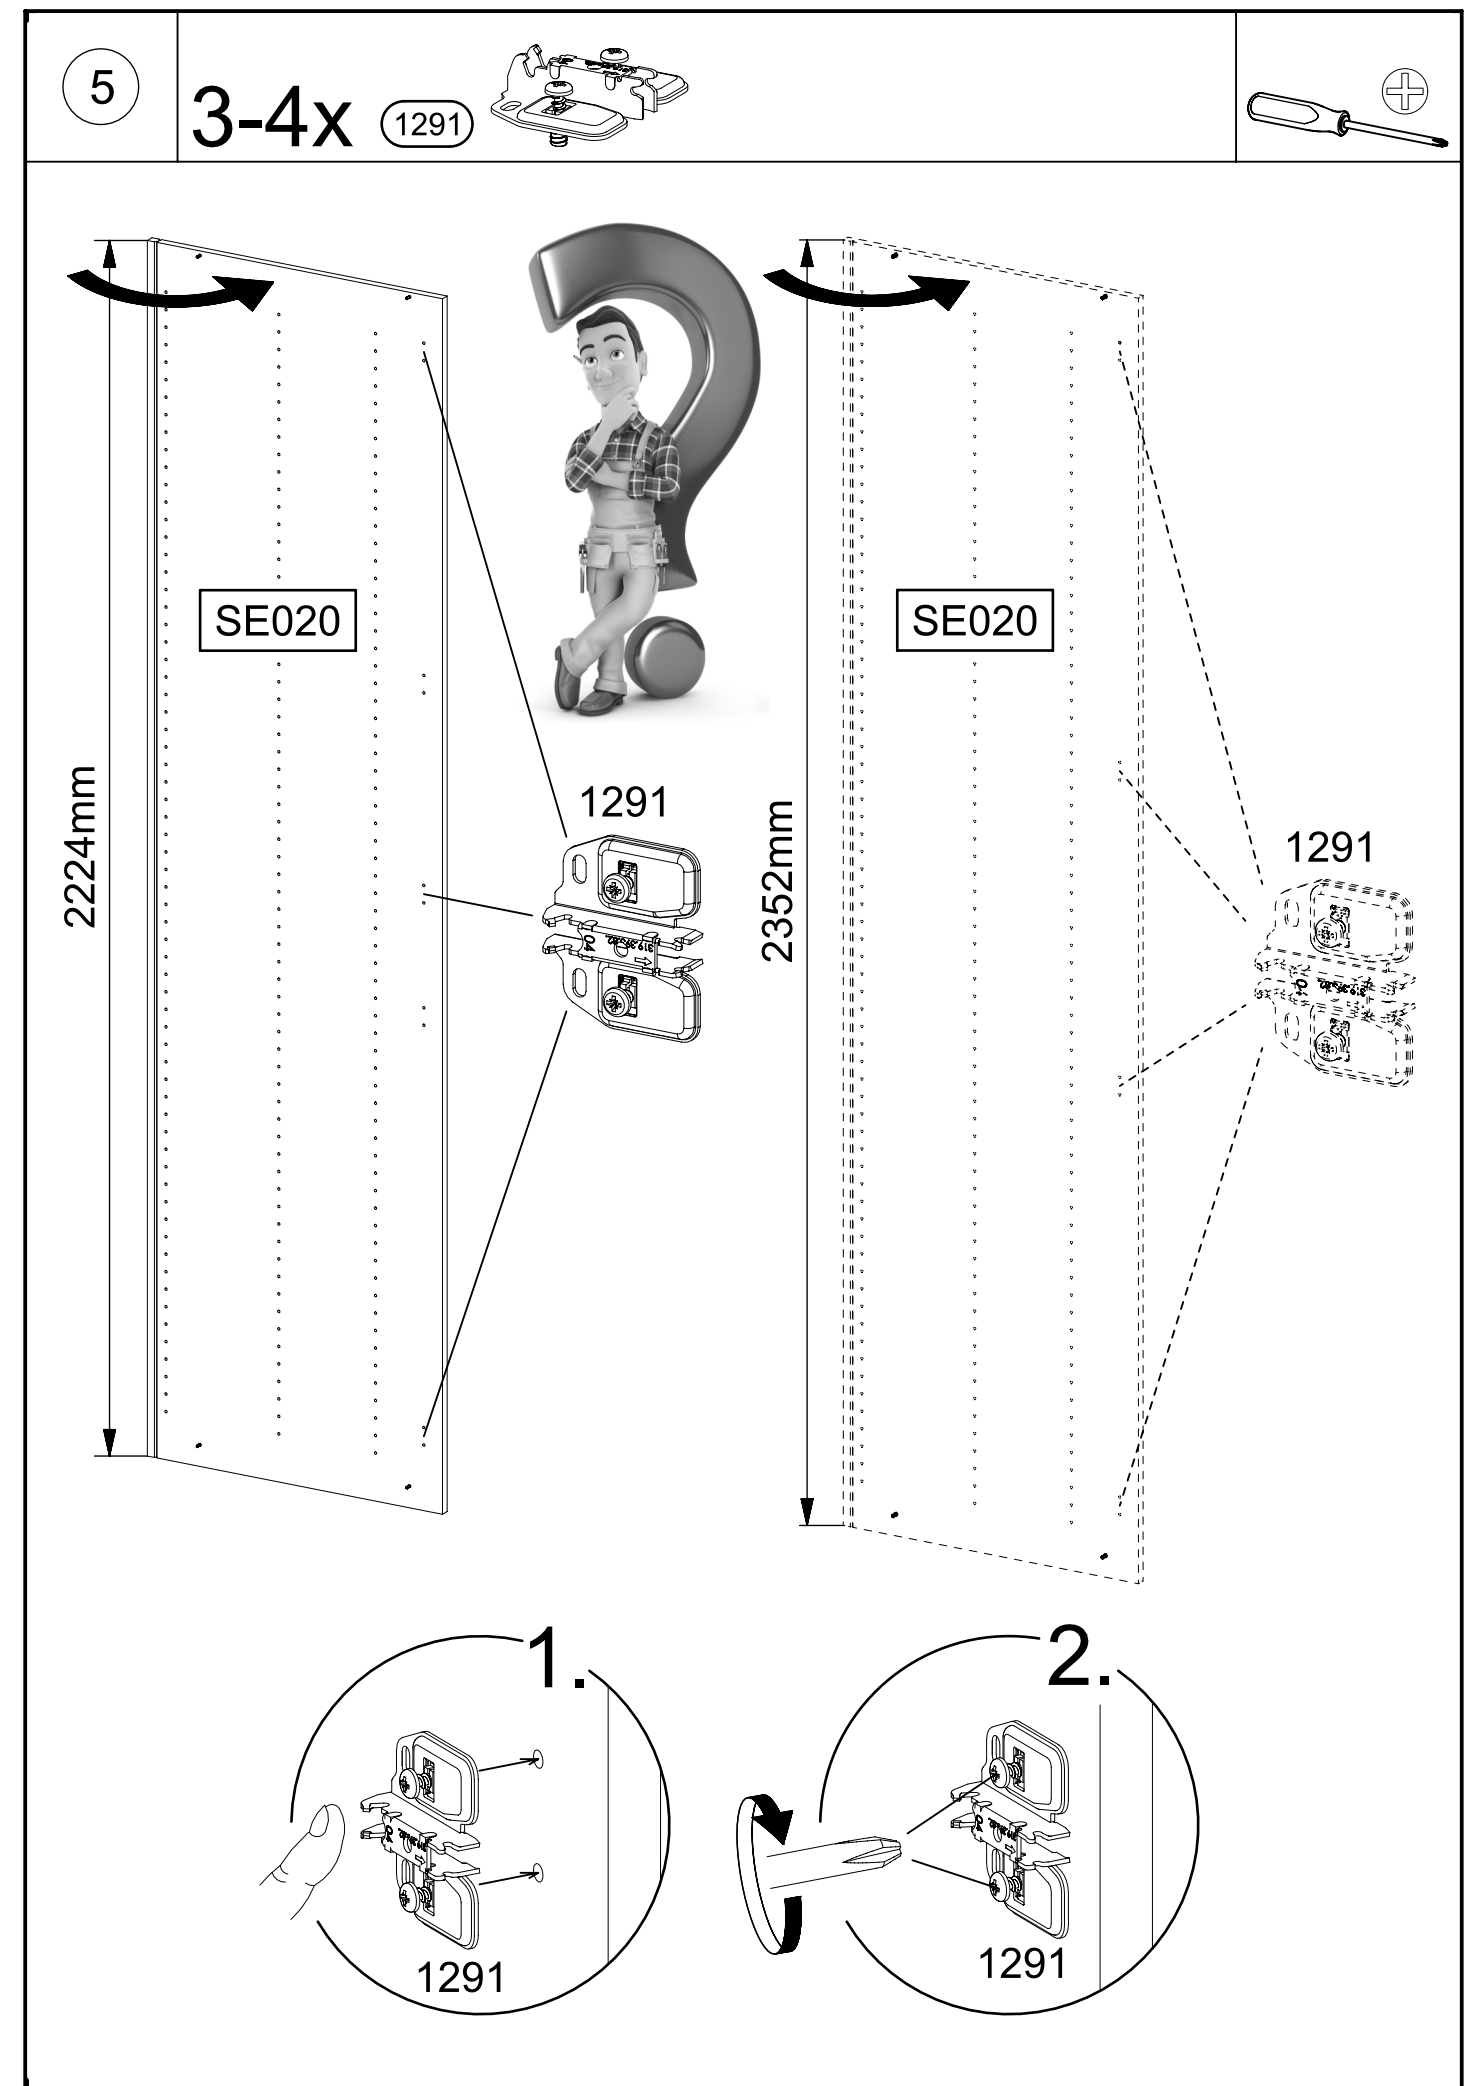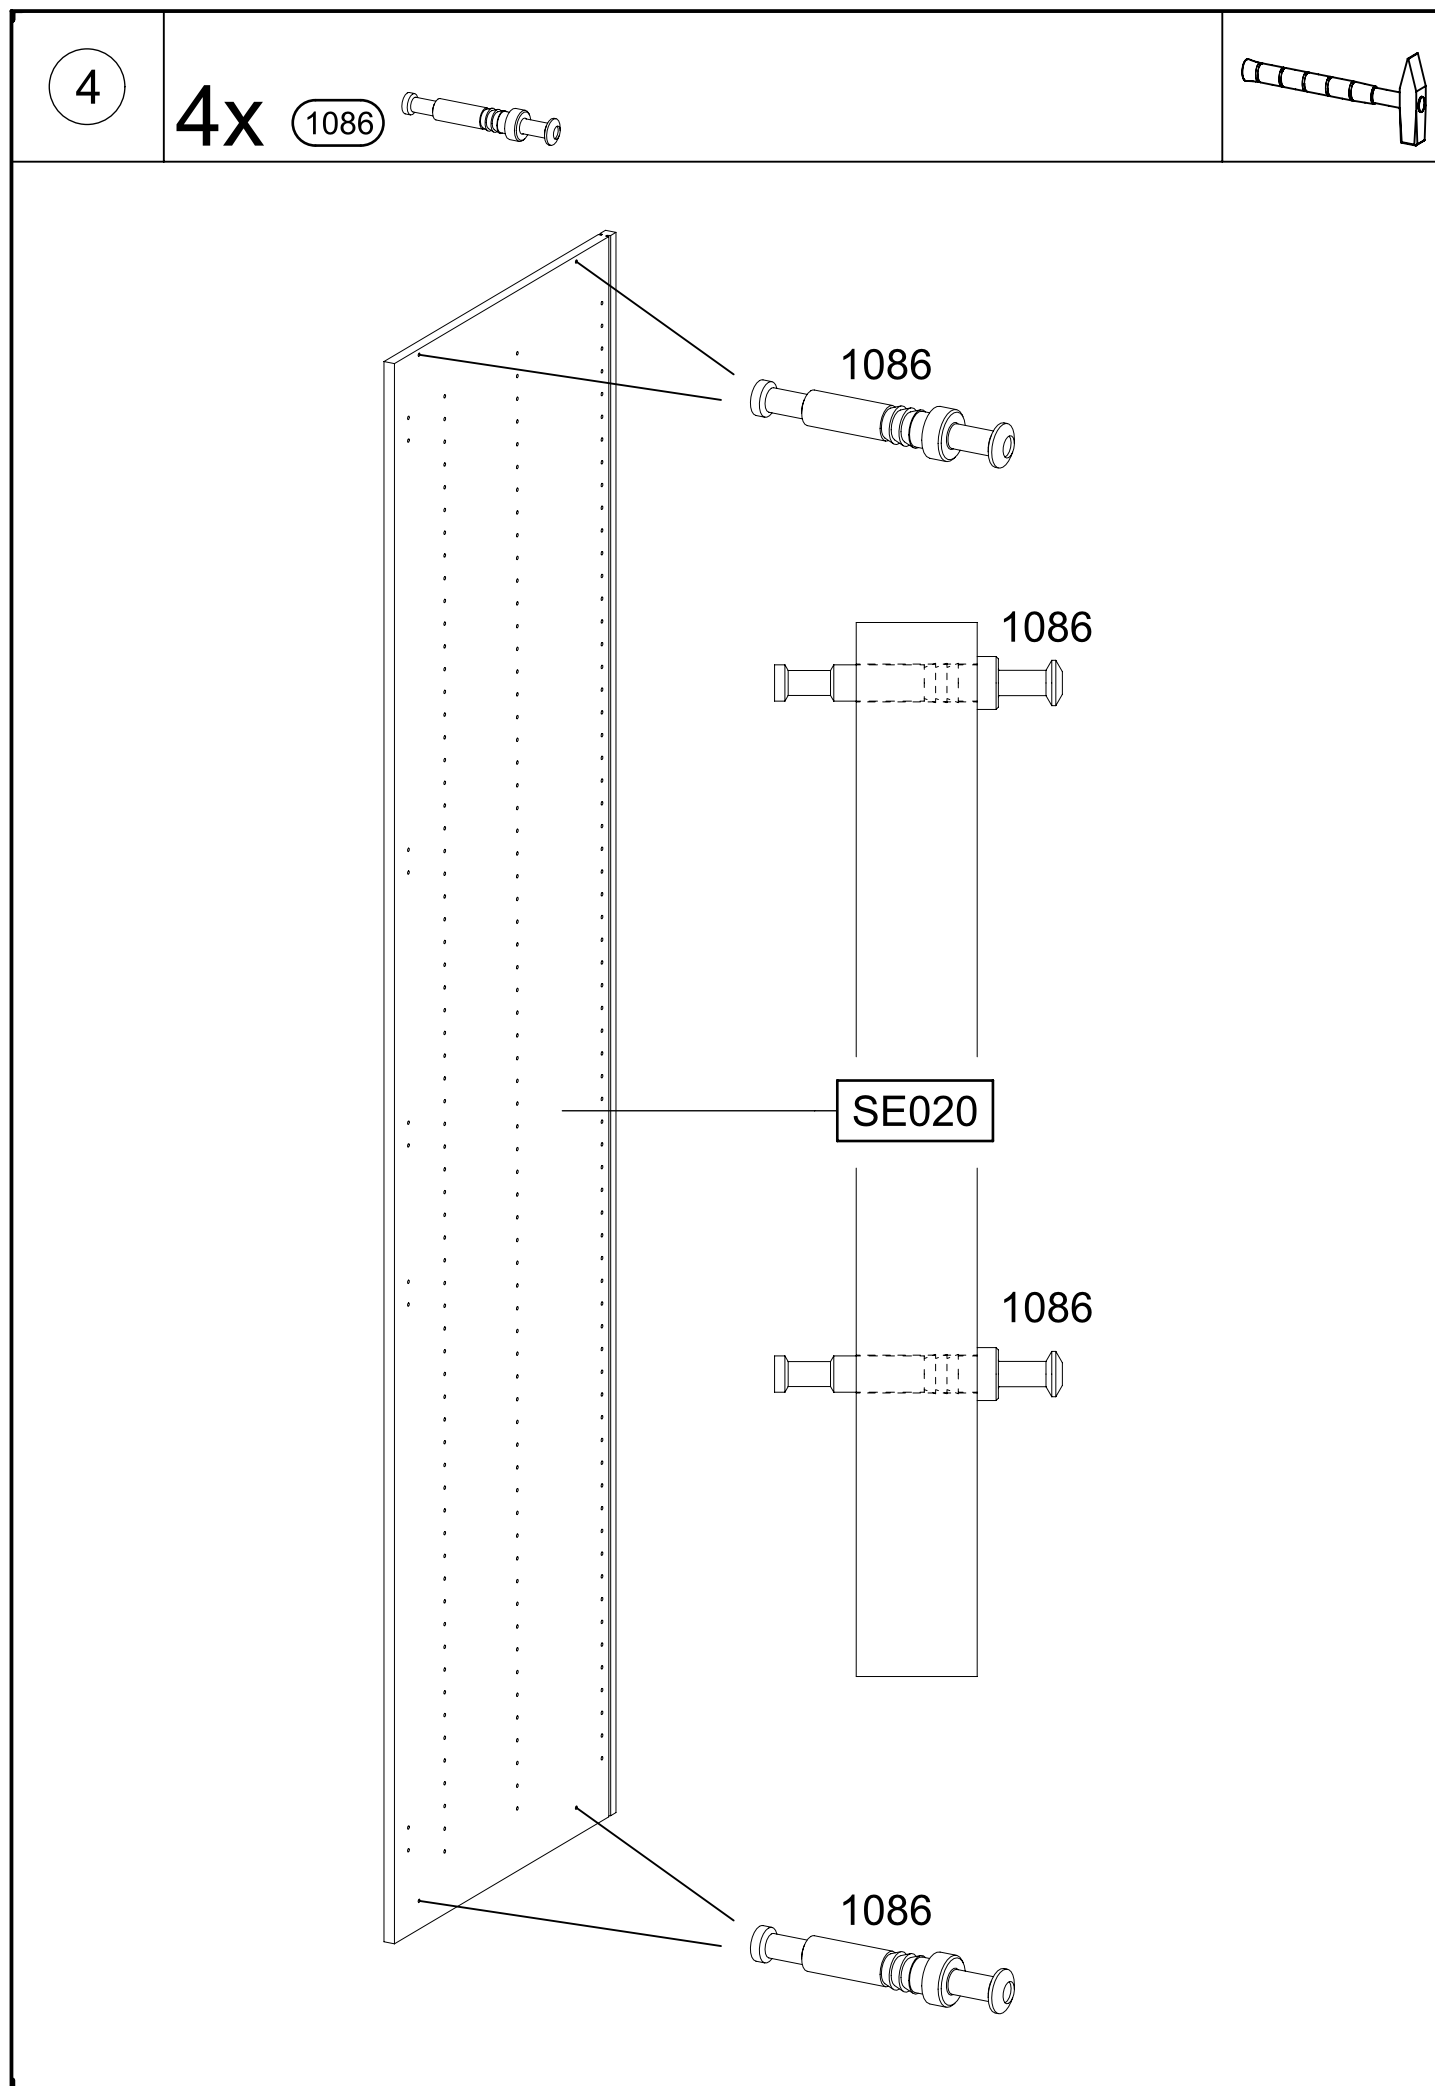

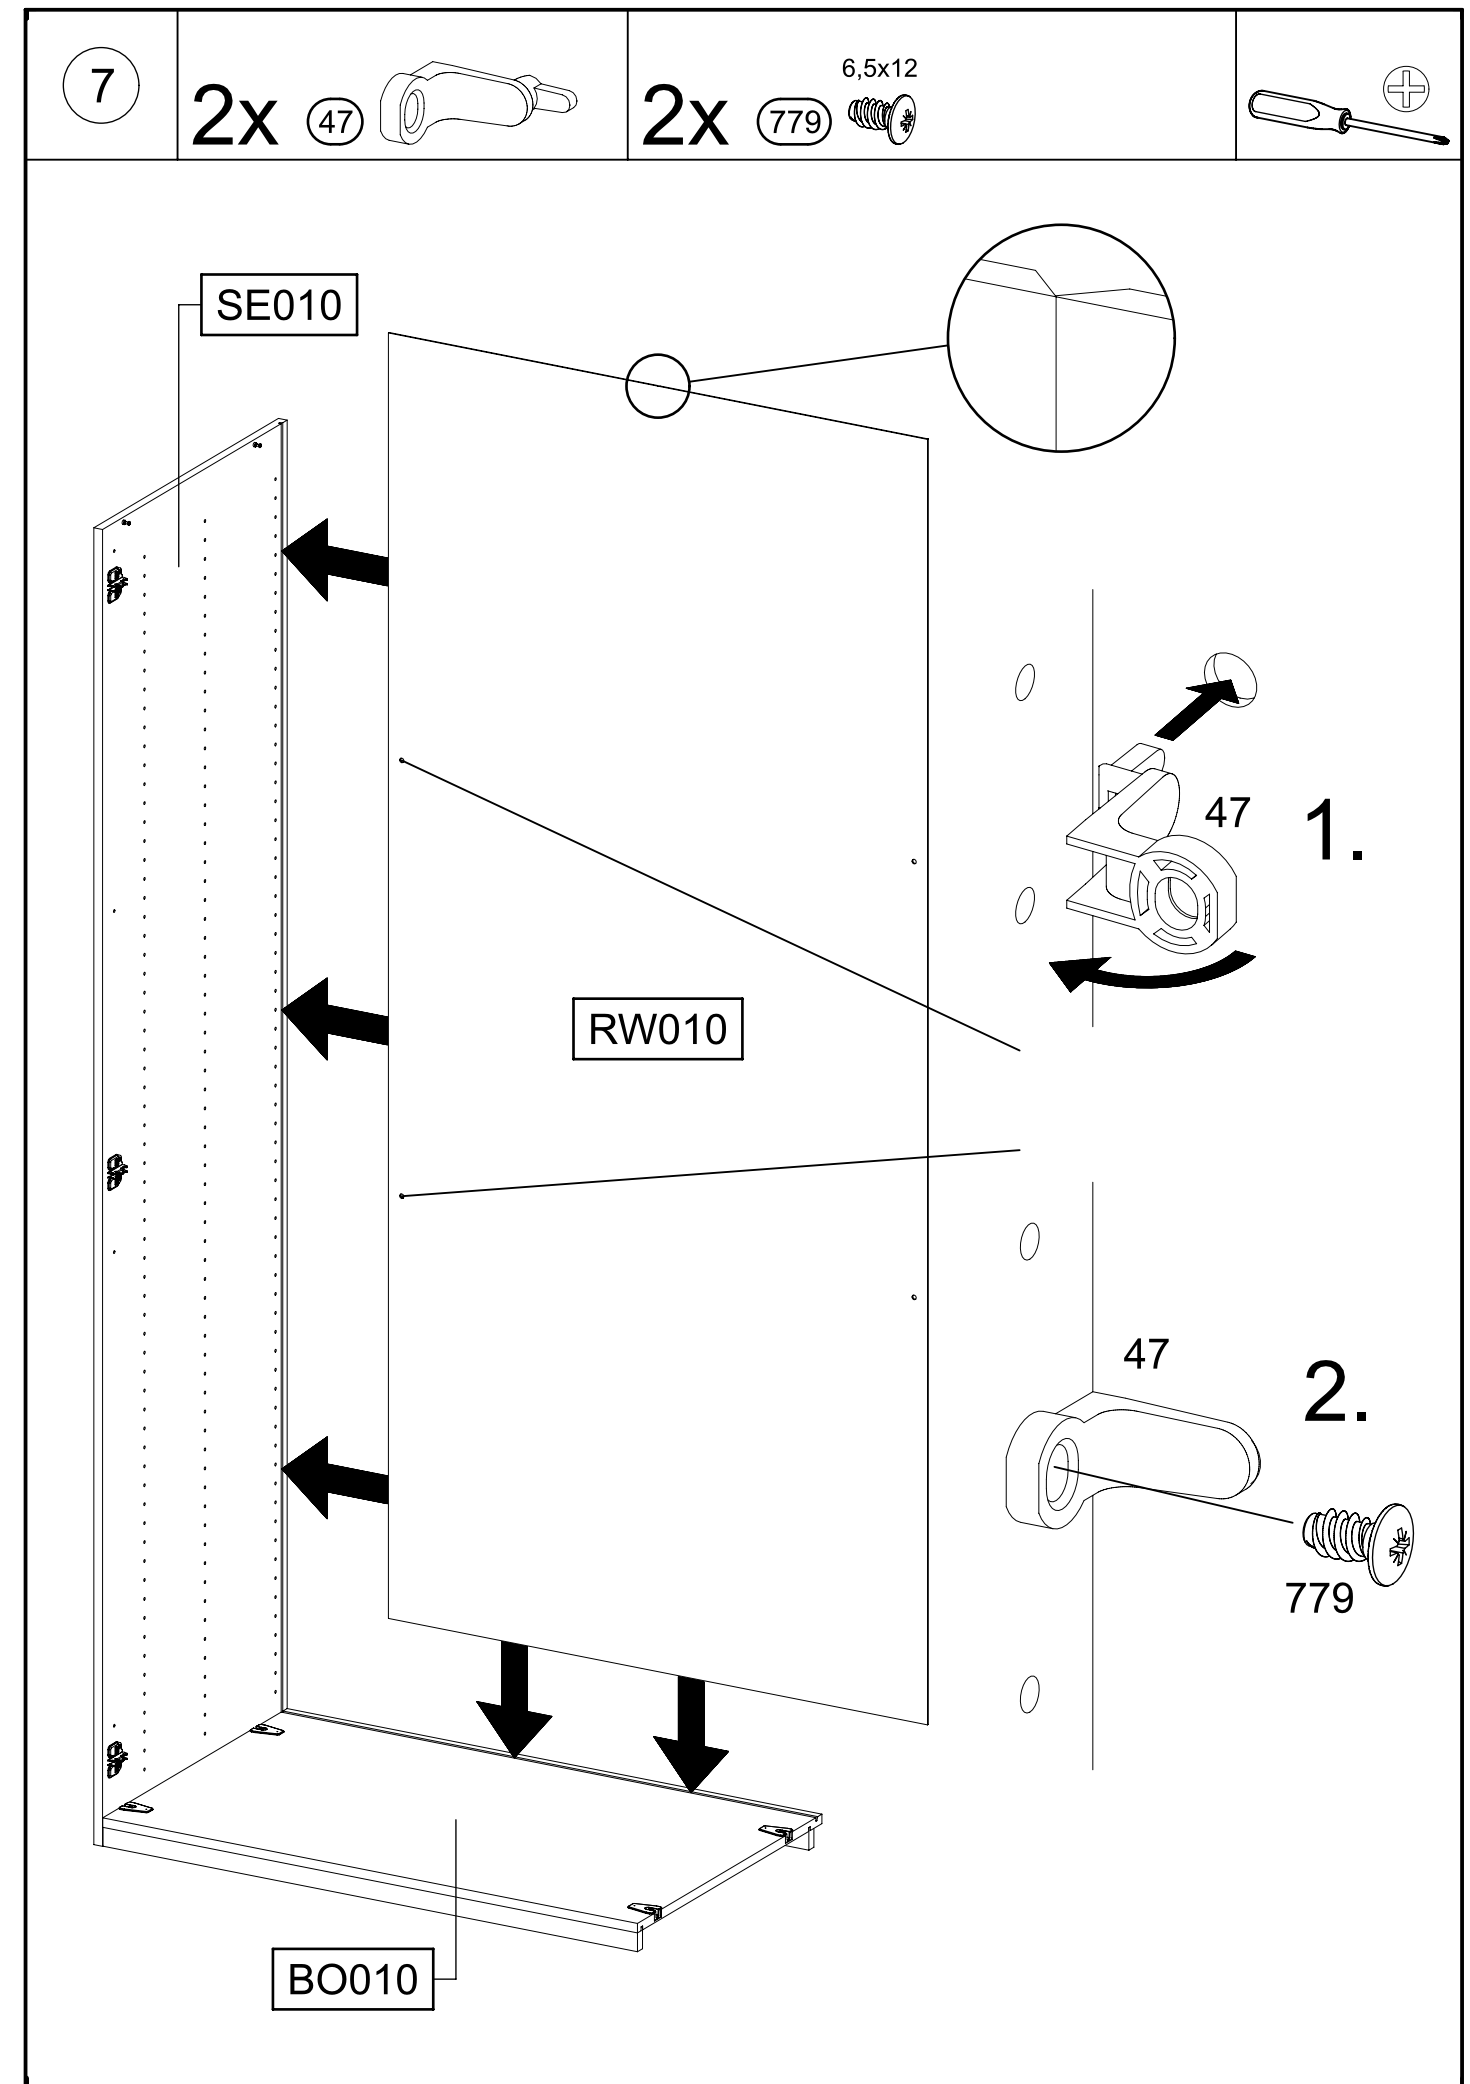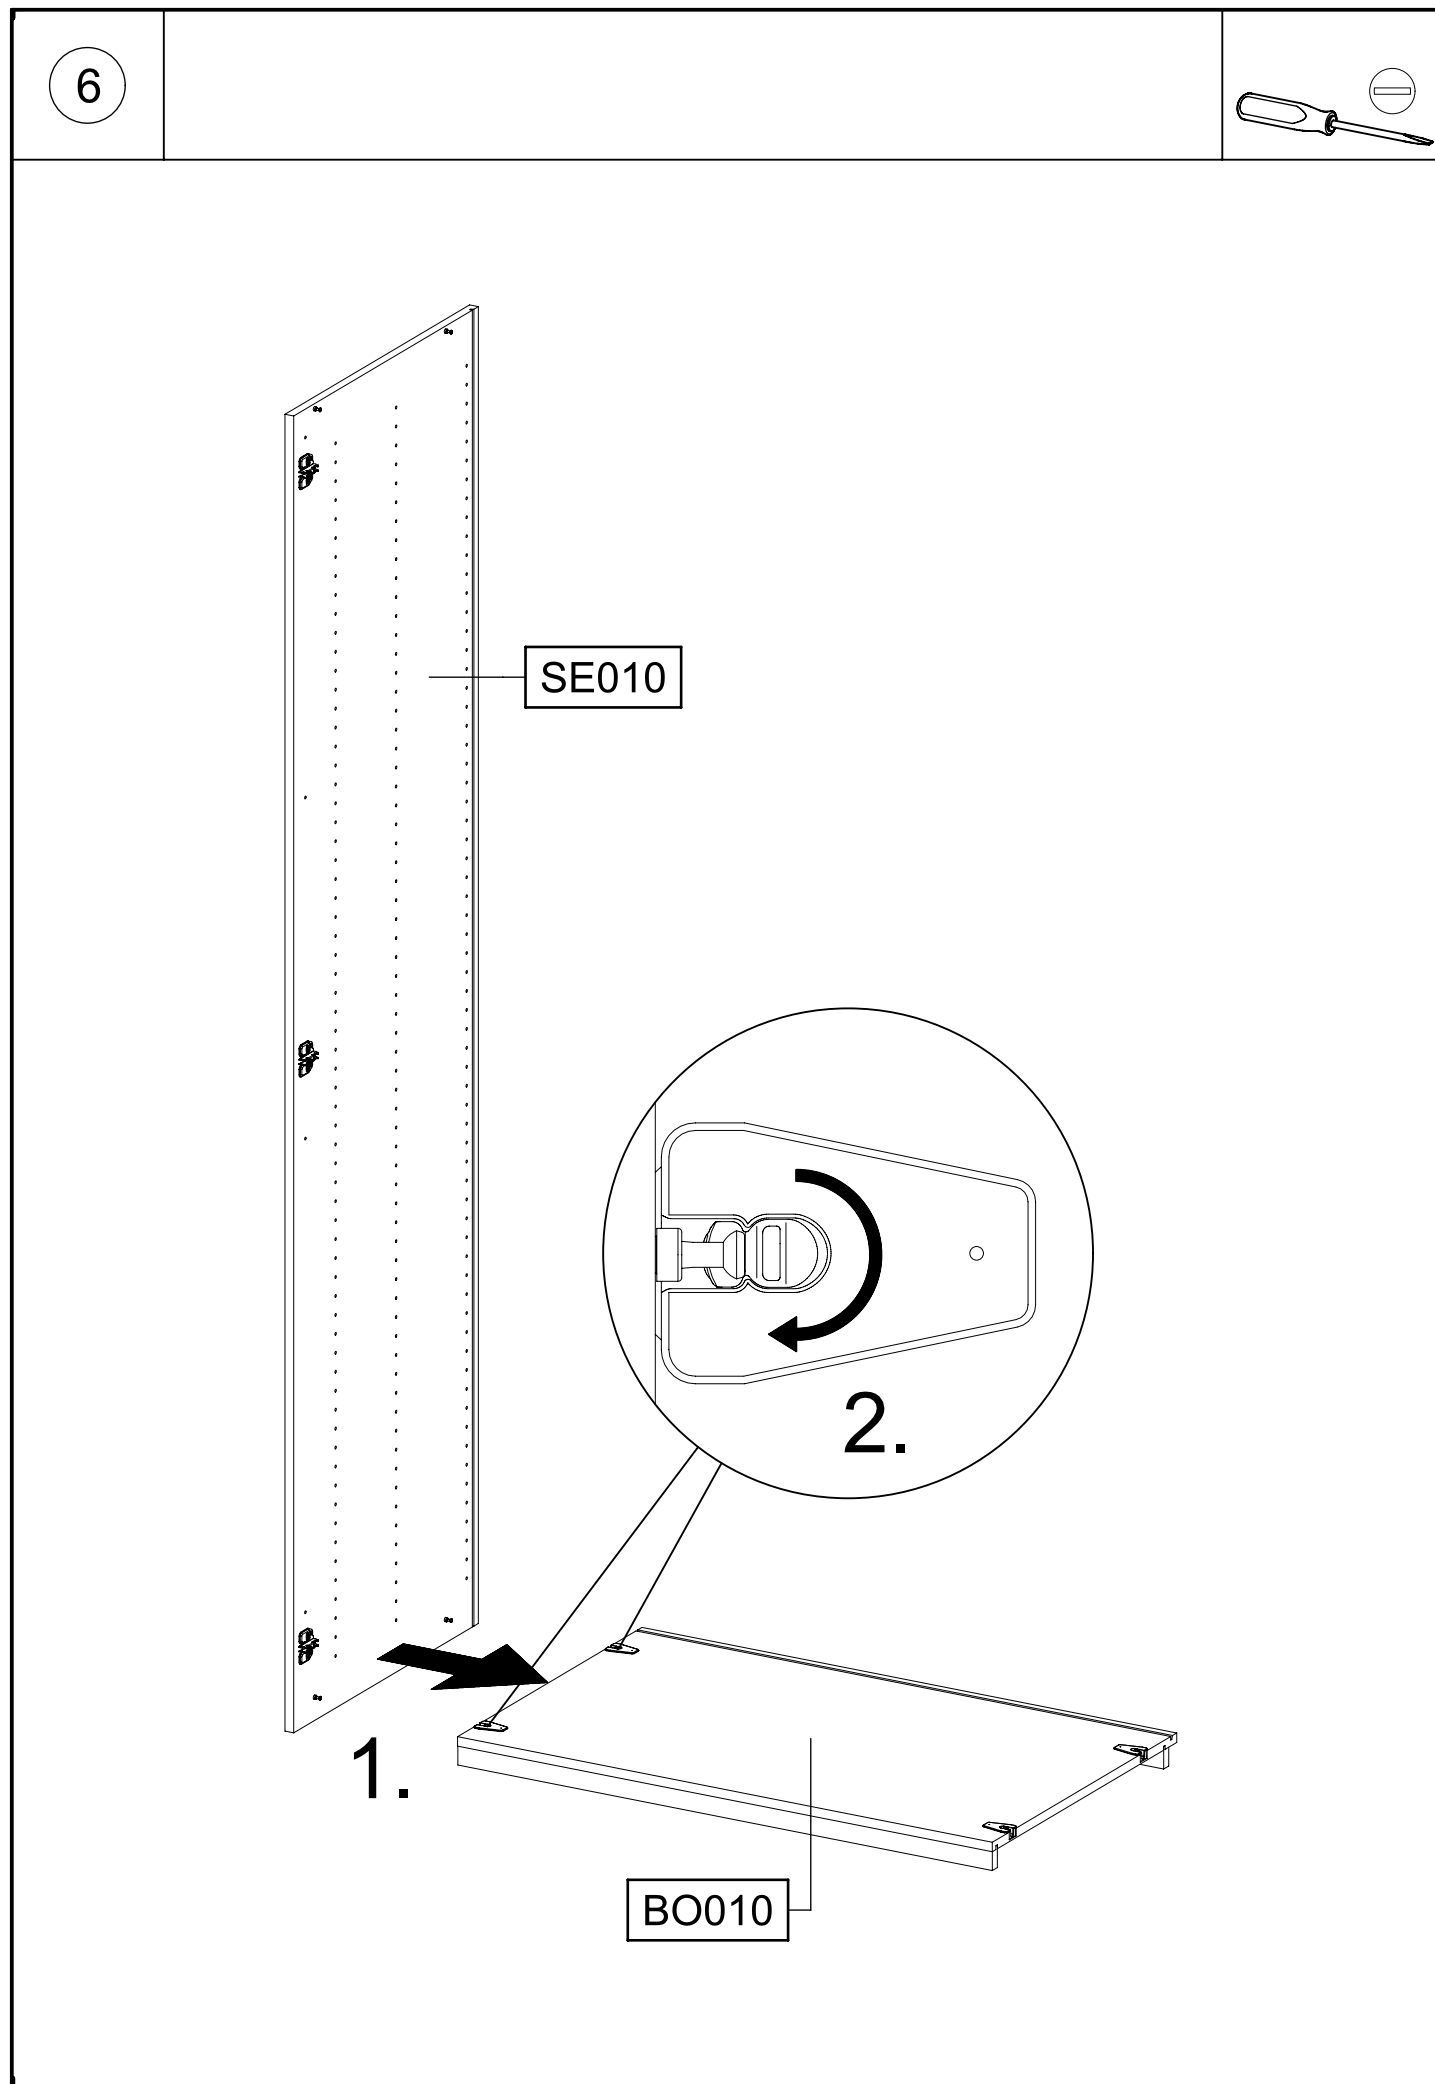


13.

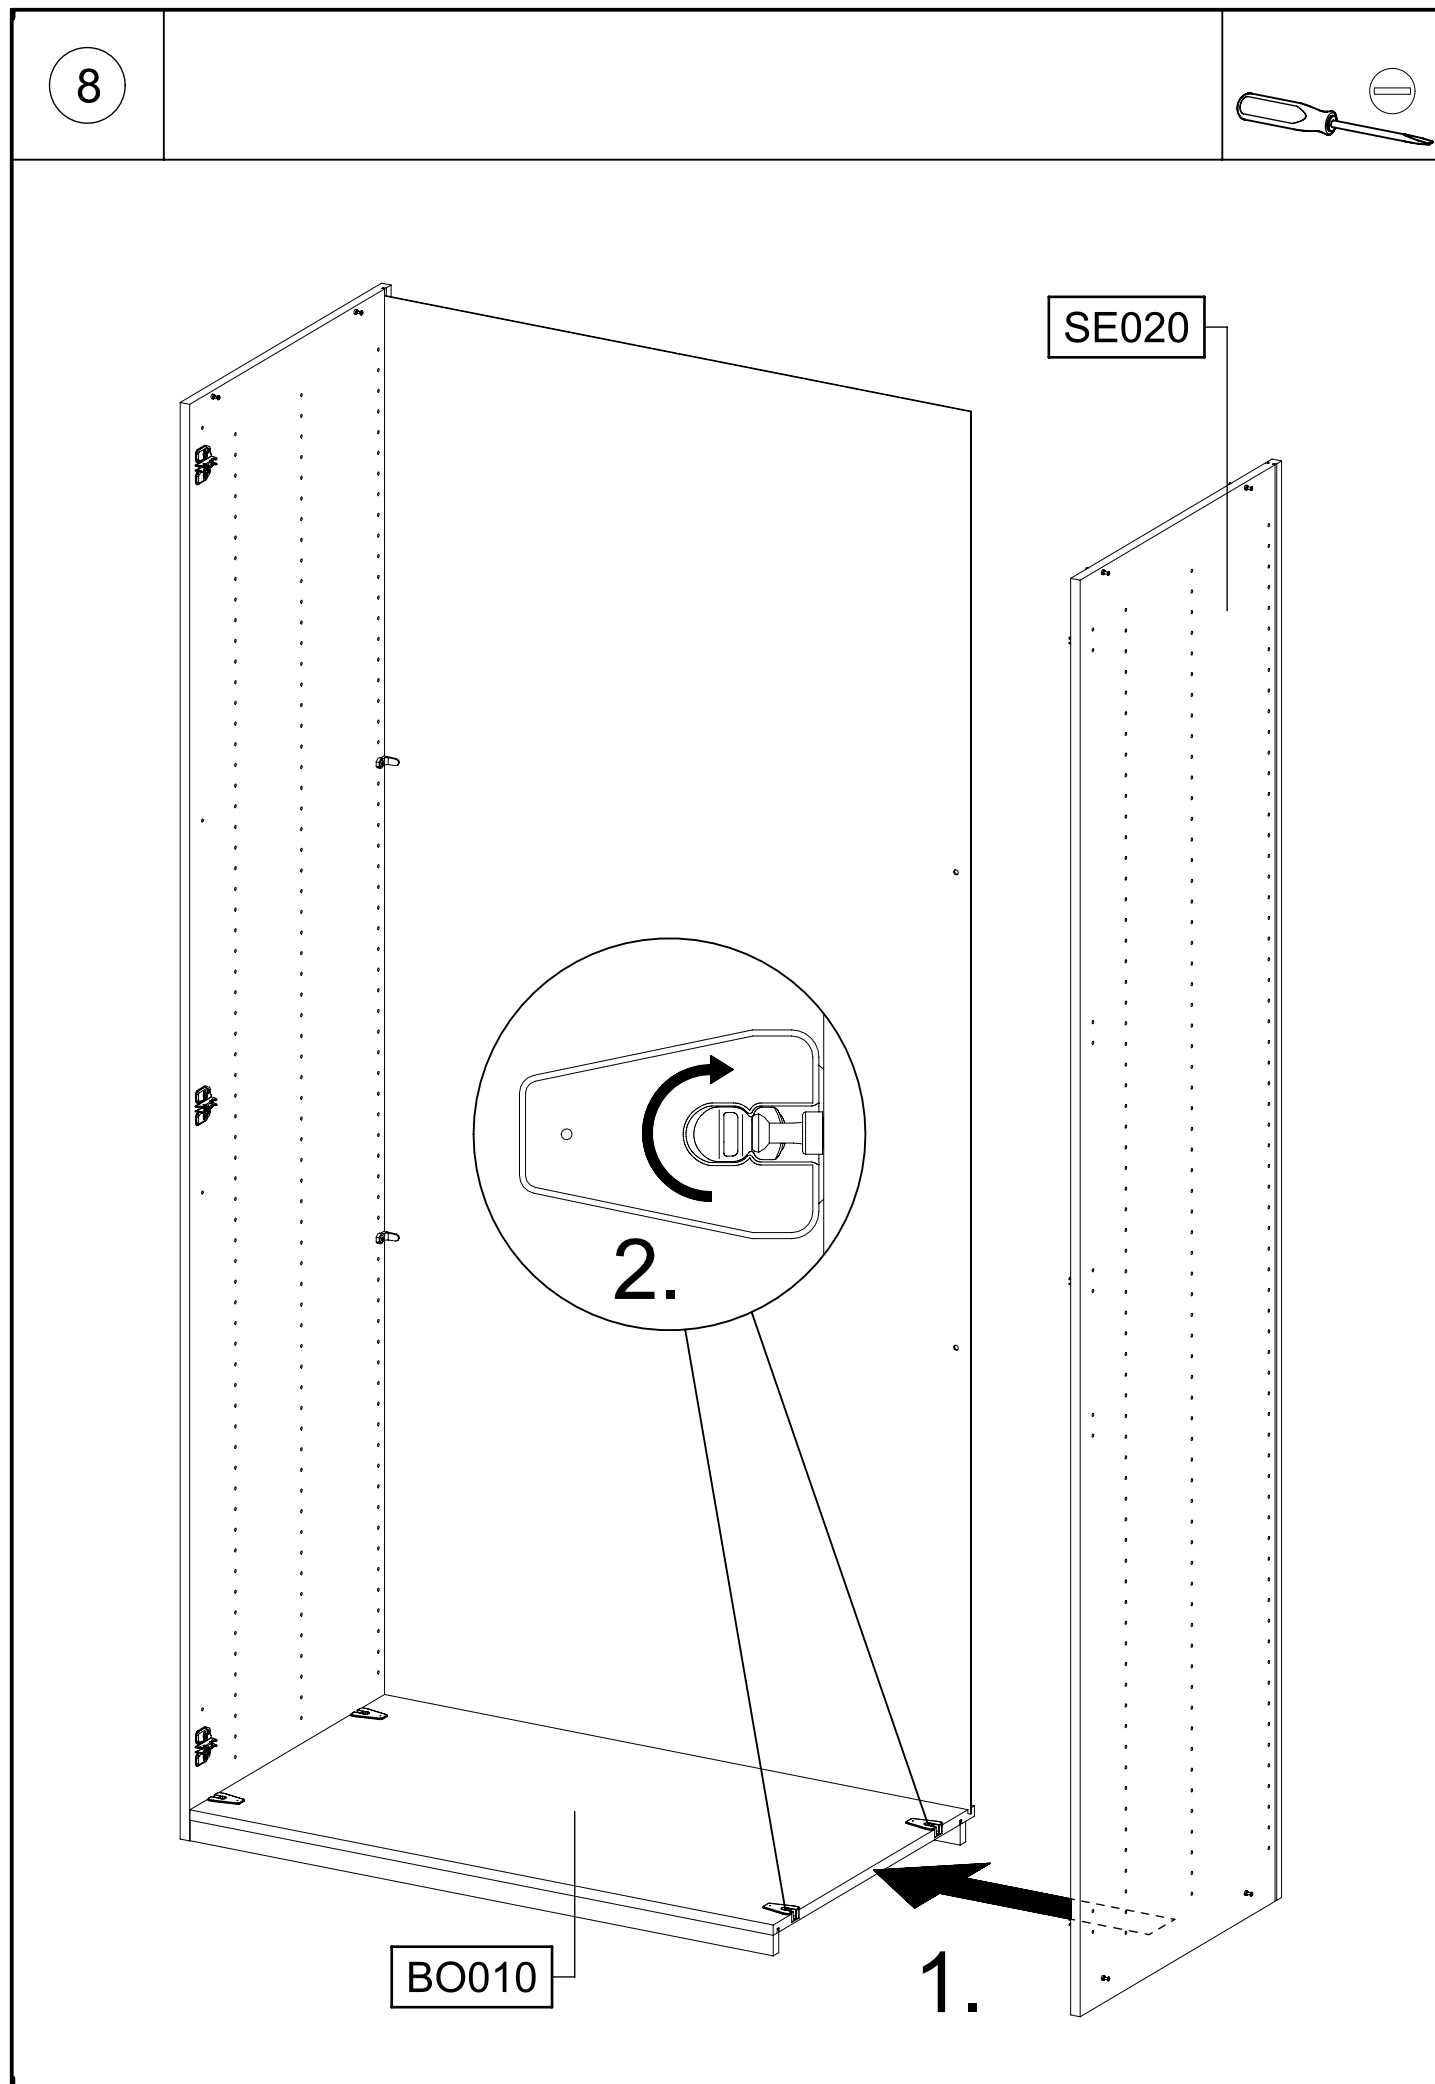


MD162

14.

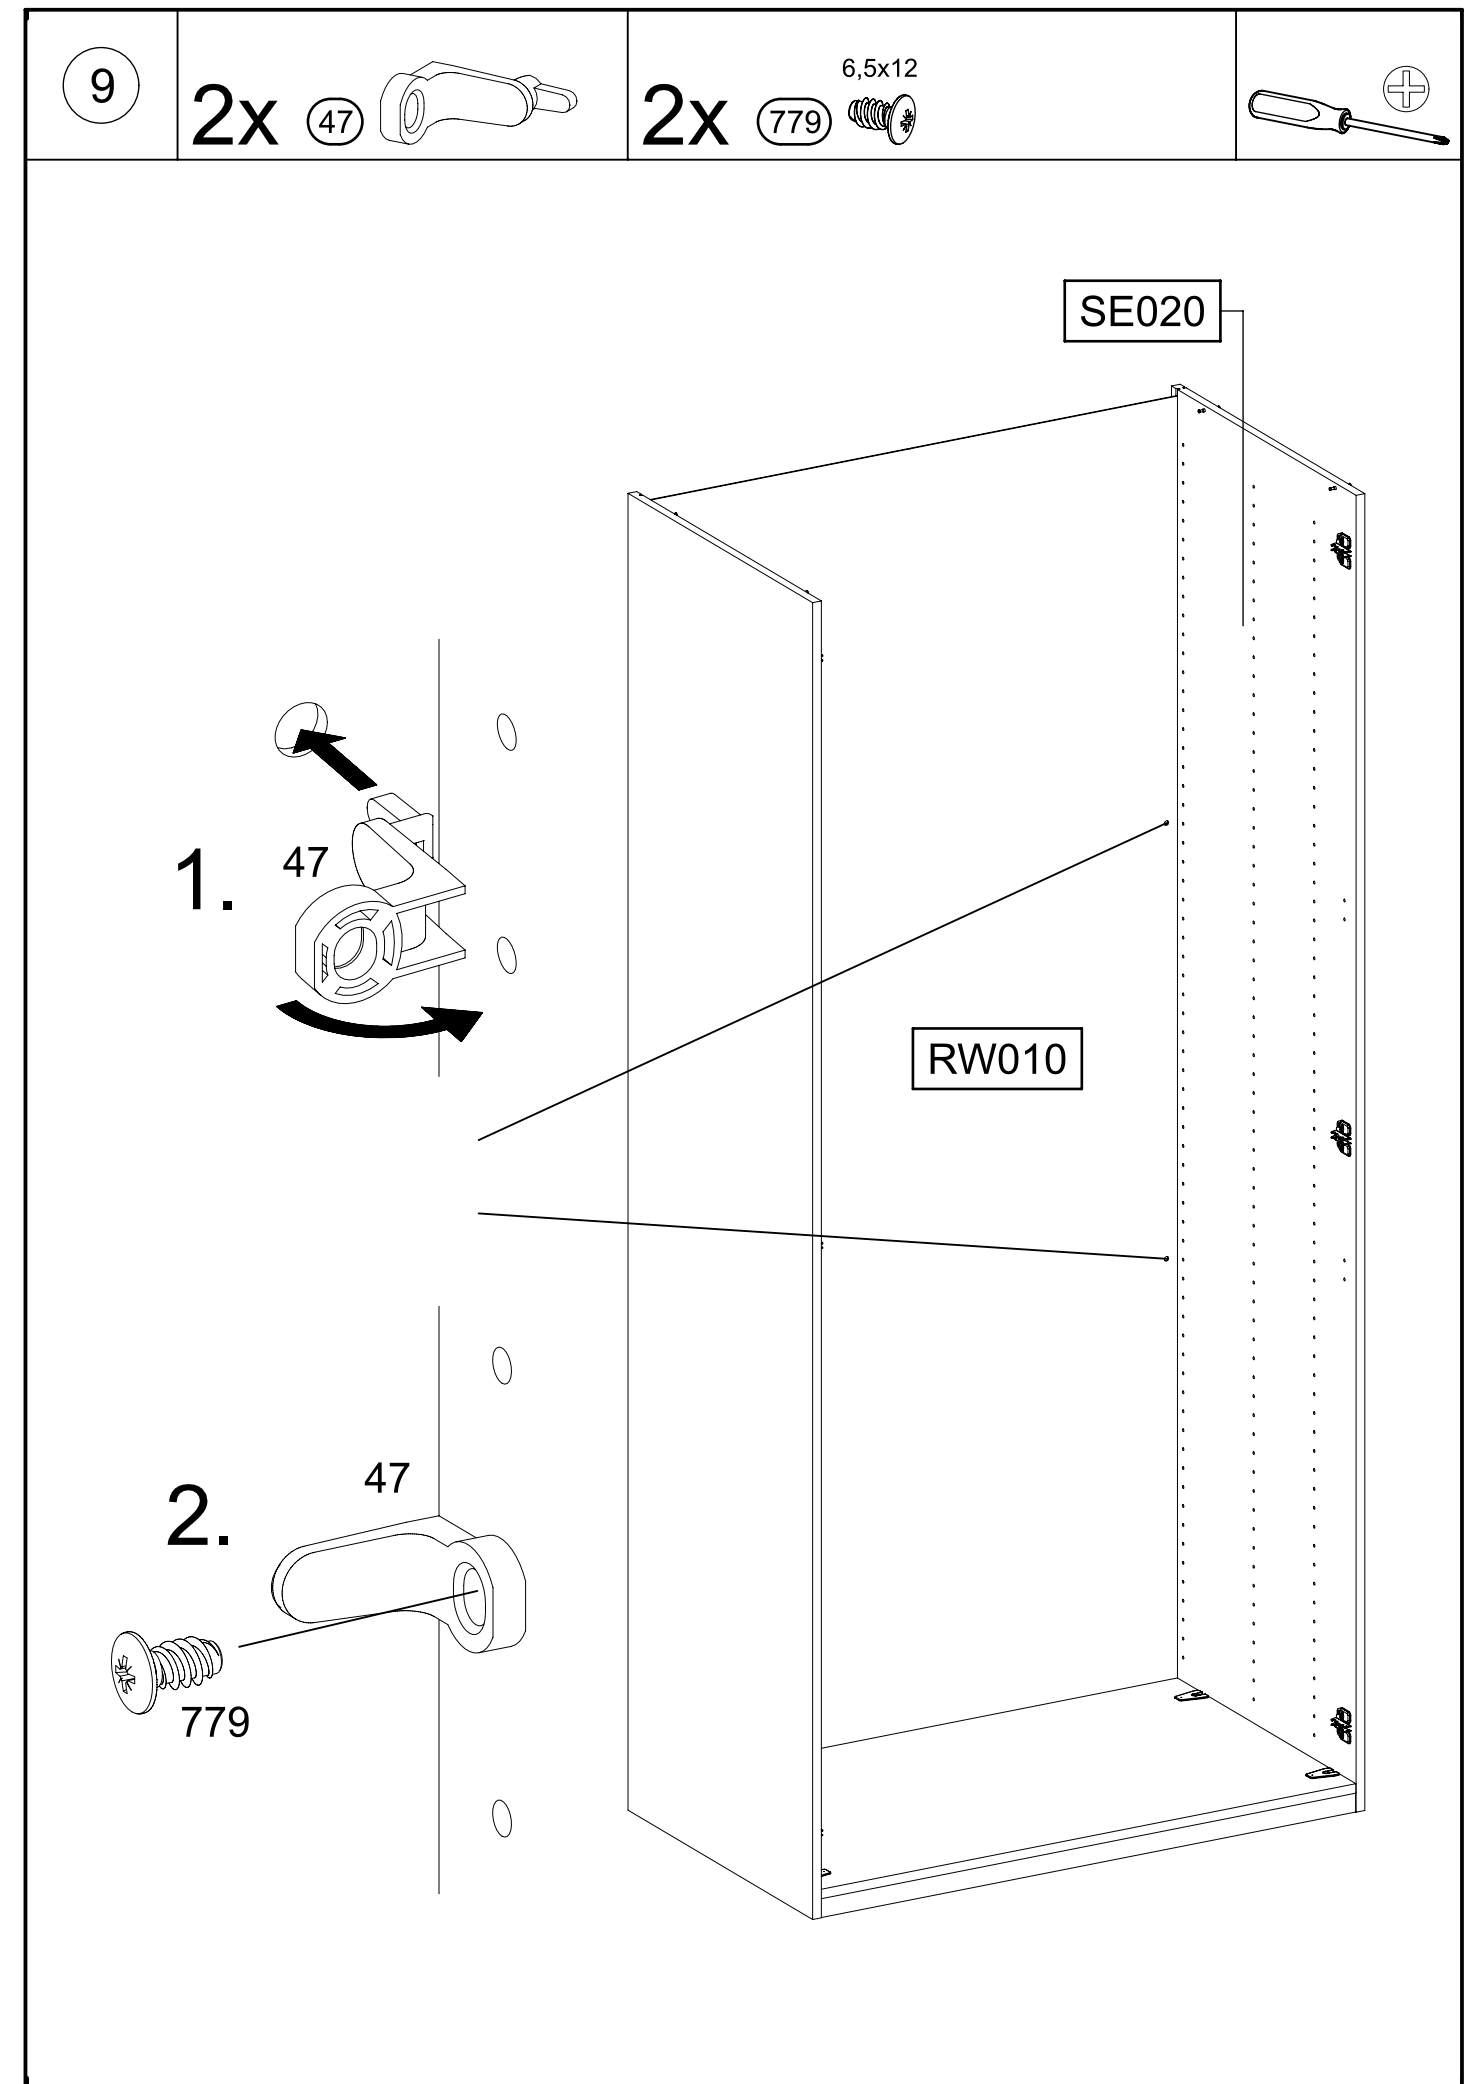


MD162

15.

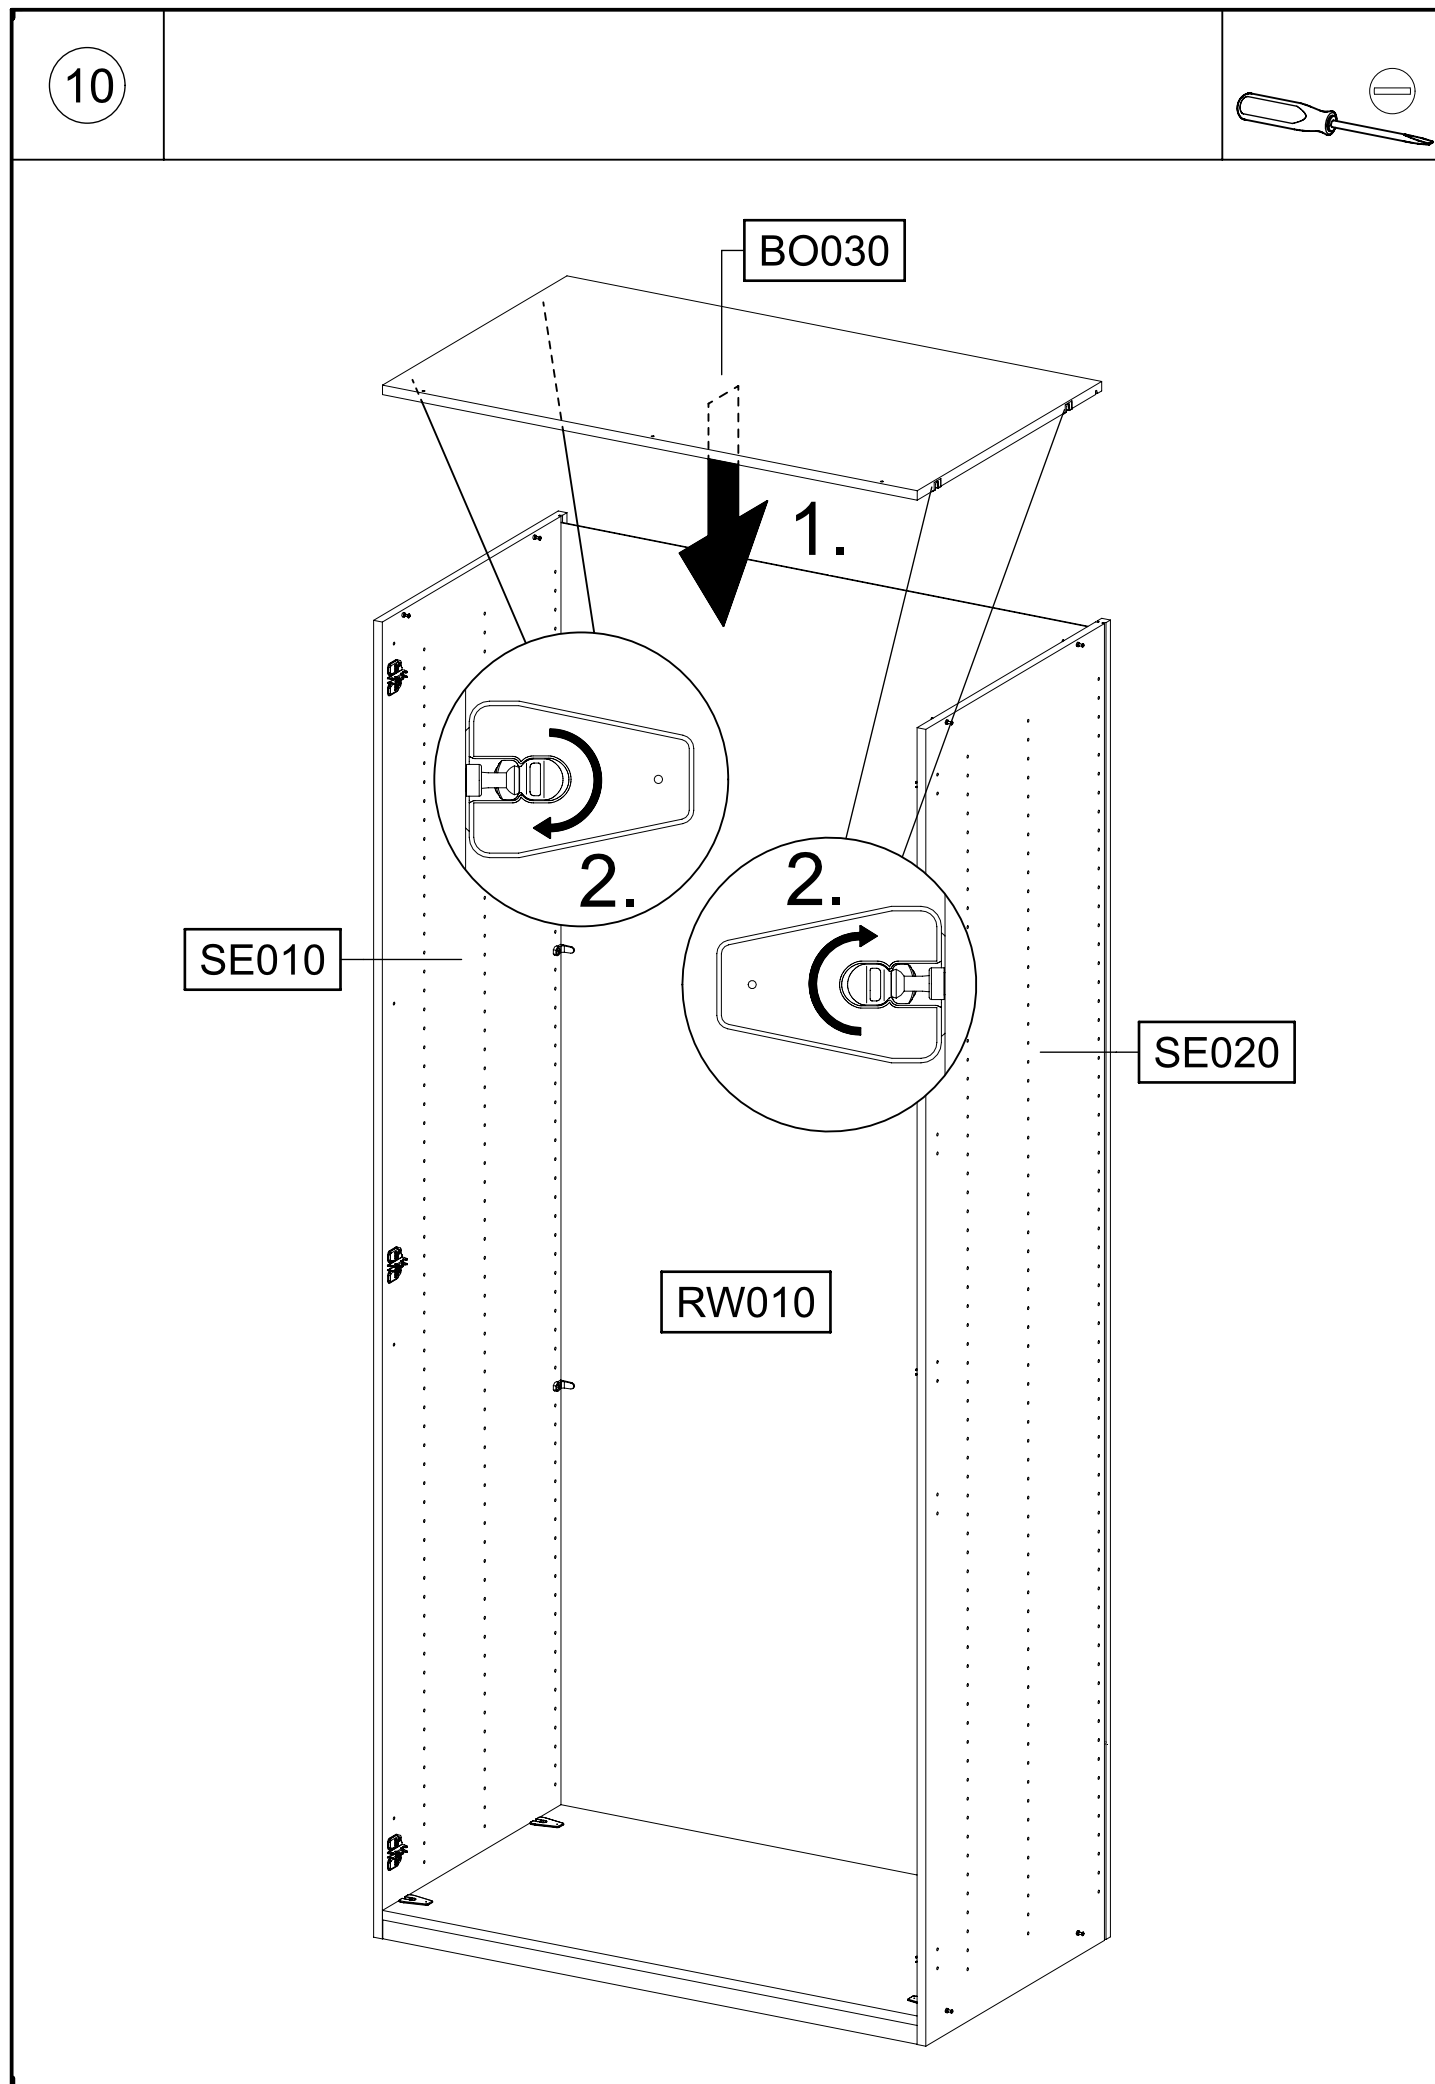


MD162

16.

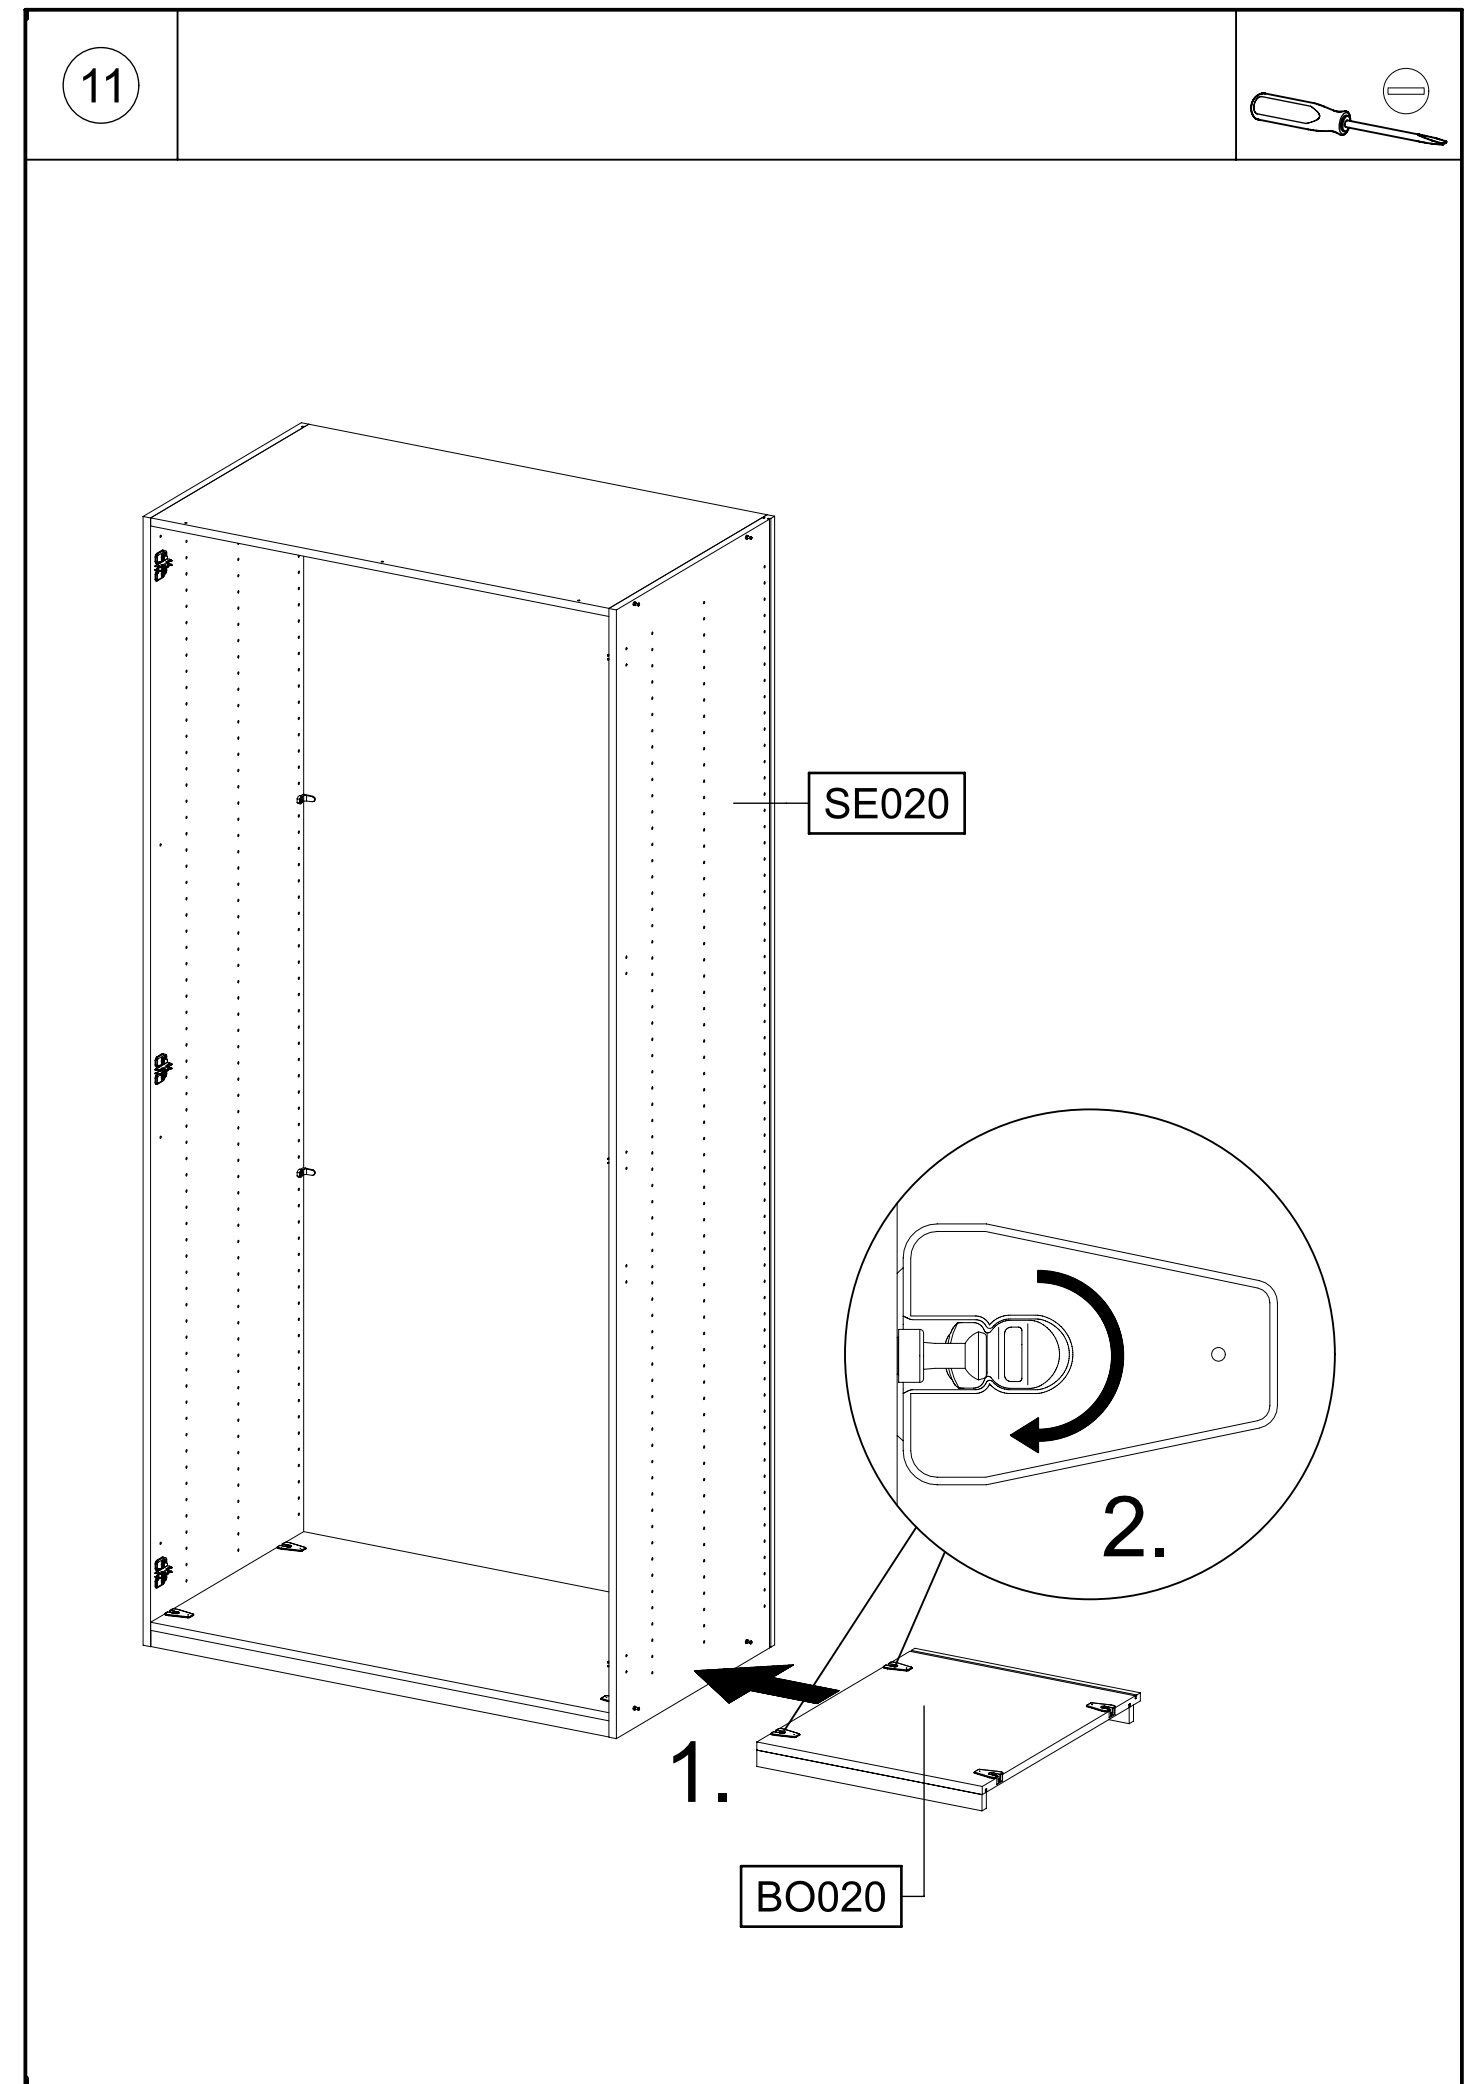


MD162

17.

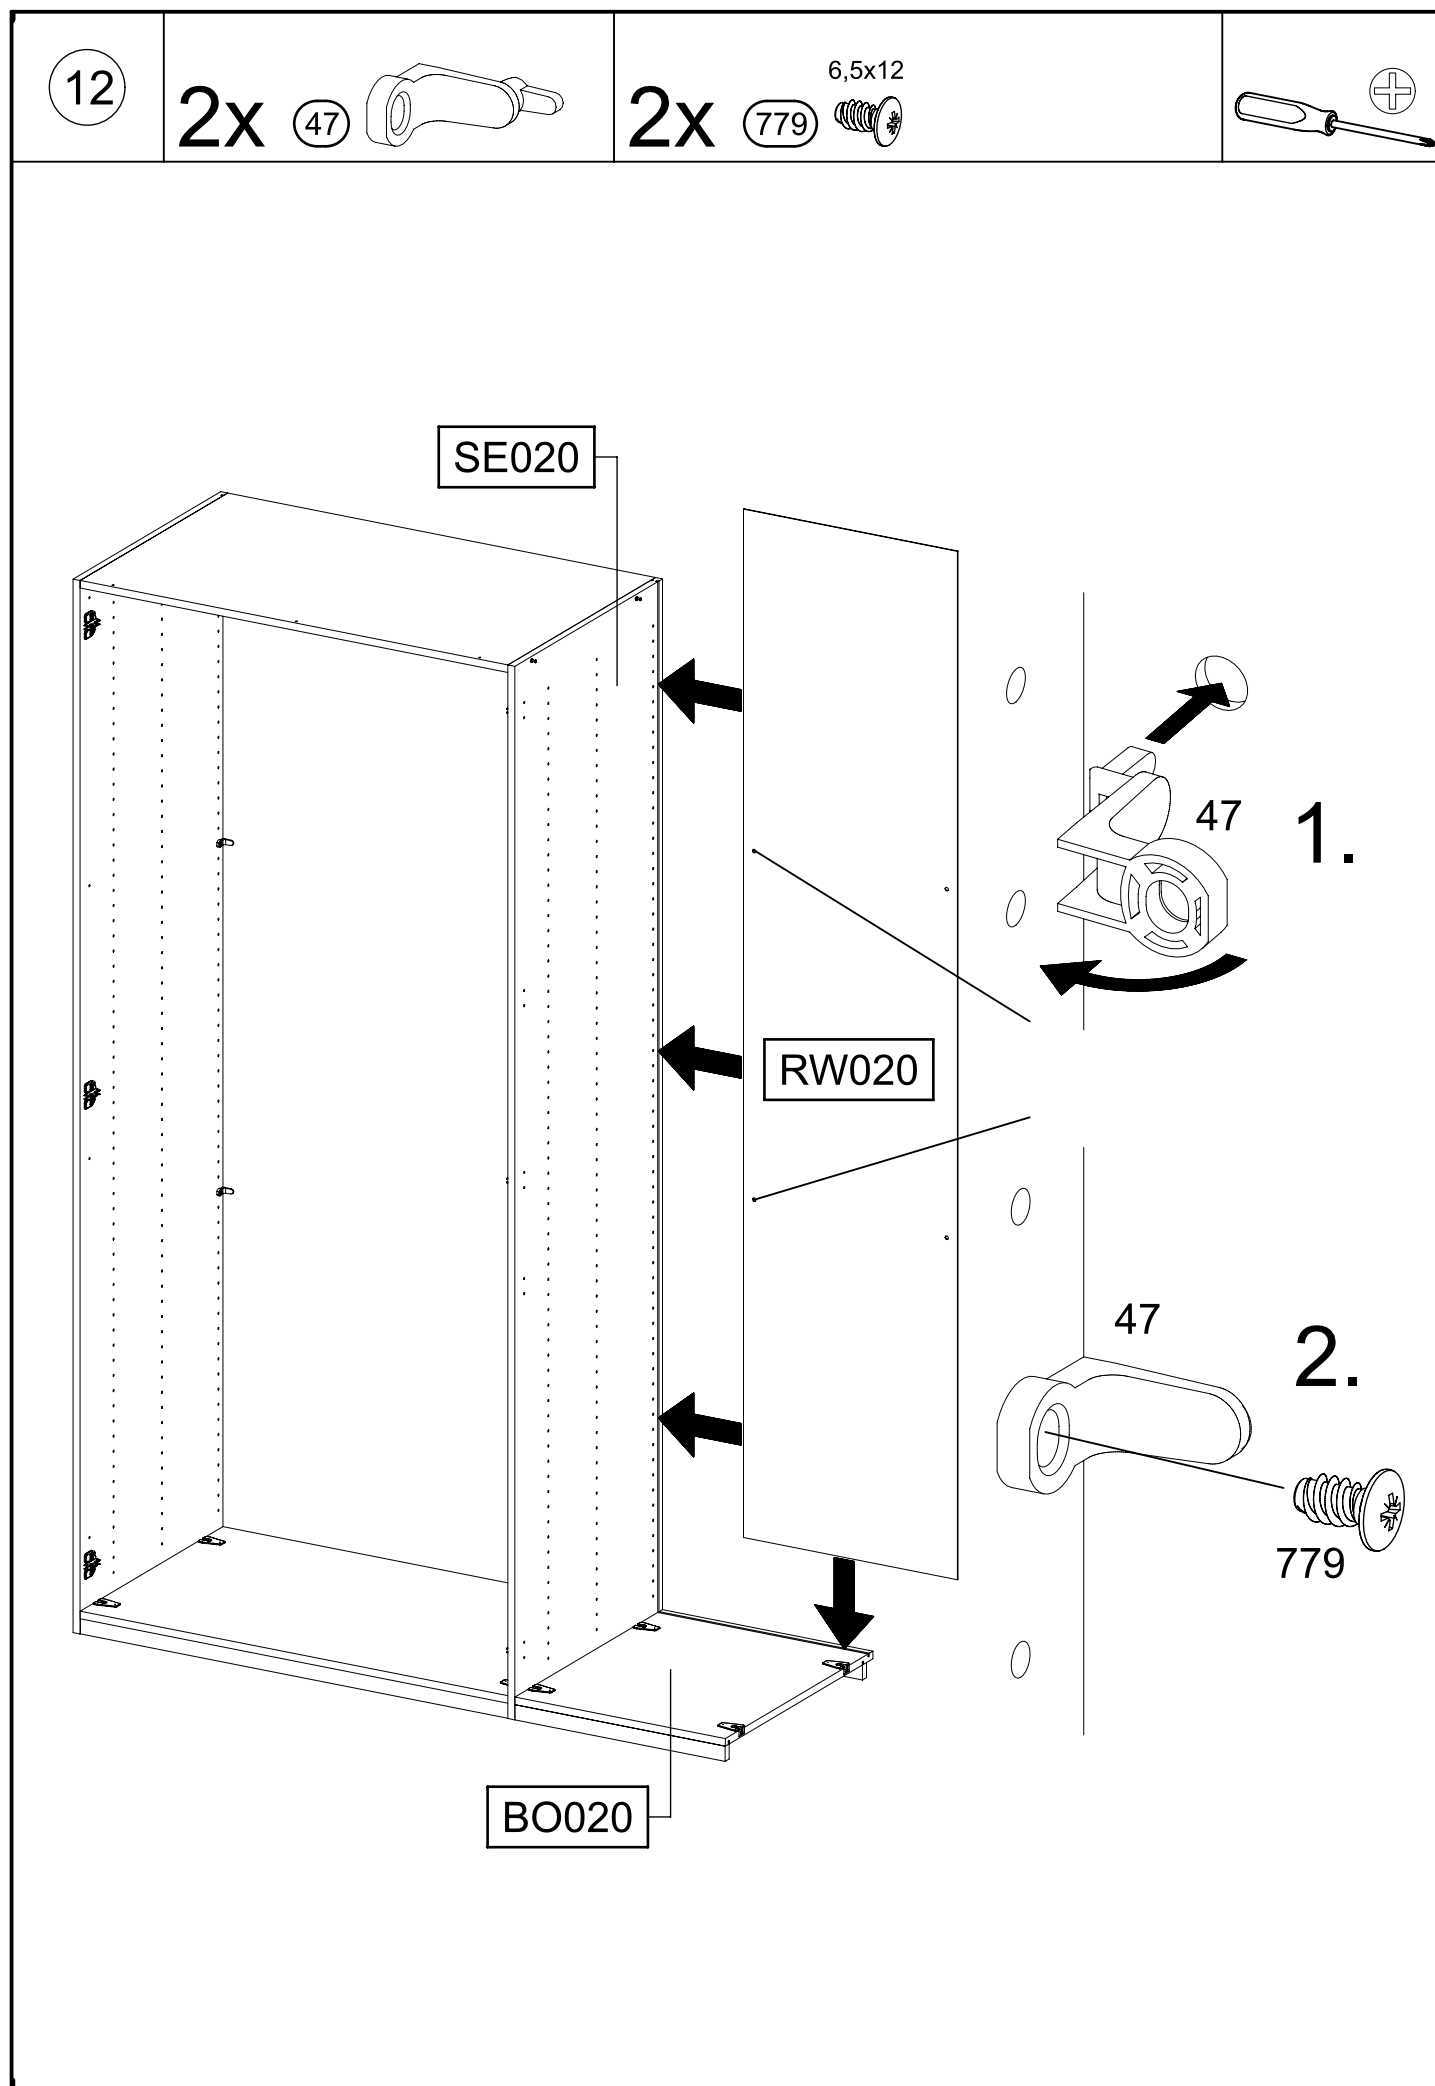


MD162

18.

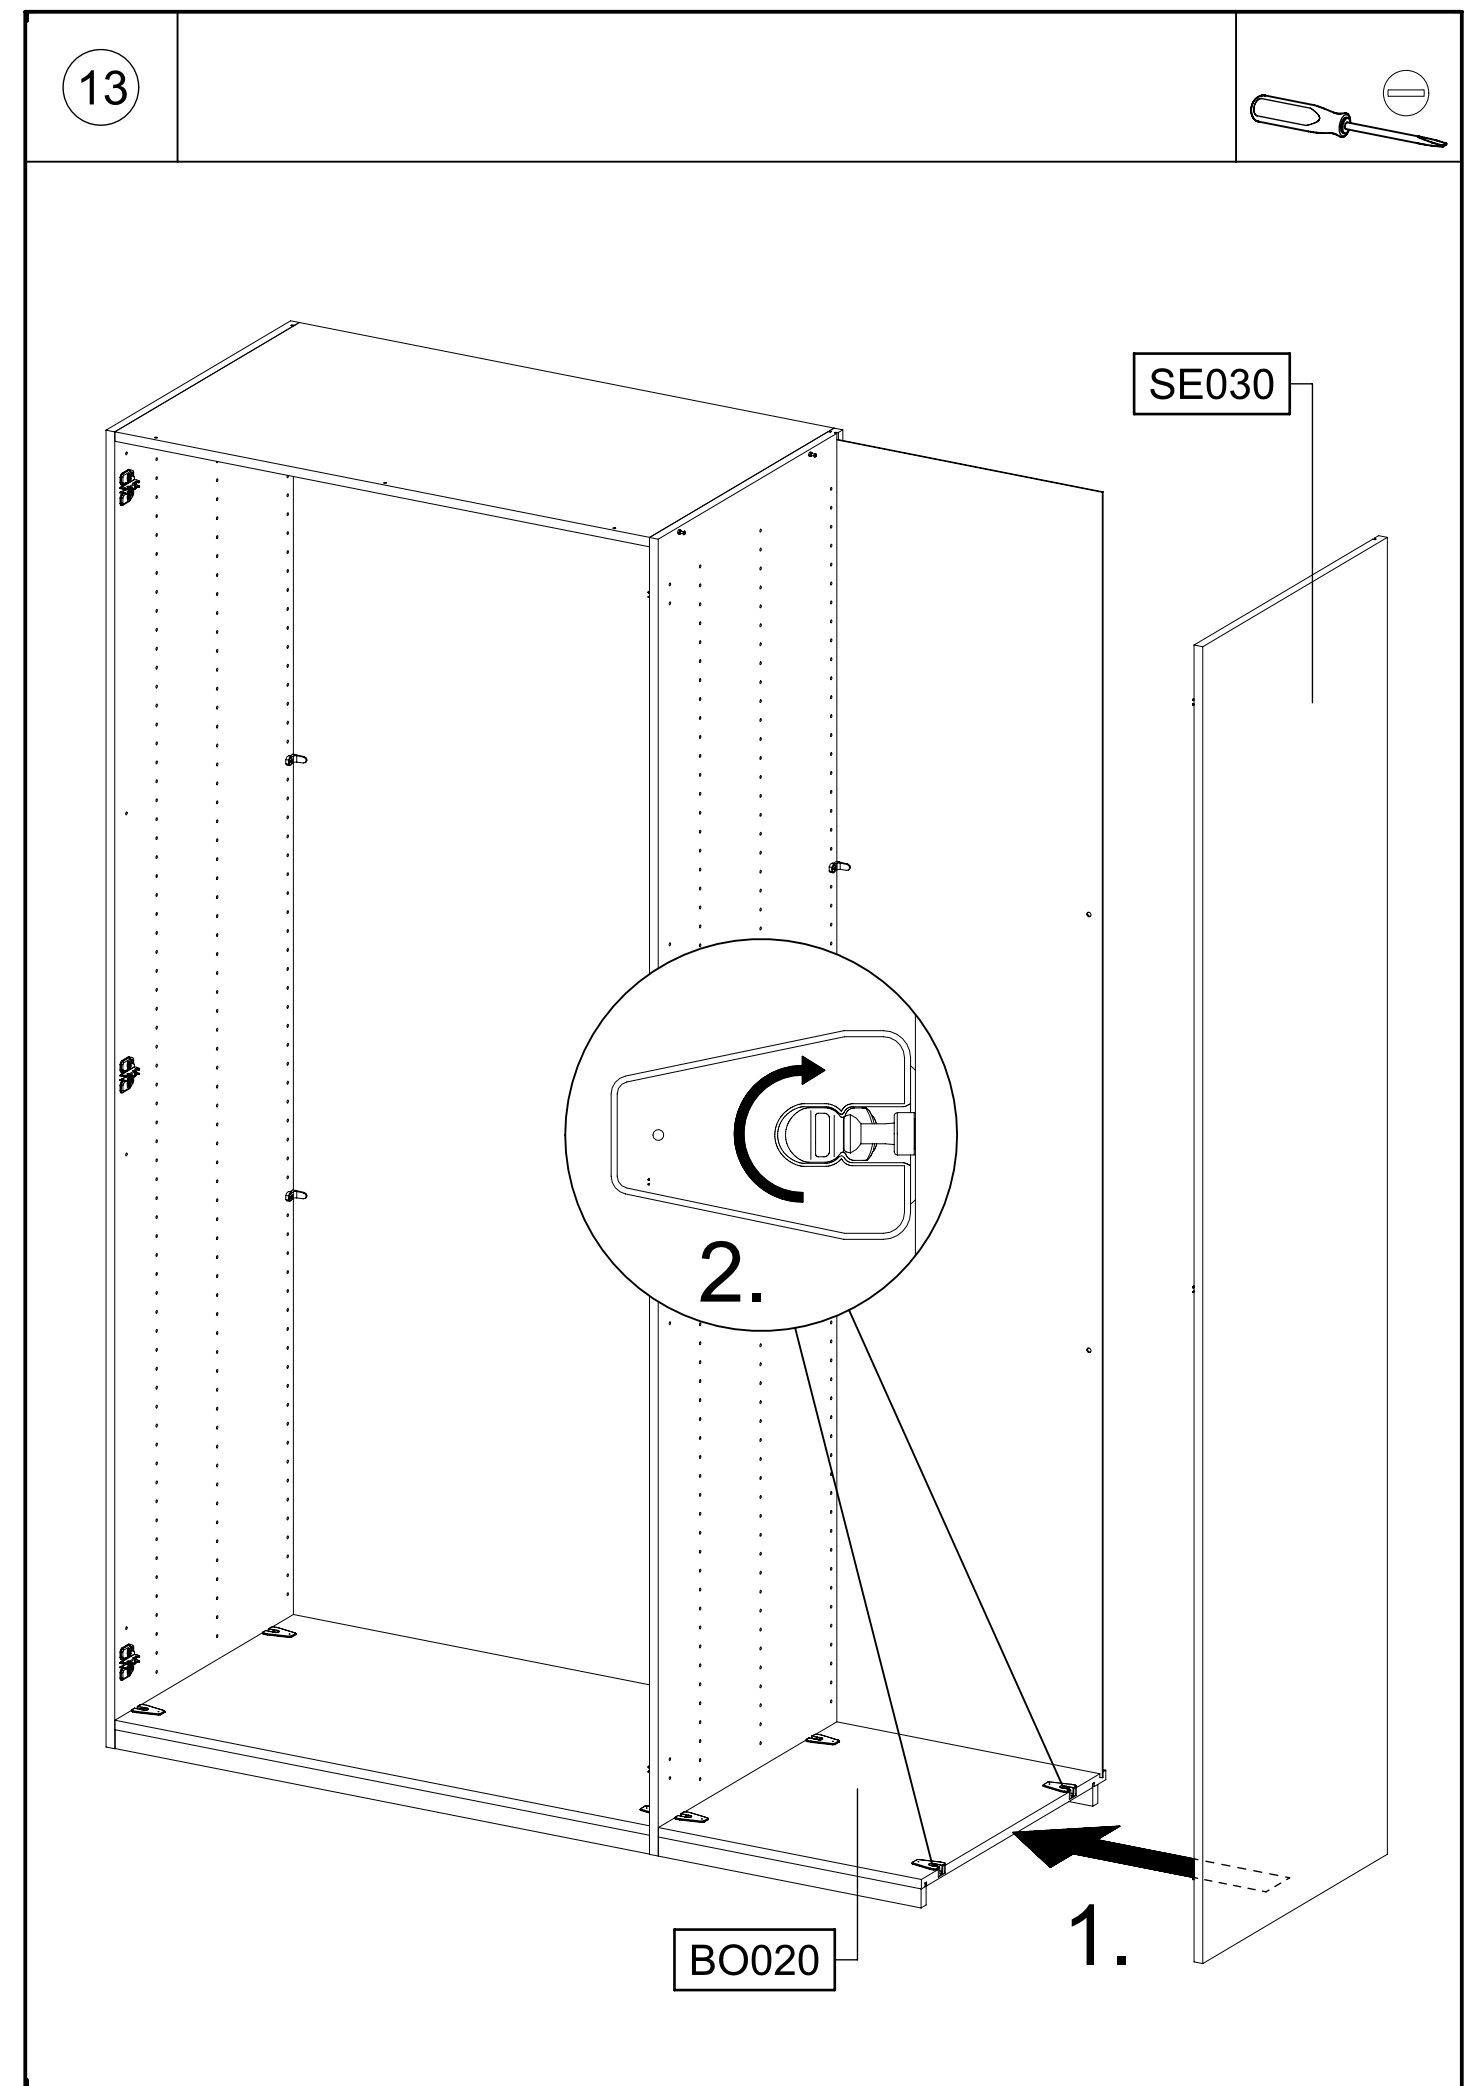


MD162

19.

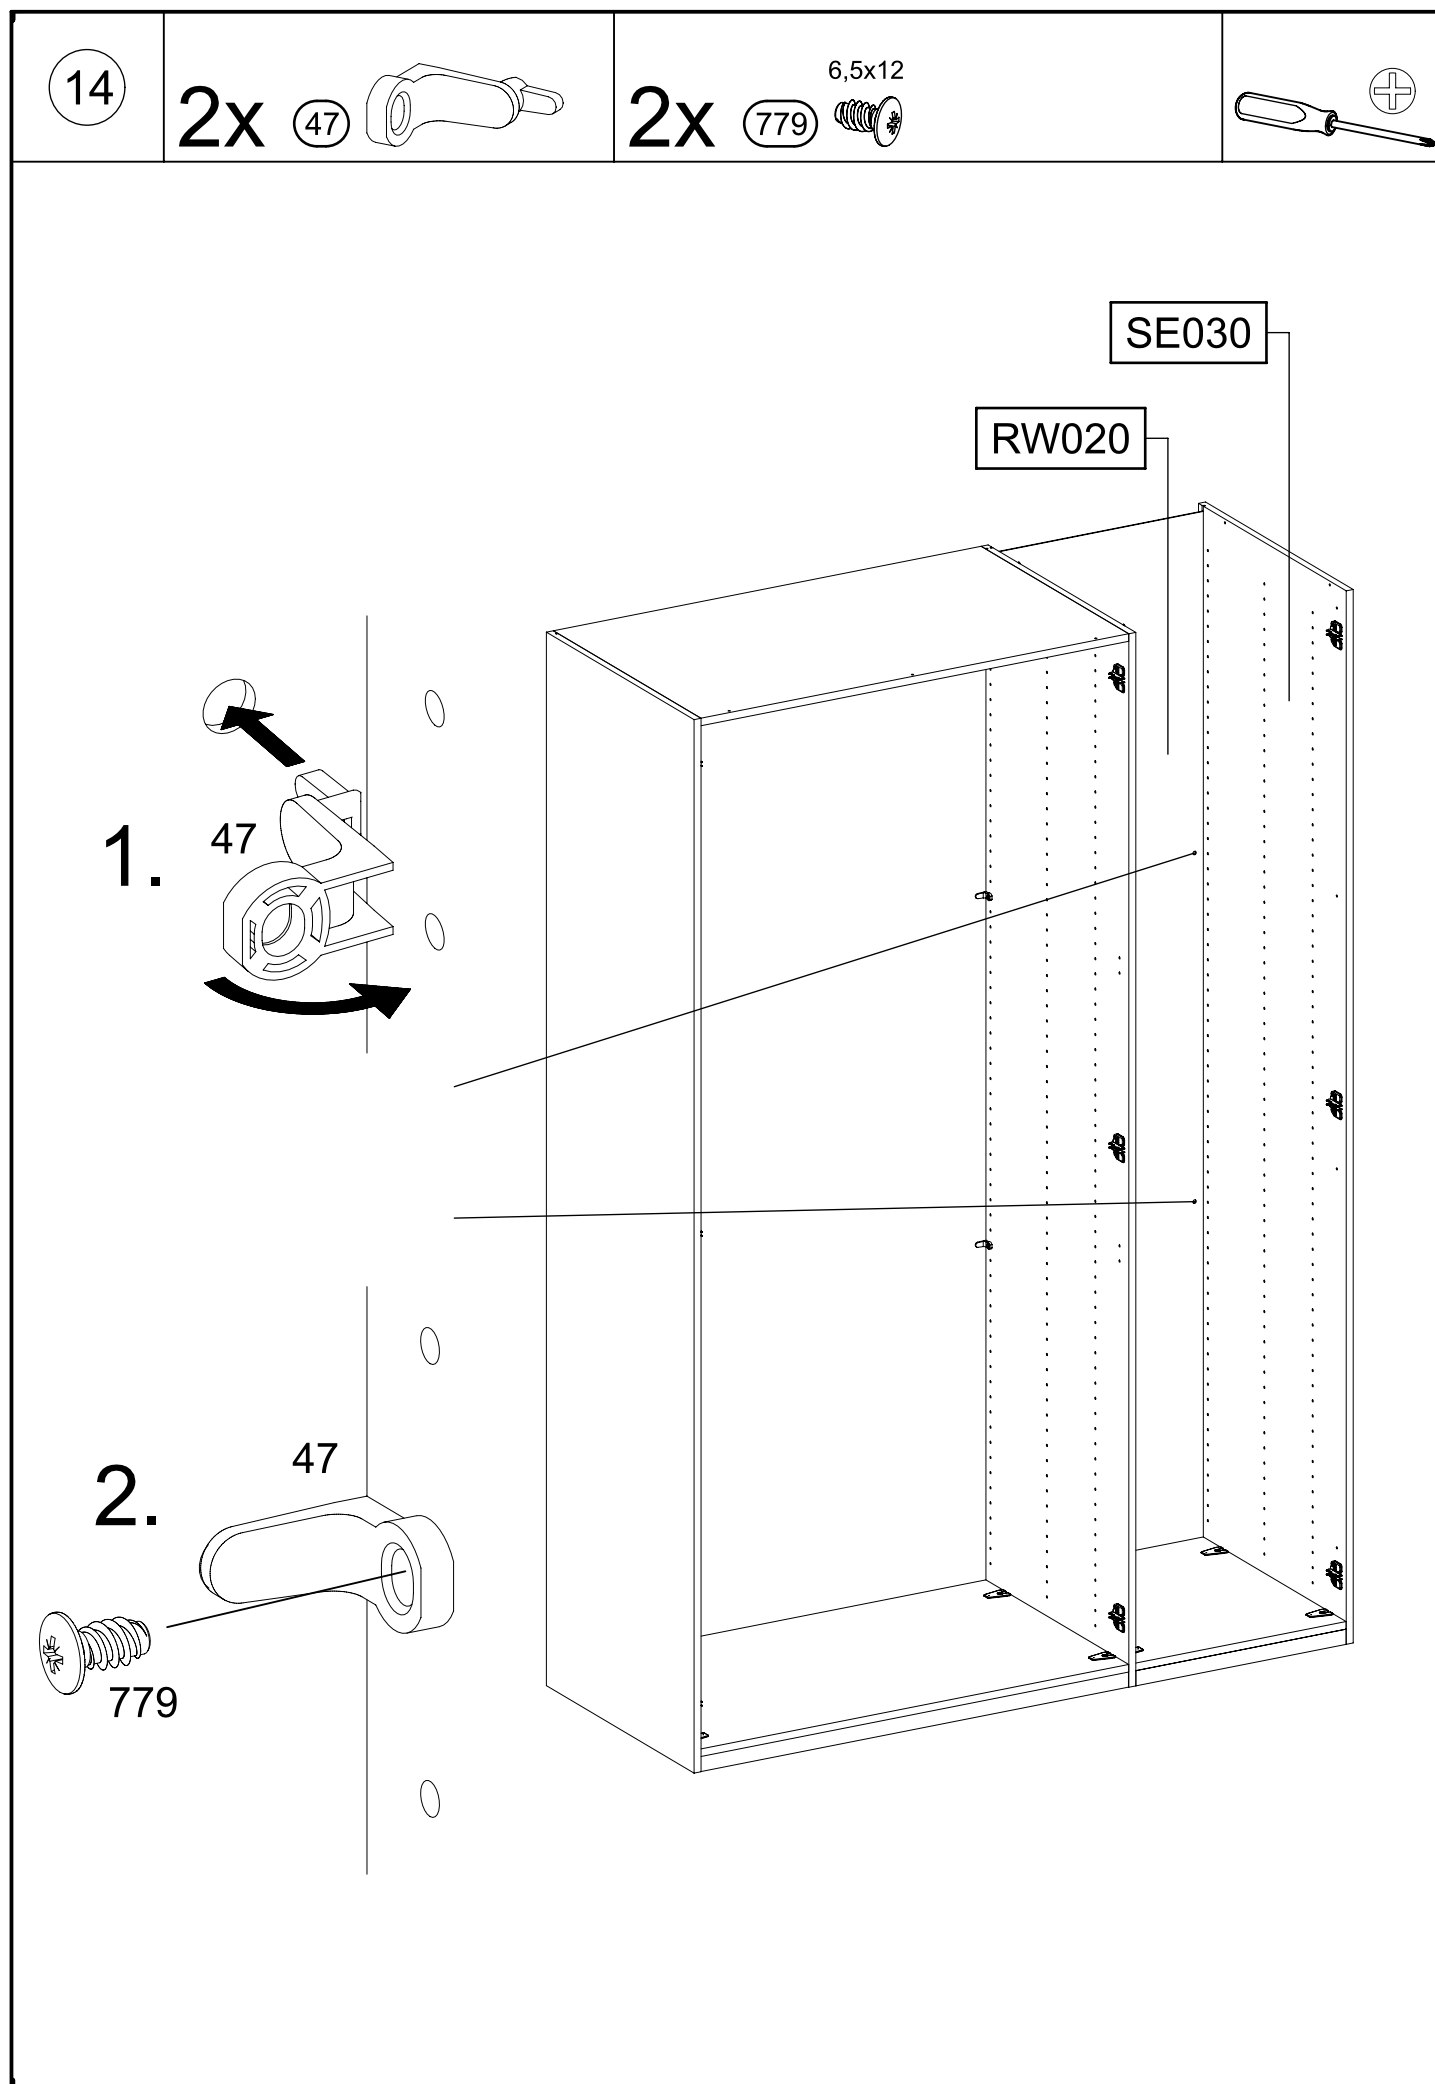

MD162

20.

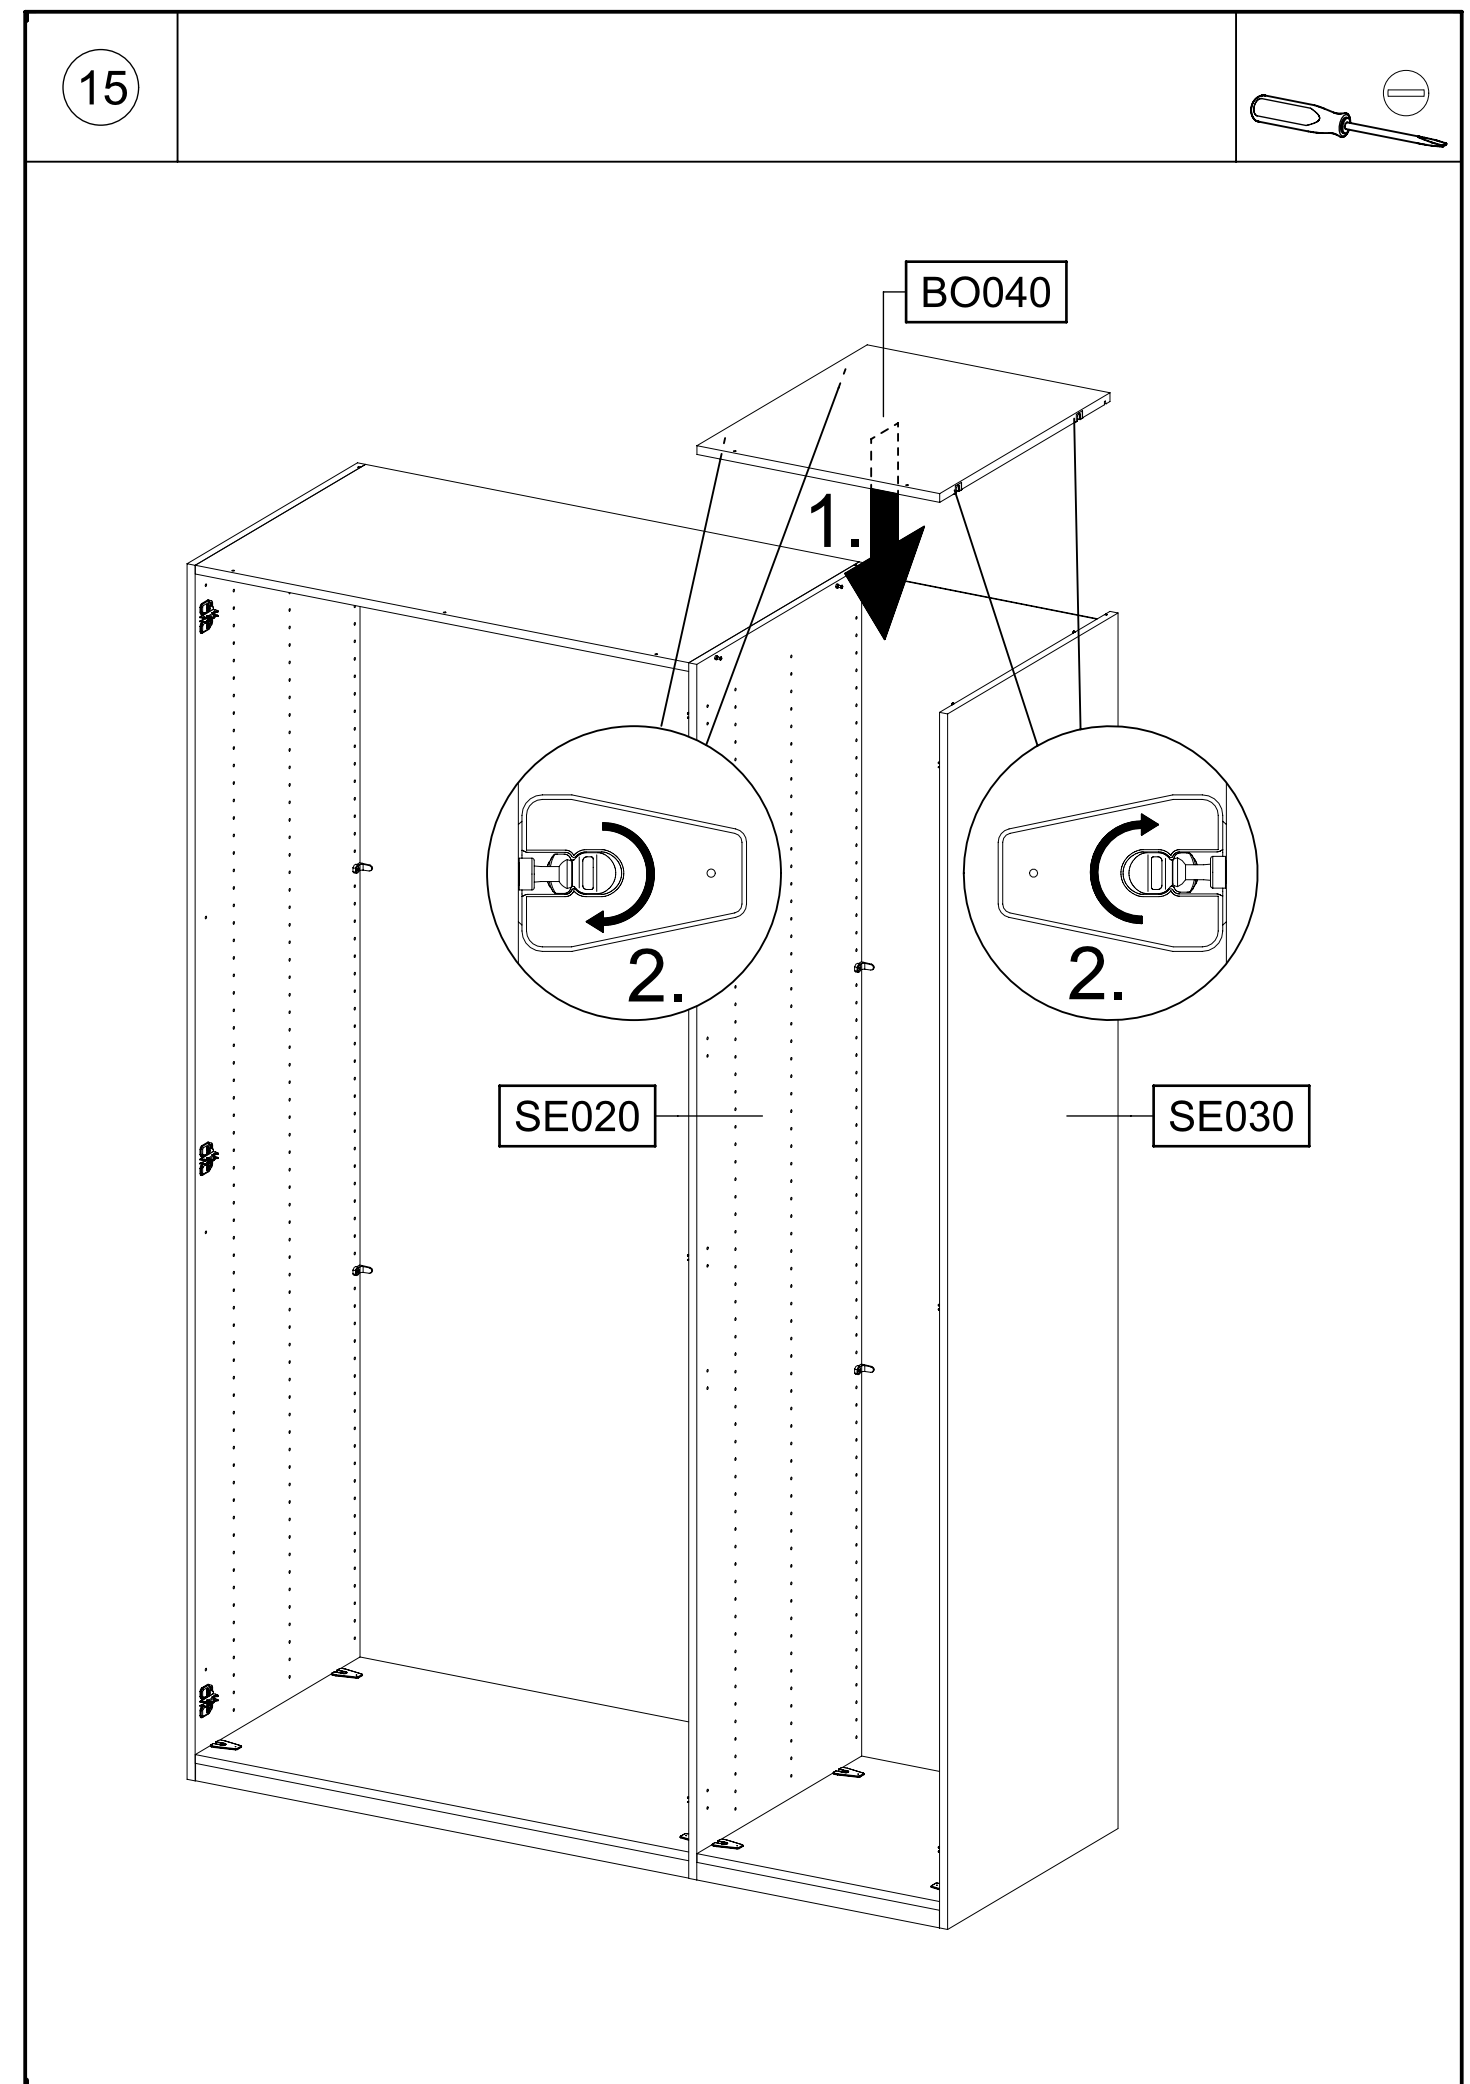

MD162

16

16x




1089



WA010

2.


WA020

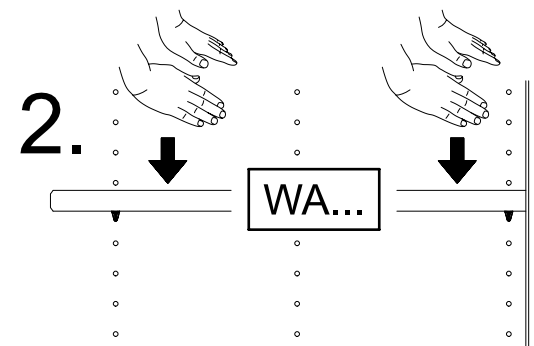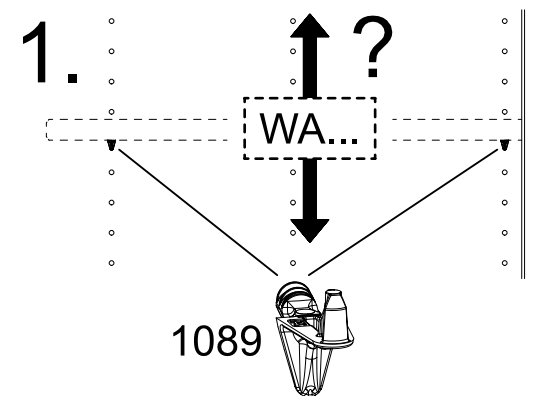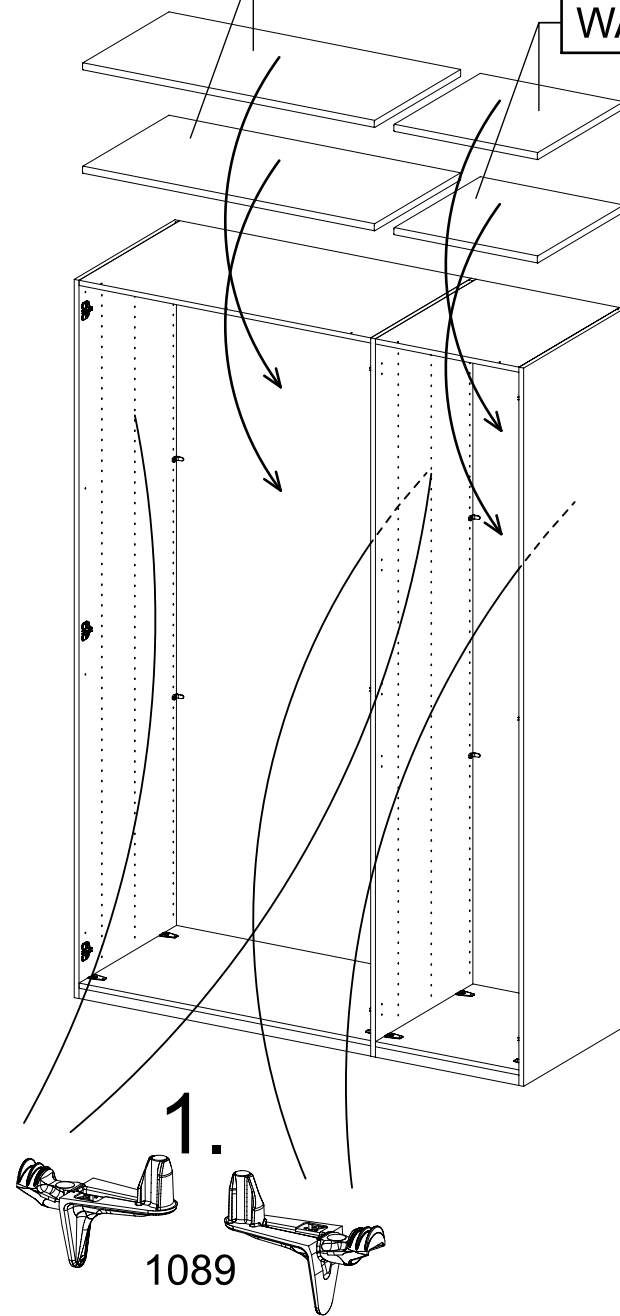

17

4x


29

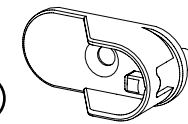

4x

205




3,5x15



KS010






KS020

2.

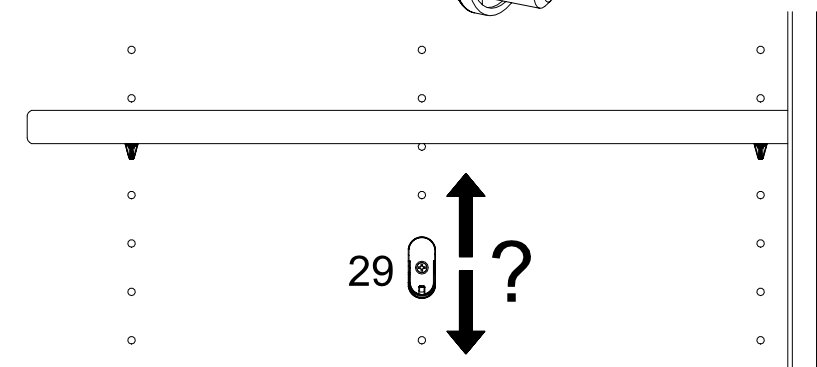
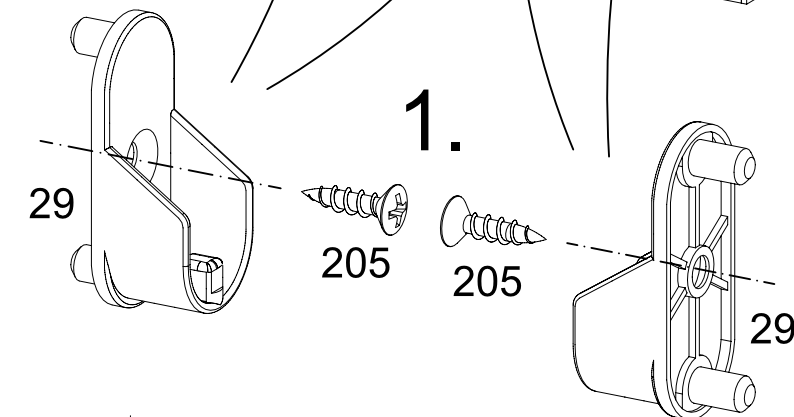
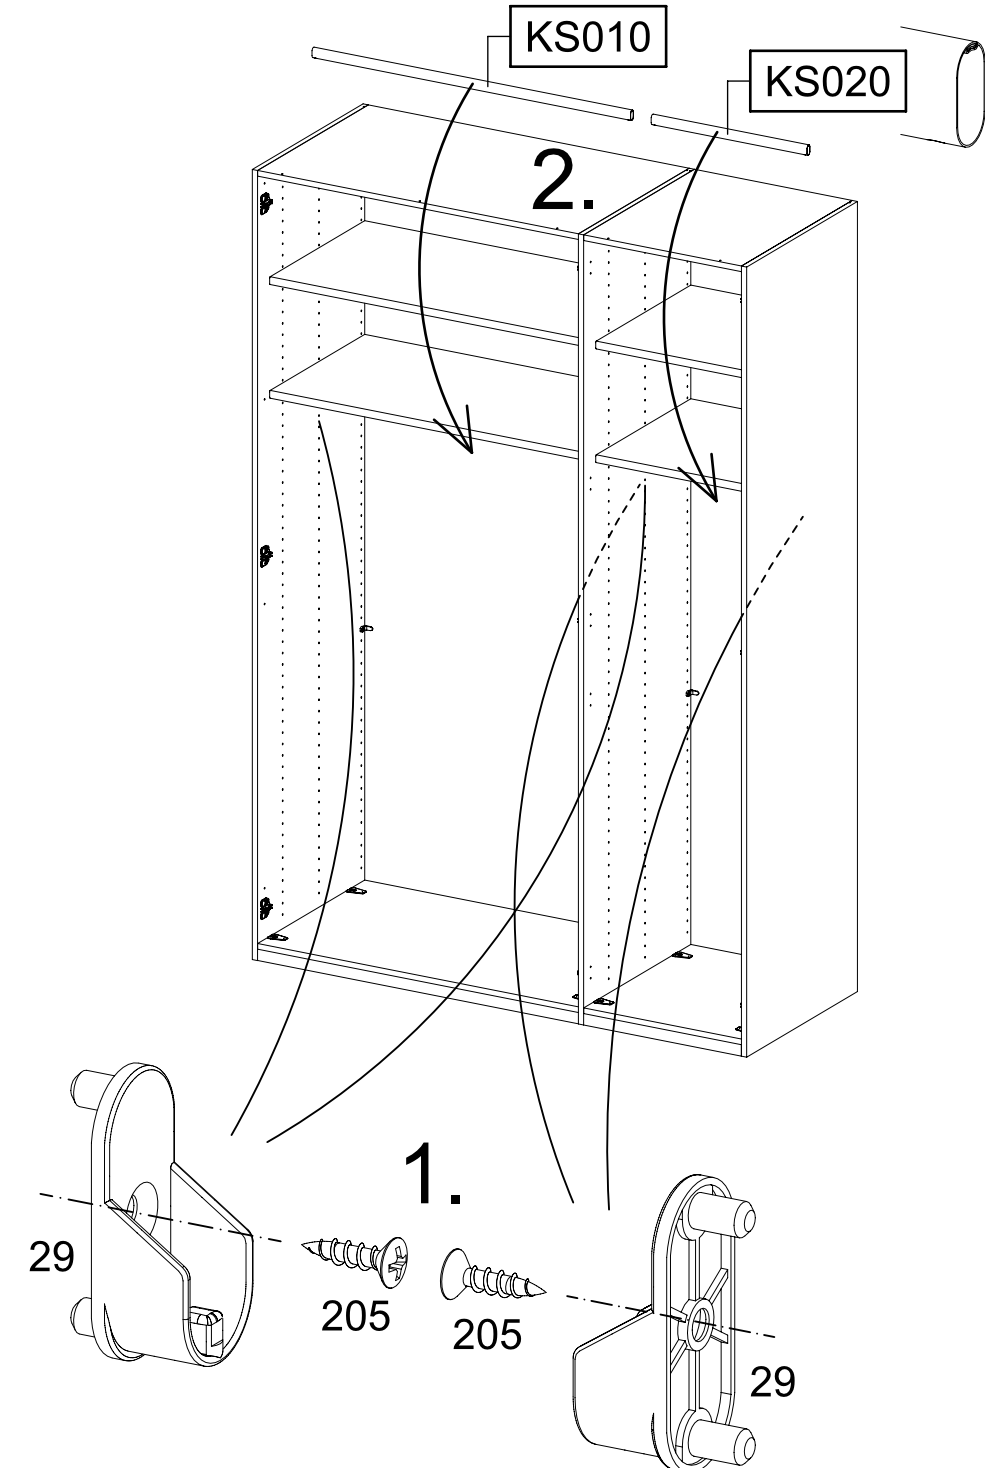


18

9-12x 1292

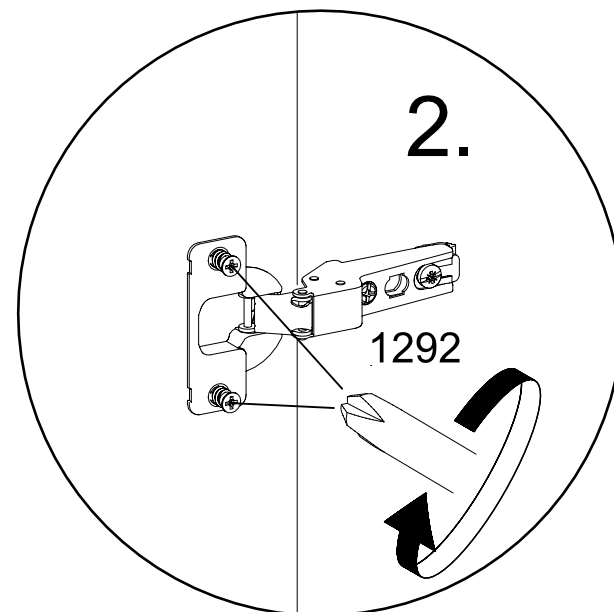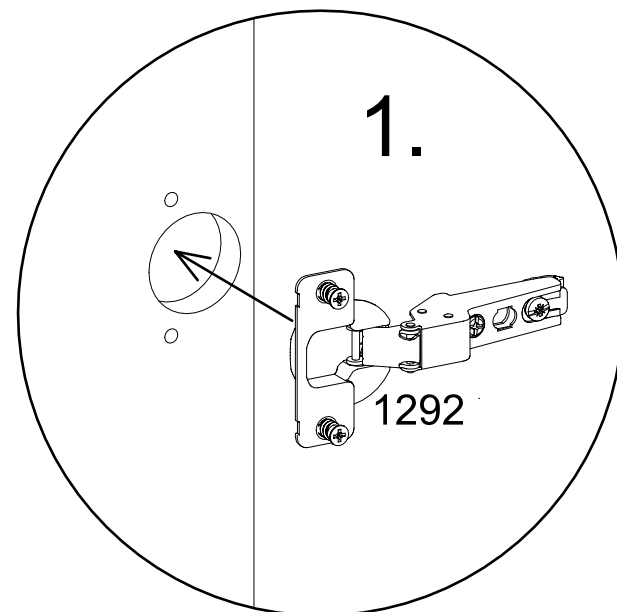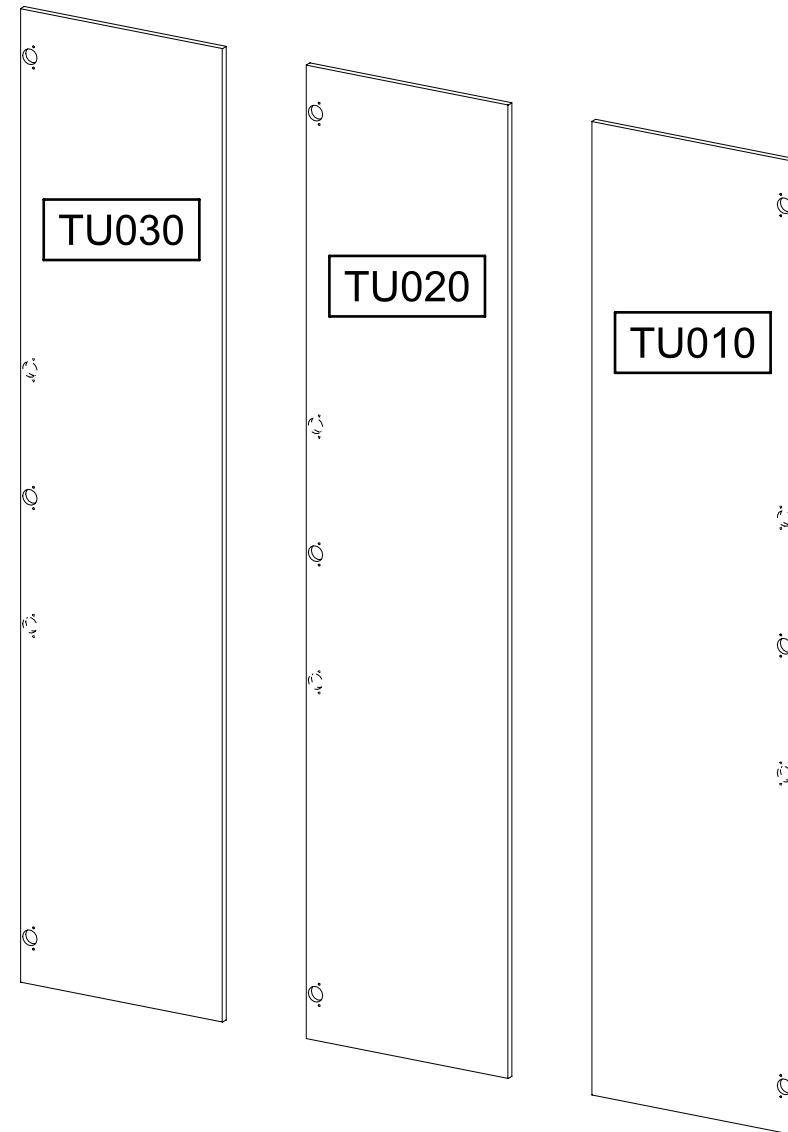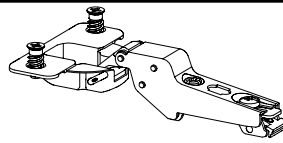

19

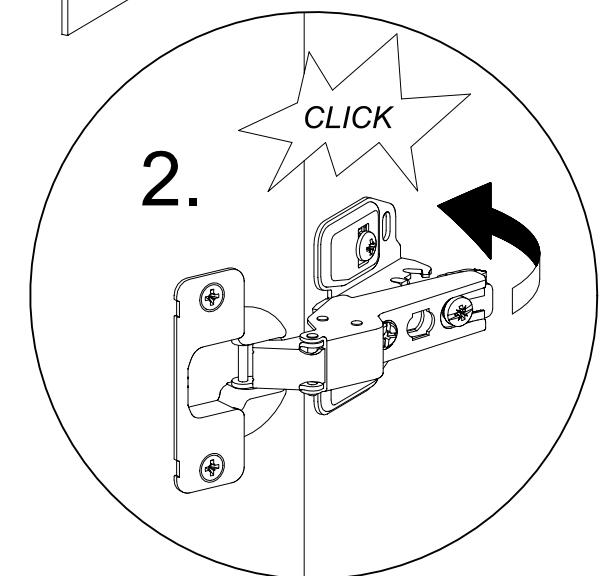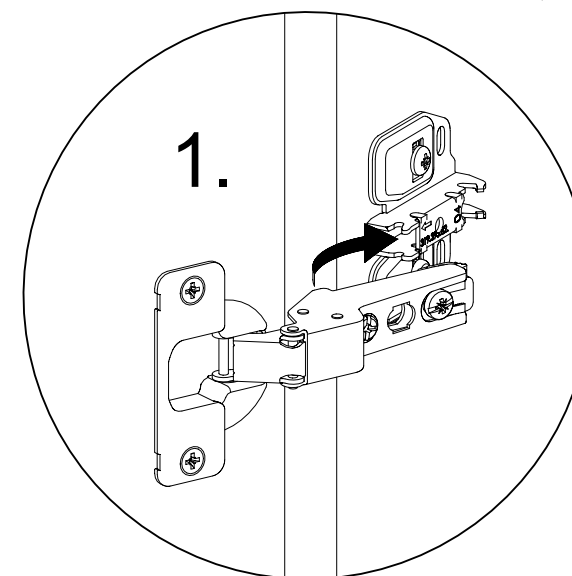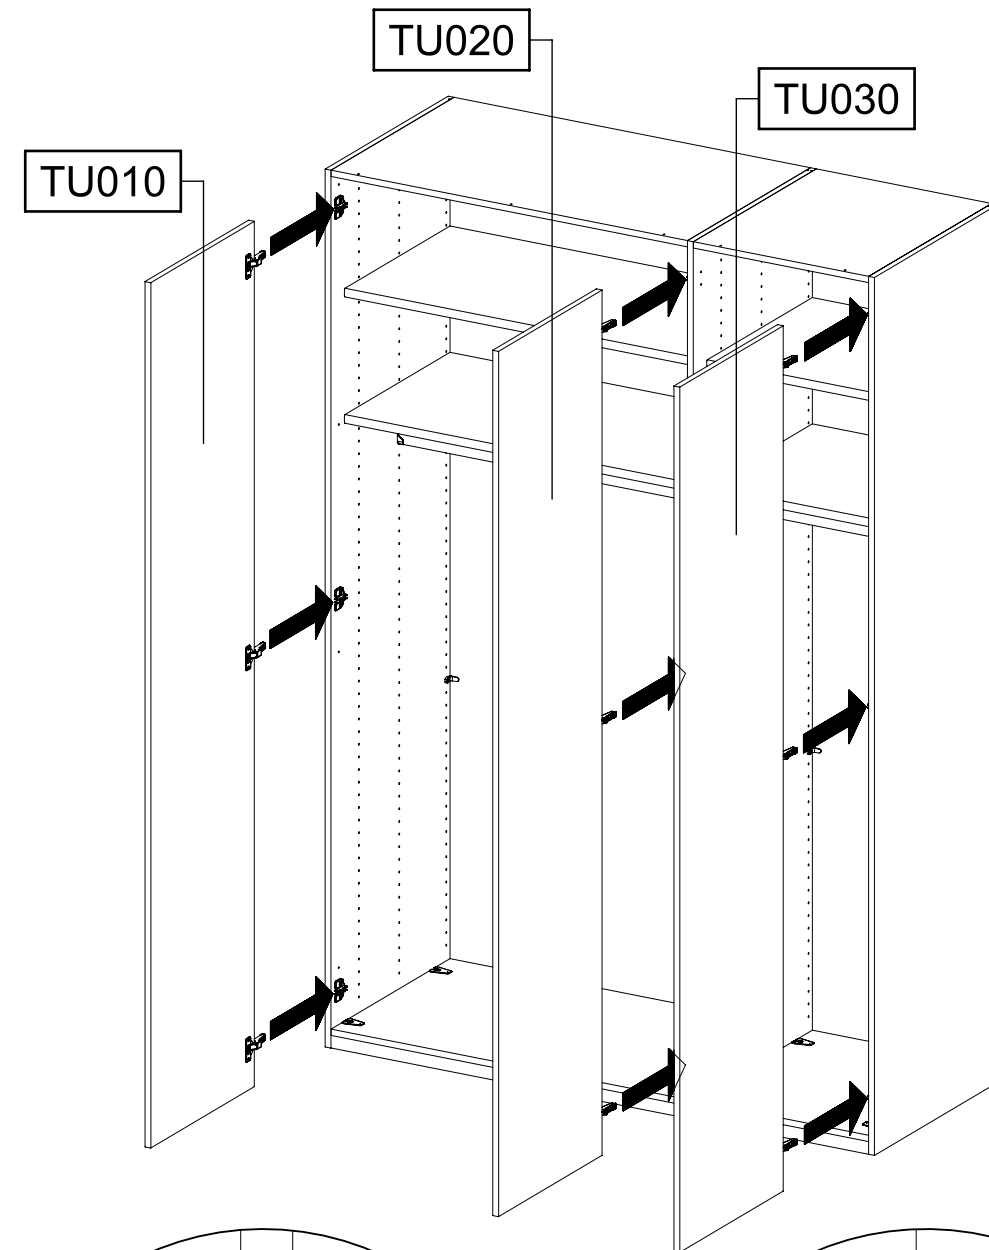

20








0-6x



12




55x16x6,2



21

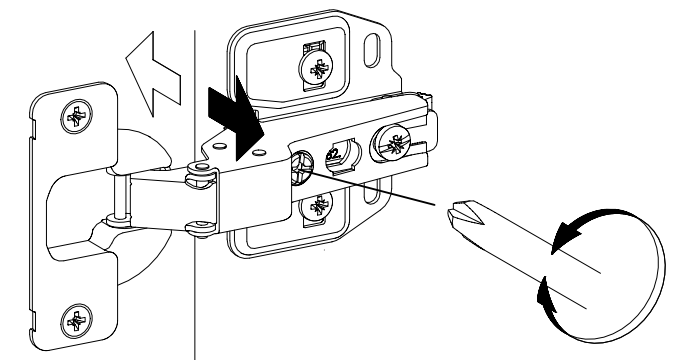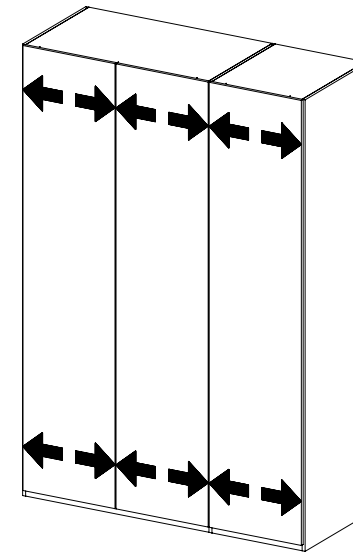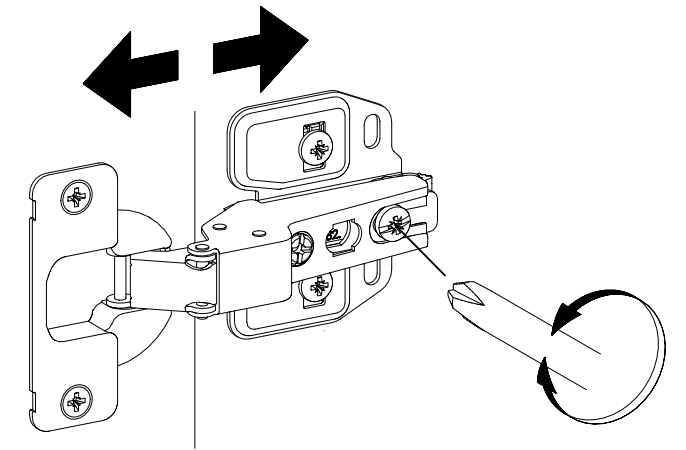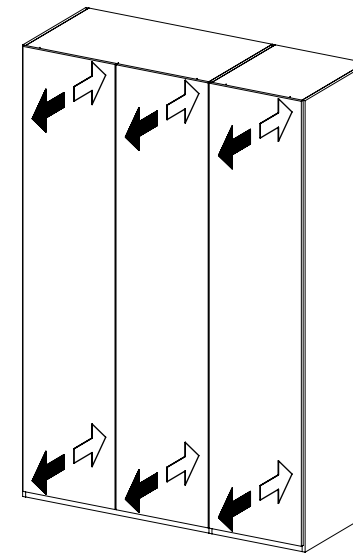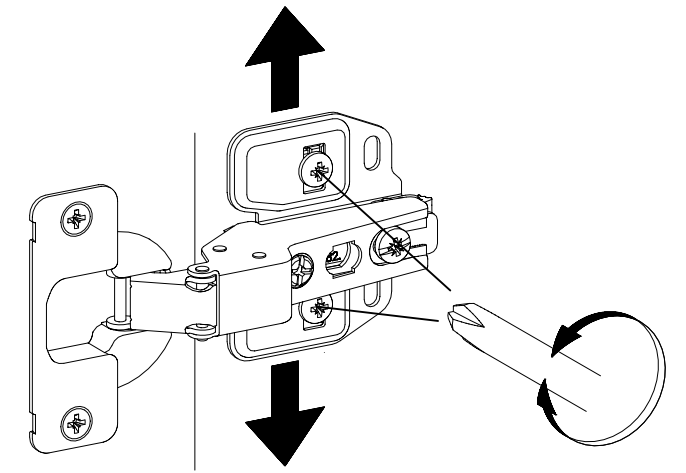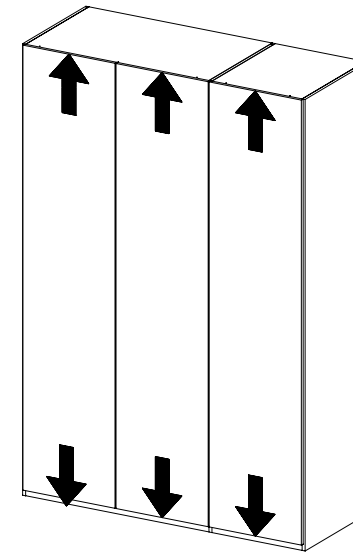

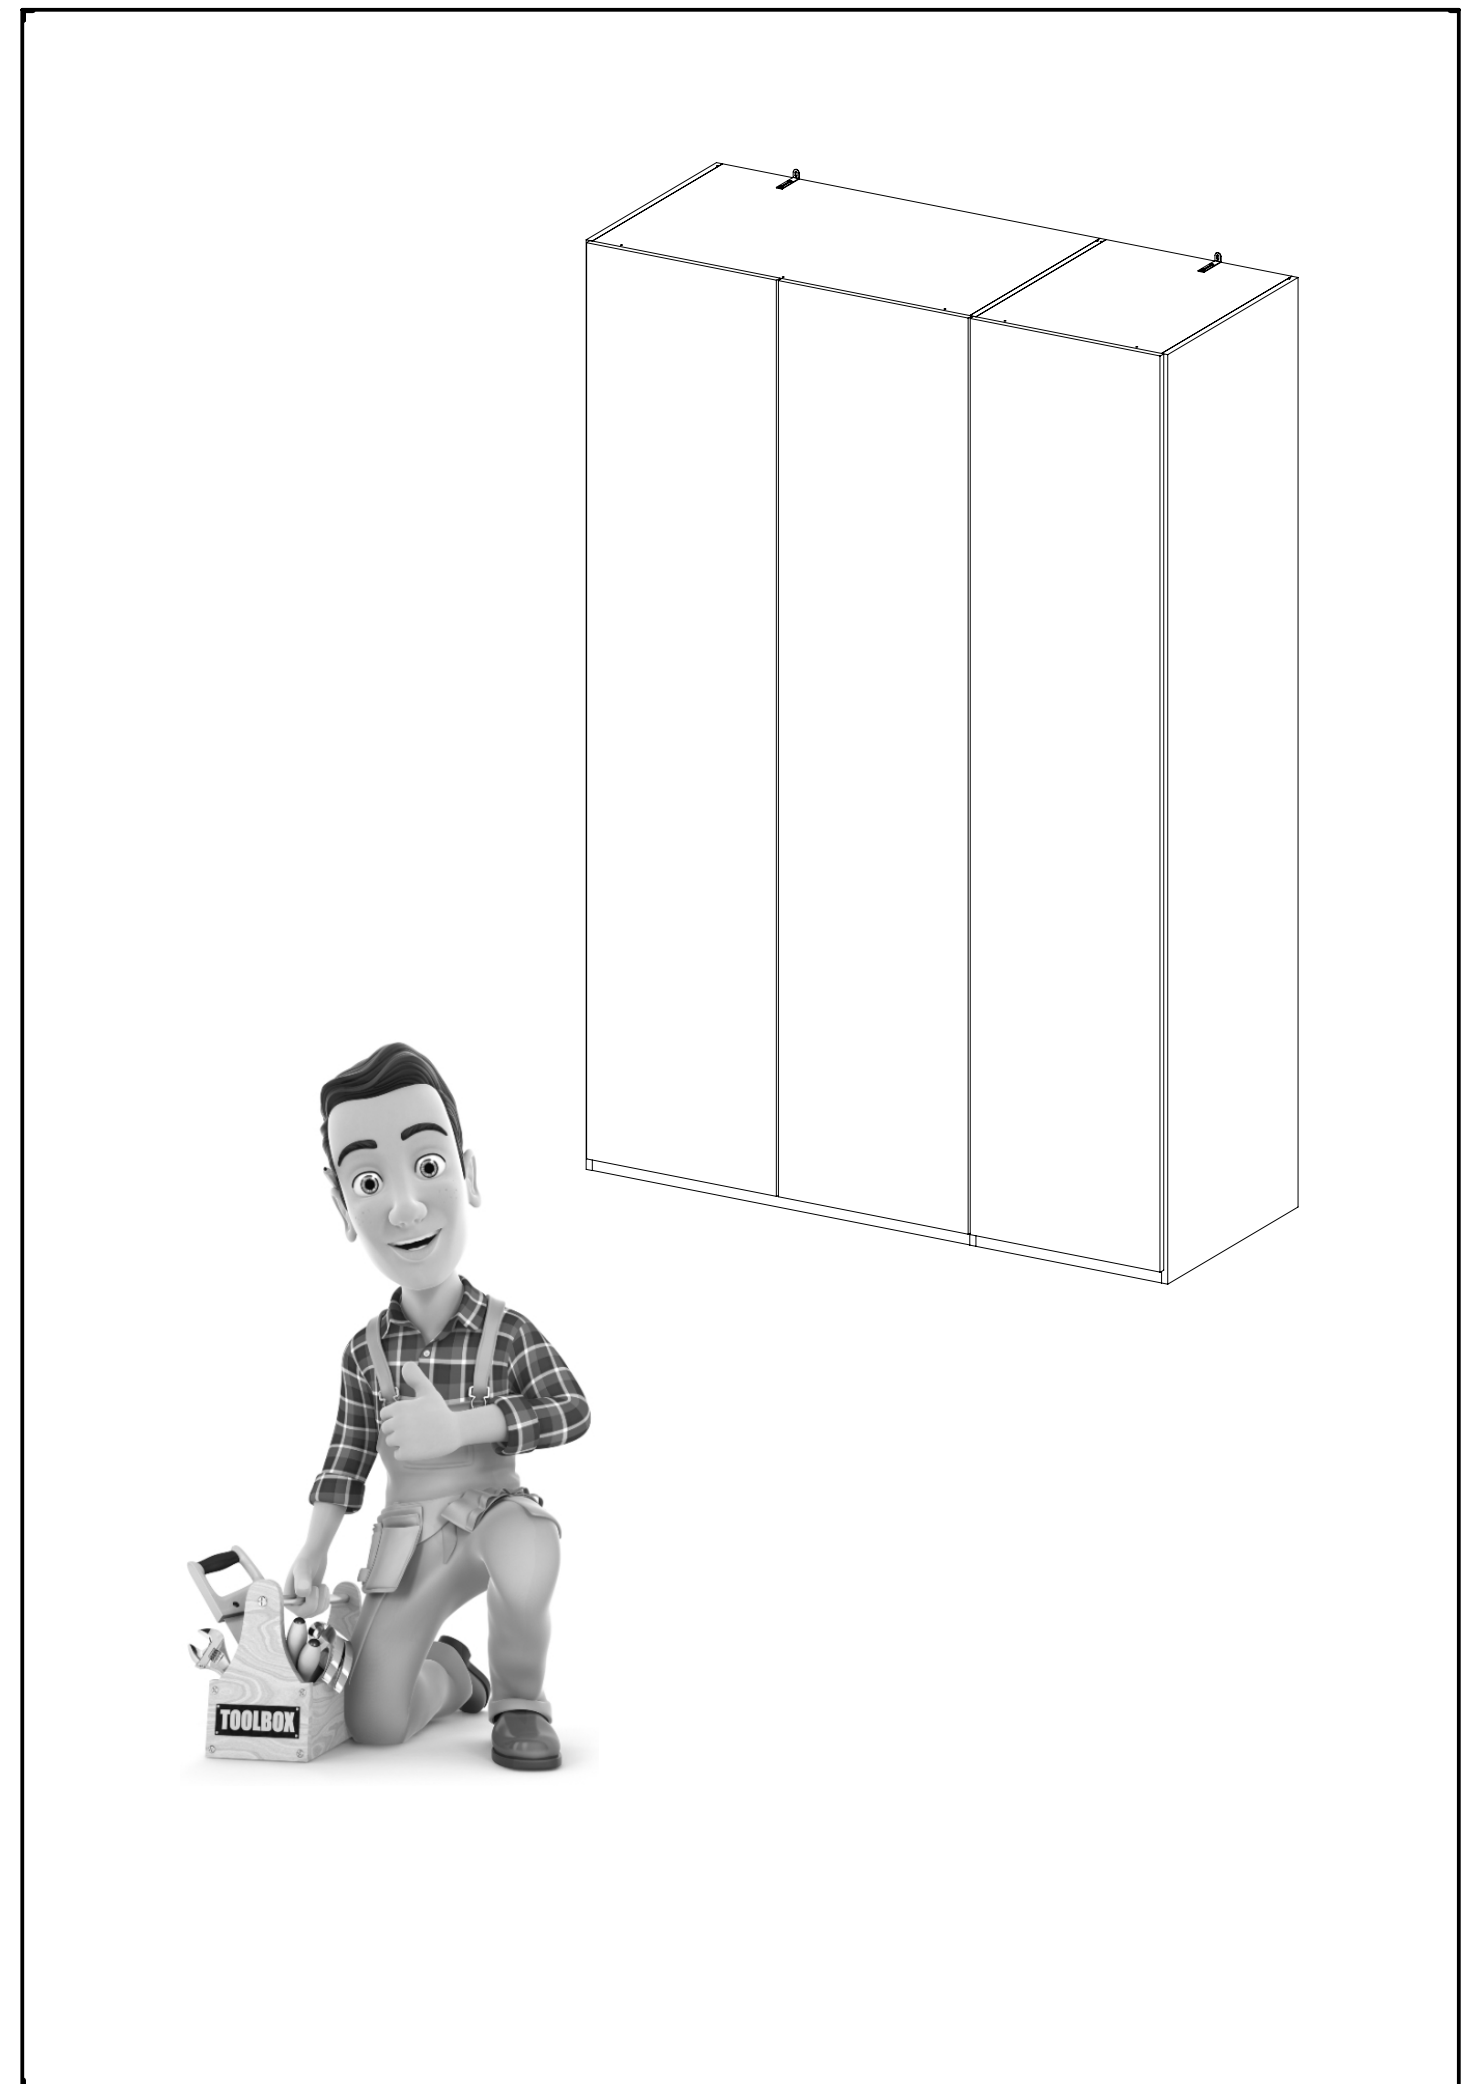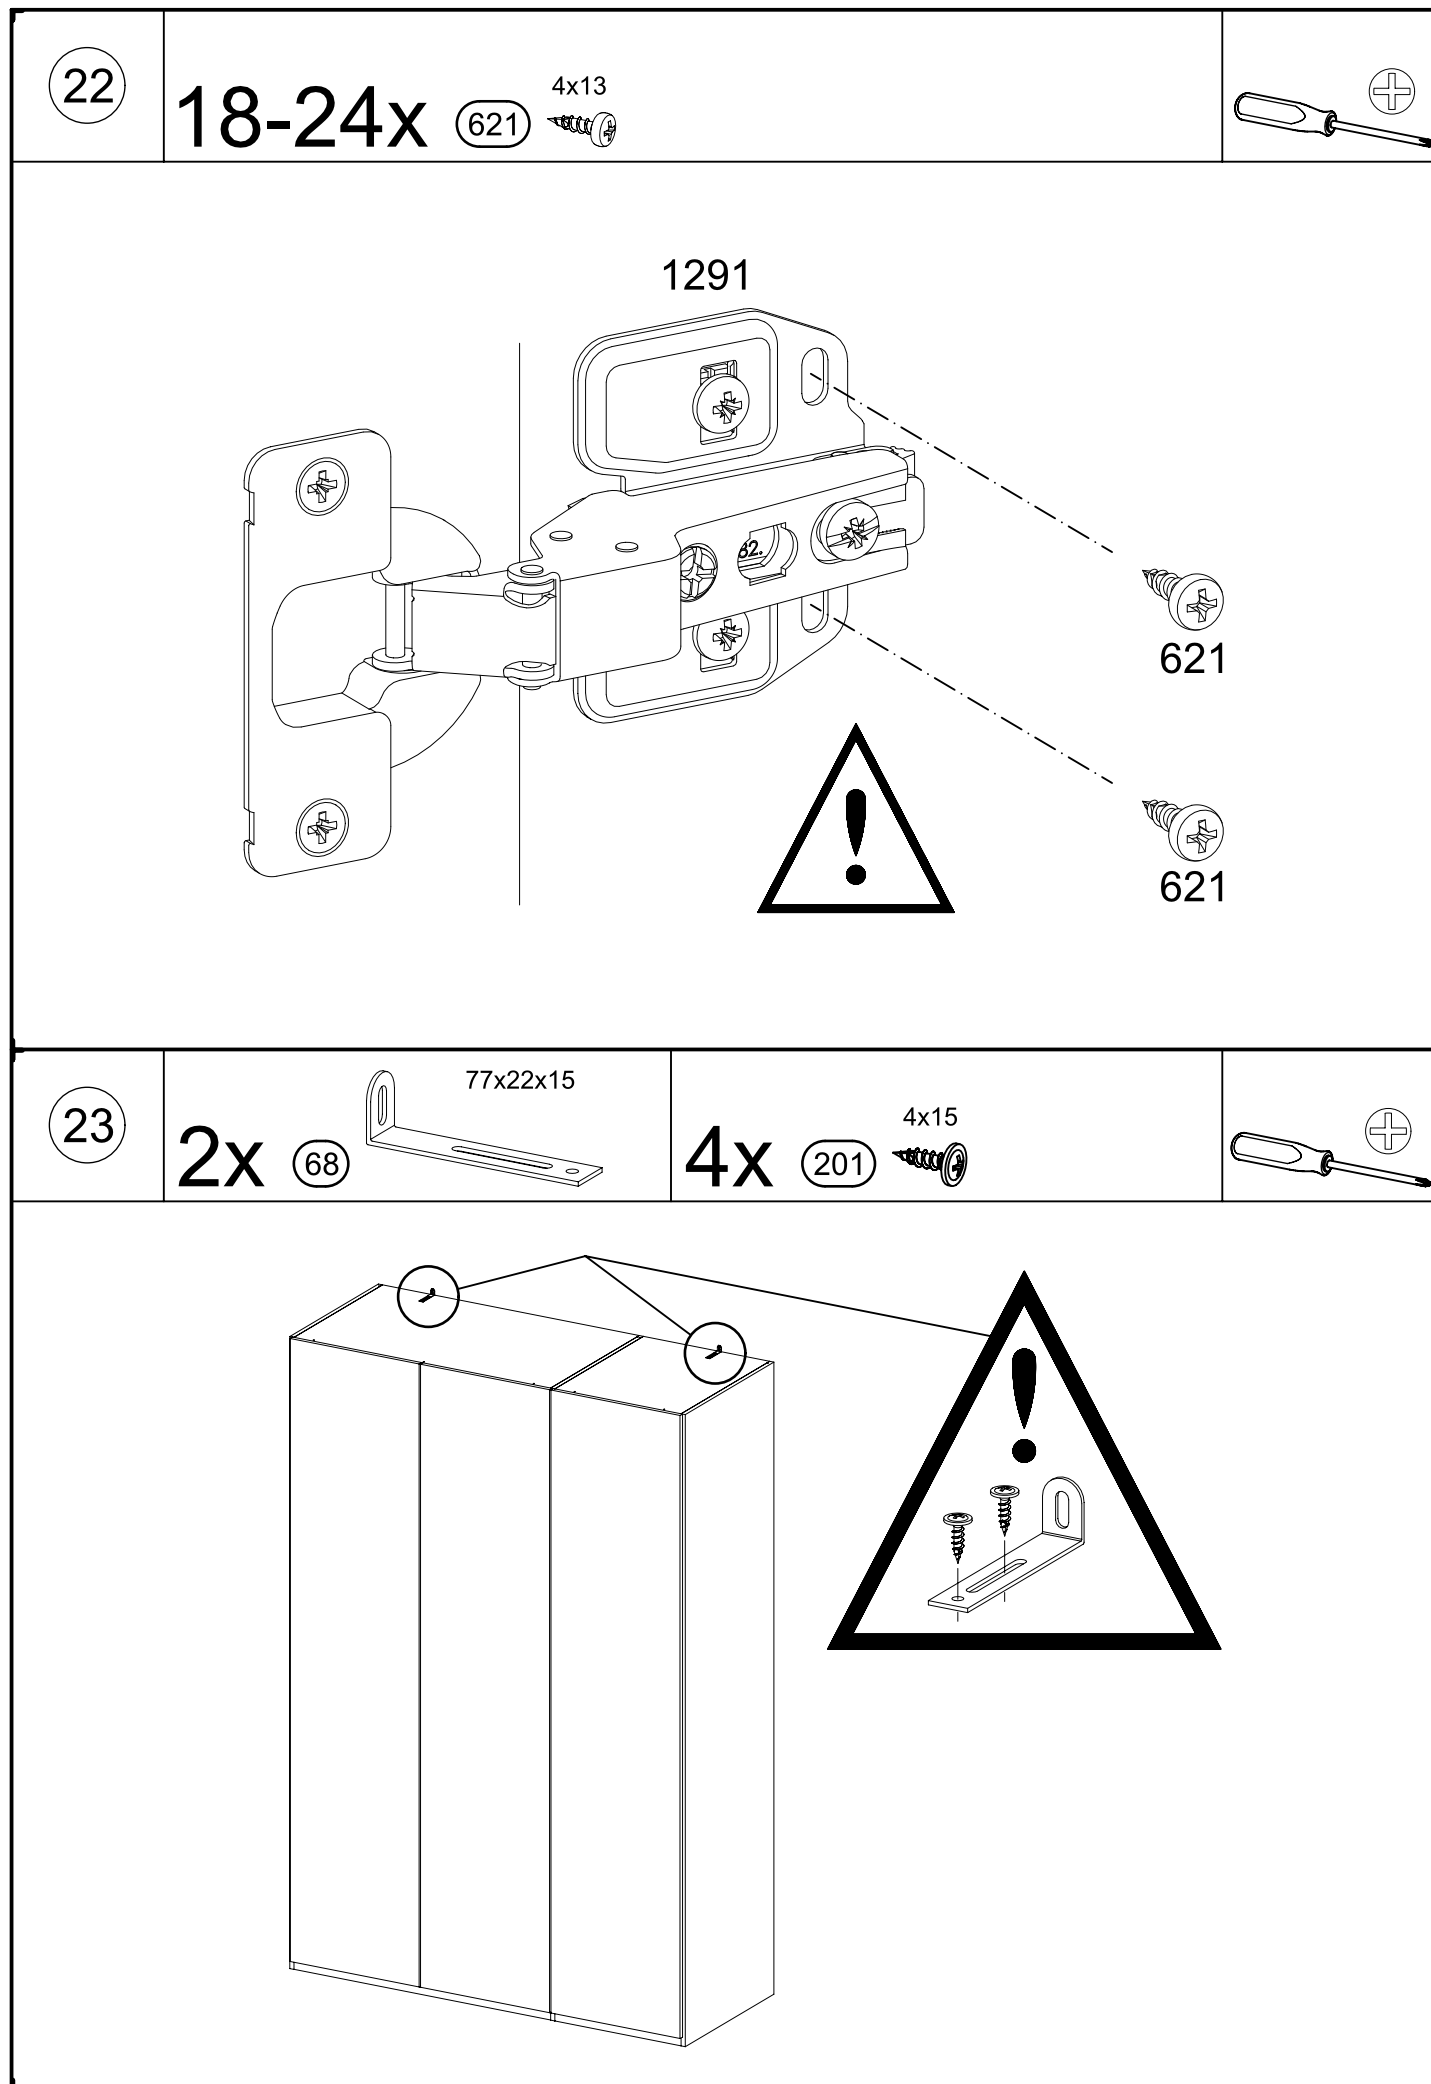


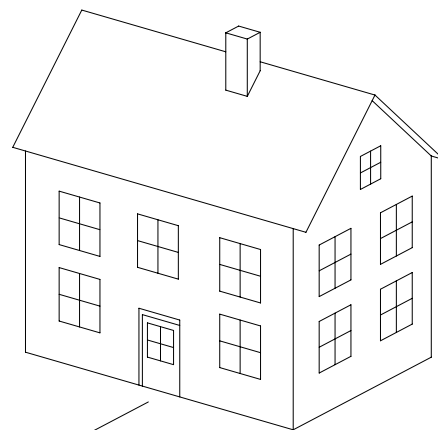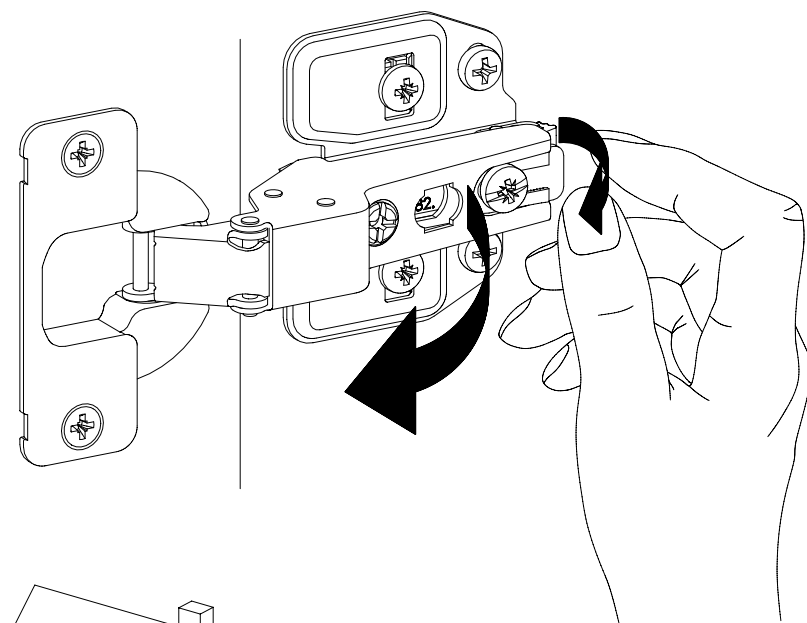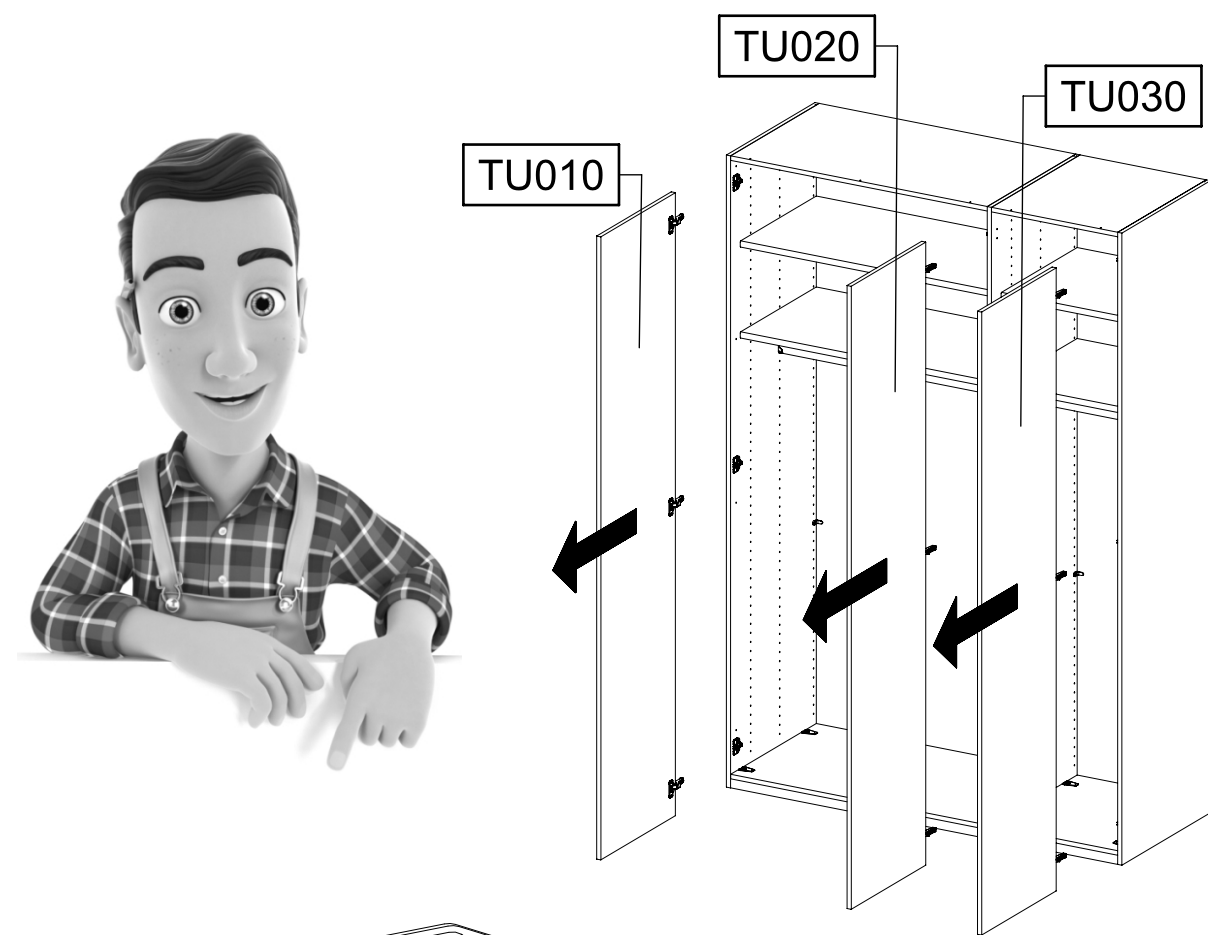



Montageanleitung / Mounting Instruction

Zuerst Türeinstellung vornehmen / Make door adjustments first



1

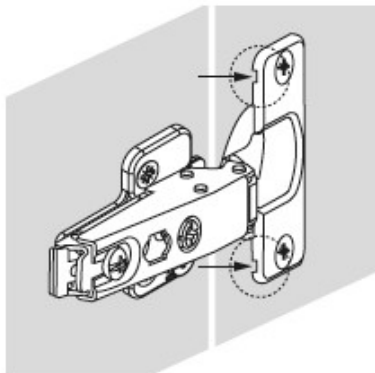



2

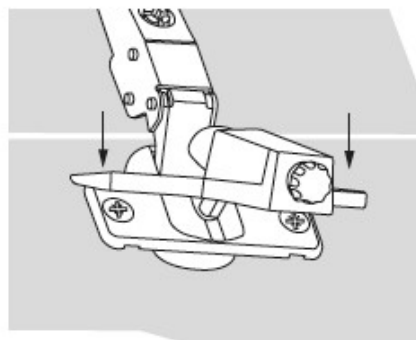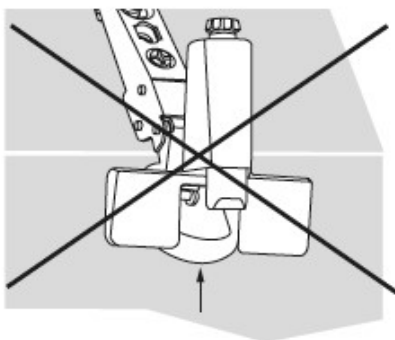


3

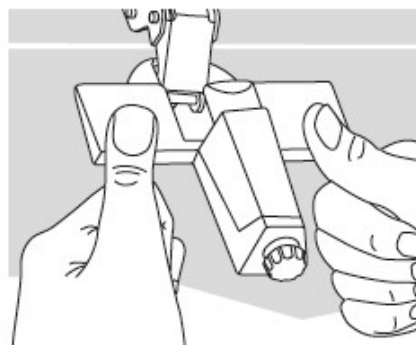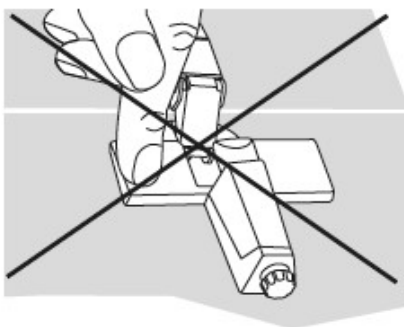

4

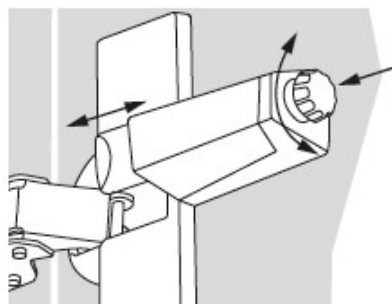
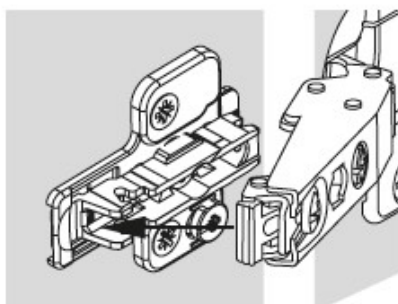


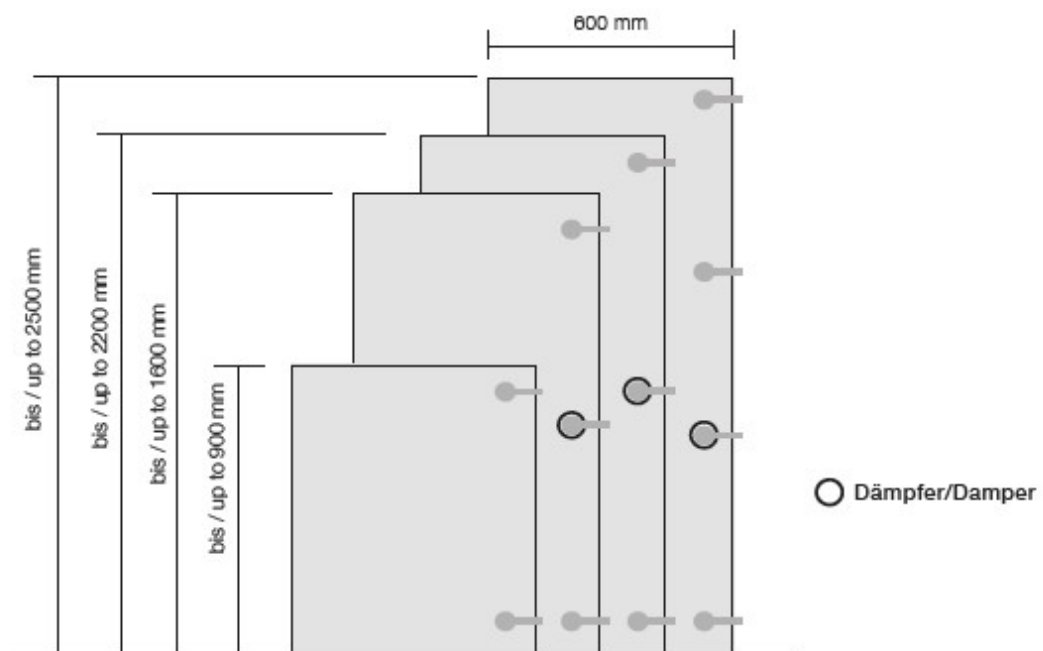

1.

ME190_03


rauch

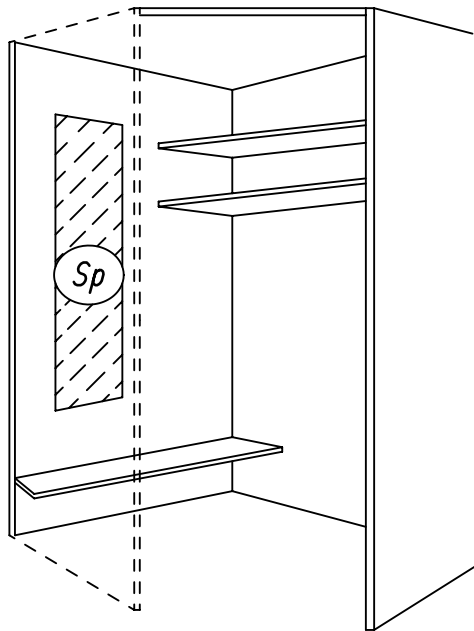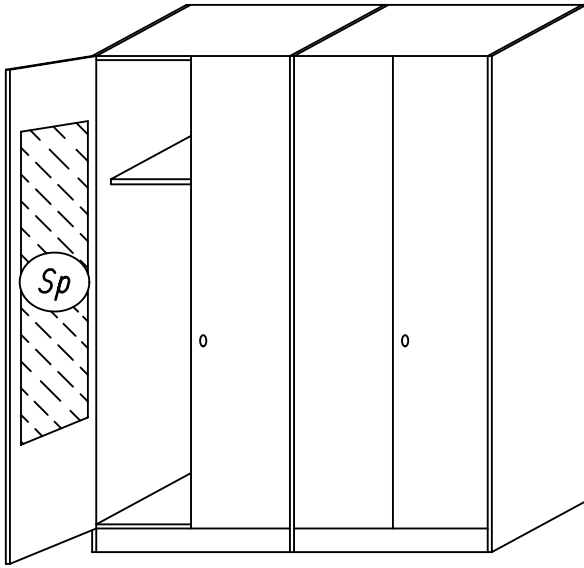


637



492





3x15

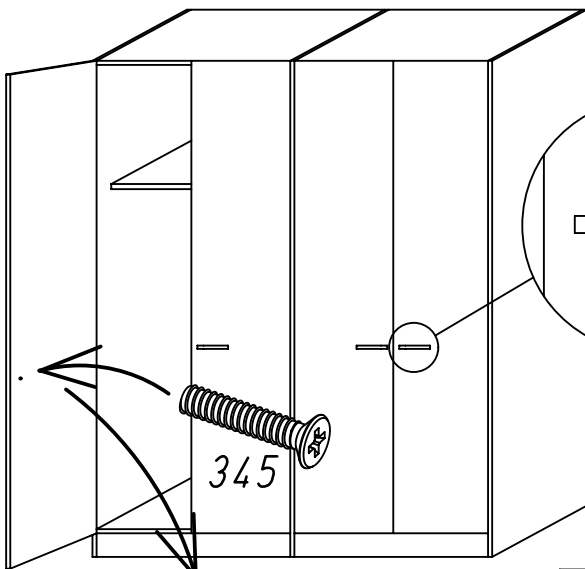


?


345

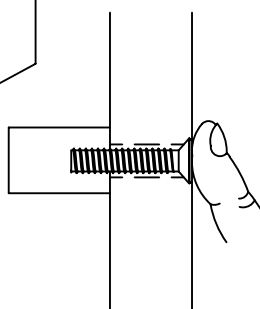


1

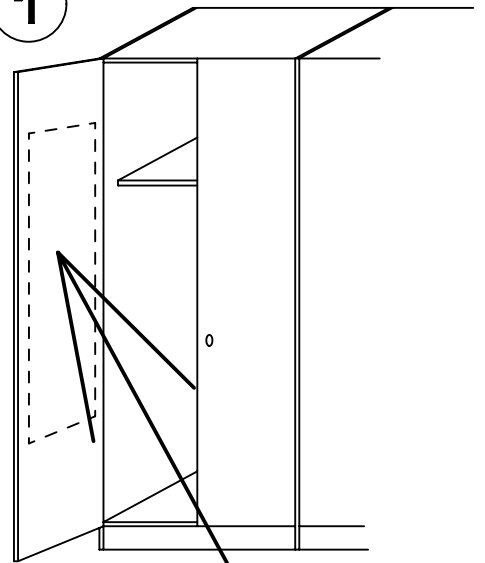


2

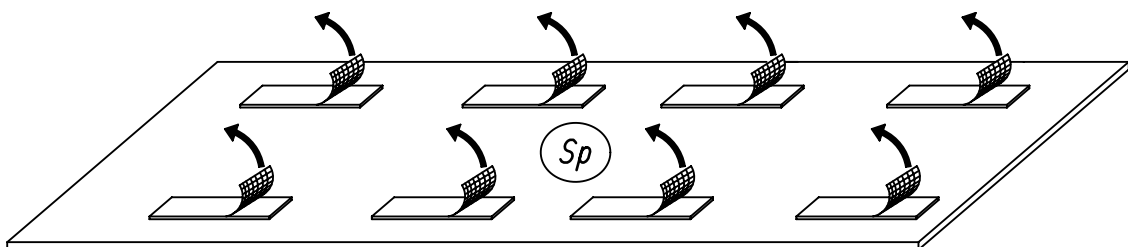

3

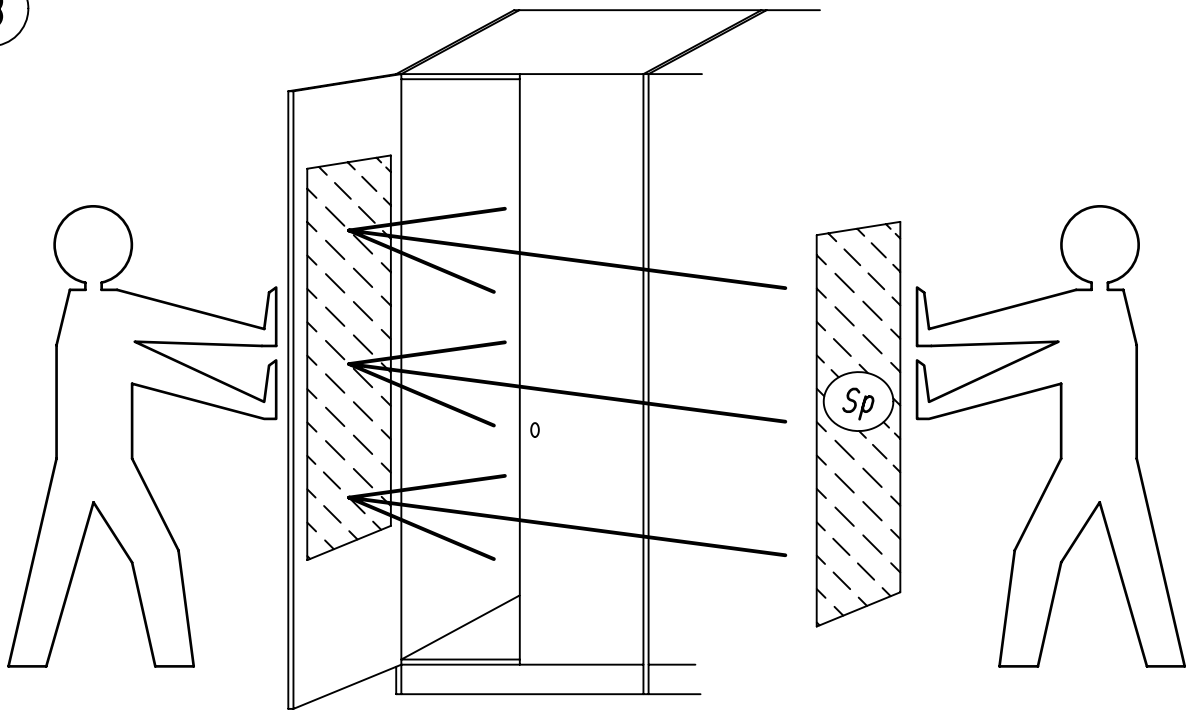



4

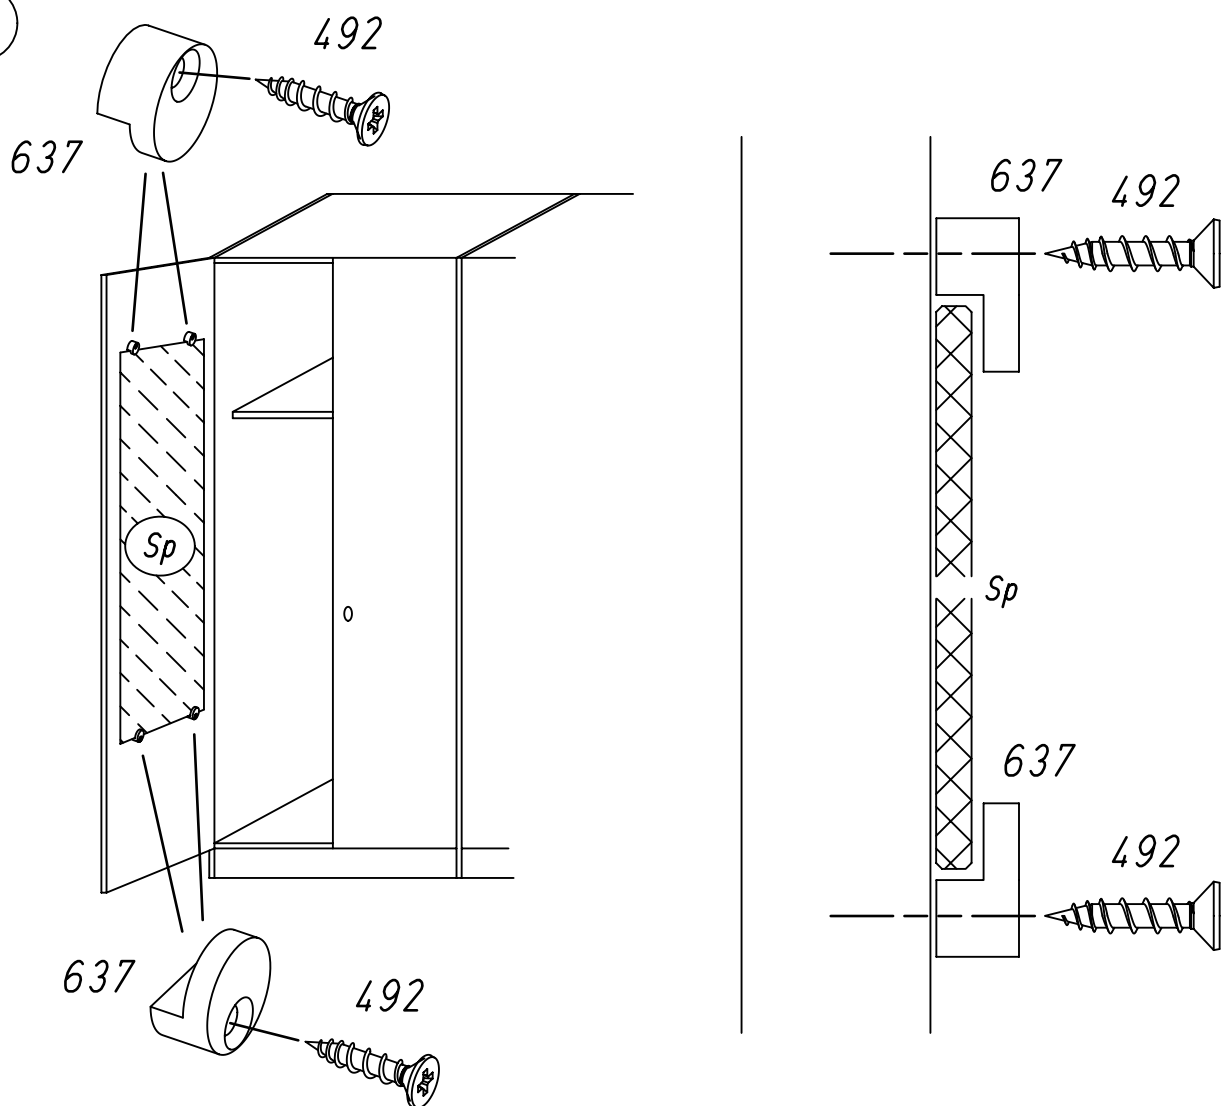

1.



M0861_02

rauch

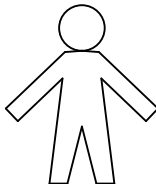




Typ I

Typ II

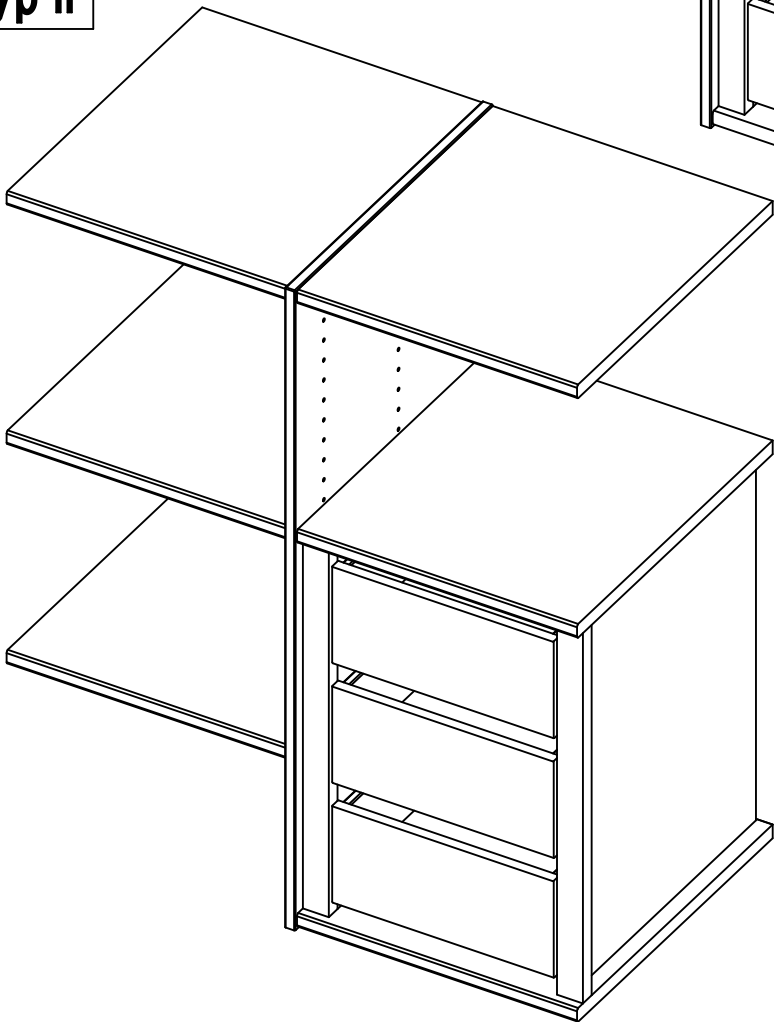
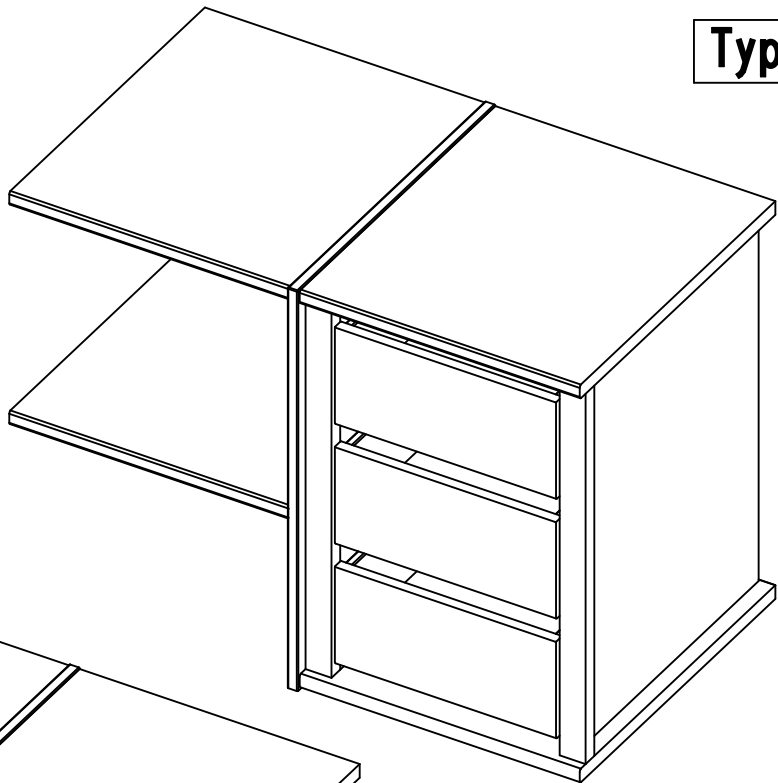


2.

Typ I

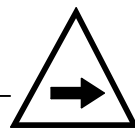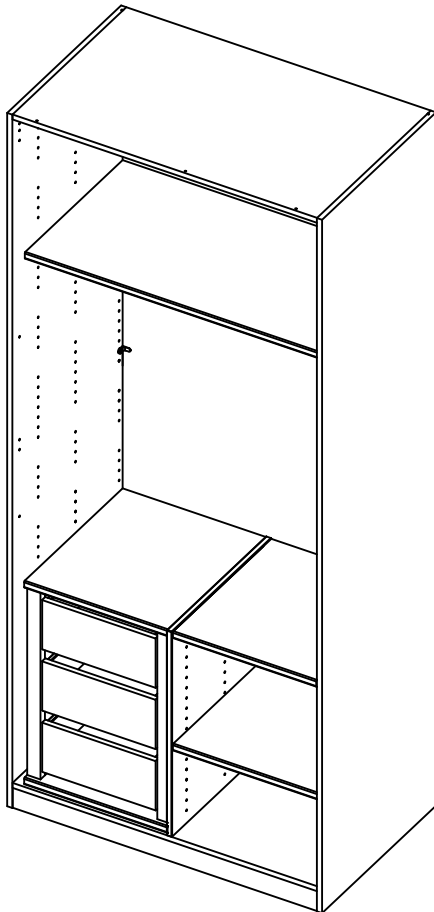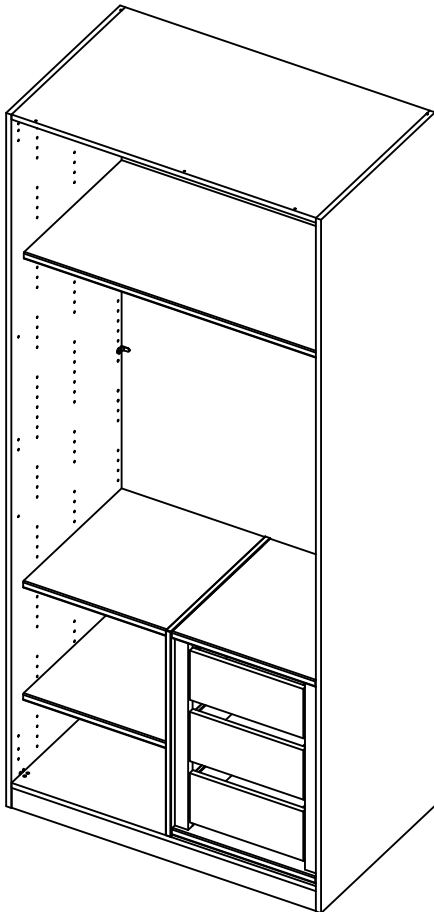


Typ II

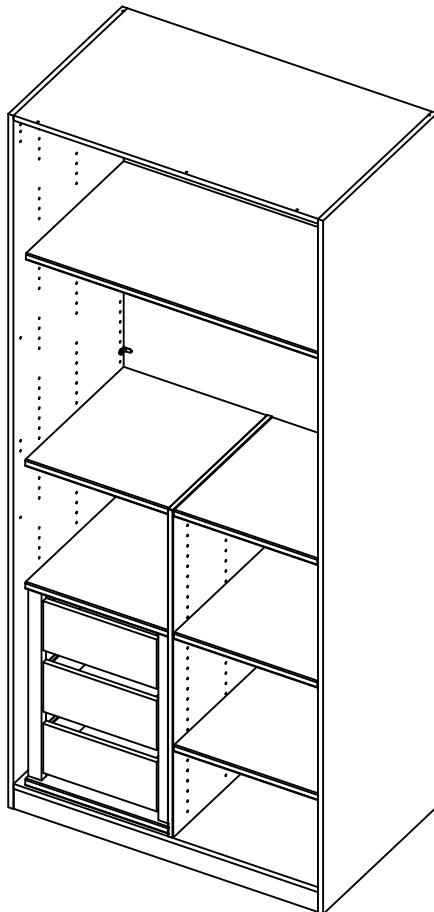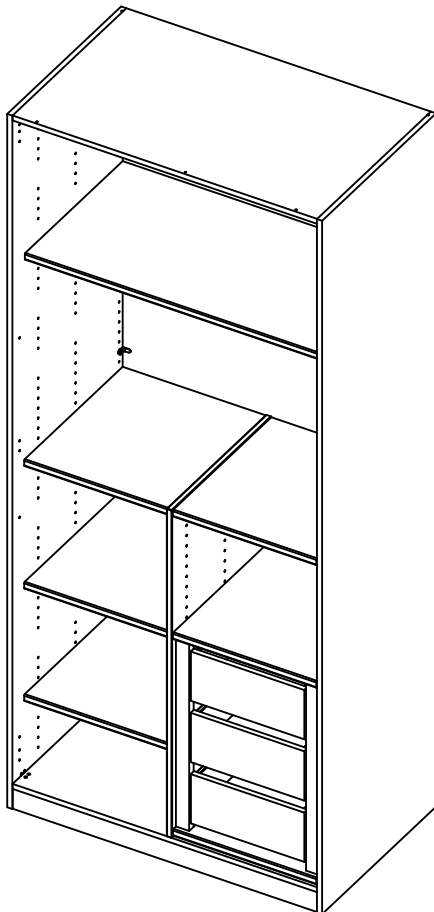


3.

Typ I

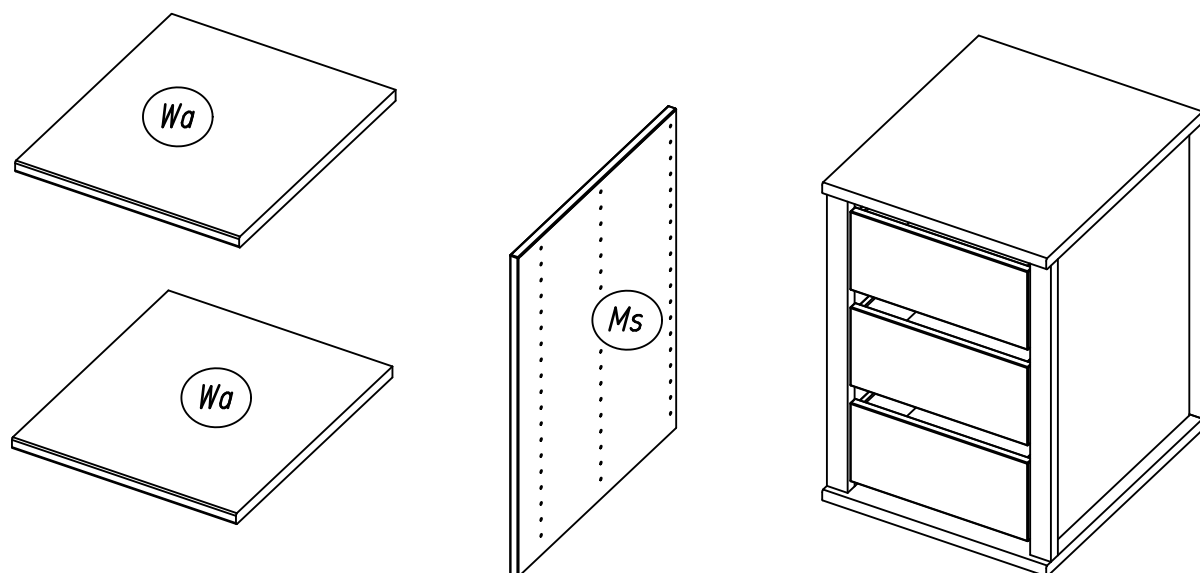


Typ II

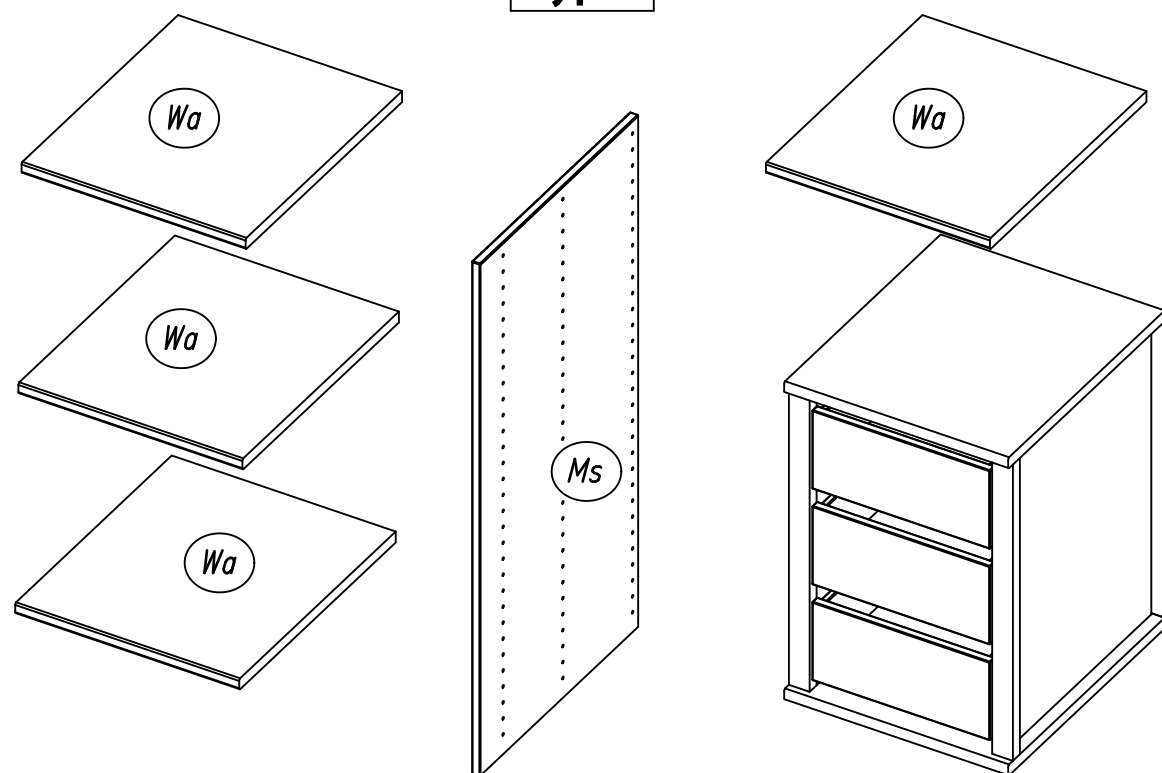


4.



1089




Kn



1


Kn



Typ I

Typ II



1.

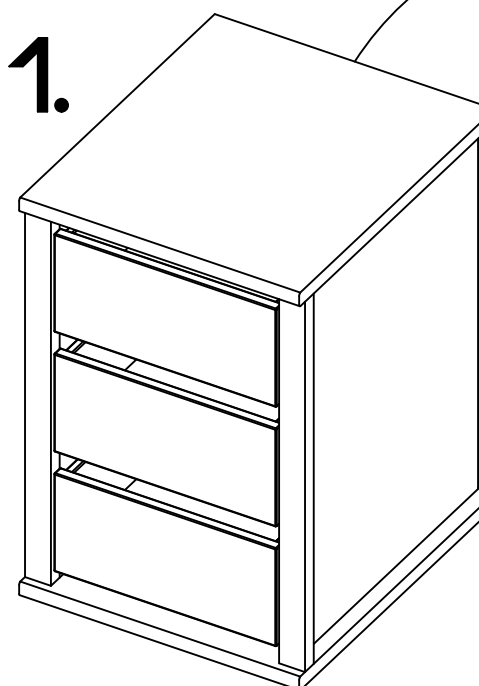

2.


4x

Kn

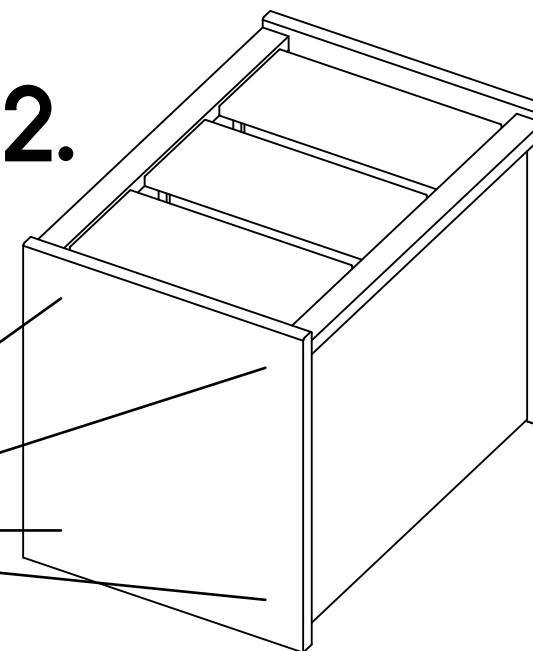

5.

2


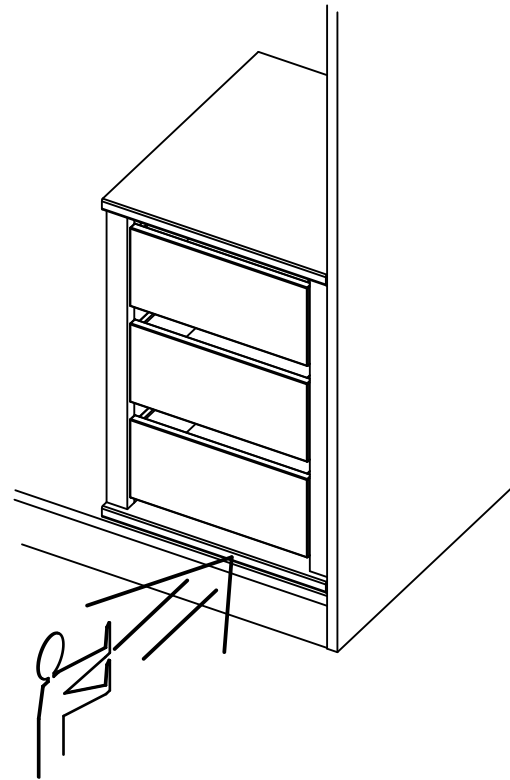


Typ I

Typ II

3

1089

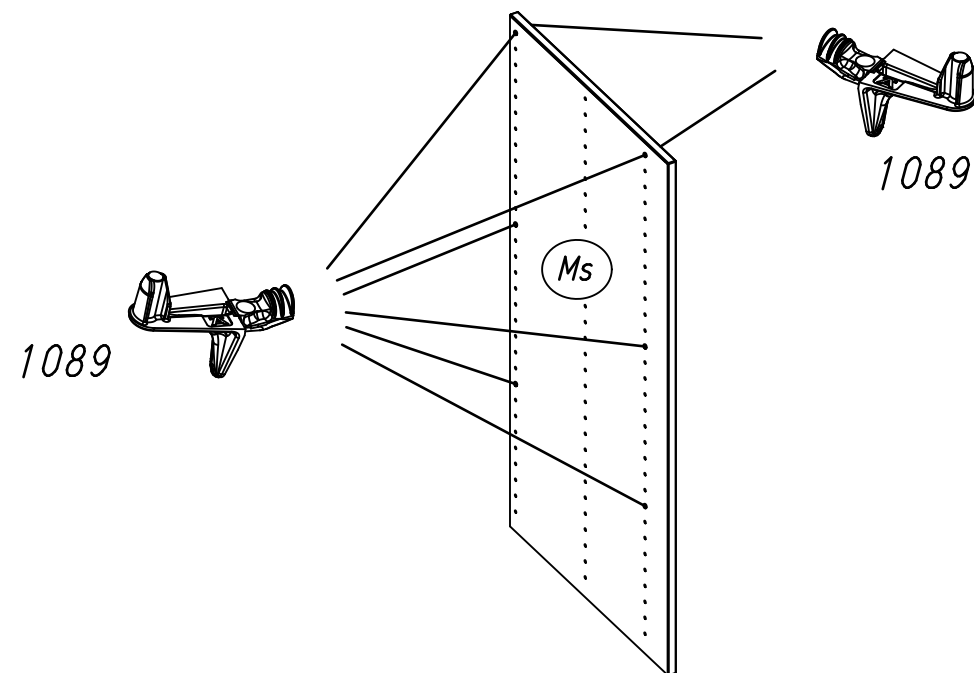


Typ I

Typ II

M0861

6.

4

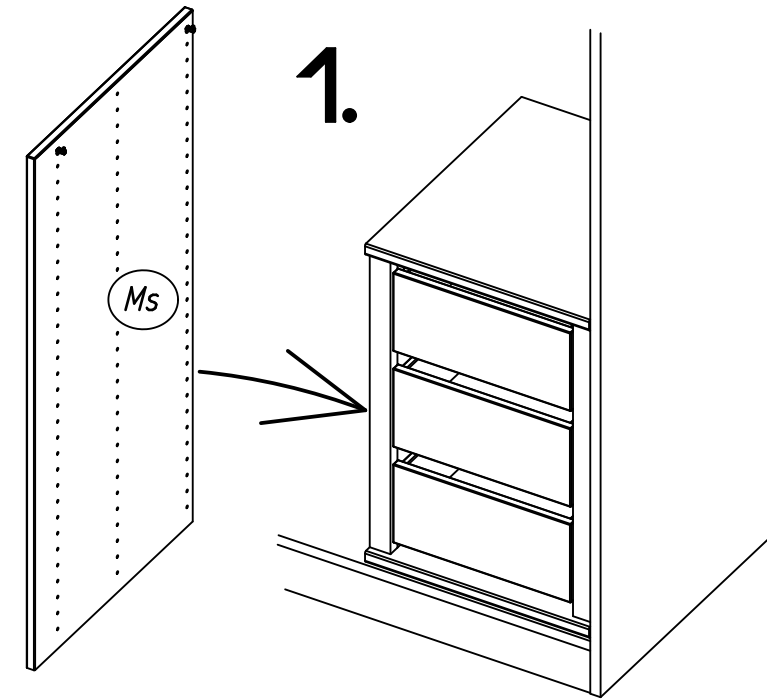


1.

Typ I

Typ II

2.

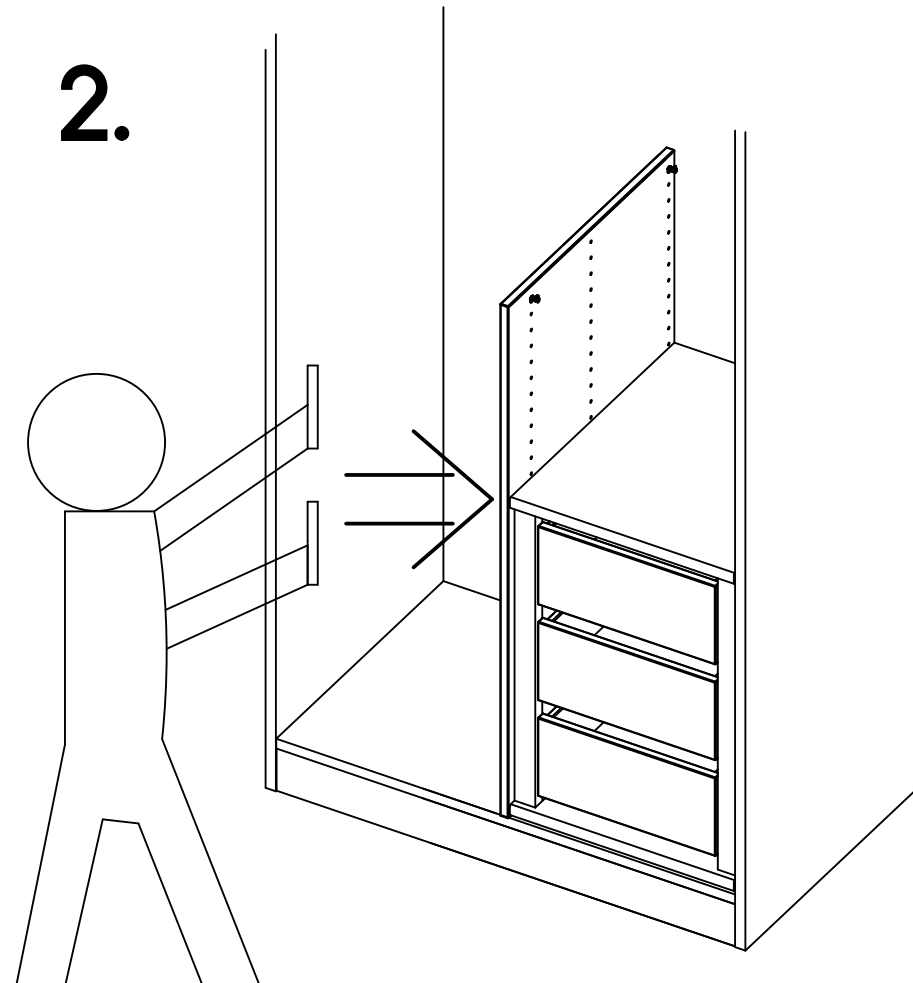


M0861

7.


5

1089



Typ I

Typ II

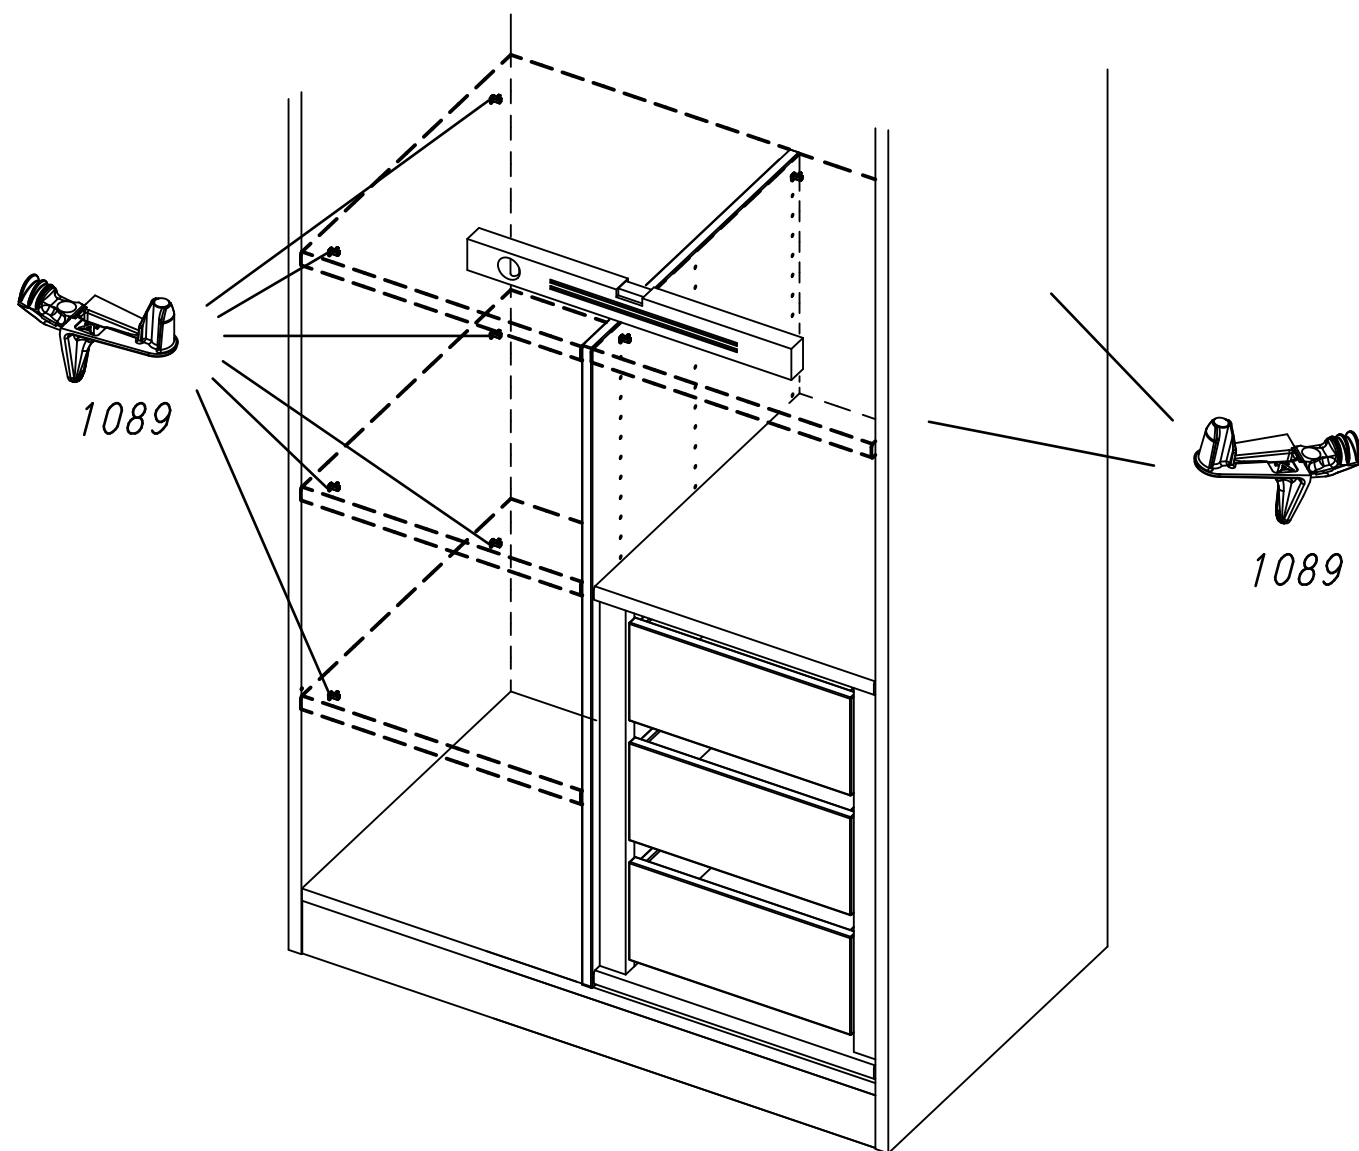


M0861

8.

6

Typ I



Typ II

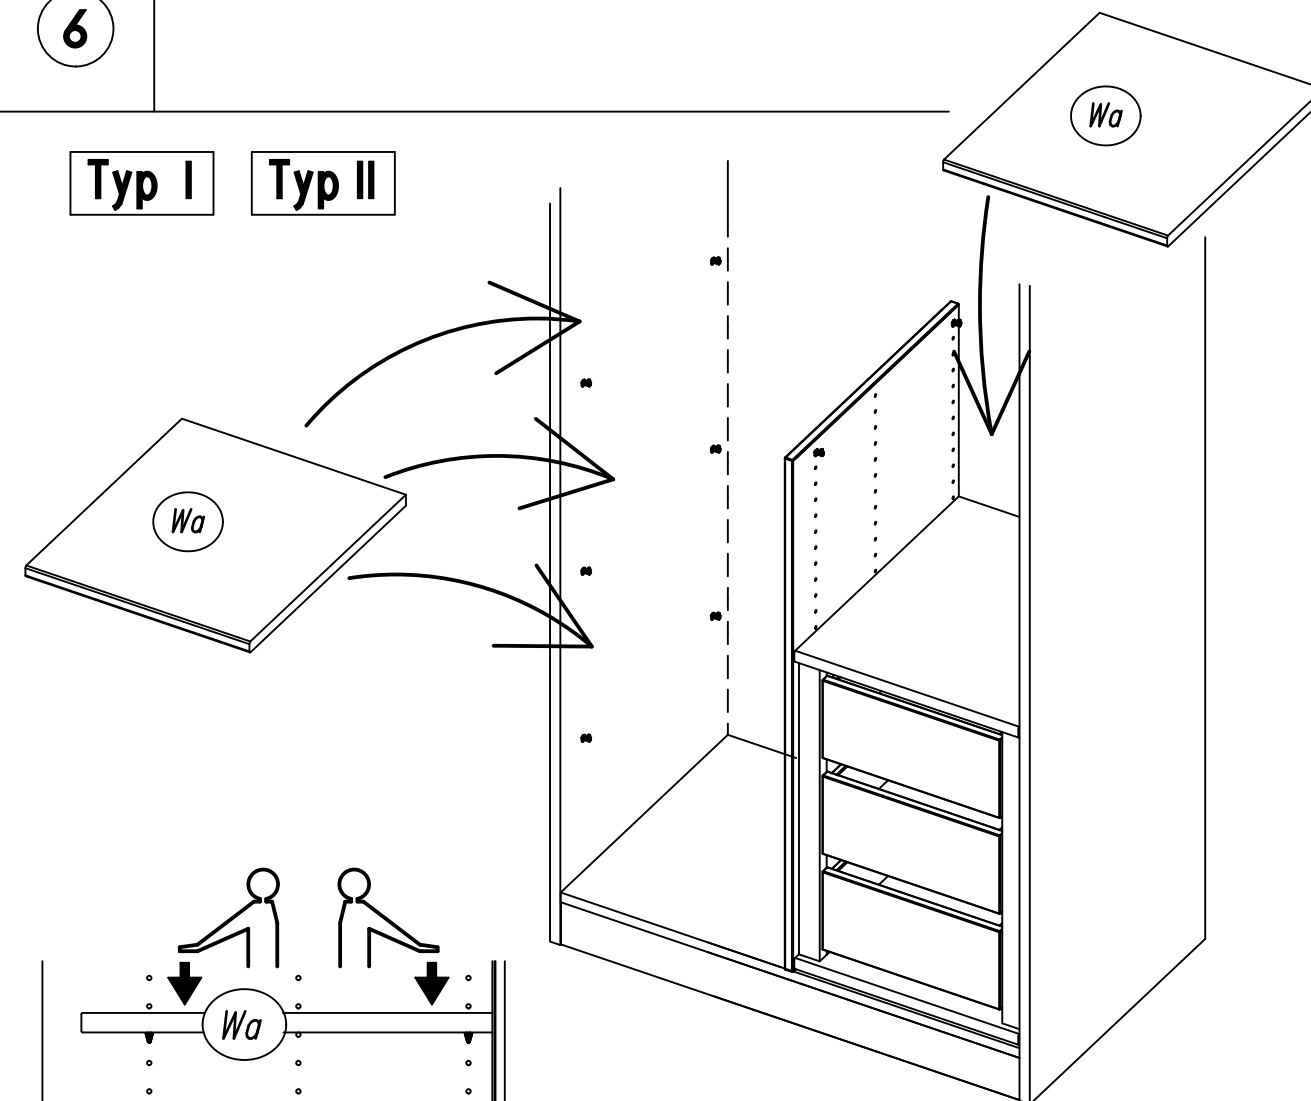

7

Typ I

Typ II

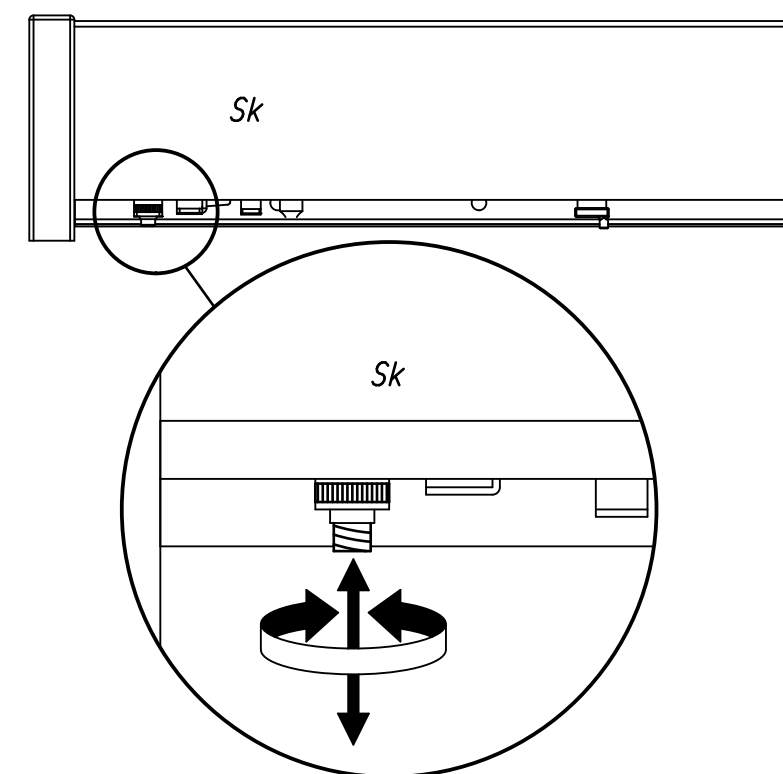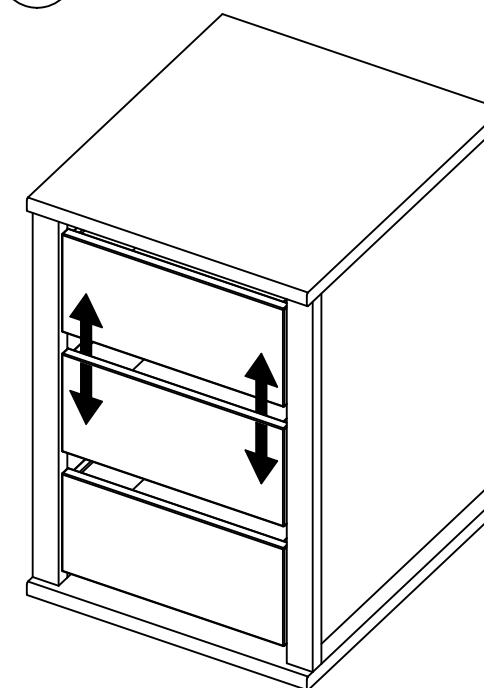

M0861