

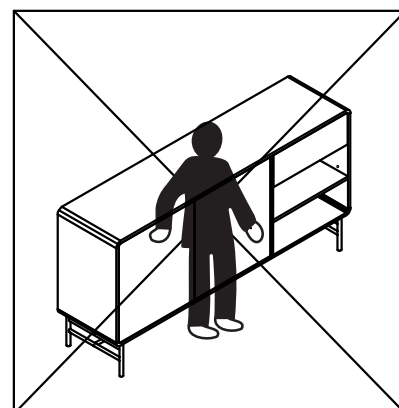
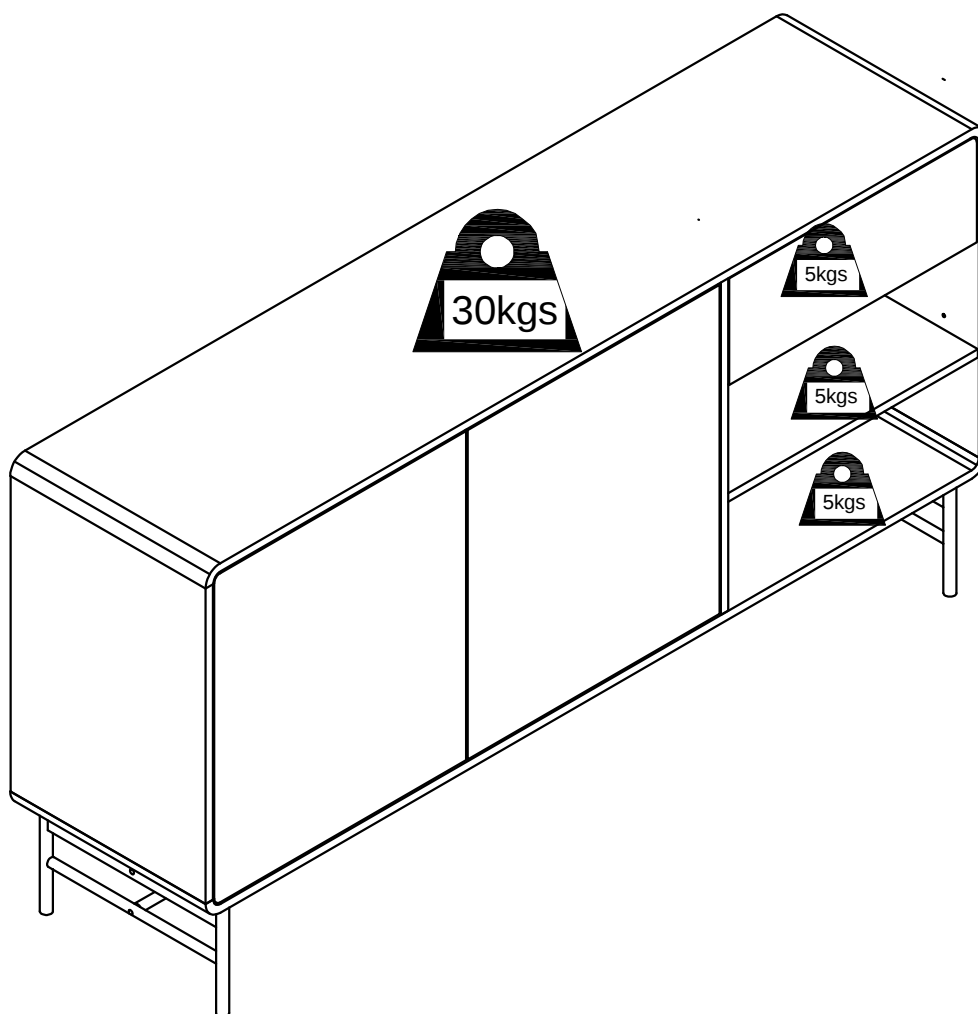








Assemble instruction

27980047/04


SANDY

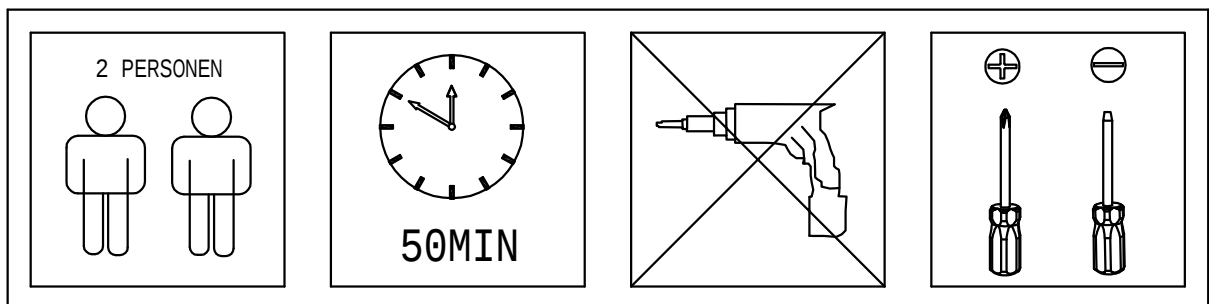

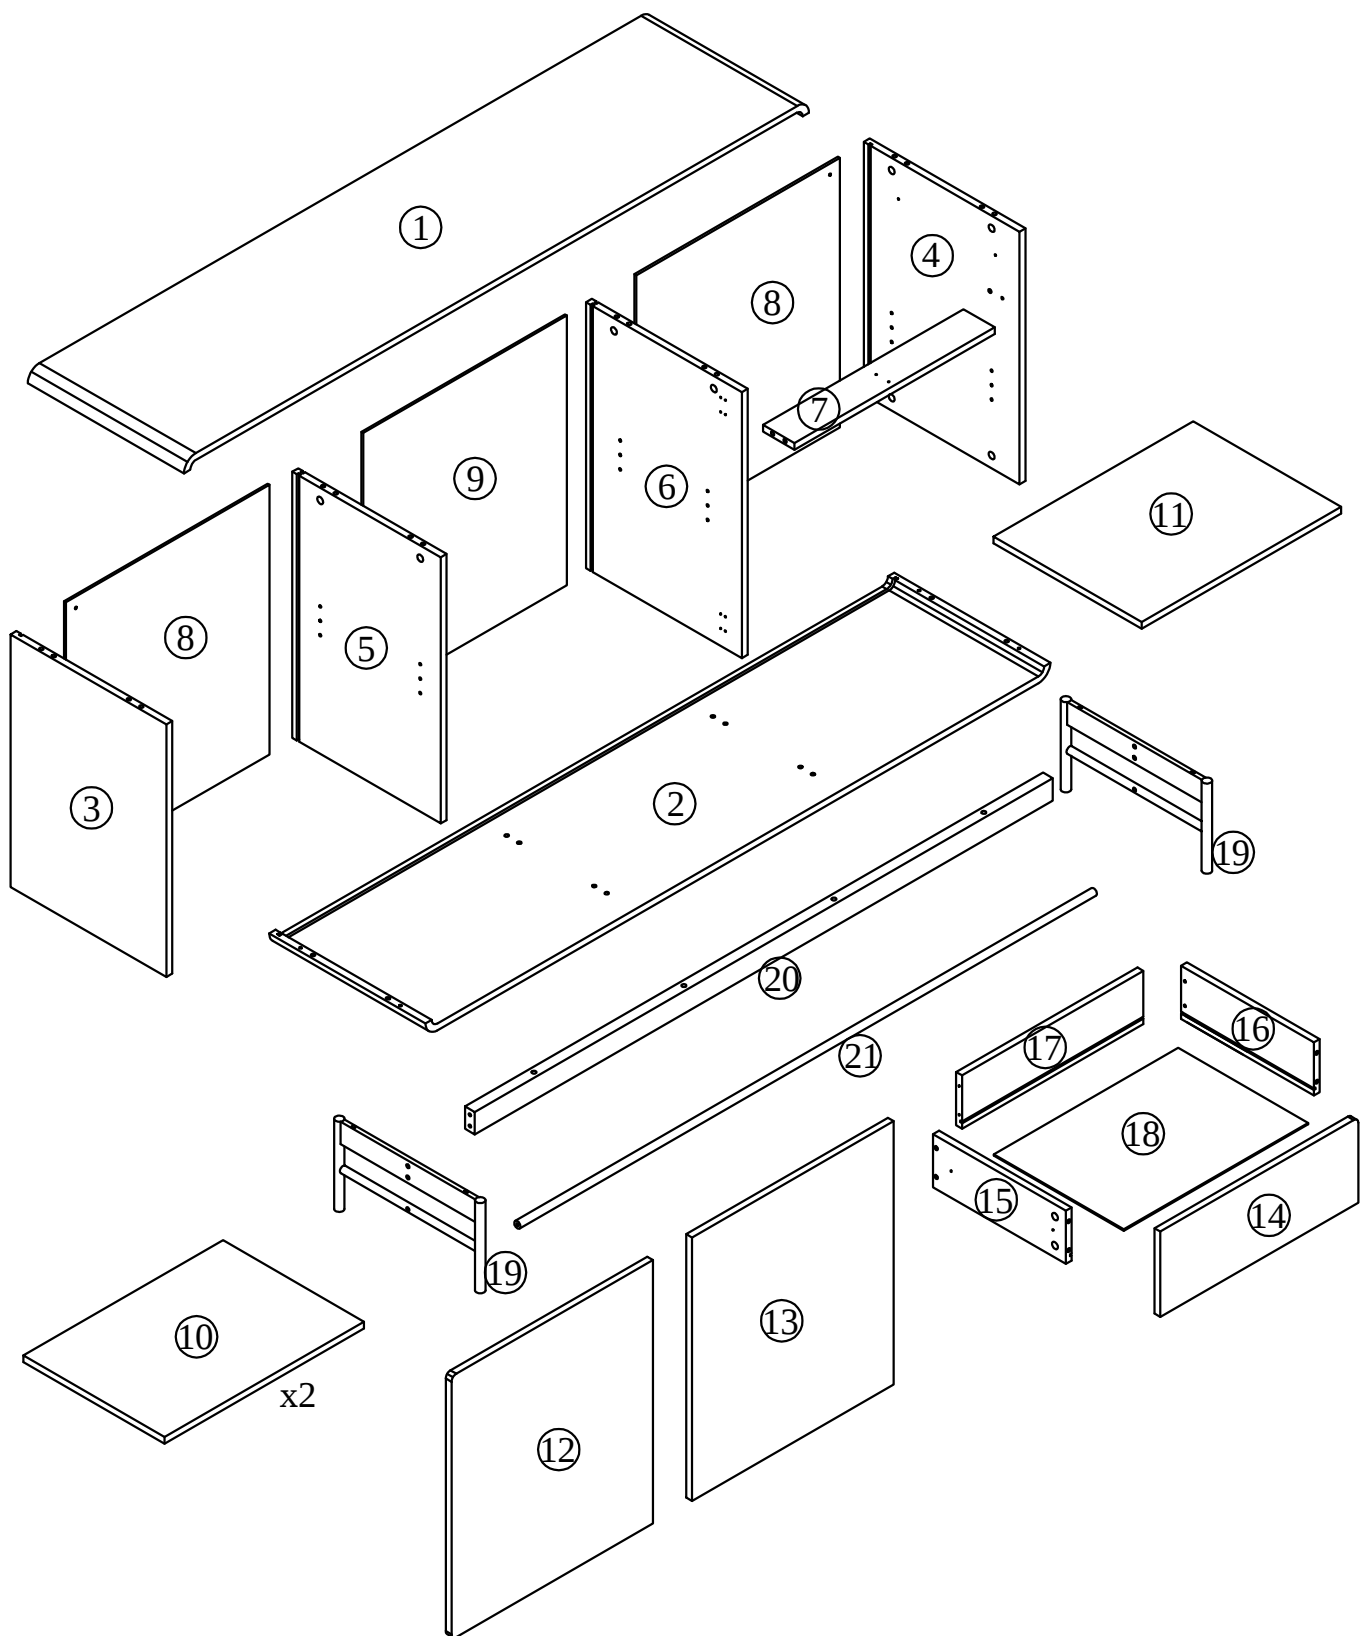


A	x18	B	x18	C	x18	D	x53	E	x4	F	x6	G	x8
													
6x35mm		Ø15x12mm		8x30mm		3.5x14mm		4x35mm		M6x35mm		M6x60mm	
H	x1	I	x12	J	x2	K	x2	L	x3	M	x3	N	x16
													
M4				340mm		340mm						Ø20mm	
O	x2	P	x2	Q	x2	R	x4	S	x12	T	x4		
													
Ø20x12mm		4x60mm		6x30mm		7x40mm		5x20mm					


Assembly details

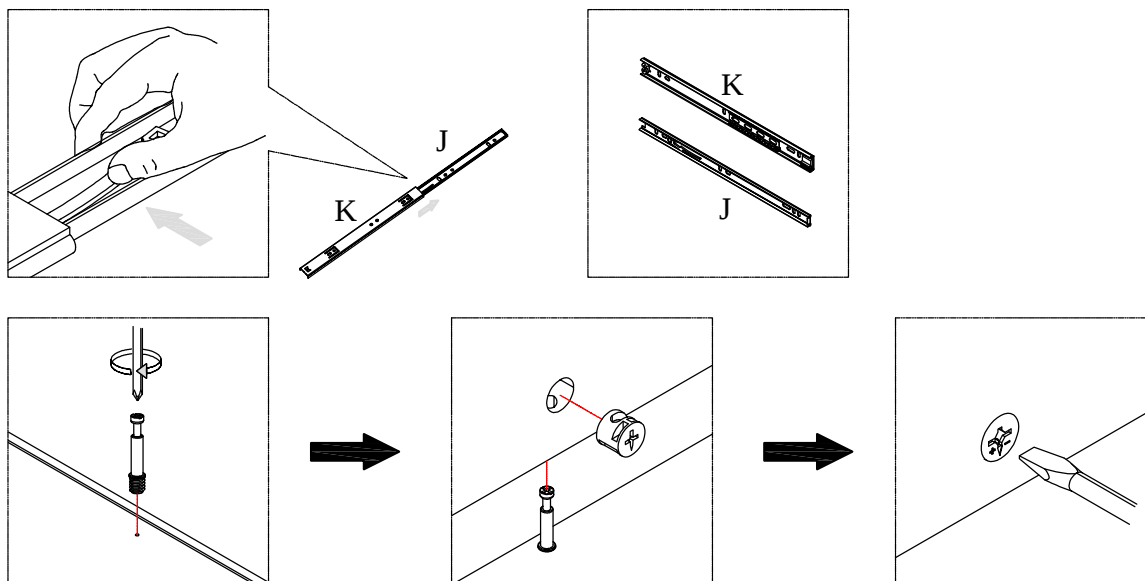


1

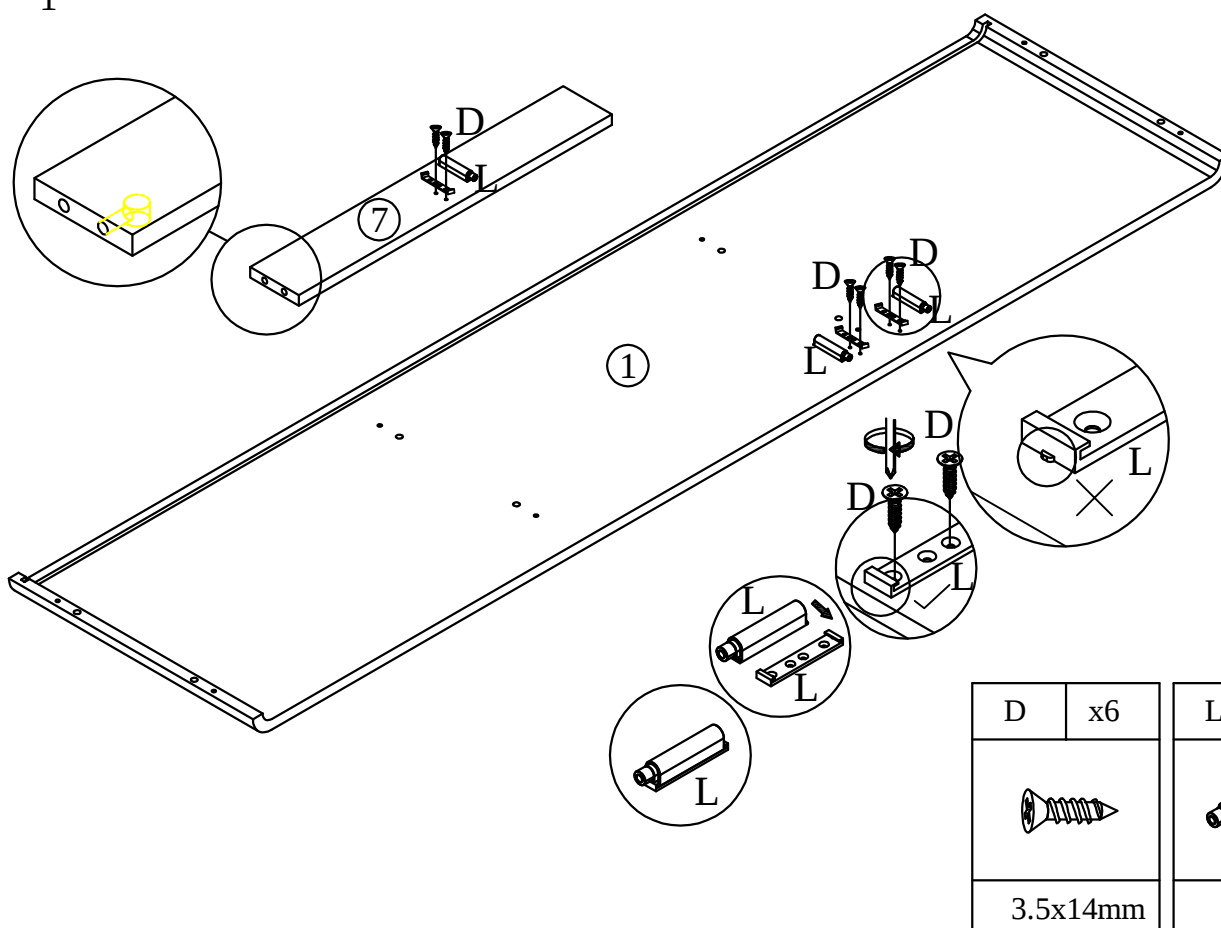


2

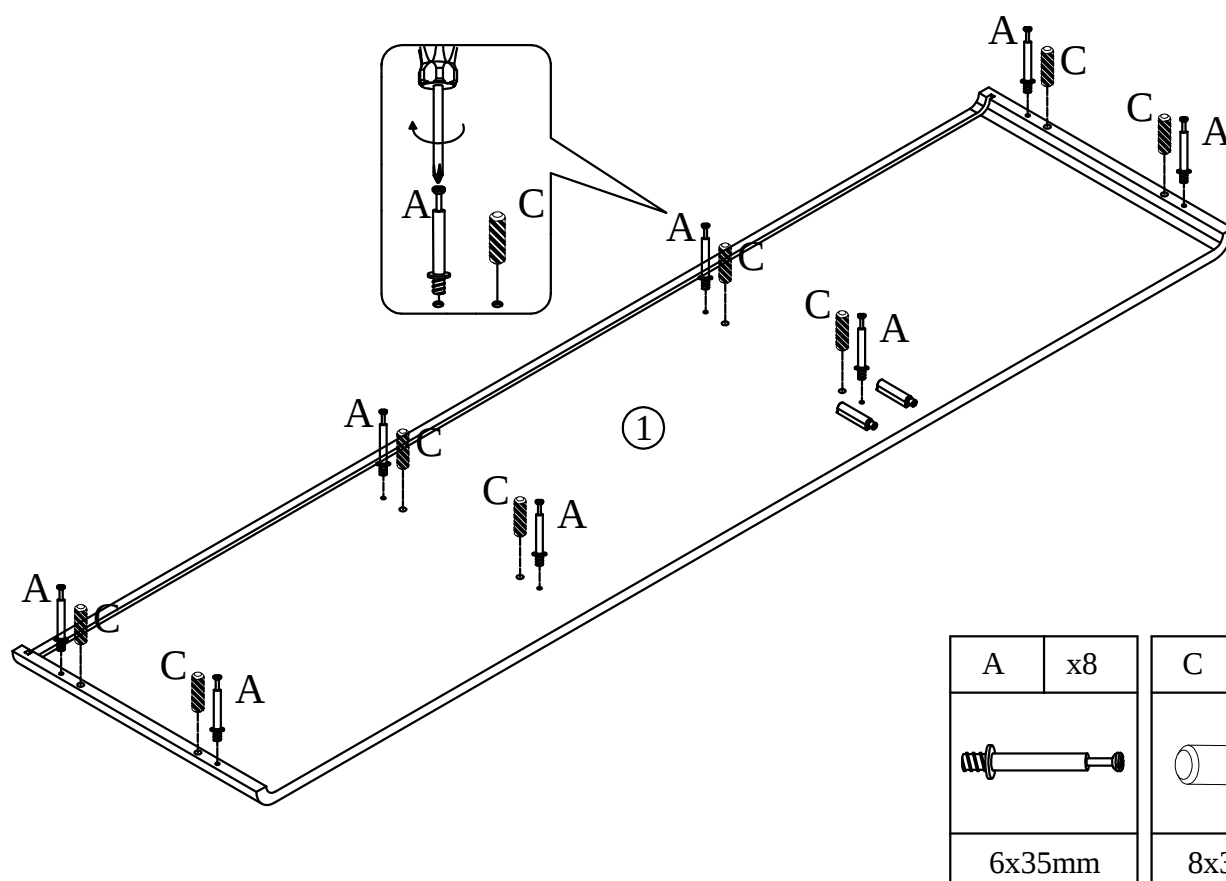



3

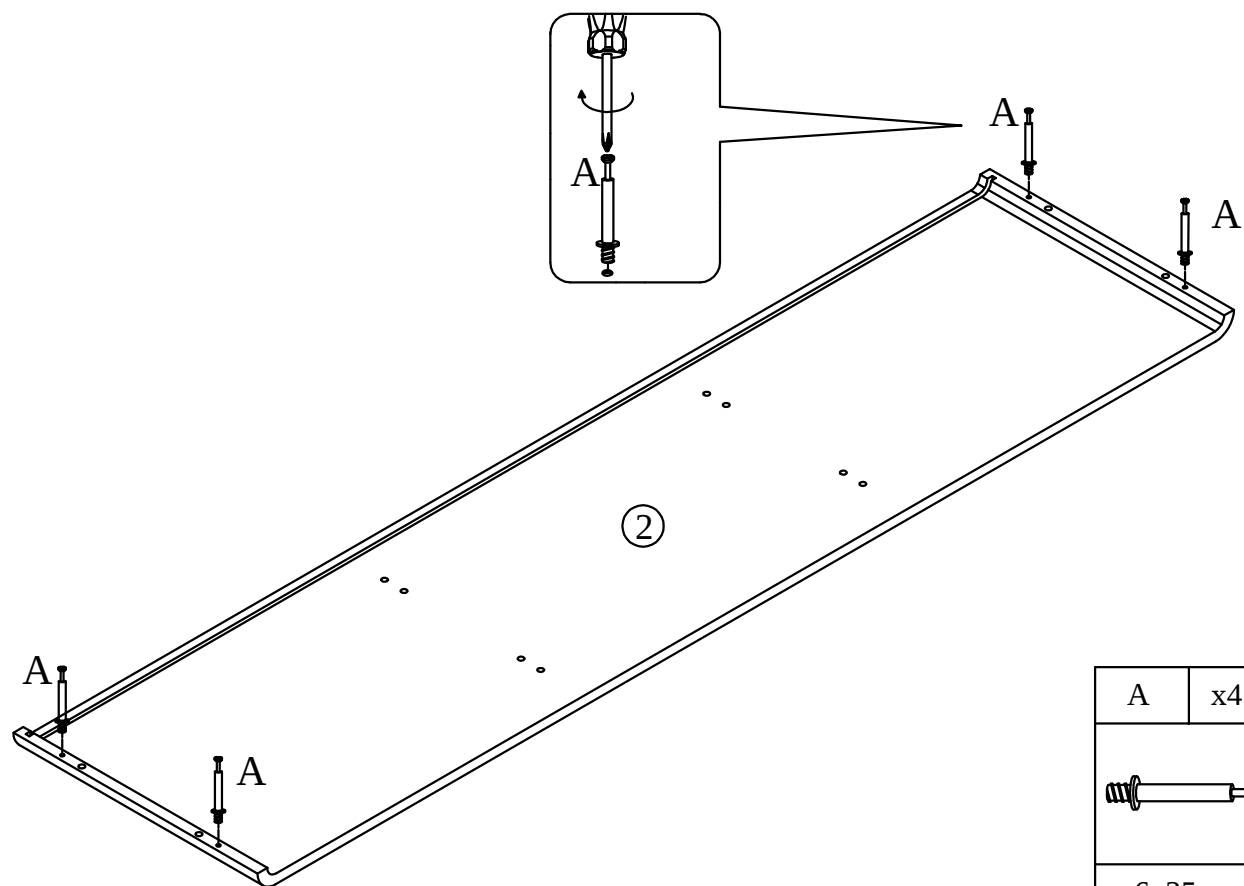


A	x4
	
6x35mm	

4

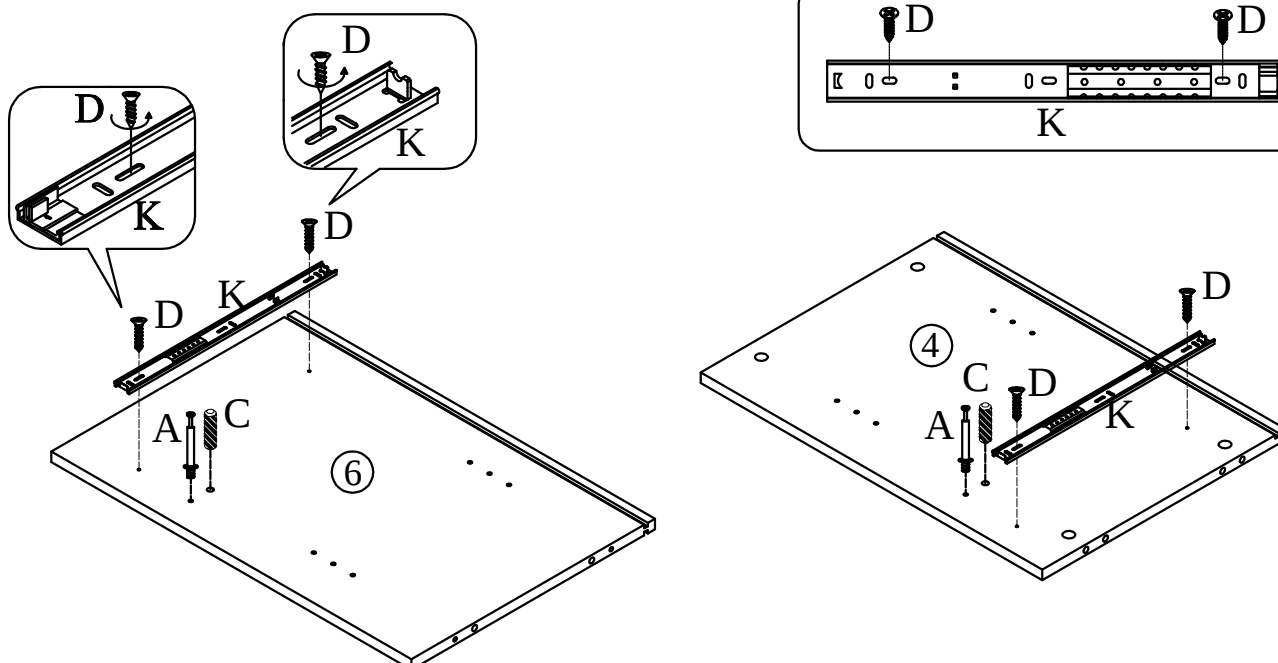


A	x2	C	x2	D	x4	K	x2
							
6x35mm		8x30mm		3.5x14mm		340mm	

5

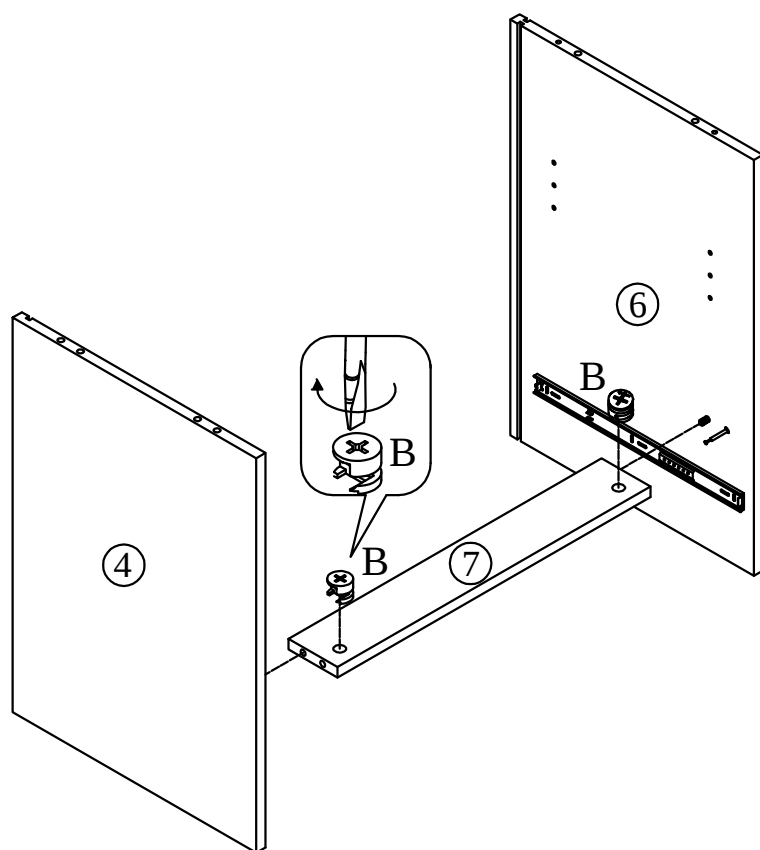


B	x2
	
Ø15x12mm	

6

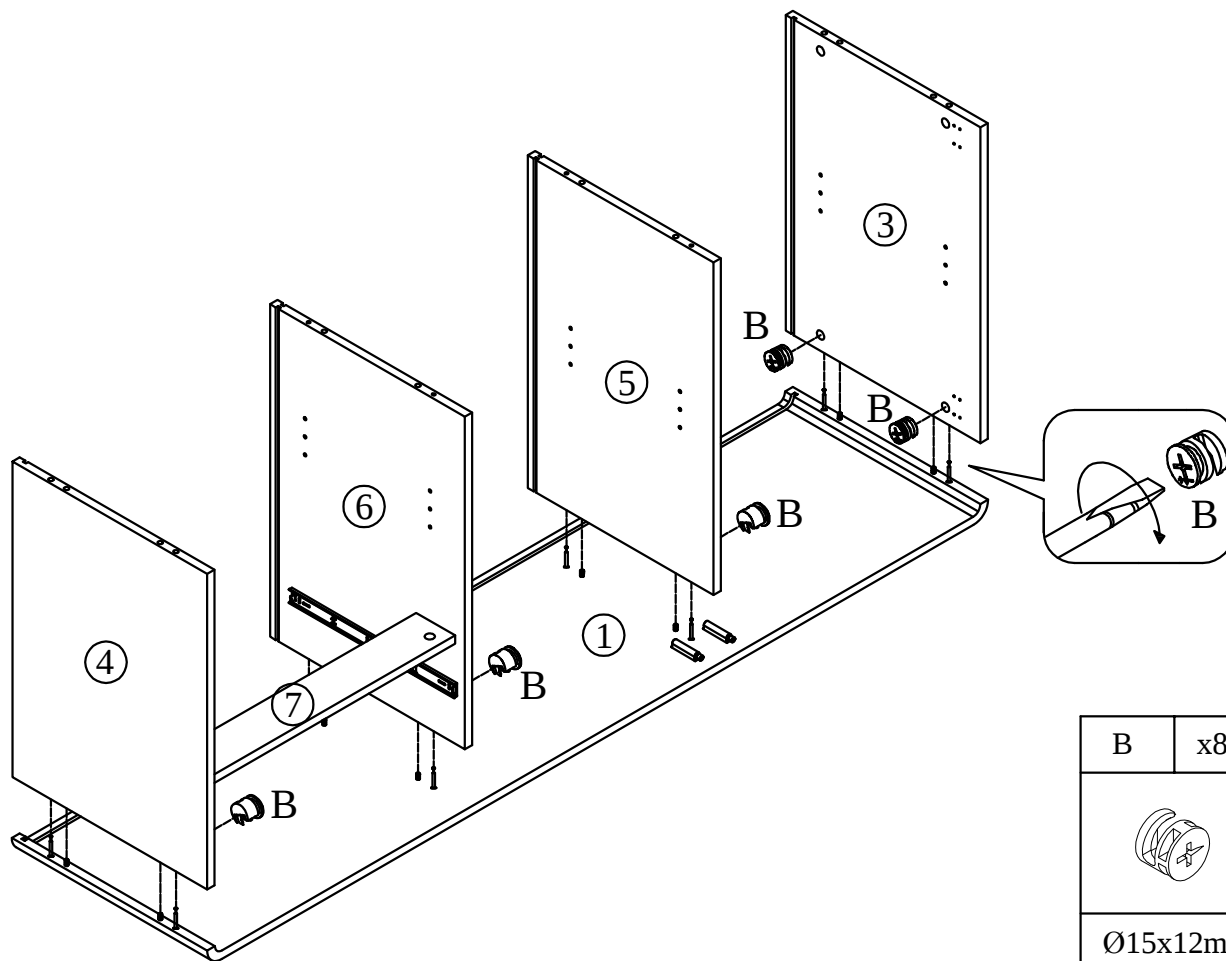


B	x8
	
Ø15x12mm	

7

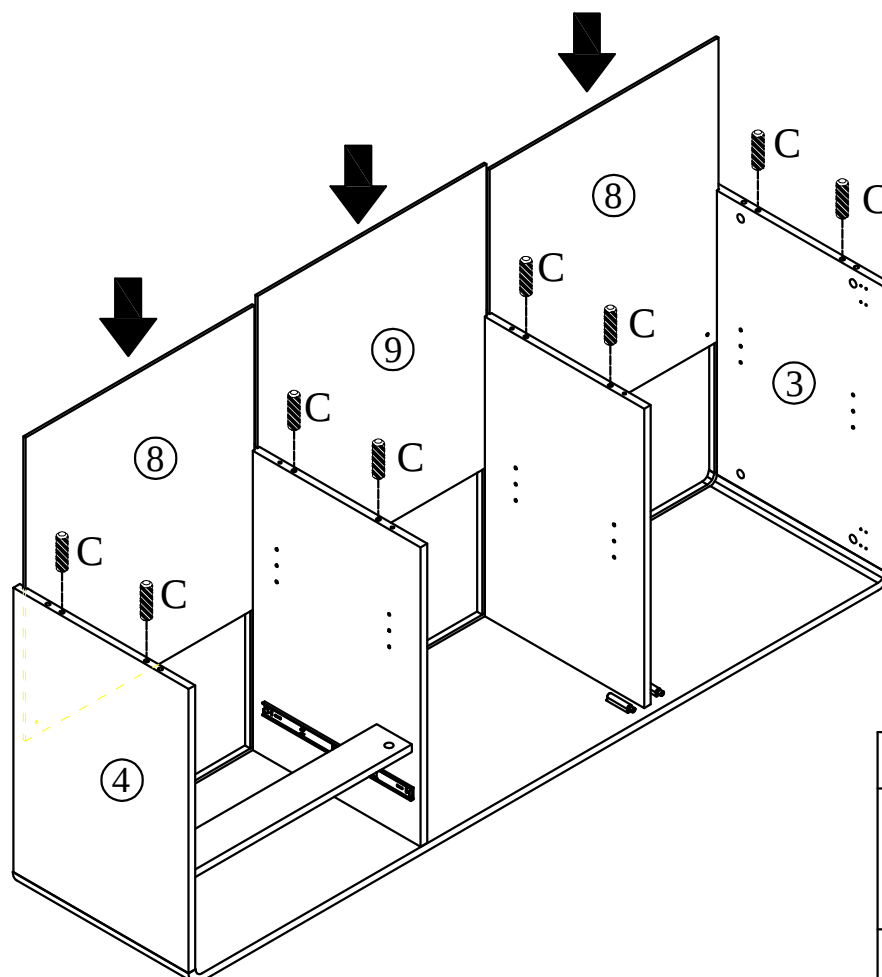


C	x8
	
8x30mm	

8


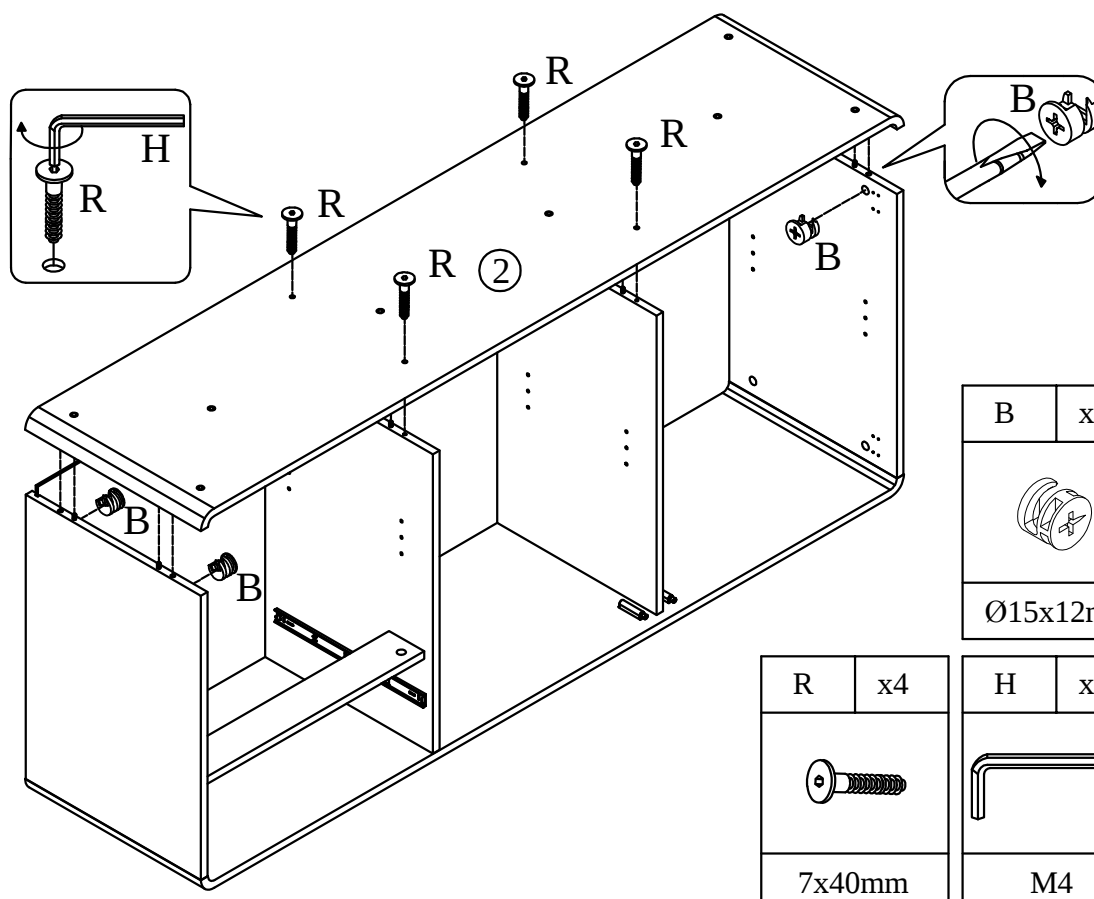




B	x4
	
Ø15x12mm	

R	x4
	
7x40mm	



H	x1
	
M4	

9

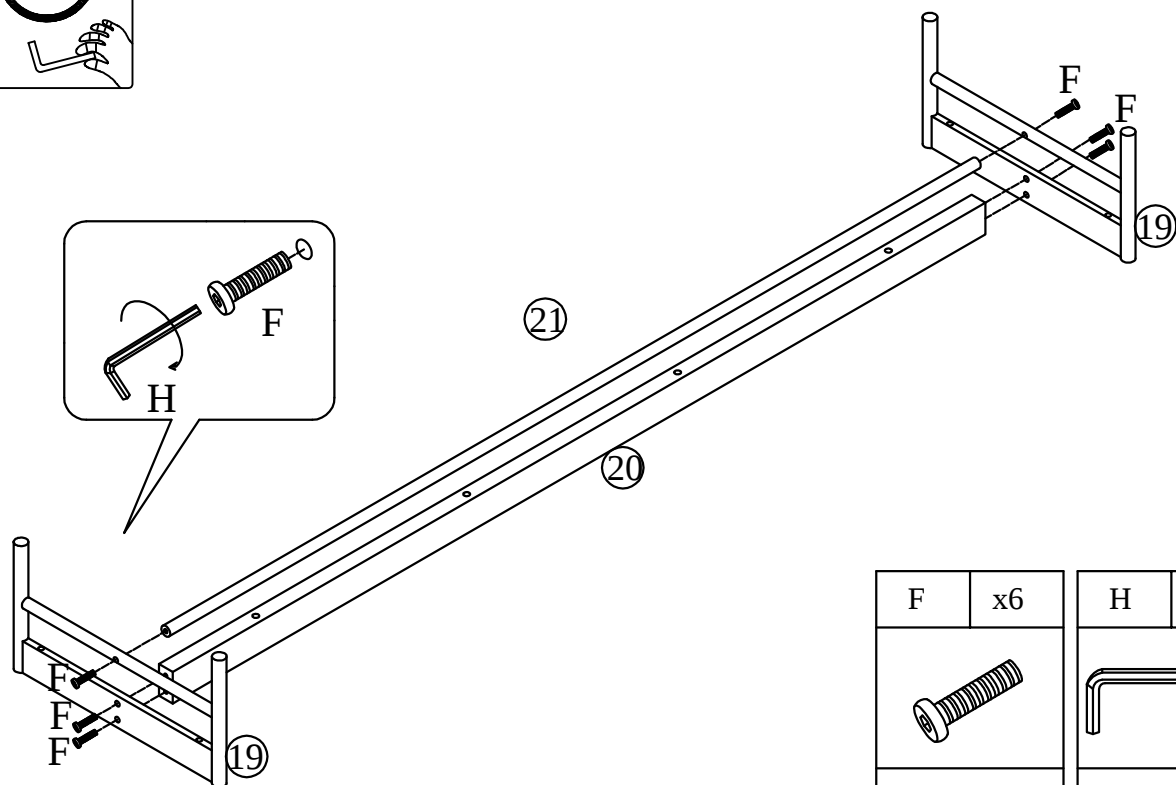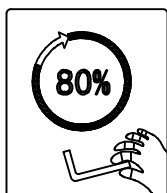


F	x6	H	x1
			
M6x35mm		M4	

10

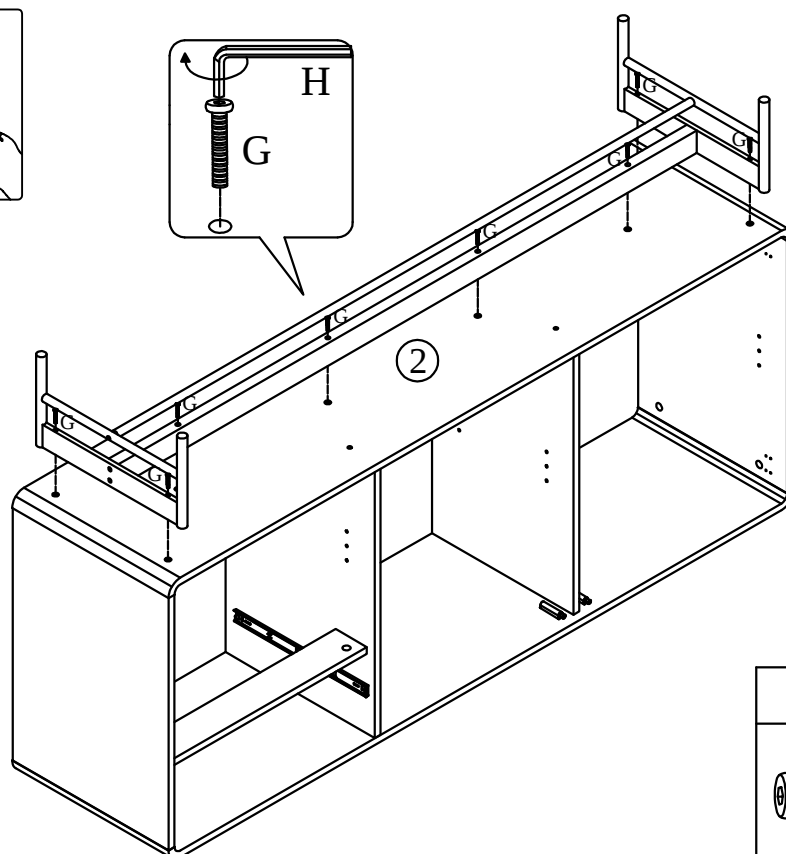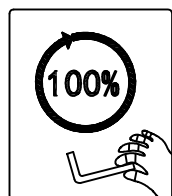


G	x8	H	x1
			
M6x60mm		M4	

11

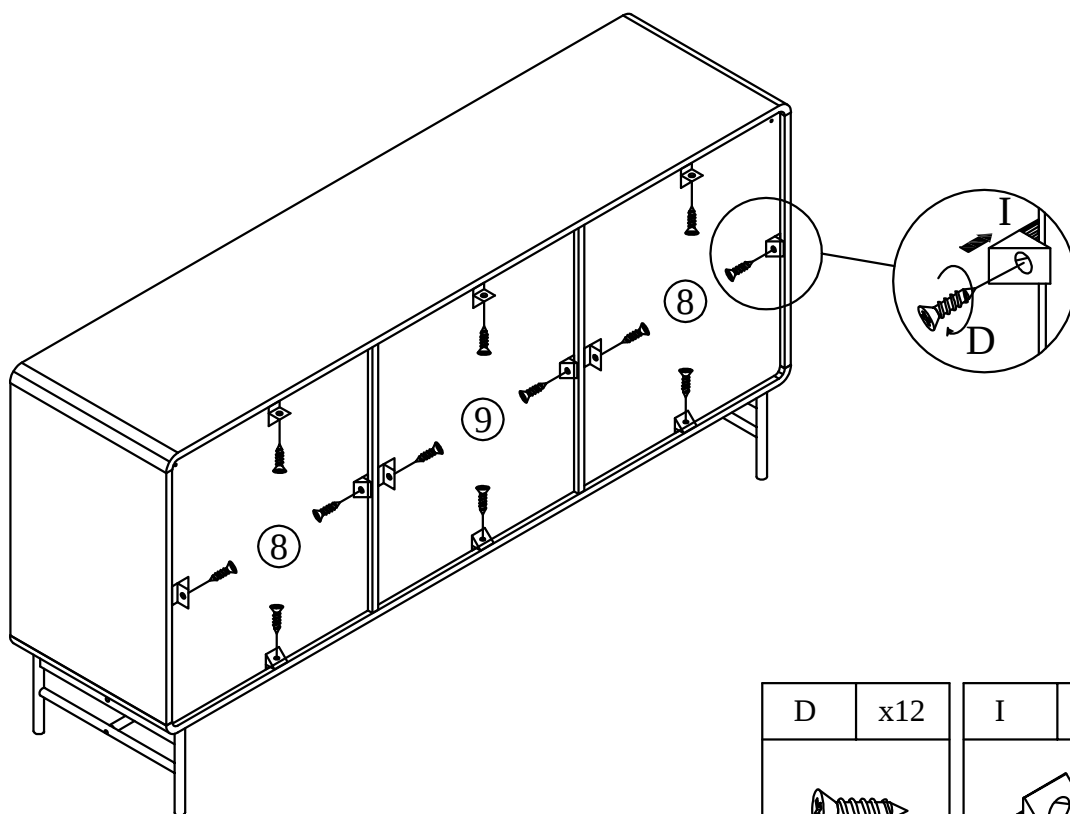

D	x12	I	x12
			
3.5x14mm			


12

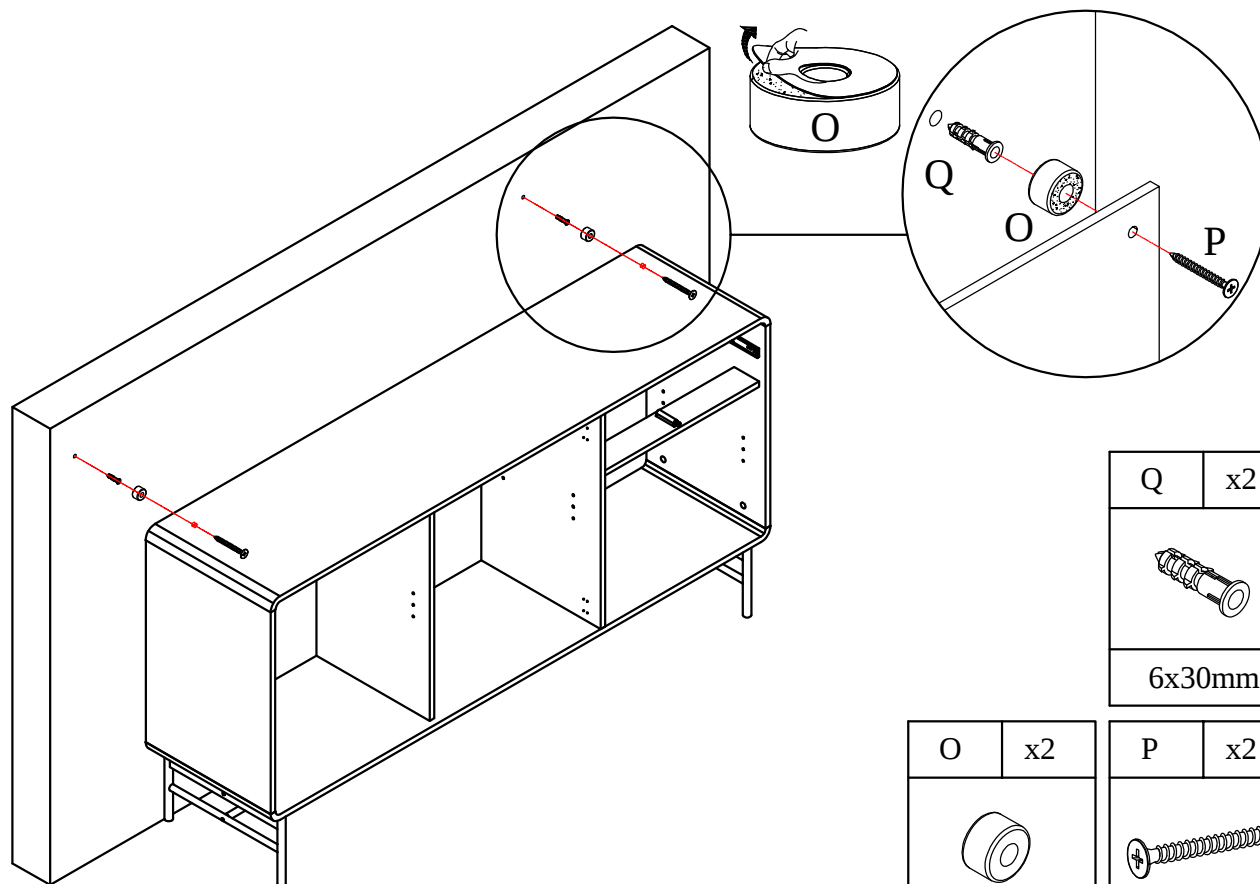

Q	x2	P	x2
			
6x30mm		4x60mm	


O	x2
	
Ø20x12mm	

13

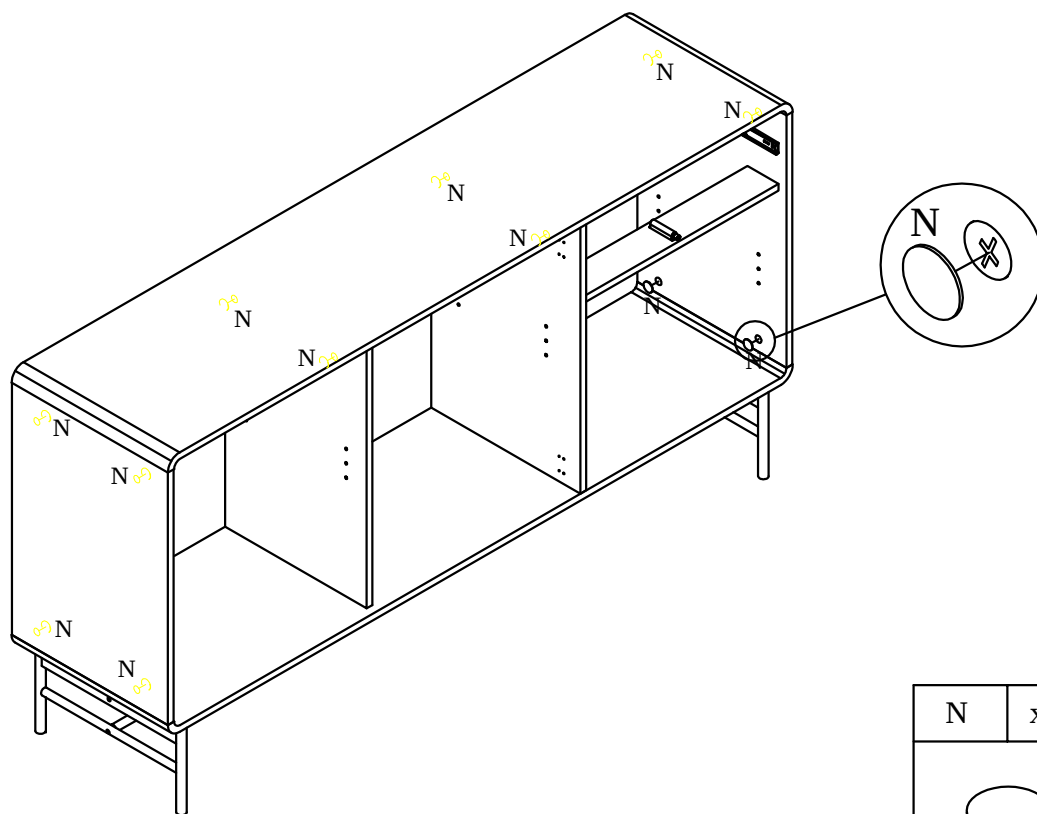


N	x12
	
Ø20mm	

14

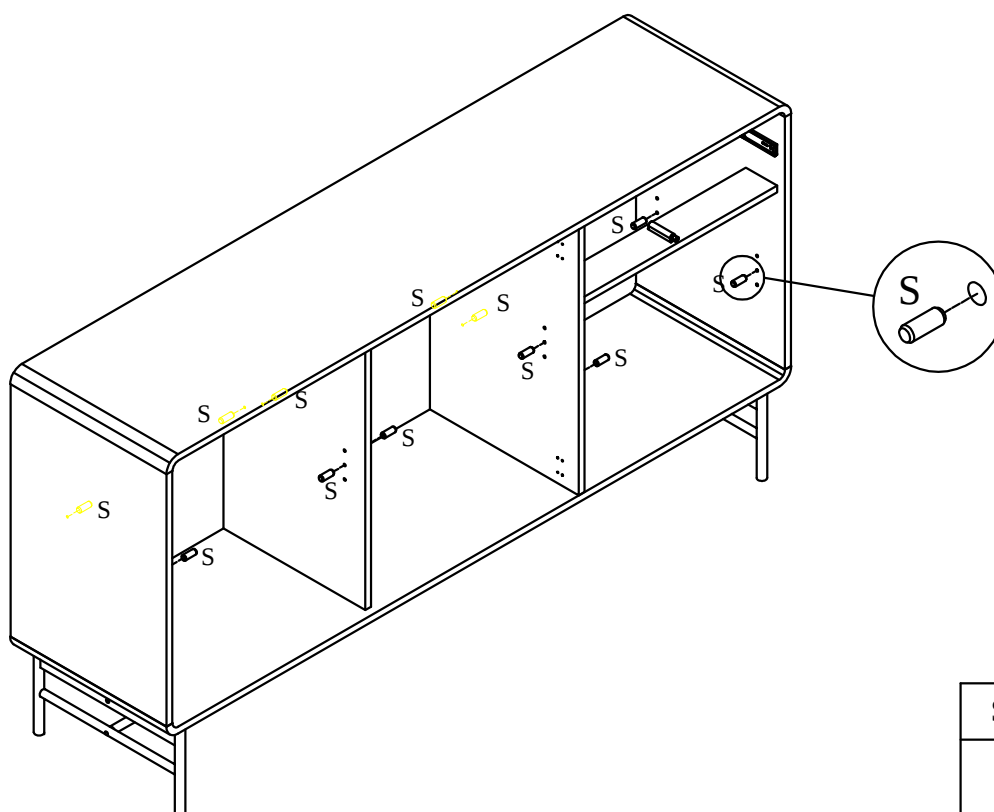


S	x12
	
5x20mm	




15

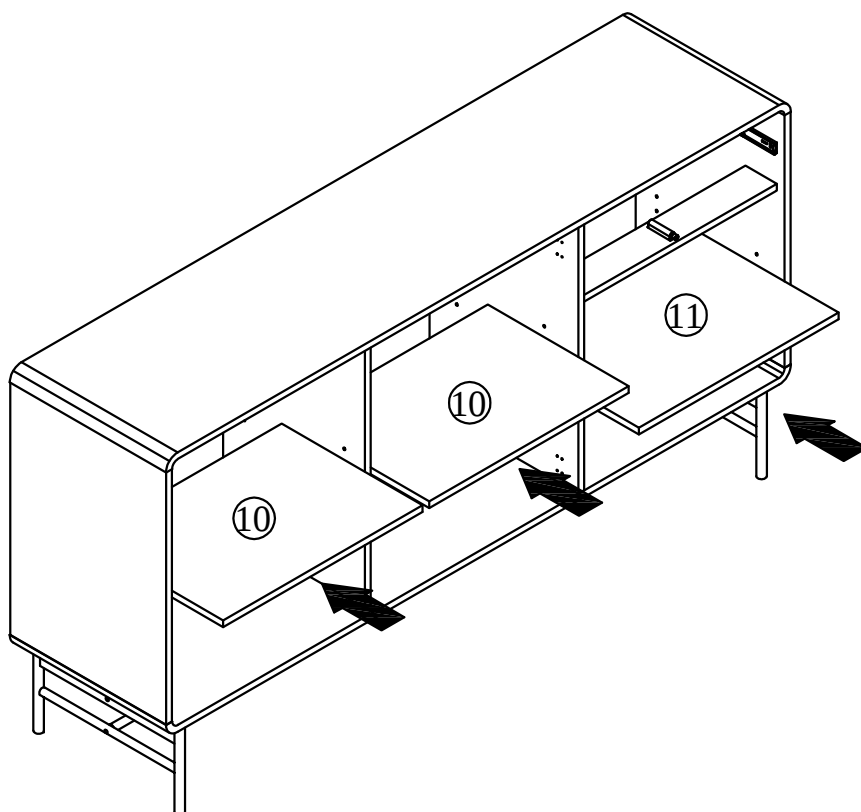

16


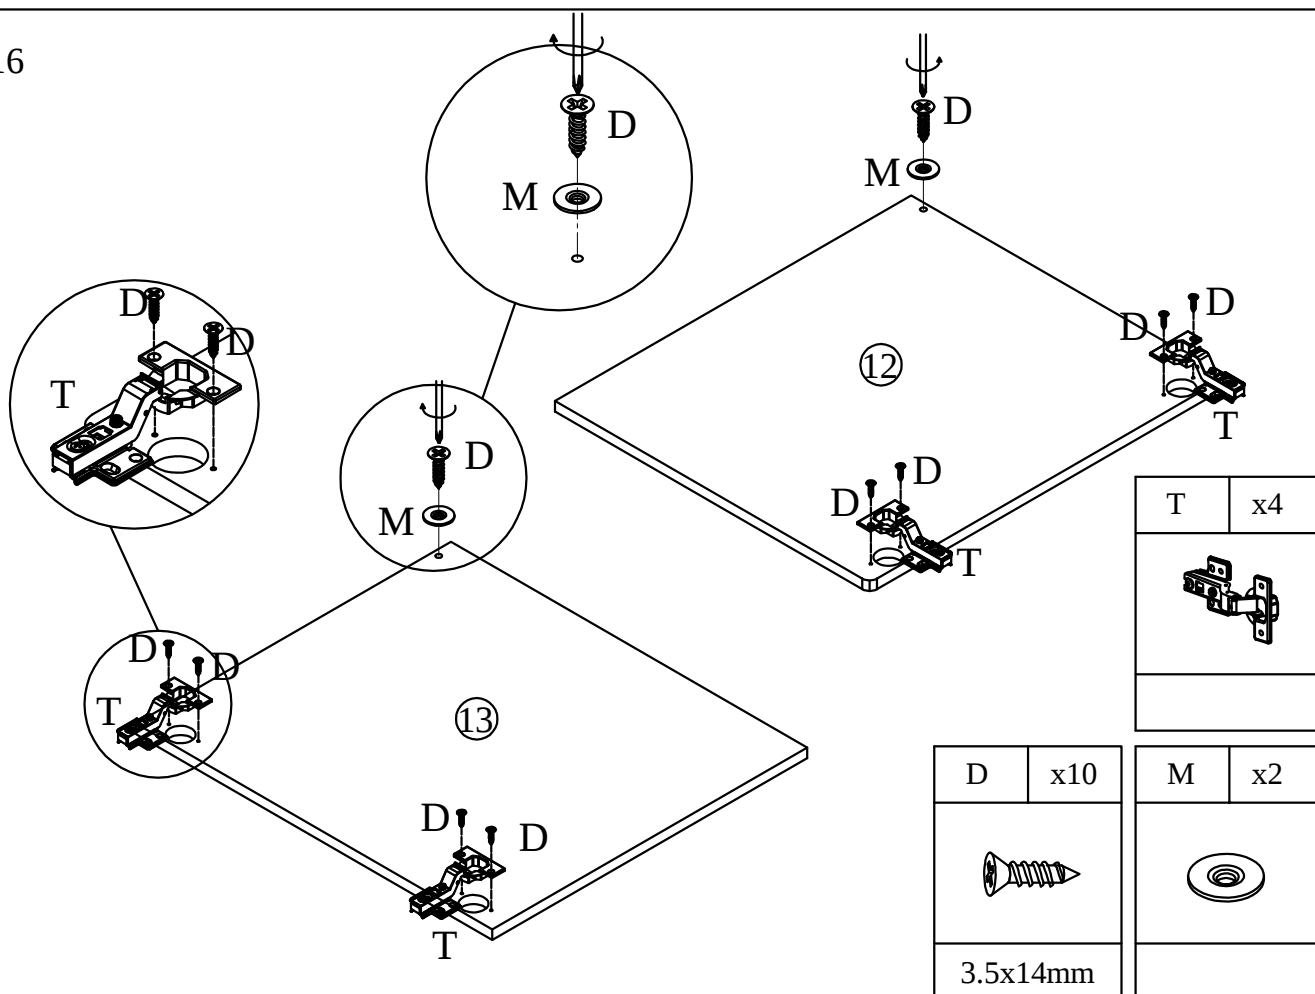



17

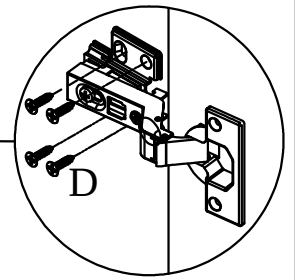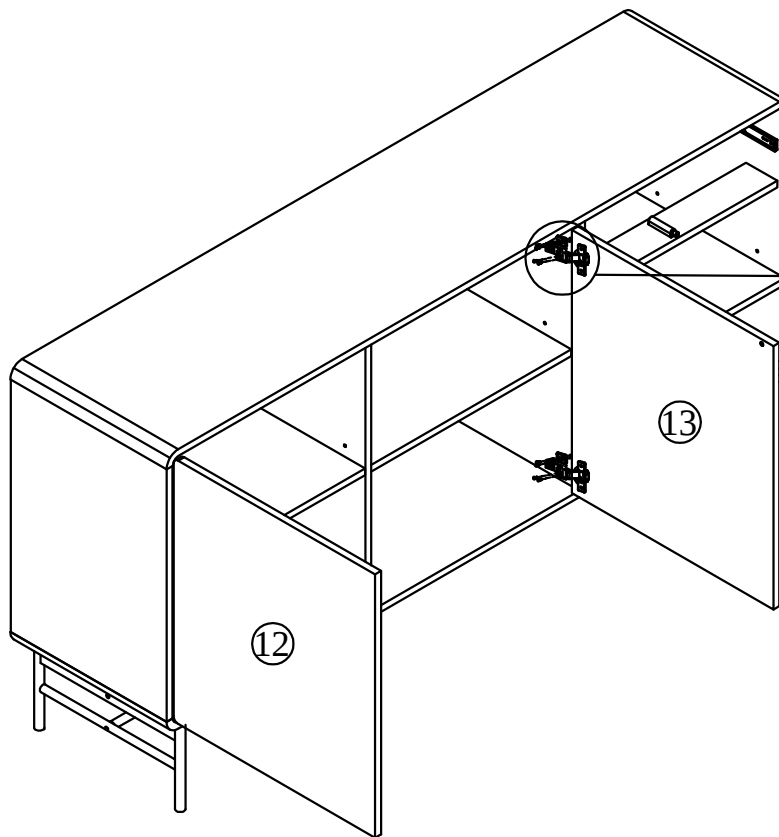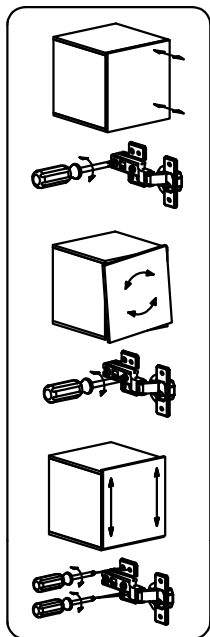

D	x16
	
3.5x14mm	

18

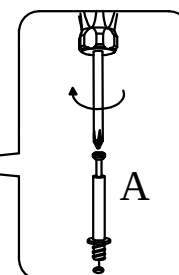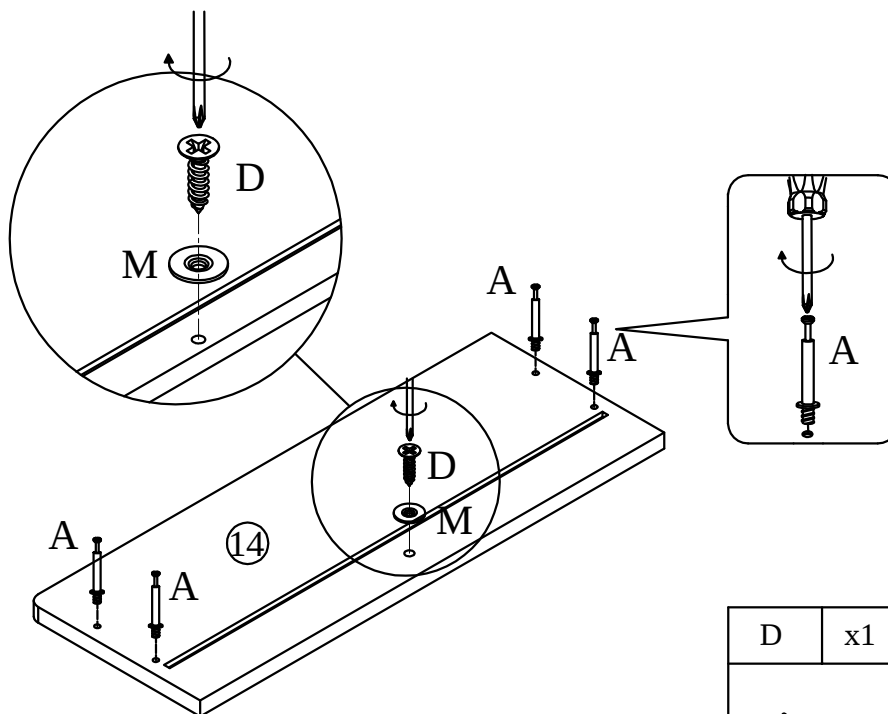



A	x4
	
6x35mm	

D	x1
	
3.5x14mm	


M	x1
	

19

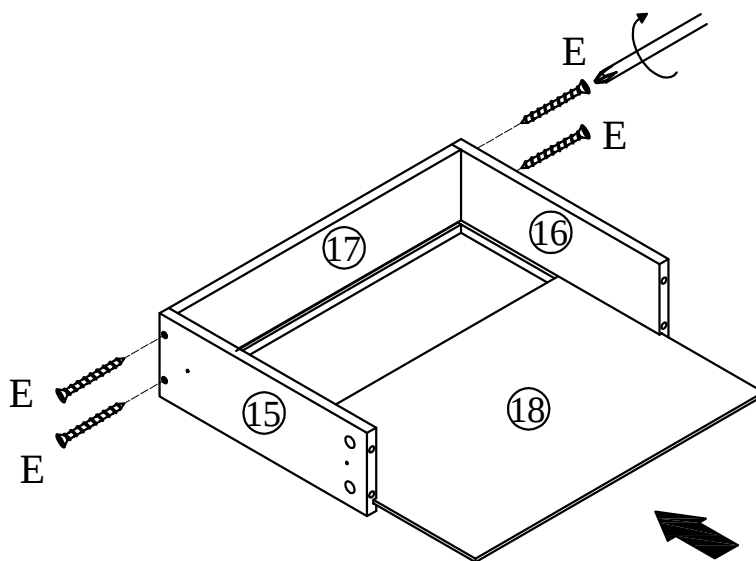


E	x4
	
4x35mm	

20

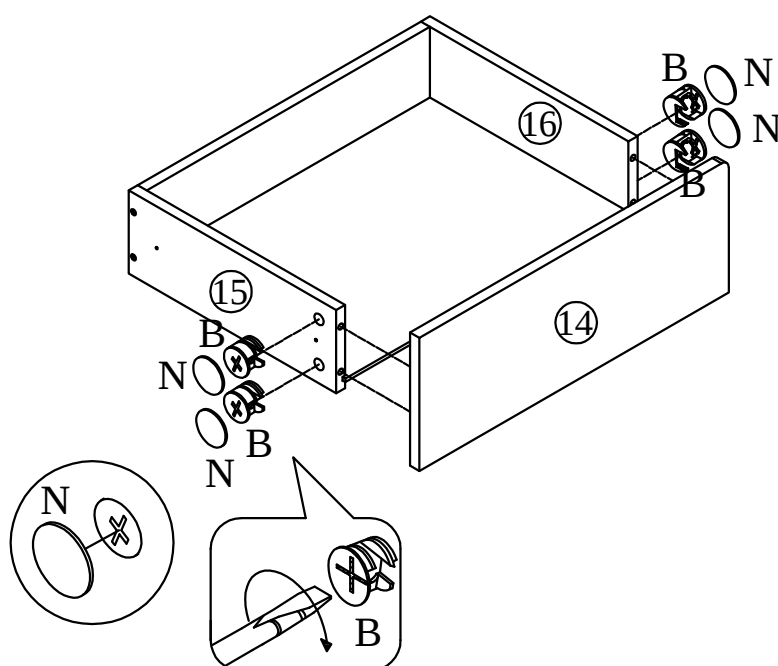

B	x4	N	x4
			
Ø15x12mm		Ø20mm	

21

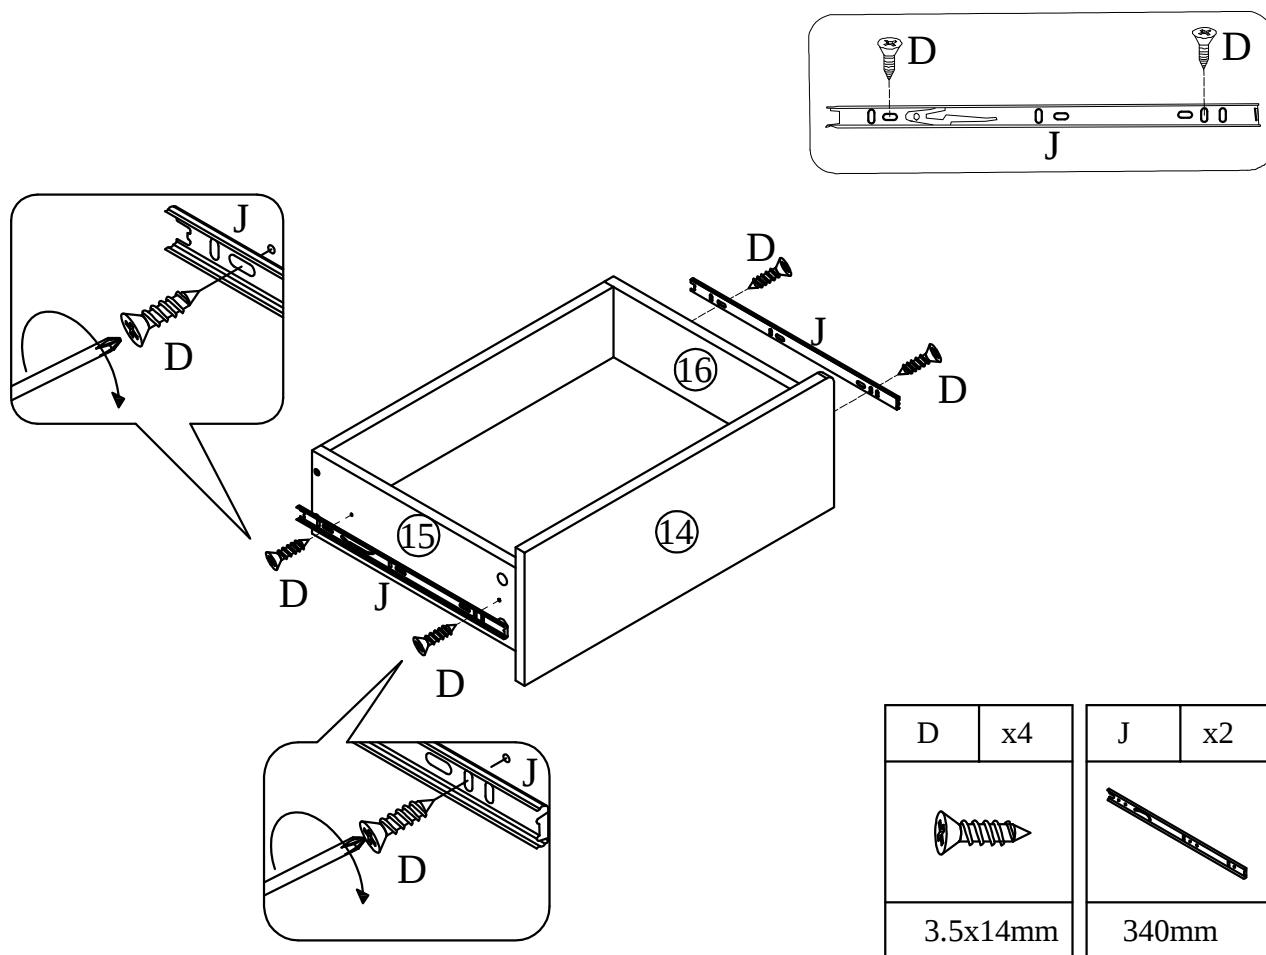

22

