



ANDRA

Korpusmontage (Beispiel)


- 1. Legen Sie das Möbel mit der Rückseite auf den Boden. Verwenden Sie eine Unterlage, um Beschädigungen zu vermeiden!
- 2. Schlagen Sie die Möbelleiter von unten in den Sockelboden.
- 3. Stellen Sie die Korpen auf und richten diese aus. Stecken Sie die Gewindehülsen durch die Innenseiten und verbinden die Korpen mit de Möbegriffschrauben M4x15mm. Bei höheren Schränken können zusätzlich die Spax-Schrauben 3,5x30mm verwendet werden.
- 4. Schrauben Sie das Blatt mit den Möbegriffschrauben M4x22mm an den Korpus.

Befestigungsmaterial				
Nivelliergleiter  LA0005869	Gewindehülse M4, D5x25mm  LA0005460	Möbegriffschrauben M4 x 15mm  LA0025470	Möbegriffschrauben M4 x 22mm  LA0025472	
RW-Spax-schrauben 3,5 x 30mm  LA0005302A				

1. + 2.

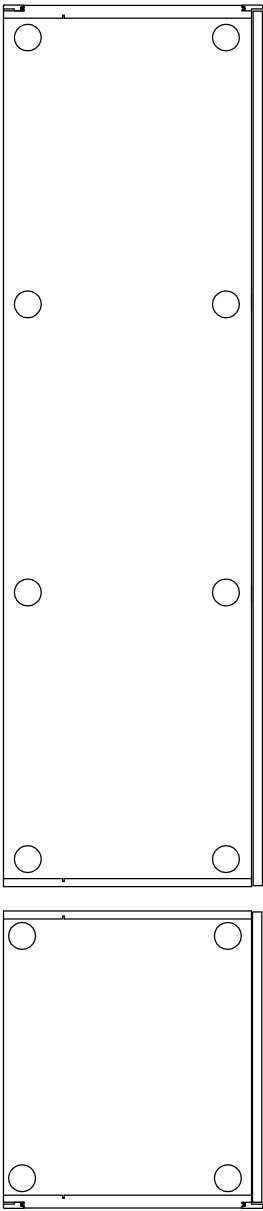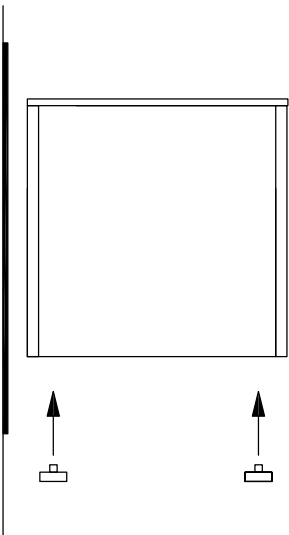

3. + 4.

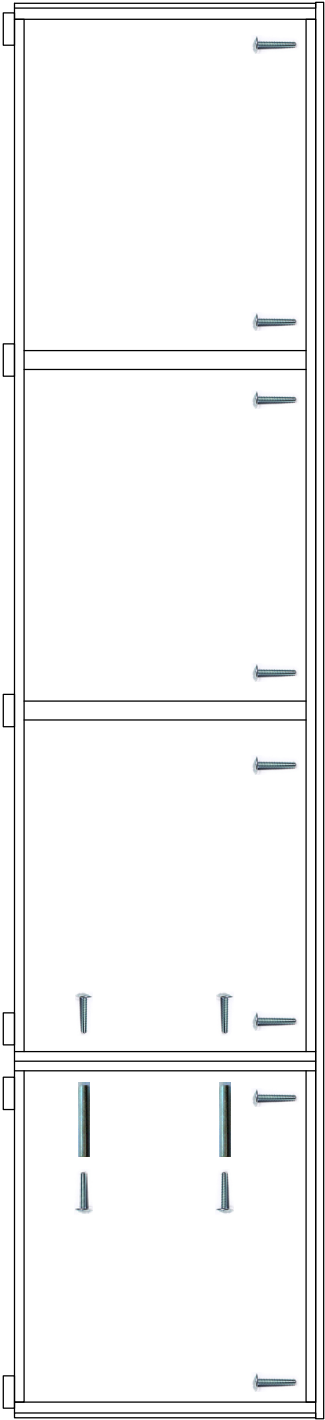

ANDRA



Assembly of cabinets (example)

- 1. Lay the cabinet with the back on the floor. Use an underlay to avoid damages!
- 2. Drive the leveling glider into the base from below.
- 3. Erect the cabinet and adjust them. Insert the threaded sleeves into the inner side panels and join the carcasses with the screws M4 x 15 mm. If necessary also use the Spax-screws 3,5 x 30mm.
- 4. Screw the top to the carcass from below. Use the screws M4 x 22 mm.

assembly parts

Leveling glider	threaded sleeve	screw	screw
 LA0005869	 M4, D5x25mm LA0005460	 M4 x 15mm LA0025470	 M4 x 22mm LA0025472
Spax-screw 3,5 x 30mm  LA0005302A			

1. + 2.

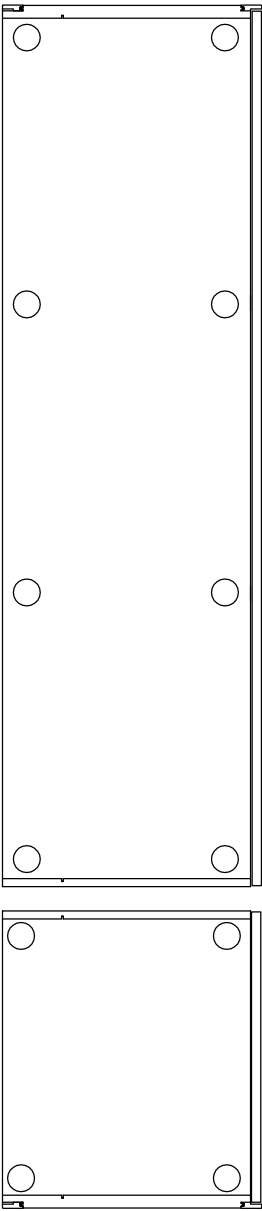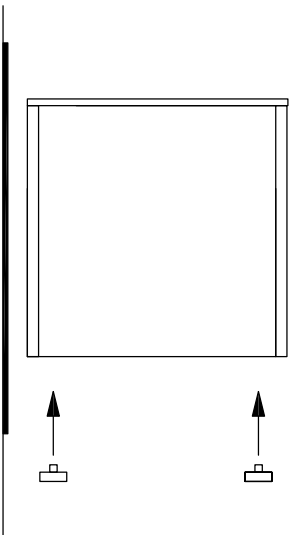

3. + 4.

