

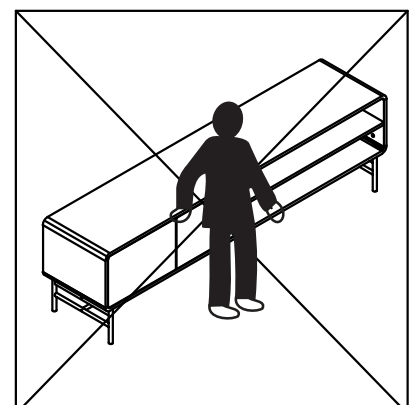
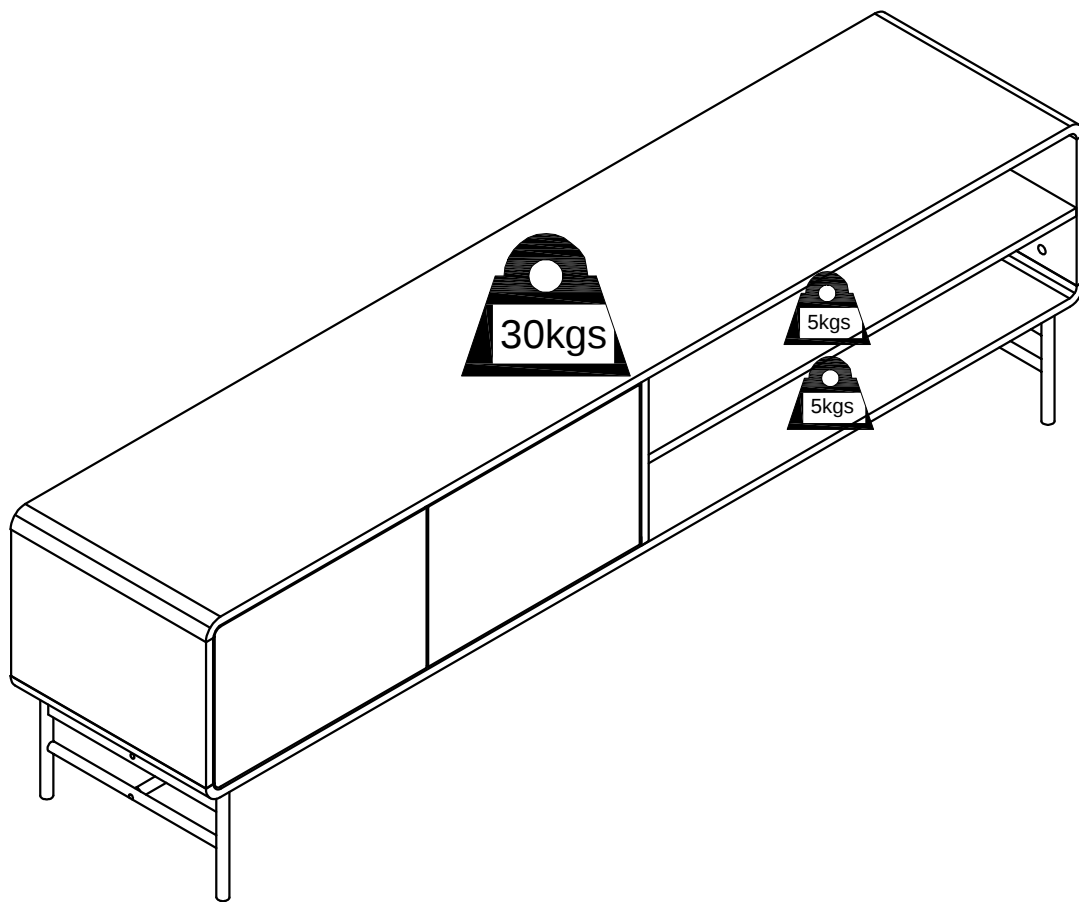
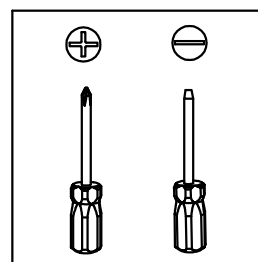
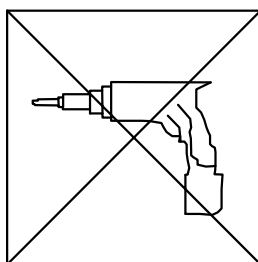
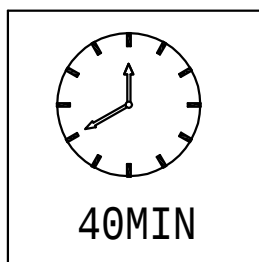






Assemble instruction

27980047/05


SANDY

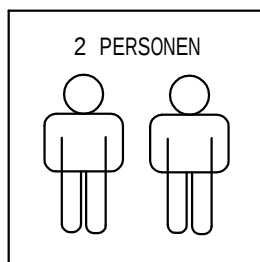

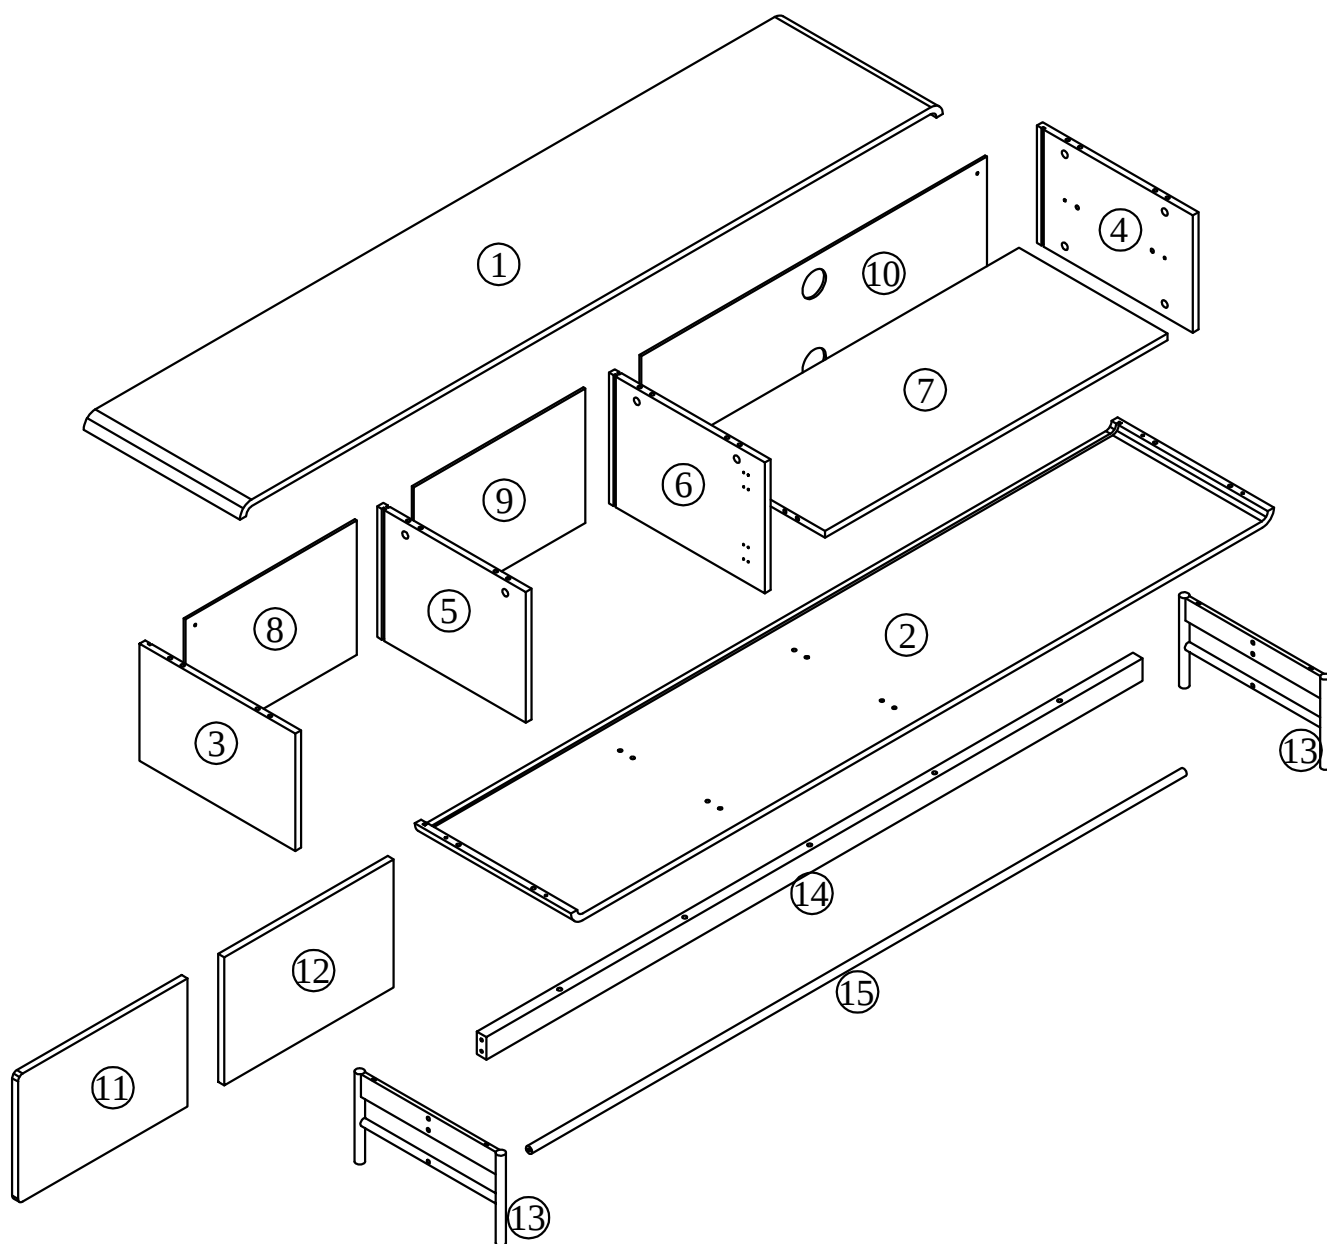



A	x16	B	x16	C	x20	D	x44	E	x4	F	x6	G	x9
													
6x35mm		Ø15x12mm		8x30mm		3.5x14mm		7x40mm		M6x35mm		M6x60mm	
H	x1	I	x14	J	x4	K	x2	L	x2	M	x2	N	x12
													
M4						6x30mm						Ø20mm	
O	x2	P	x2										
													
Ø20x12mm		4x60mm											

Assembly

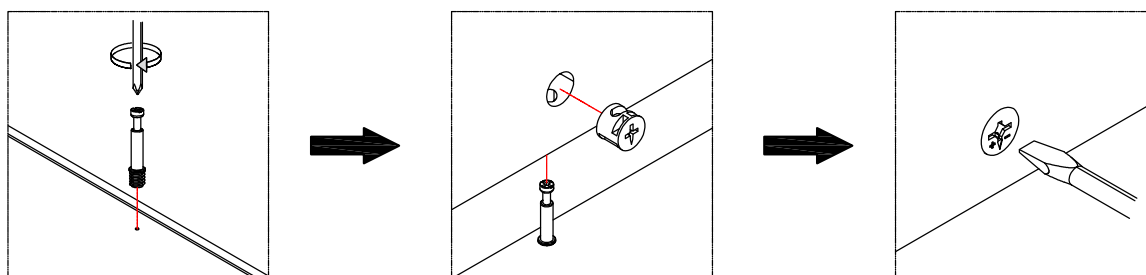



1

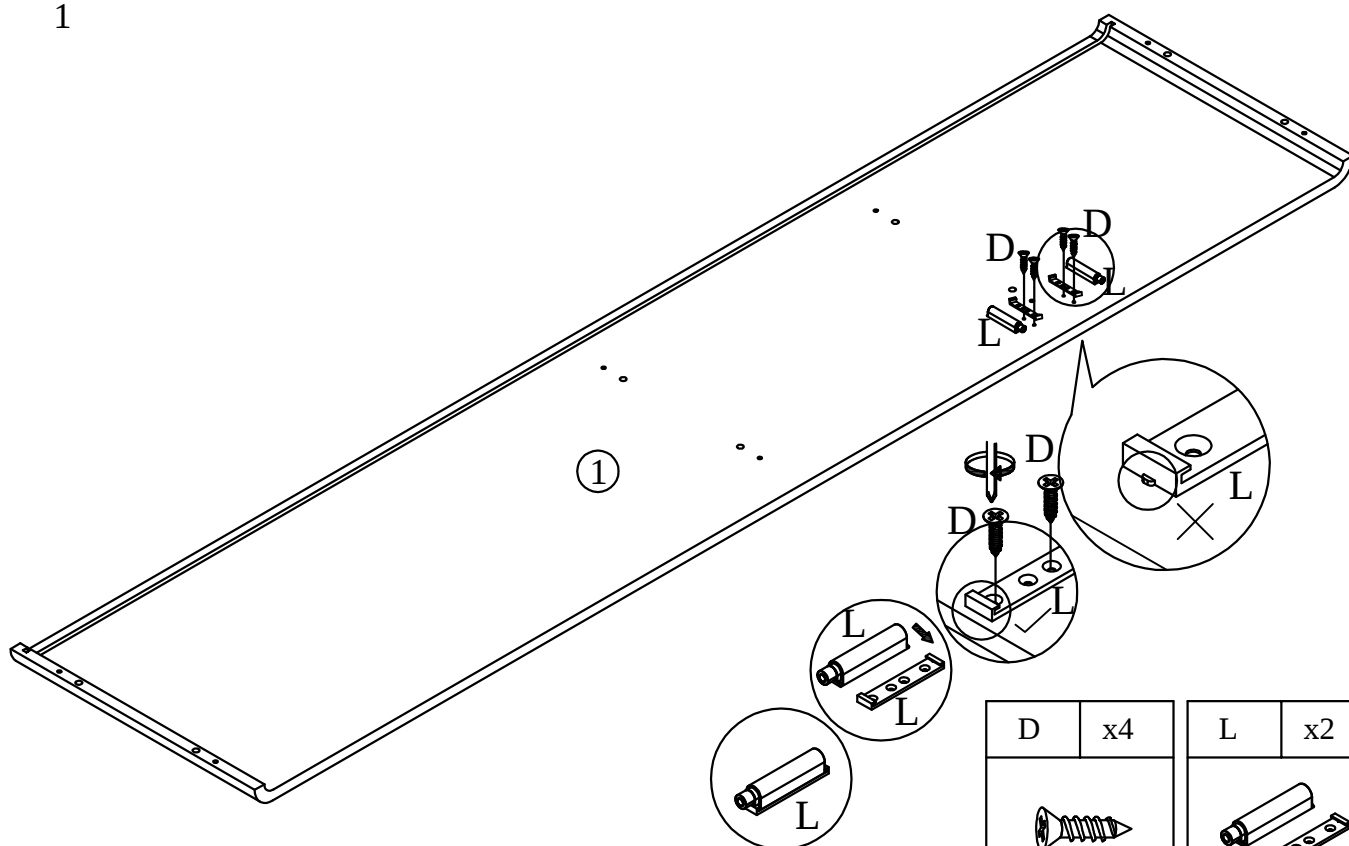


D	x4	L	x2
			
3.5x14mm			


2

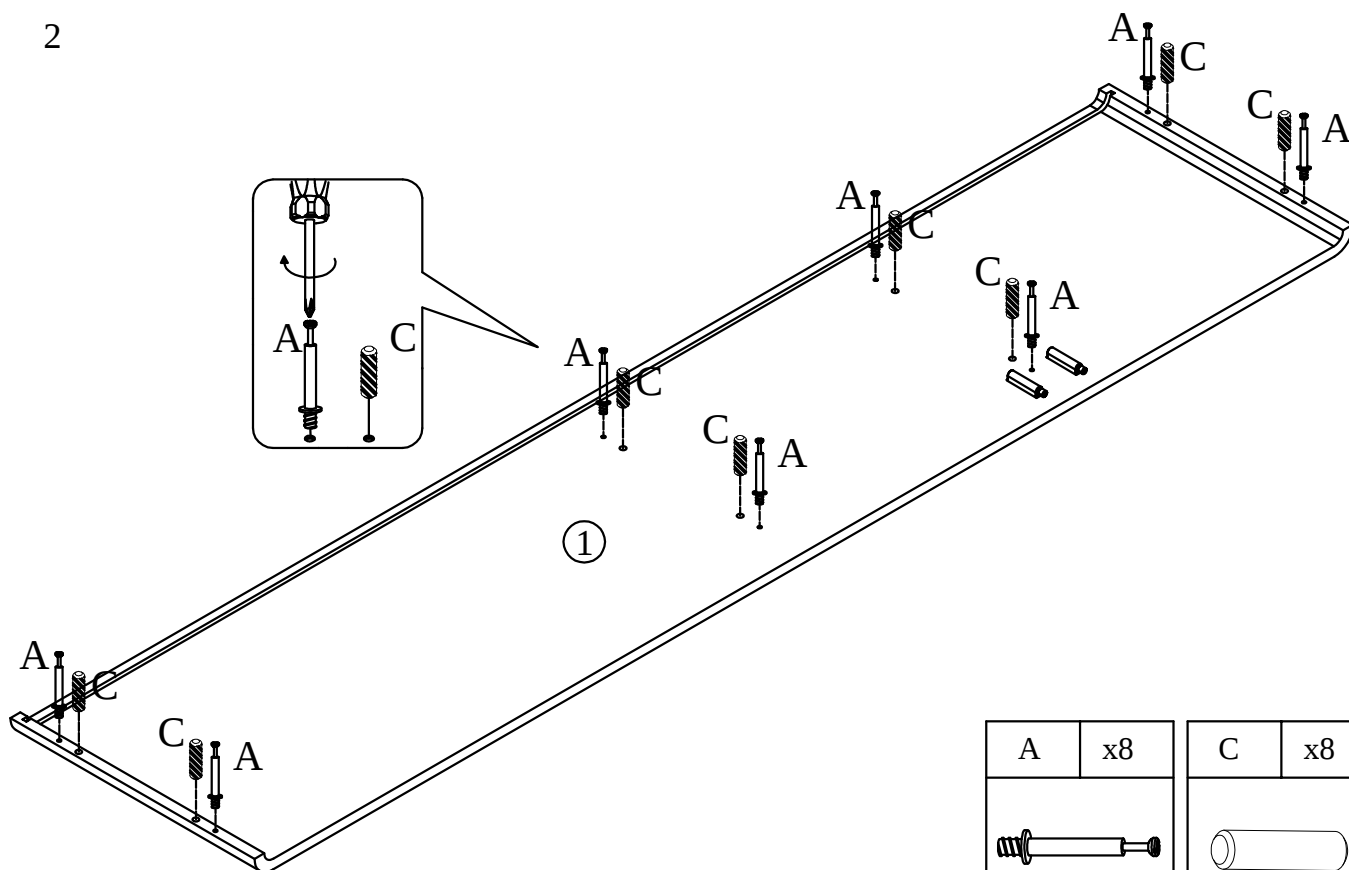


A	x8	C	x8
			
6x35mm		8x30mm	


3

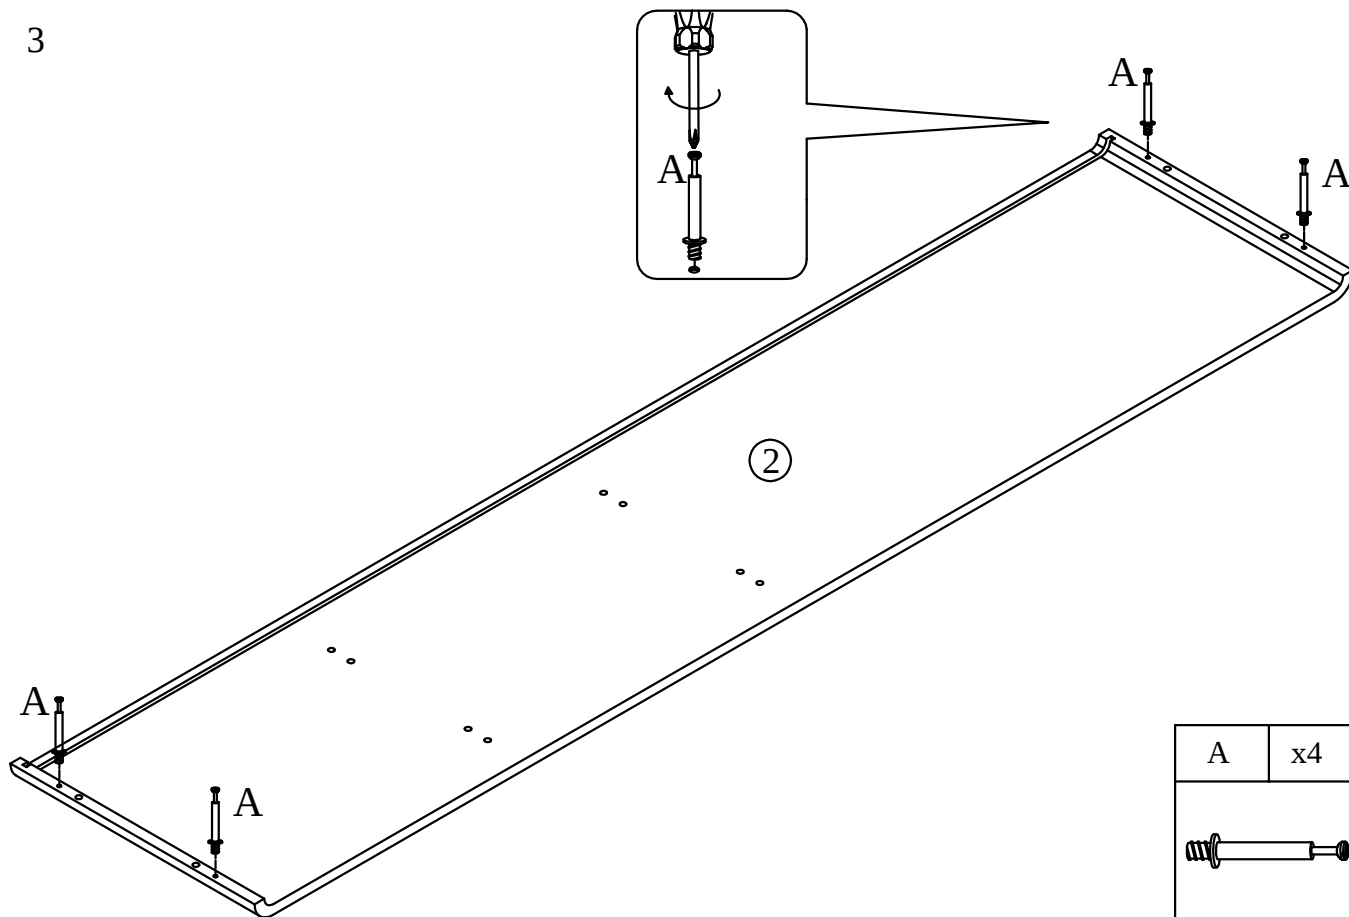


A	x4
	
6x35mm	

4

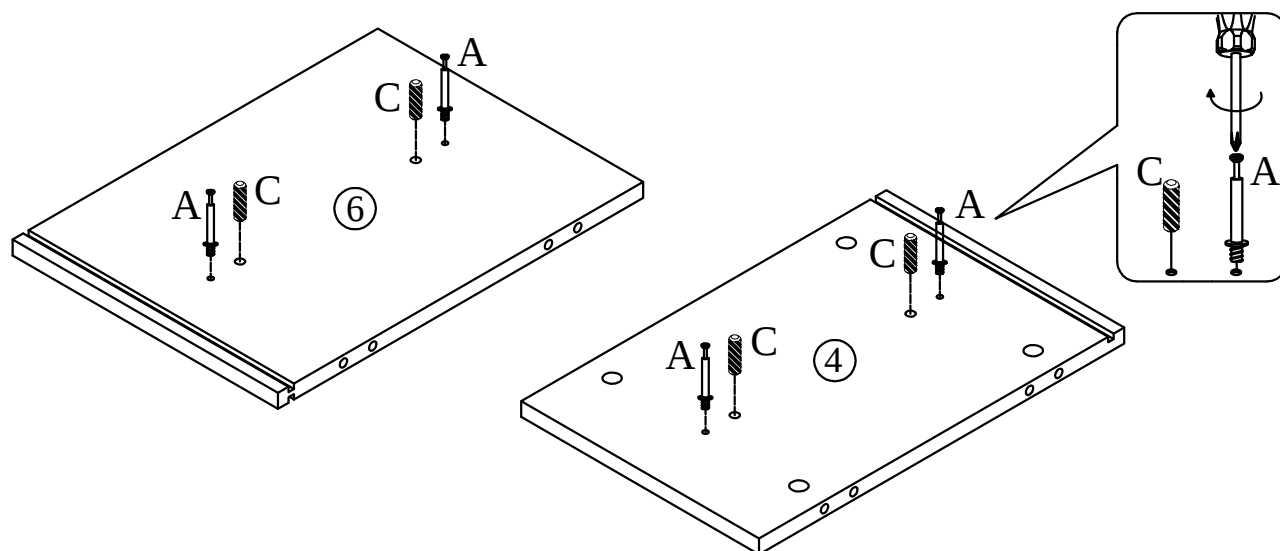


A	x4	C	x4
			
6x35mm		8x30mm	

5

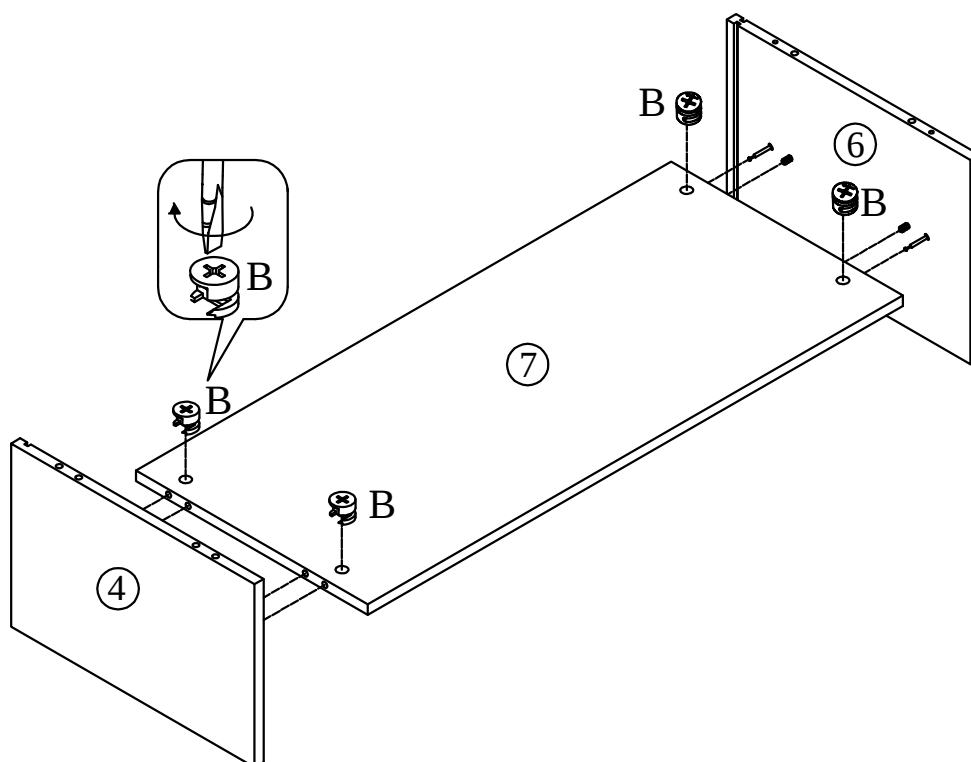


B	x4
	
Ø15x12mm	

6

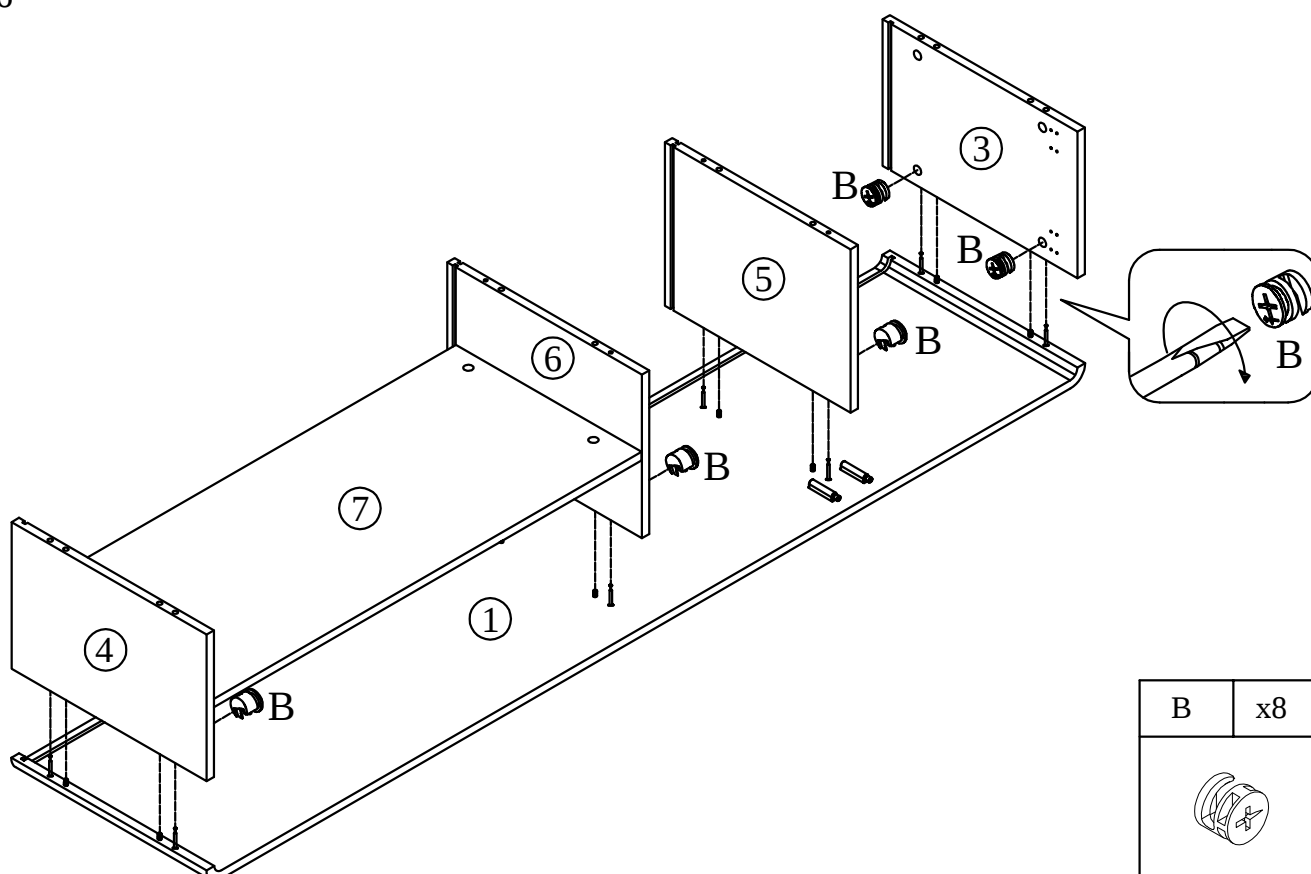


B	x8
	
Ø15x12mm	

7

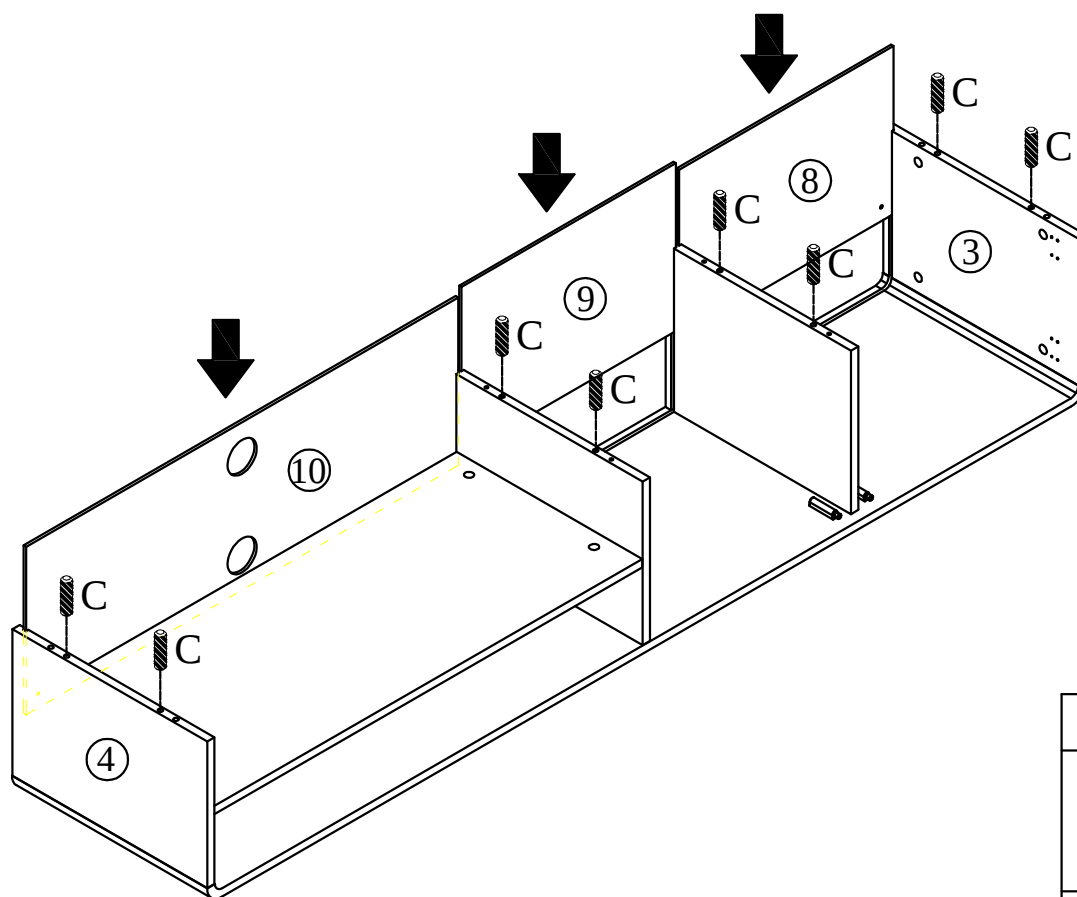


C	x8
	
8x30mm	

8


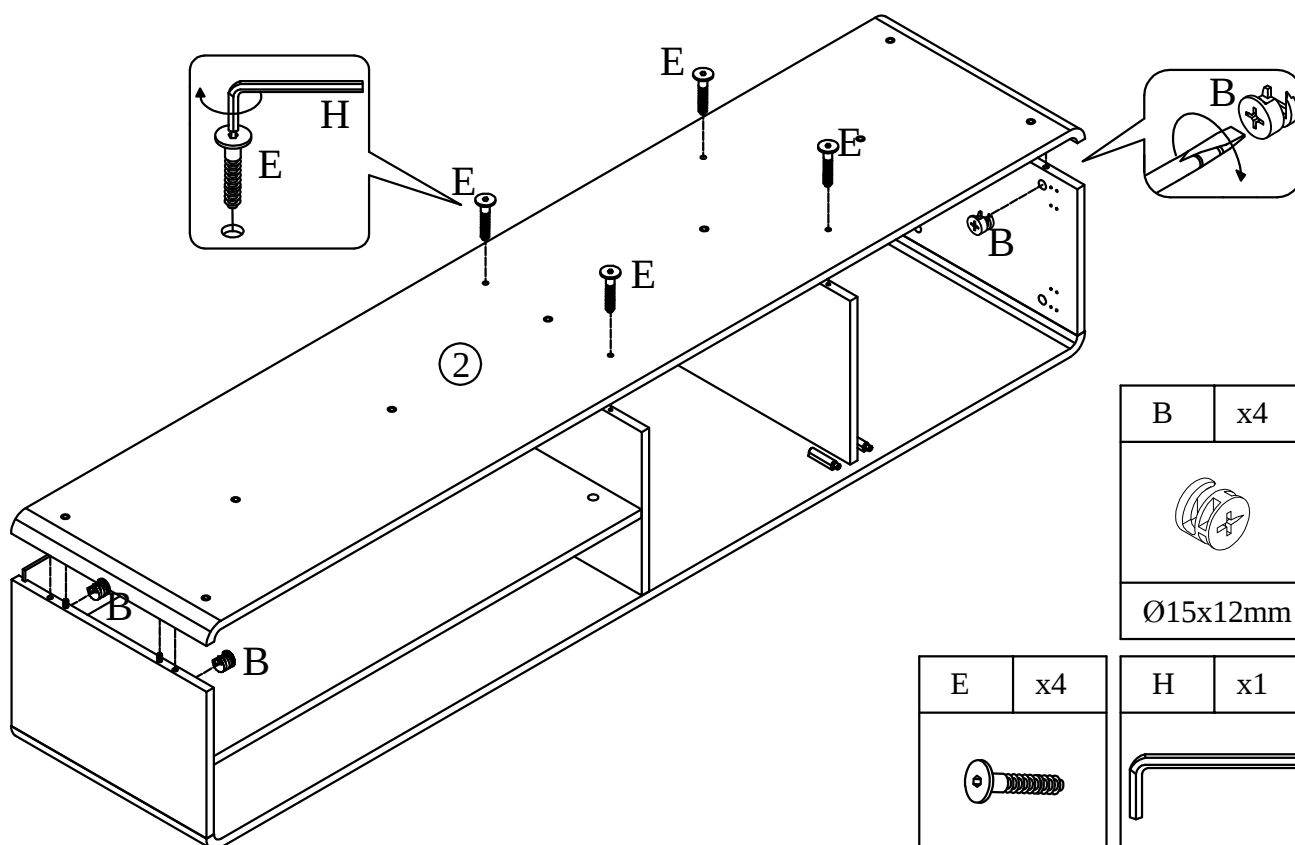




B	x4
	
Ø15x12mm	

E	x4
	
7x40mm	



H	x1
	
M4	

9

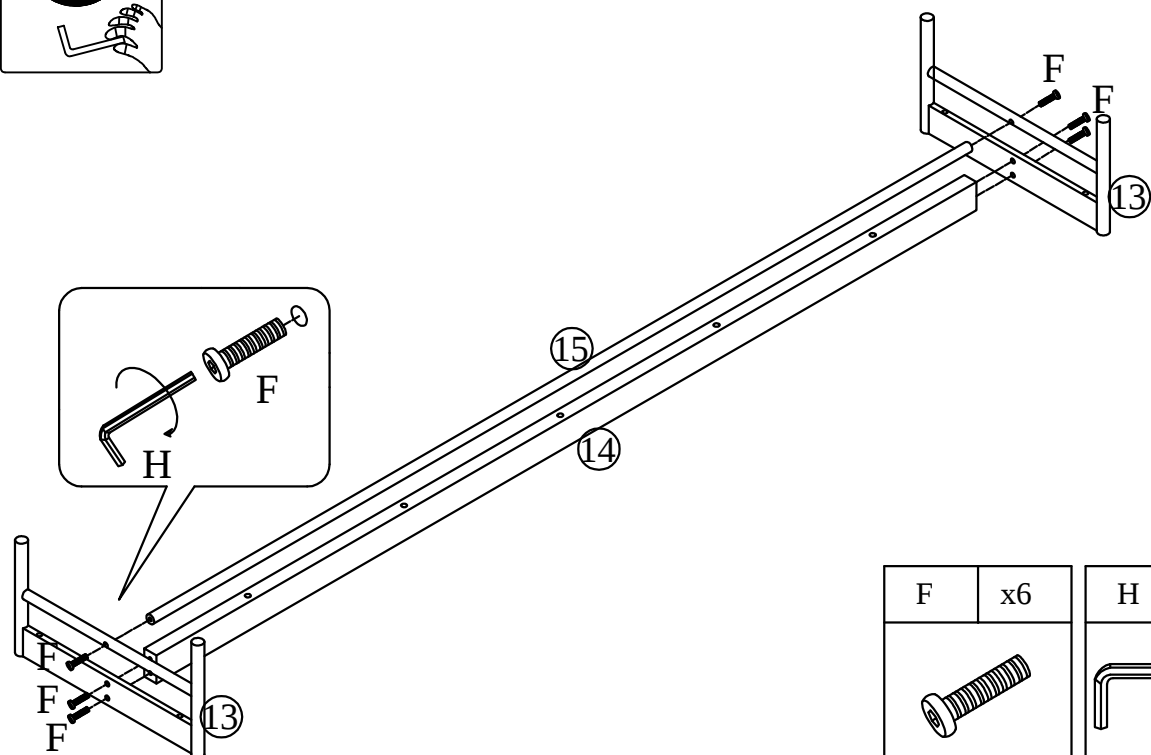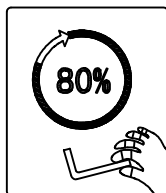


F	x6	H	x1
			
M6x35mm		M4	

10

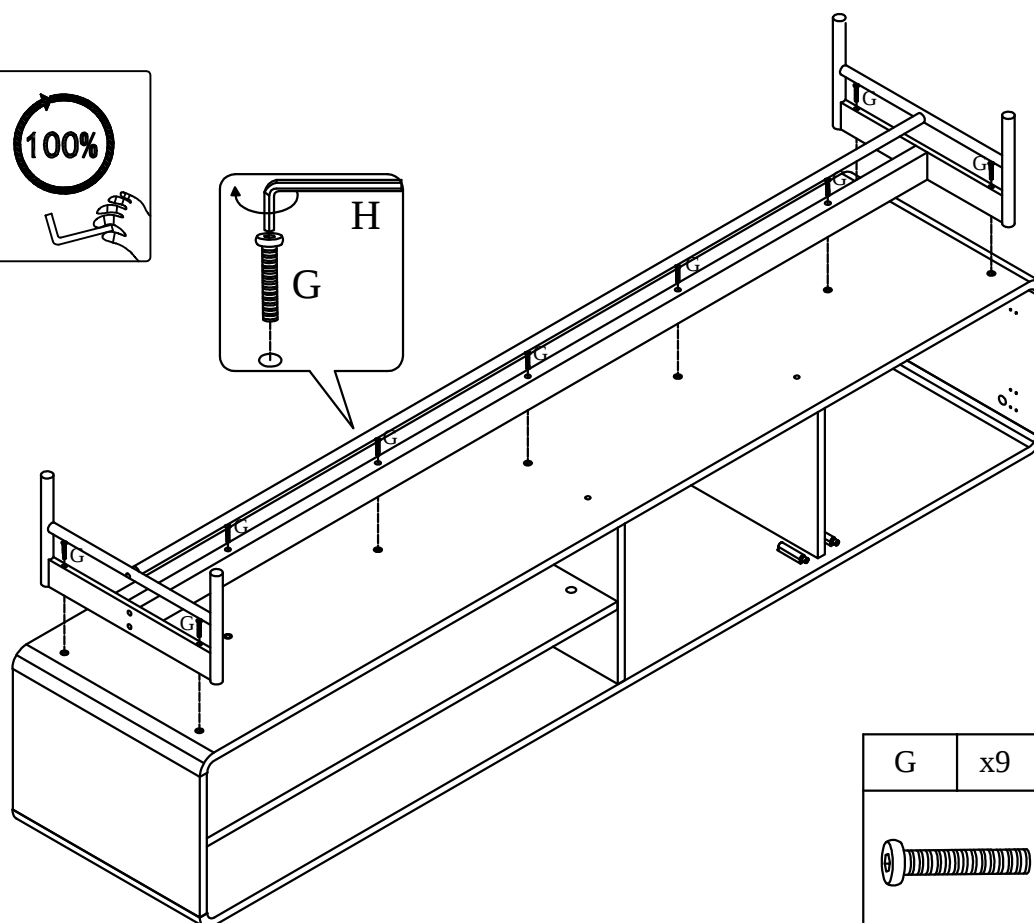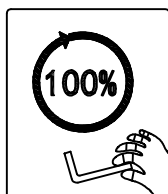


G	x9	H	x1
			
M6x60mm		M4	

11

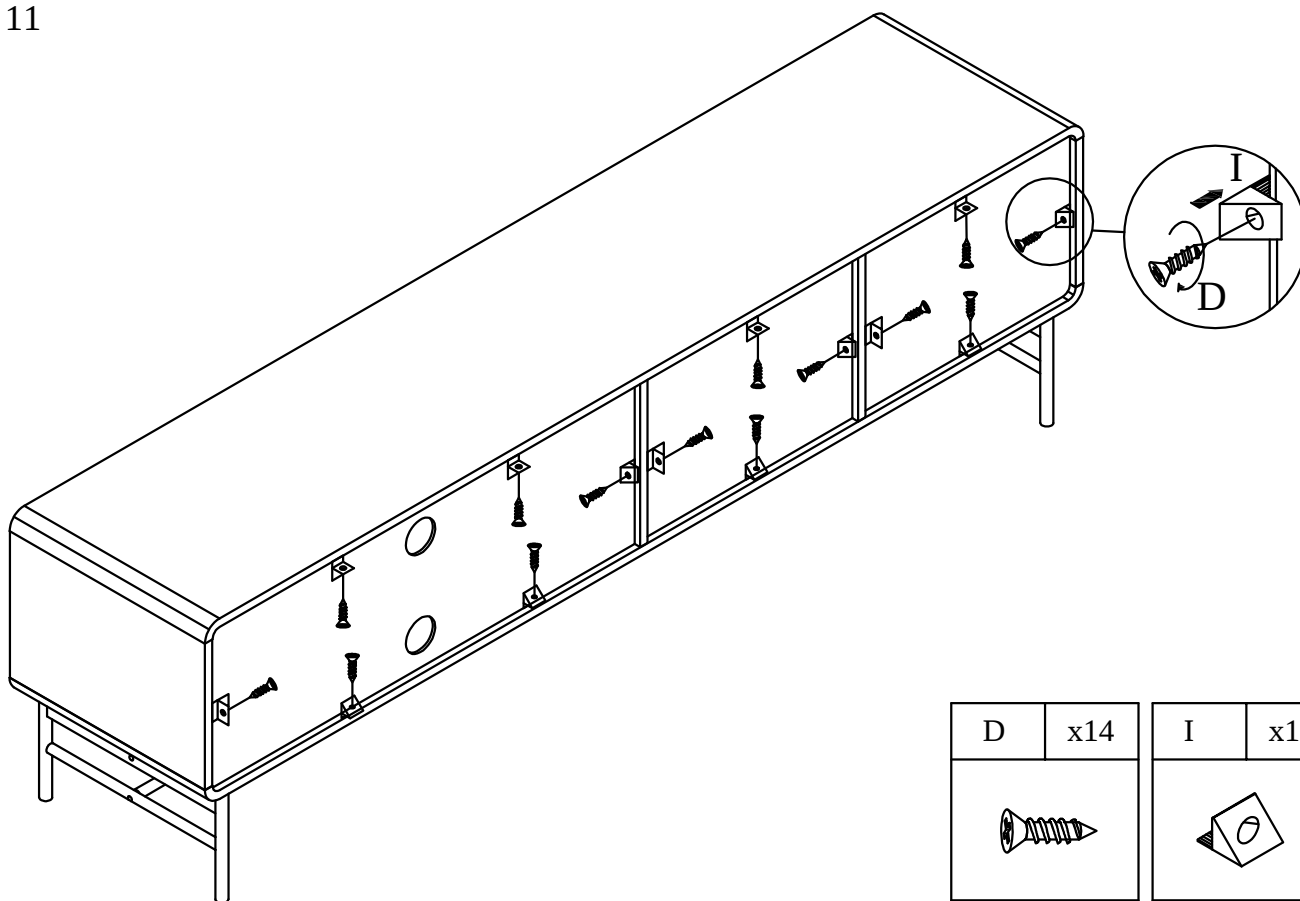

D	x14	I	x14
			
3.5x14mm			


12

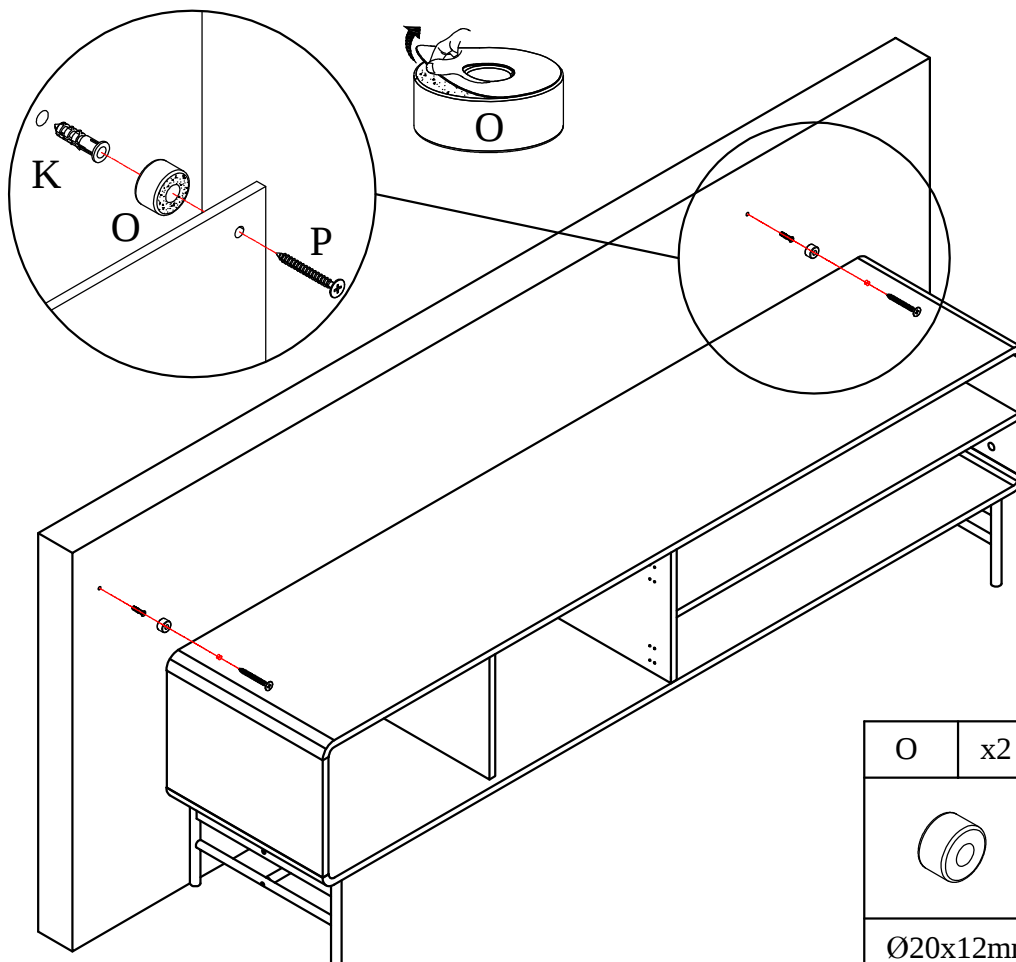


K	x2
	
6x30mm	

O	x2	P	x2
			
Ø20x12mm		4x60mm	




13

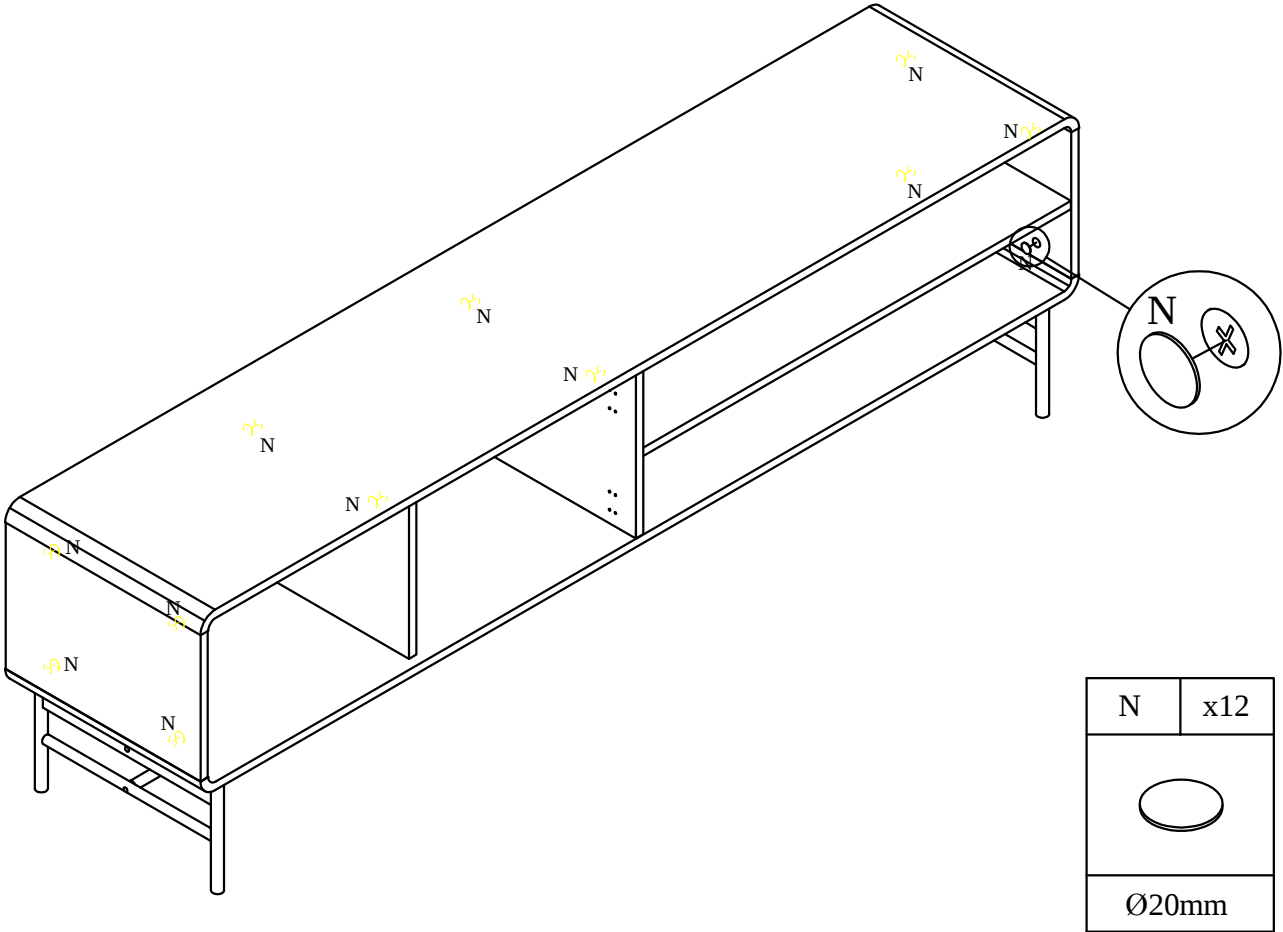

14

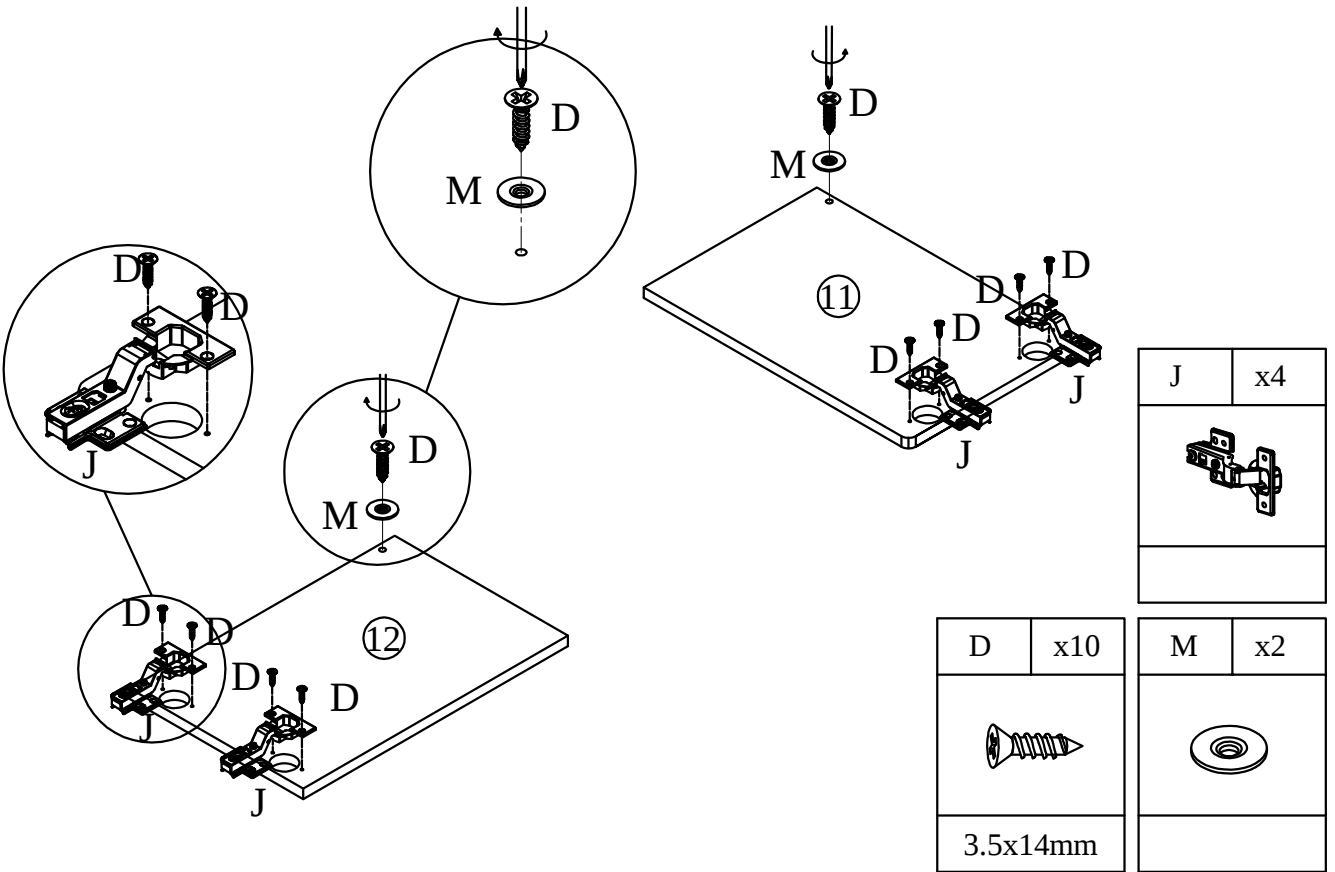

15

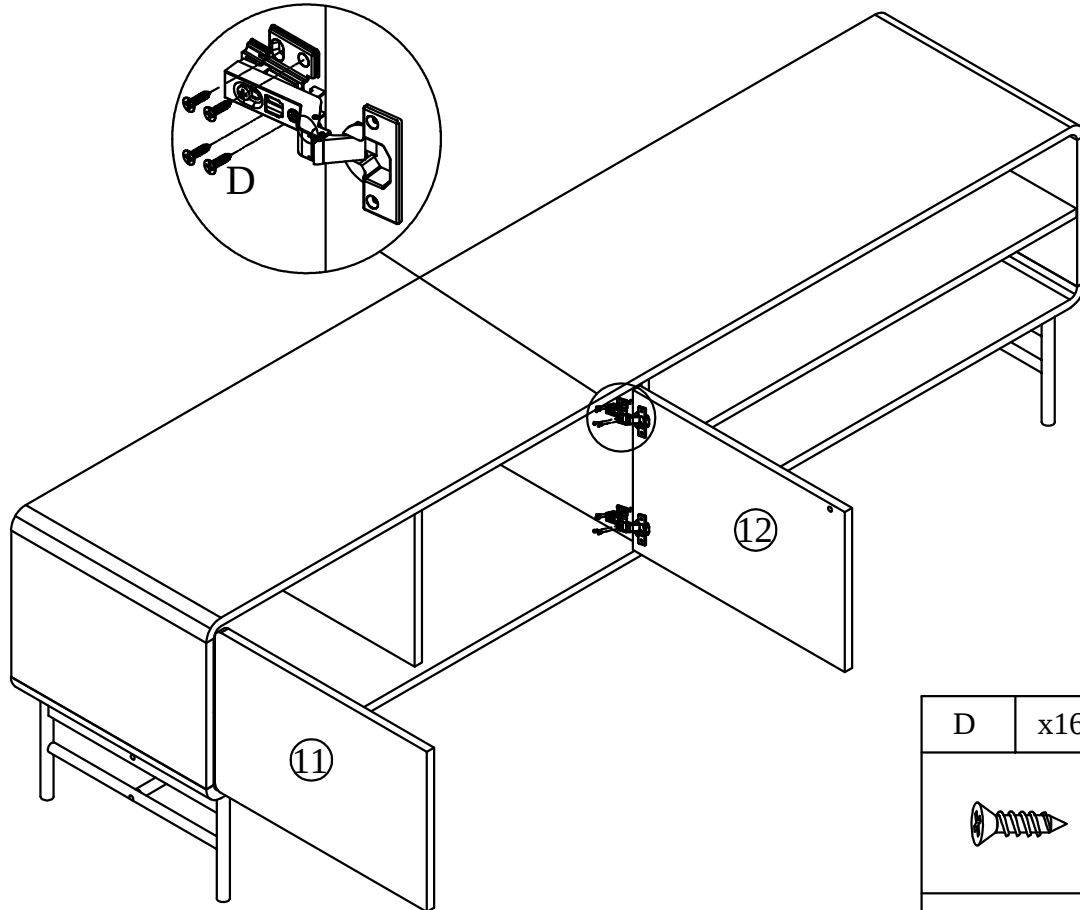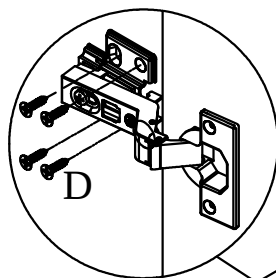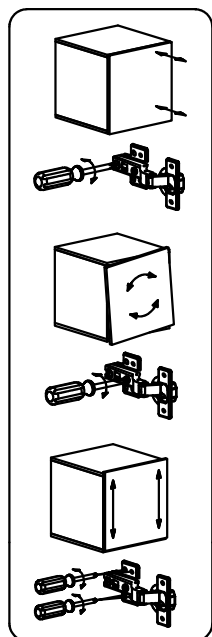

D	x16
	
3.5x14mm	

16

