



ASSEMBLY INSTRUCTIONS:12540088/01

ambia. GARDEN


XXXLutz KG
Roemerstrasse 39
AT-4600 Wels, Austria

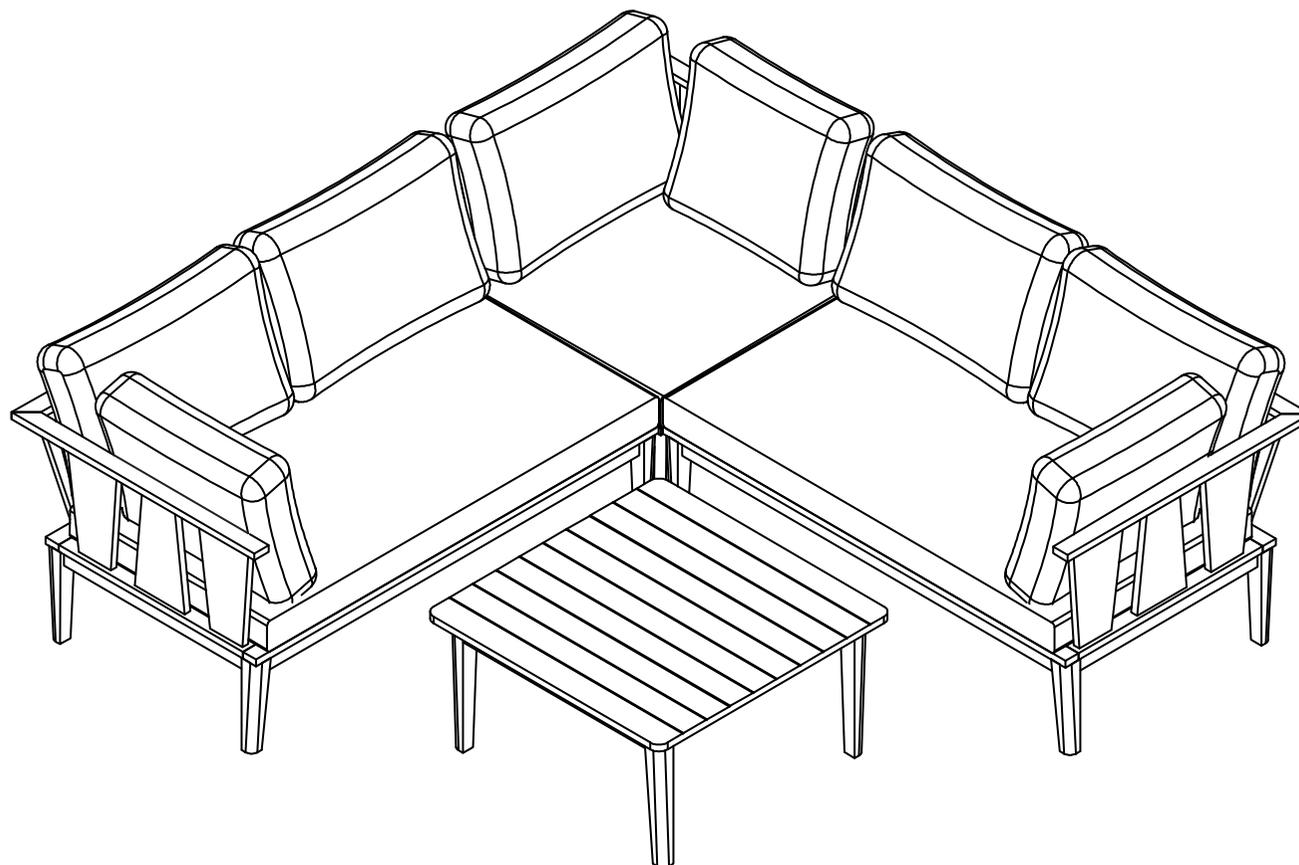


ASSEMBLY INSTRUCTIONS:12540088/01

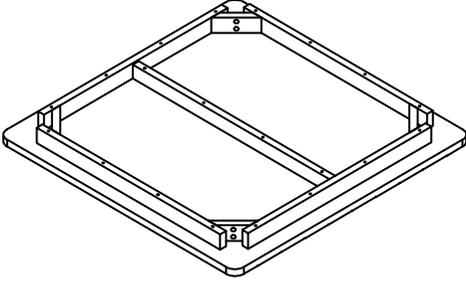No	Name of Hardware	Fig	Qty	(A)	(B)
1	Bolt M6 x 65 mm		8		
2	Washer		8		
3	Allen Key		1		
				x1	x4



Step 1:



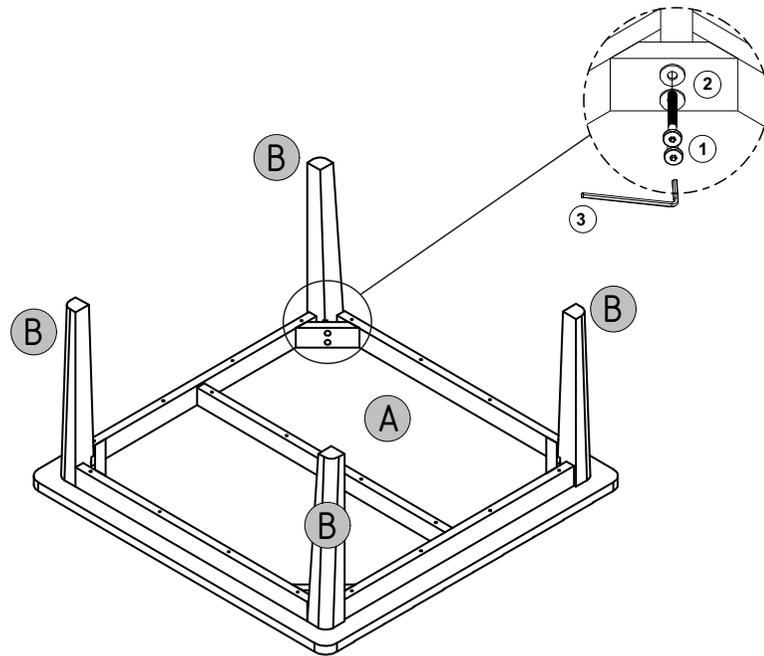


Step 2:

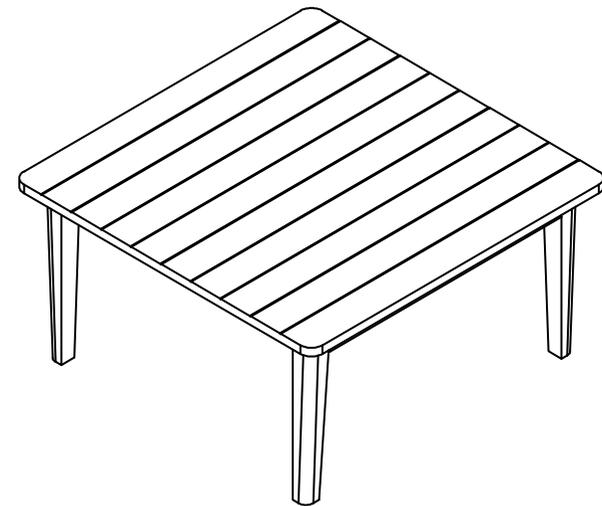


ASSEMBLY INSTRUCTIONS:12540088/01

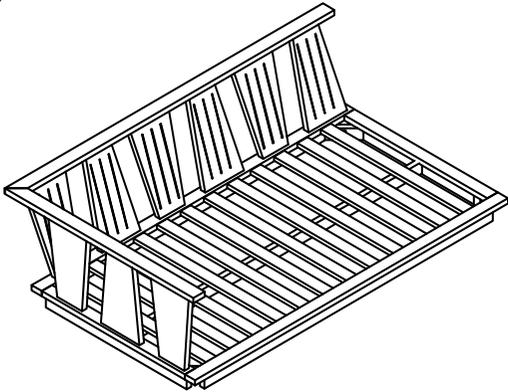No	Name of Hardware	Fig	Qty	(A)	(B)	(C)
1	Bolt M6 x 65 mm		8			x4
2	Washer		8			x1
3	Bolt M6 x 40 mm		2			
4	Allen Key		2			

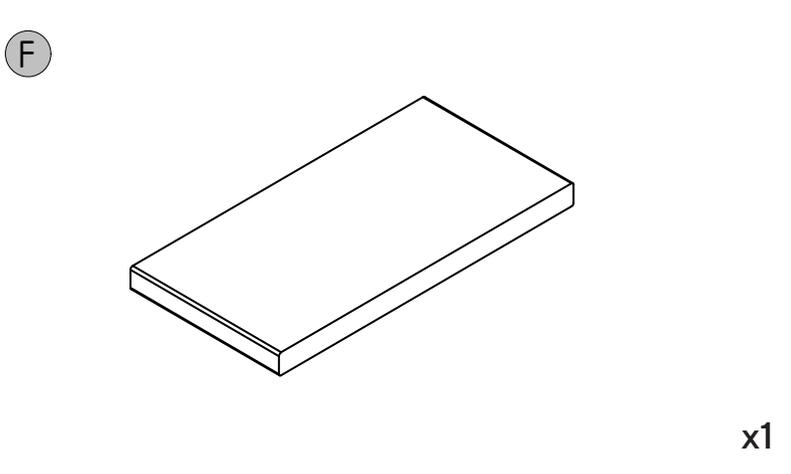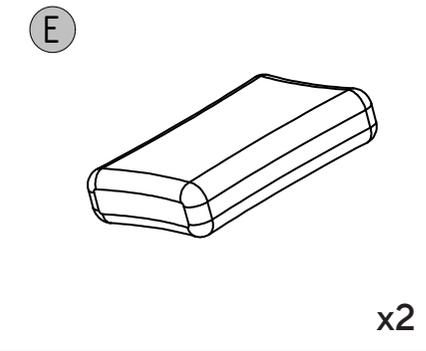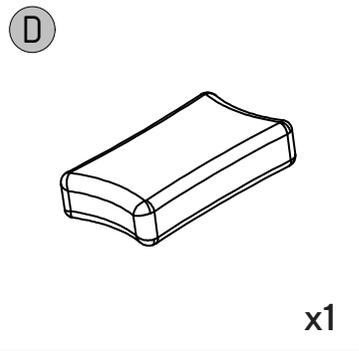


Step 1:

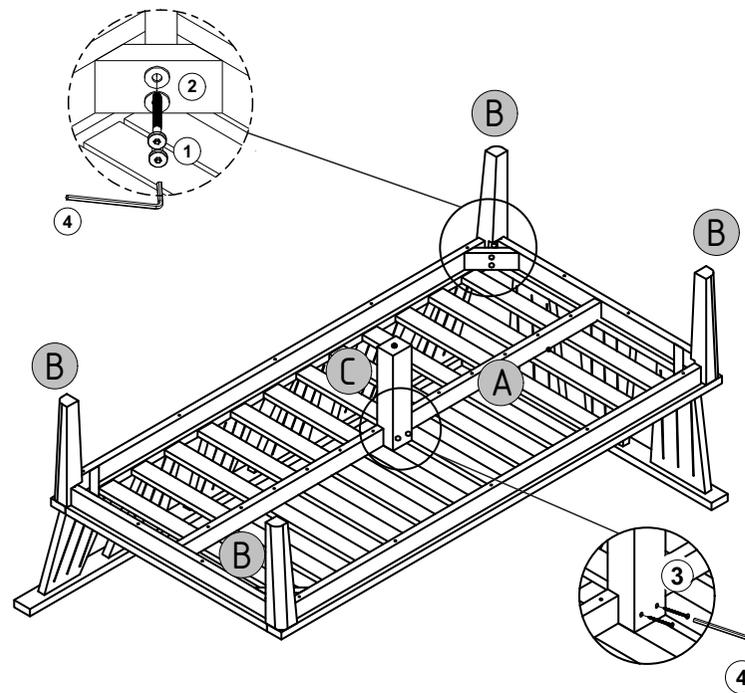


ASSEMBLY INSTRUCTIONS:12540088/01



Step 2:

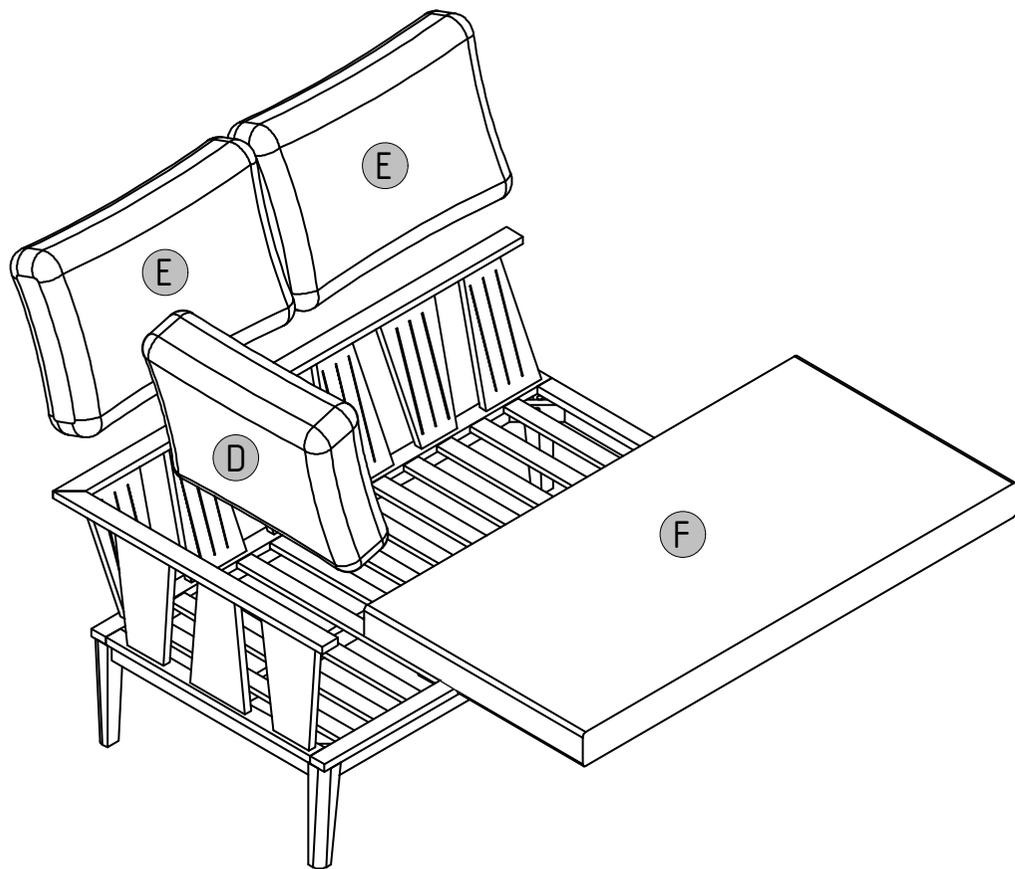


Step 3:

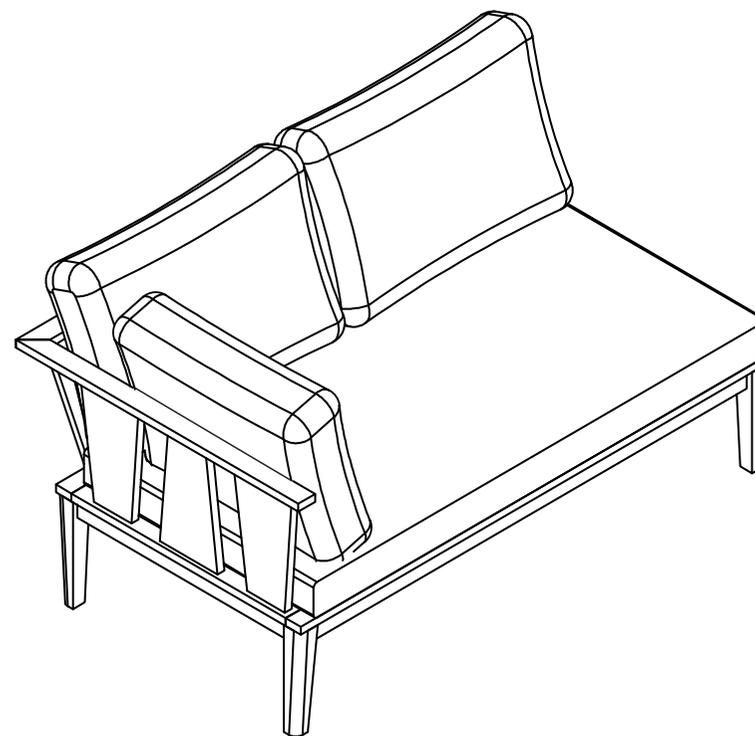

ASSEMBLY INSTRUCTIONS:12540088/01

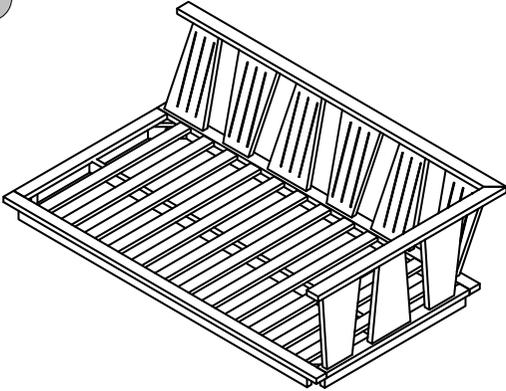
No	Name of Hardware	Fig	Qty	(A)	(B)	(C)	
1	Bolt M6 x 65 mm		8			x4	
2	Washer steel		8				
3	Bolt M6 x 40 mm		2				x1
4	Allen Key		2				

(D)

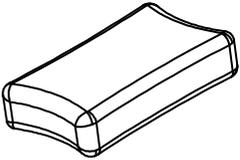


x1

(E)

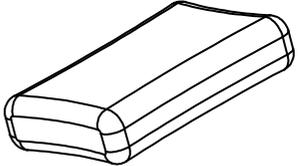


x2

(F)

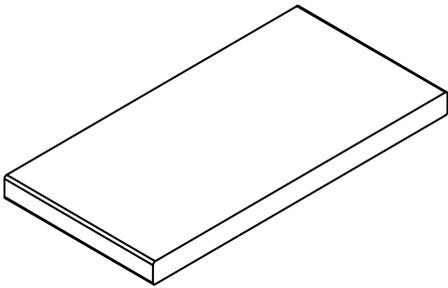


x1

Step 1:

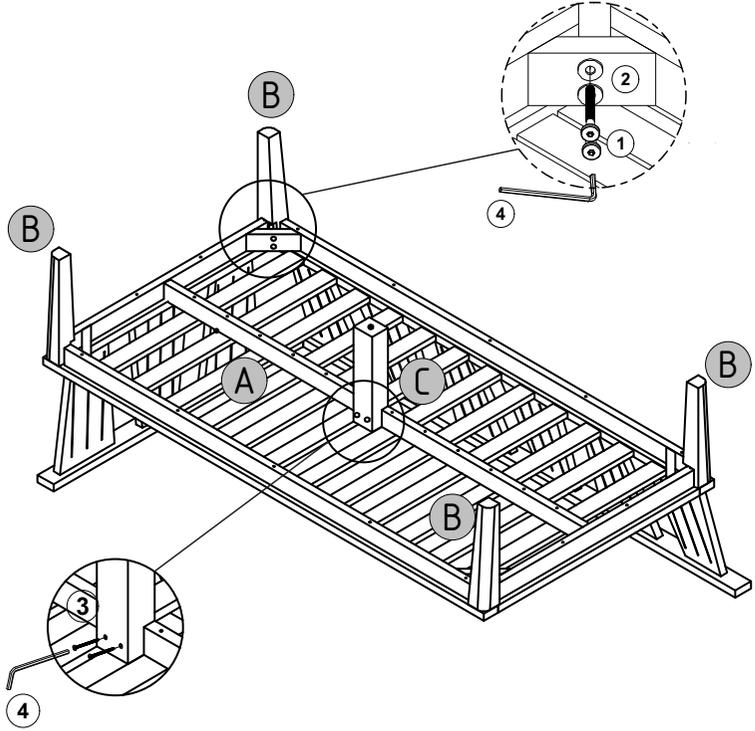


ASSEMBLY INSTRUCTIONS:12540088/01



Step 2:

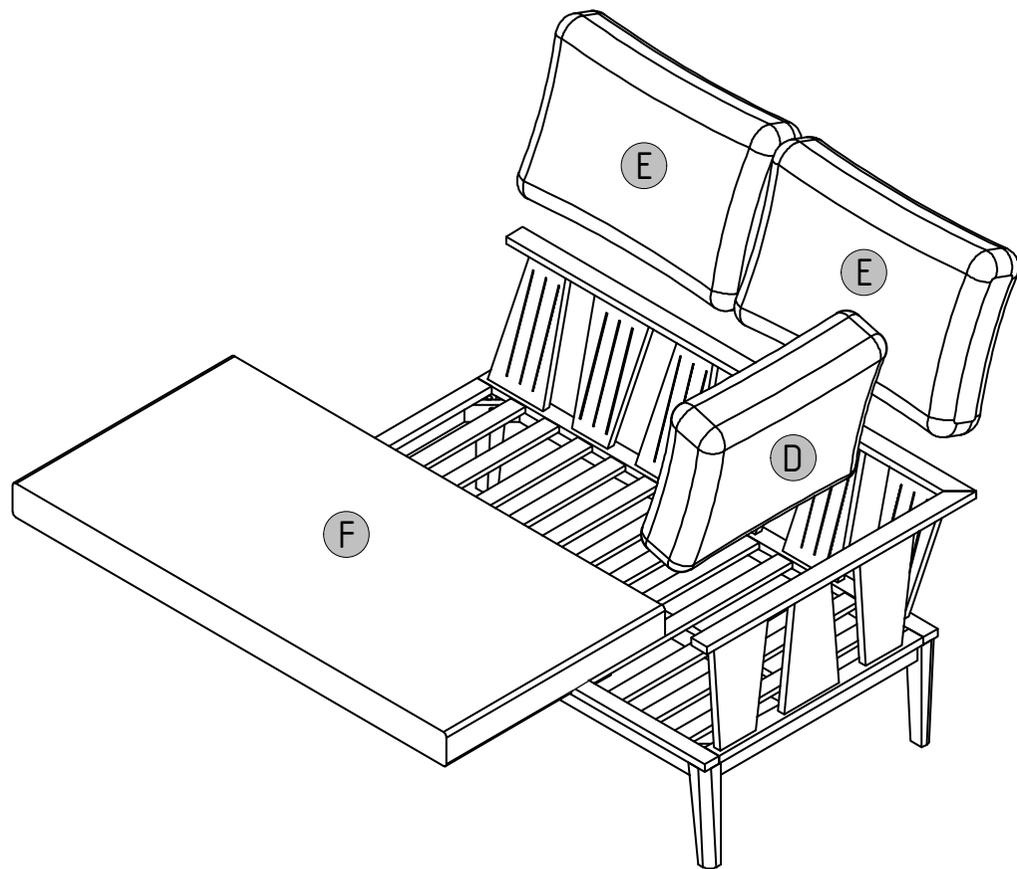

Step 3:

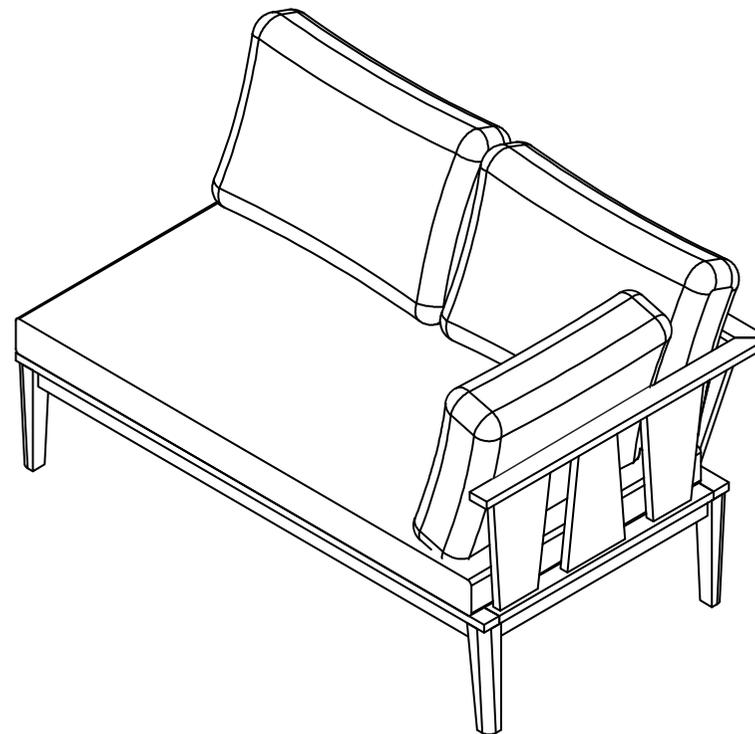


ASSEMBLY INSTRUCTIONS:12540088/01

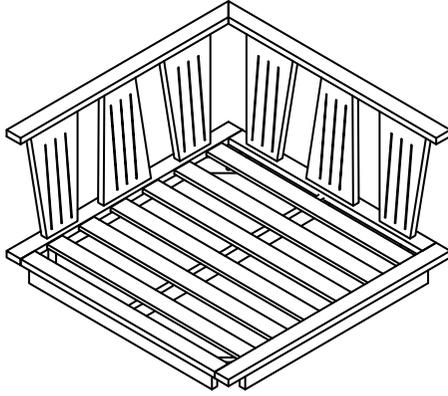No	Name of Hardware	Fig	Qty	(A)	(B)
1	Bolt M6 x 65 mm		8		
2	Washer		8		
3	Allen Key		1		

x1


x4

(C)

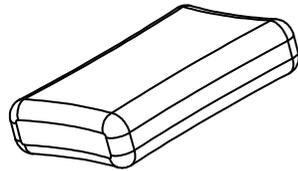


x2

(D)

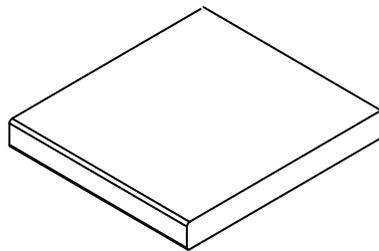


x1

Step 1:

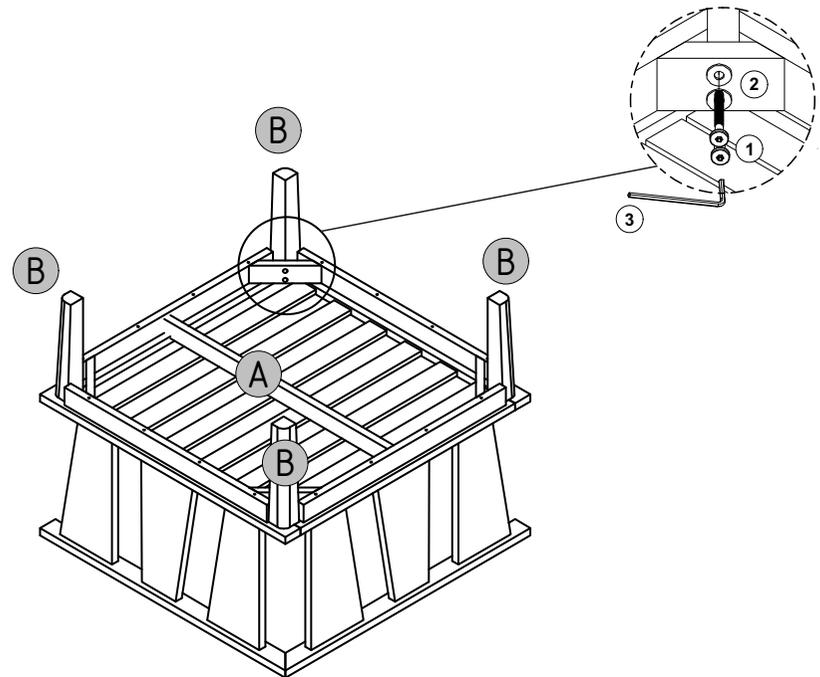

ASSEMBLY INSTRUCTIONS:12540088/01

Step 2:

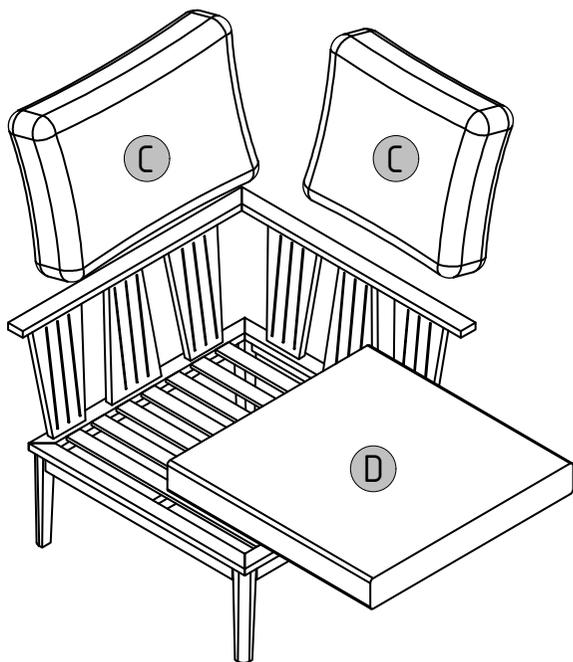

Step 3:

