

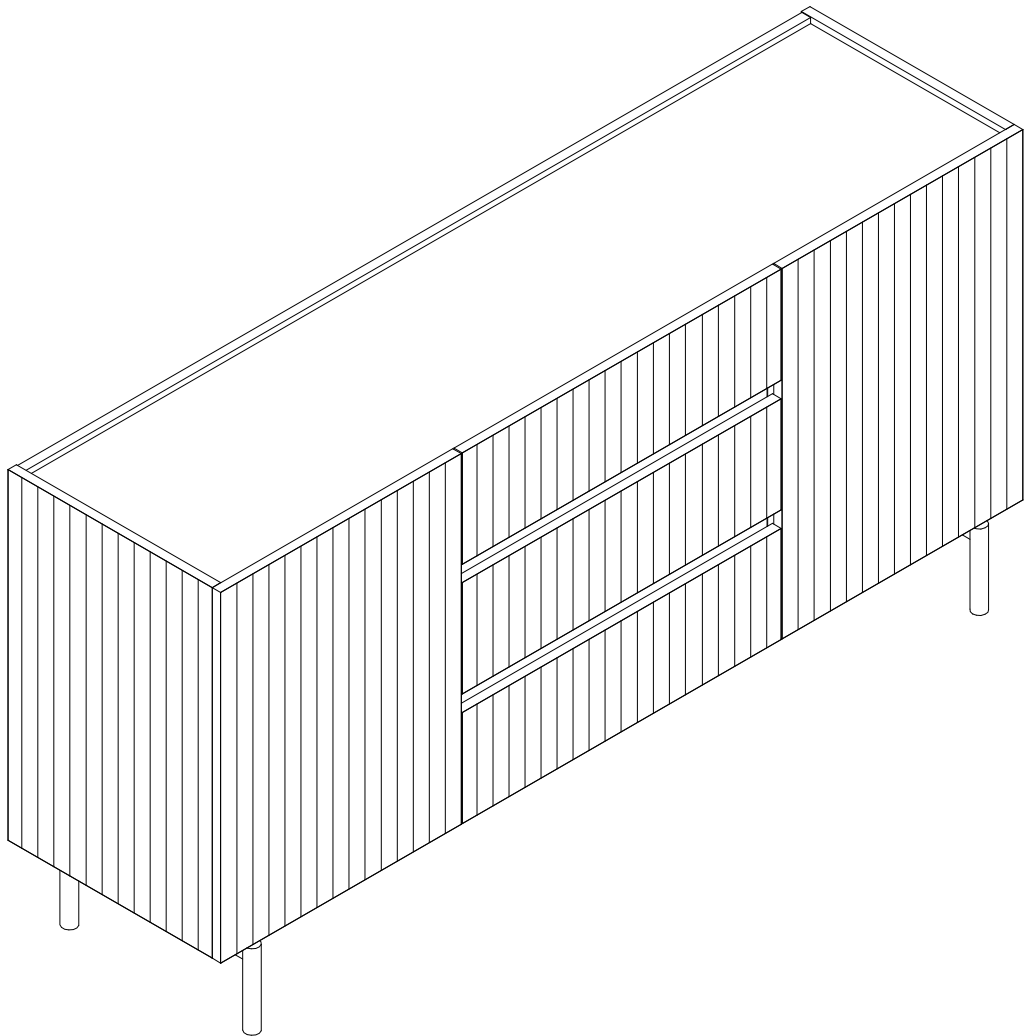
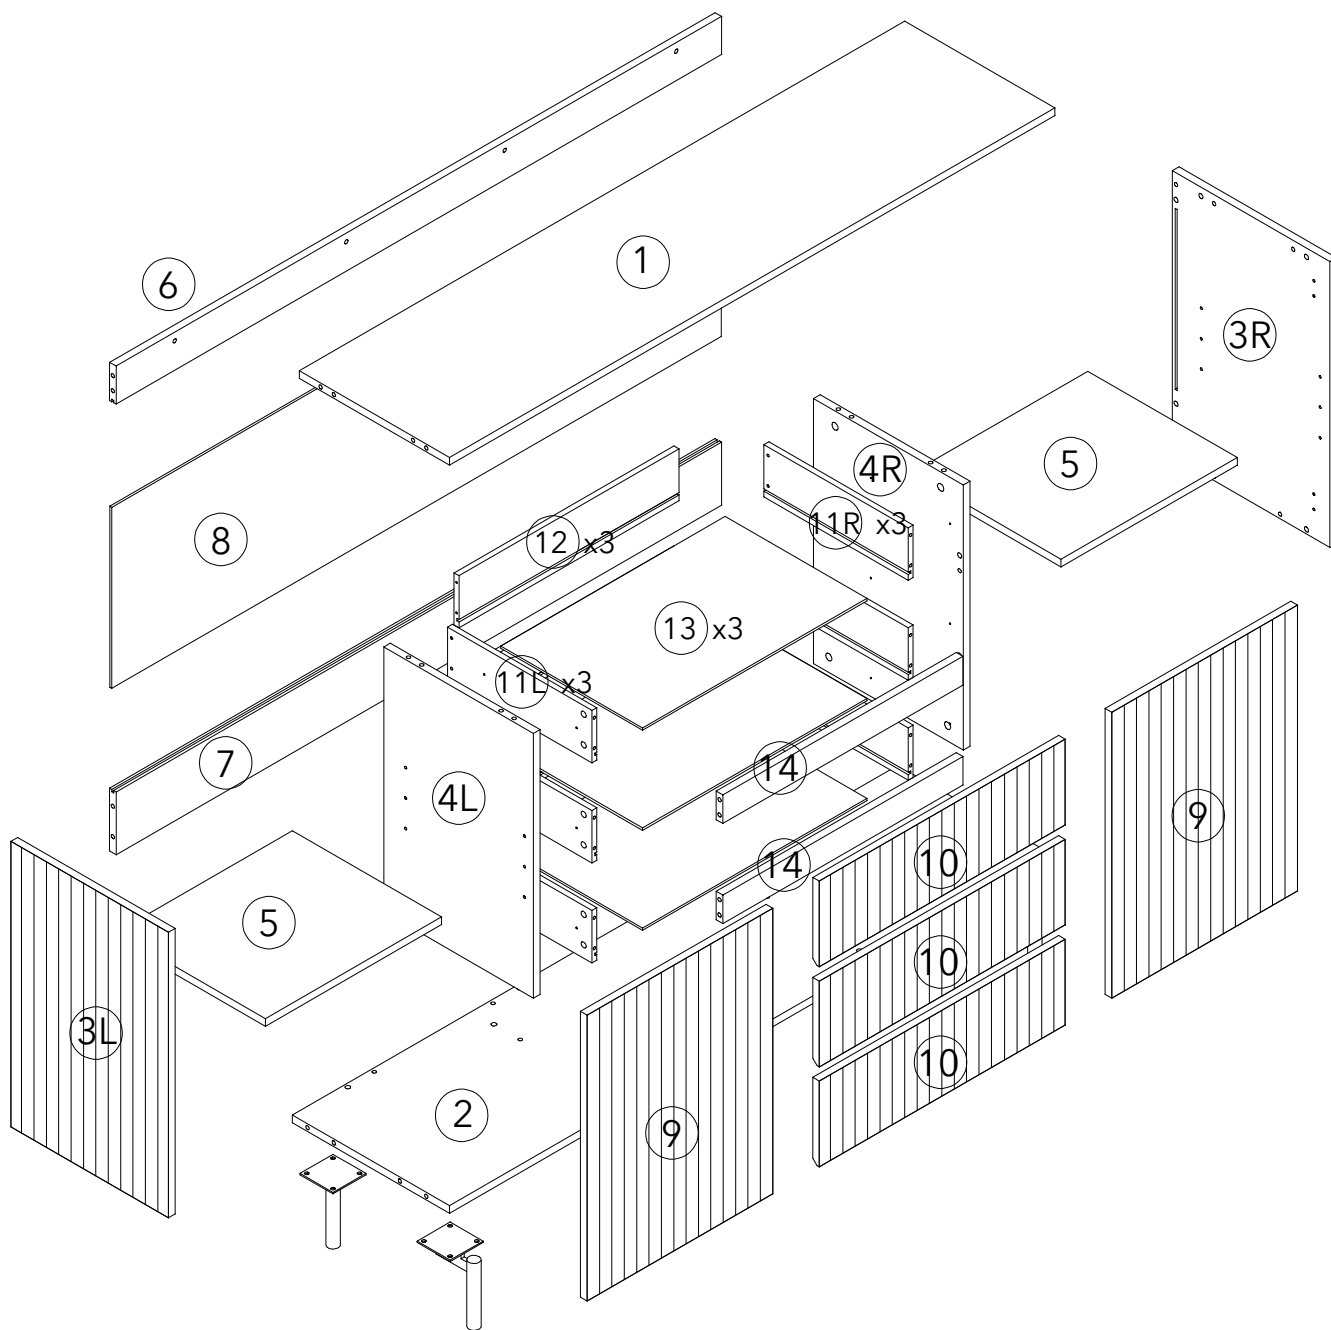
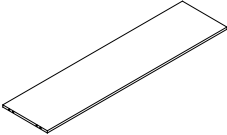
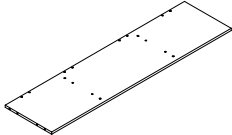
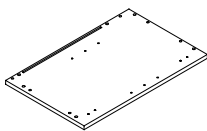
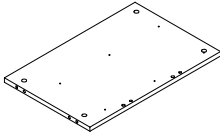

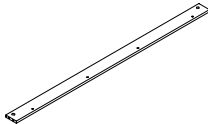
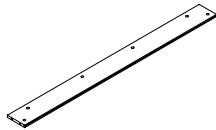
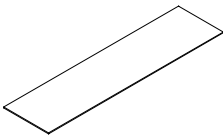






E6GS02














INSTRUCTION MANUAL

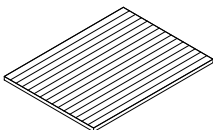




Ref	Dimensions(mm)	Visual	Qty
1	1468x364x16		1
2	1468x381x16		1
3	600x382x16		2
4	556x363x16		2
5	427x362x16		2
6	1468x80x16		1
7	1468x132x16		1
8	1478x132x5		1
9	600x450x16		2
10	180x596x16		3

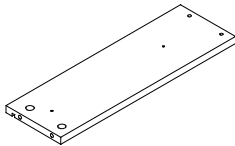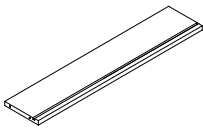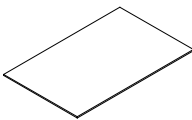
Ref	Dimensions(mm)	Visual	Qty
11	350x110x12		6
12	533x109x12		3
13	543x344x5		3
14	582x60x16		2

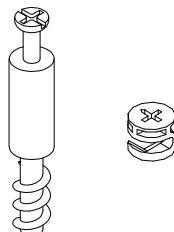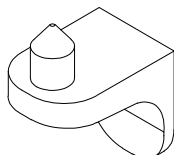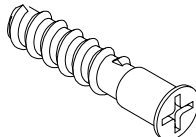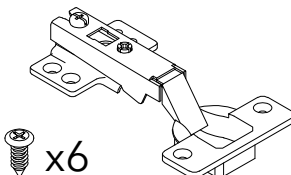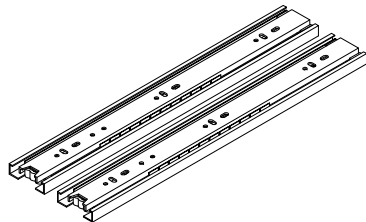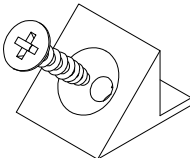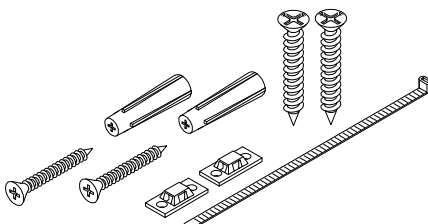								
A	M6x40mm	28pcs	B	Ø15x11.5	28pcs	C	Ø8x30	28pcs
								
D	Ø12x10mm	12set	E	M4x14	36pcs	F	M4x30	12pcs
								
G	/	8pcs	I	M6x12mm	20pcs	J	M7x50mm	4pcs
								
M	Flat hinge	4set	K	12"	3set	N	/	6set
								
L	/	2pcs	T	/	3pcs	Z	Ø20	28pcs
								
P	/	2set						


Step 1:

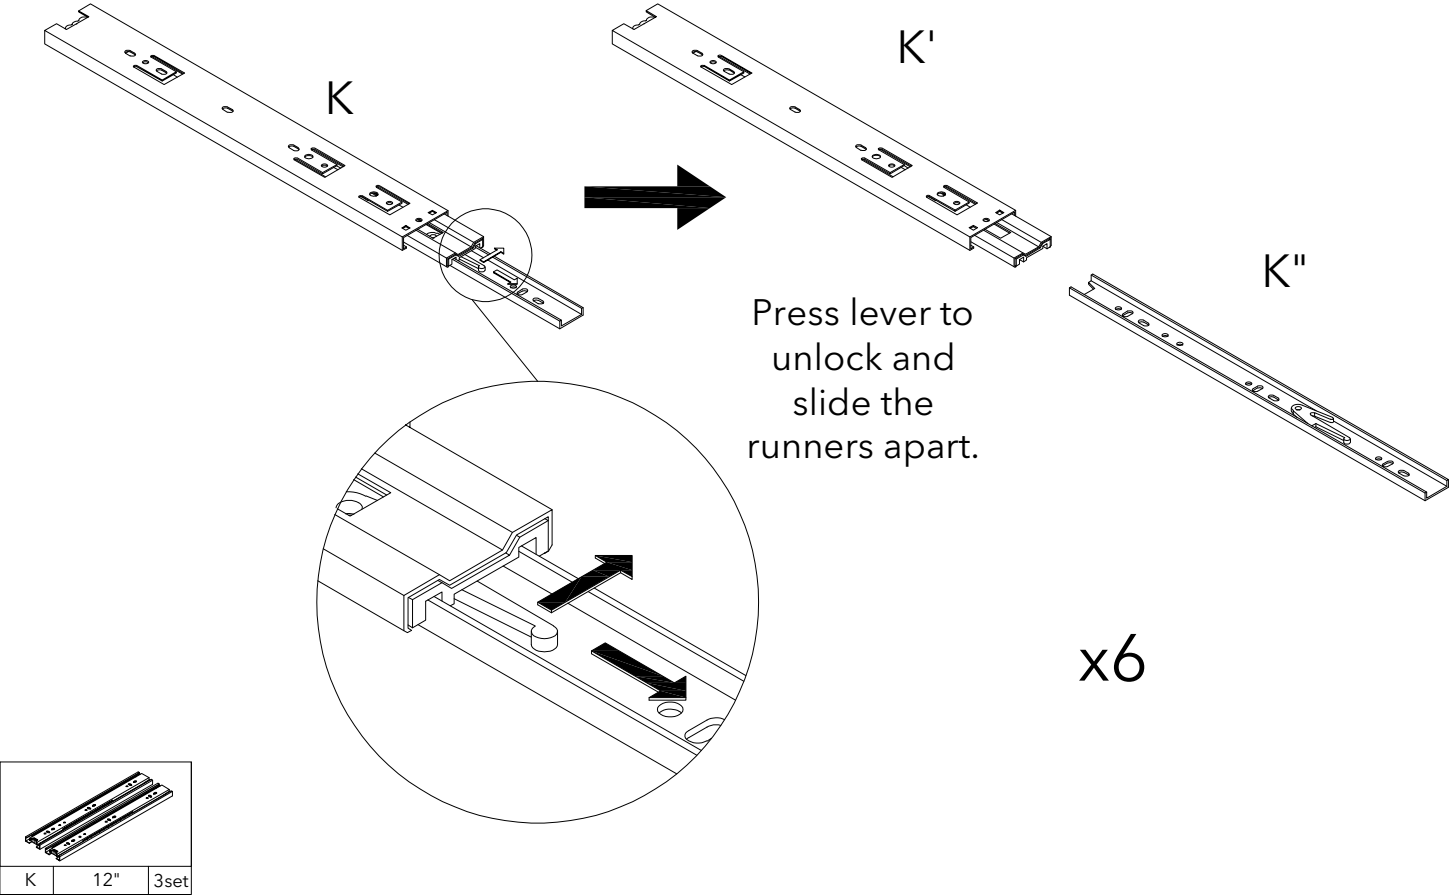


Step 2:

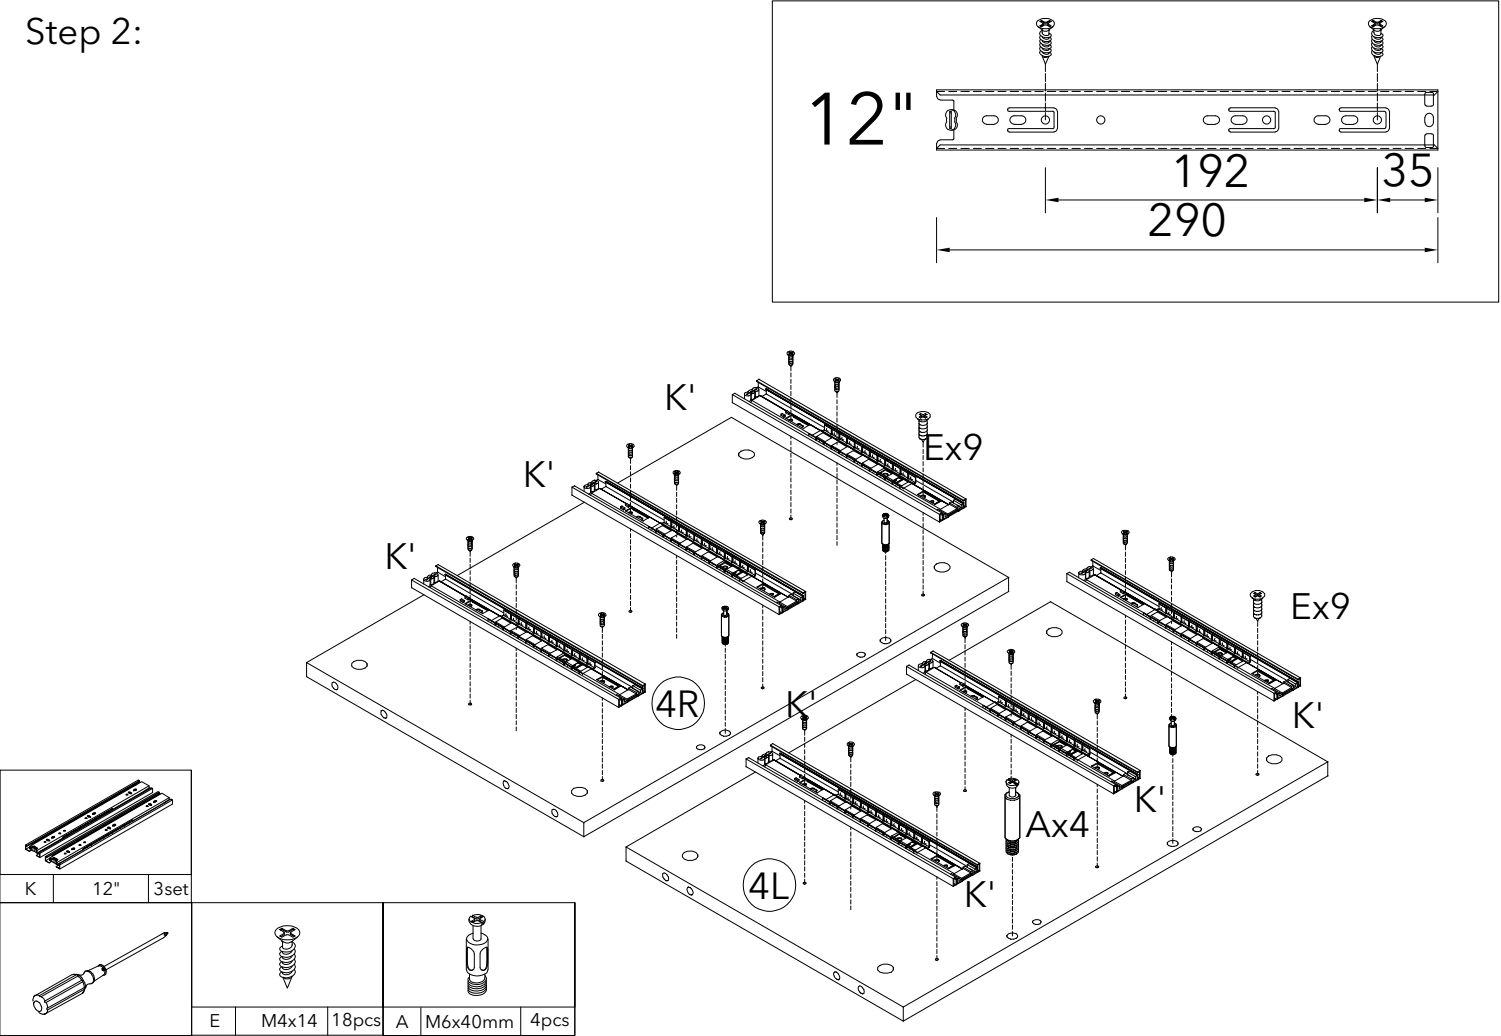


Step 3:

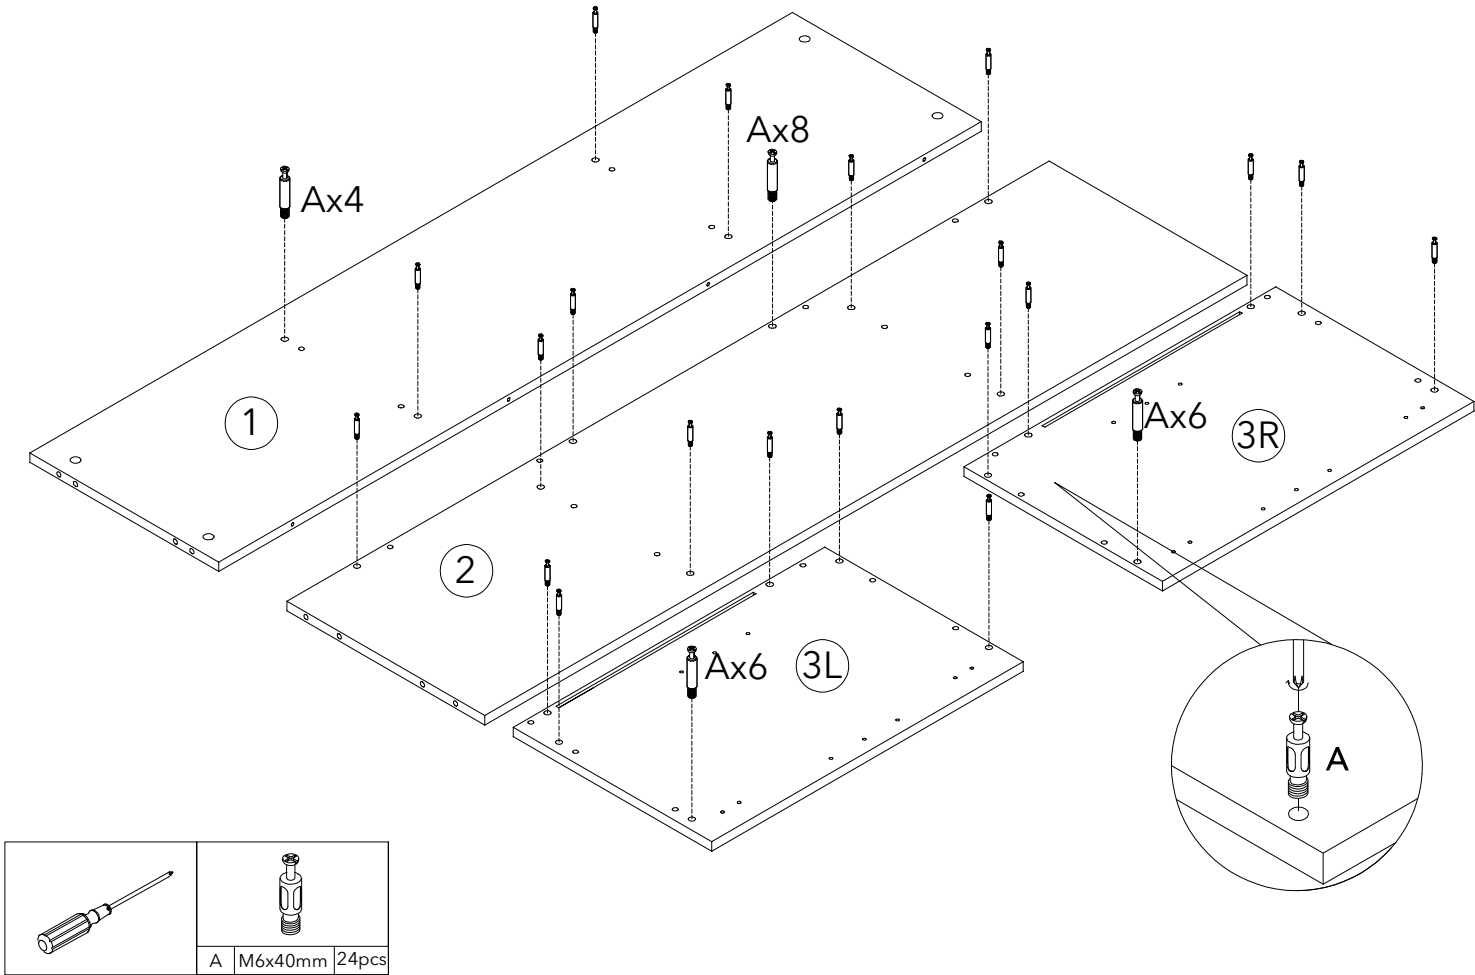


Step 4:

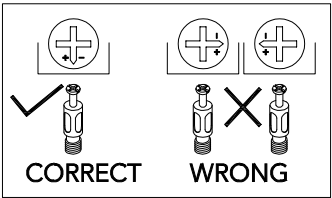


Please note that the locking cam faces outwards

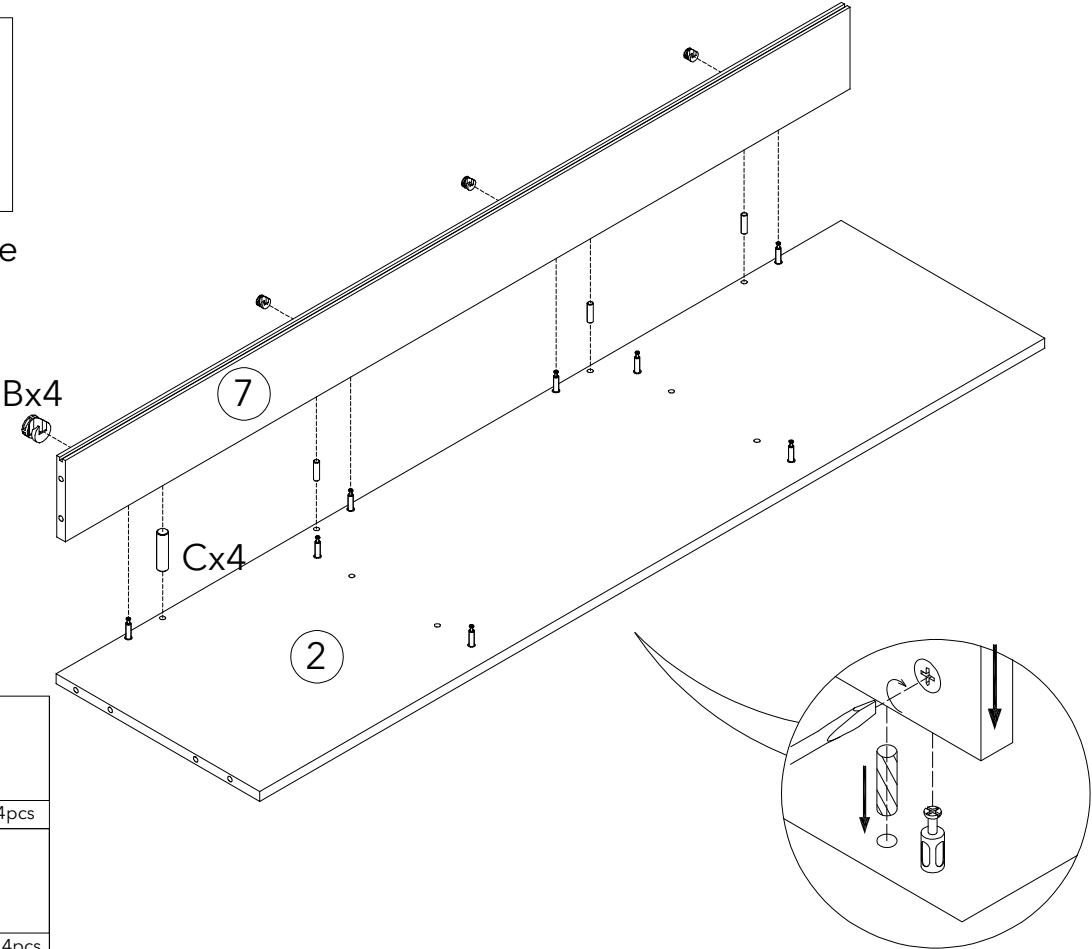



Step 5:

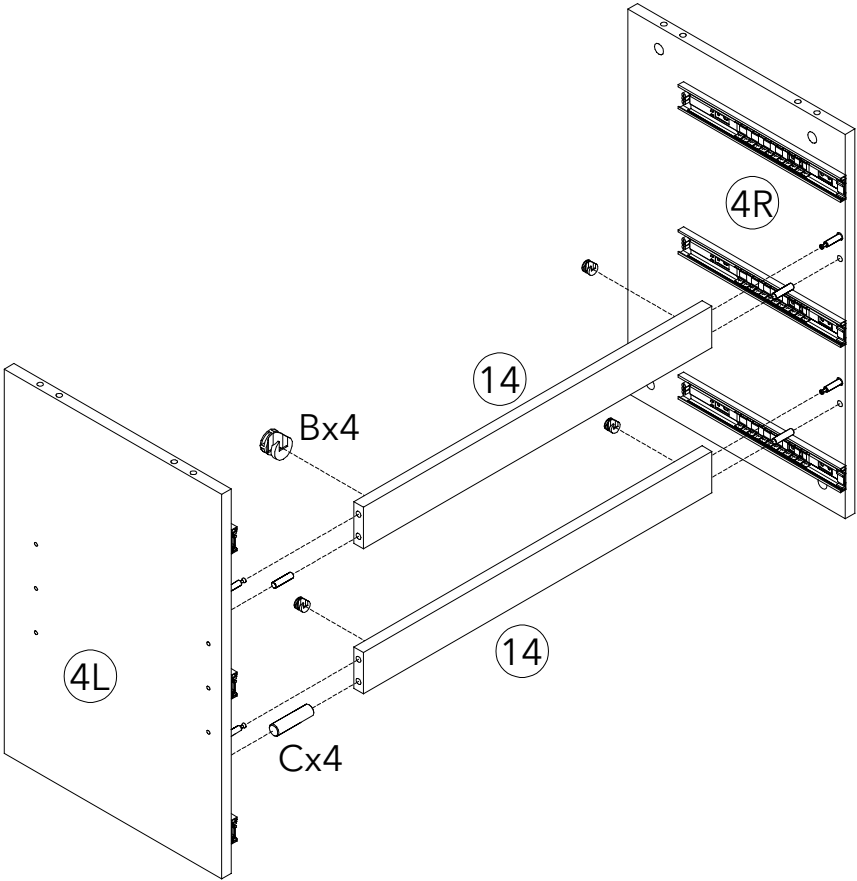


			
	C	Ø8x30	4pcs
			
	B	Ø15x11.5	4pcs

Step 6:

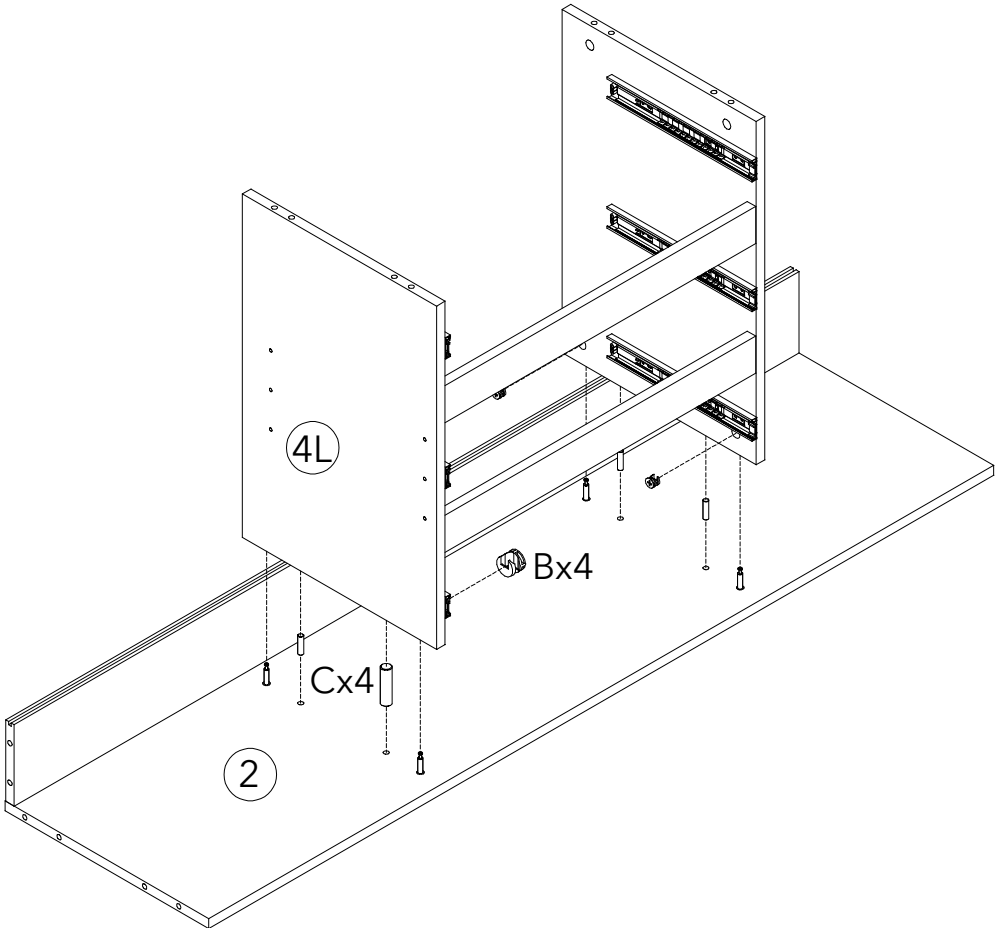


			
	C	Ø8x30	4pcs
			
	B	Ø15x11.5	4pcs


Step 7:

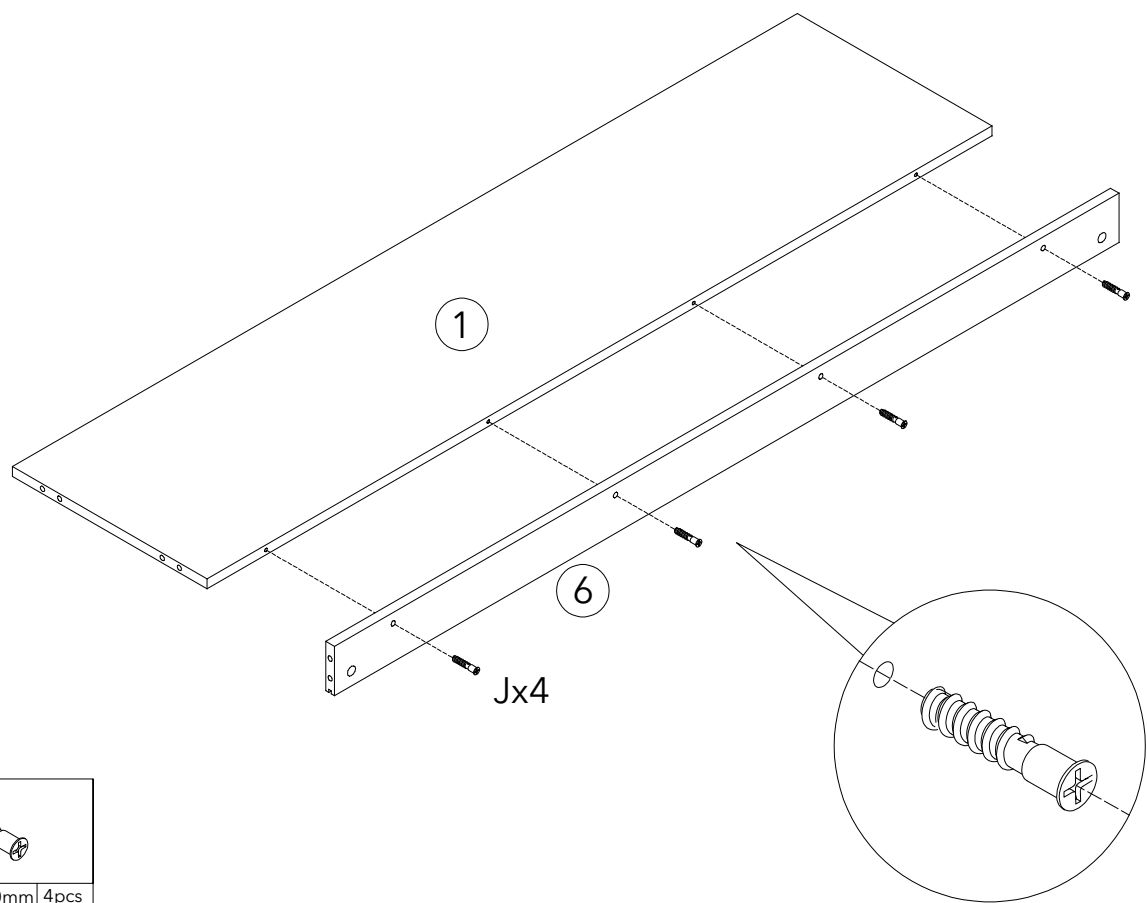


Step 8:

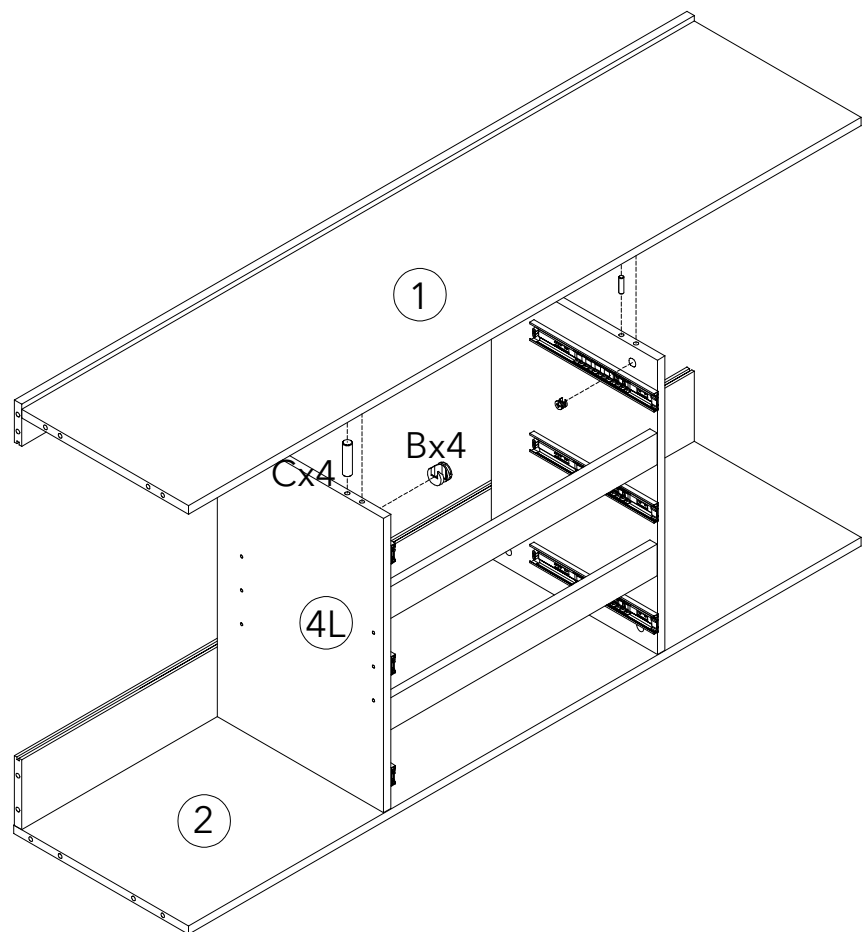



Step 9:

			
	B	Ø15x11.5	6pcs
			
	C	Ø8x30	6pcs

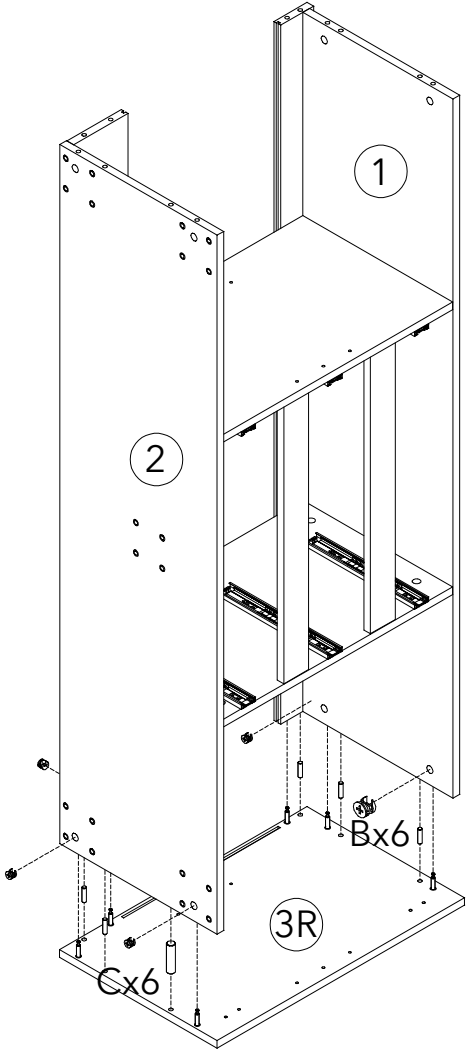



Step 10:

			
	B	Ø15x11.5	6pcs
			
	C	Ø8x30	6pcs



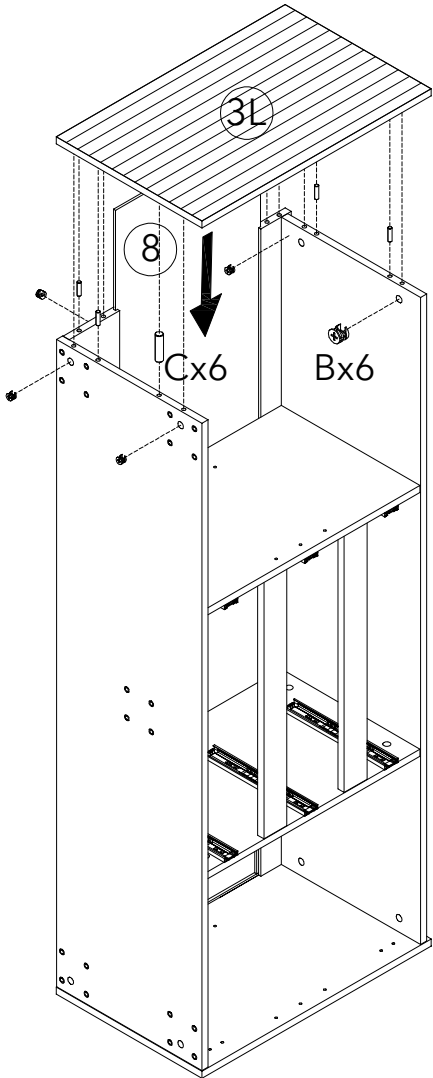


Step 11:



					
L	/	2pcs	T	/	3pcs
					
I	M6x12mm		20	pcs	

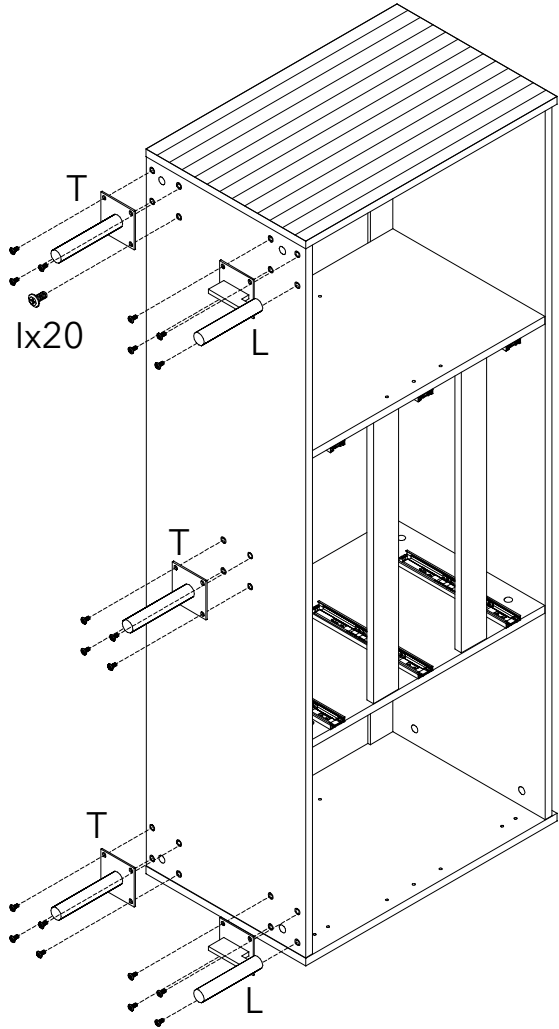



Step 12:

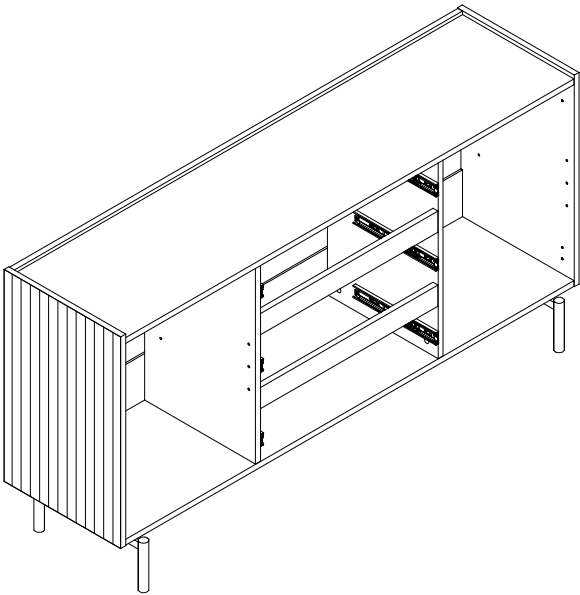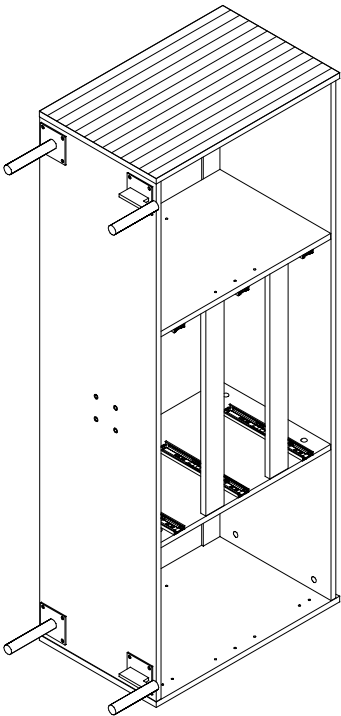


Step 13:

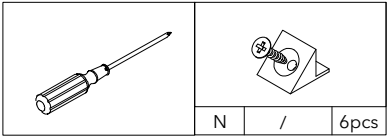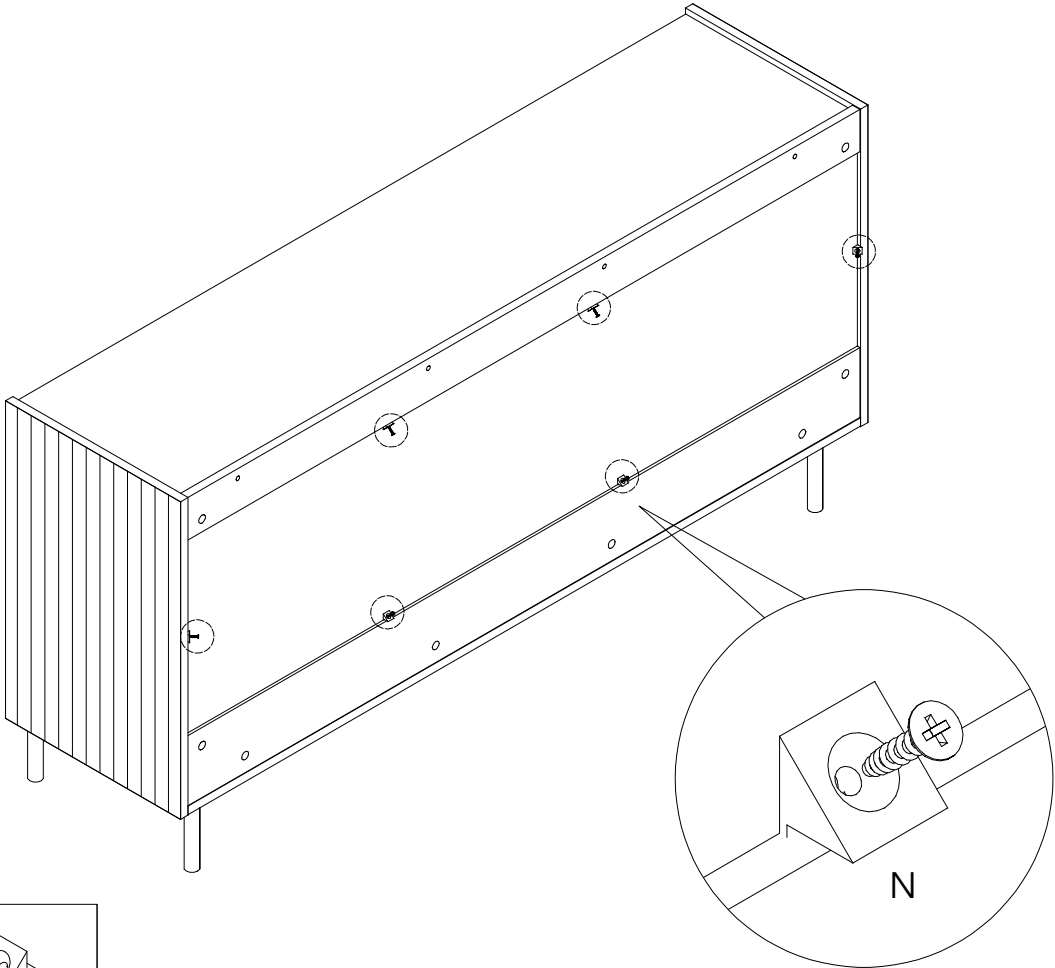


Step 14:

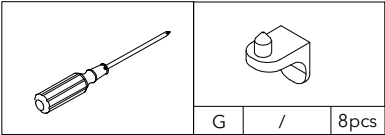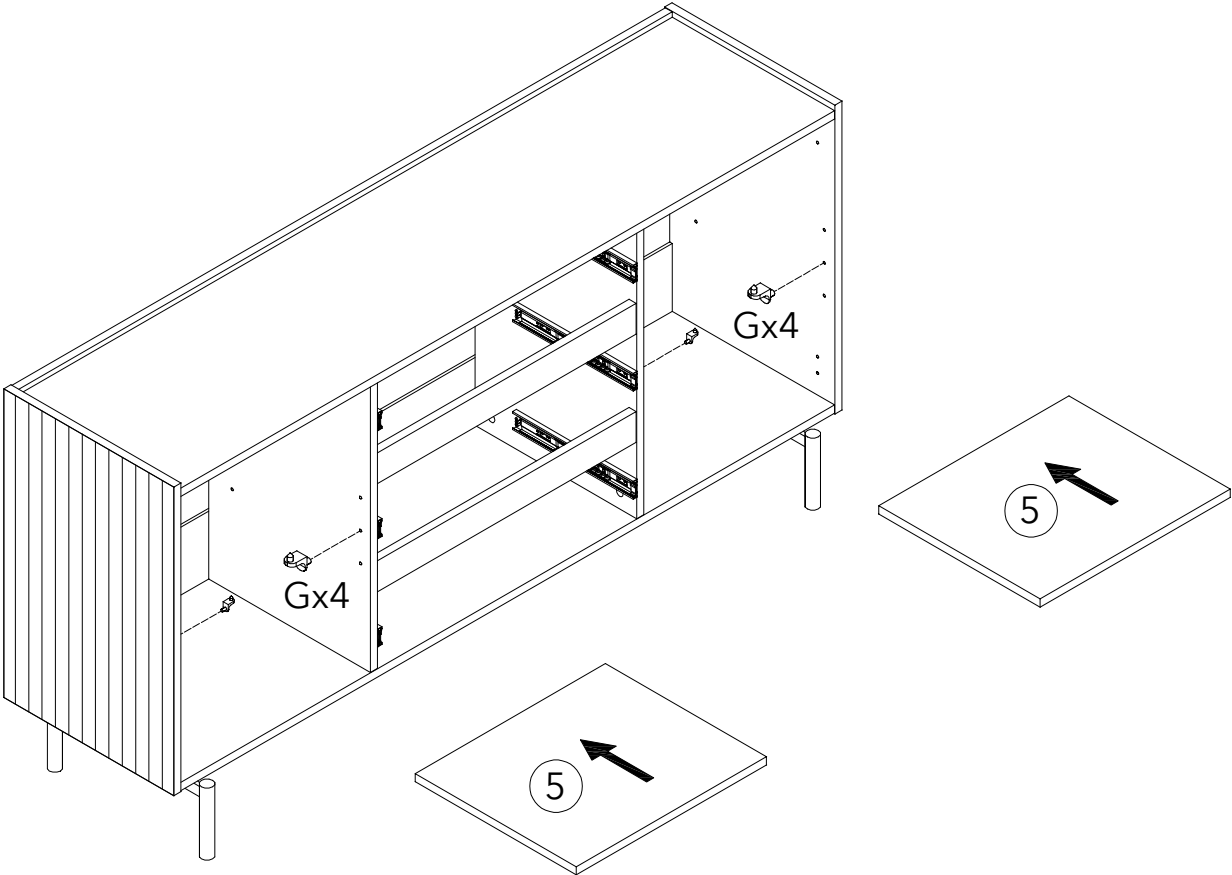


Step 16:



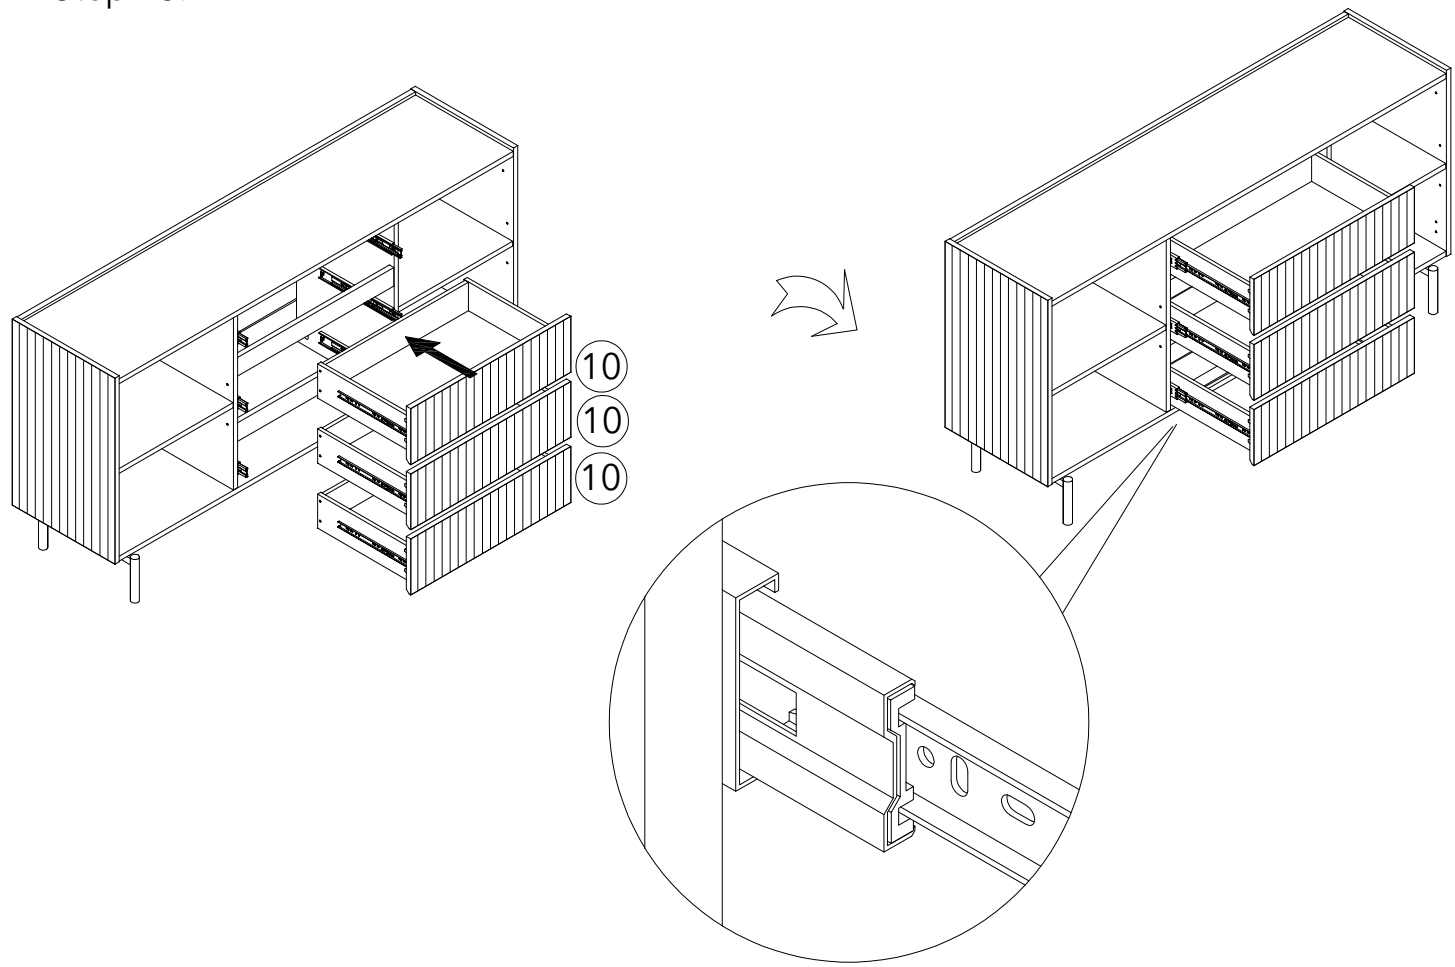


Step 17:

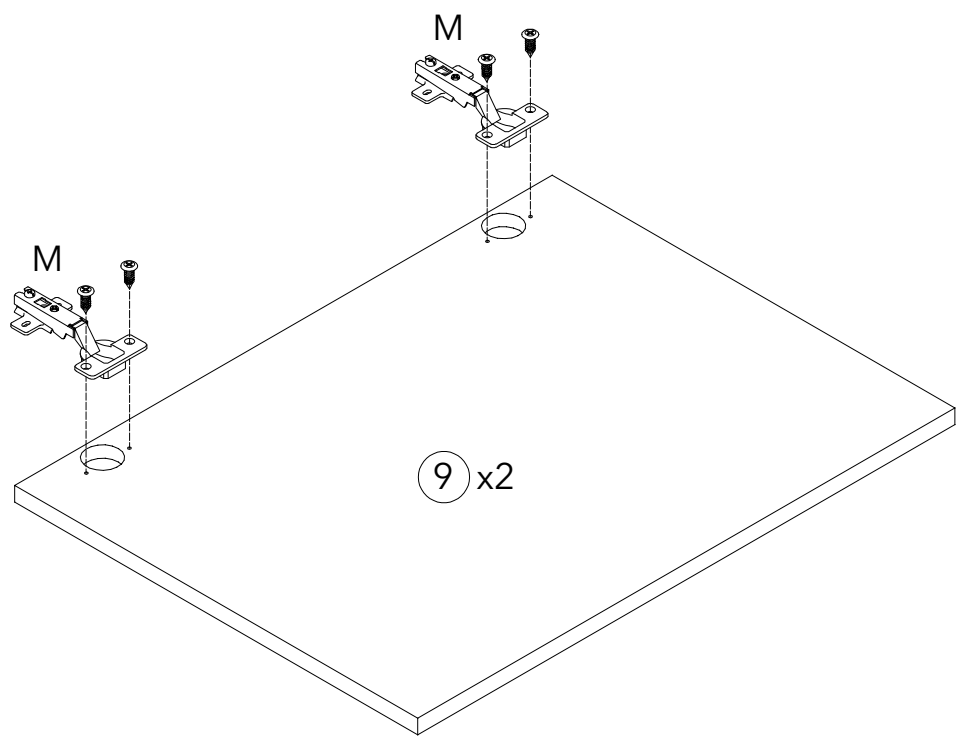


	
M	/ 4set


Step 15: x3

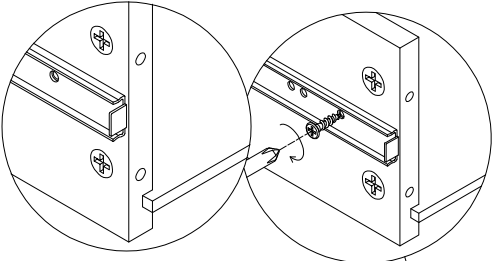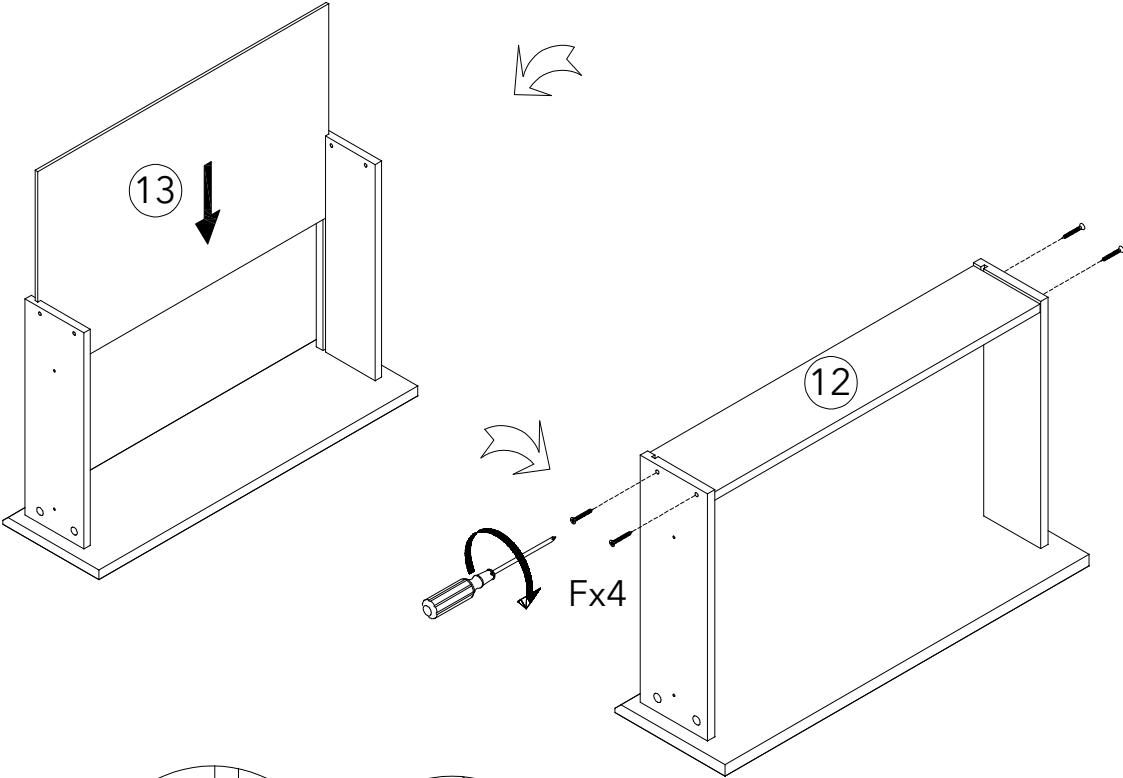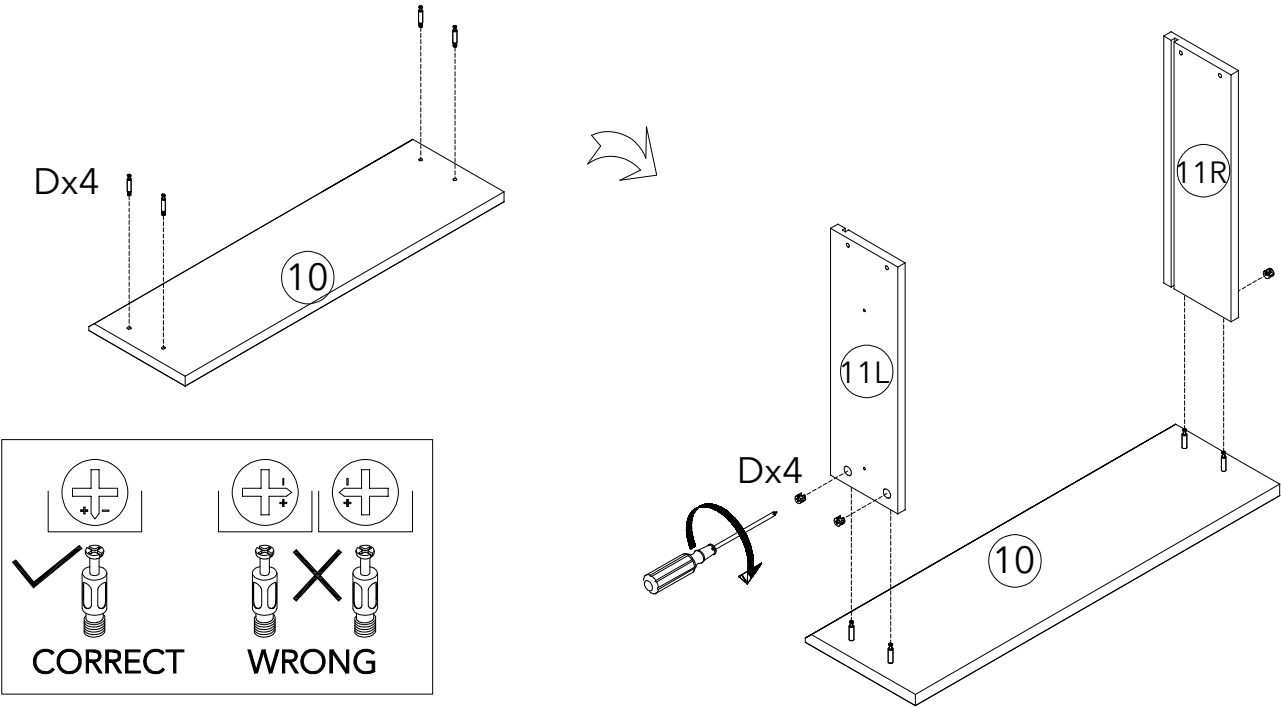


K	12"	3set	F	M4x30	12pcs
			D	φ12x10mm	12set
			E	M4x14	18pcs

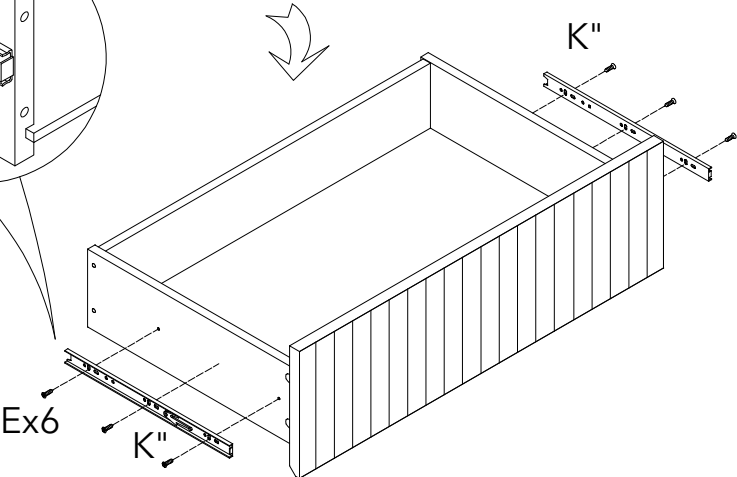







Step 18:

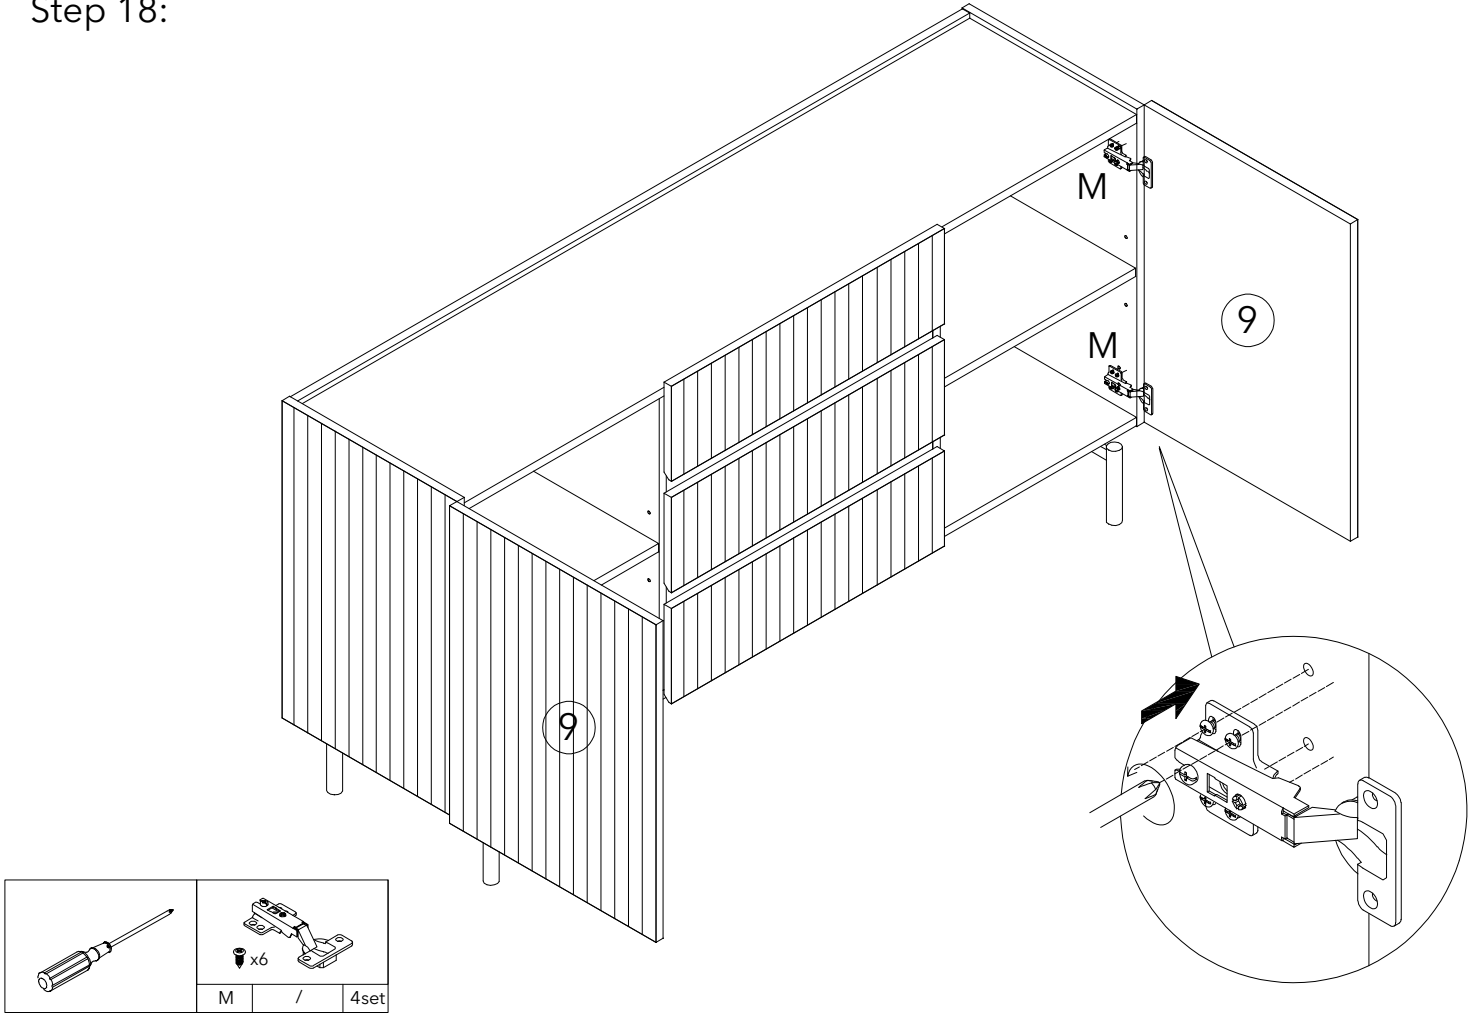


Step 19:

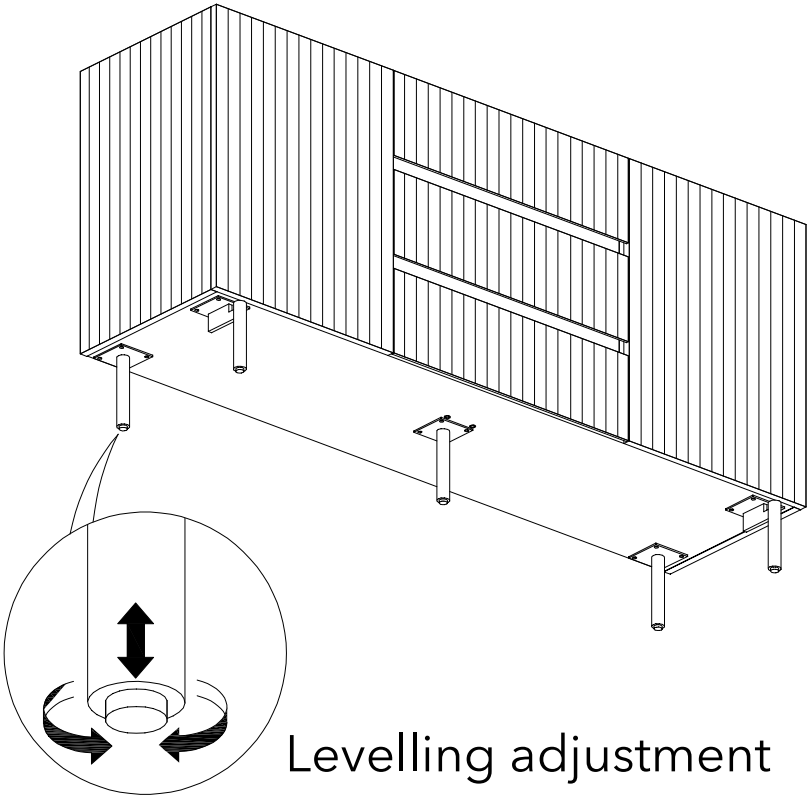


Step 20:

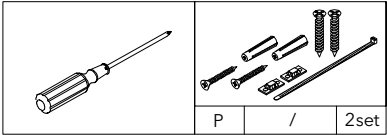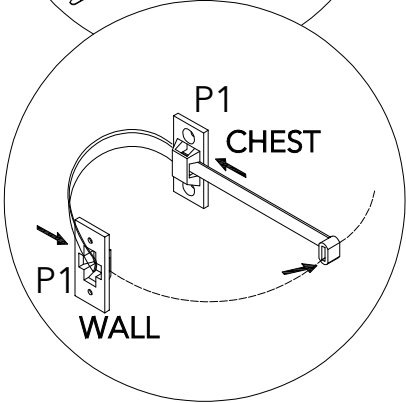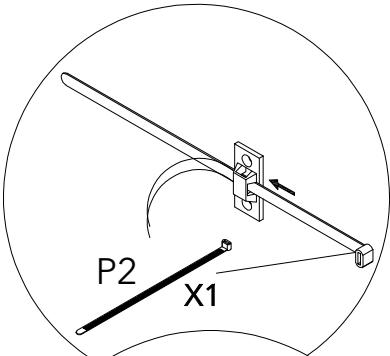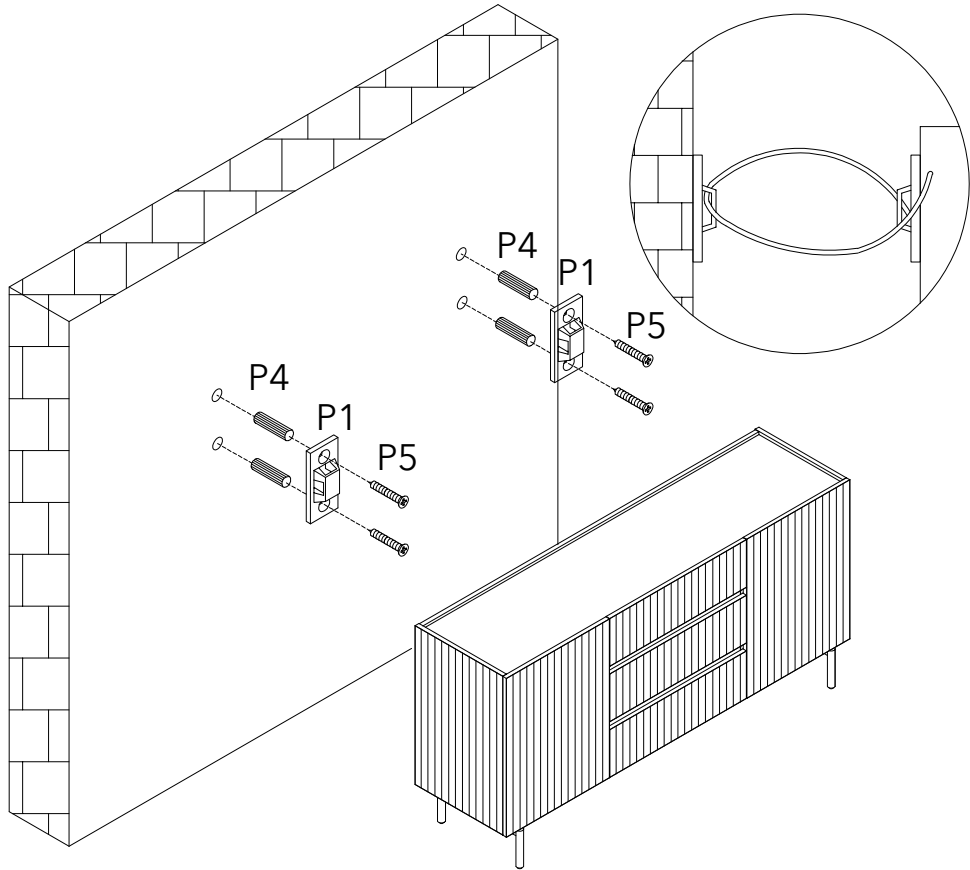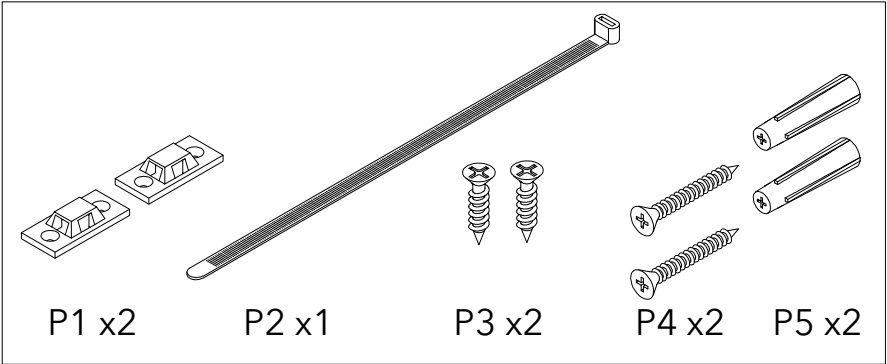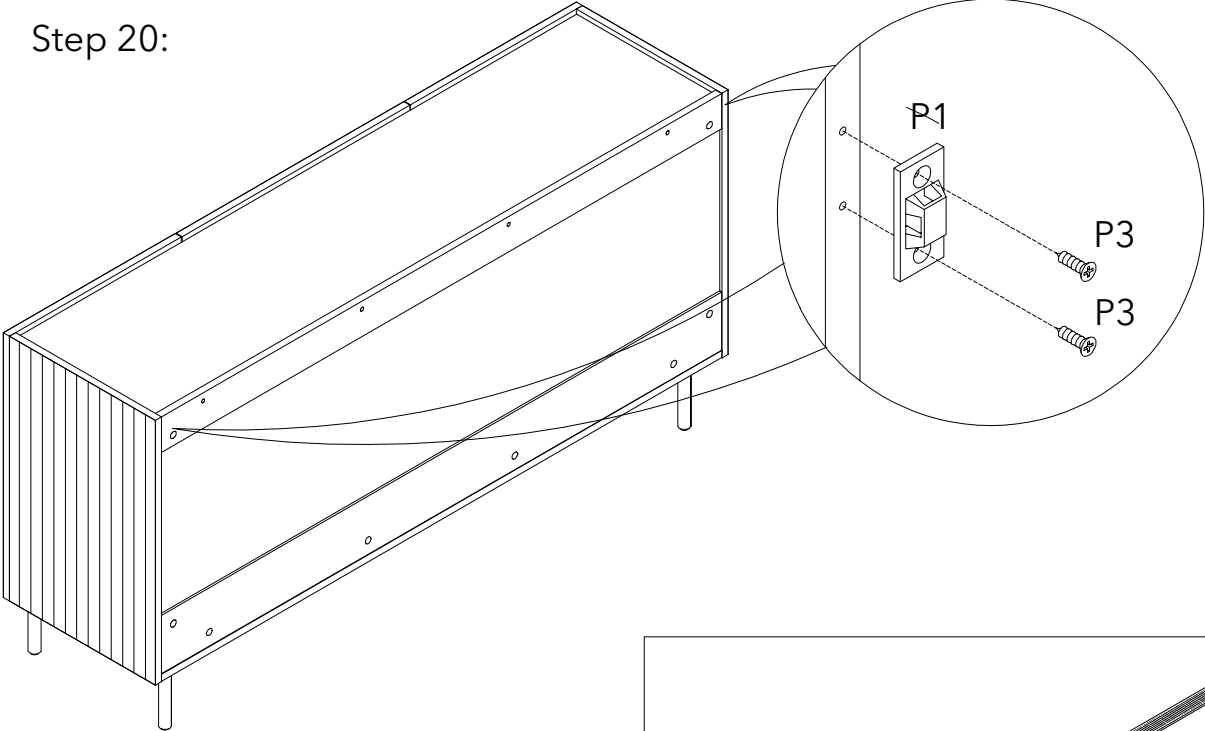

Step 21:

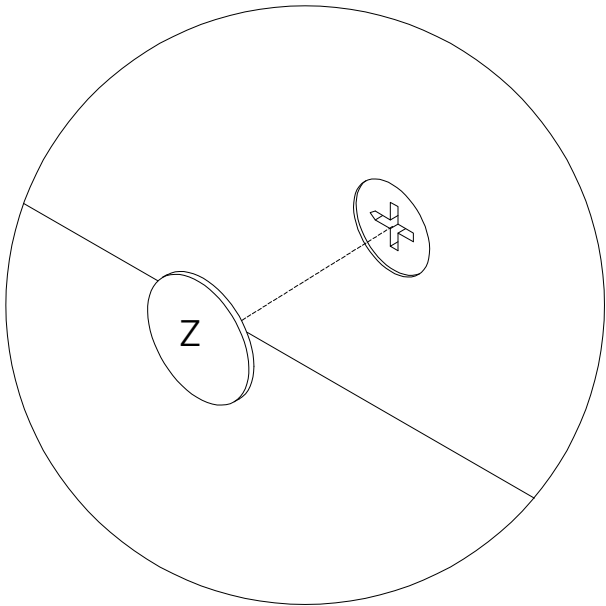

Add the screw covers
for those visible cams

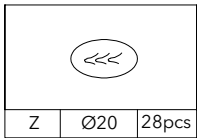

final product

