

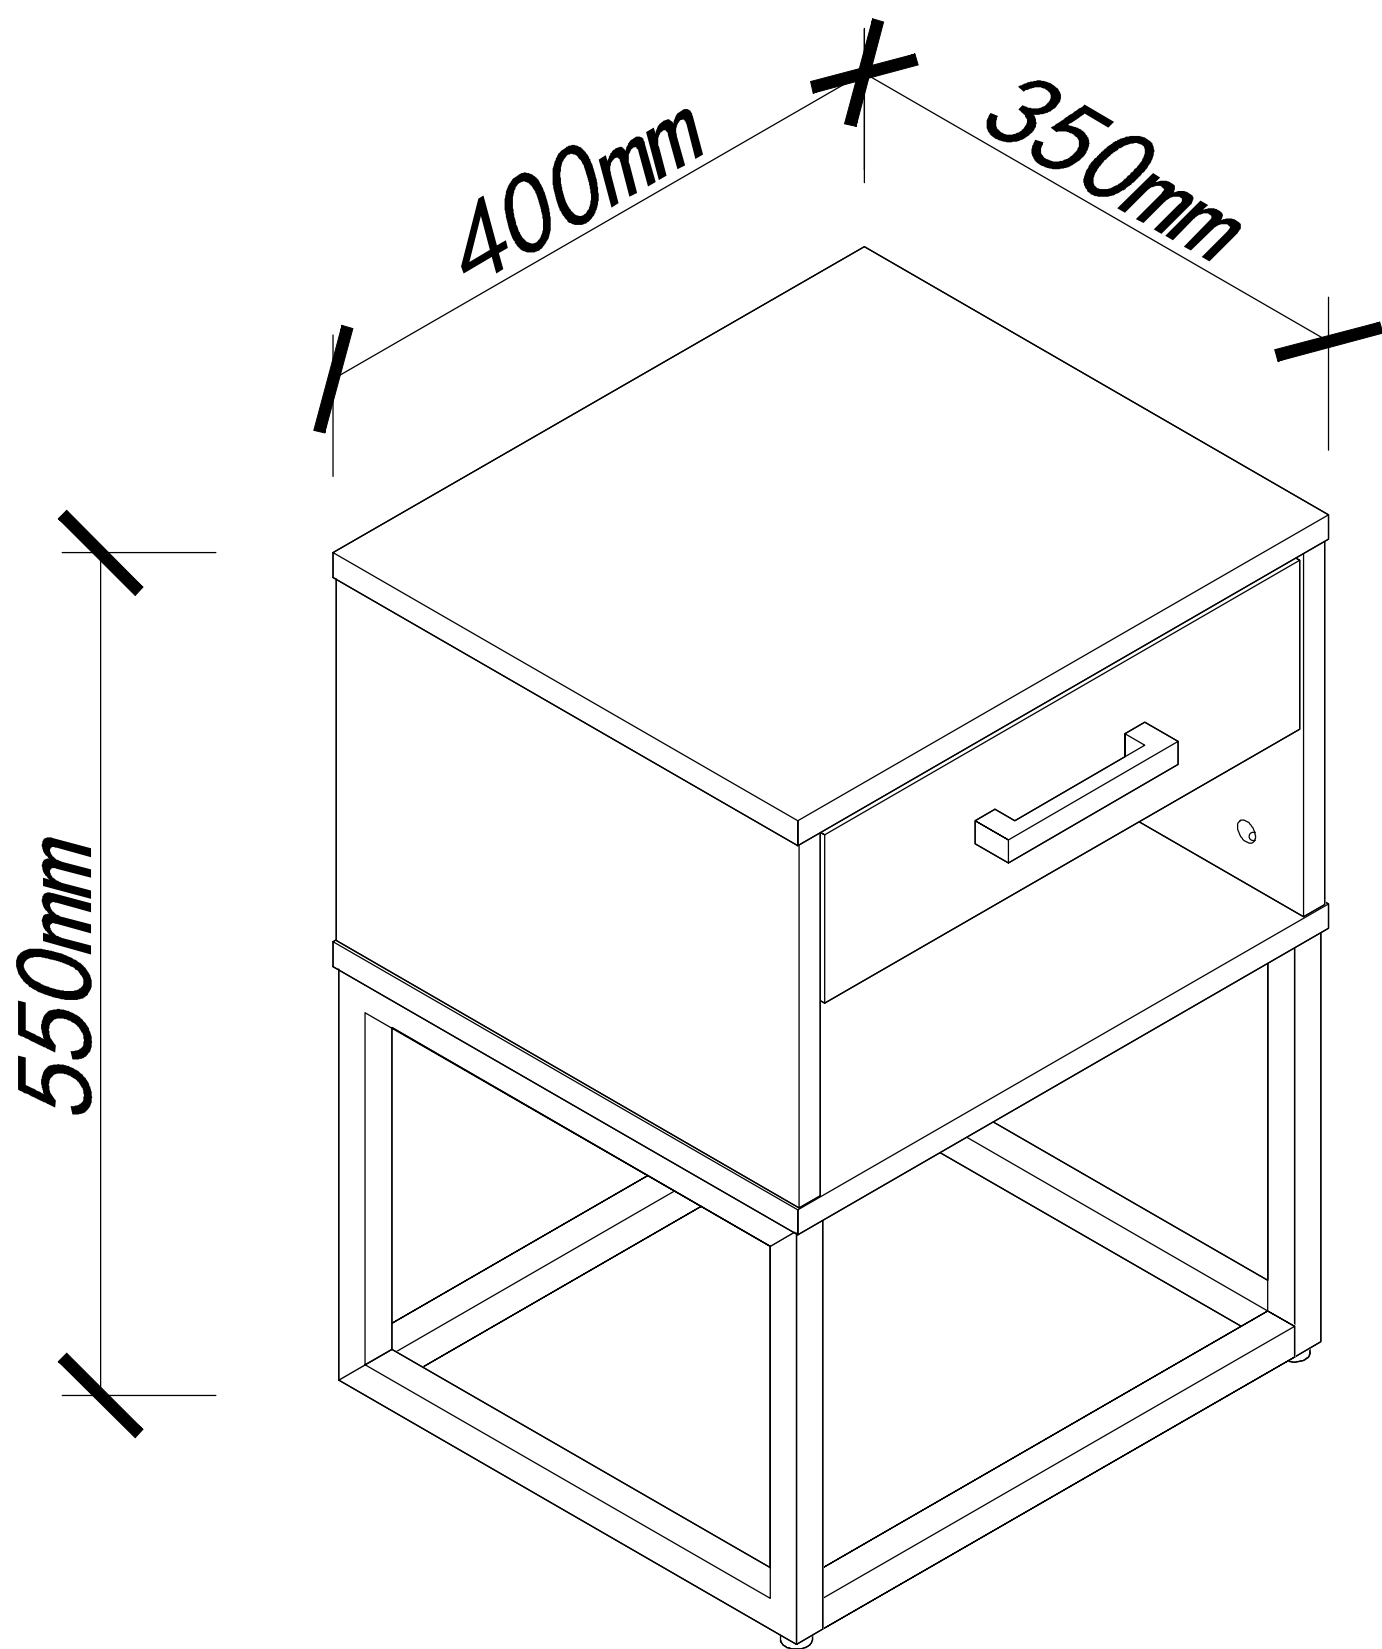
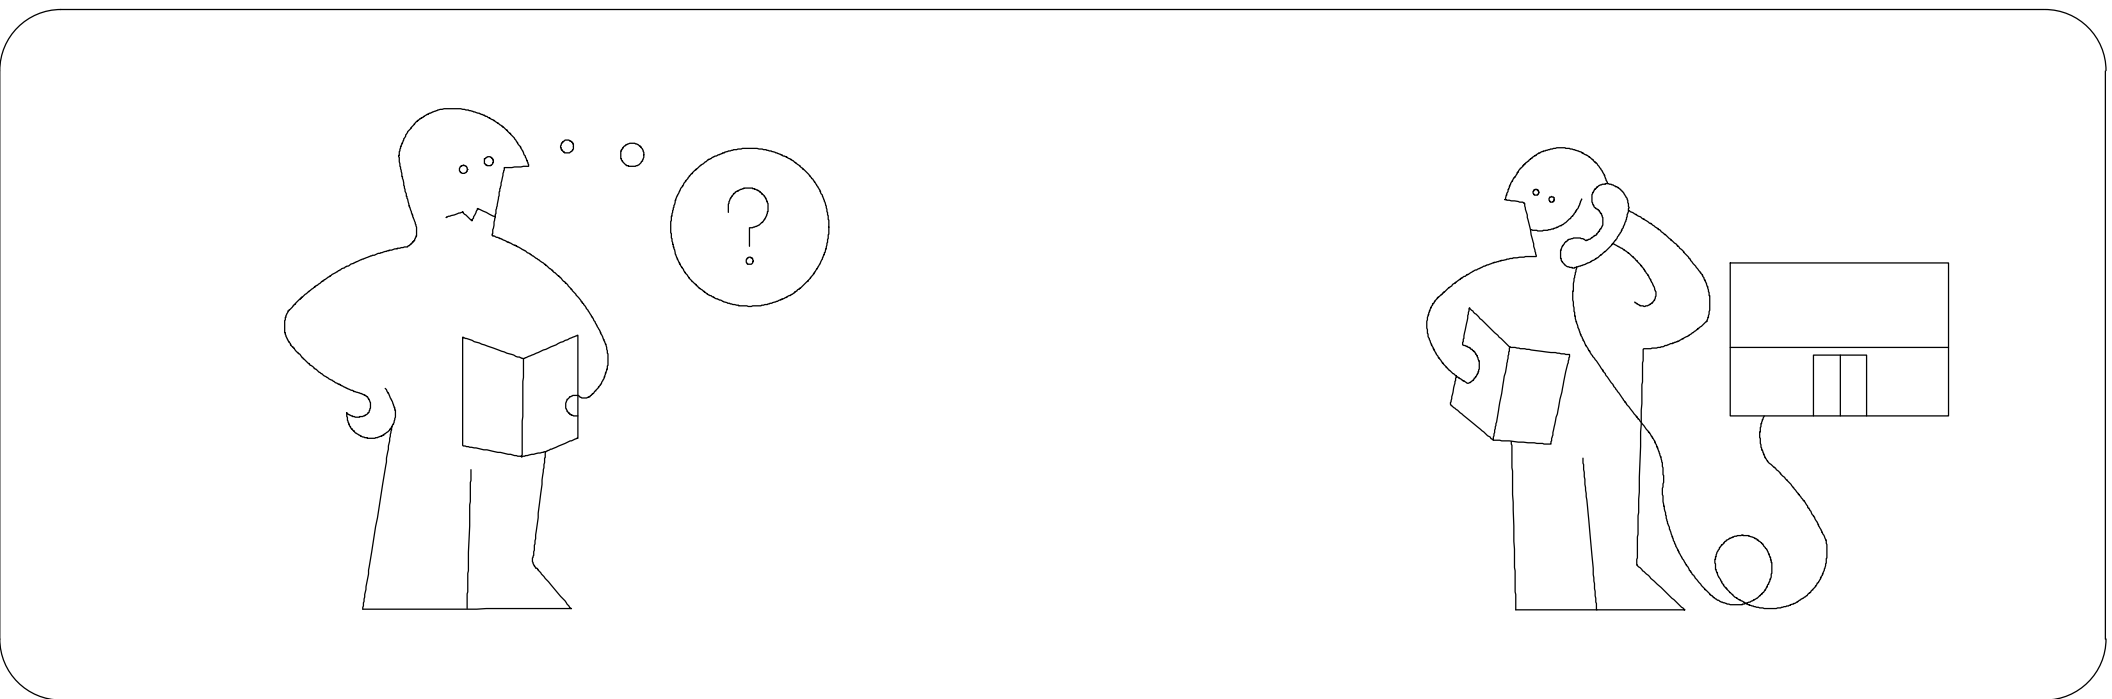
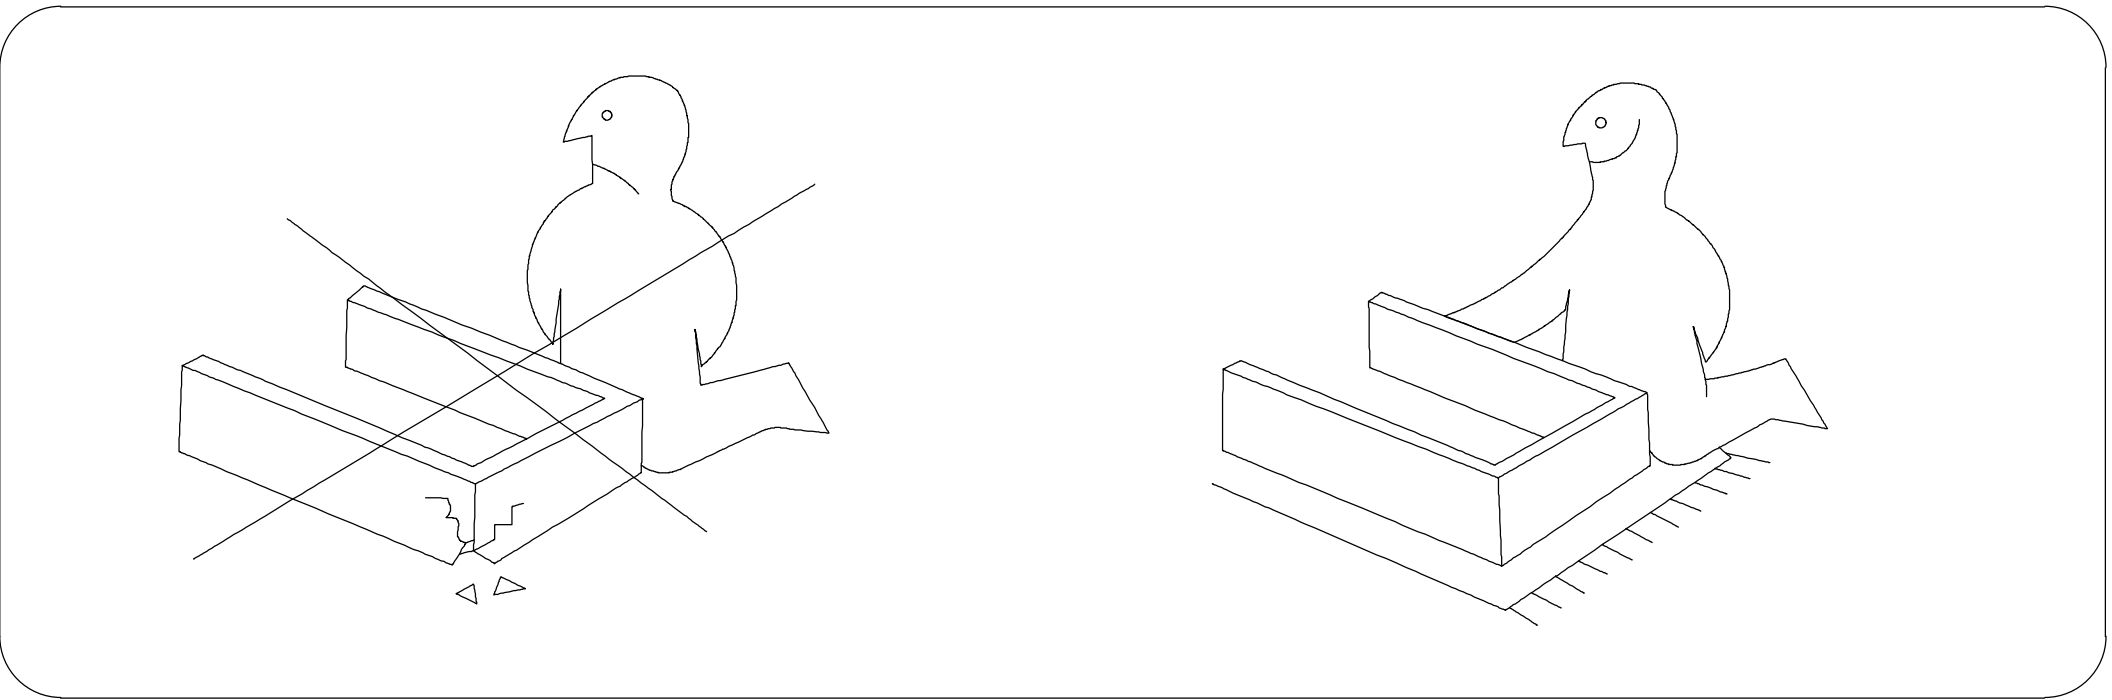





13520007/01

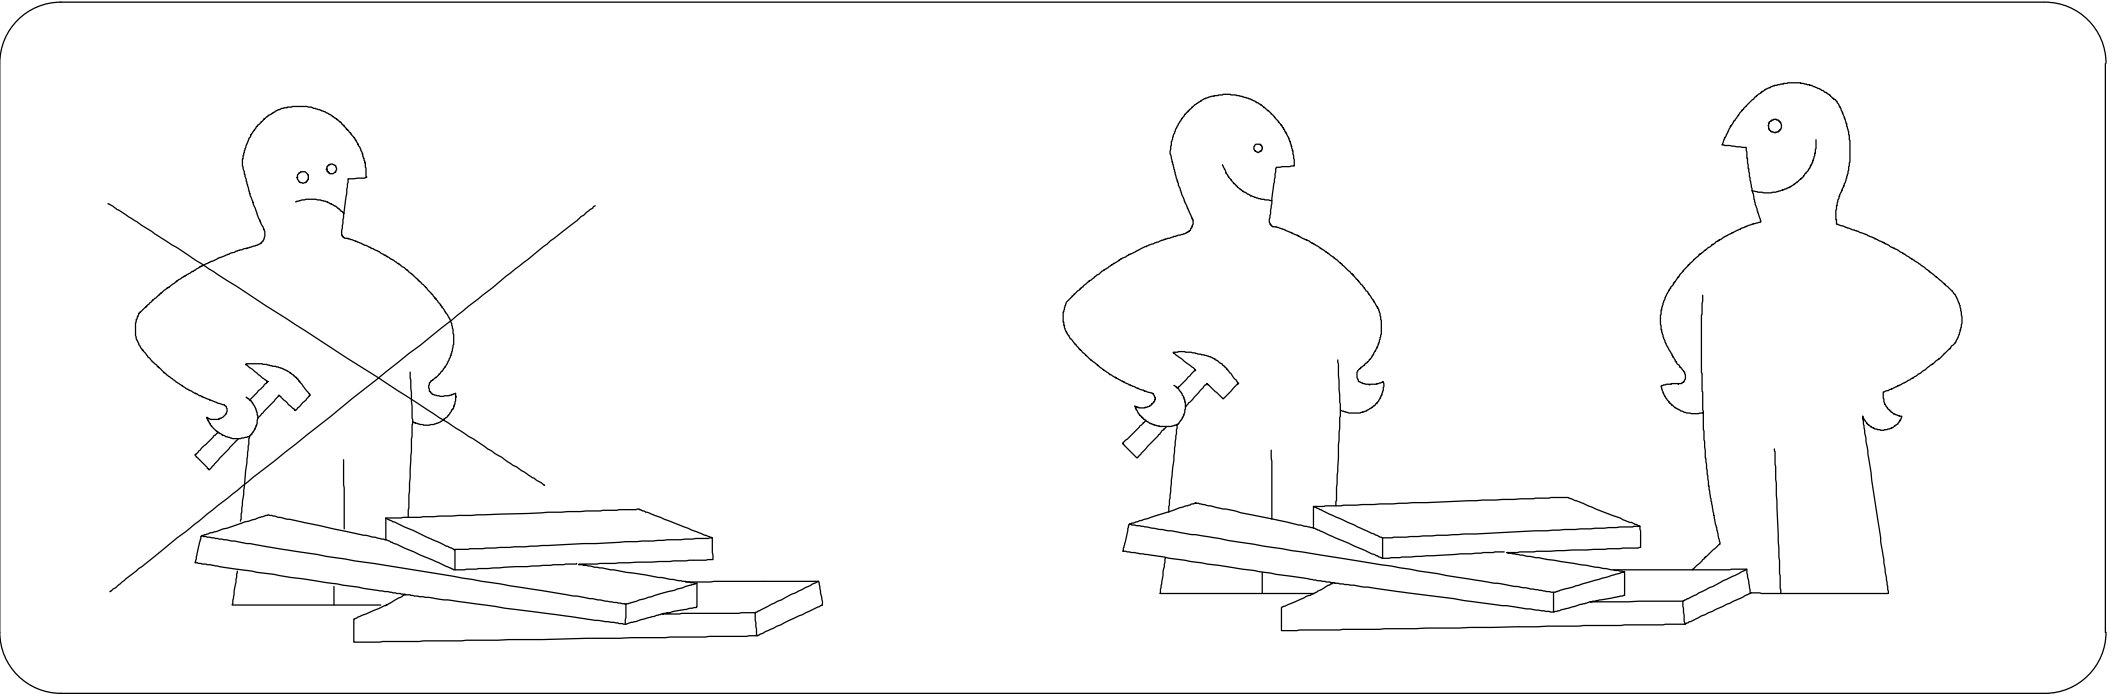

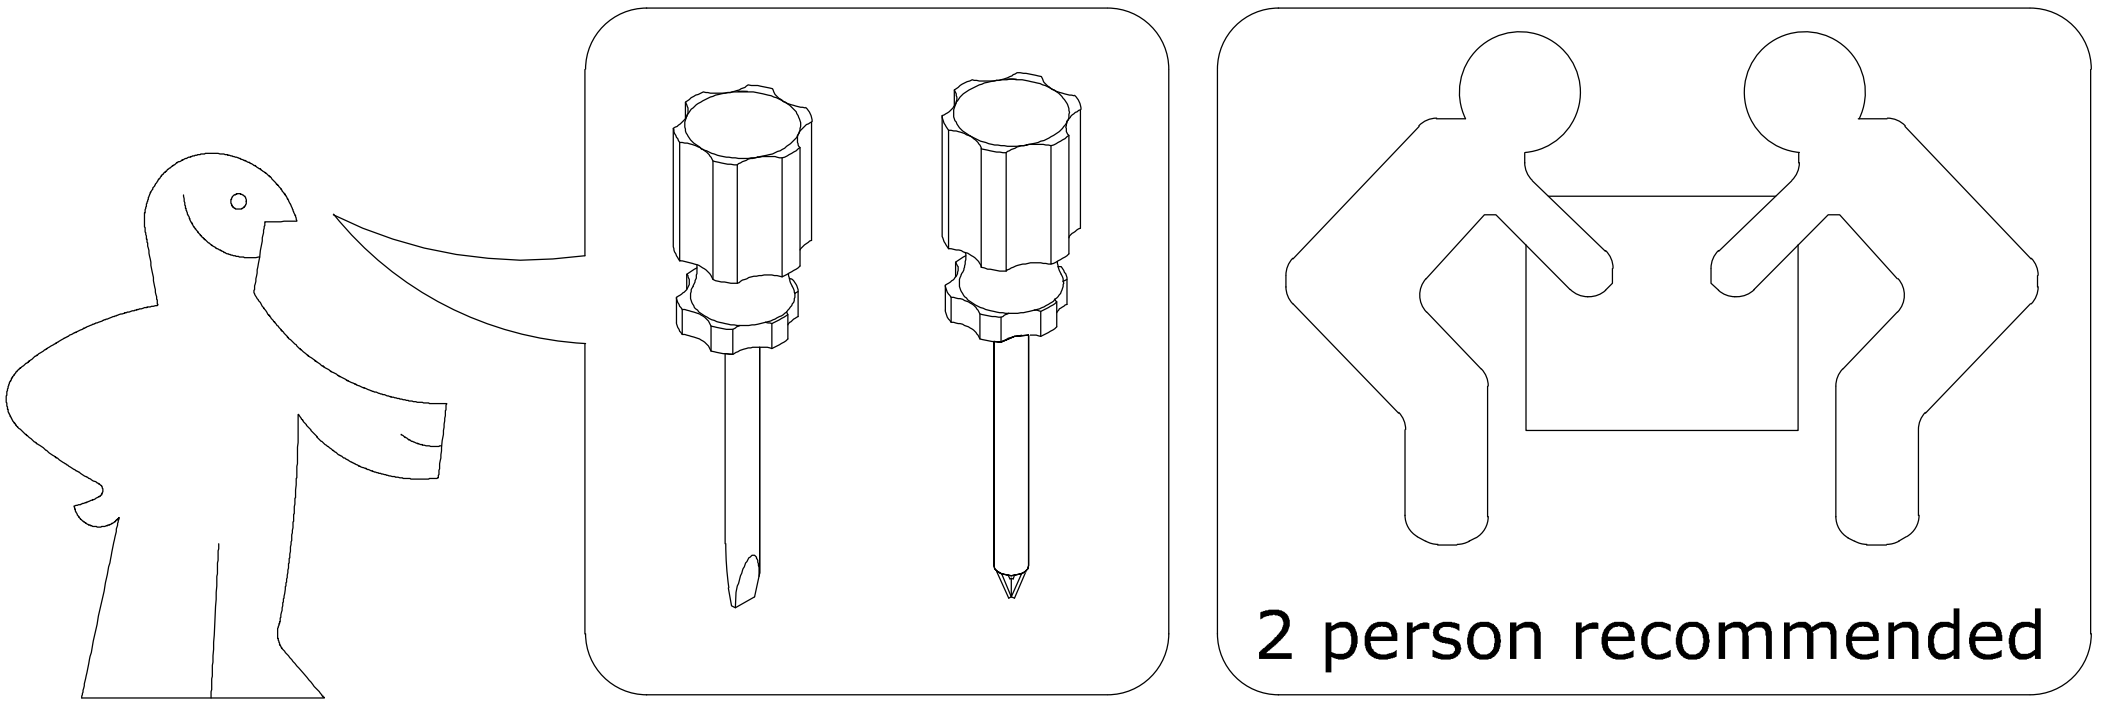


Panel No	Panel Sizes	Quantity
1	400*350*16	1
2	400*350*16	1
3	238*348*16	1
4	238*348*16	1
5	373*248*5	1

Panel No	Panel Sizes	Quantity
6	358*110*16	1
7	314*80*12	1
8	300*80*12	1
9	300*80*12	1
10	324*298*5	1

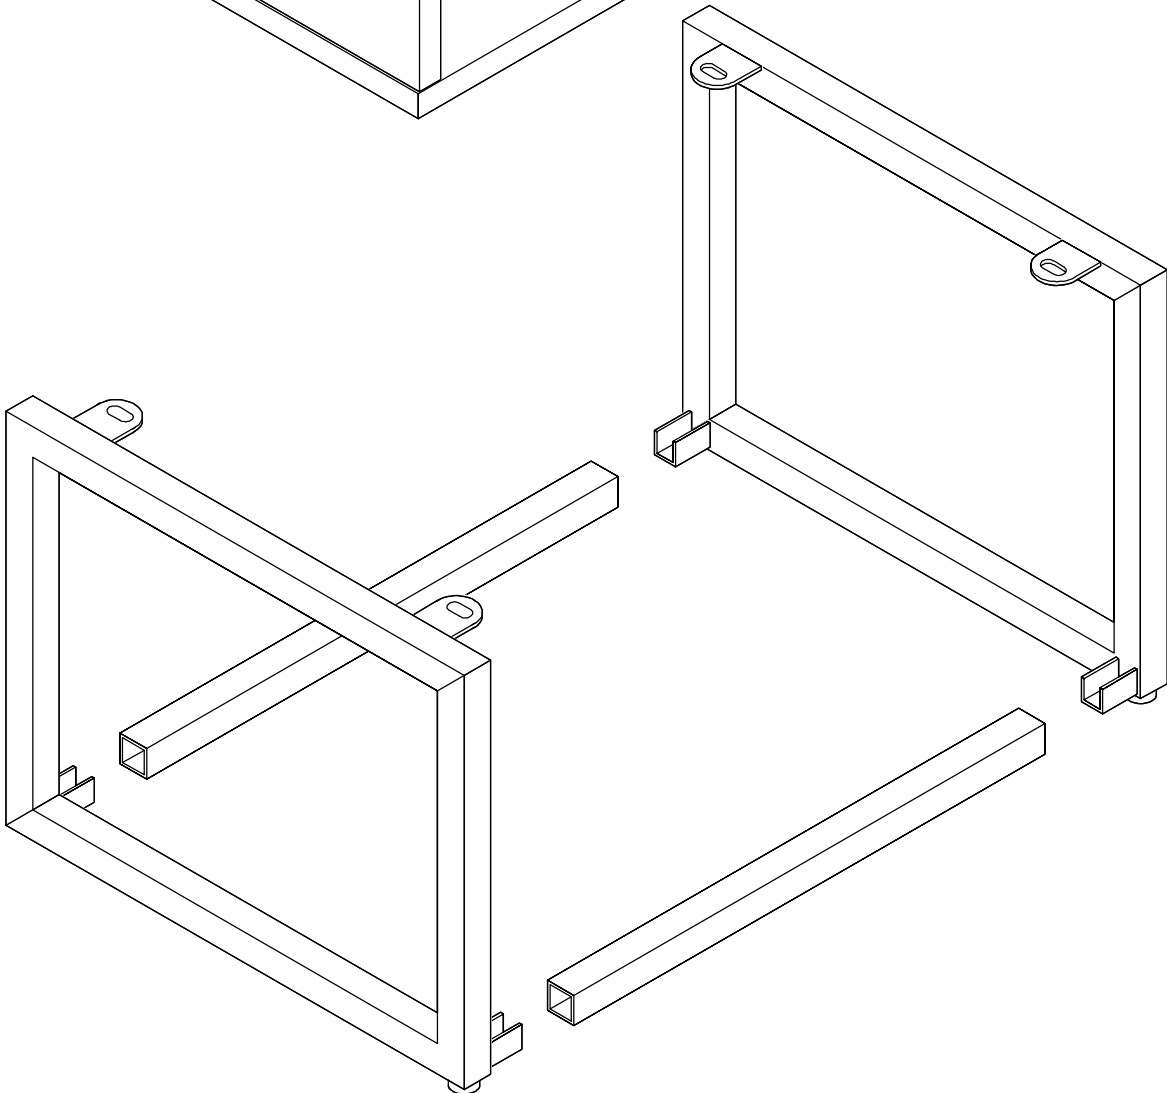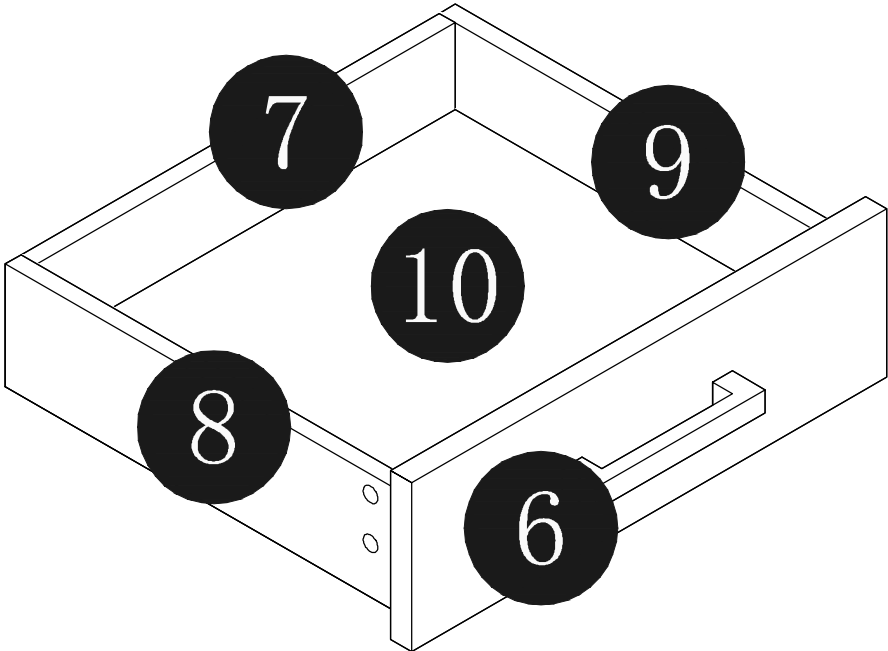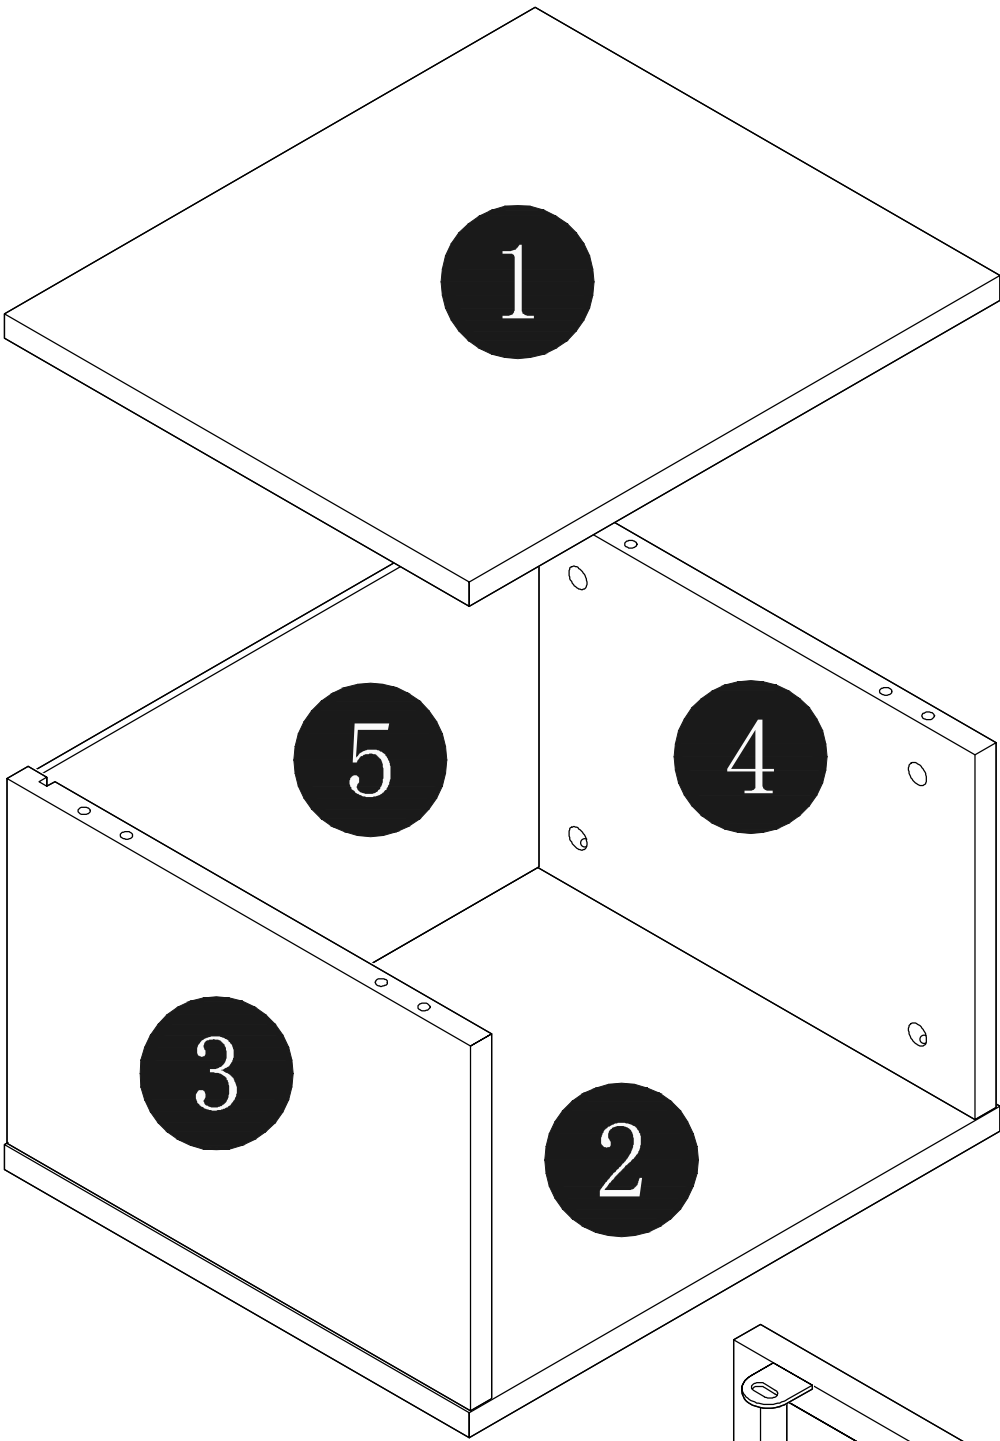


Fittings




M6*40

A=8



Φ 8*30

B=8

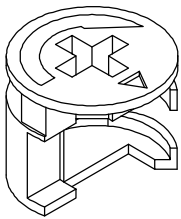


Φ 15*12

C=8




Φ 21


D=16

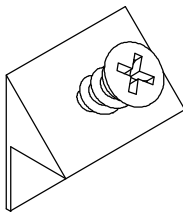

E=4

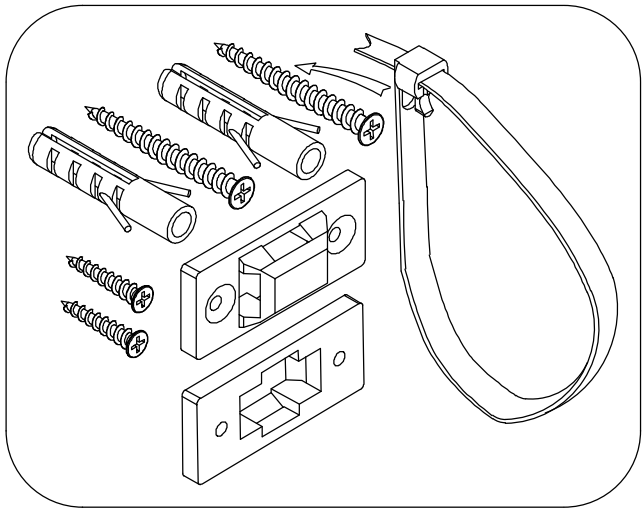

F=1




M6*16

G=8




M4

H=1

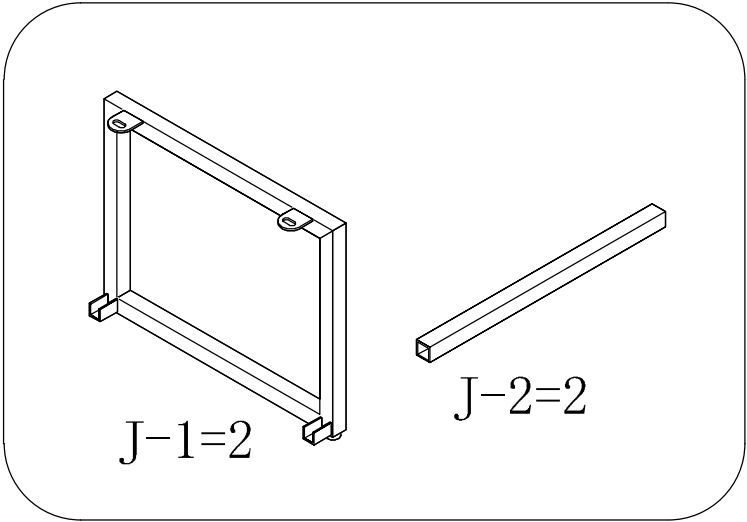

J-1=2

J-2=2

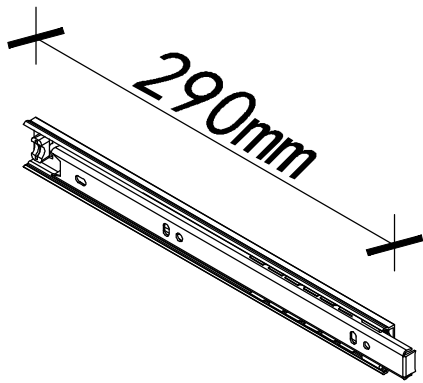


N=4



M6*34

O=8

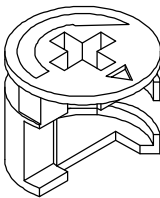


Φ 12*10.5

P=8



M3.5*12

V1=8

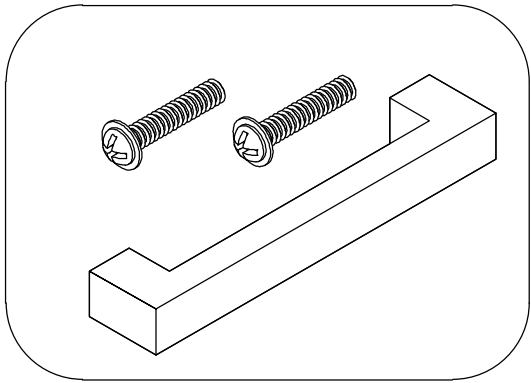

U=1




Z1=4




Z2=4


STEP 1

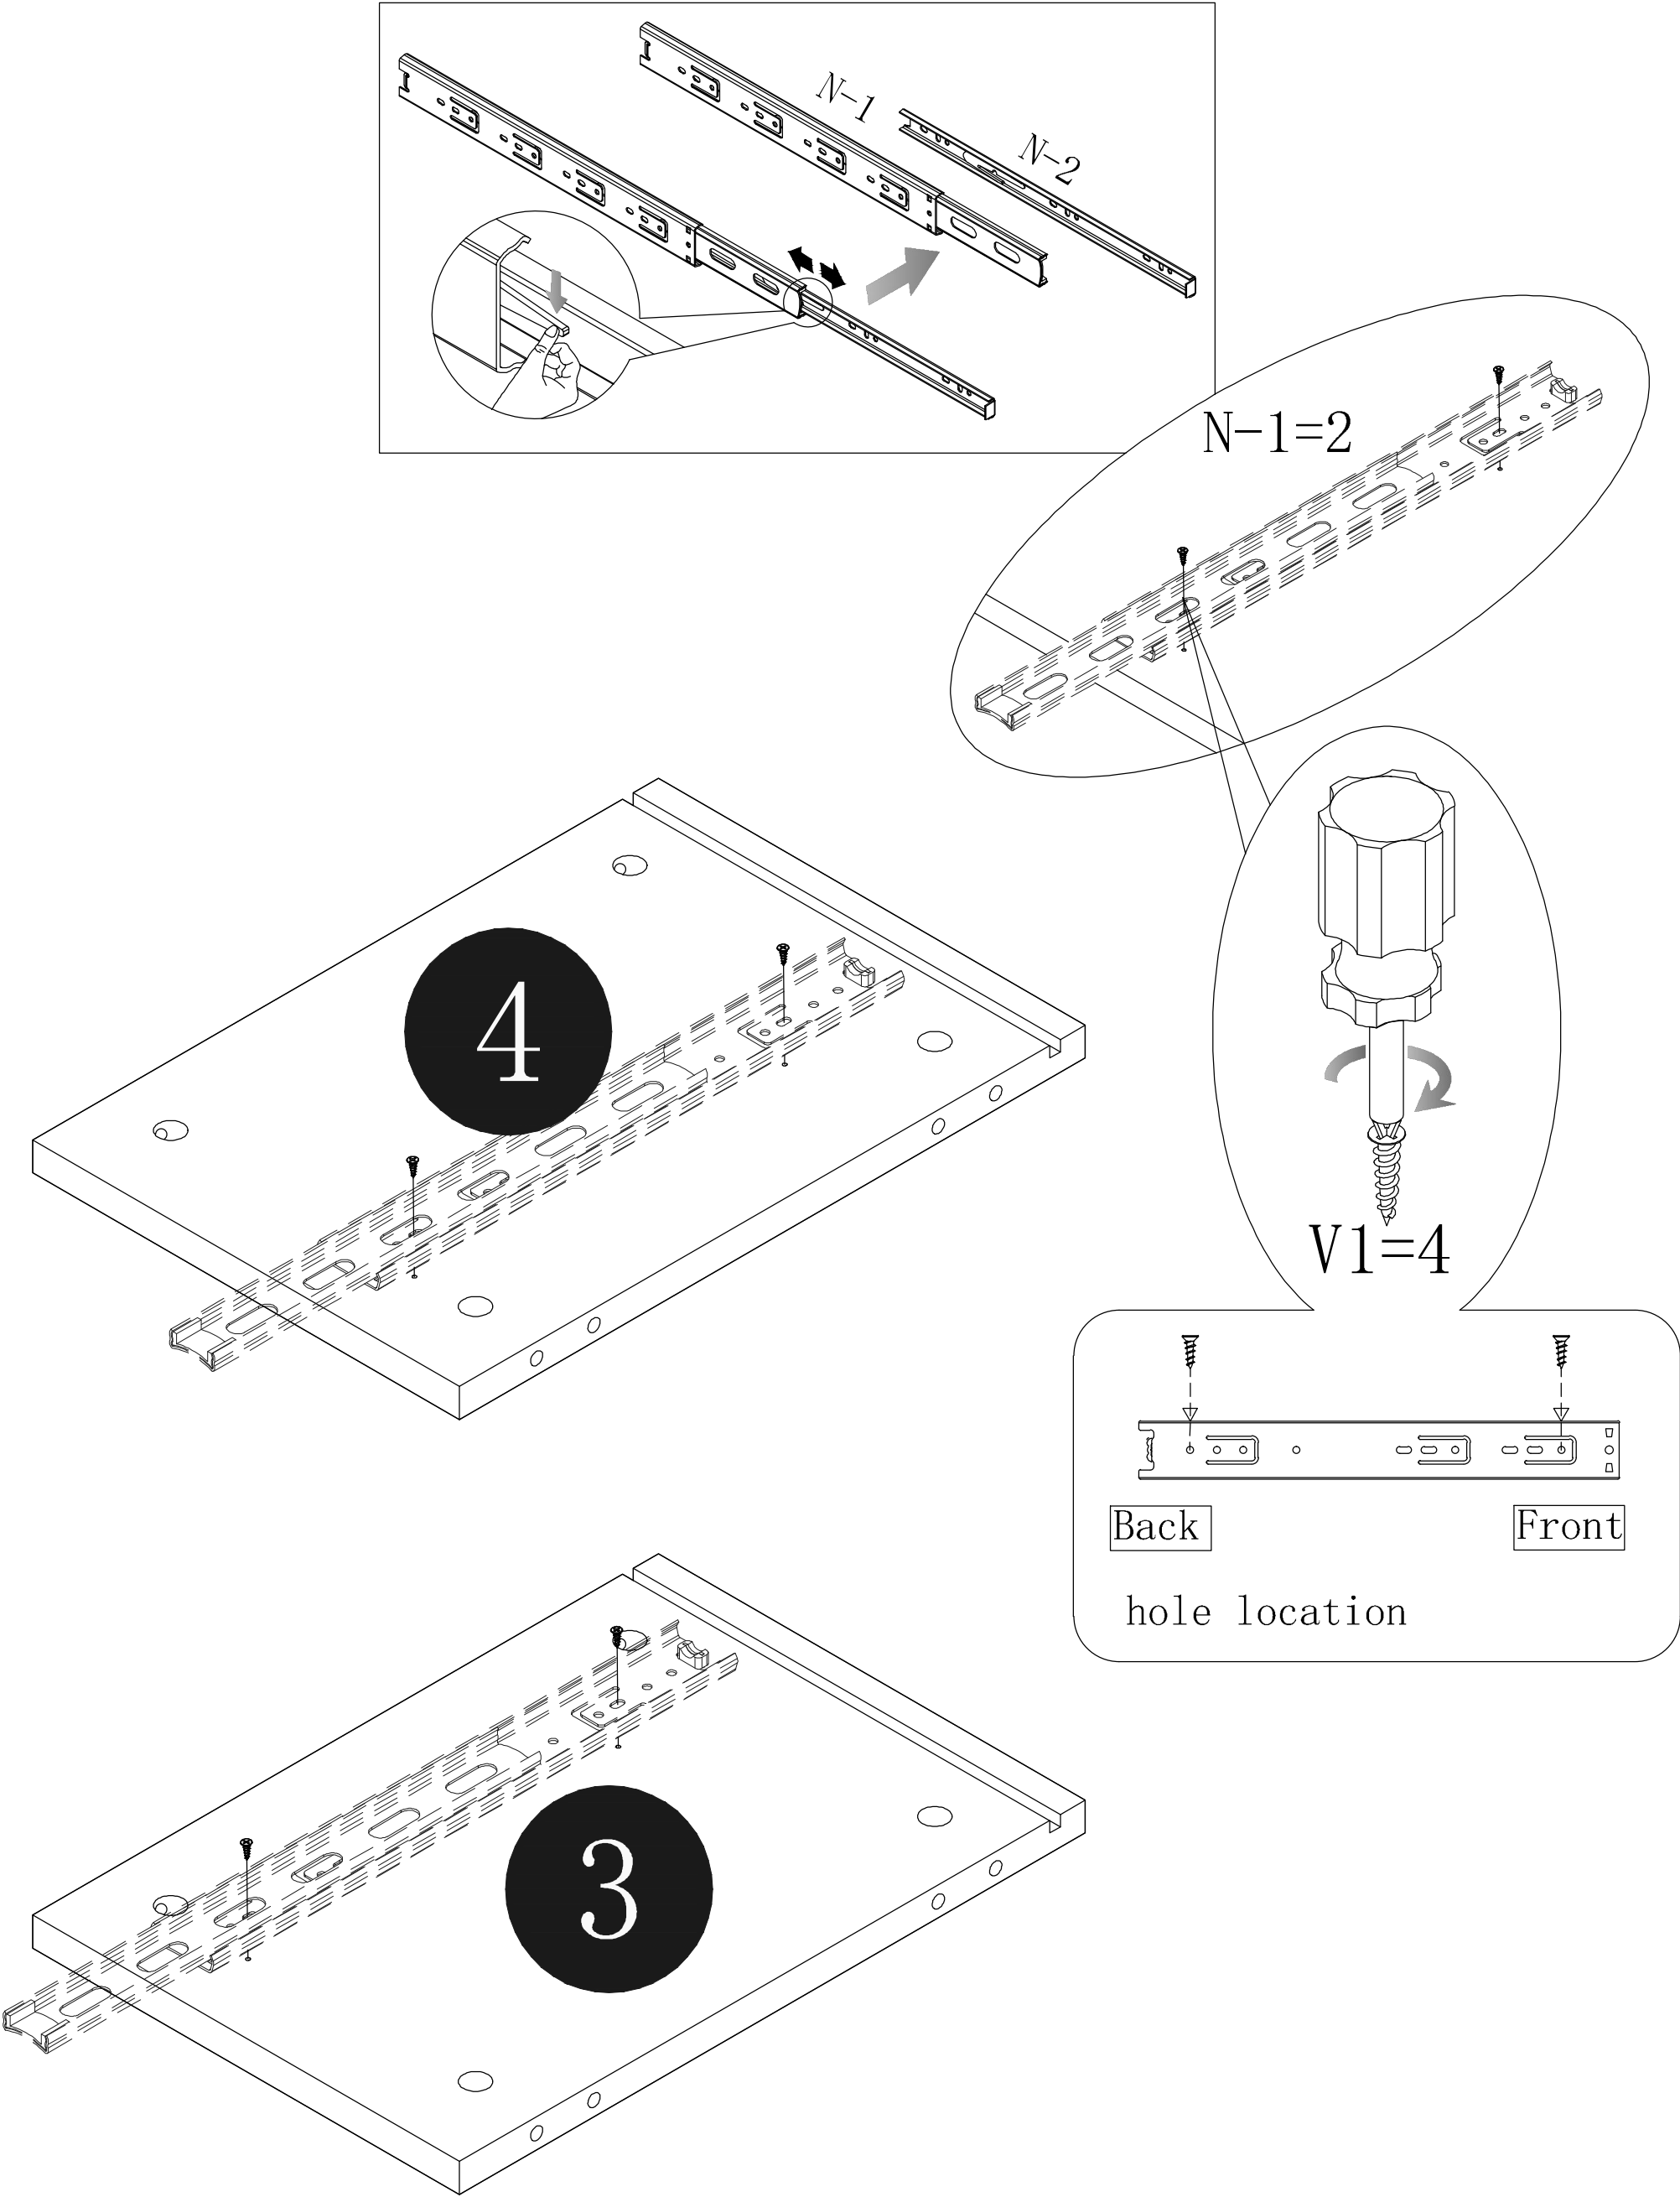


STEP 2

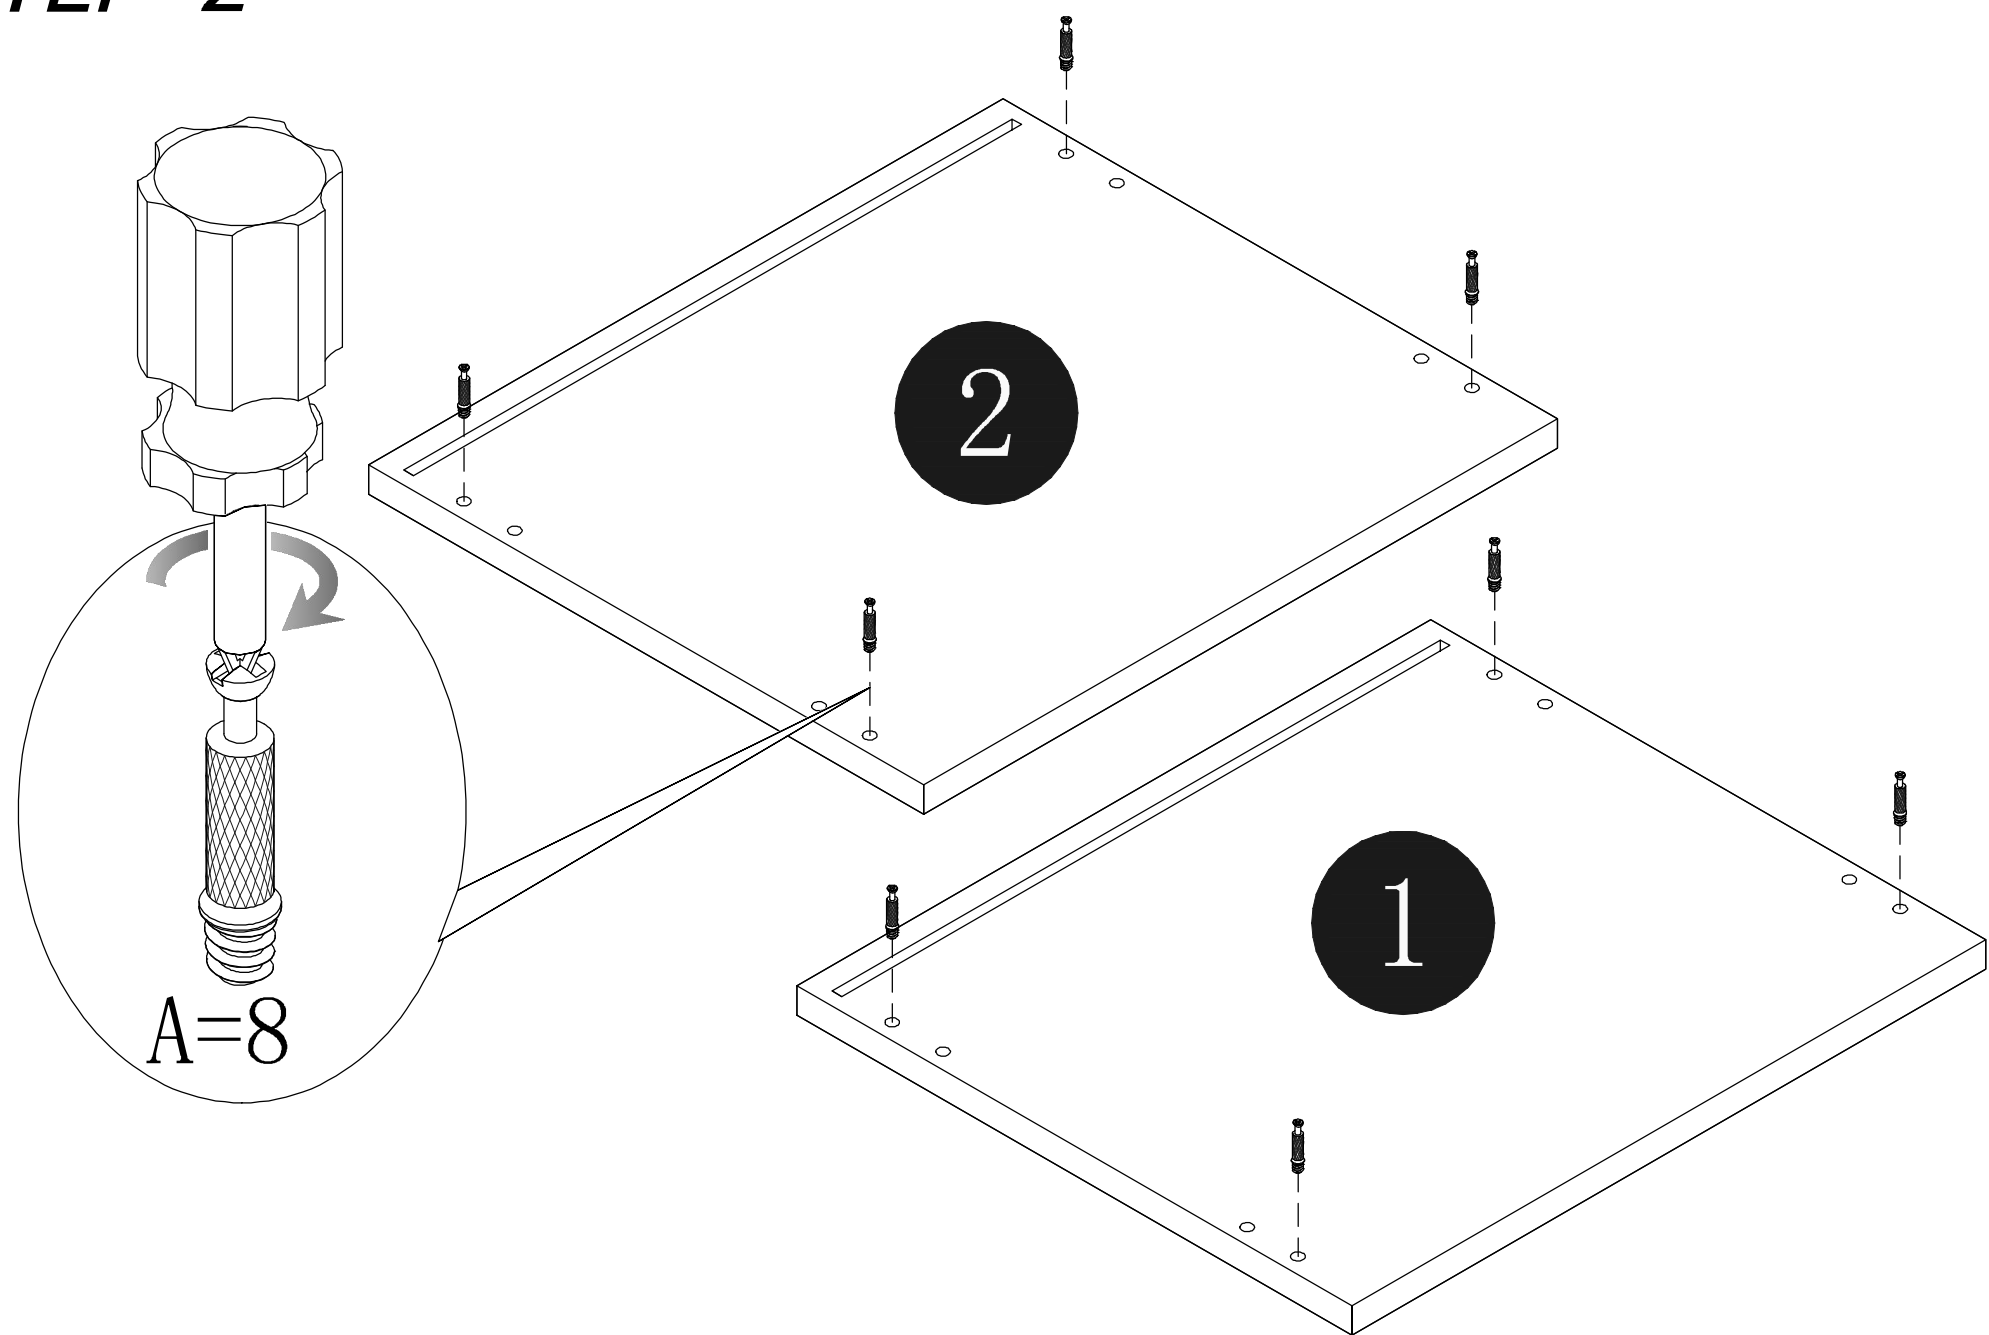



STEP 3

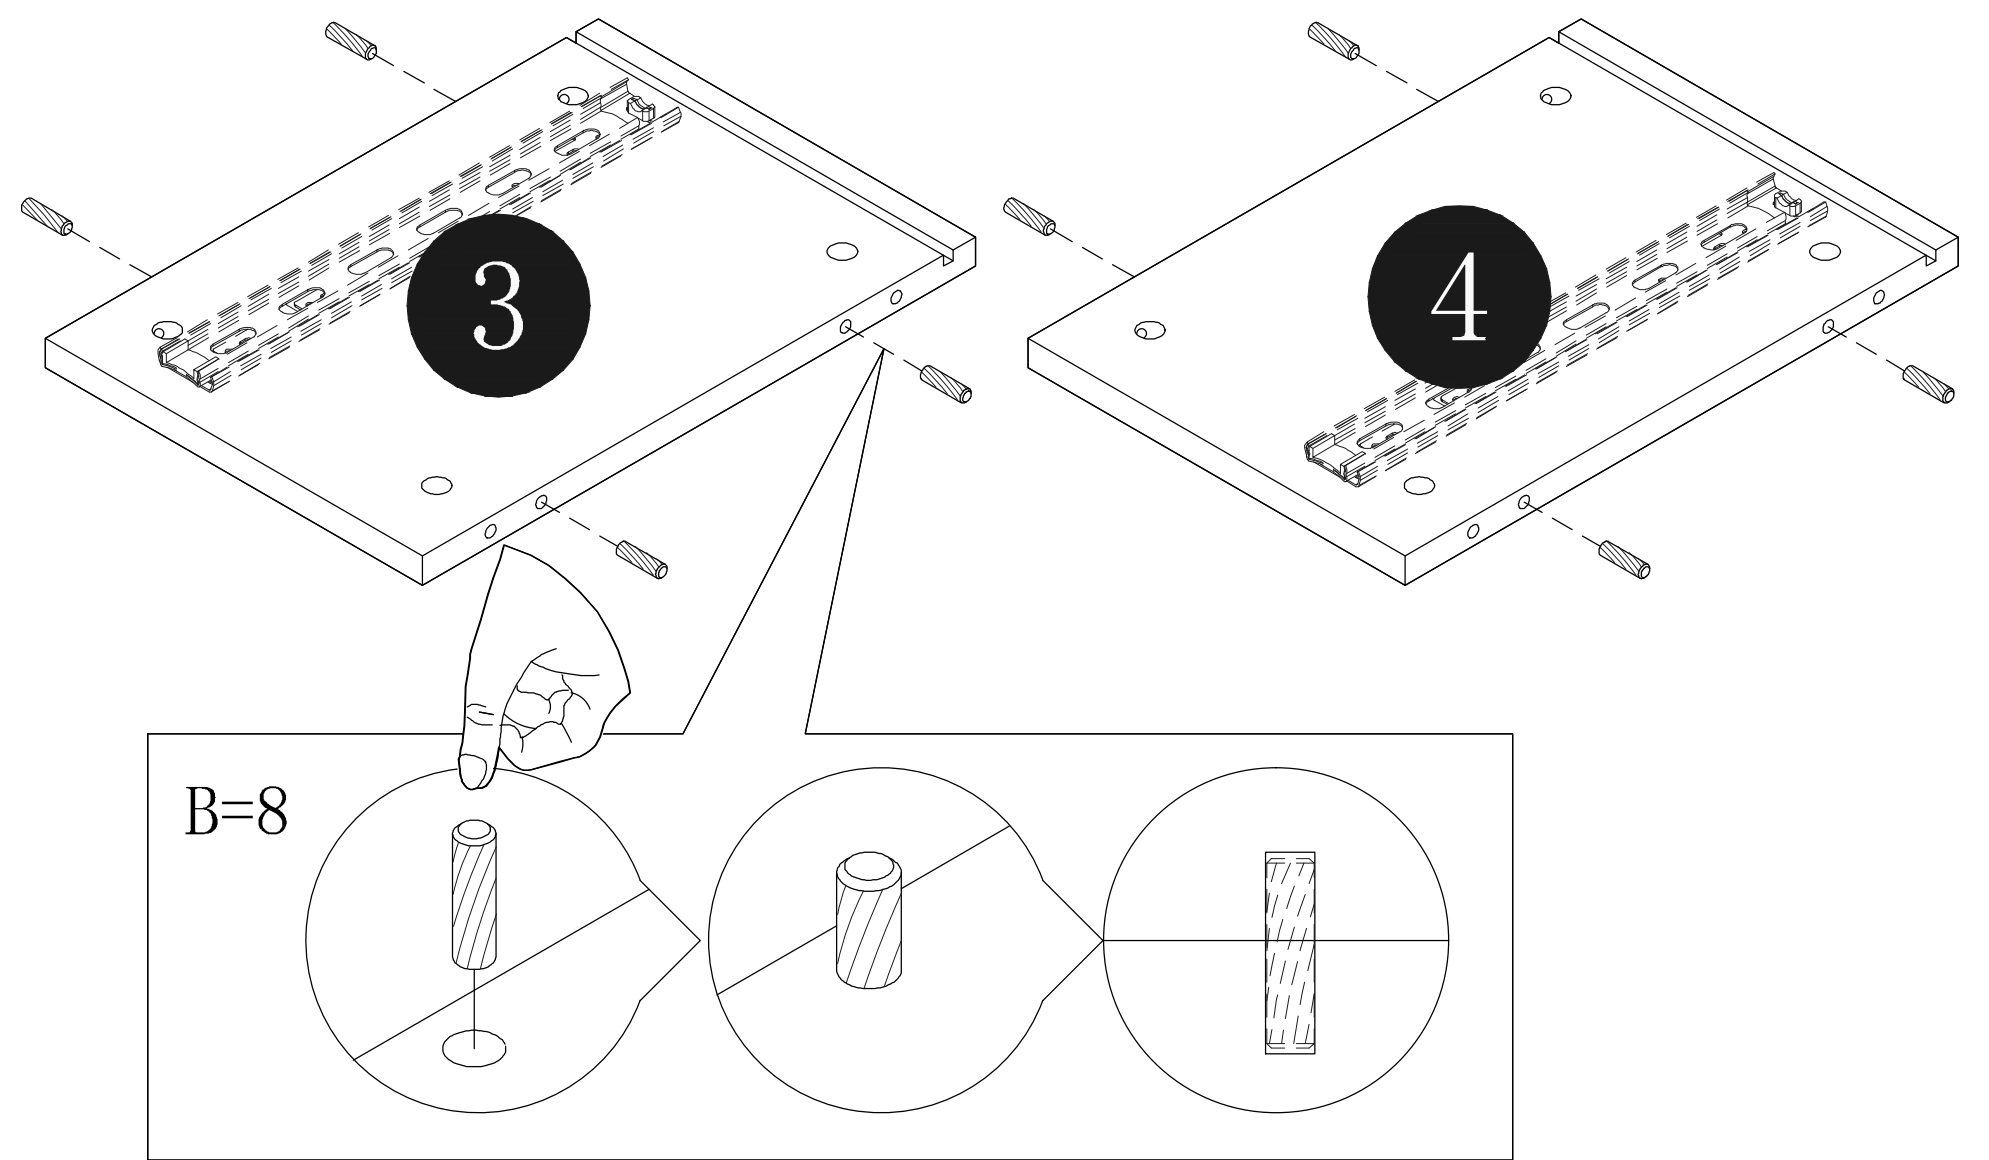


STEP 4

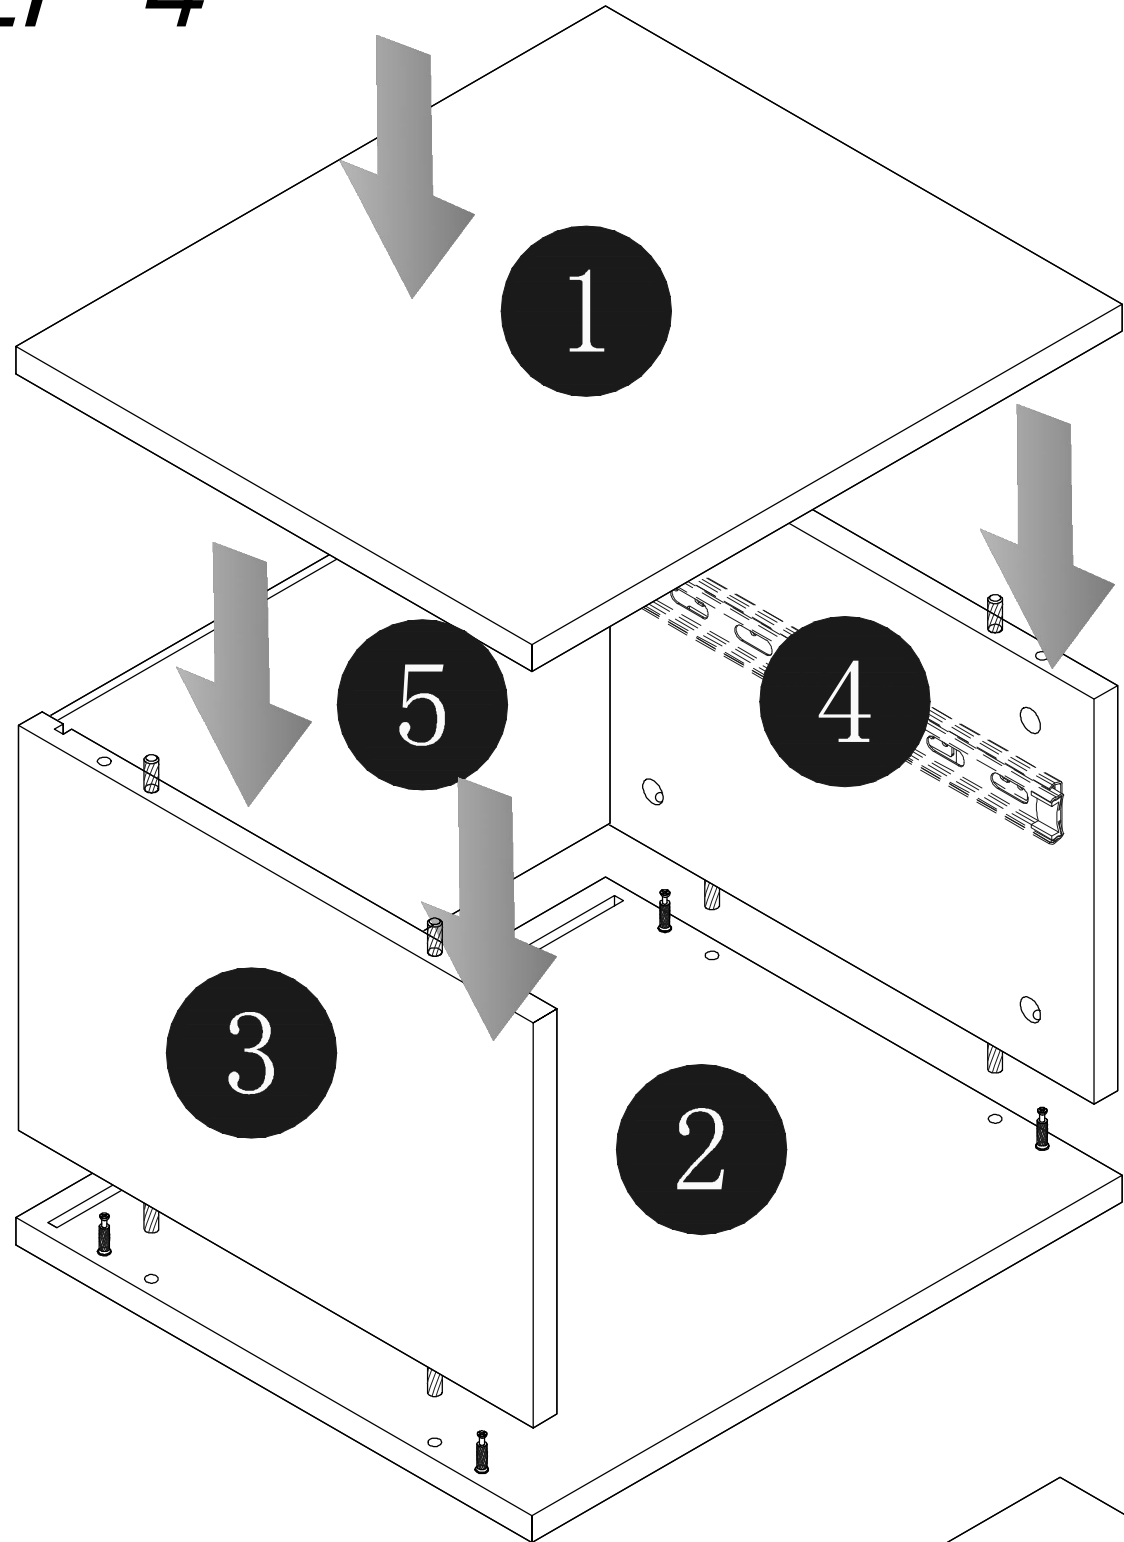


STEP 5

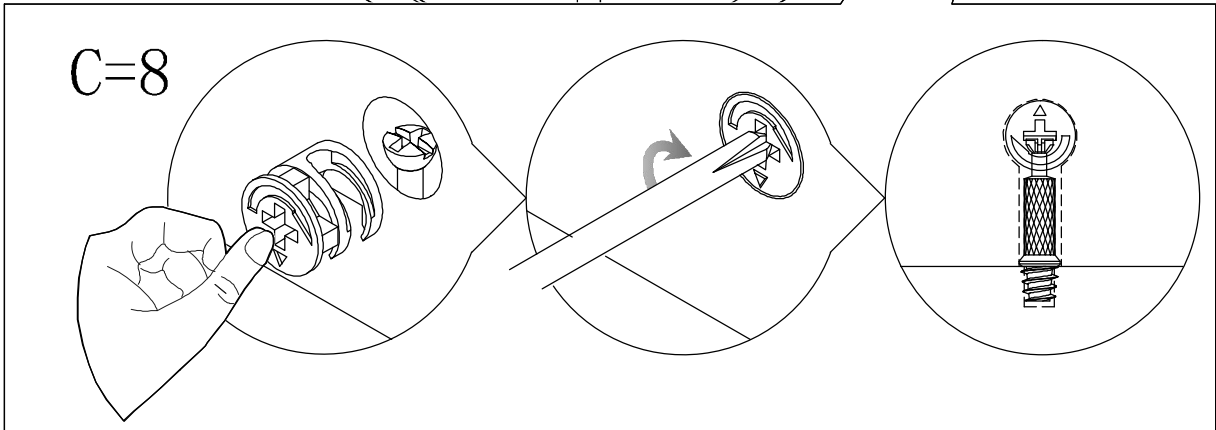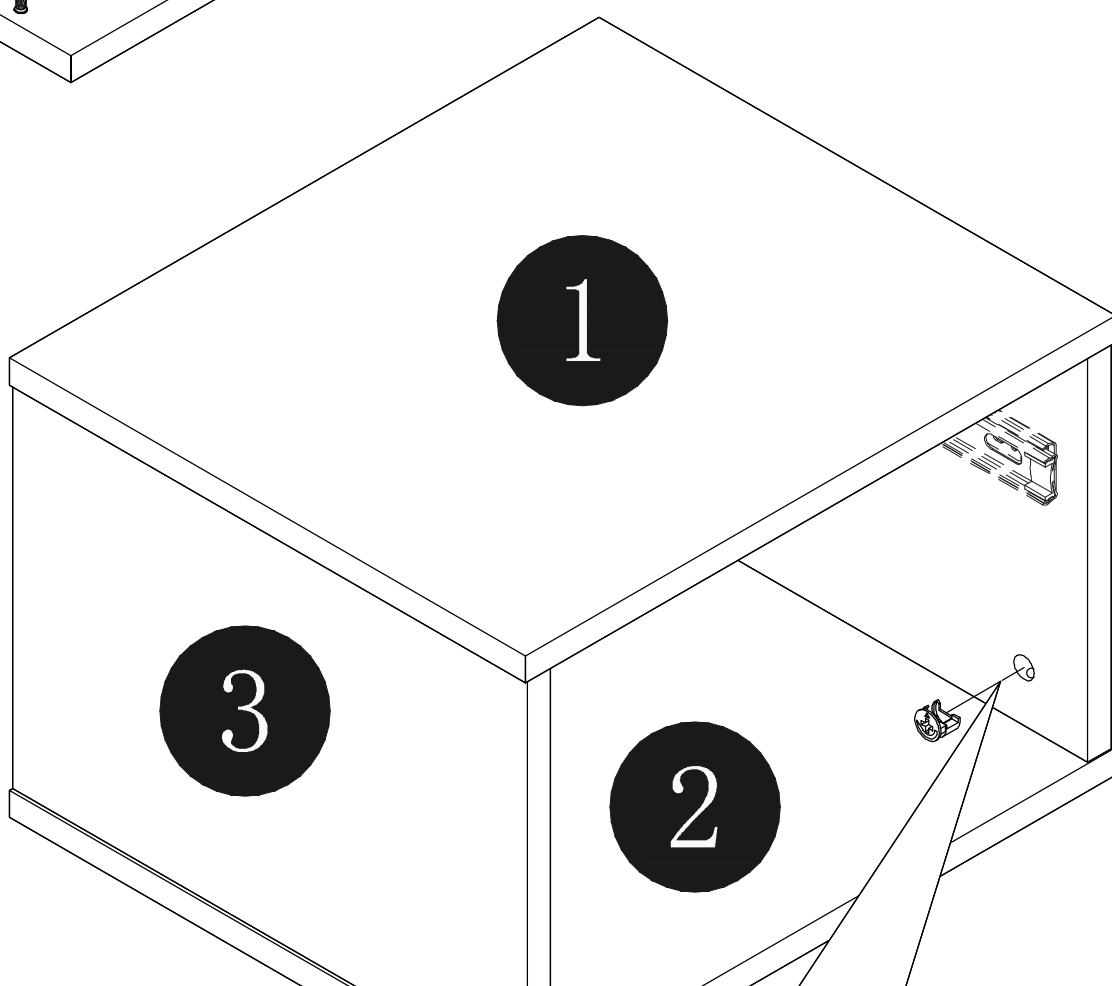


STEP 6

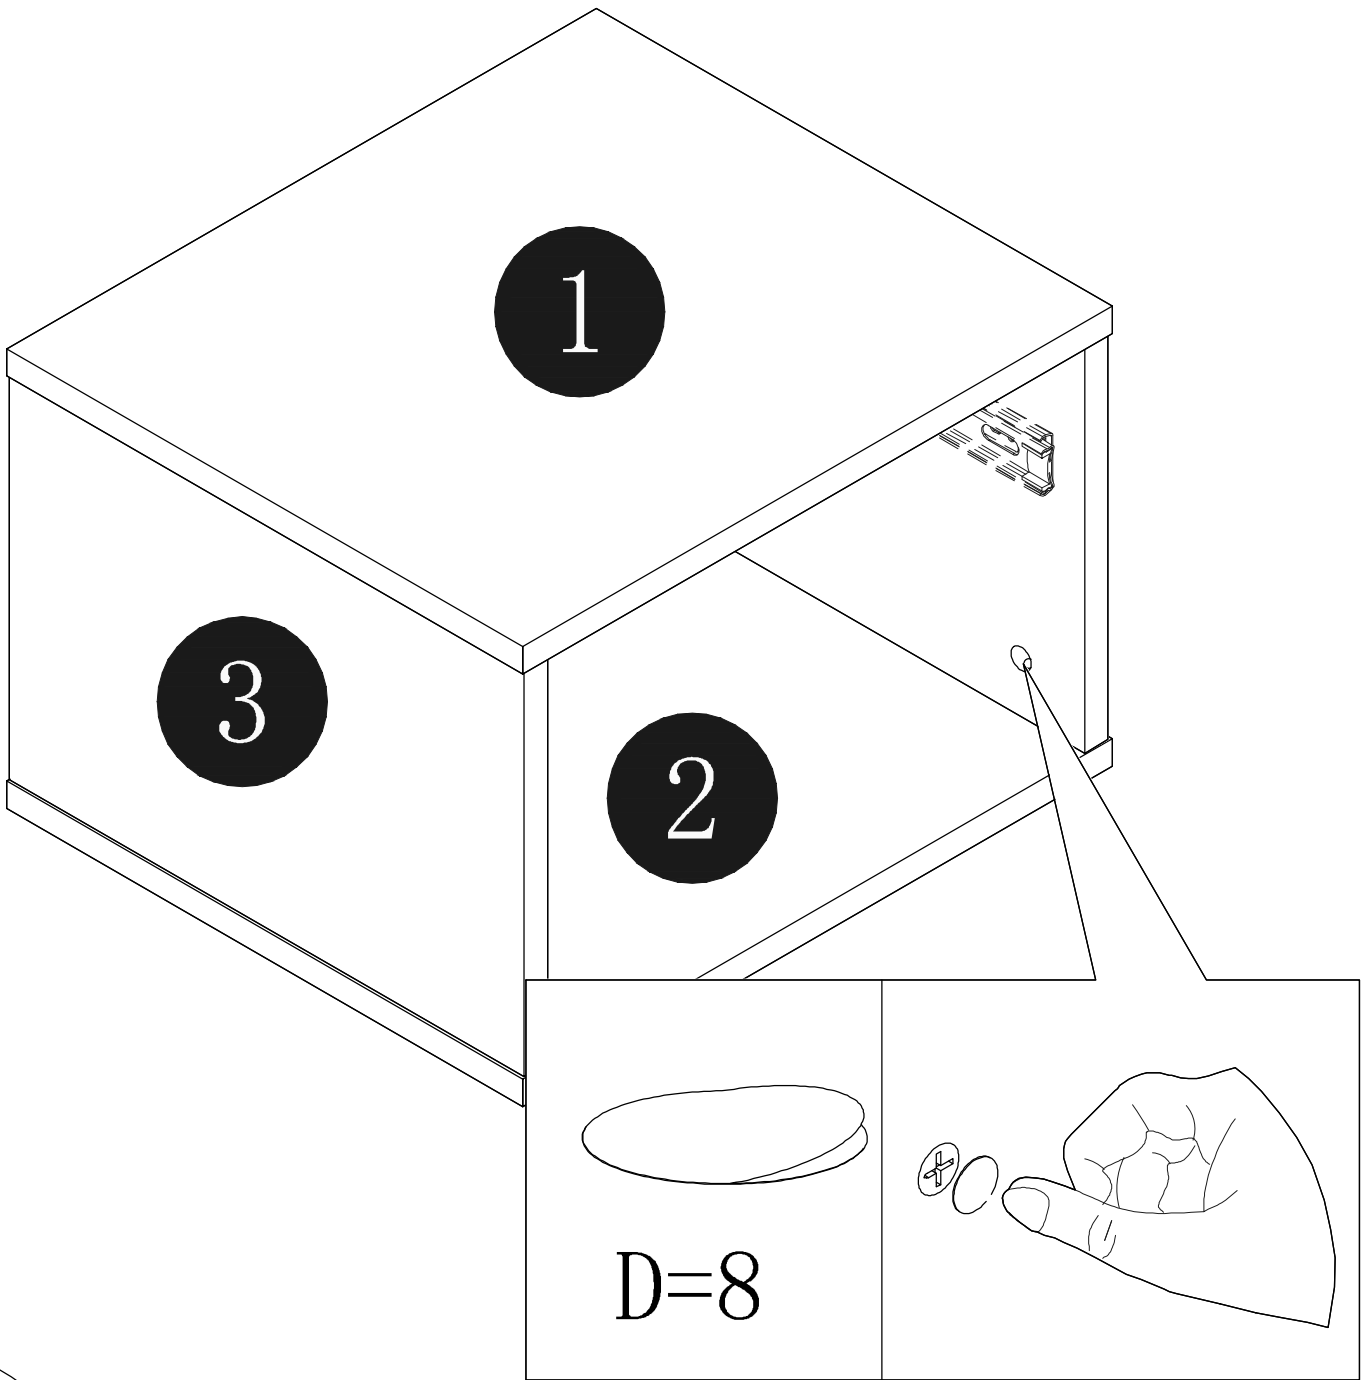

STEP 7

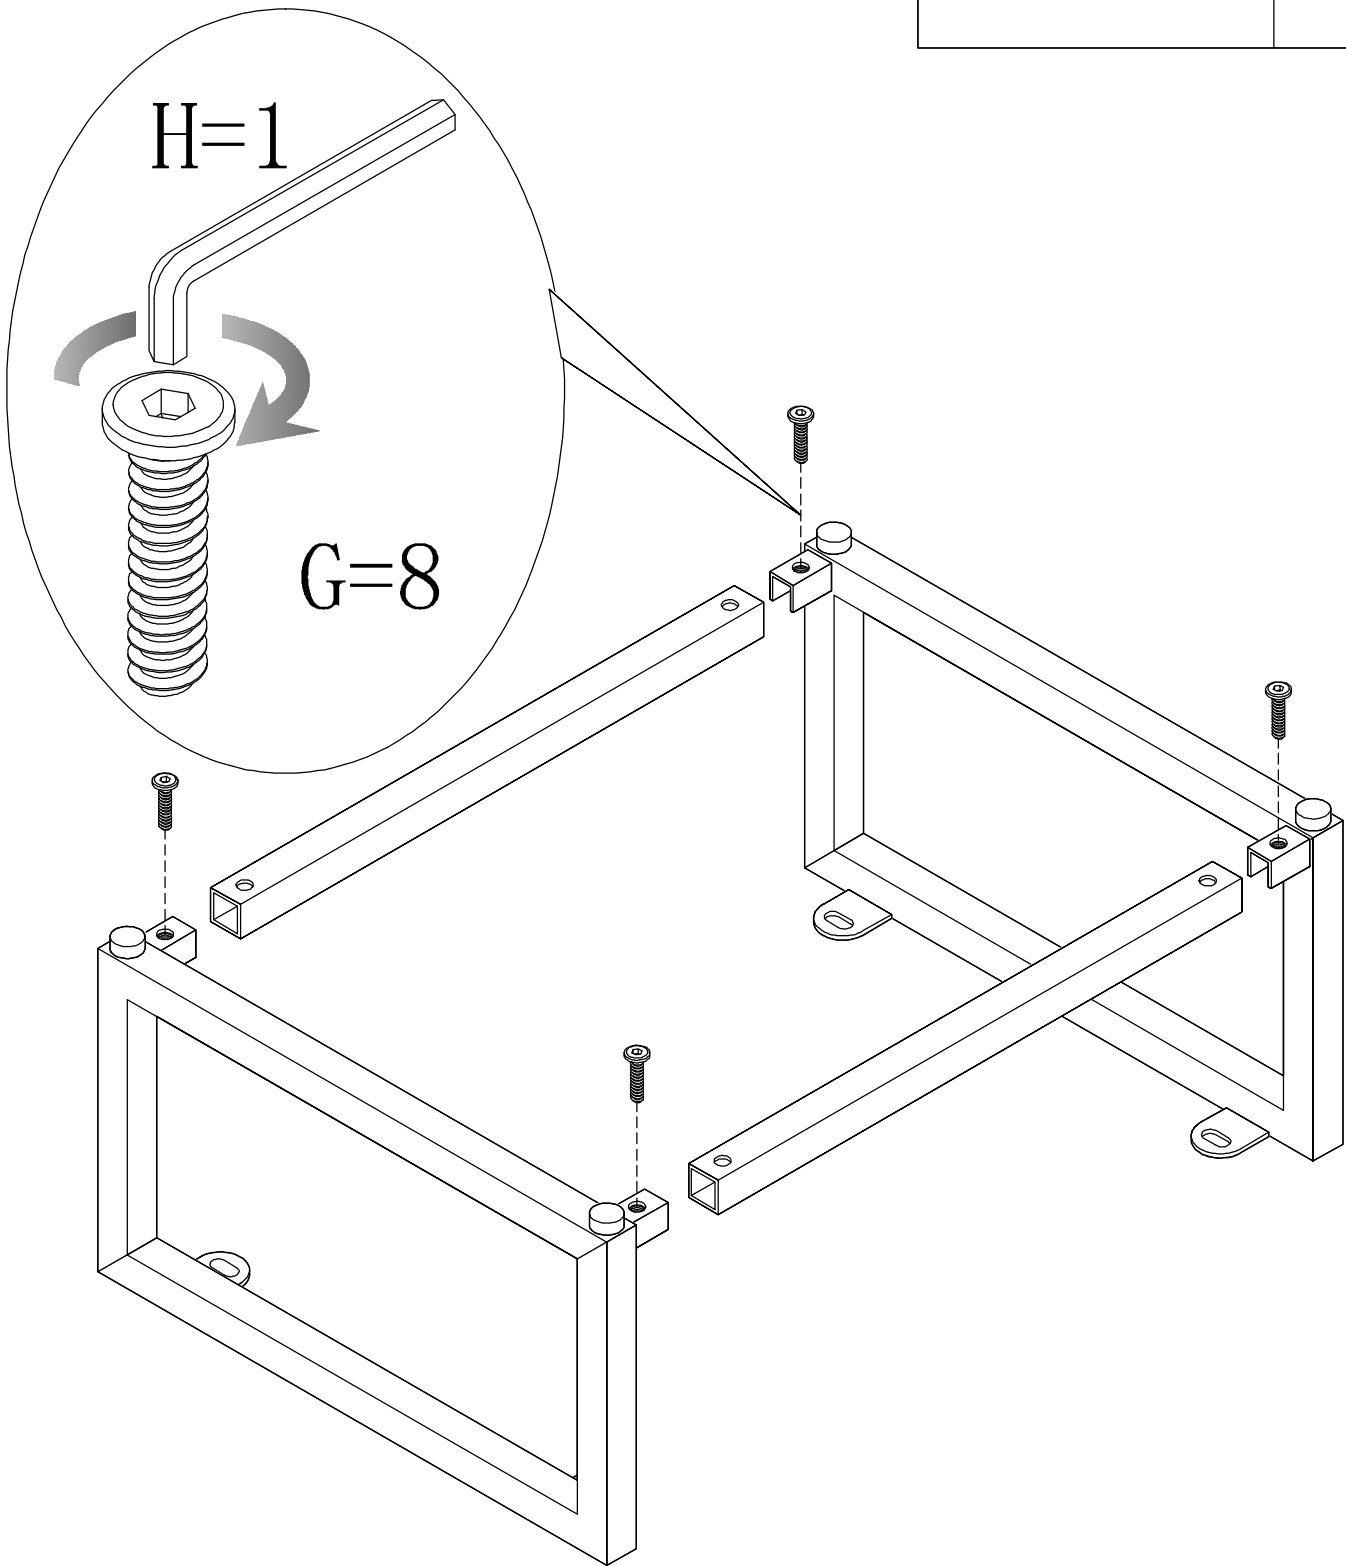


STEP 8

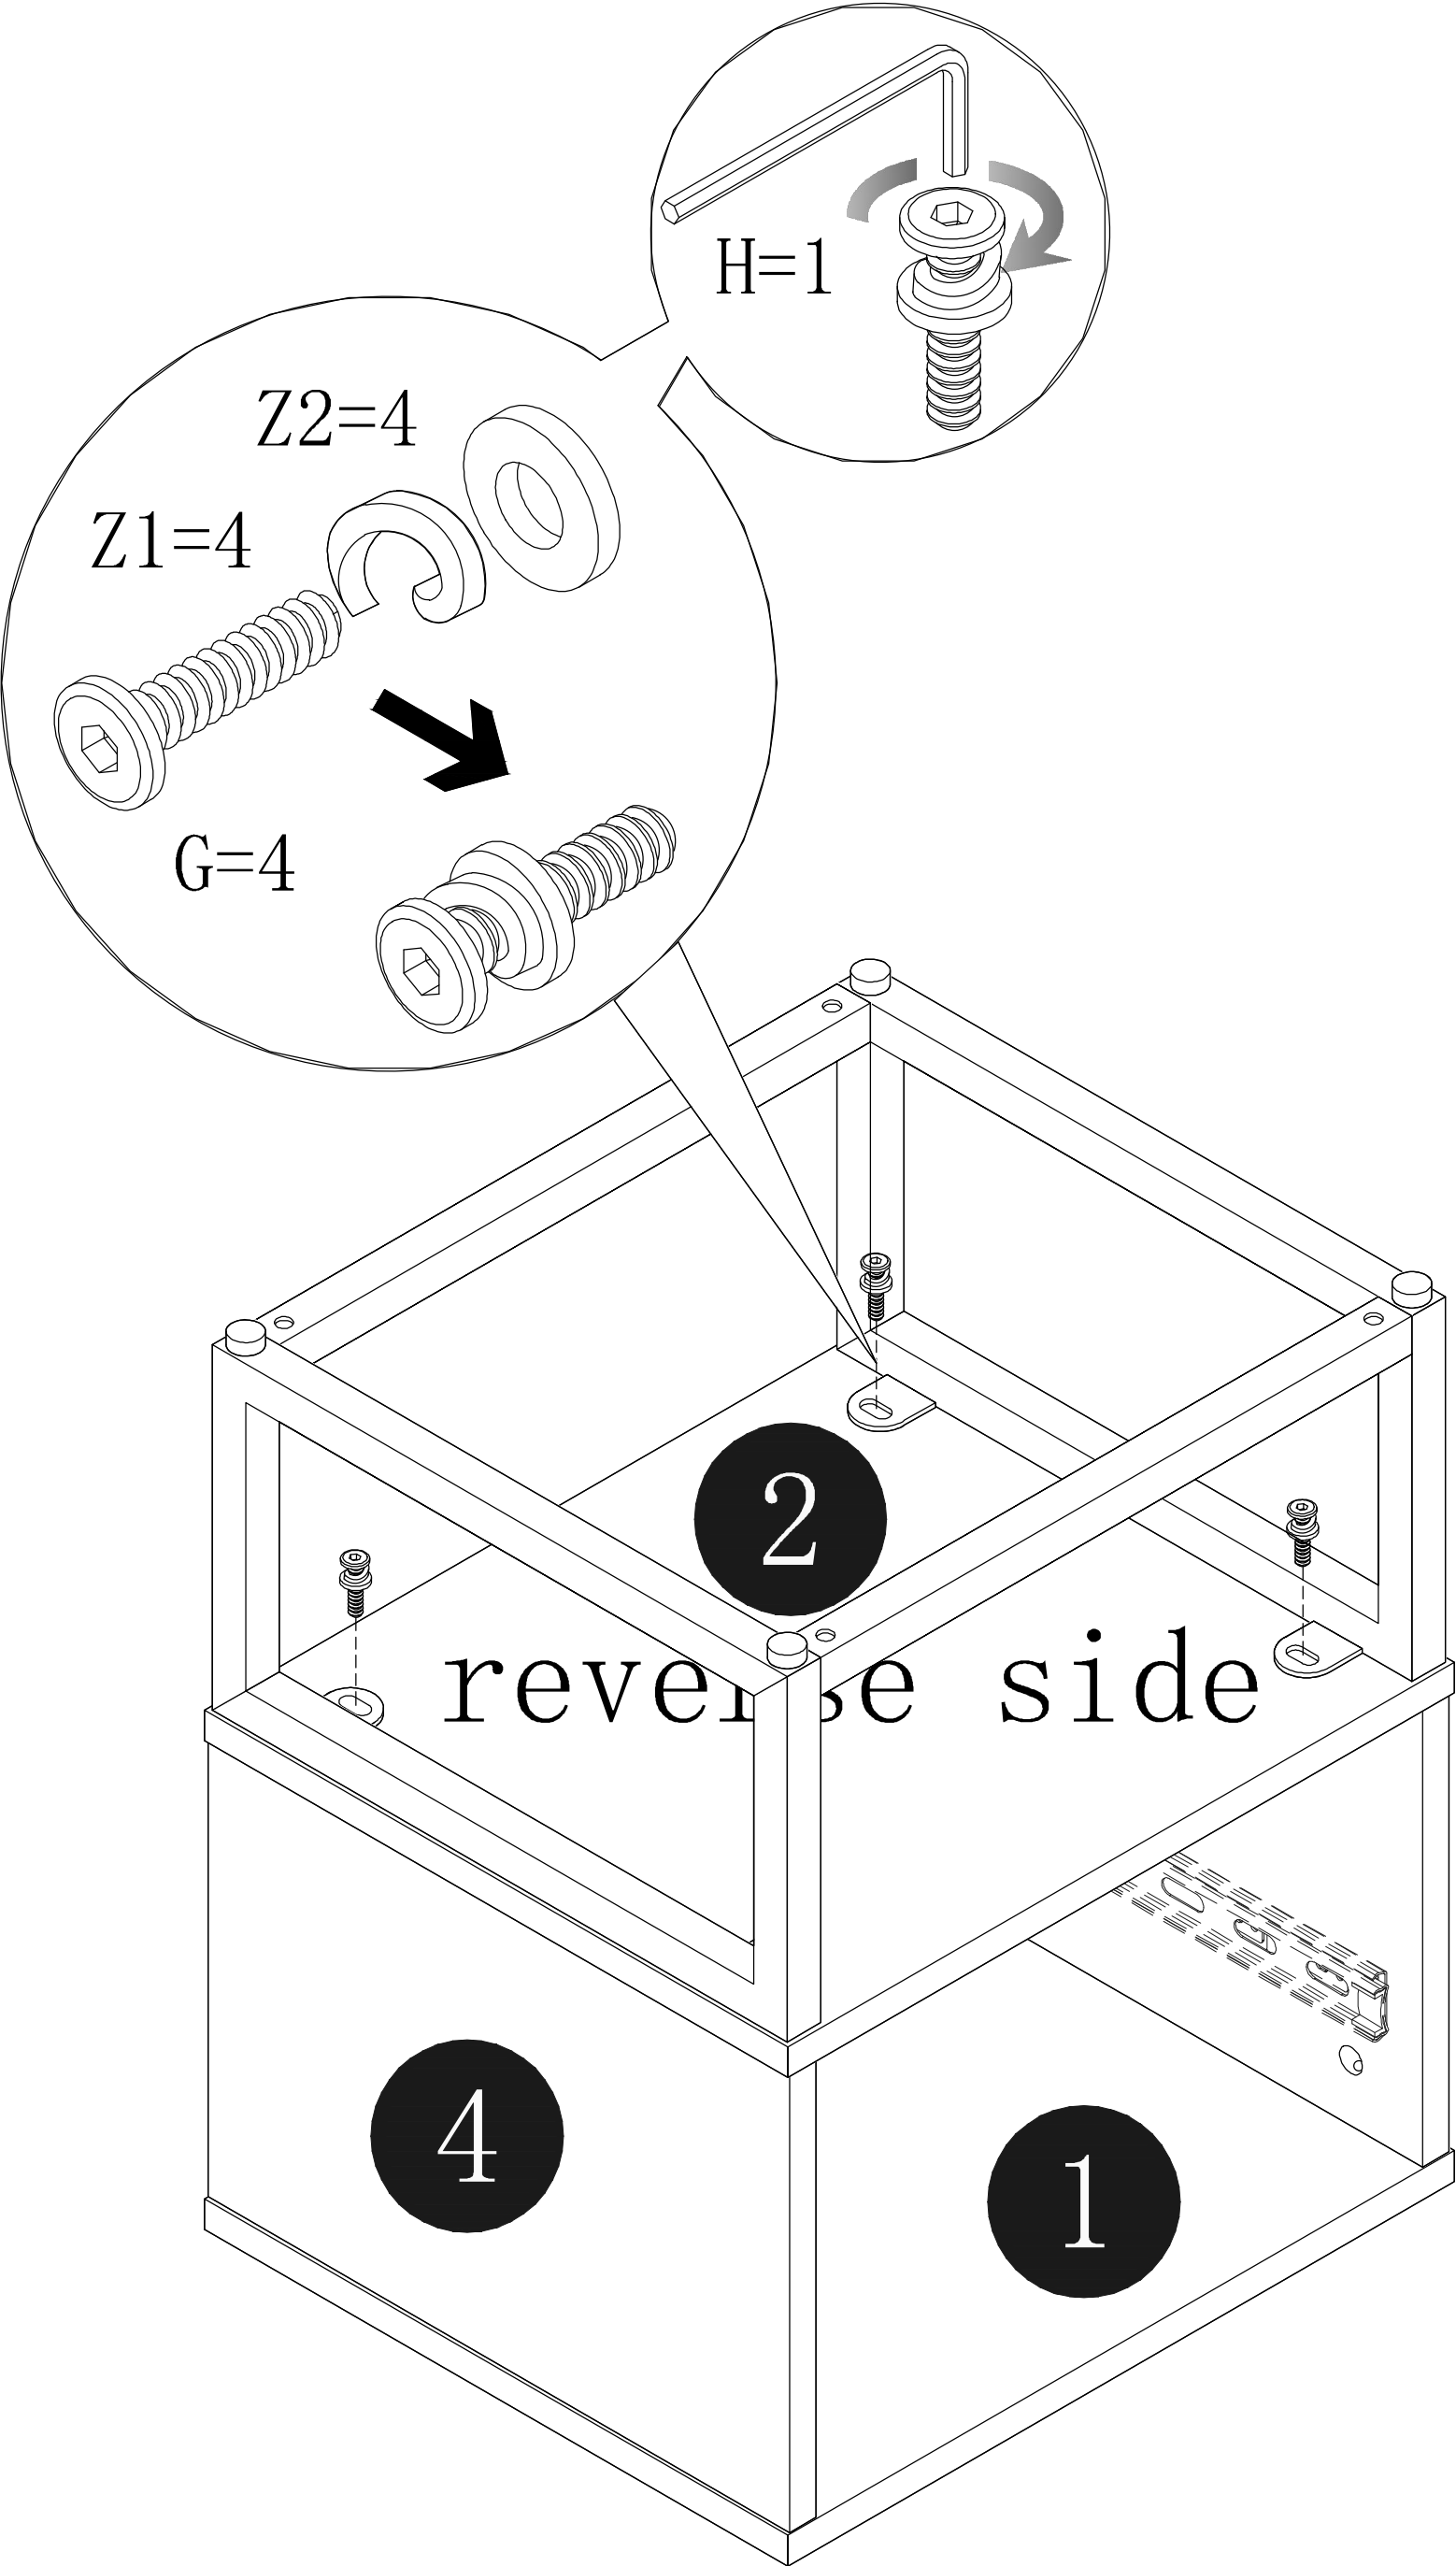


STEP 9


9-1

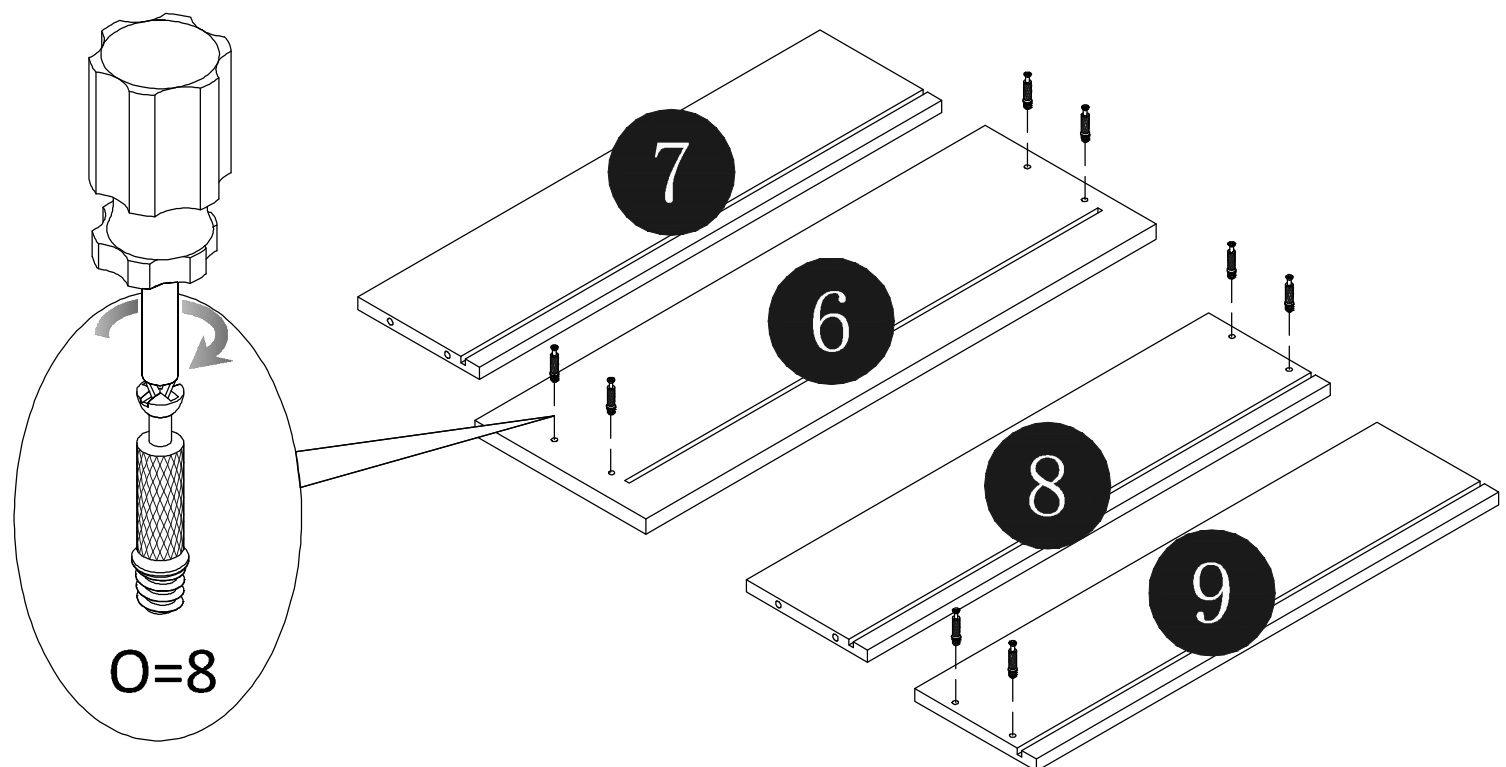


9-2

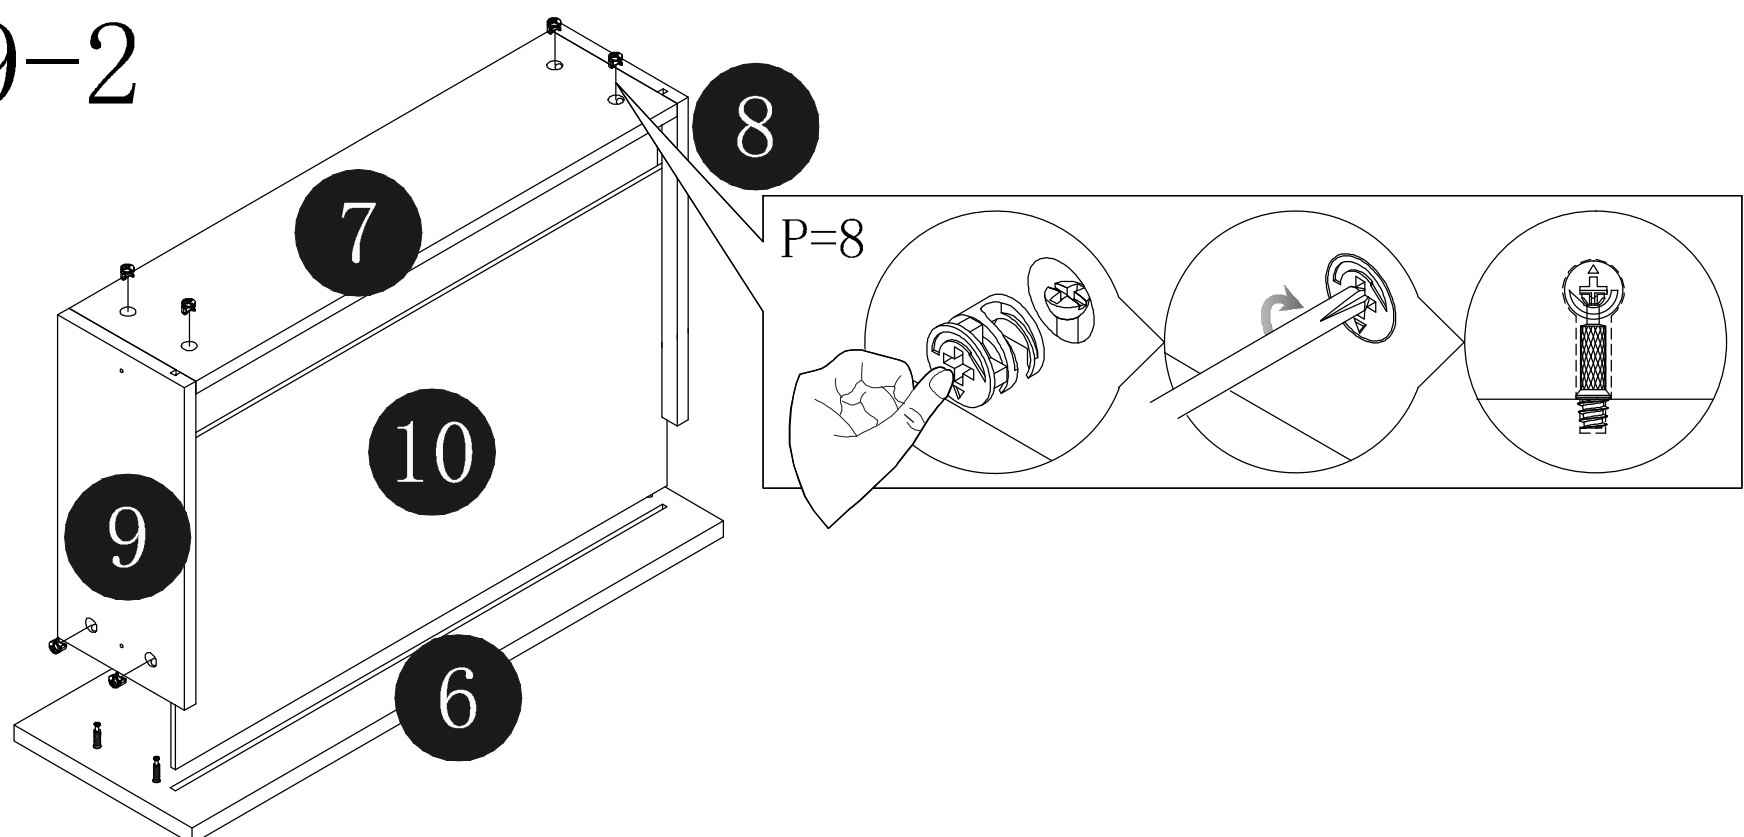


9-3

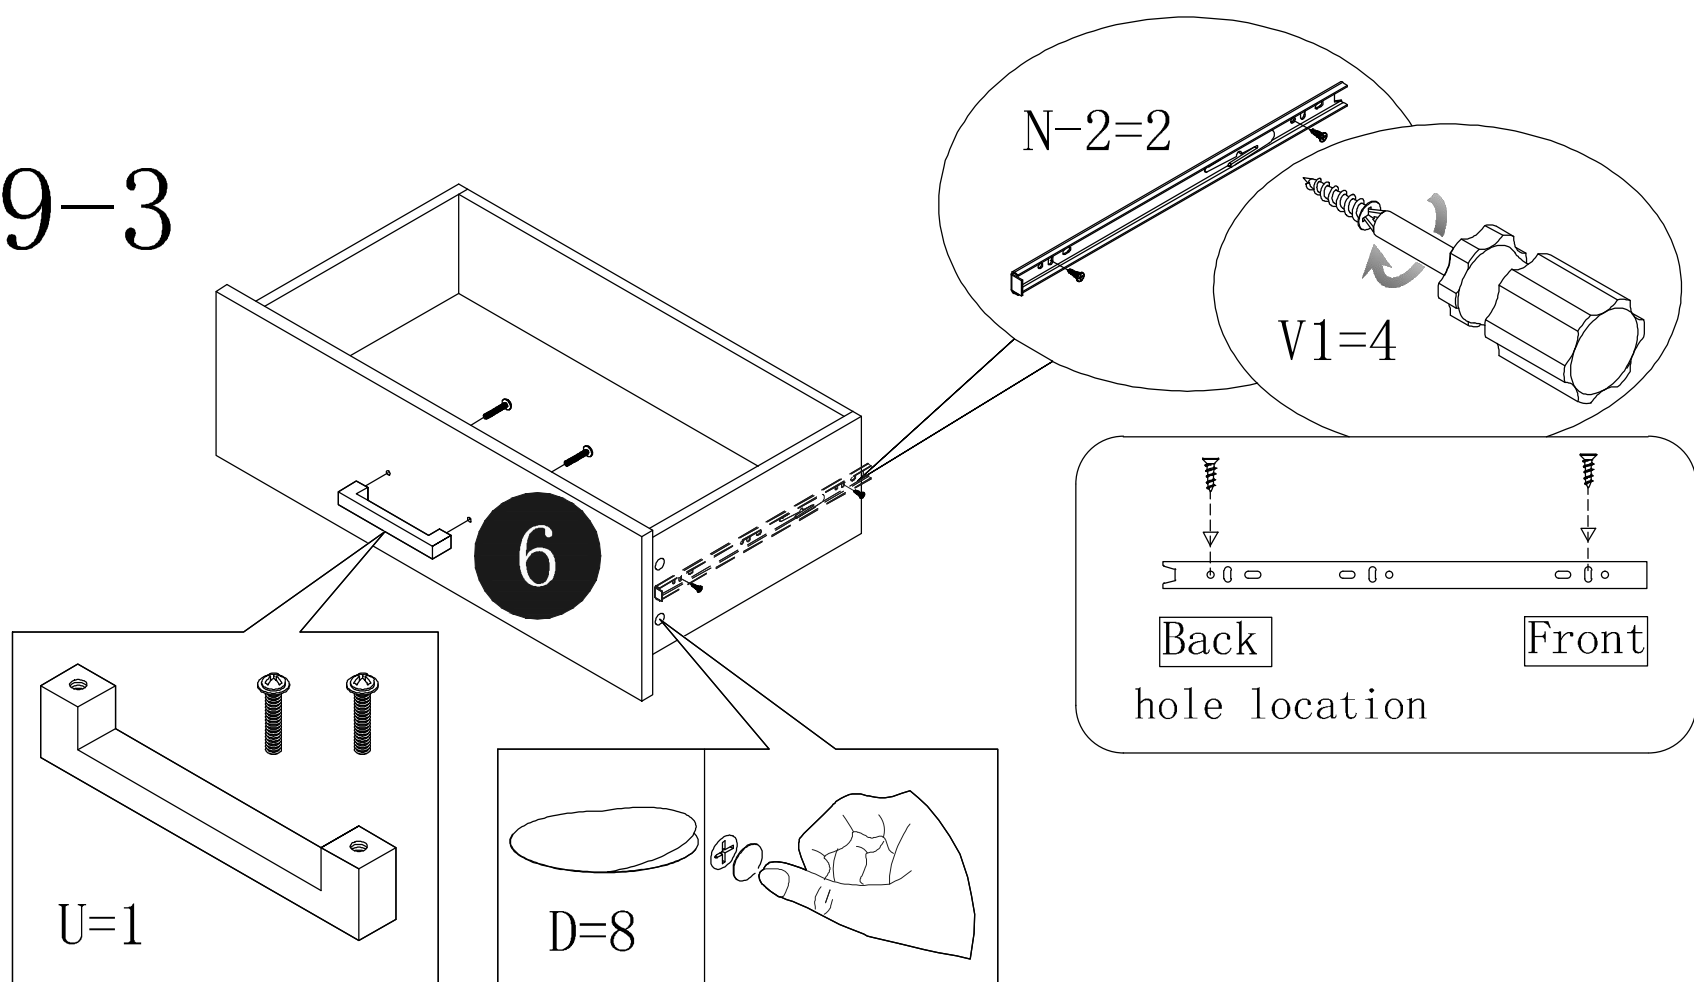



STEP 10

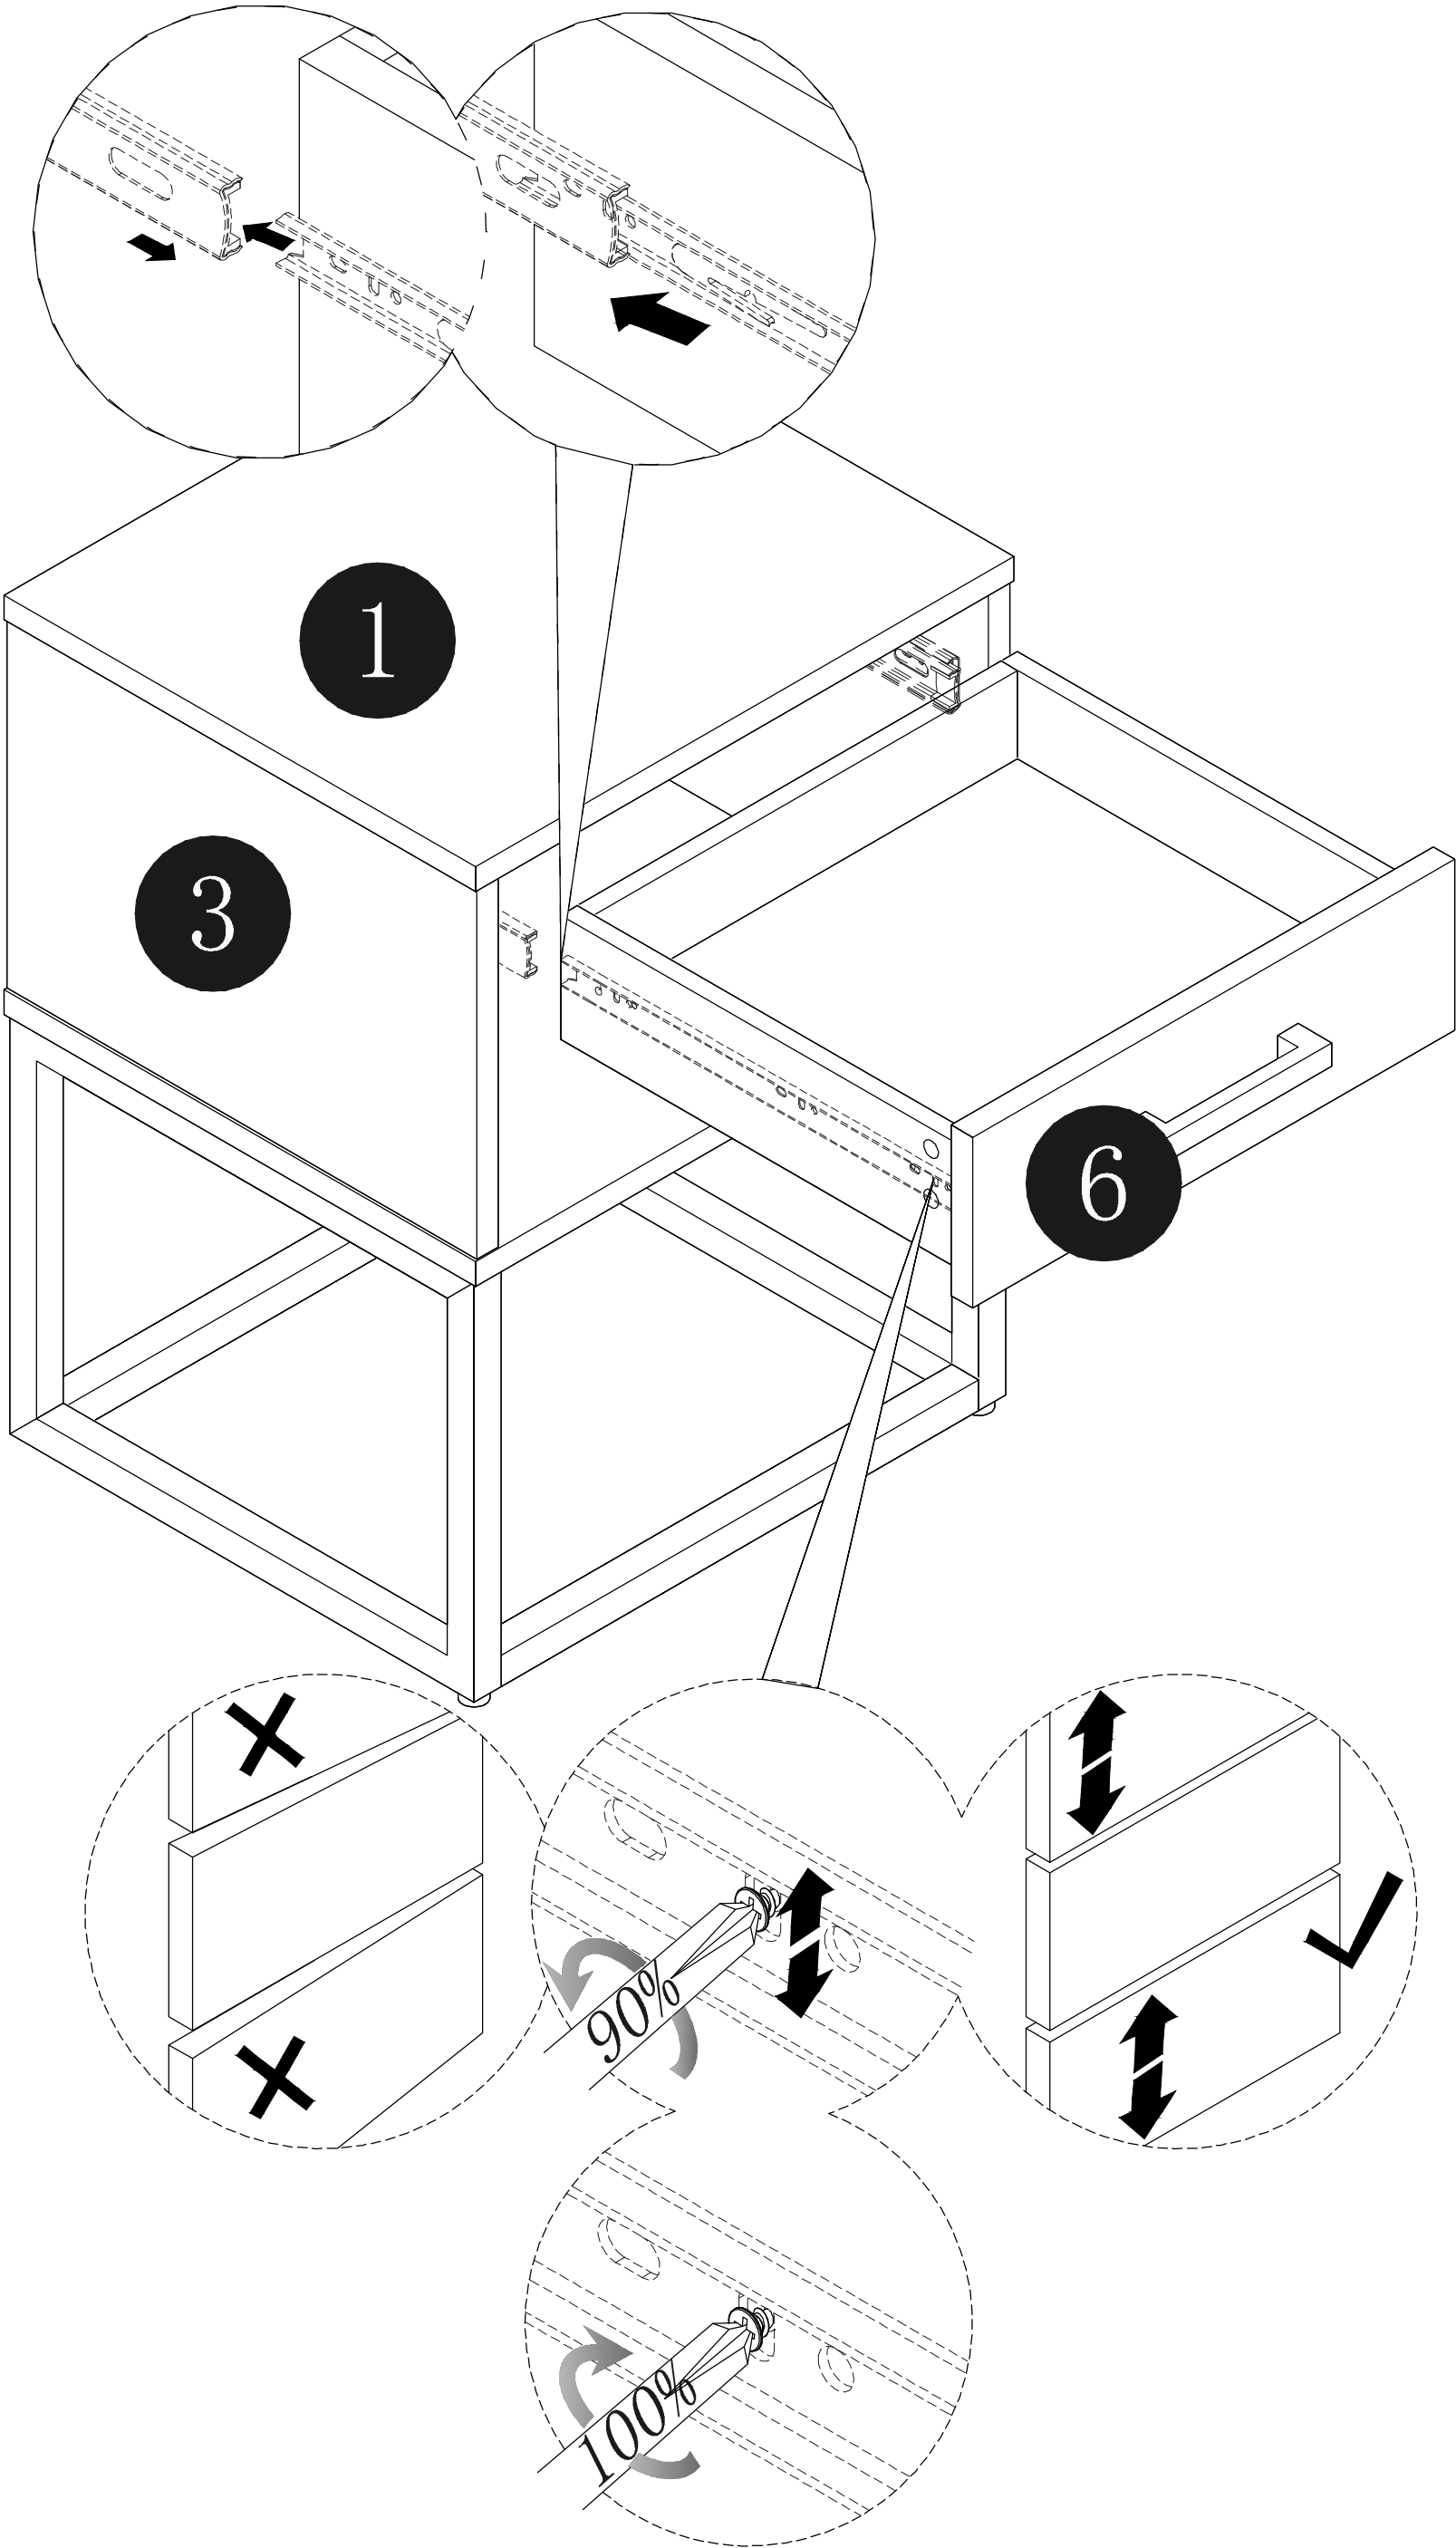

STEP 11

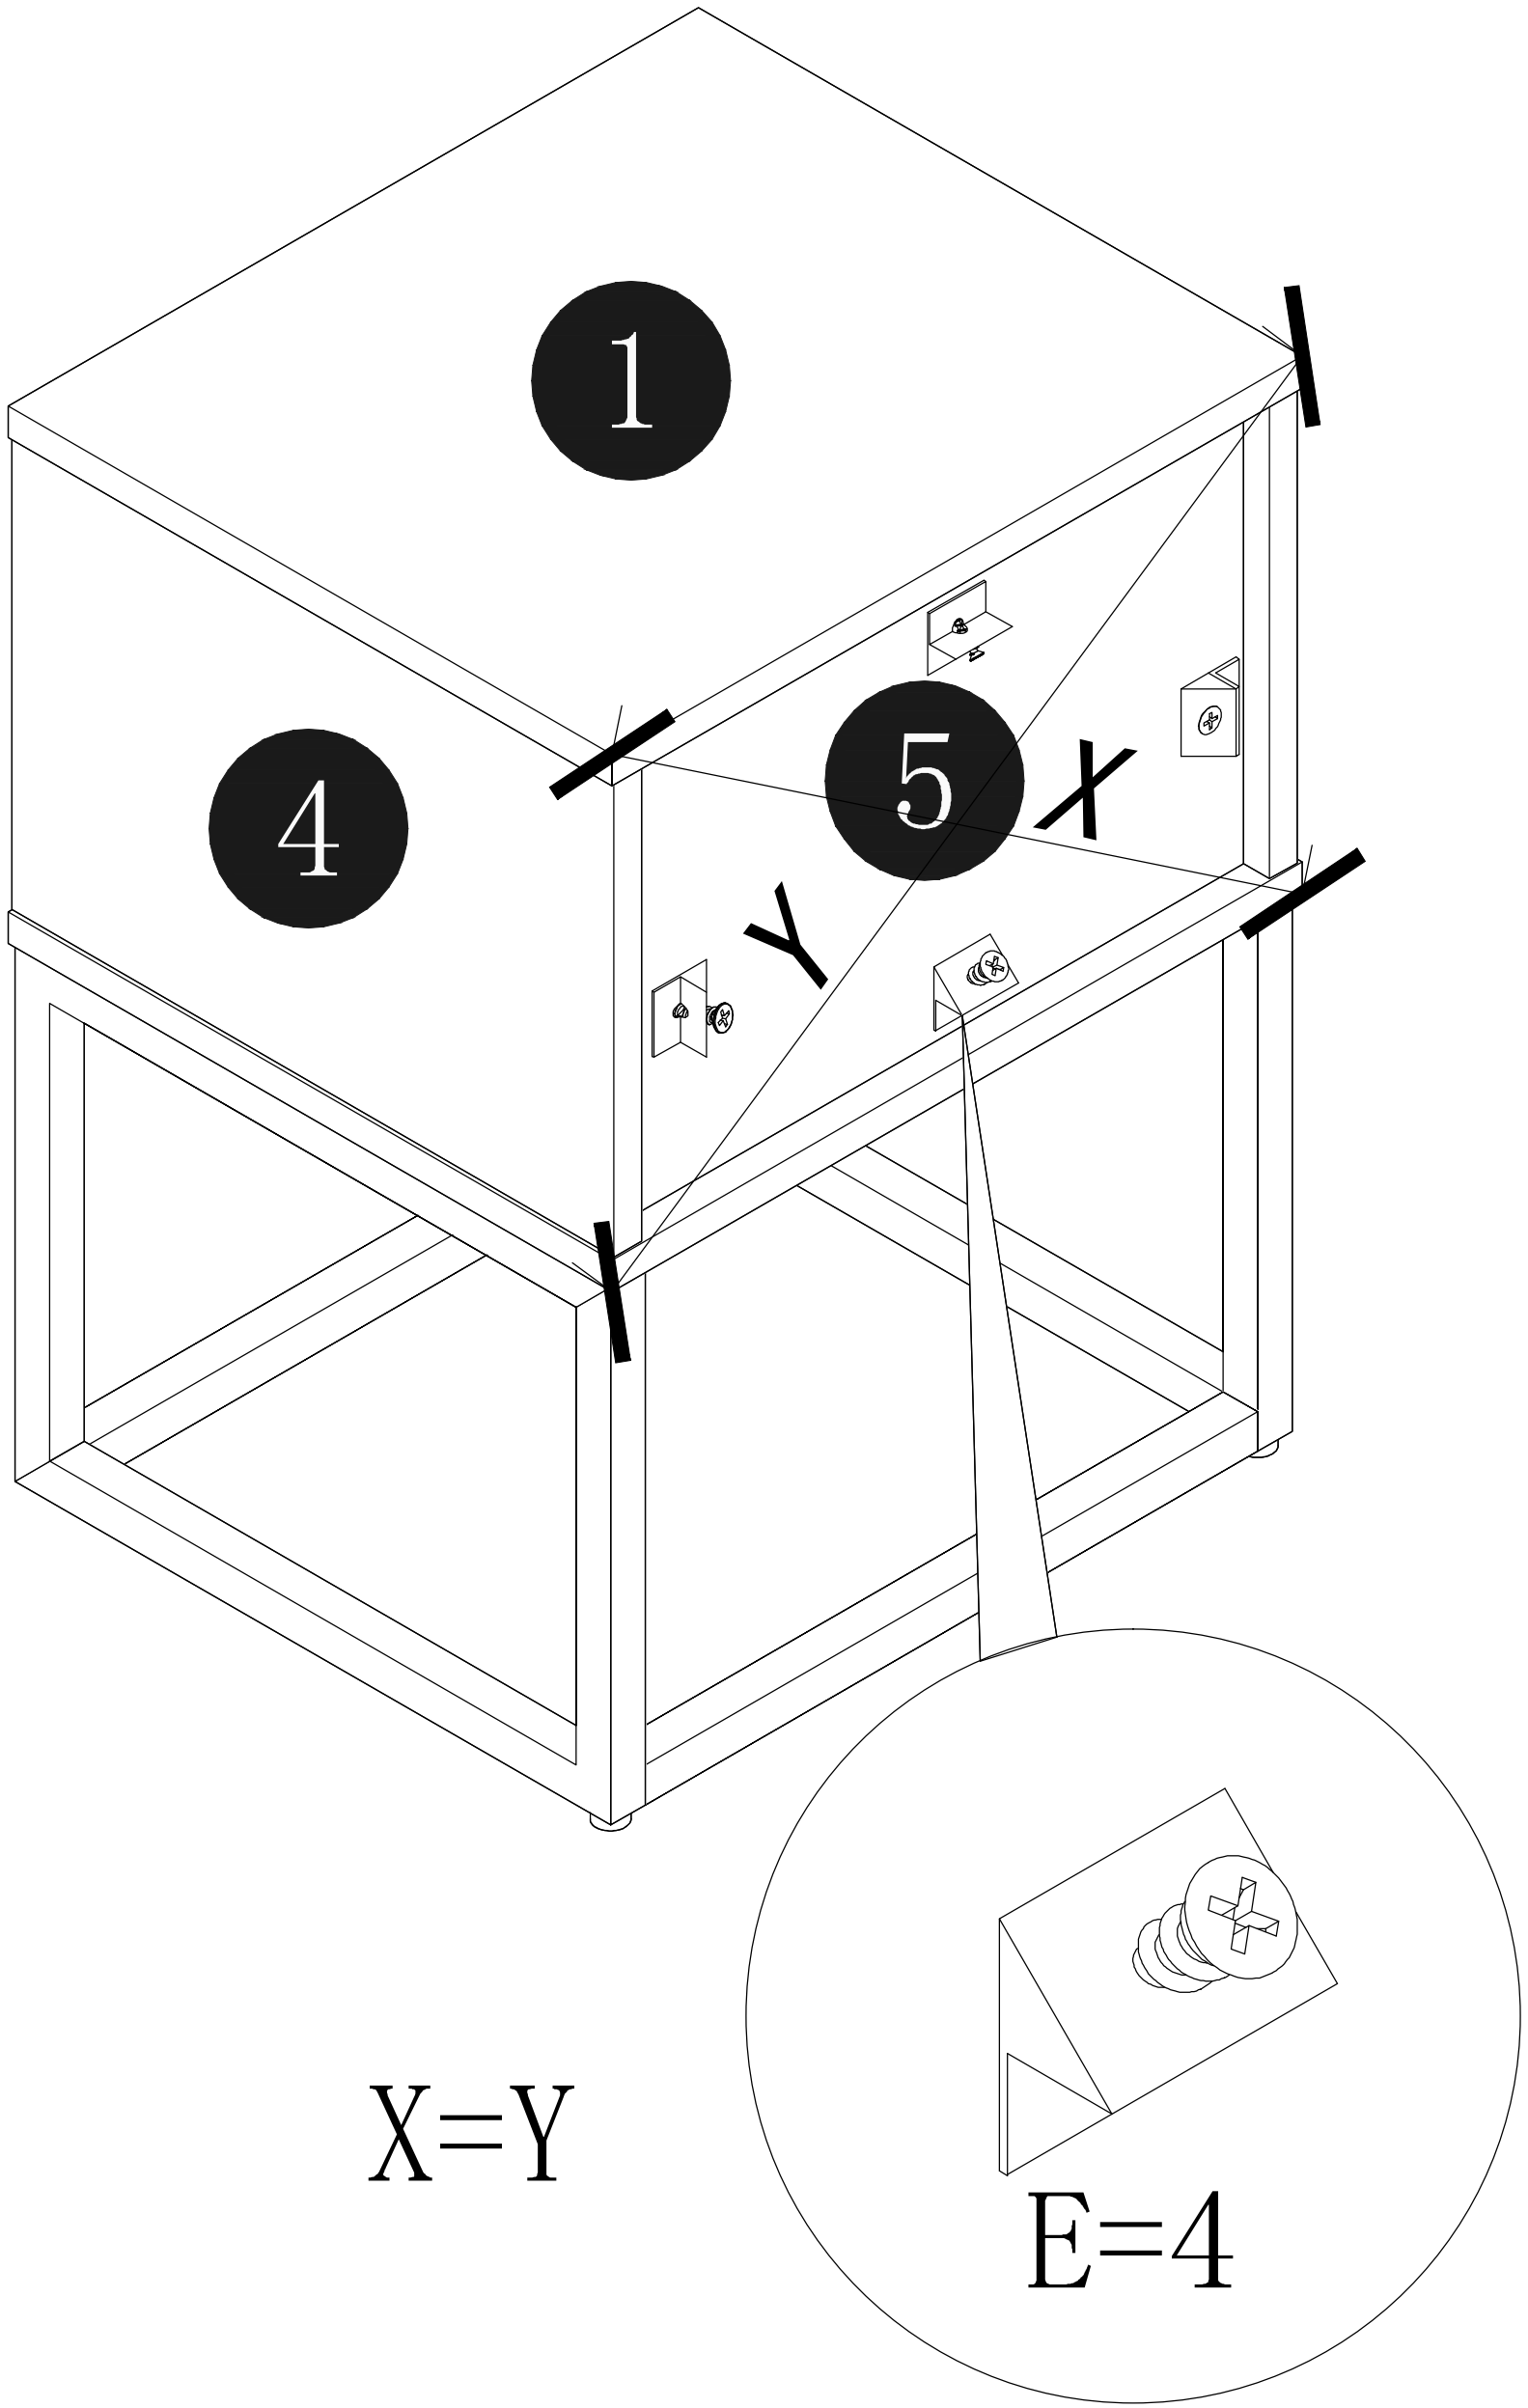

STEP 12

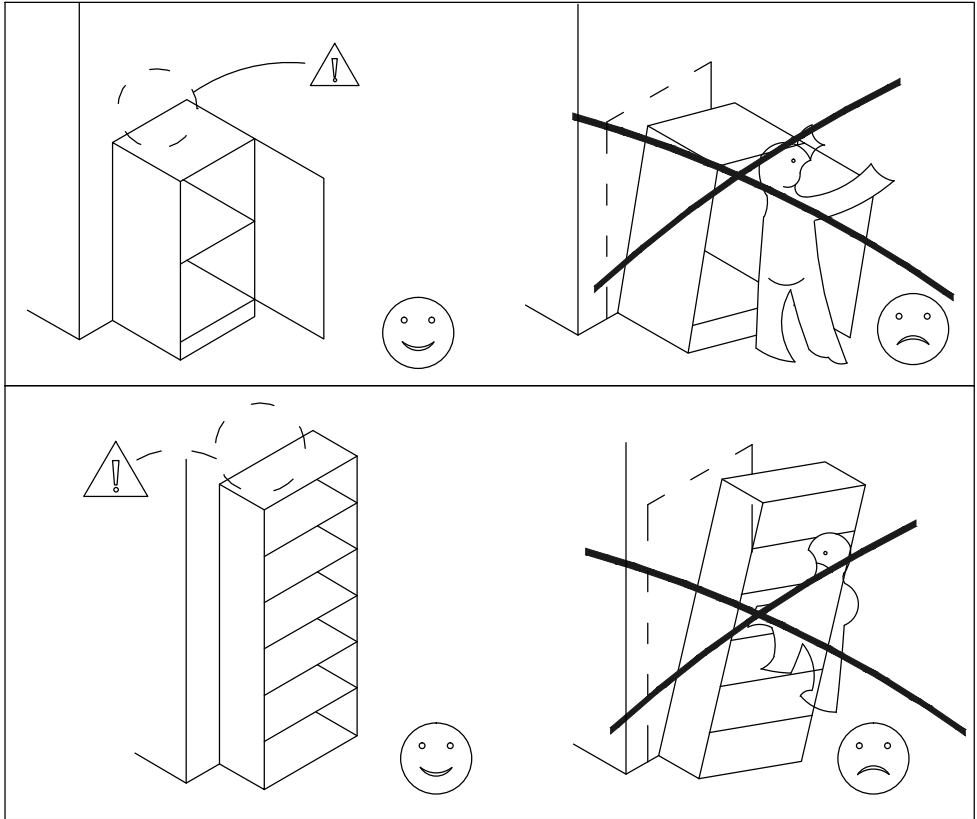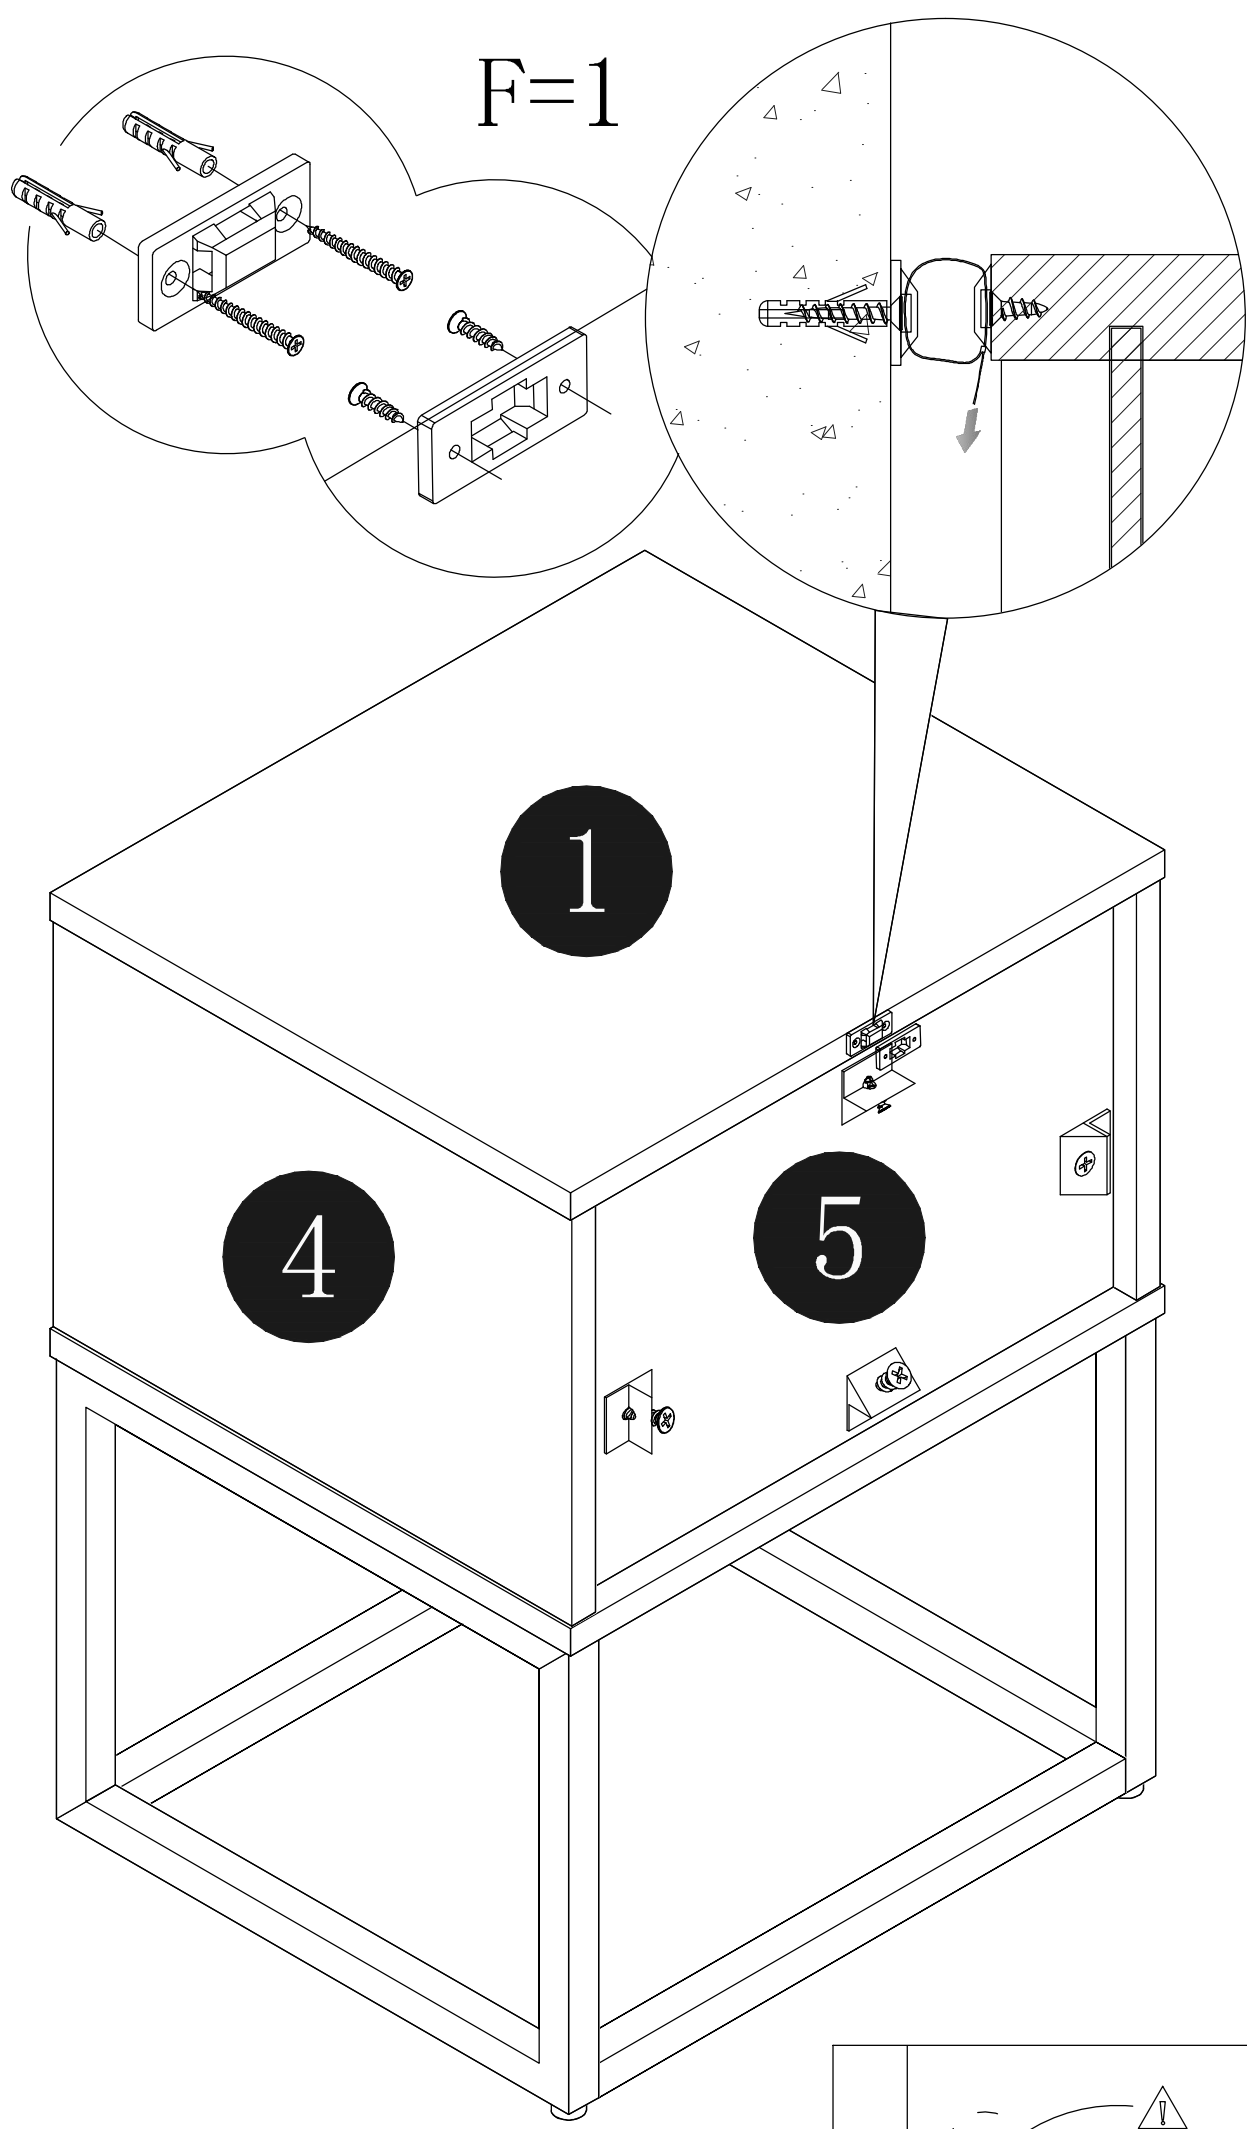

STEP 13

