
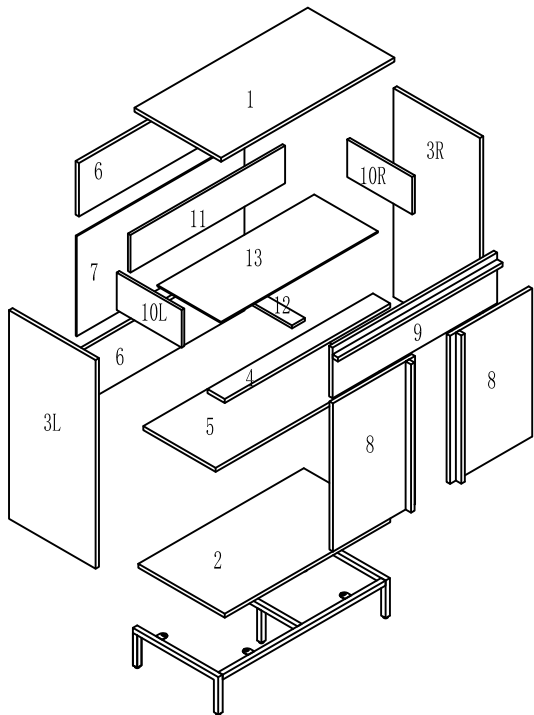


E3GS02

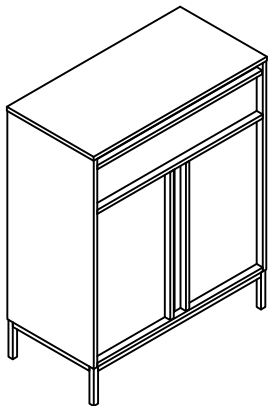

NO.	SIZE	QTY
1	800*400*16	1
2	764*399*16	1
3	834*399*16	2
4	764*80*16	1
5	764*334*16	1
6	764*214*16	2
7	774*400*5	1
8	592*379*16	2
9	760*202*16	1
10	300*150*12	2
11	714*150*12	1
12	284*60*12	1
13	724*294*5	1


		
A M6*40 18pcs	B $\phi 15*11.5$ 18pcs	C $\phi 8*30$ 14pcs
		
D $\phi 12*10mm$ 5set	E M4*14 12pcs	F M4*30 6pcs
		
G M6*12 5pcs	I M4*20mm 9pcs	N / 4pcs
		
O 4# 1pcs	R M6*16 6pcs	K 10" 1set
		
H L=590 2pcs	J L=758 1pc	Z $\phi 20$ 20pcs
		
M big bend 4pcs		

STEP 1:


	
O 4# 1pcs	R M6*16 6pcs

STEP 2:

	
K 10" 1set	E M4*14 6pcs

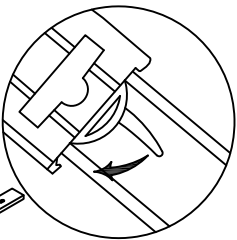

Pull to split the
gliders into 2 pcs



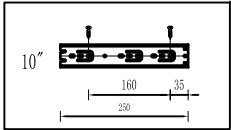


STEP 3:

					
A	M6*40	2pcs	B	$\phi 15*11.5$	2pcs
					
C	$\phi 8*30$	1pc			


STEP 4:

		
A M6*40 5pcs	B $\phi 15*11.5$ 5pcs	C $\phi 8*30$ 5pcs

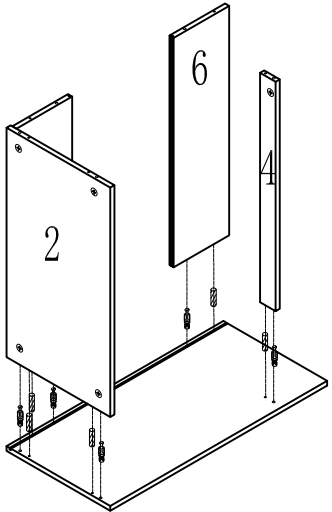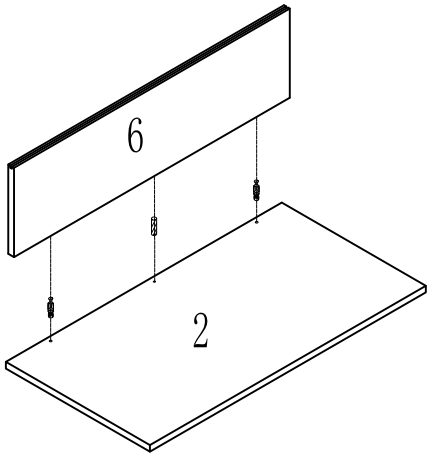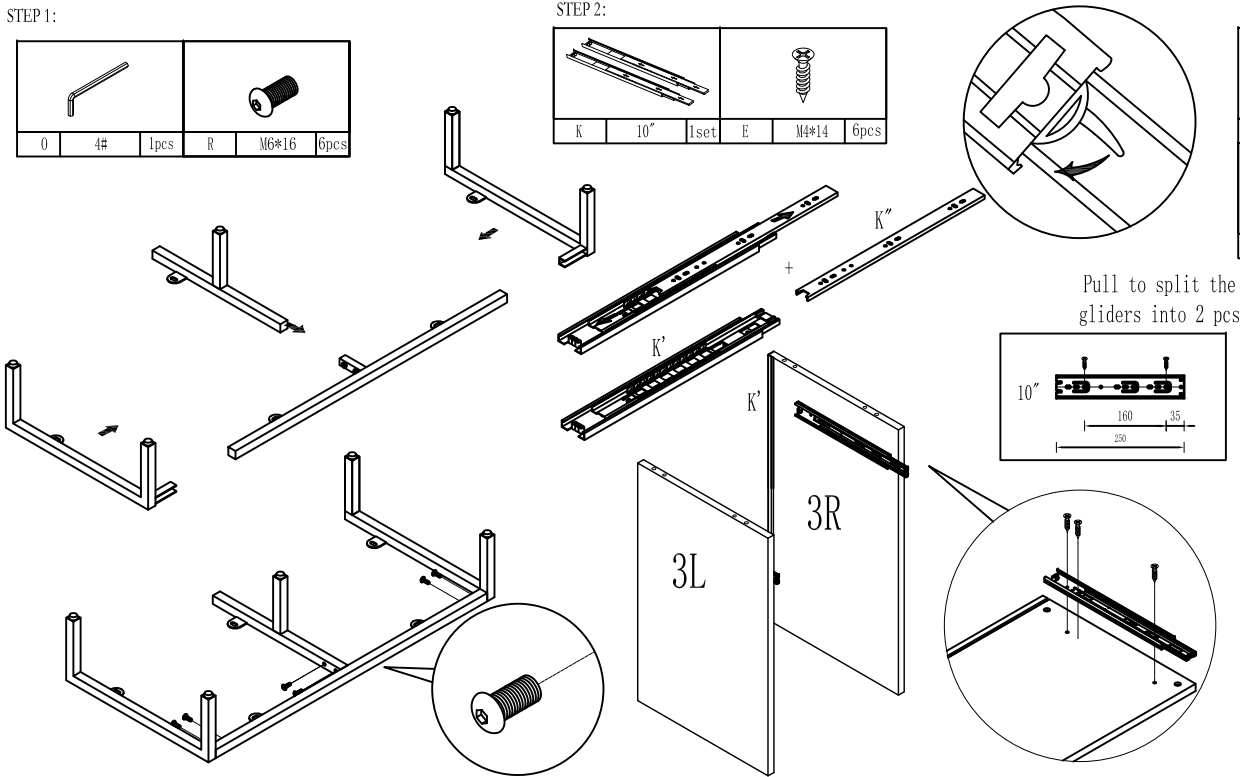


STEP 5:

		
A	M6*40	5pcs
		
B	φ15*11.5	5pcs
		
C	φ8*30	3pcs

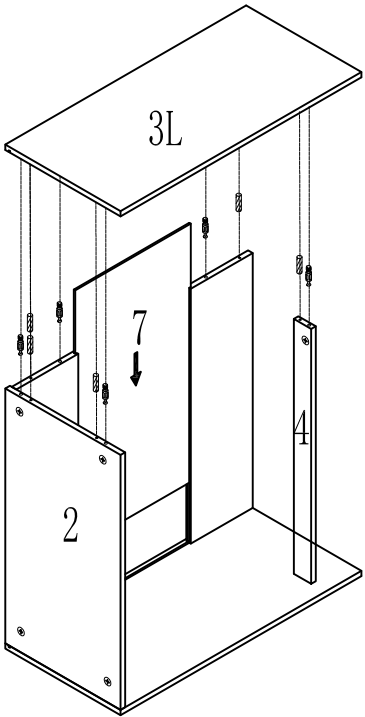


STEP 6:

		
A	M6*40	6pcs
		
B	φ15*11.5	6pcs
		
C	φ8*30	3pcs

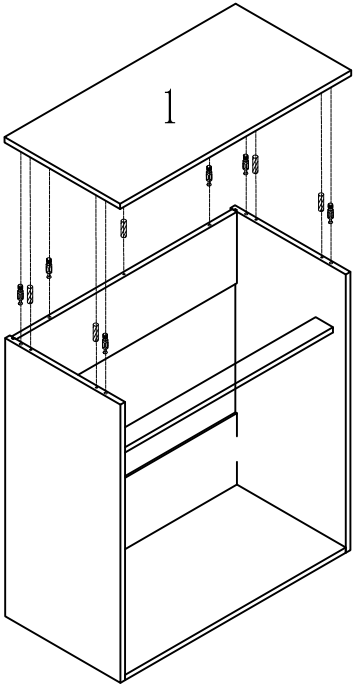


STEP 7:

																	
D	φ12*10	5set	E	M4*14	6pcs	F	M4*30	6pcs	K	10"	1set	I	M4*20mm	3pcs	J	L=758	1pc

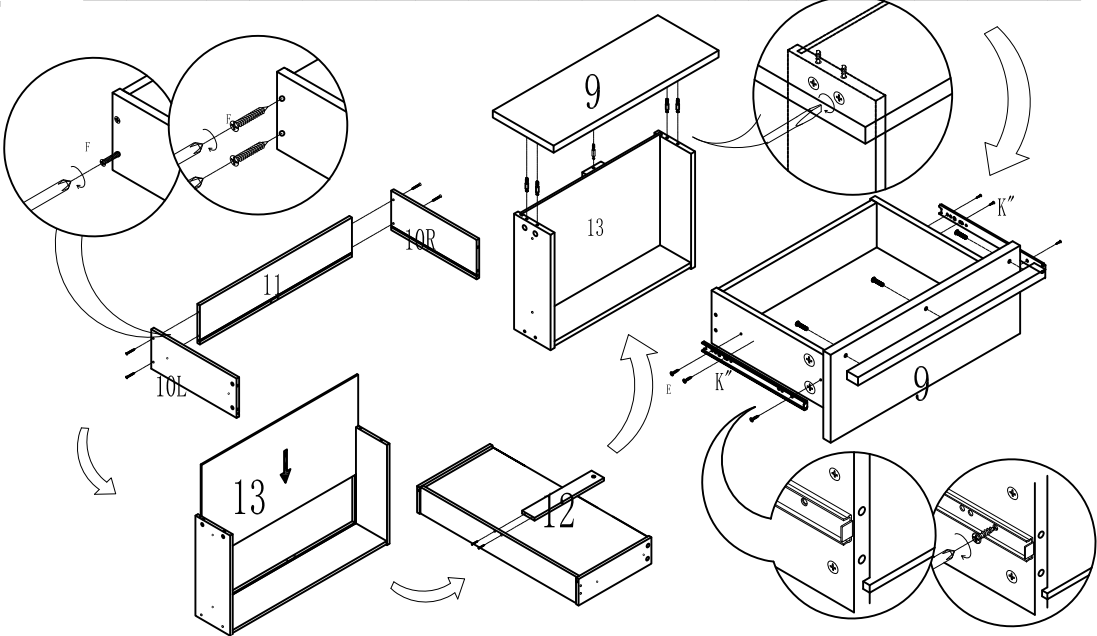


STEP 8:

		
G	M6*12	5pcs

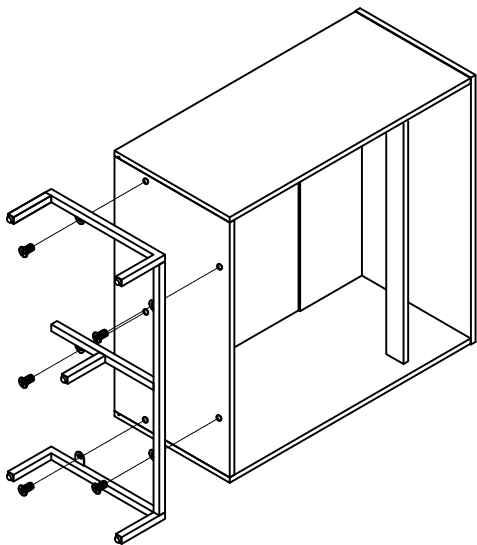


STEP 9:

		
N	/	4pcs

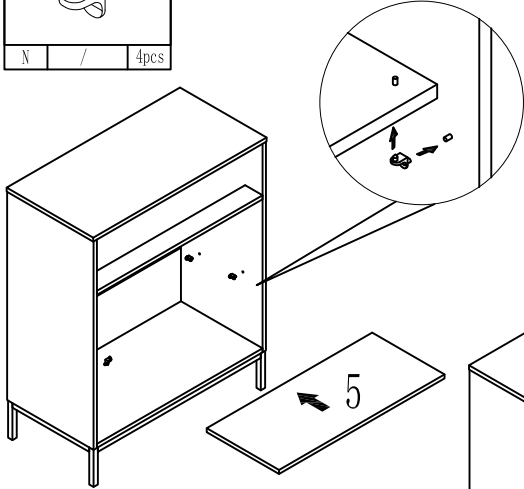


STEP 10:

					
M	big bend	4pcs	H	L=590	2pcs

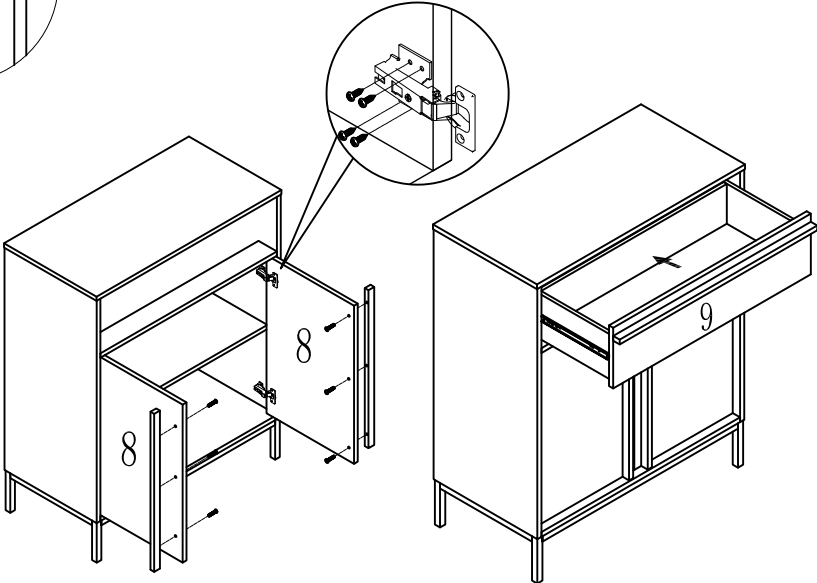

STEP 11:

		
Z	020	20pcs

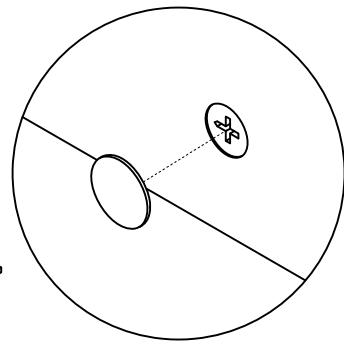

Add the screw covers for those visible cams