
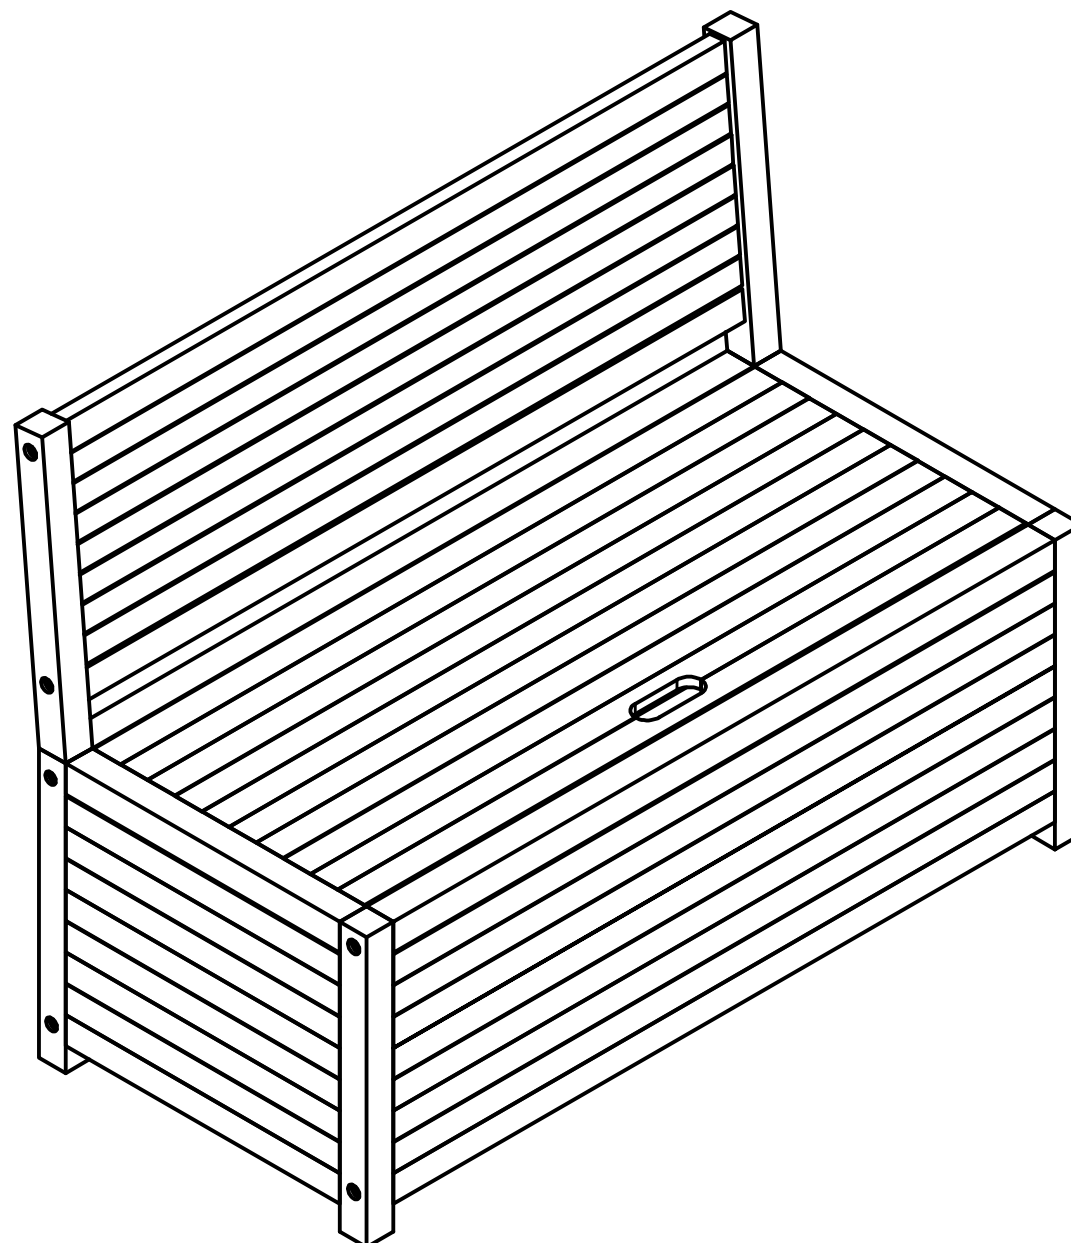
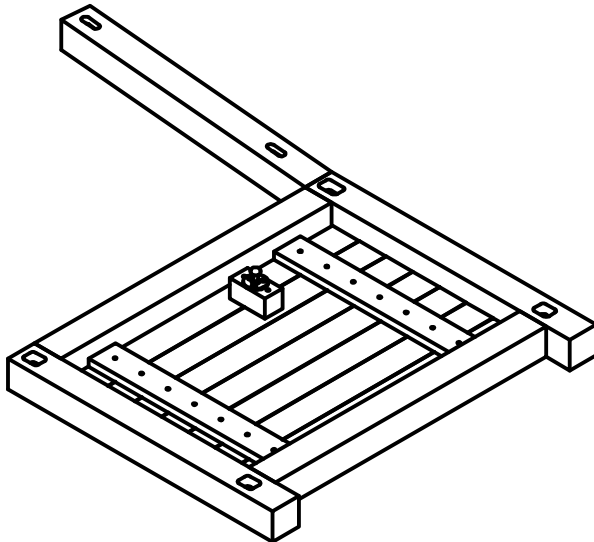
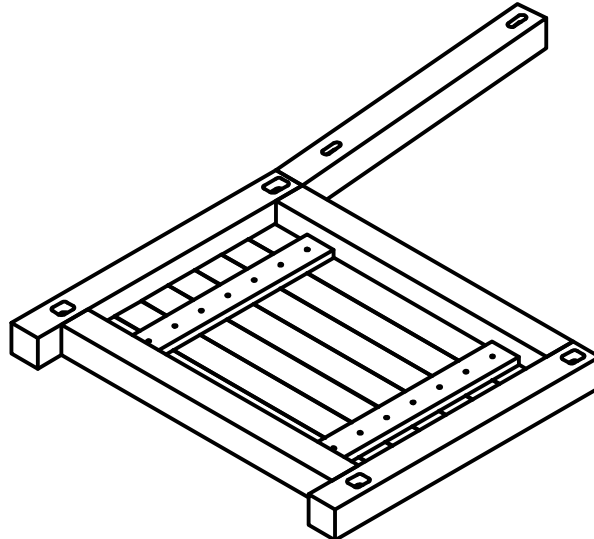


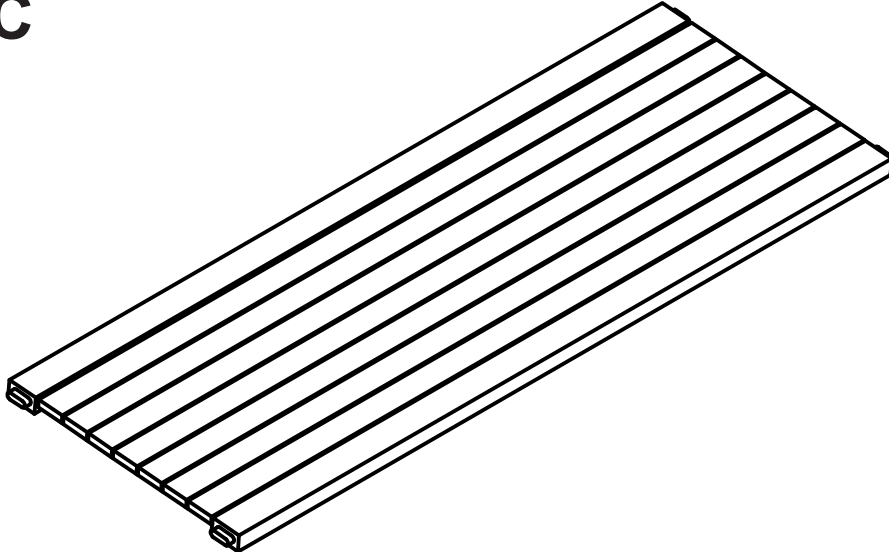
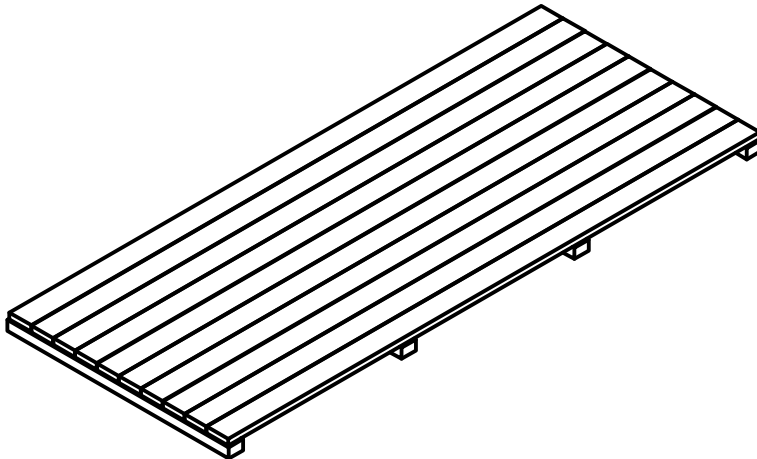
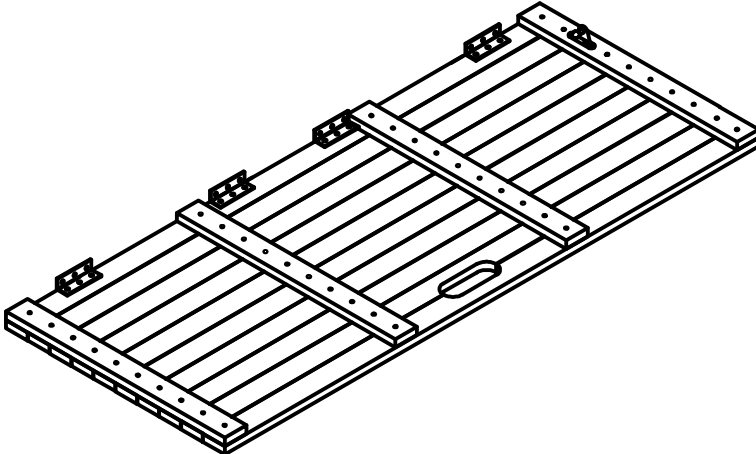
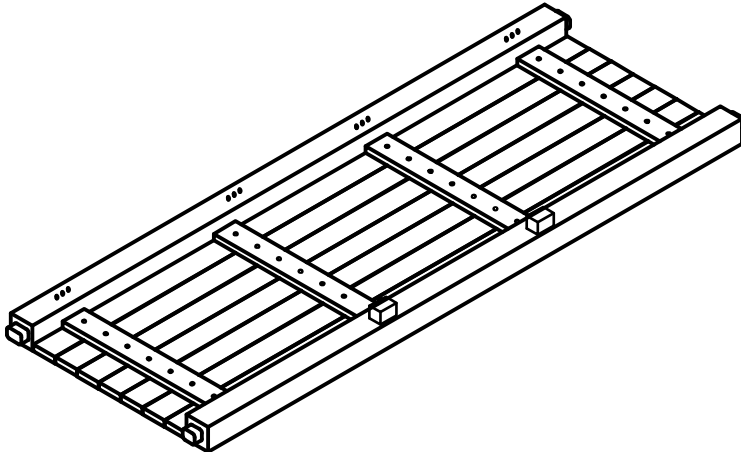


ASSEMBLY INSTRUCTION: 12540083/12

ambia. GARDEN


XXXLutz KG
Roemerstrasse 39
AT-4600 Wels, Austria

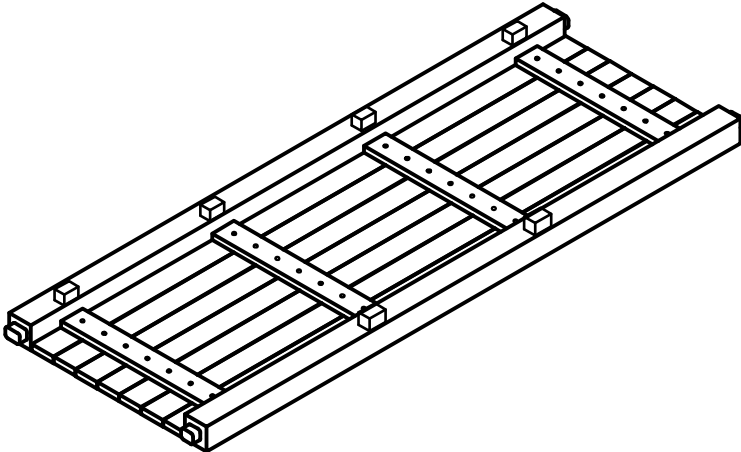



ASSEMBLY INSTRUCTION: 12540083/12					
No	Name of Hardware	Fix	Qty	A	B
1	Screw M6x80 mm		12		
2	Piston		1		
3	Screw M4x15		12		
4	Allen Key		2		
C 				D 	
E 					
F 				G 	

ASSEMBLY INSTRUCTION: 12540083/12

Step 1:

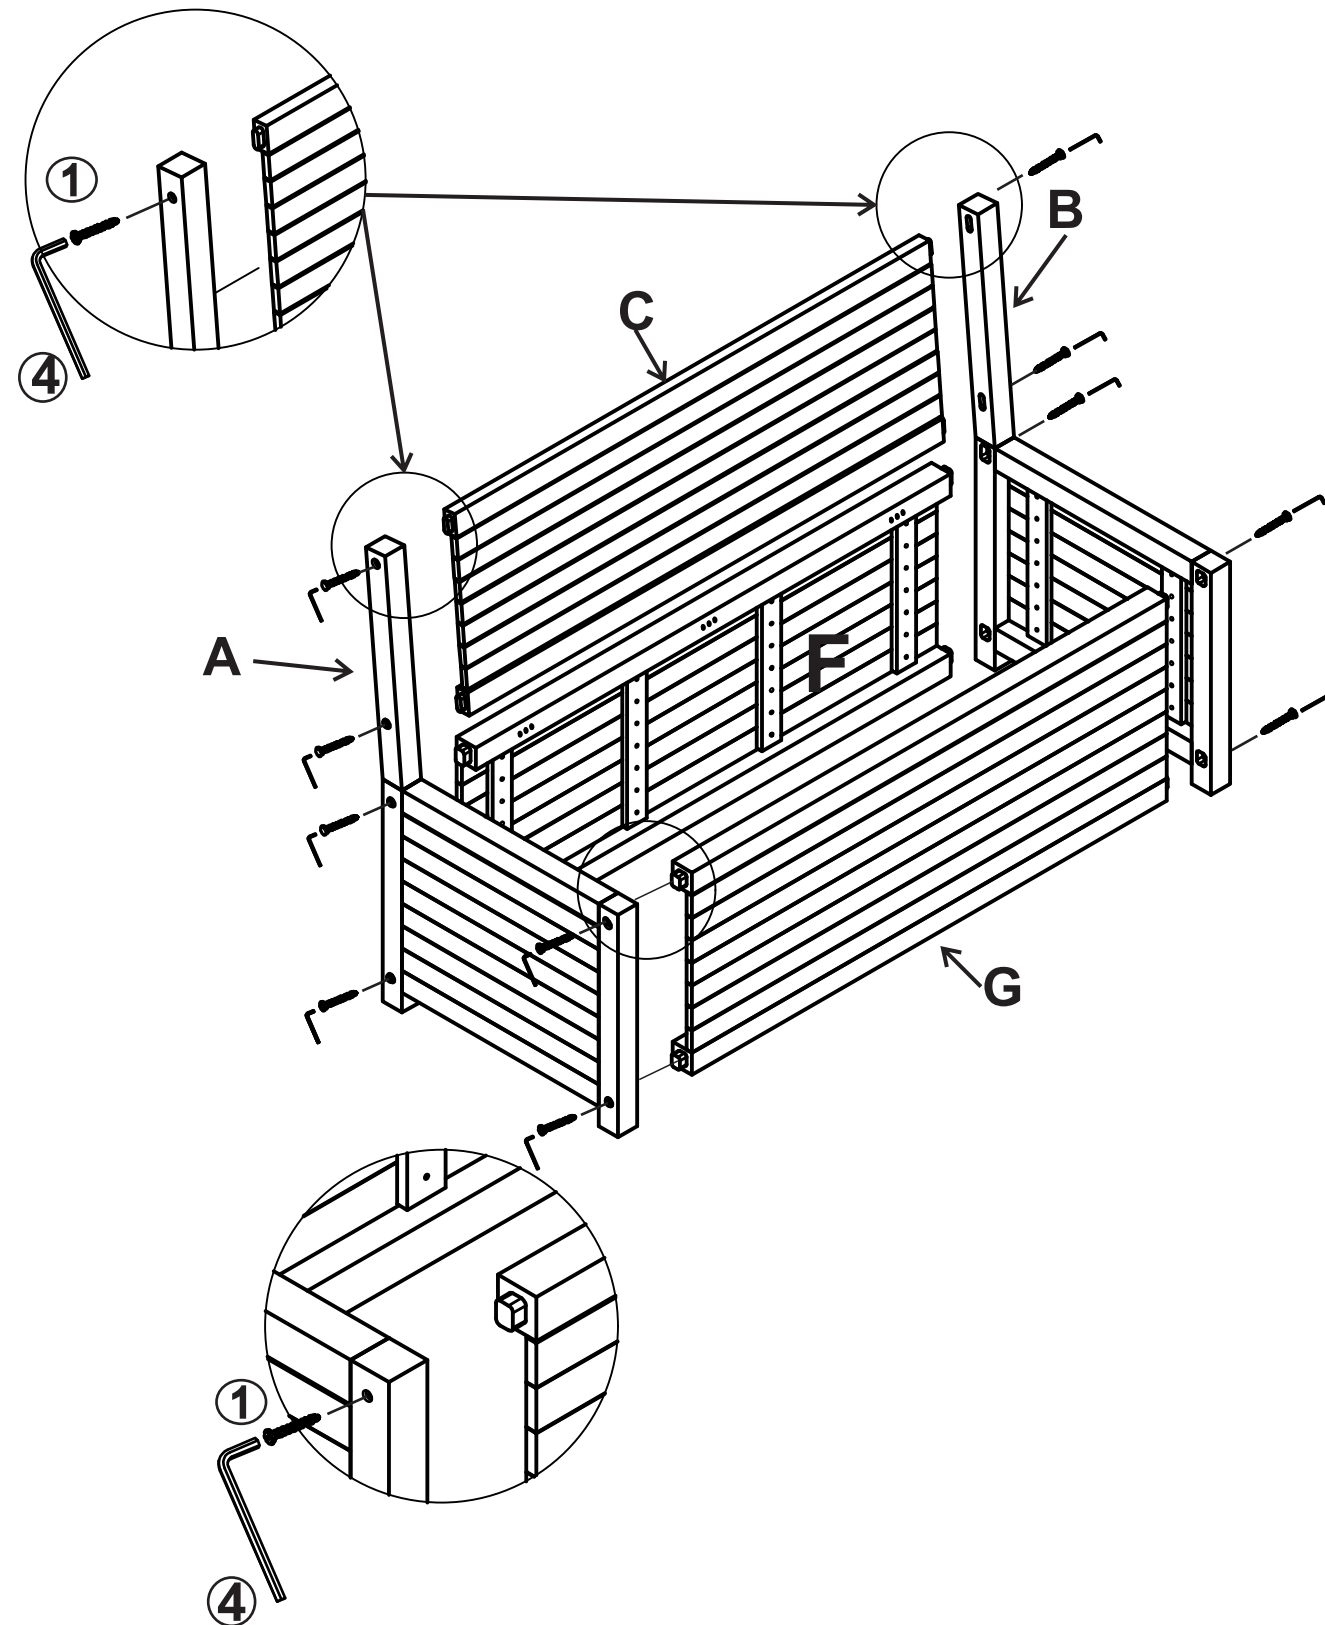


Step 2:

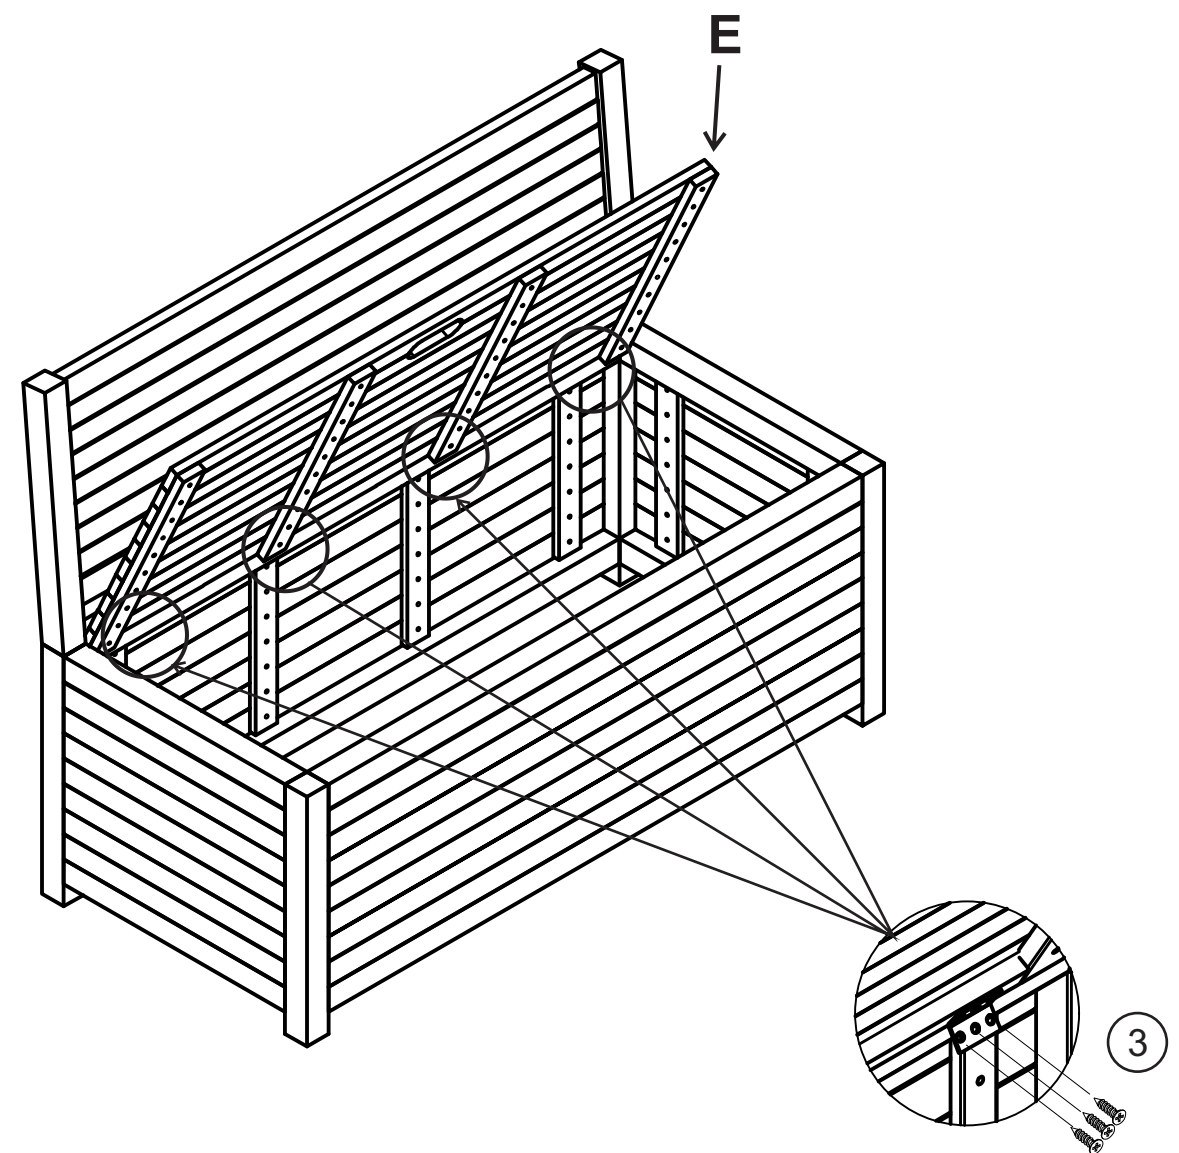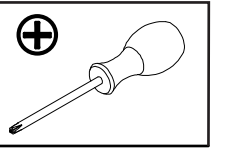

ASSEMBLY INSTRUCTION: 12540083/12

Step 3:

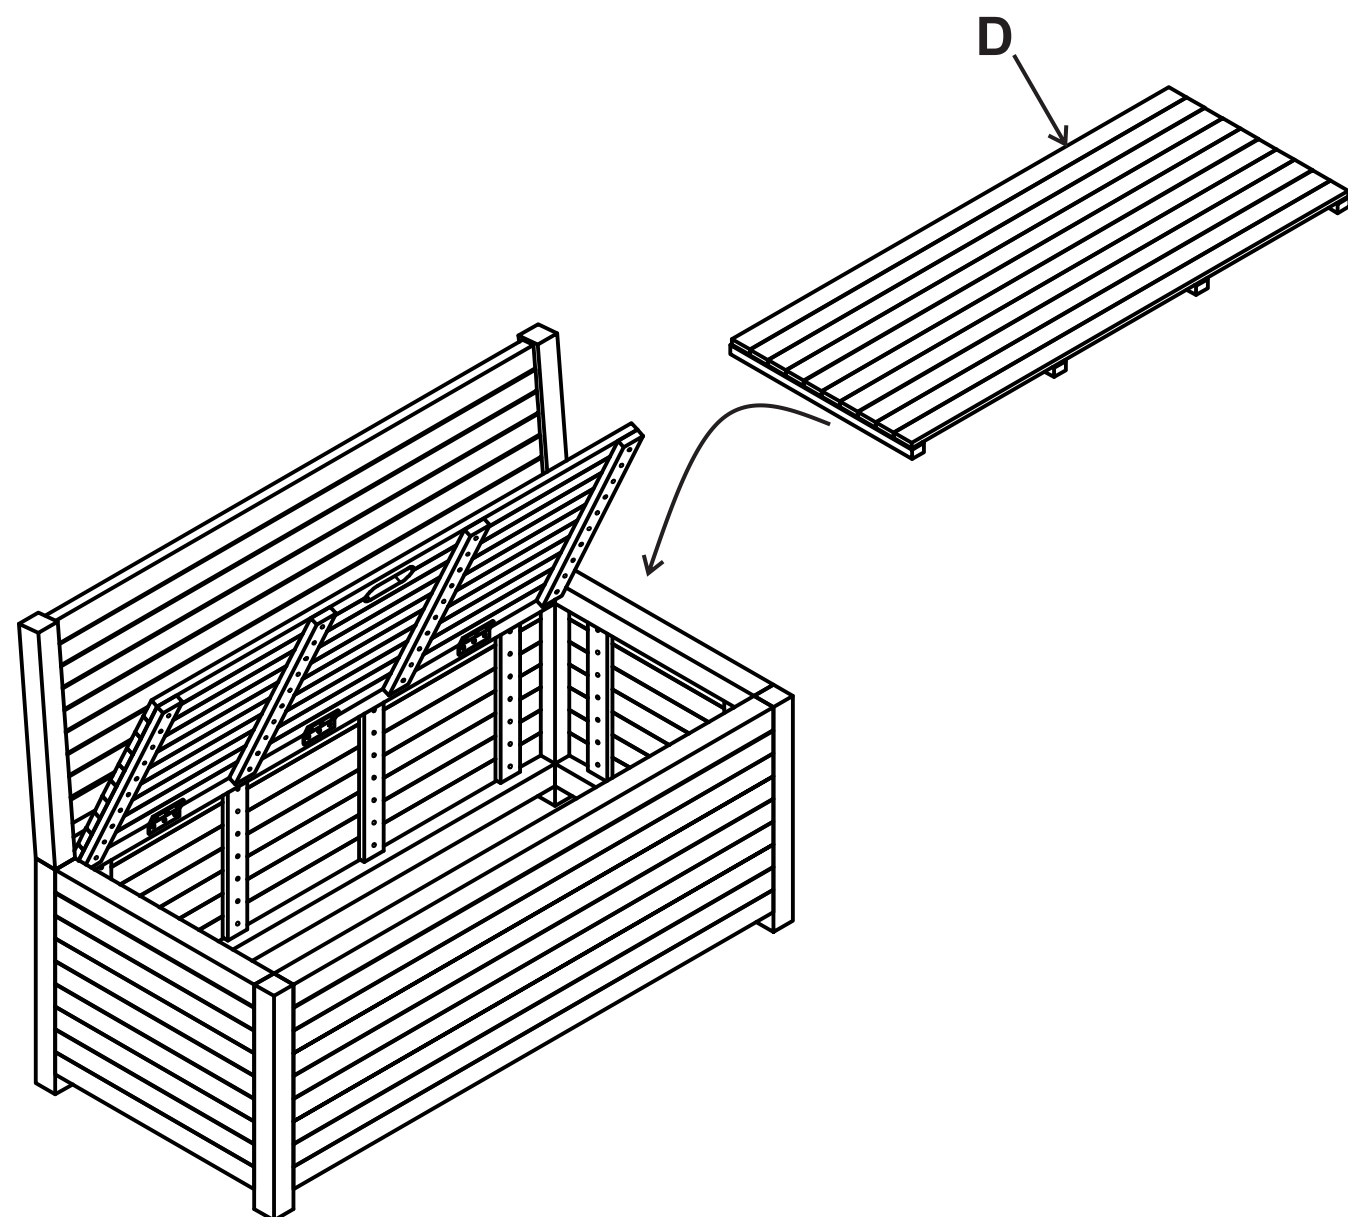

Step 4:

