
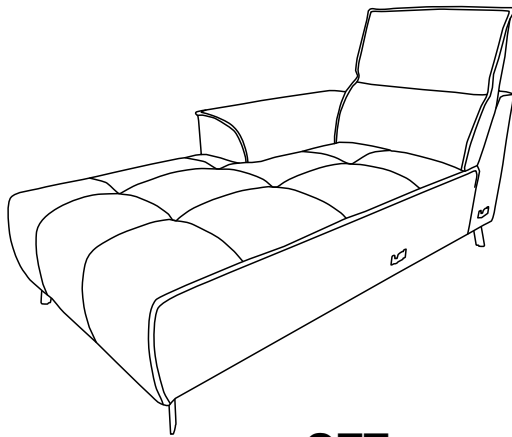
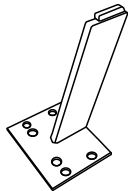
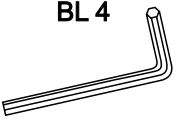

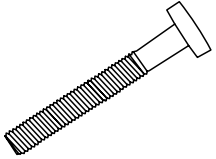




Marina




OTTmax

 A 4x	 BL 4 1x
 WK 5x35 8x	 SR M6x30 C 8x
	 B Ø8 H130 1x



OTTmax

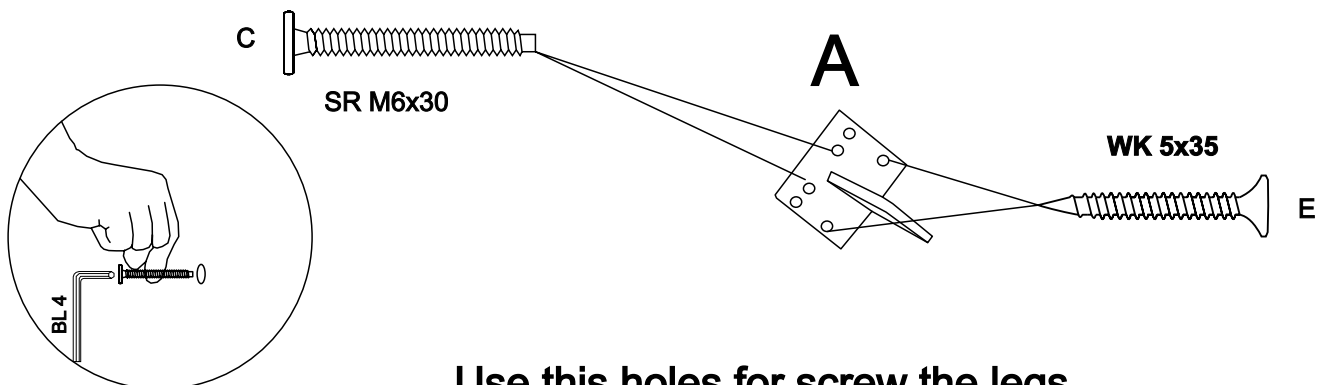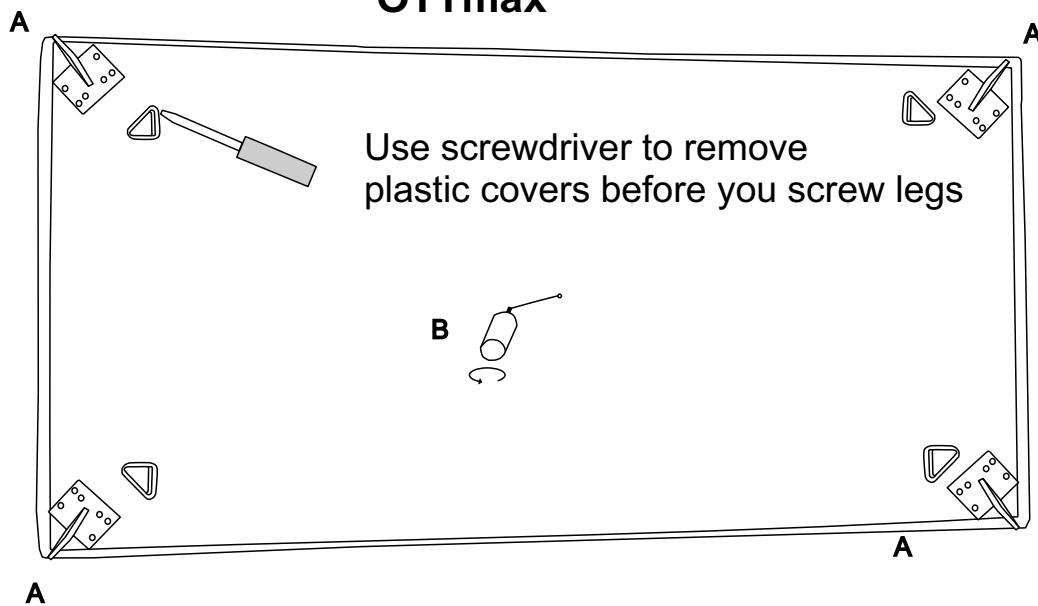

Marina

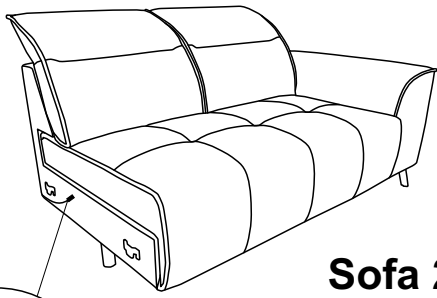


Sofa 2 1b

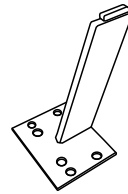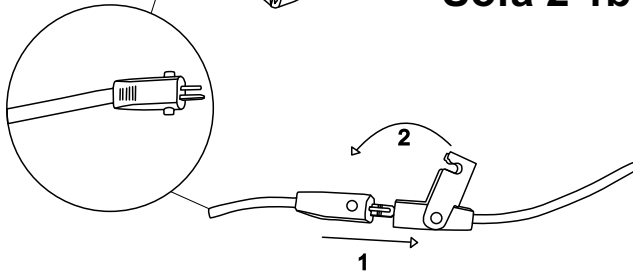


2x

A

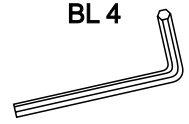

BL 4

1x

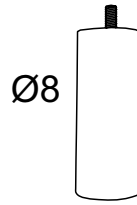


Ø8

H130

4x


B

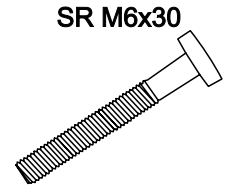

SR M6x30


4x

C

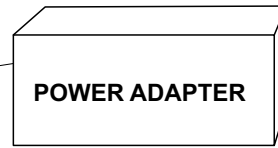

POWER ADAPTER

1x


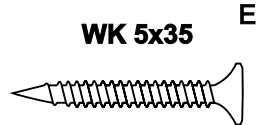


WK 5x35

4x


E

Sofa 2 1b

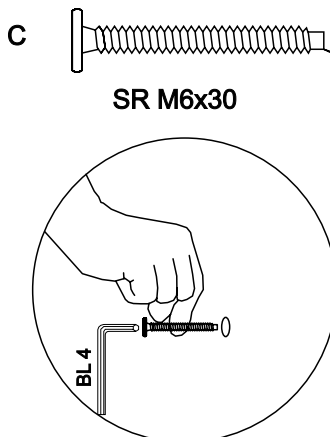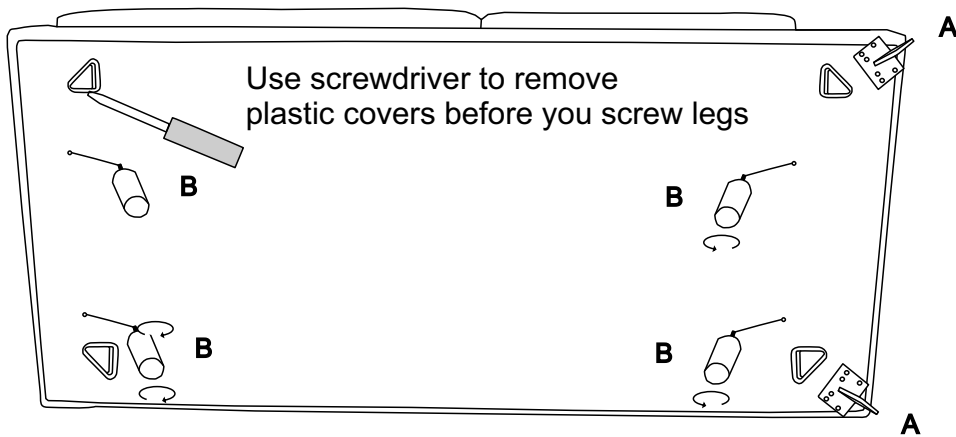

SR M6x30

A

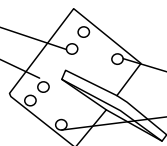

WK 5x35



E

Use this holes for screw the legs