




MONTAGEANLEITUNG: TERRA BETT

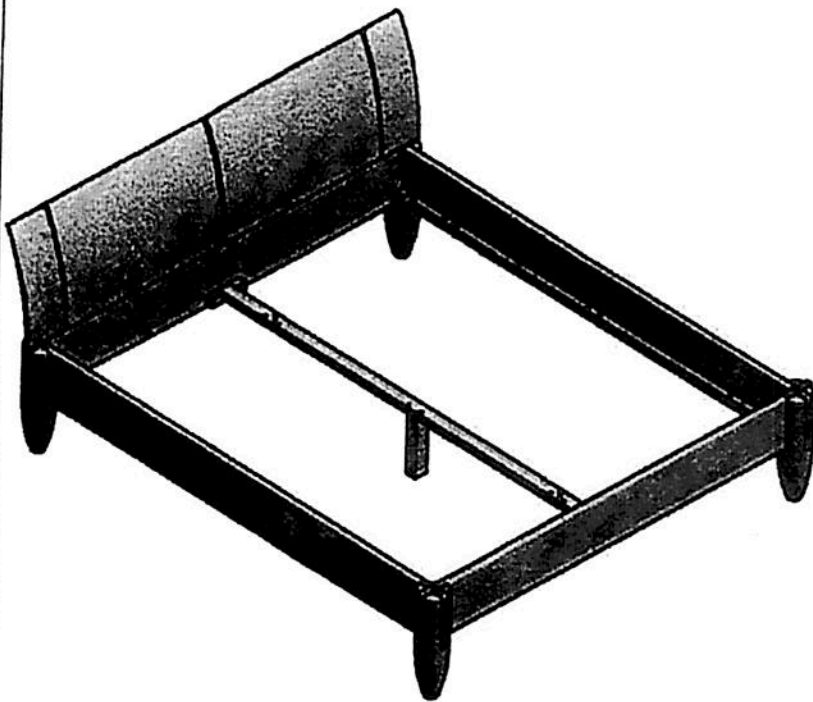


BETT 01

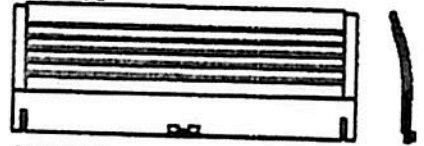


BETT 02

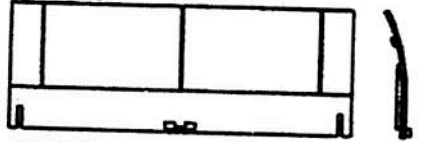


BETT 05

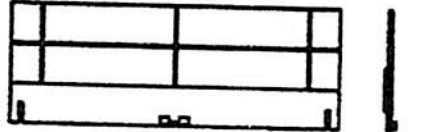


BETT 200/180/160/140

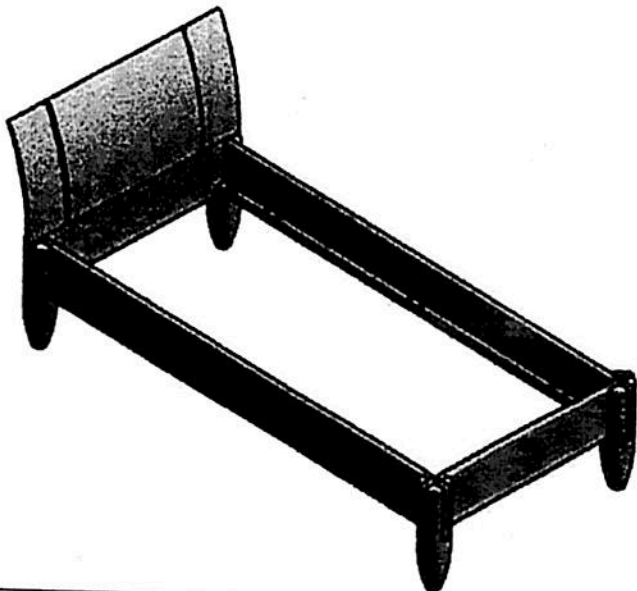


BETT 01

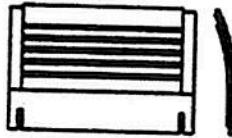


BETT 02

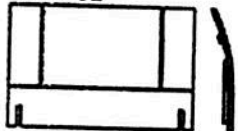


BETT 05

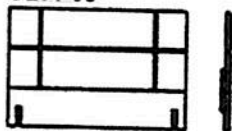


BETT 120/100/90

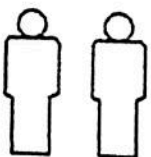


30 min

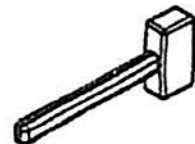


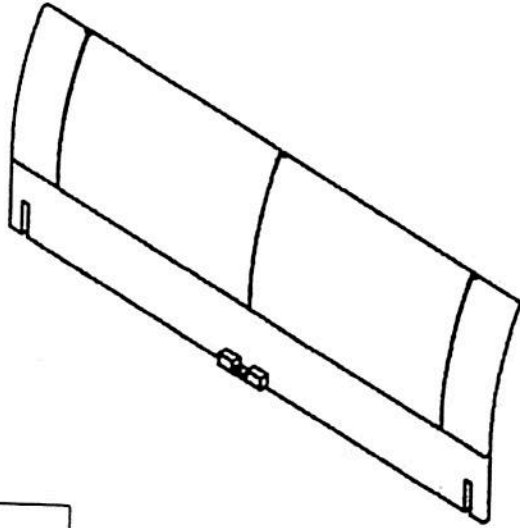


A 1stk

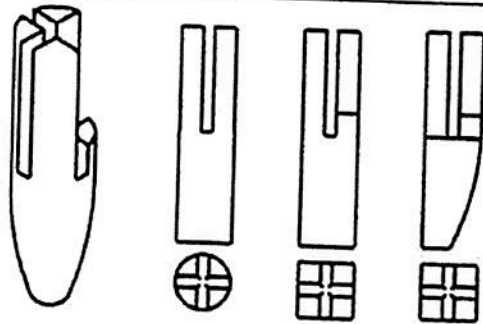


D 4stk

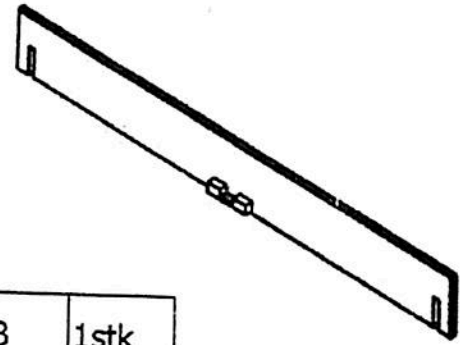


B 1stk

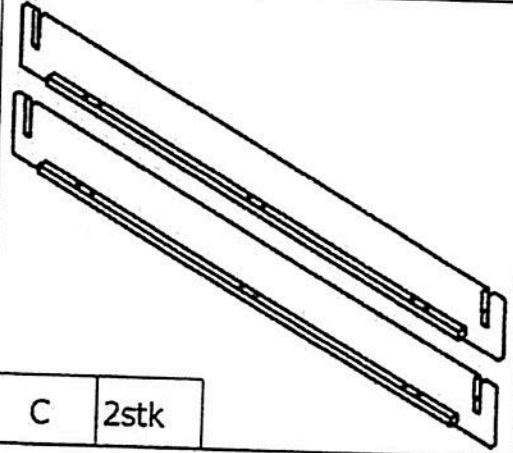


C 2stk

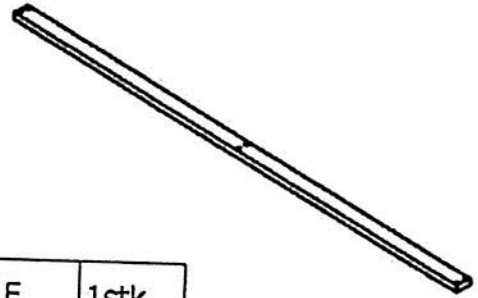

E 1stk



F 1stk



G
VARIANTE 2
9 stk
VARIANTE 3
12 stk



H 4stk




Ø10x25

K1 6stk




Ø10x40


K2 26stk

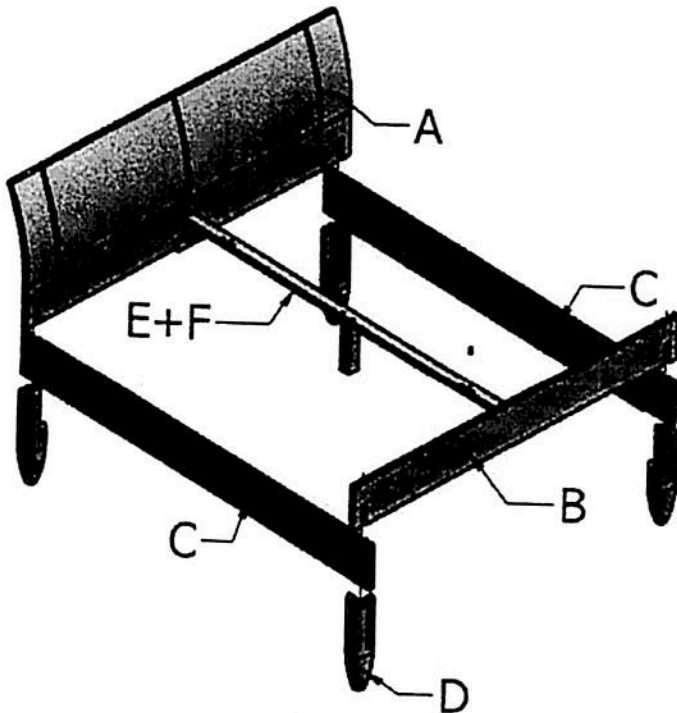

1.


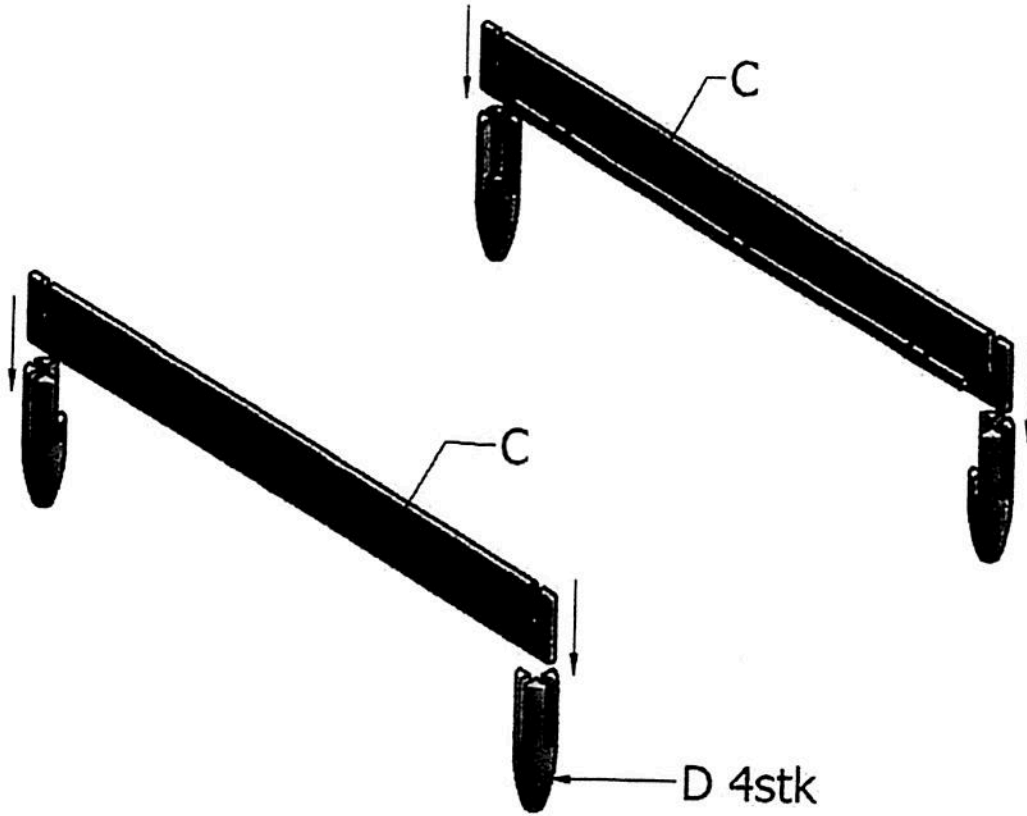


2.


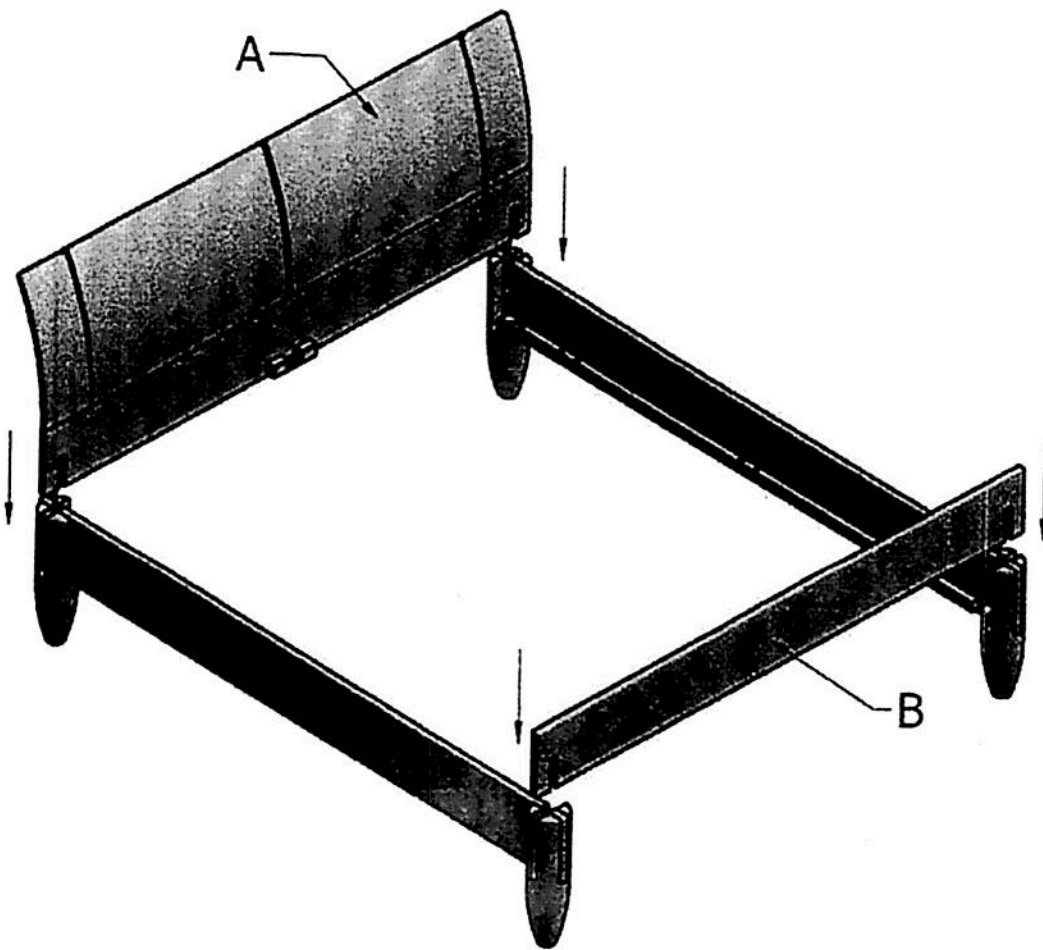


3.



BETT 200/180/160/140

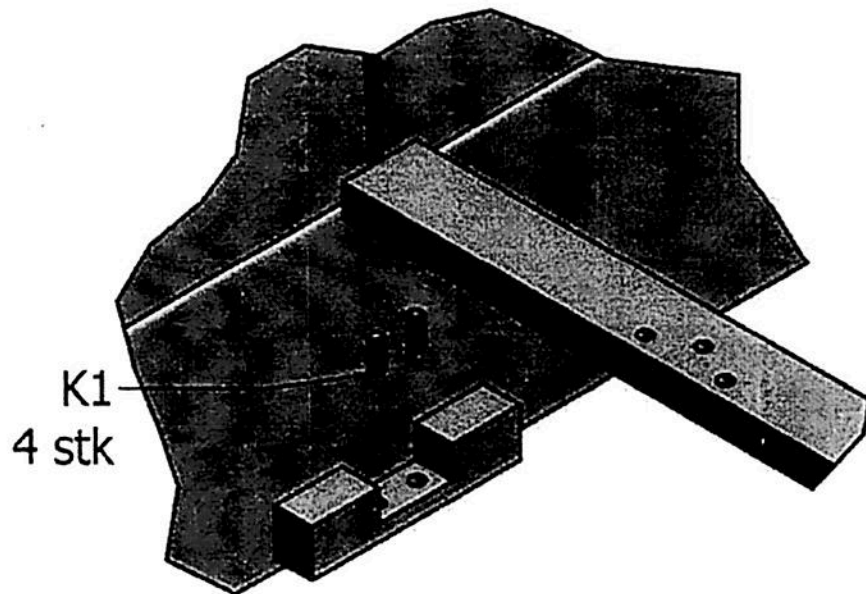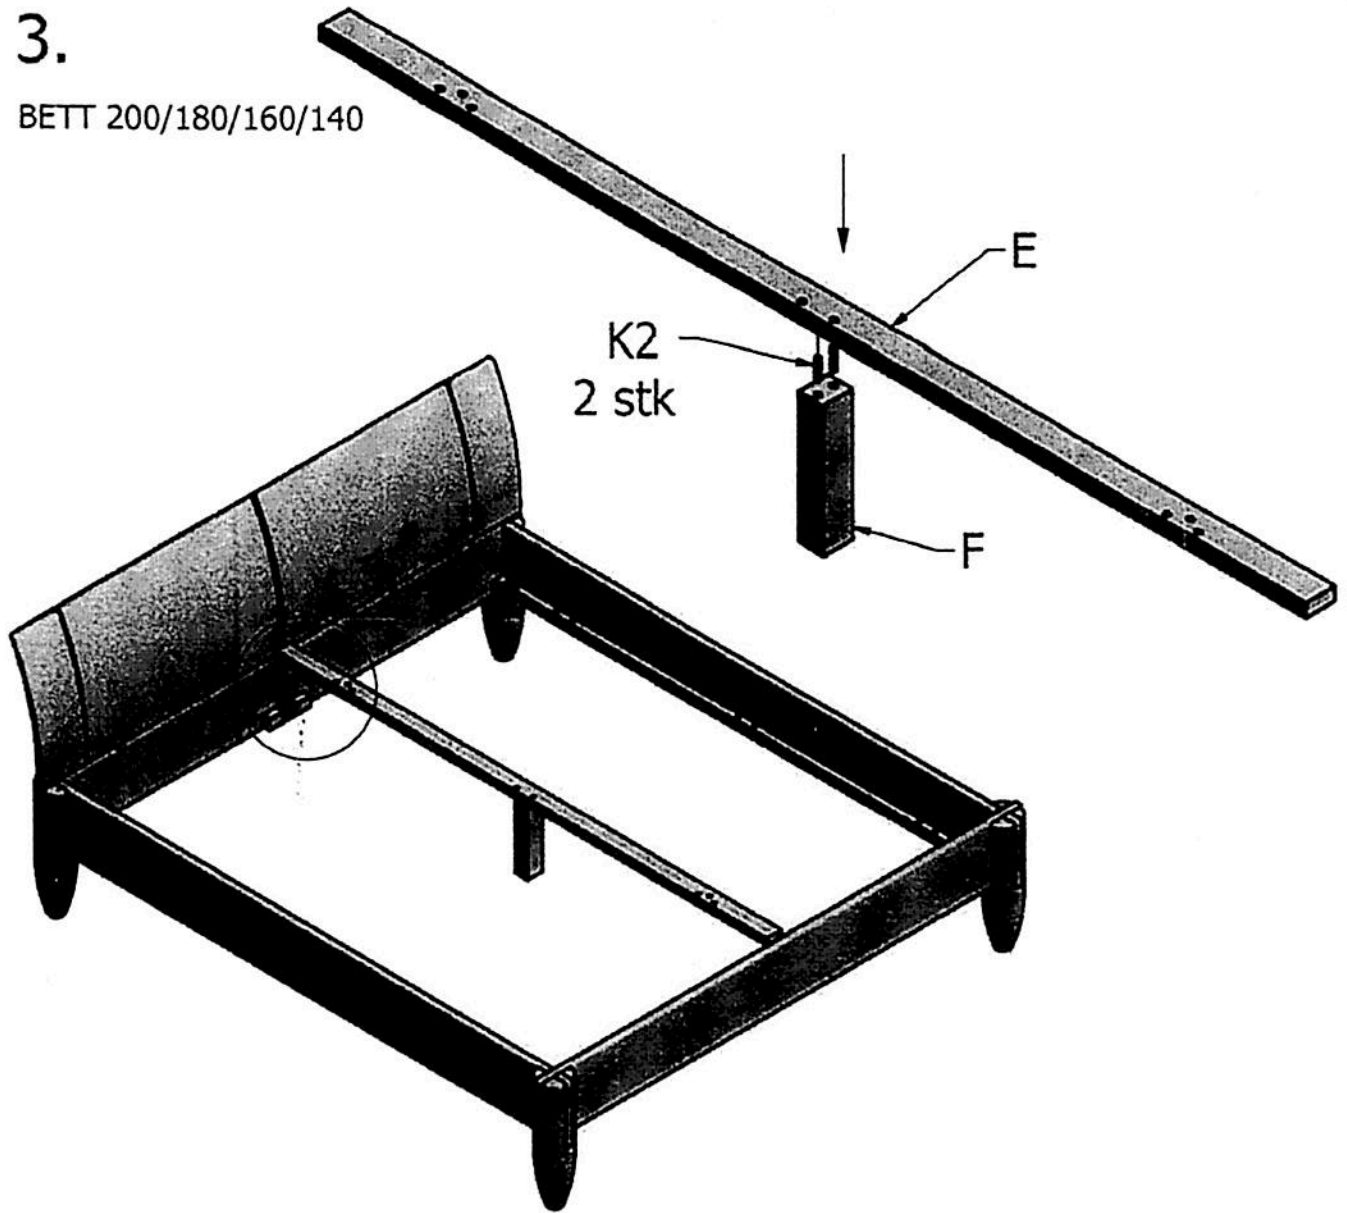



4.

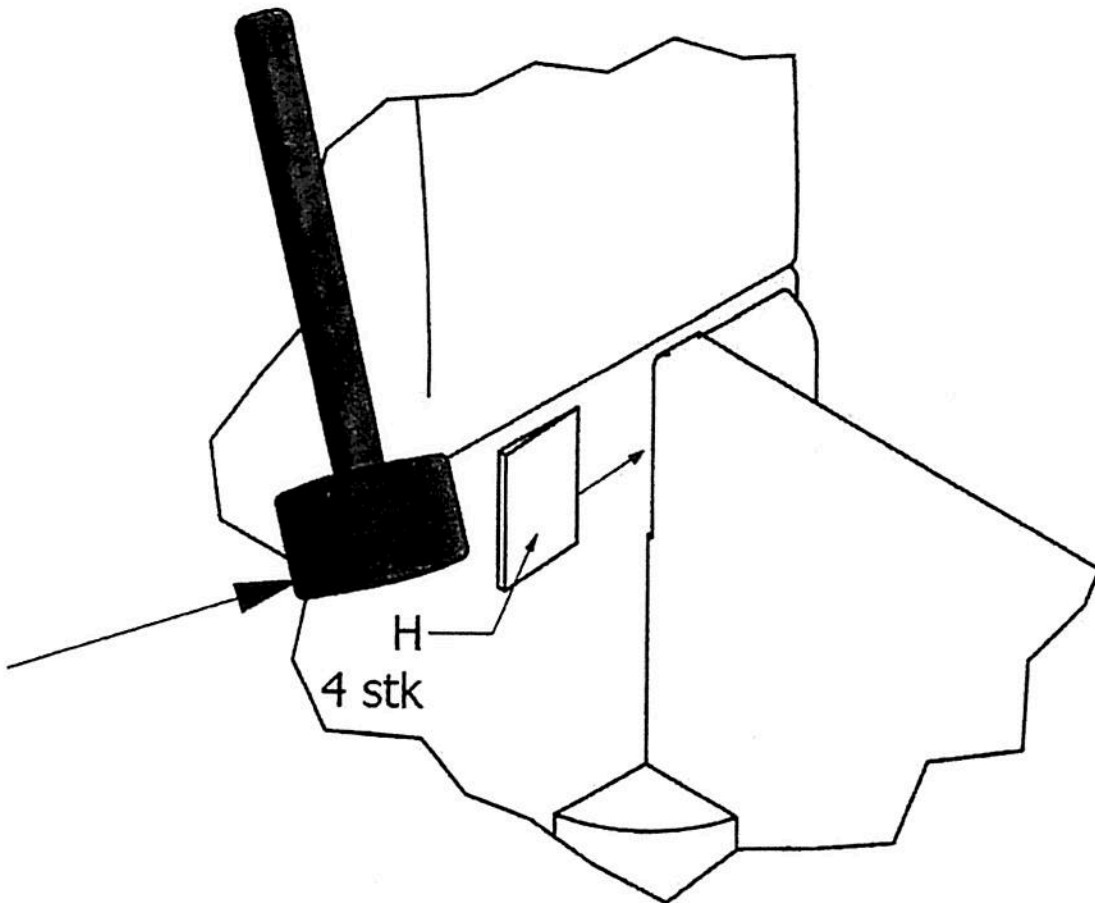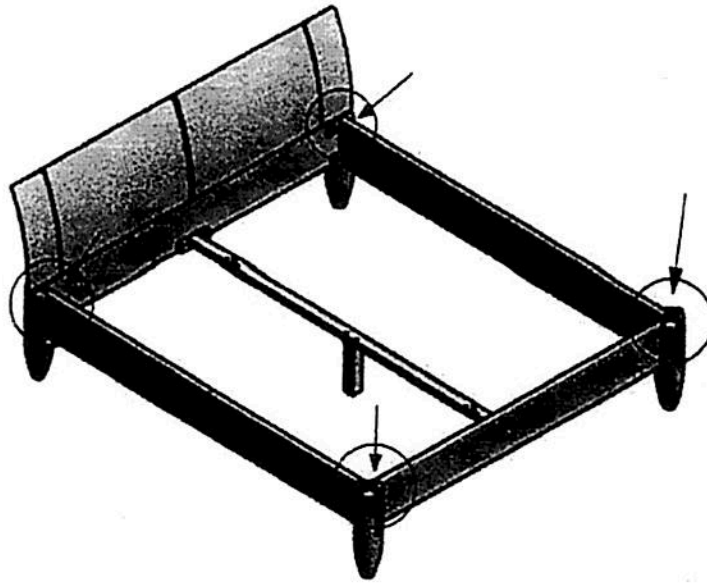

5.
VARIANTE 1

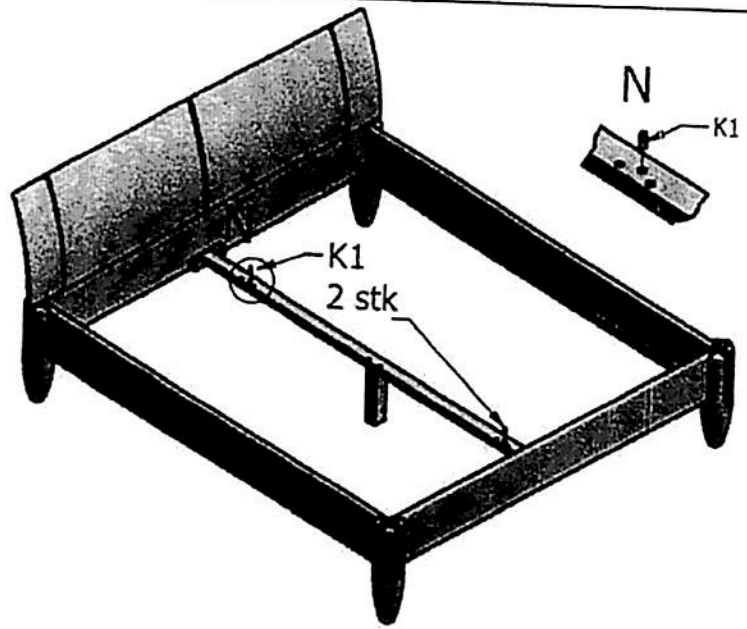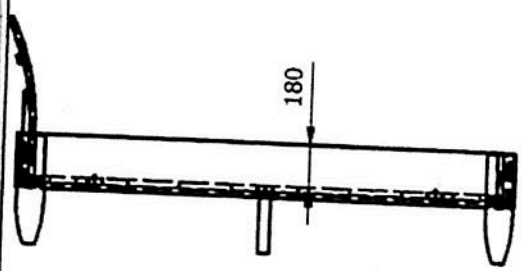

VARIANTE 2

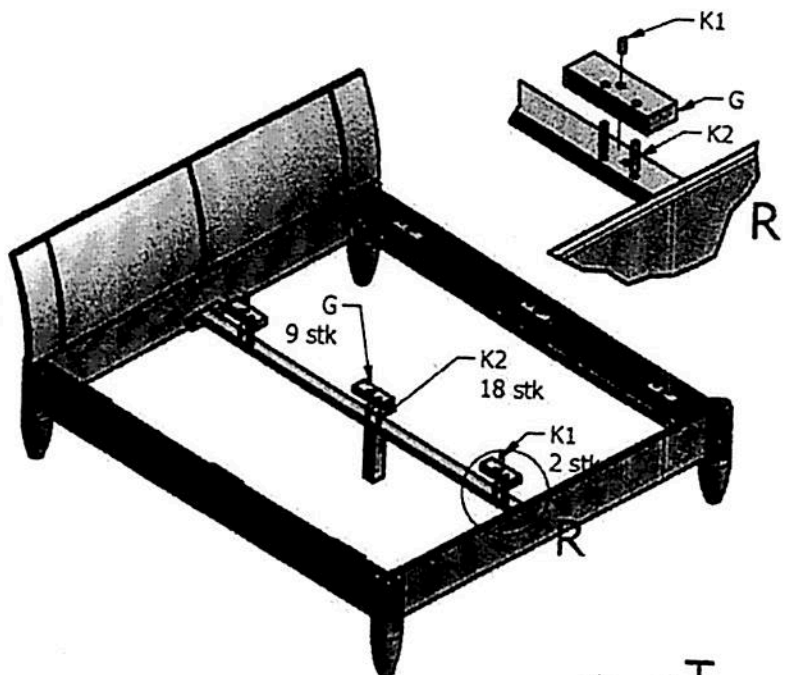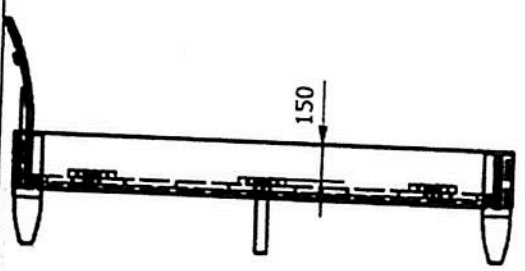

VARIANTE 3

