








FLORIS





30min

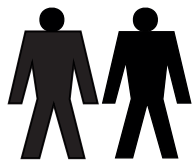



PZ2

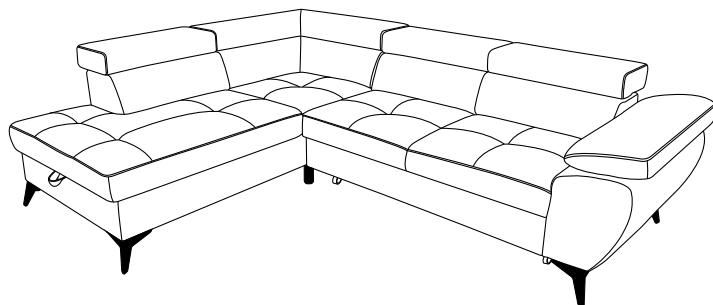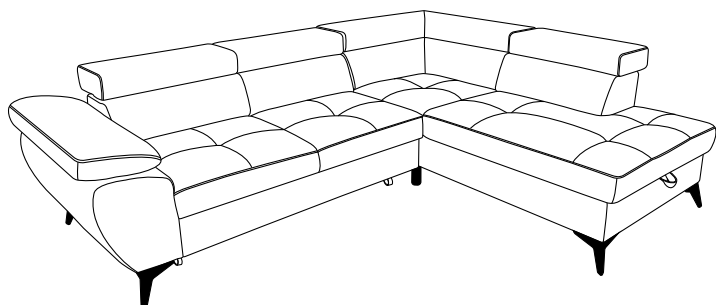


I

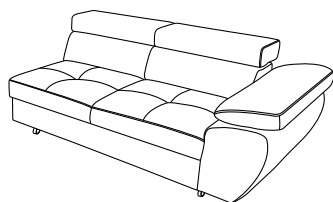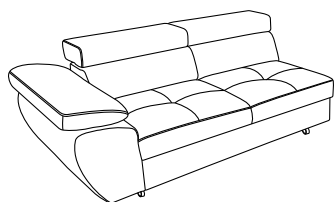

II

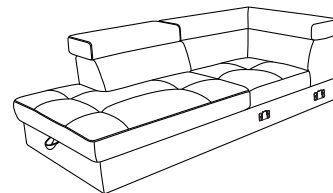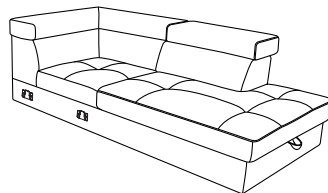


Ax4

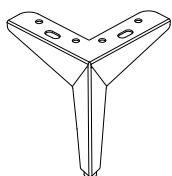

H=135 mm

Bx3




H=135 mm

Cx1



H=80 mm

Dx16




5x25



PZ2

Ex1




5x40



PZ2

1

Ax2

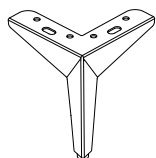


H=135 mm

Cx1



H=80 mm

Dx8







5x25



Ex1




5x40

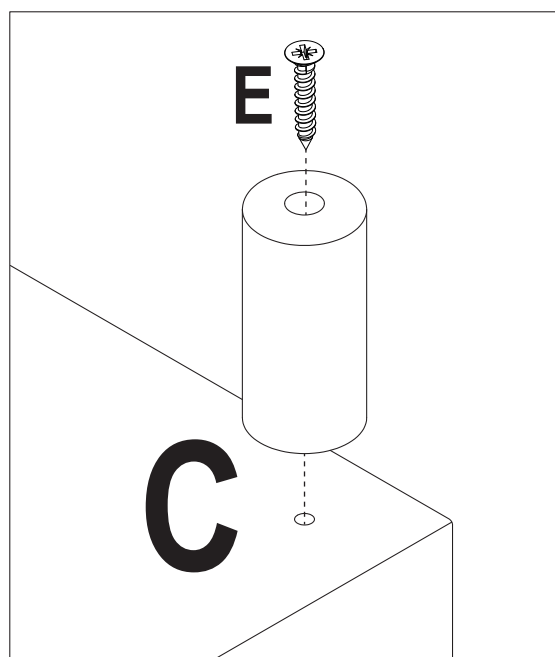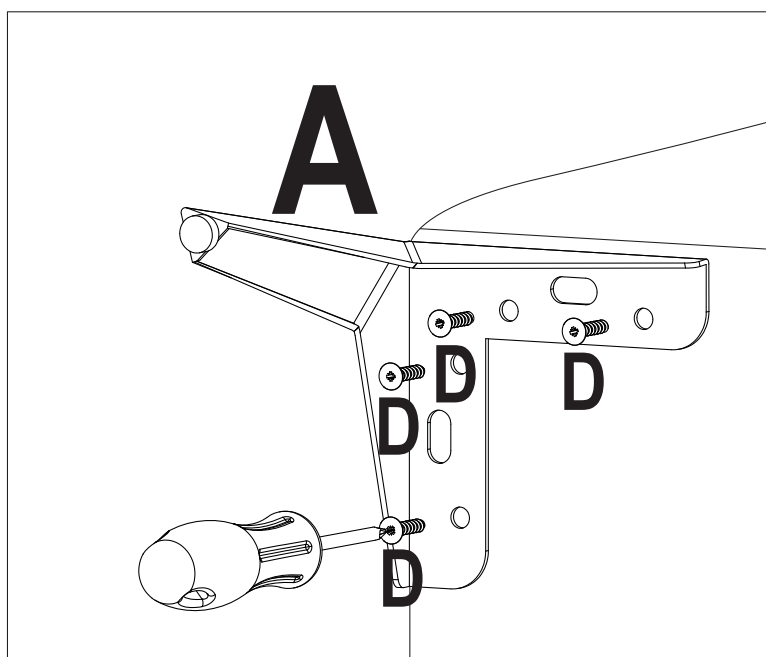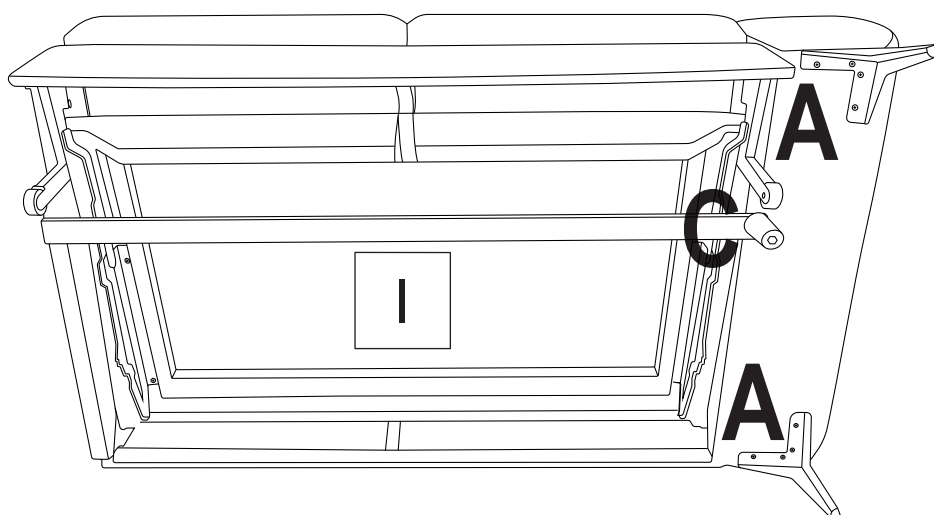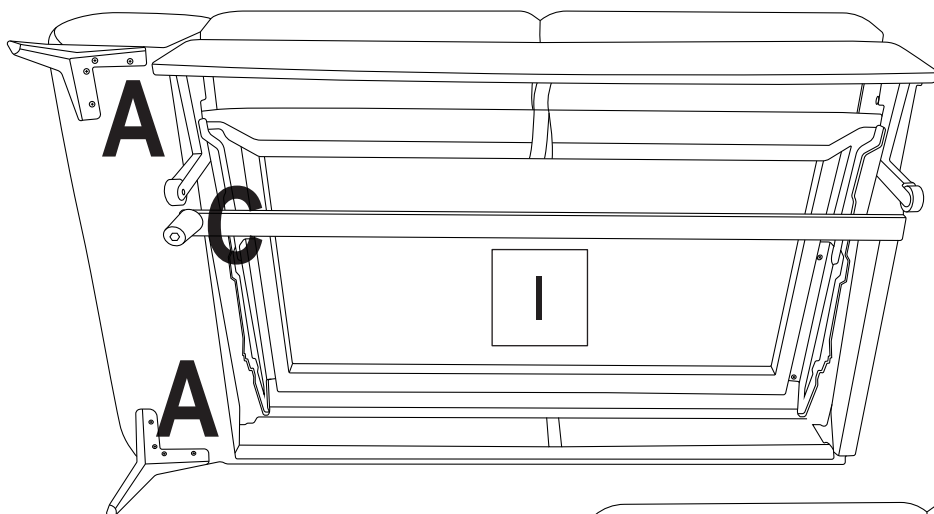

2

Ax2

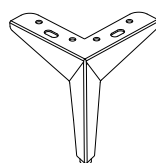


H=135 mm

Bx3



H=135 mm





Dx8




5x25



PZ2

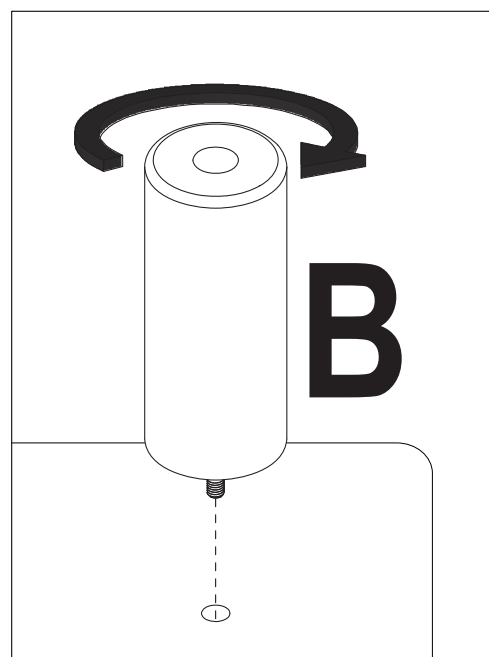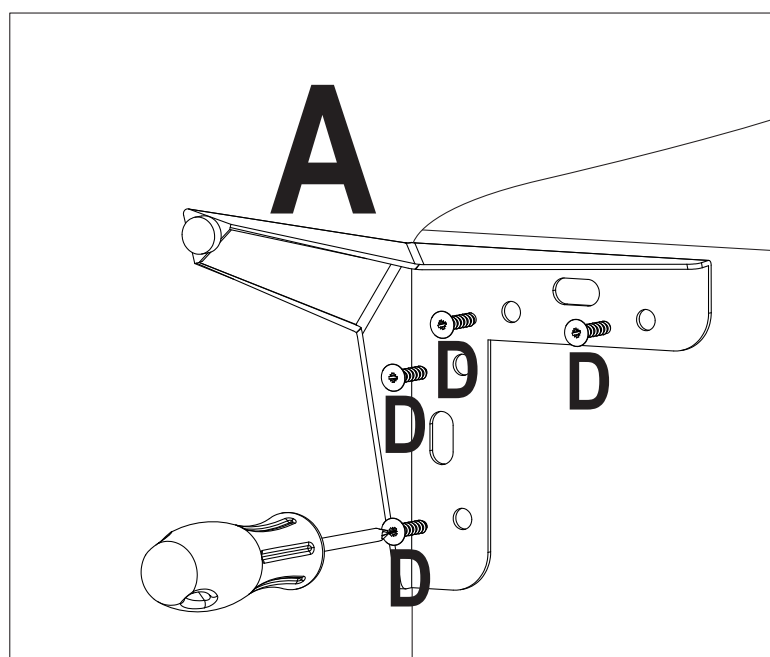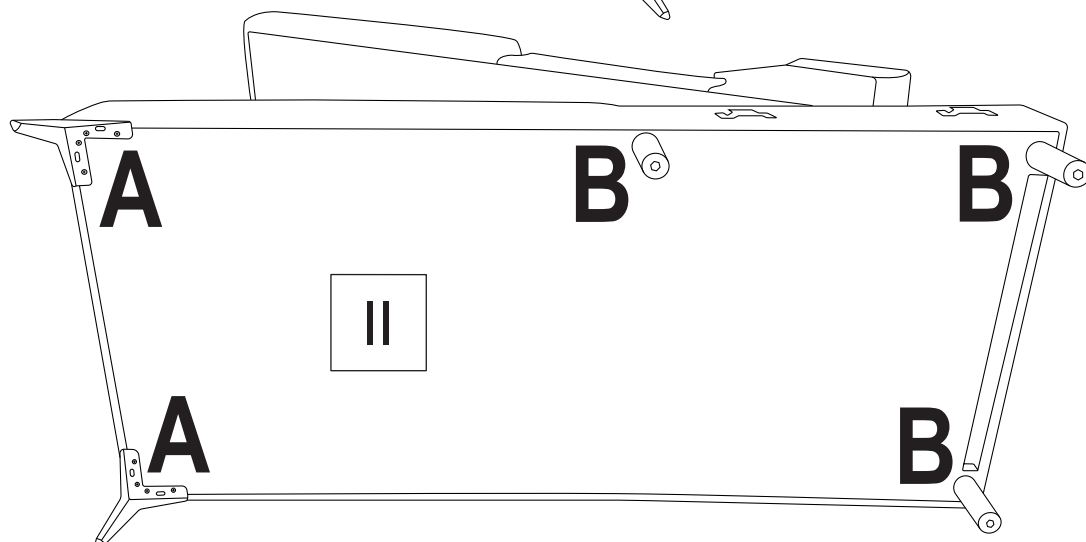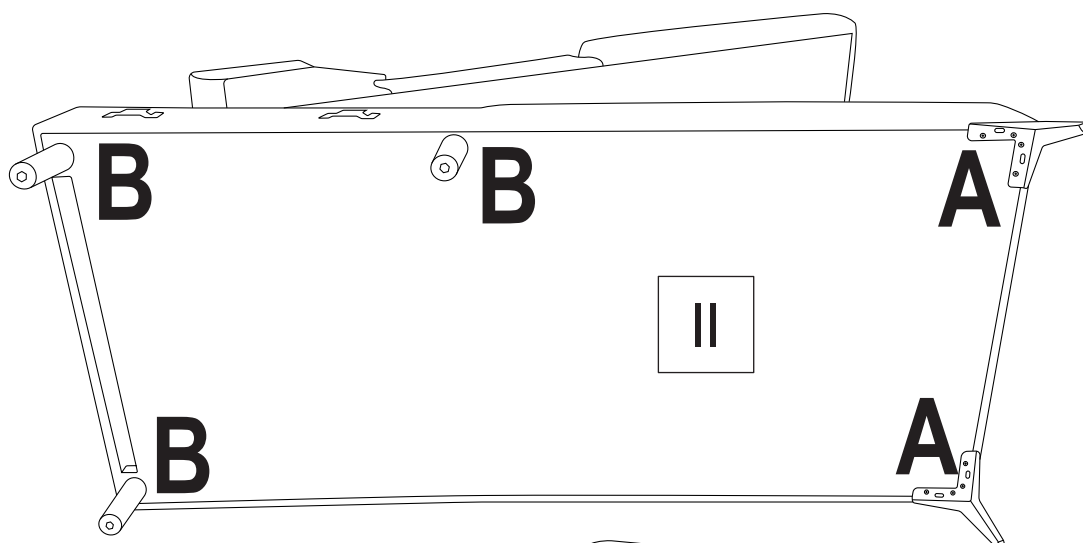

3

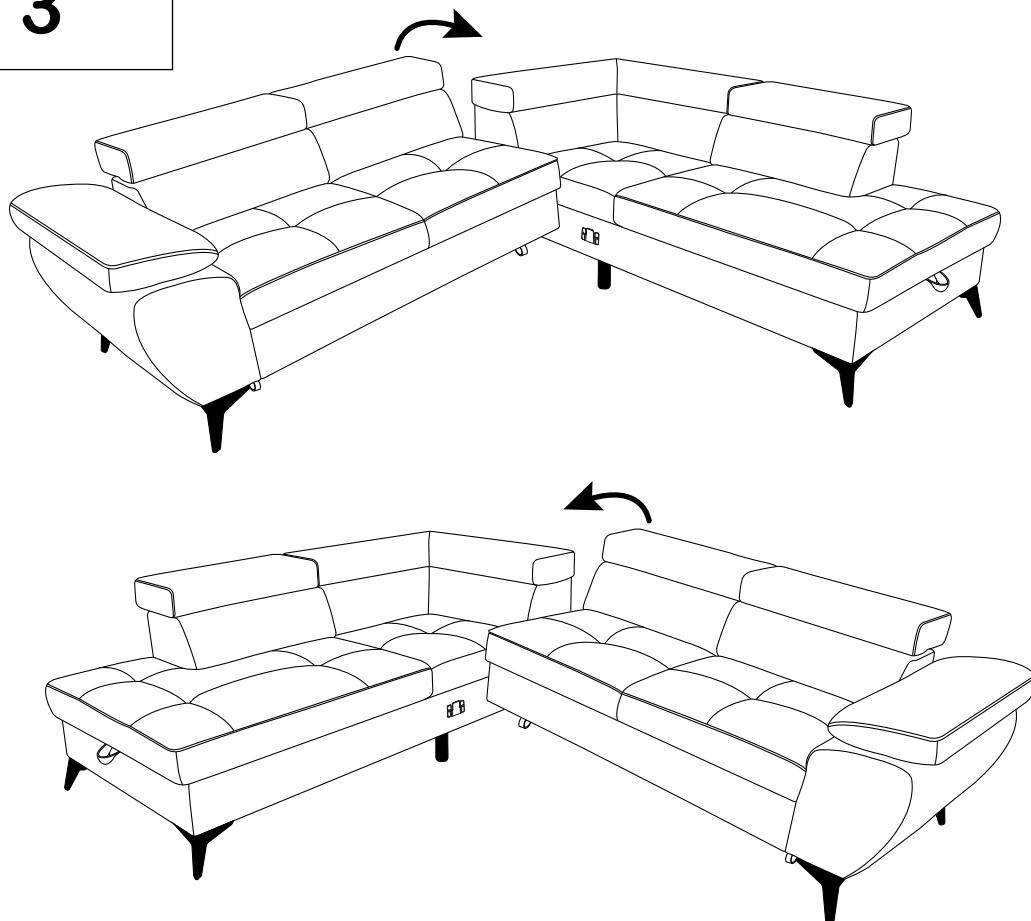

4

