




TOMASELLA

C L A S S

ASSEMBLY INSTRUCTIONS **VULCANO** 4/D SIDEBORD
WITH METAL BASE

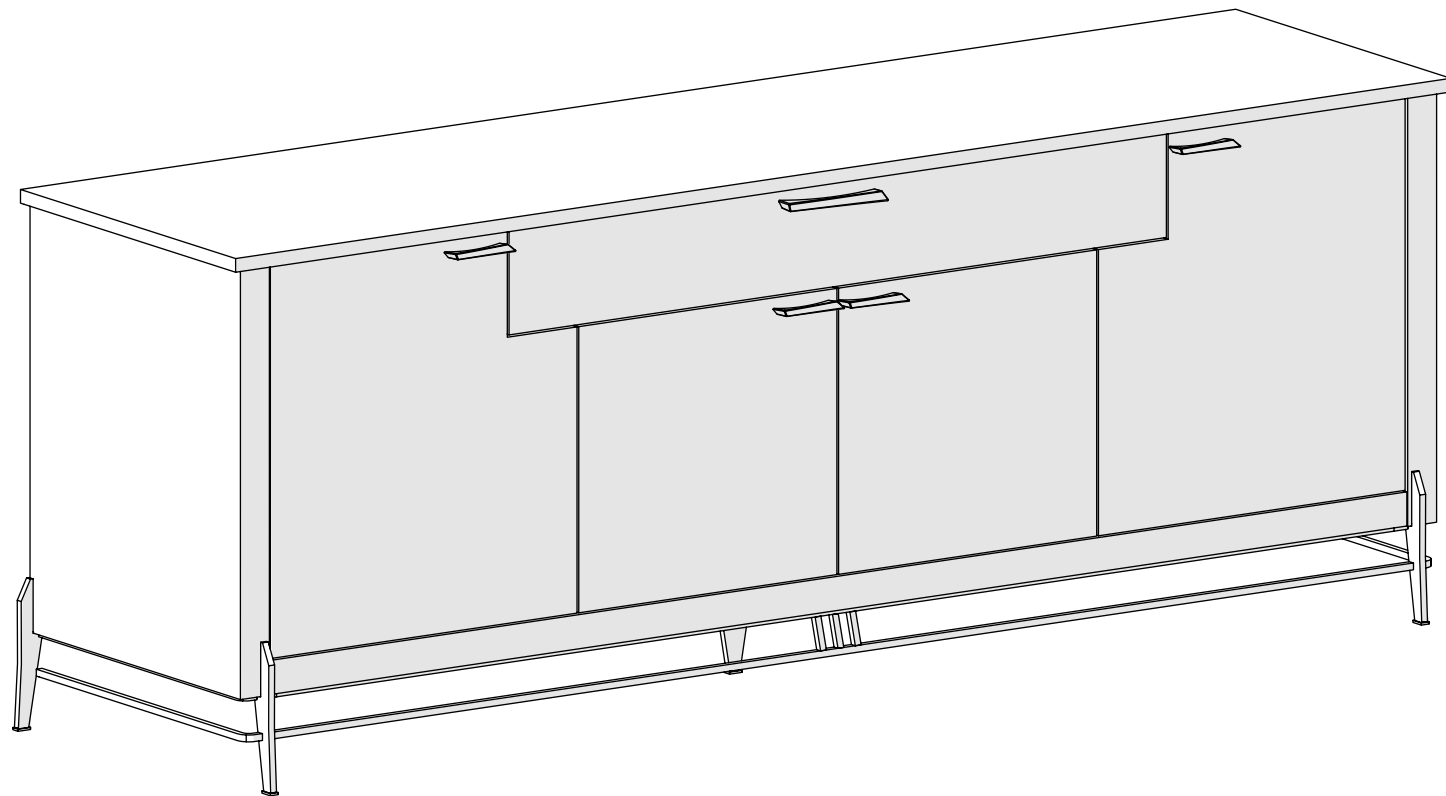


1 METAL BASE ASSEMBLING

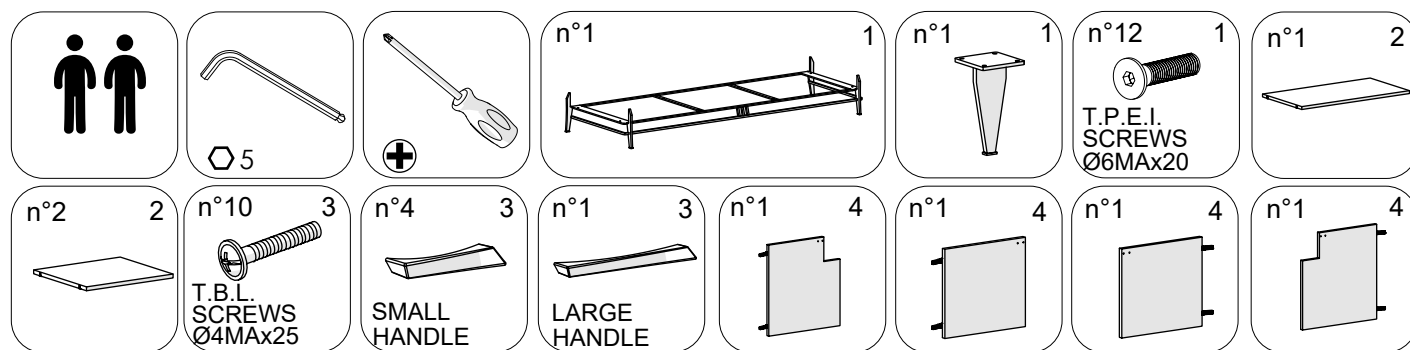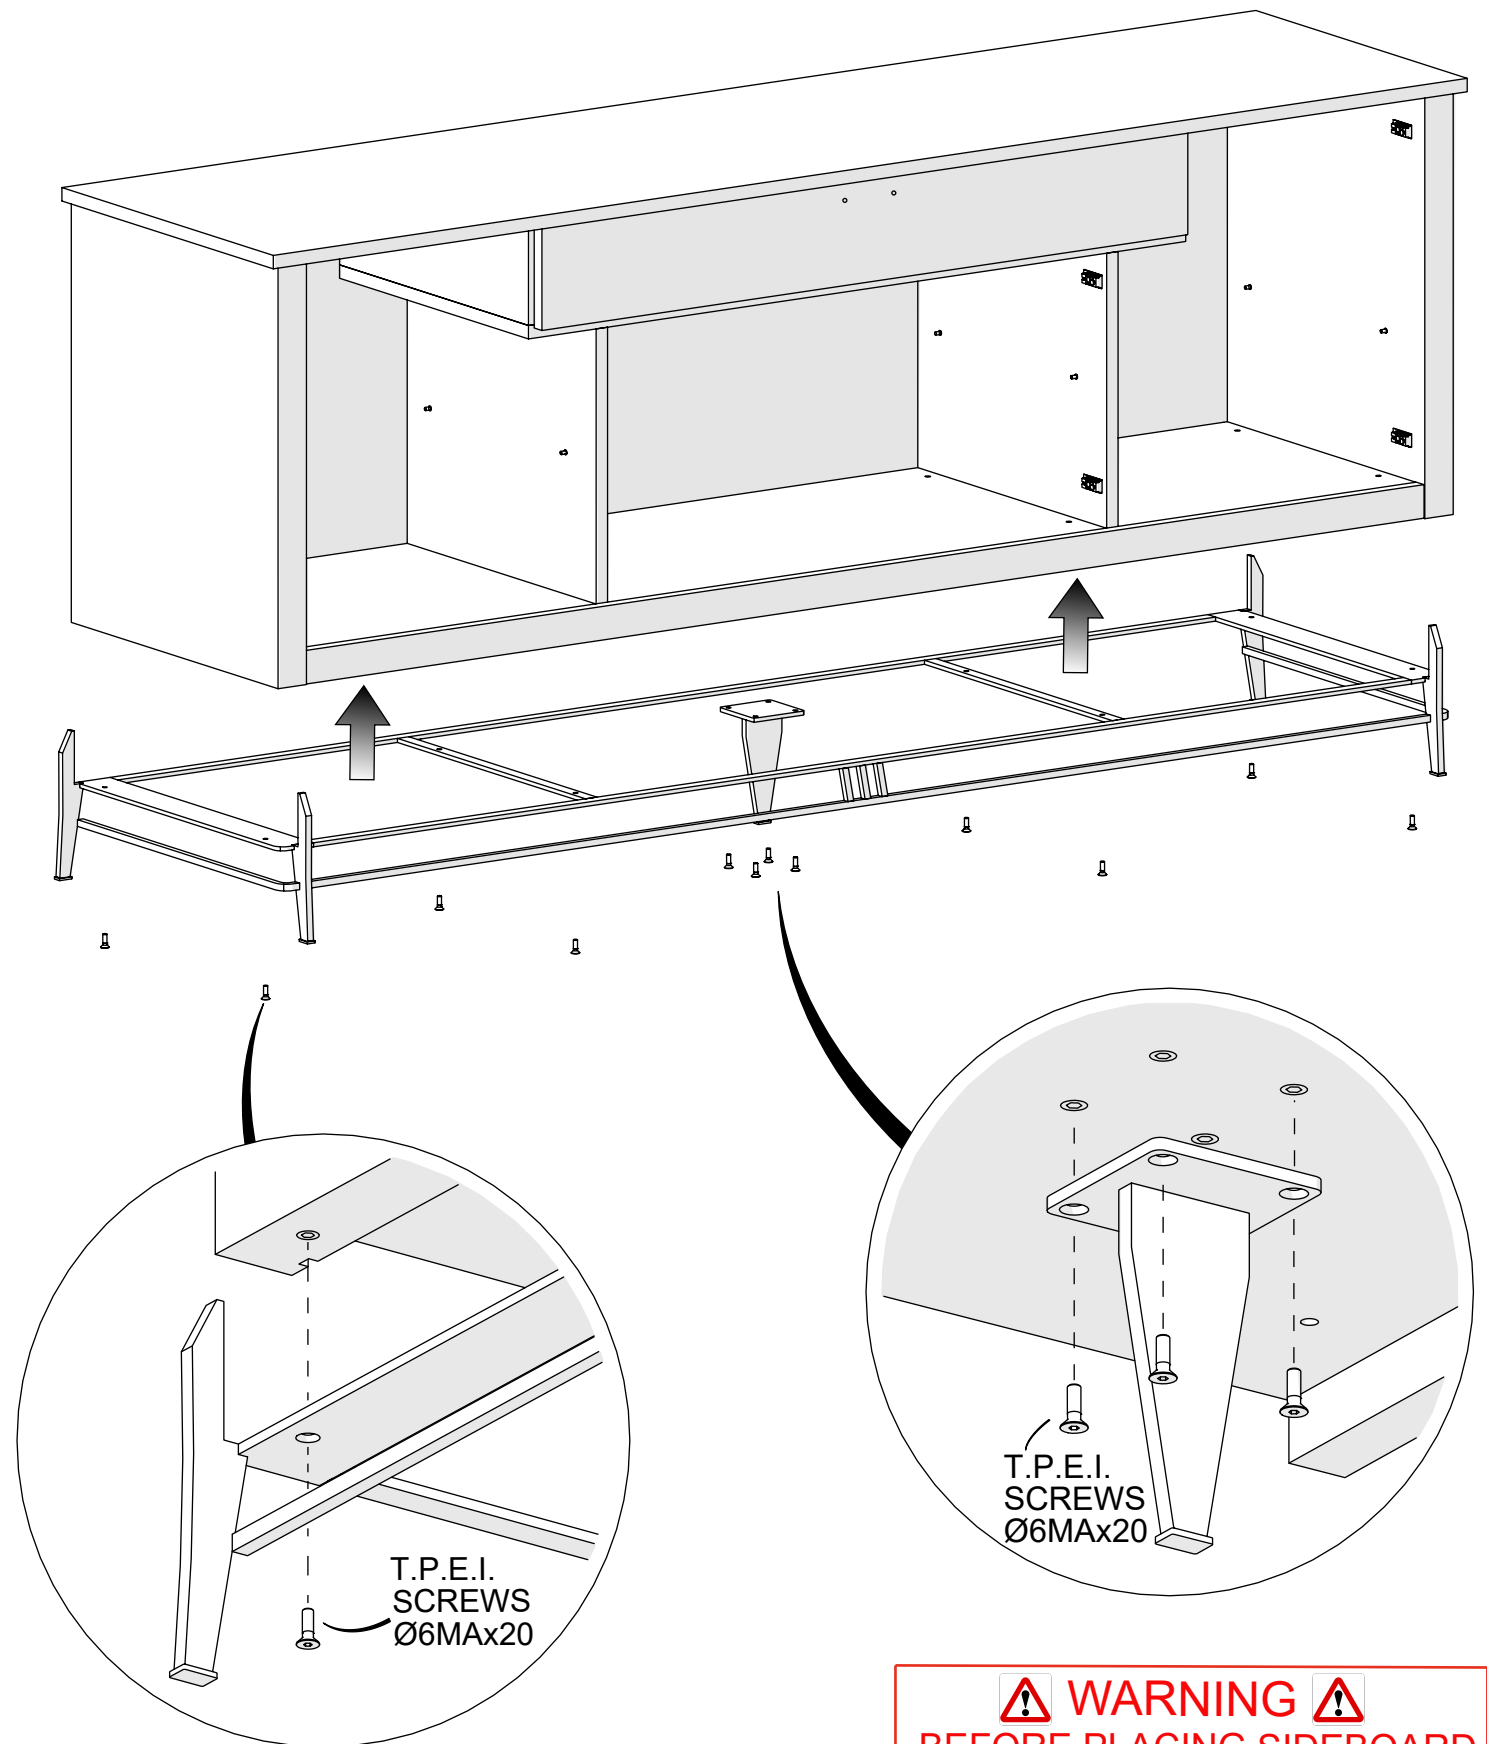


⚠ WARNING ⚠
BEFORE PLACING SIDEBORD
ON THE FLOOR,
THE CENTRAL FEET
MUST BE ASSEMBLED


2 SHELVES ASSEMBLING

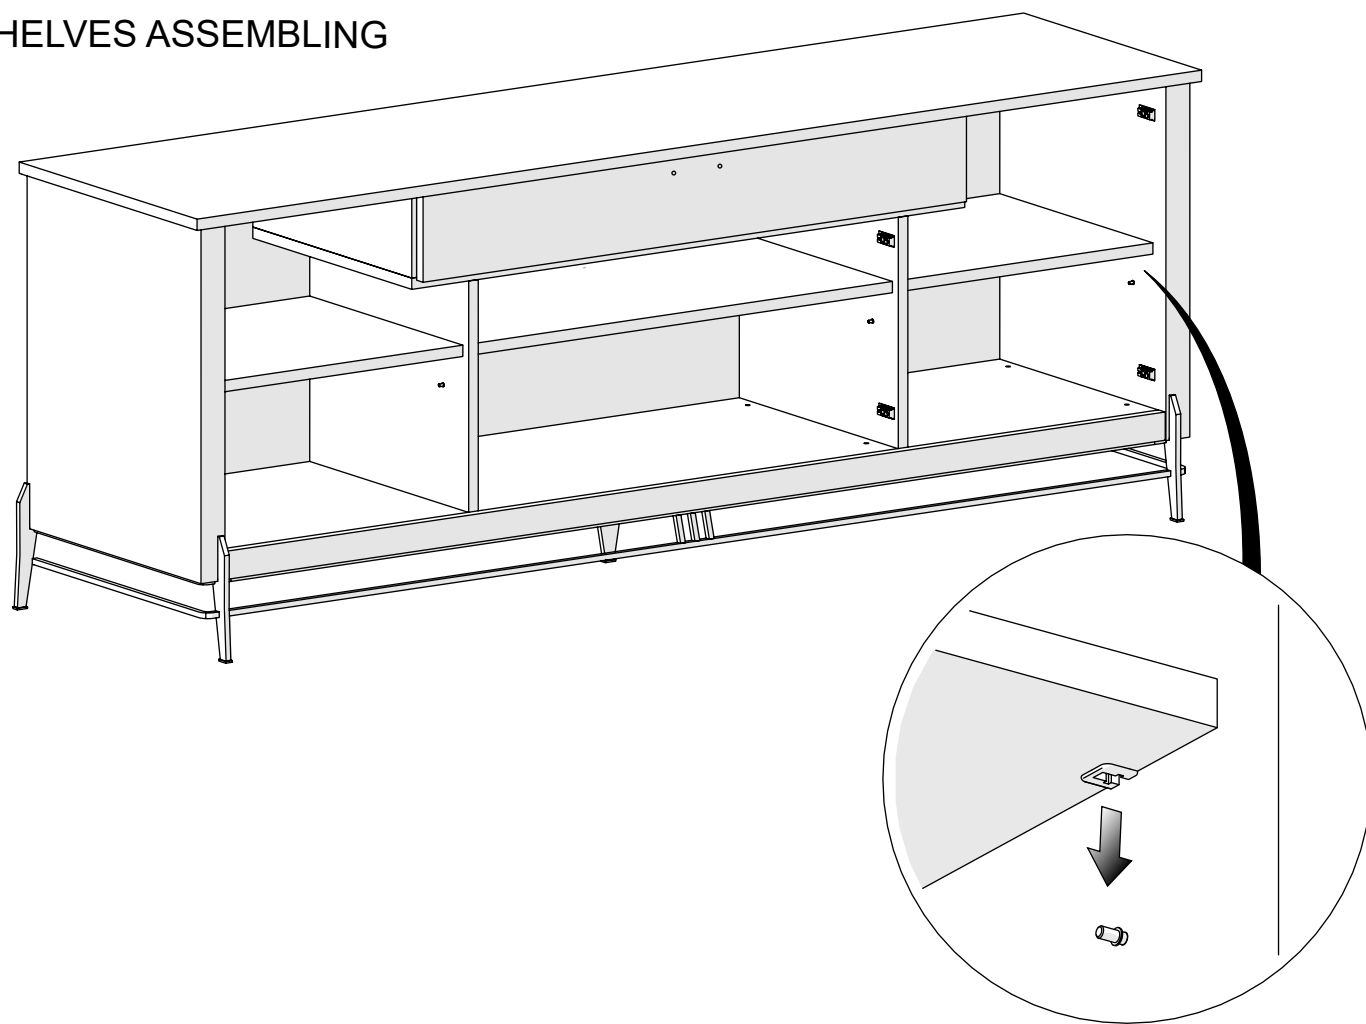


3 HANDLES ASSEMBLING

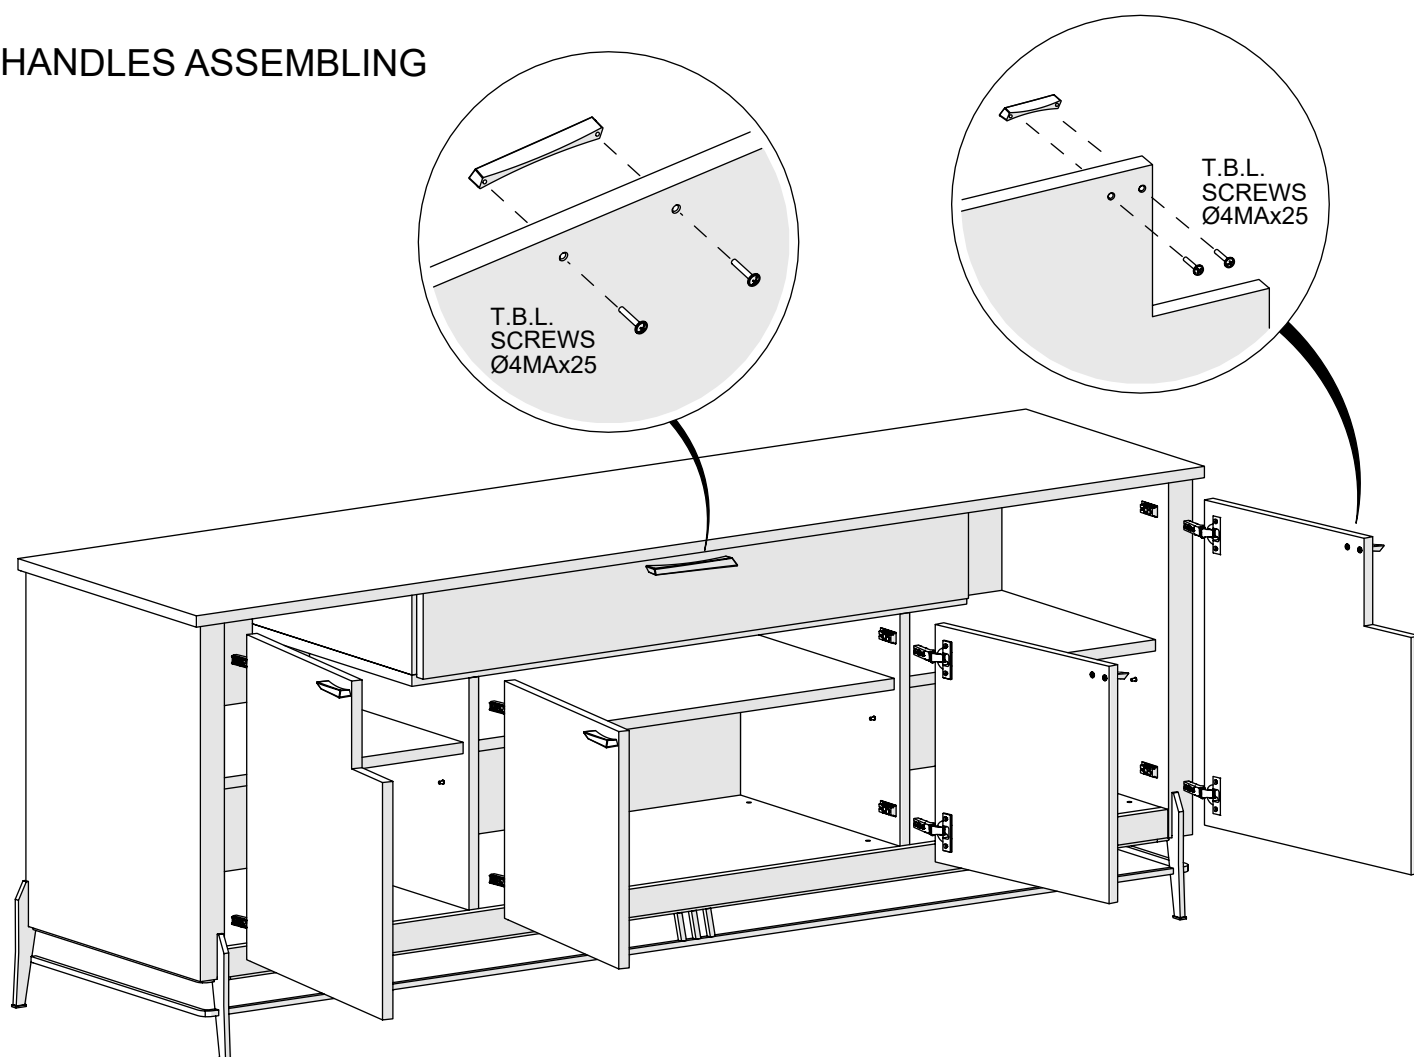


4 DOORS ASSEMBLING

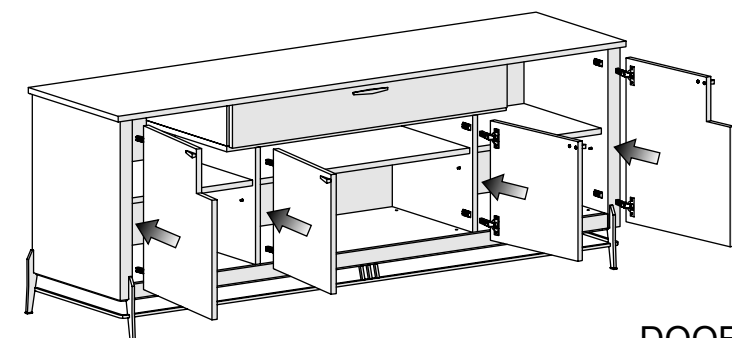


DOORS ASSEMBLING

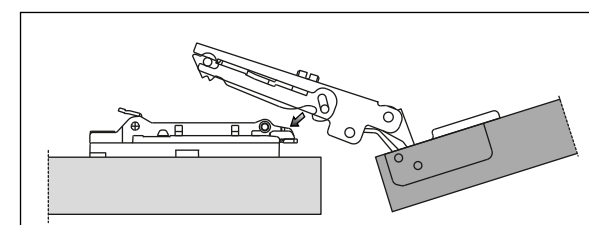


MOVE THE TWO POINTS CLOSER LIKE SHOWN BY THE ARROW

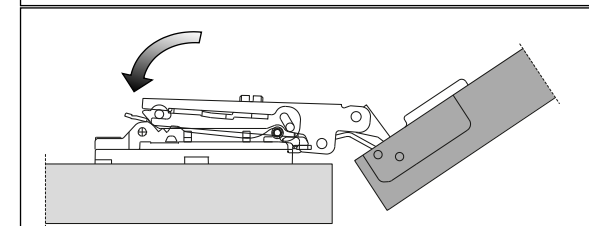

ROTATE SLIGHTLY

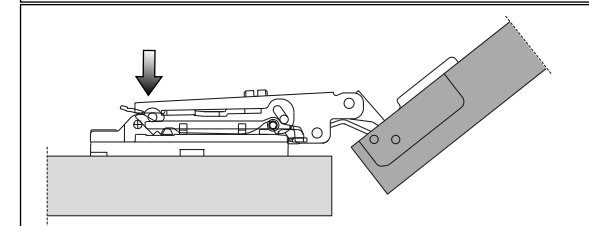

APPLY SLIGHT PRESSURE

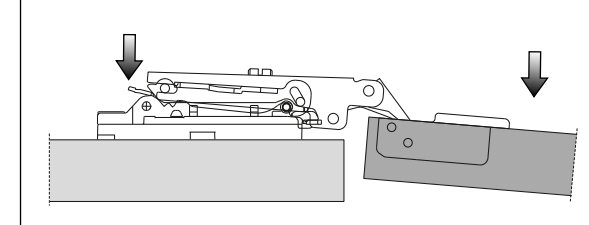

TO UNCOUPLE THE HINGE, PRESS TO POINTS INDICATED BY THE ARROWS

DOOR ADJUSTMENT

