

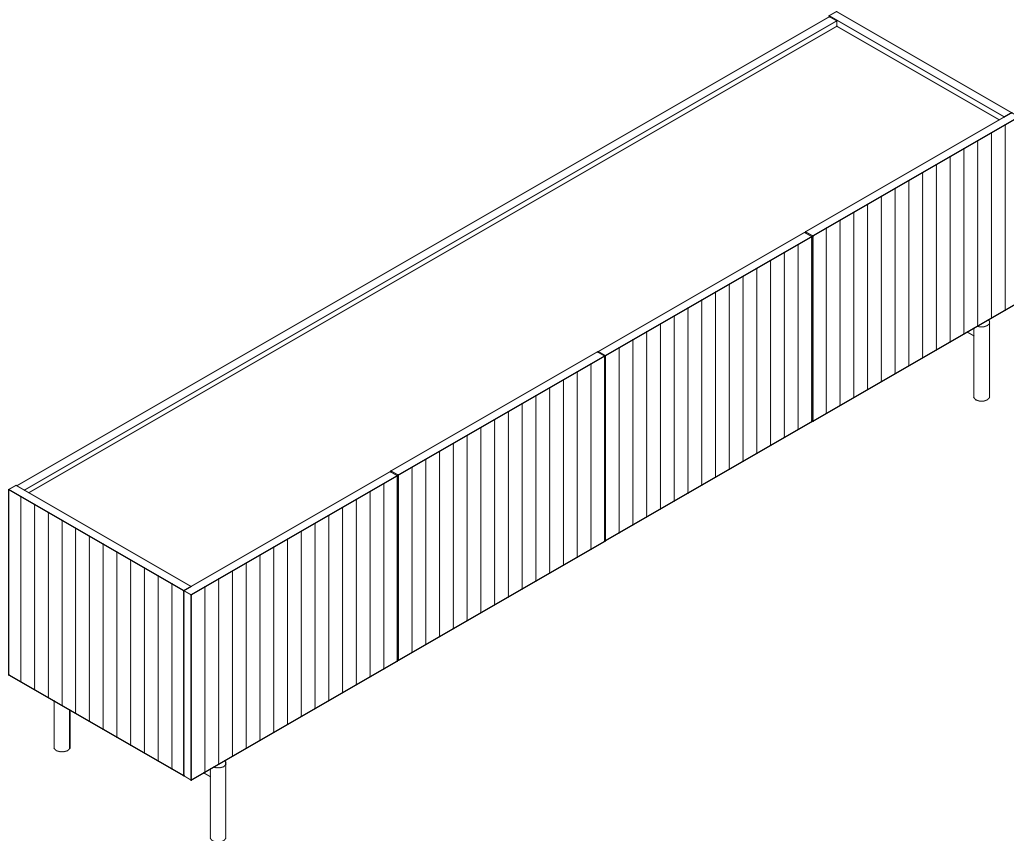
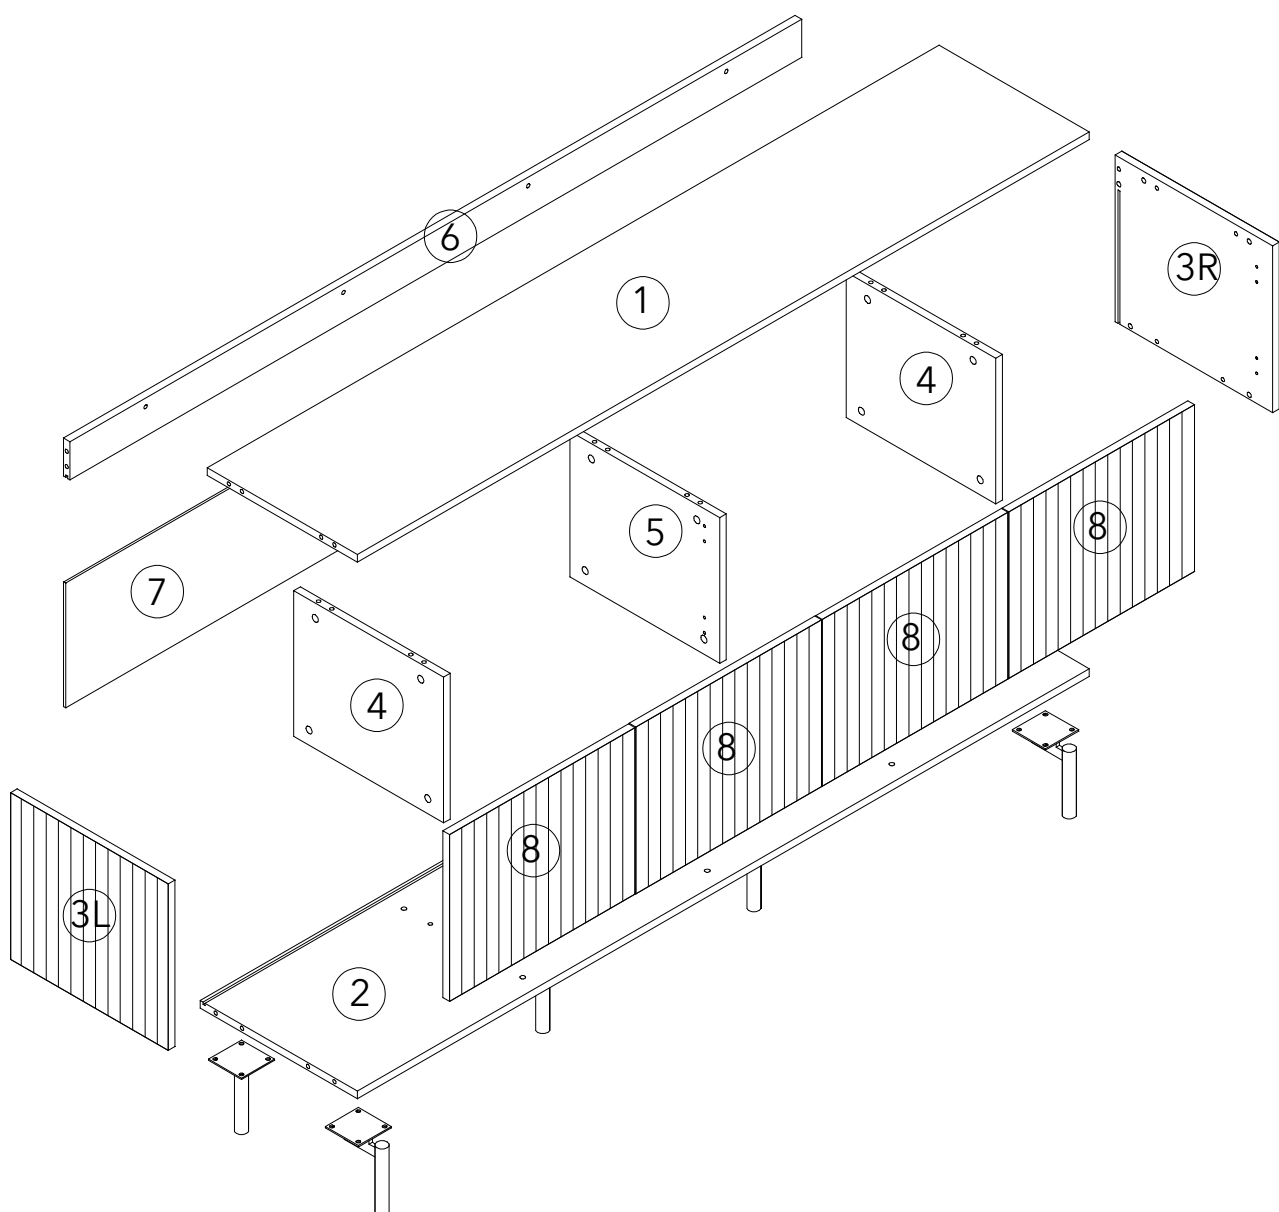
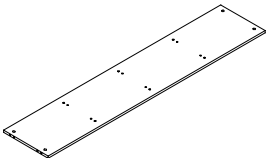
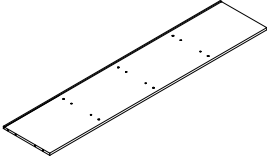



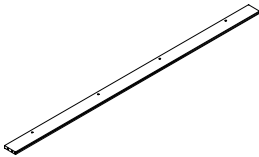











E6GT02

INSTRUCTION MANUAL

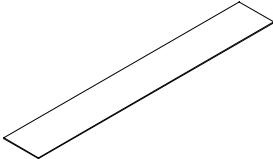


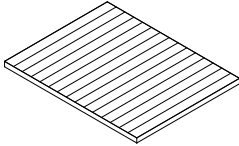


Ref	Dimensions(mm)	Visual	Qty
1	1774x364x16		1
2	1774x381x16		1
3	350x382x16		2
4	306x363x16		2
5	306x363x16		1
6	1774x80x16		1
7	1784x262x5		1
8	350x450x16		4

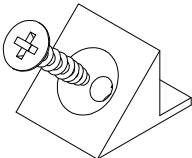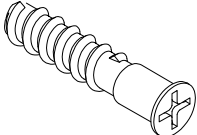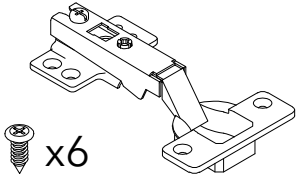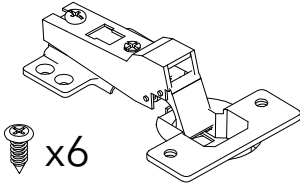								
A	M6x40mm	22pcs	B	Ø15x11.5	22pcs	C	Ø8x30	22pcs
								
N	/	8set	I	M6x12mm	24pcs	J	M7x50mm	4pcs
								
M	Flat hinge	4set	K	Small bend	4set	Z	Ø20	22pcs
								
L	/	2pcs	T	/	4pcs			


Step 1:

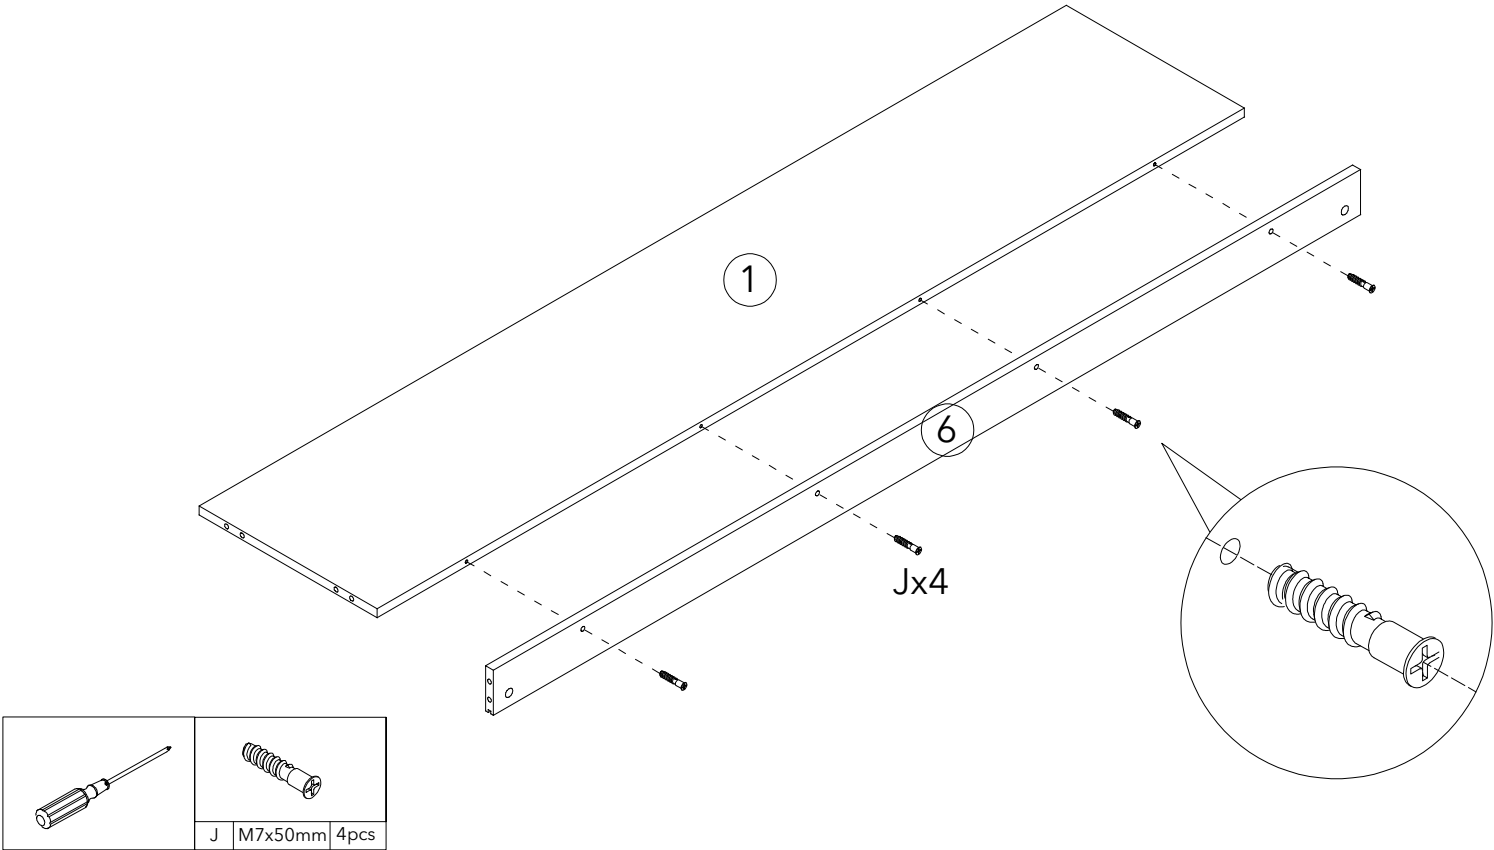


Step 2:

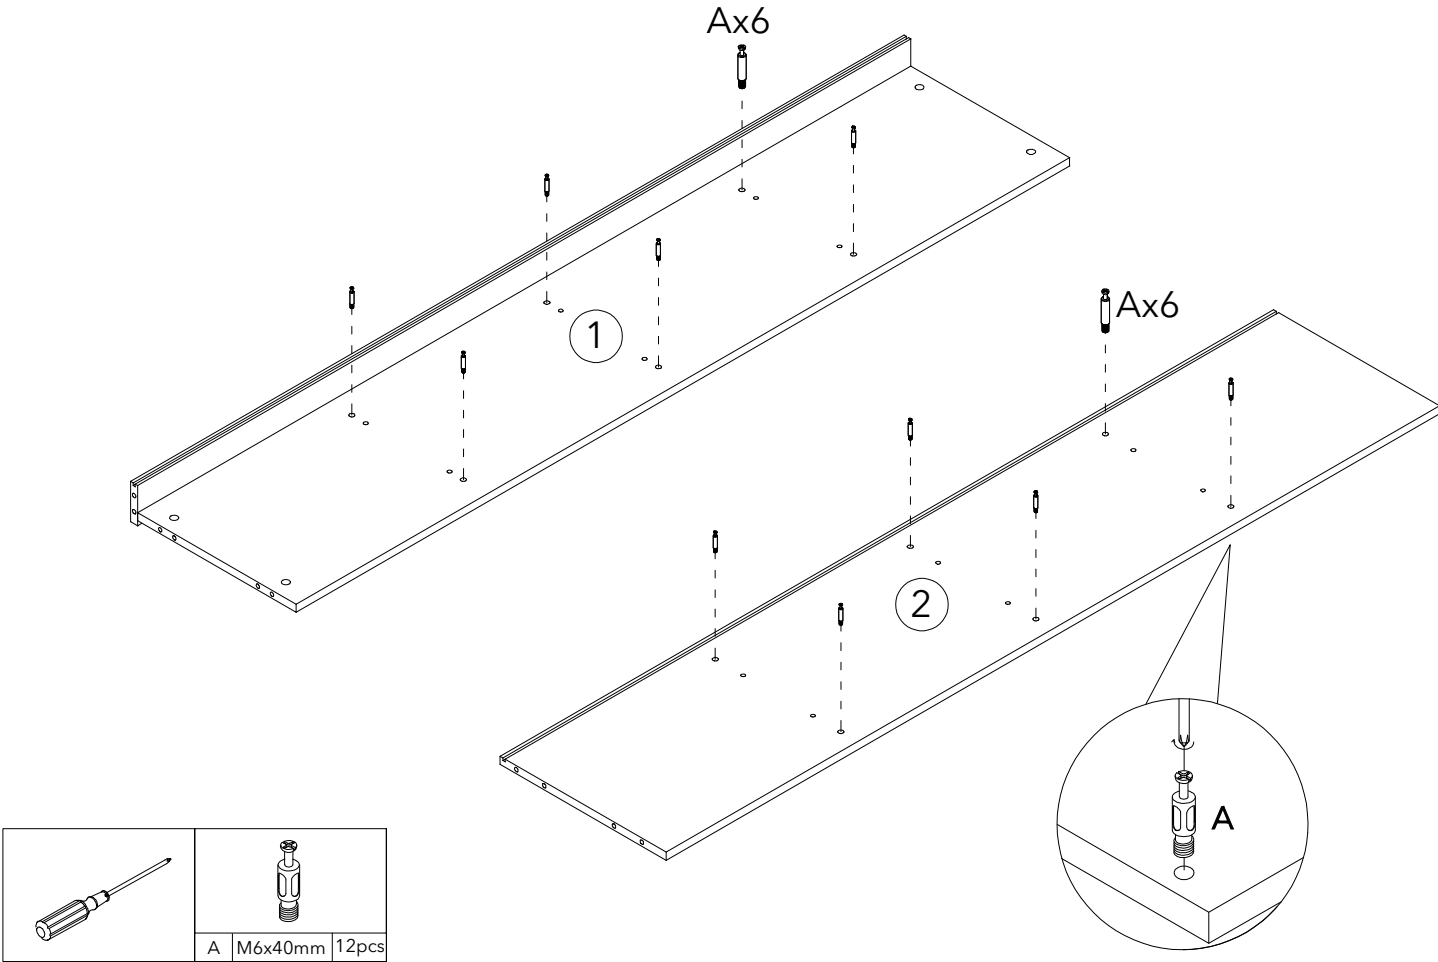

Step 3:

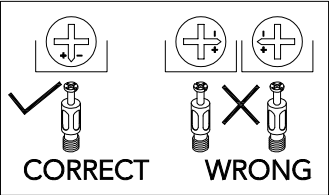


Please note that the locking cam faces outwards

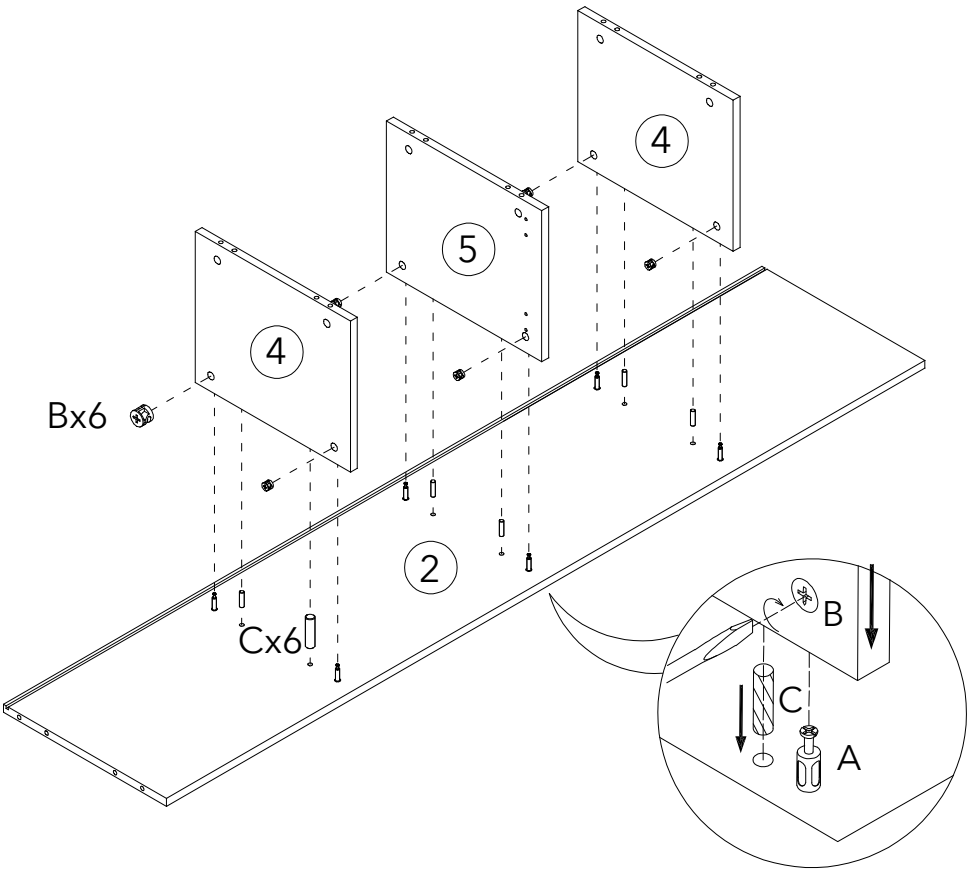


	C	Ø8x30	6pcs
	B	Ø15x11.5	6pcs


Step 4:

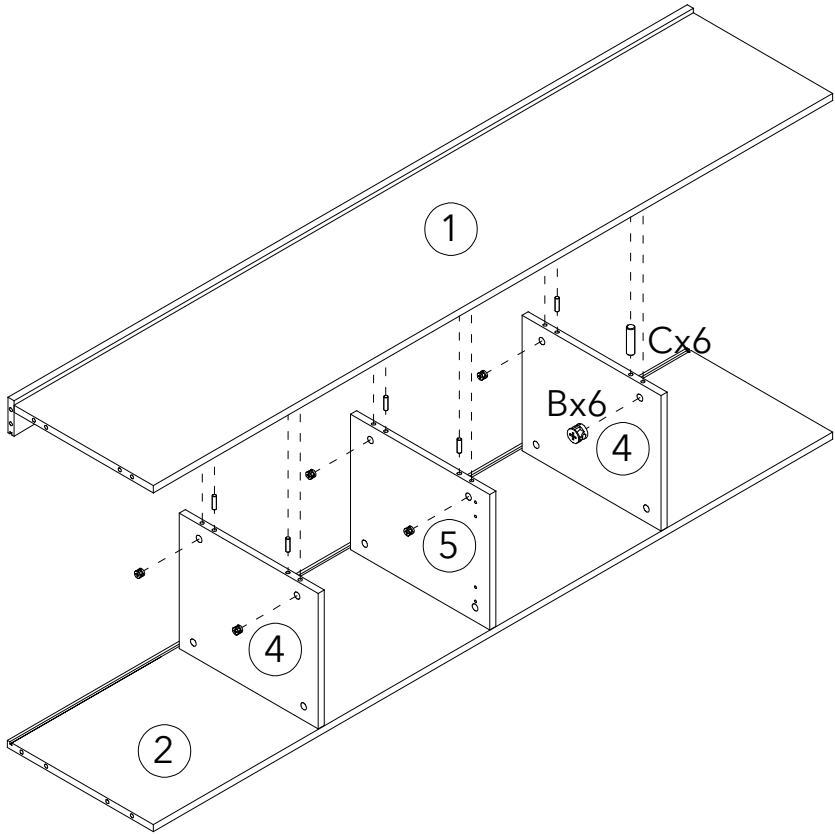


	C	Ø8x30	6pcs
	B	Ø15x11.5	6pcs


Step 5:

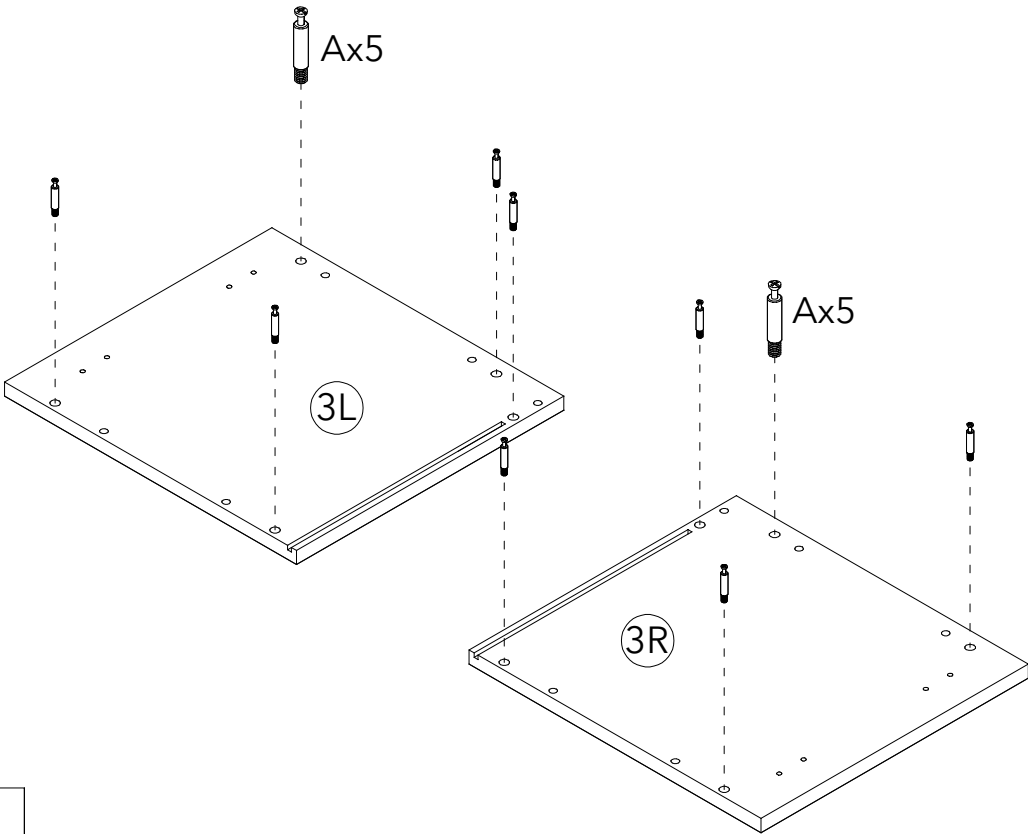


			
	A	M6x40mm	10pcs

Step 6:

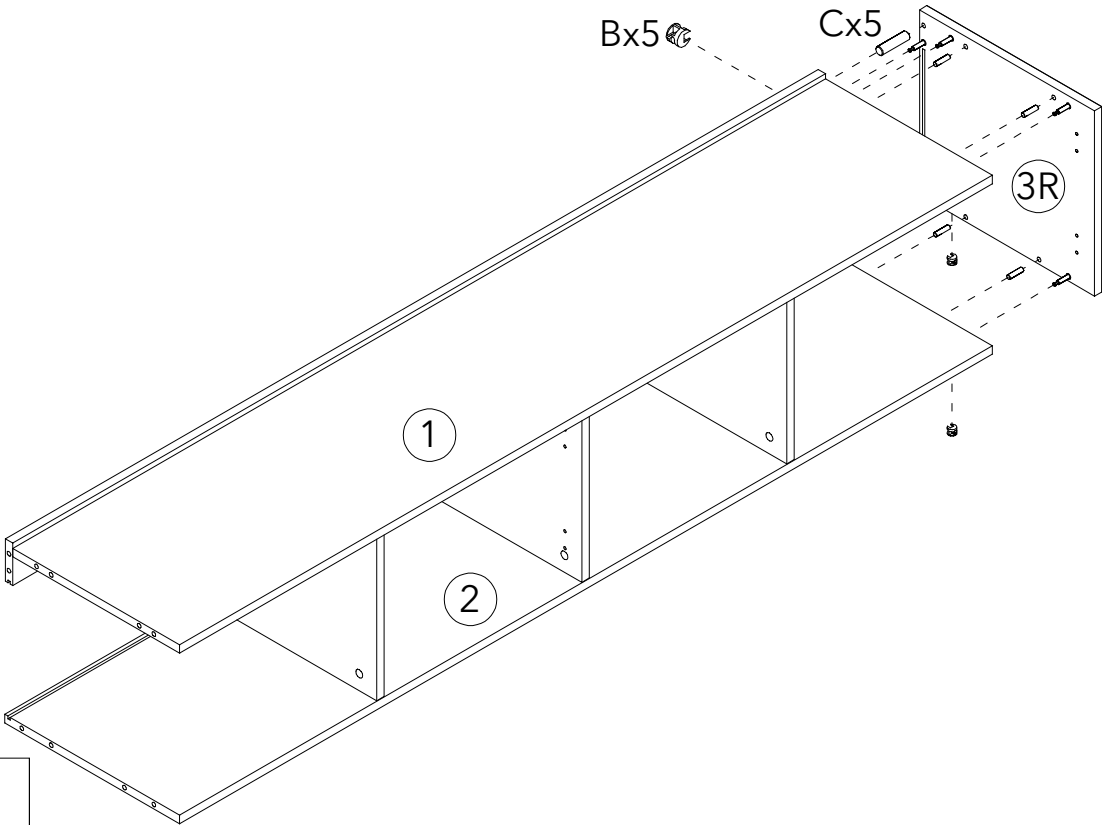


			
	C	Ø8x30	5pcs
			
	B	Ø15x11.5	5pcs


Step 7:

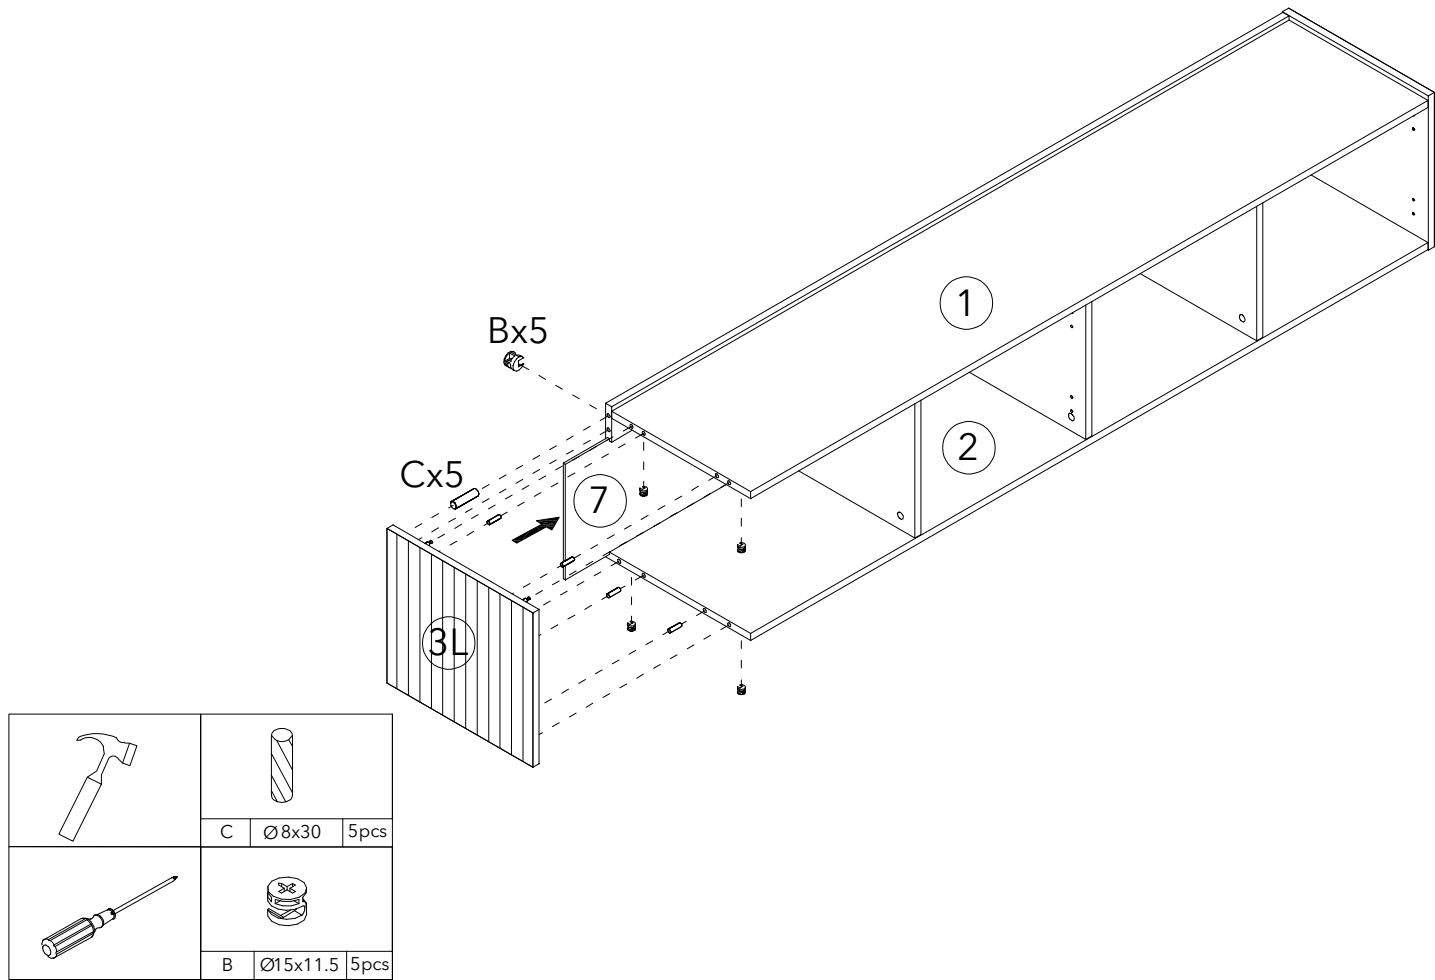


Step 8:

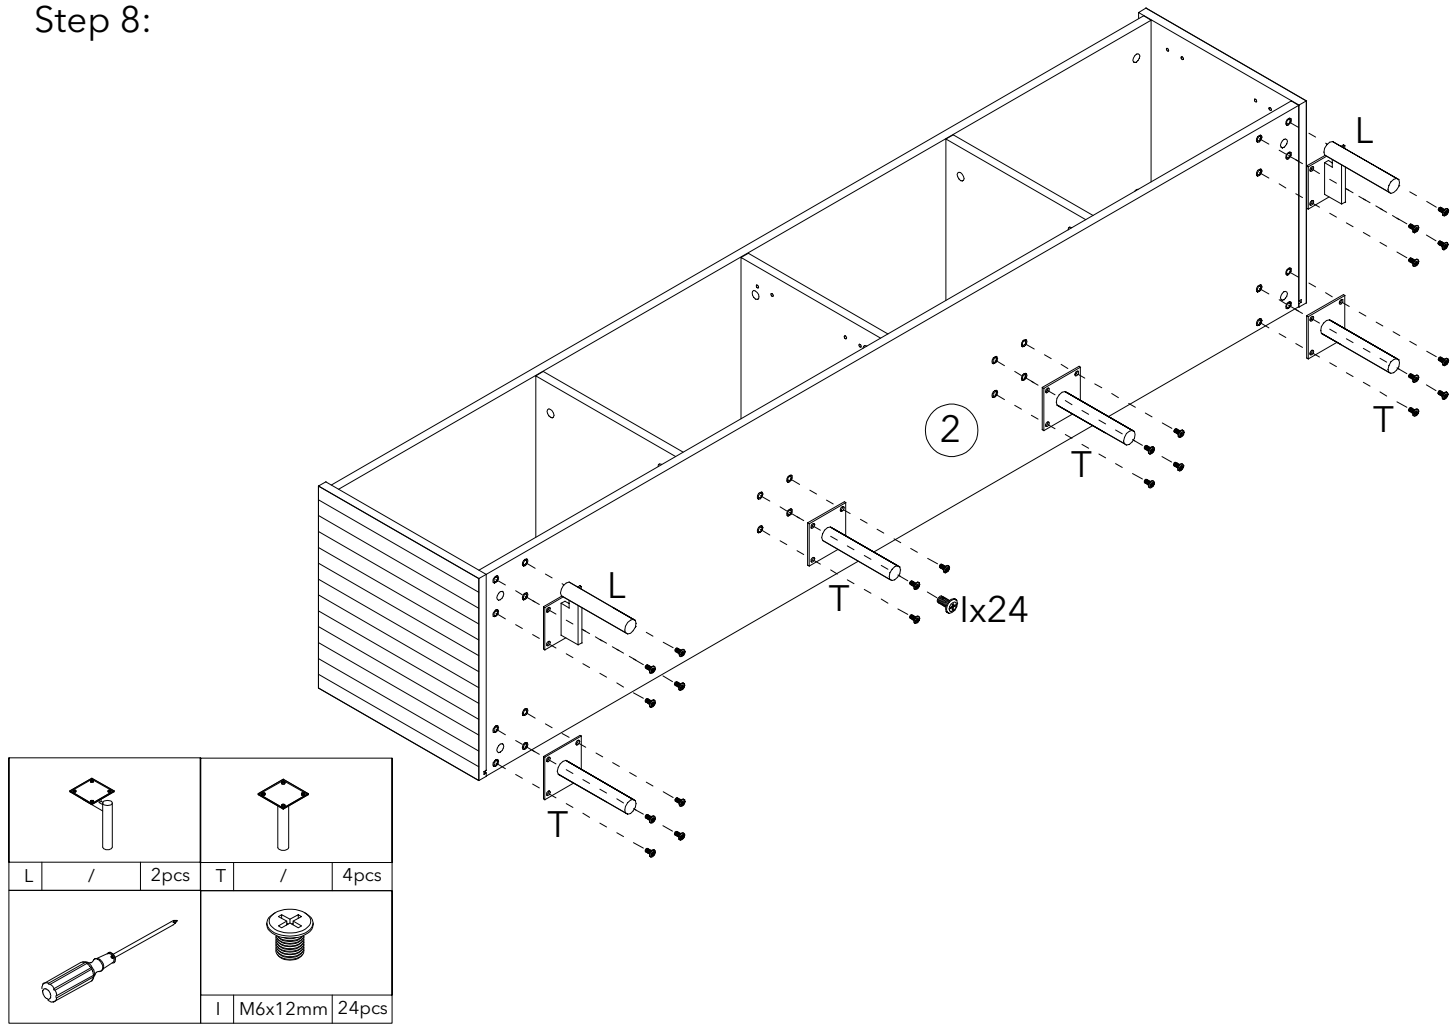


Step 9:

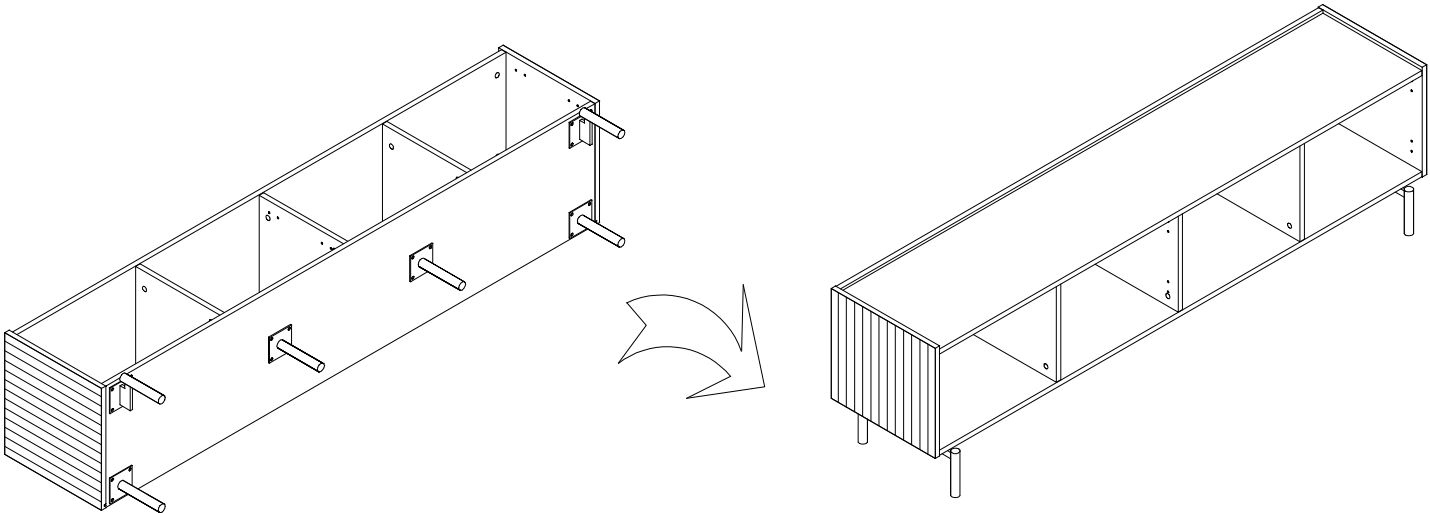

Step 10:

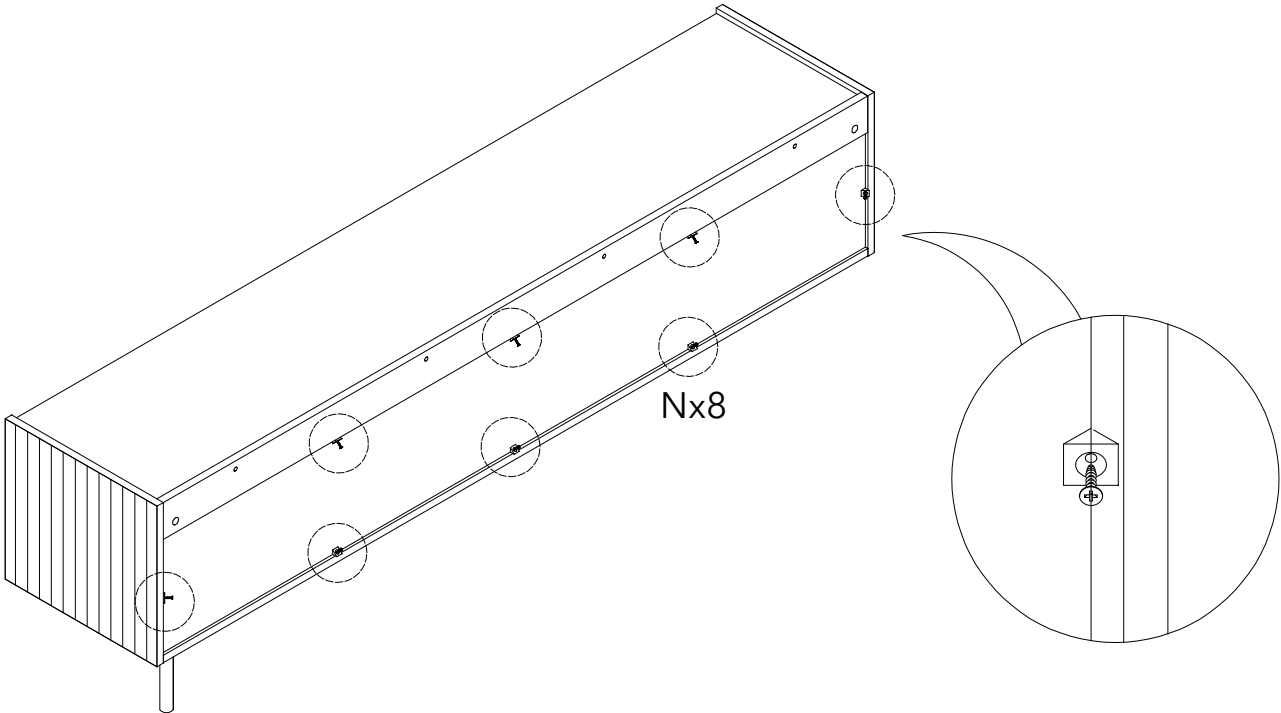











N	/	8pcs
---	---	------




Step 11:

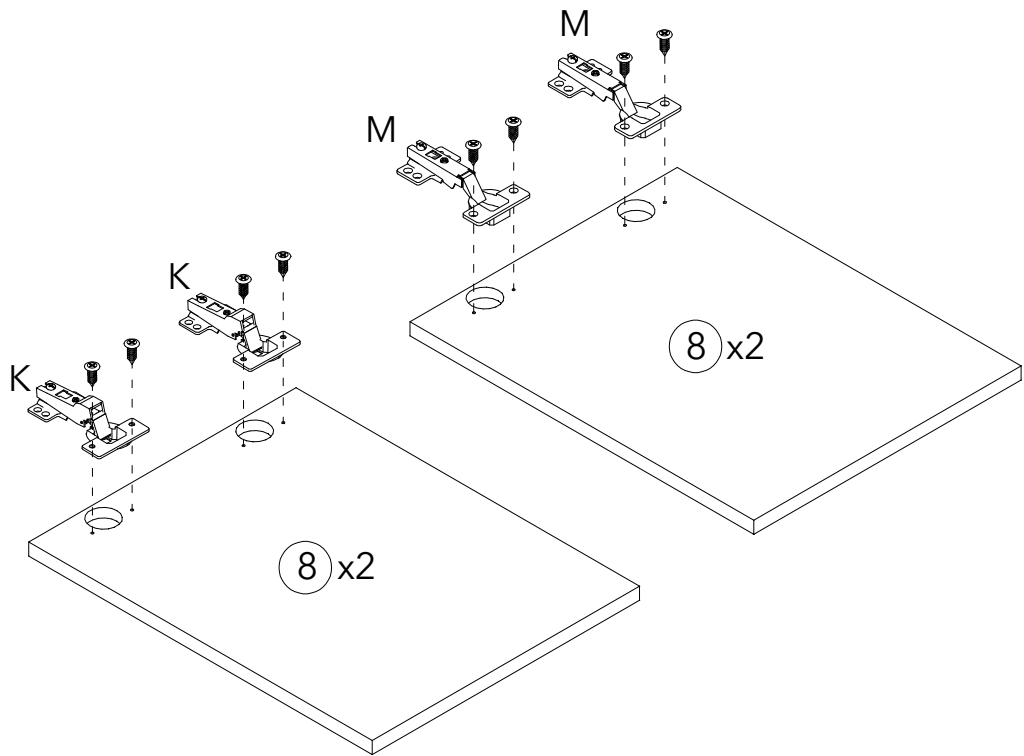


	 x6	 x6
M	Flat hinge 4set	K Small bend 4set




Step 12:

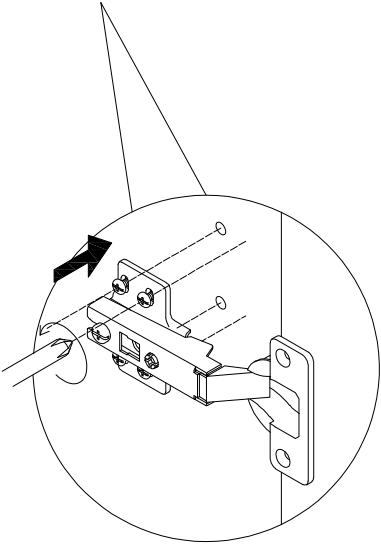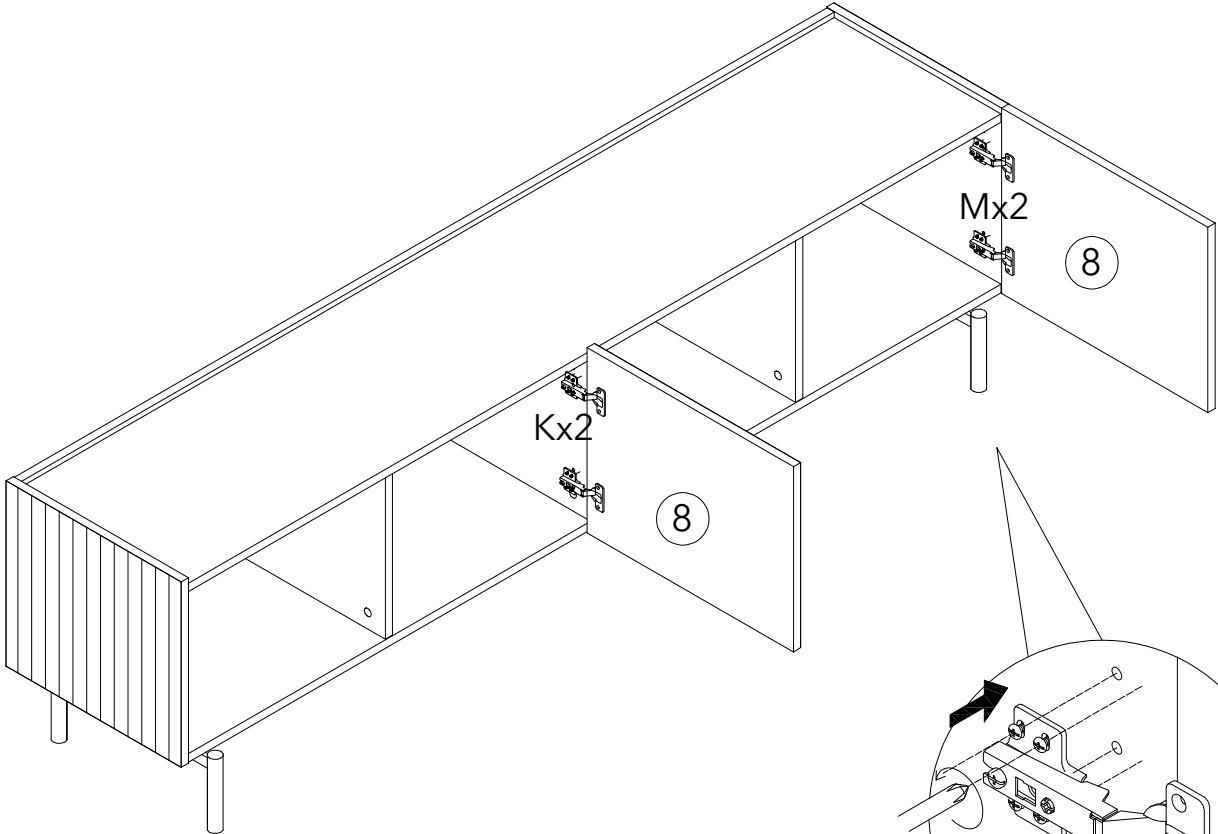


	 x6	 x6
M	Flat hinge 2set	K Small bend 2set

Step 13:

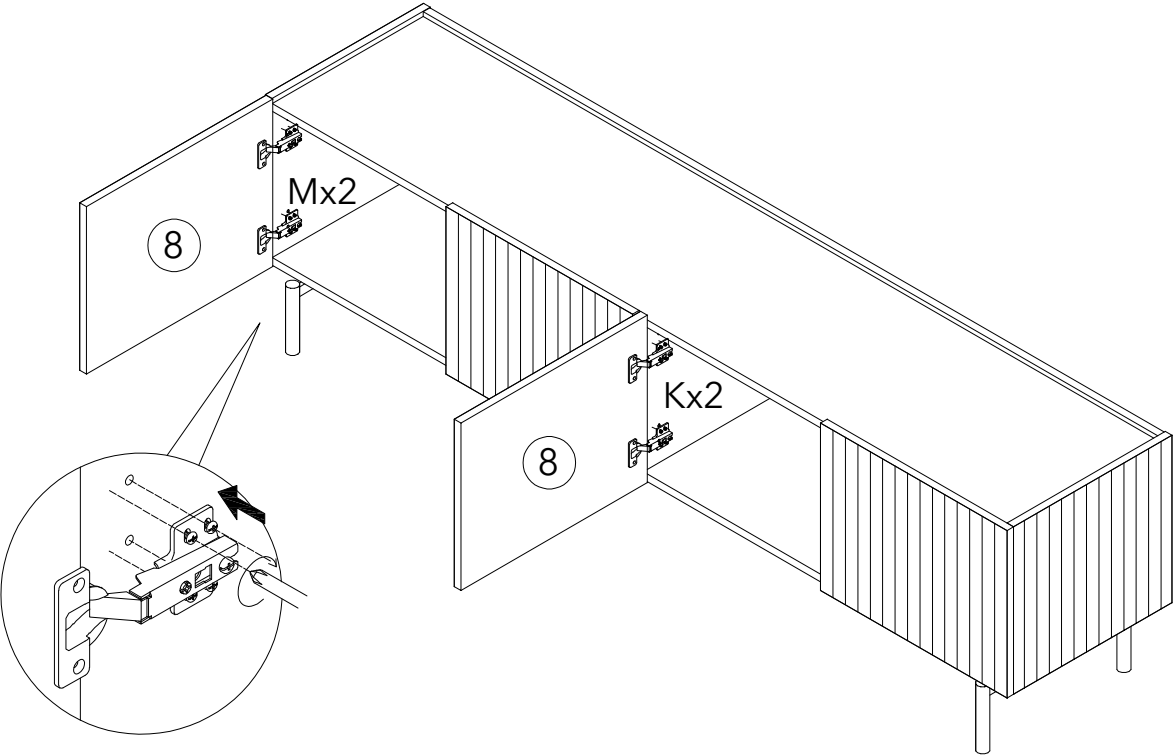

					
M		Flat hinge		Small bend	
x6		2set		2set	

Step 14:

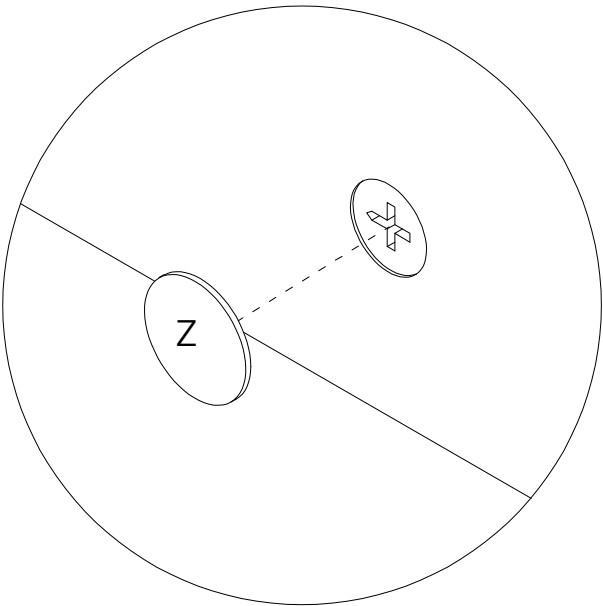

Add the screw covers
for those visible cams

		
Z	Ø20	22pcs

final product

