



Gebrauchsanleitung








1:1
DIN A3






ca. 1,5h












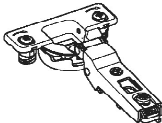


A  12x 681 0759	B  9x 681 0757	C  4x 681 1645	D  3,5 x 13 4x 681 4887	E  4x 681 8126	F  6x 681 2793	G  4x 681 8061	H  4x 681 0351	
I  M6 x 40 4x 681 3955	J  SW4 1x 681 3011	K  6x 681 2497		L  6,3 x 15 6x 681 5060	M  8x 681 2498	N  12x 681 0350	O  4x 681 8060	P  M4 x 22 4x 681 3807
X  11x 683 0101		Z  6x 681 2552						

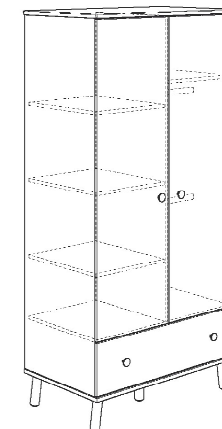


YLVIE
115 1011
YLVIE
115 1016

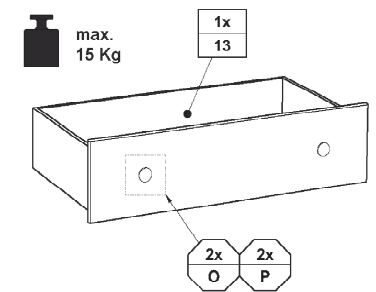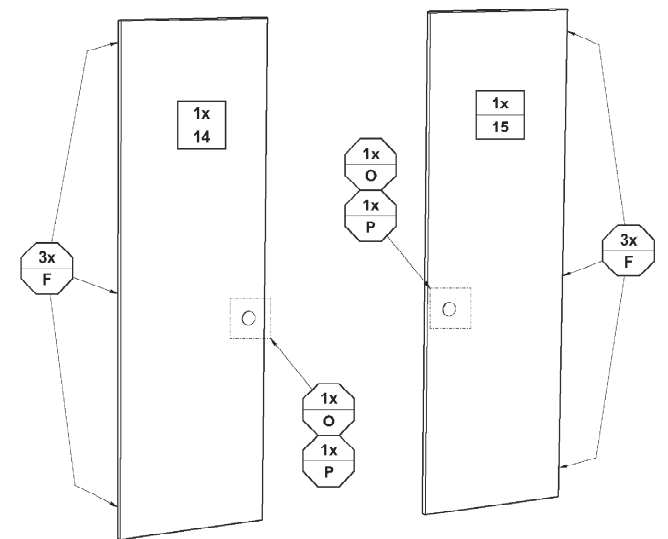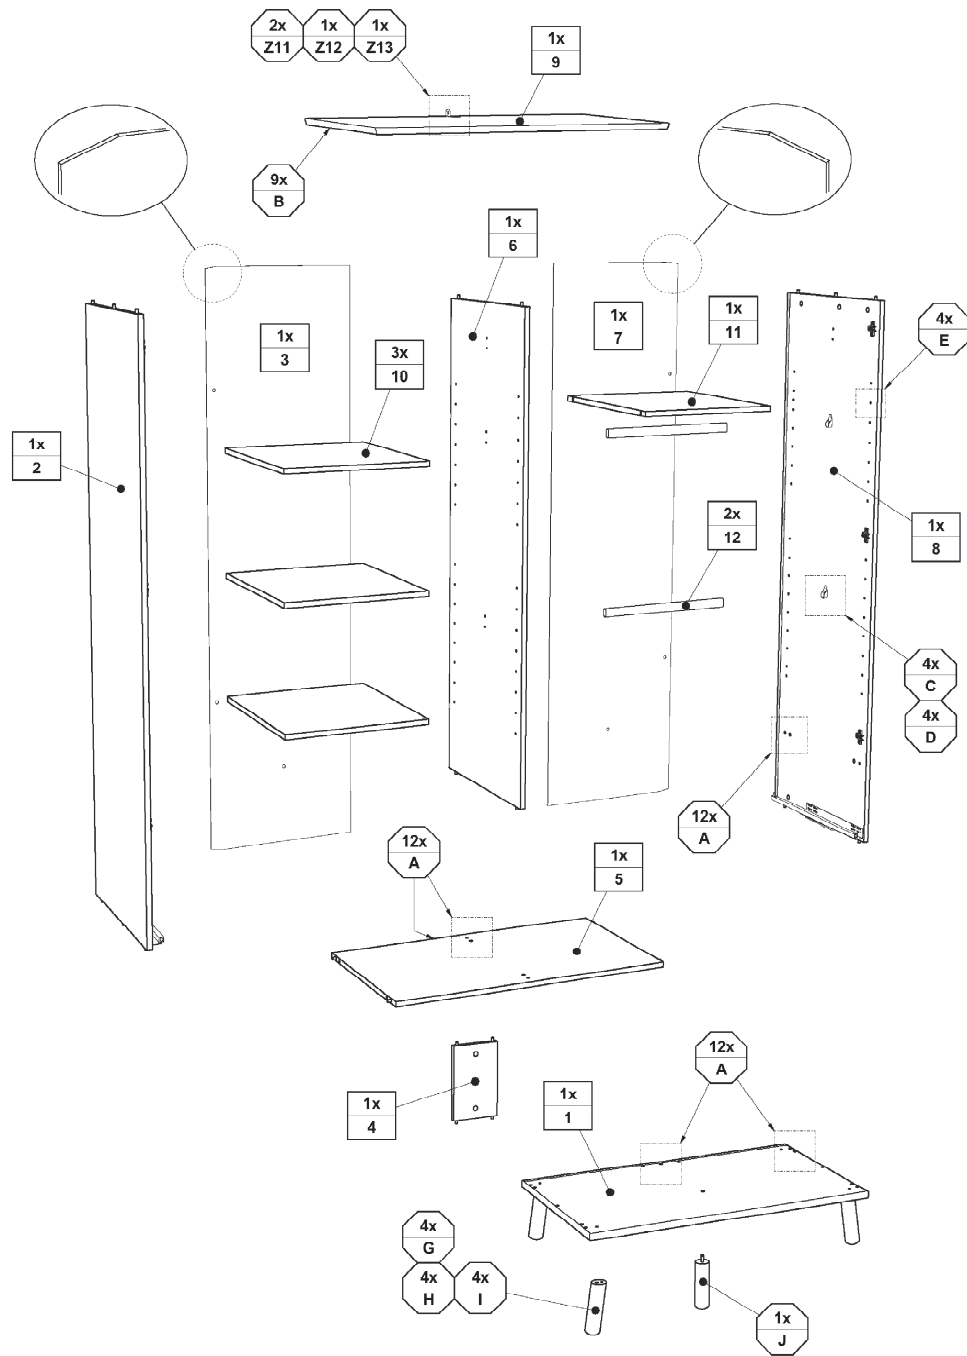

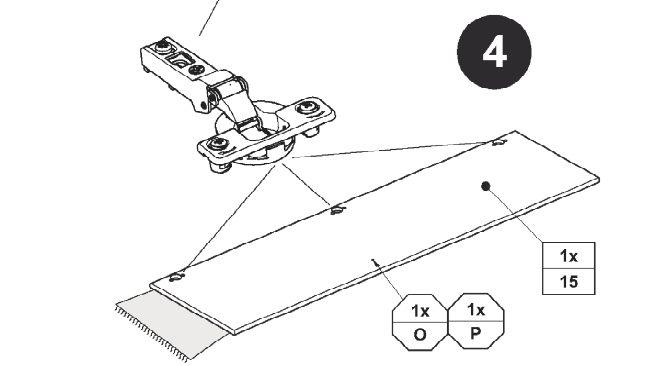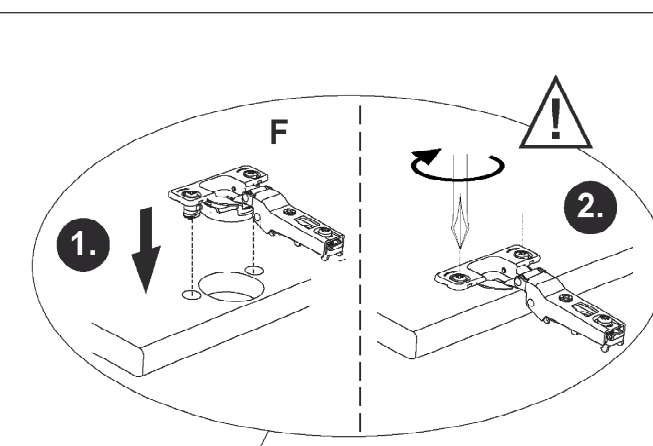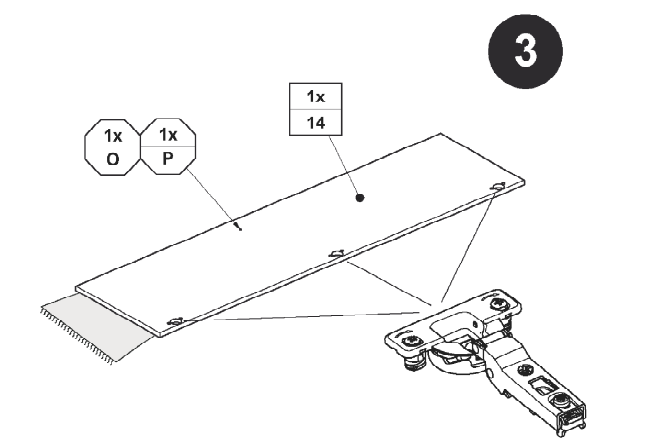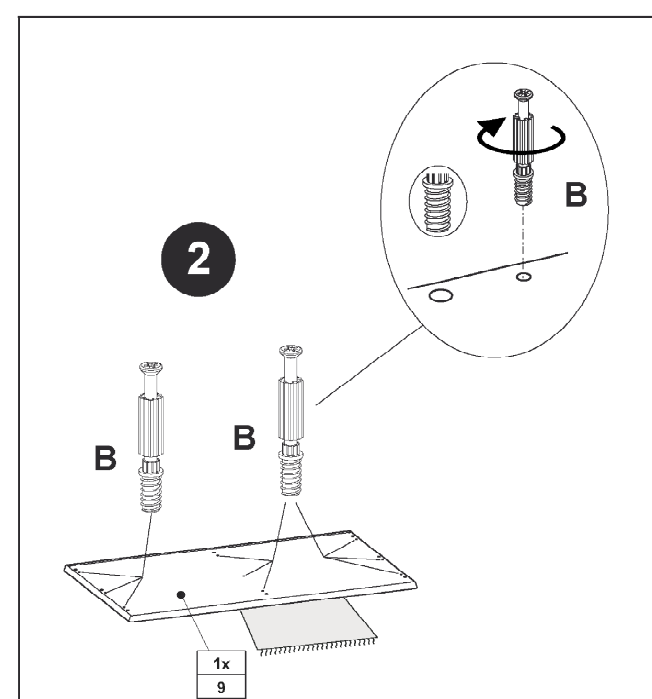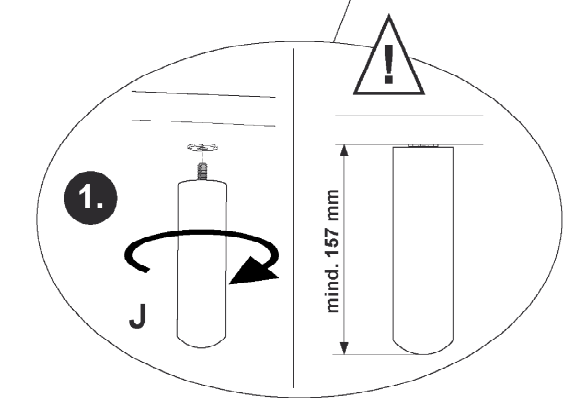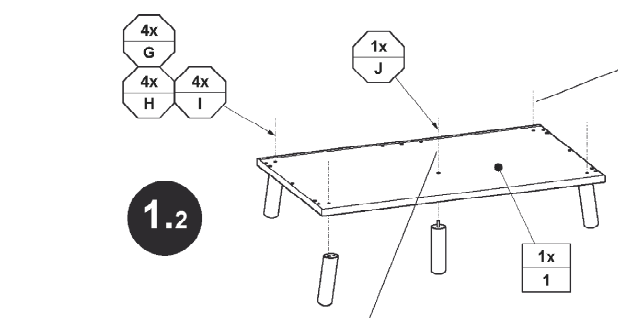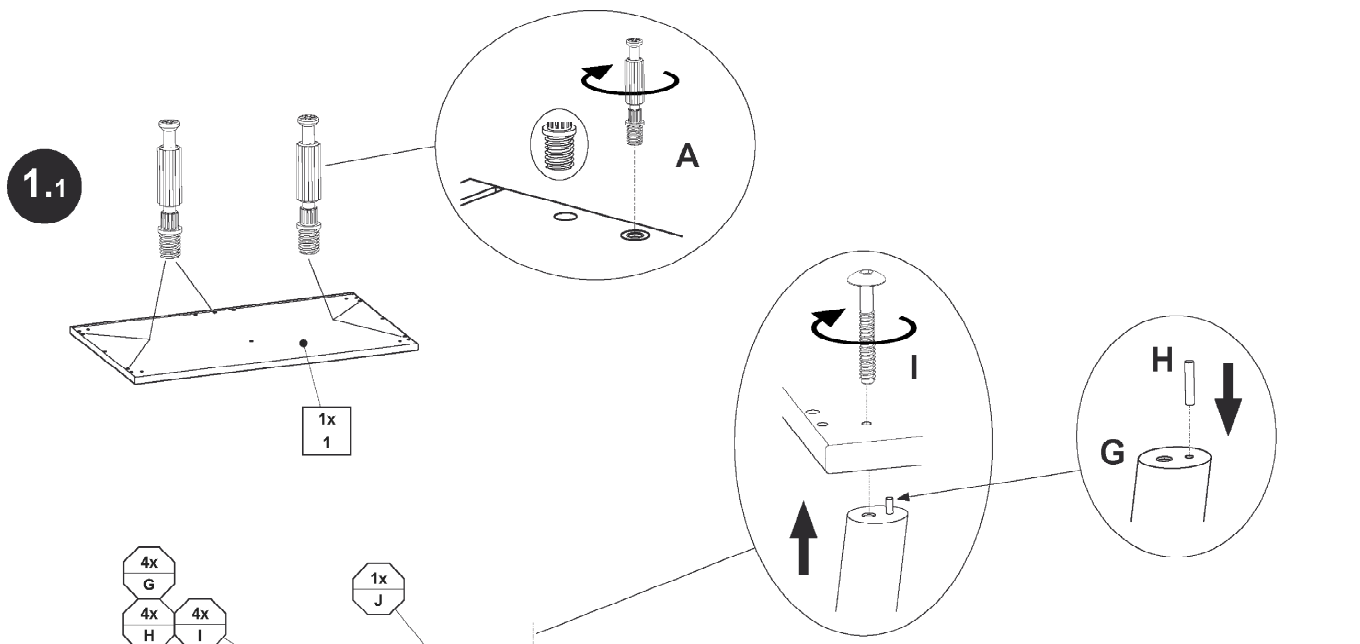

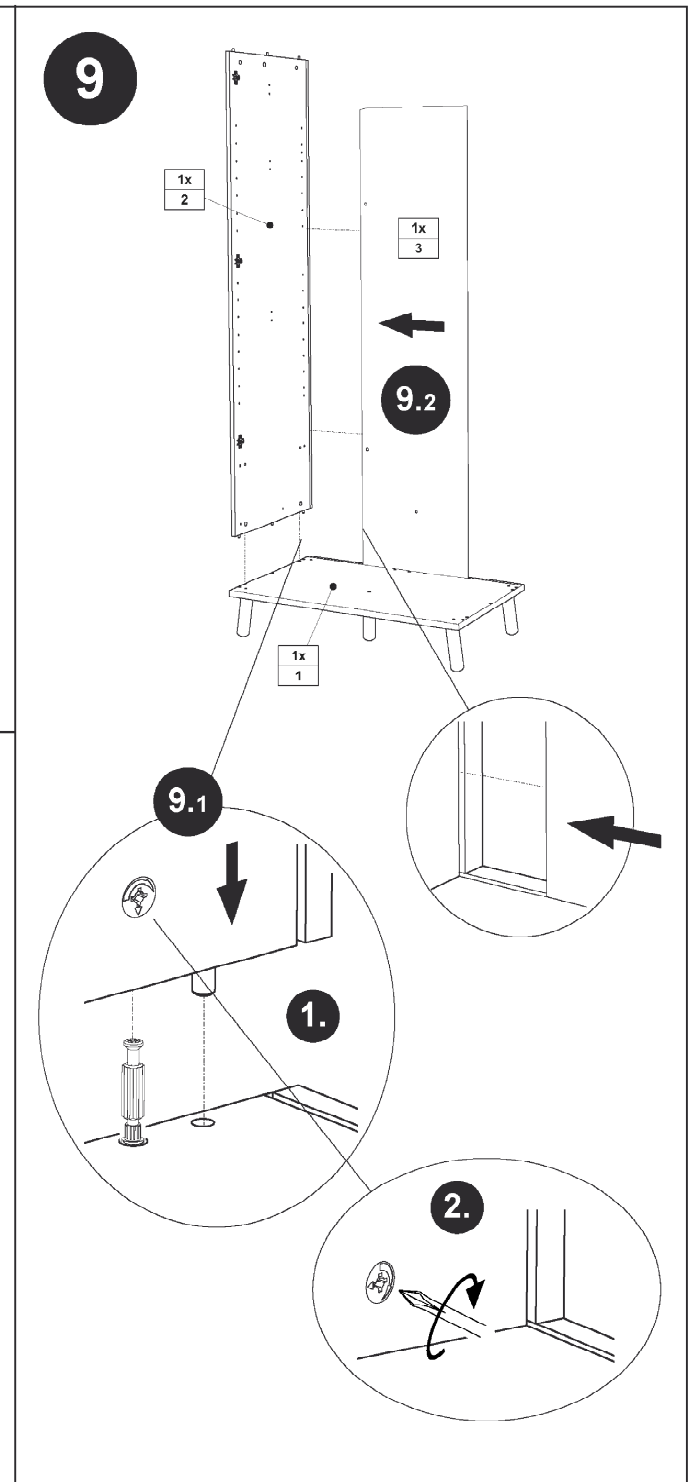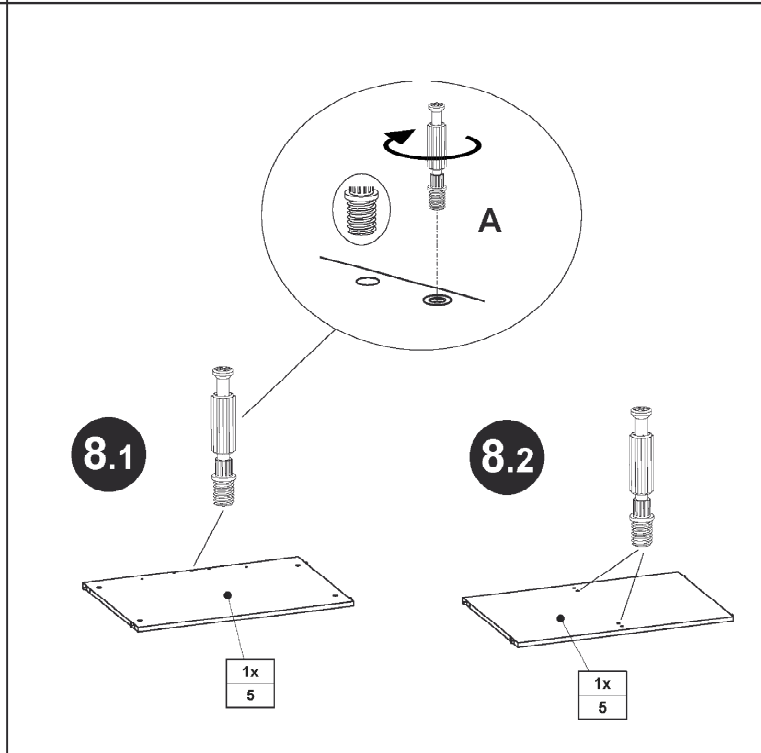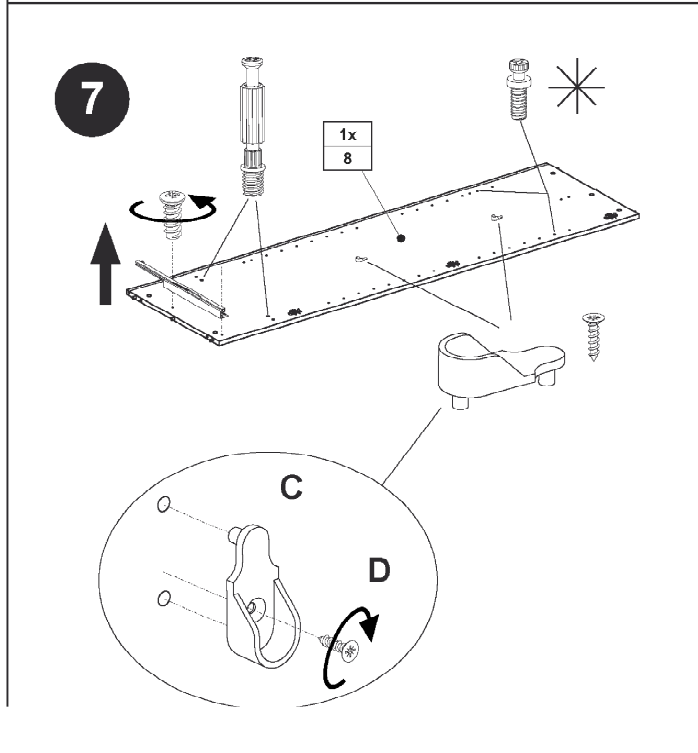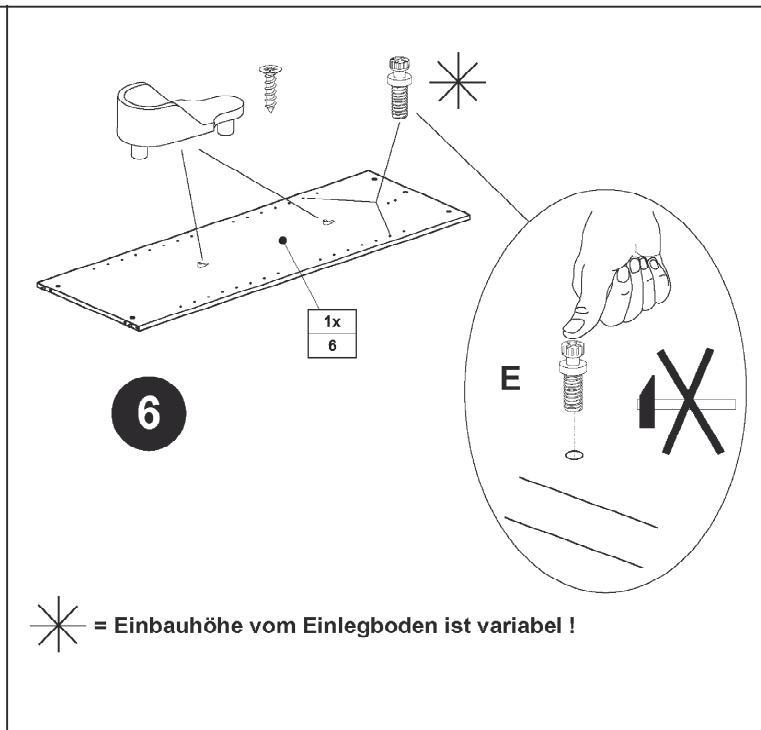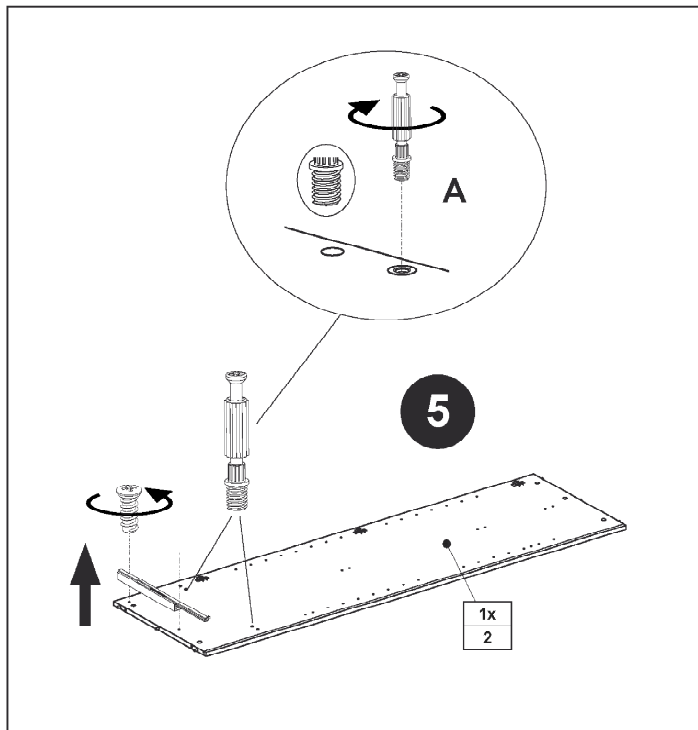

10

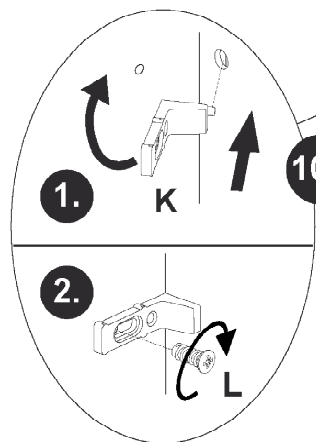


10.1


2x
K
2x
L

1x
5


1x
4

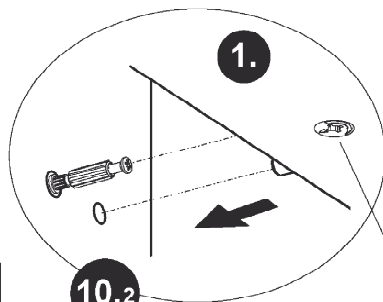

10.2

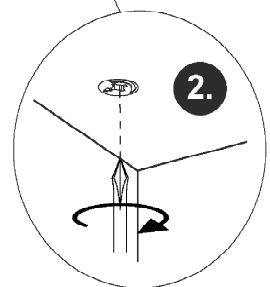

12

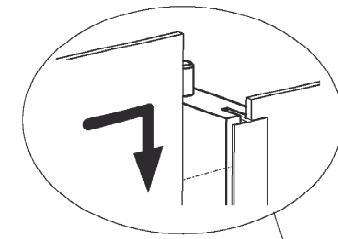


12.1




1x
7


1x
8

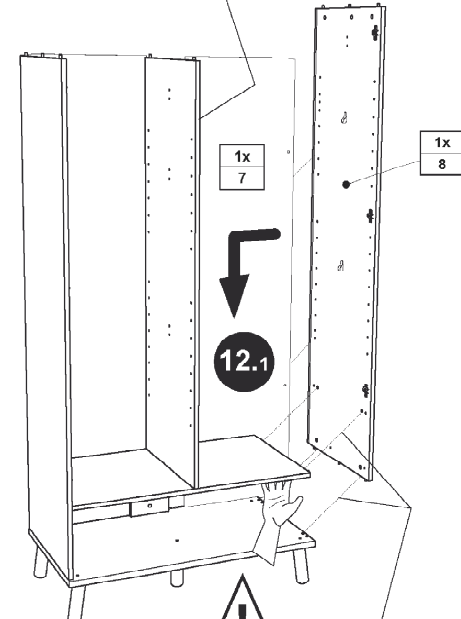

12.2

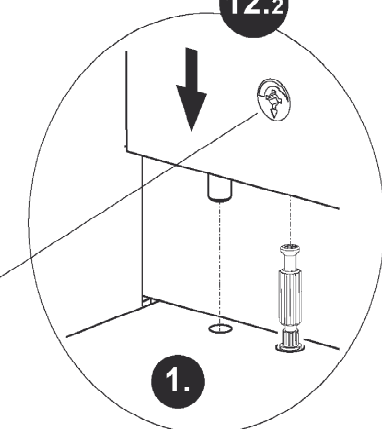


1.


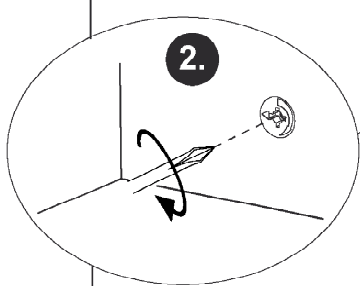


2.

11

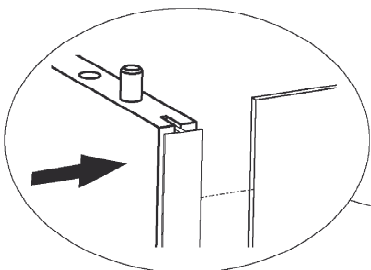


1x
6

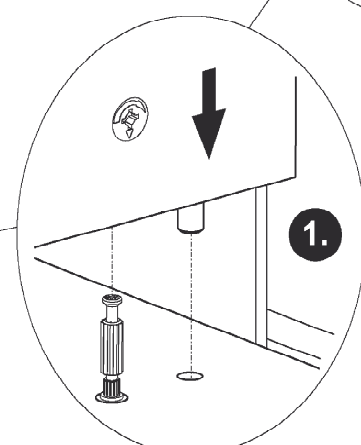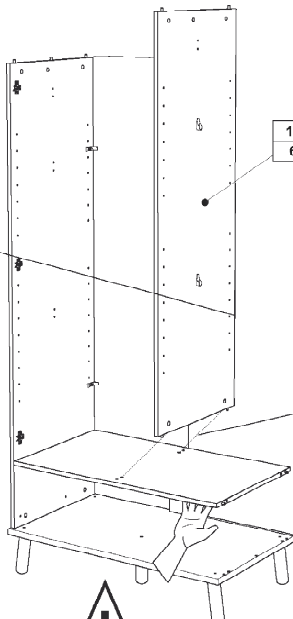


1.


2.

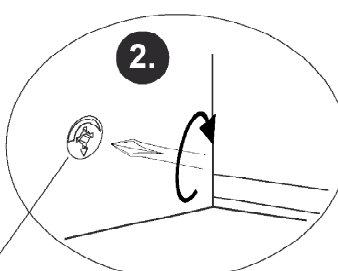



13

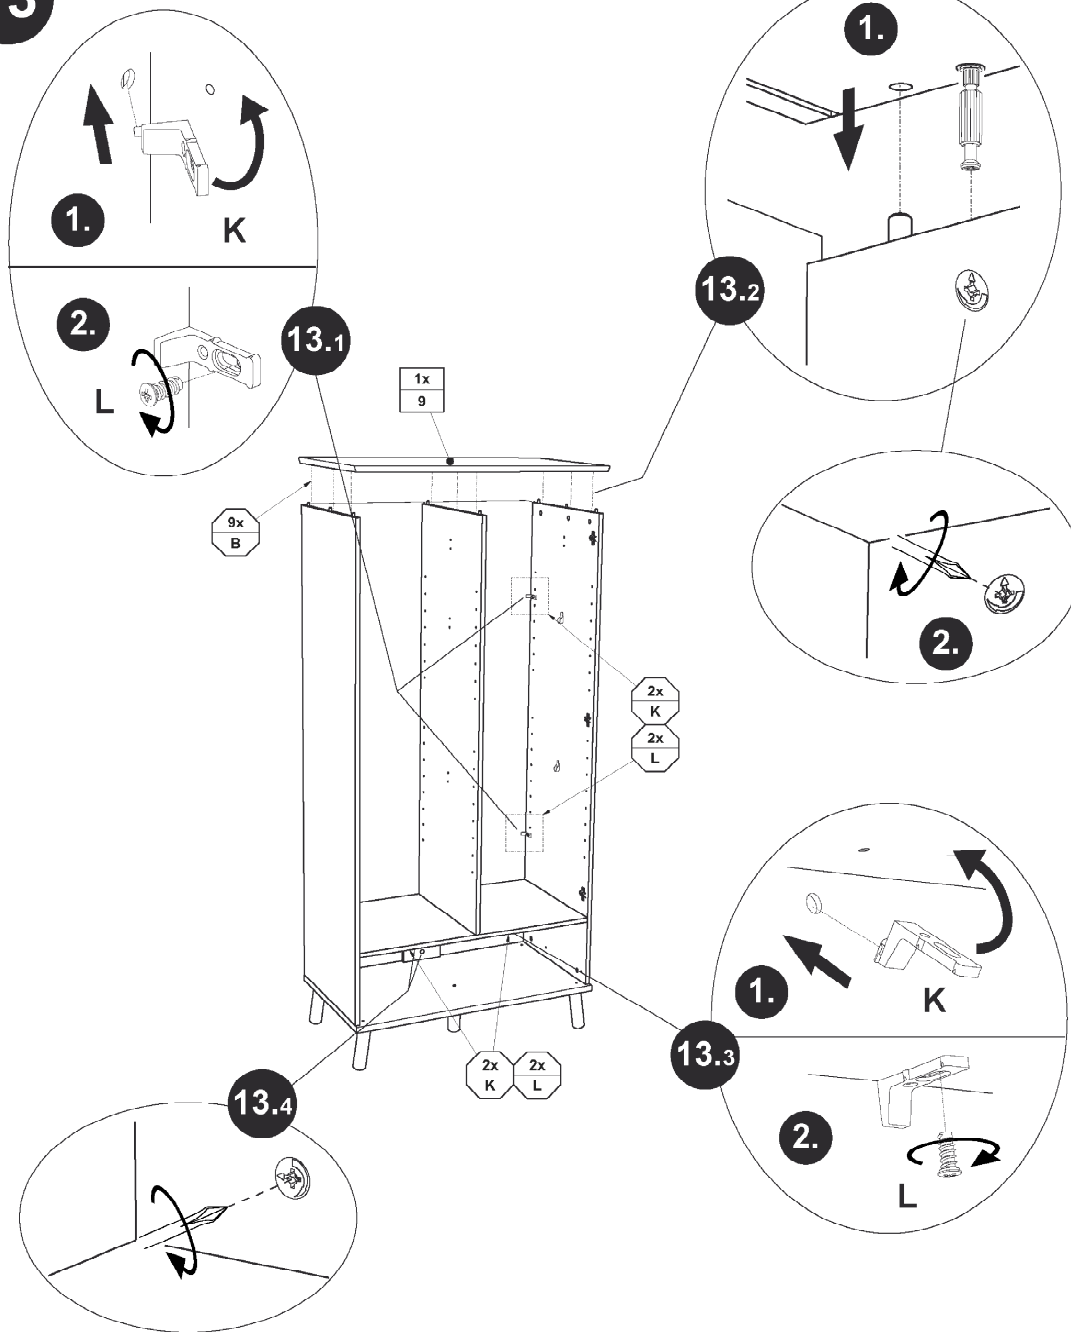



14

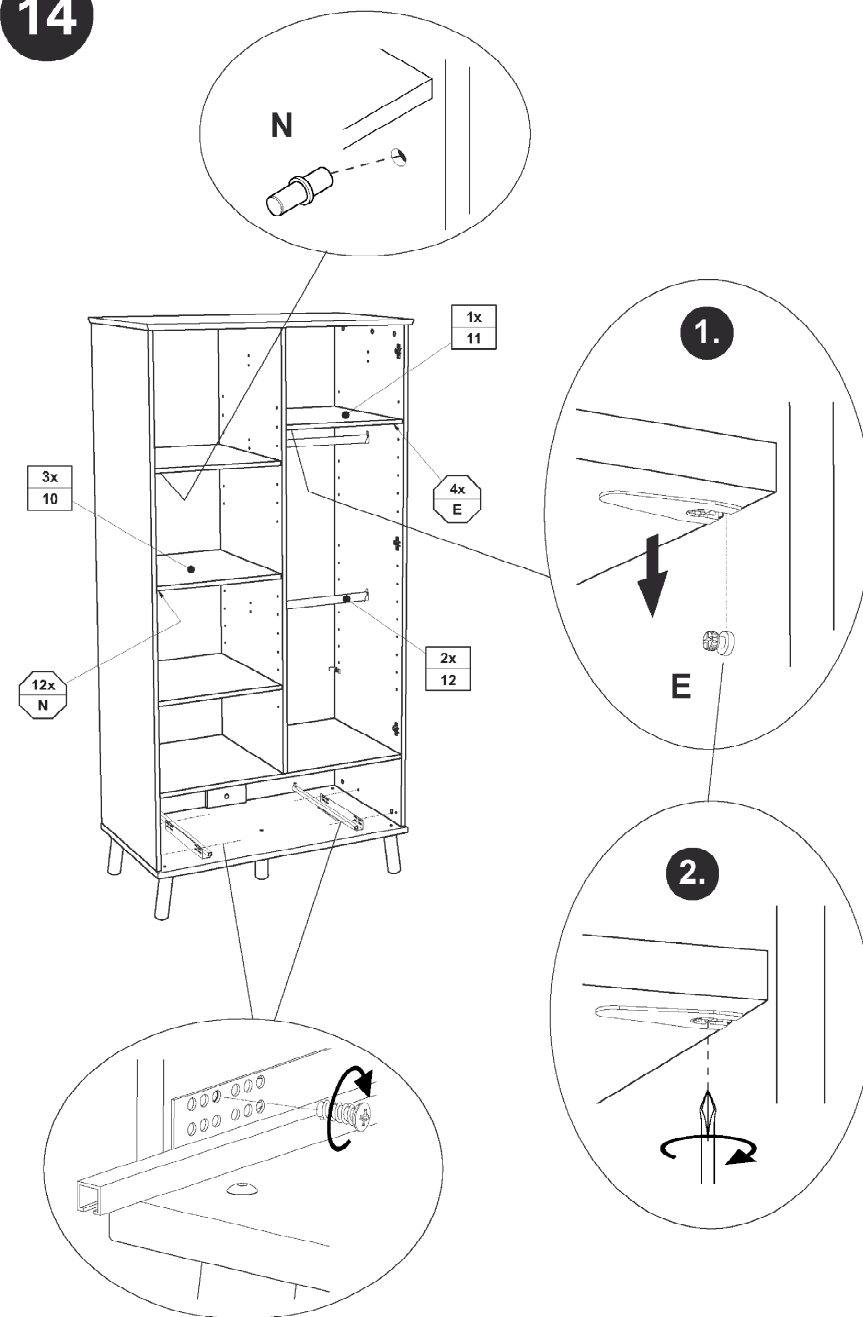


15

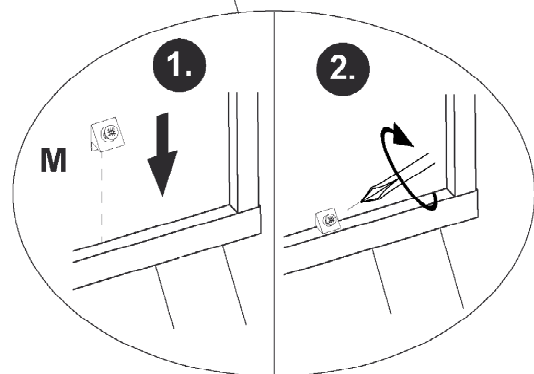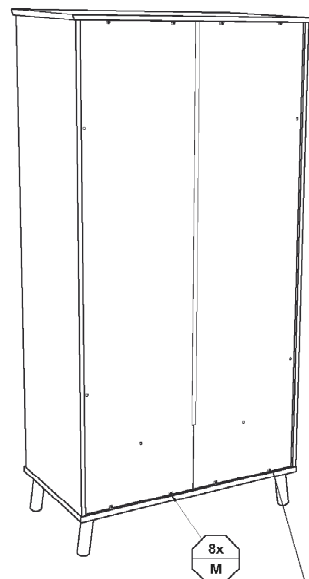


16

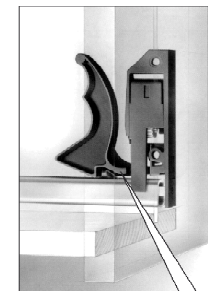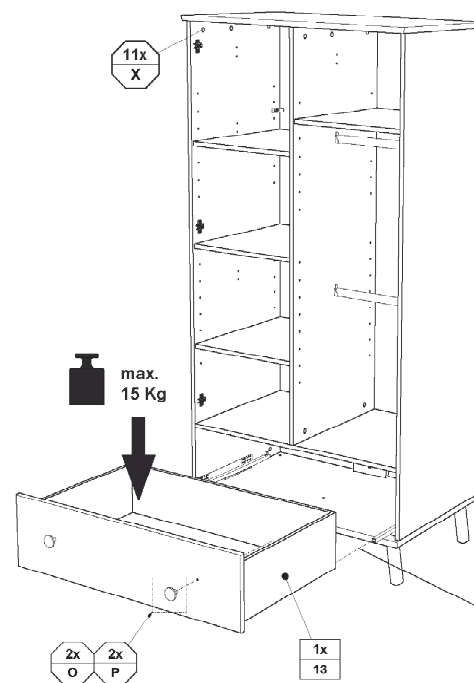


CLICK !!

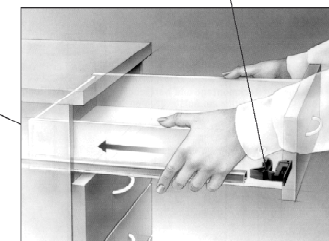





Justierung der Schubkästen

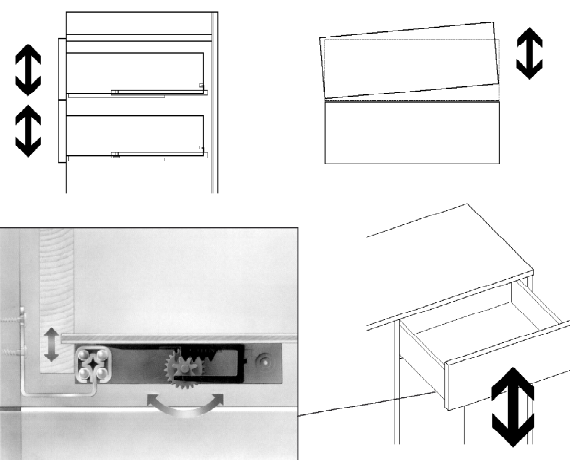




Demontage der Schubkästen

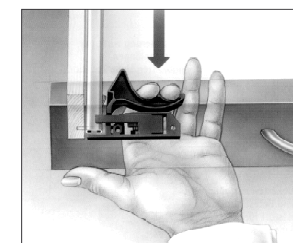

17

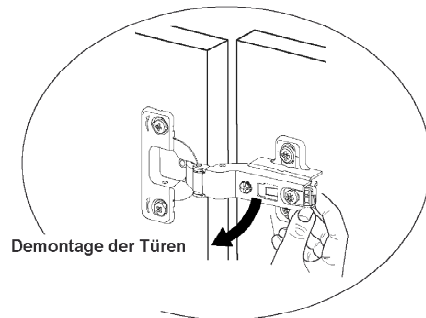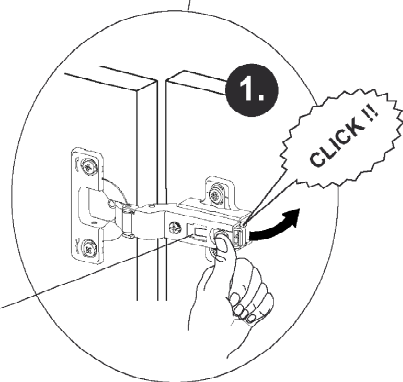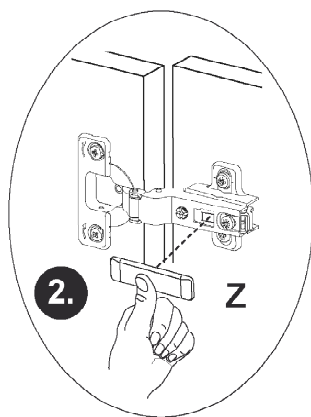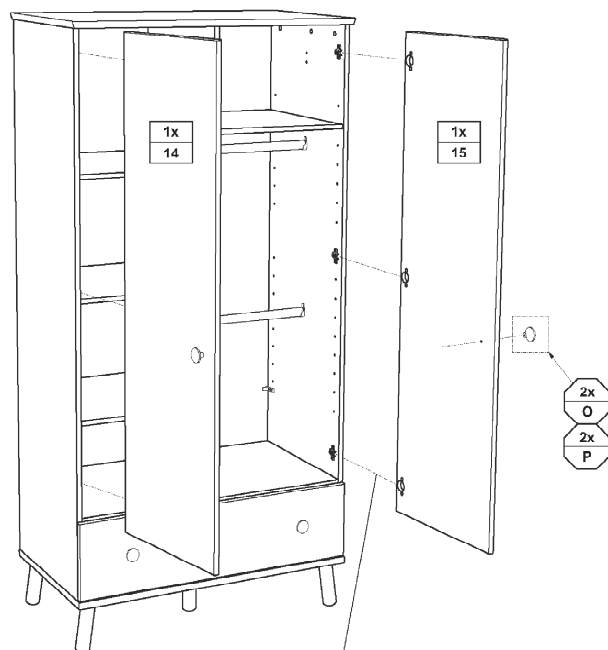

Justierung der Türen

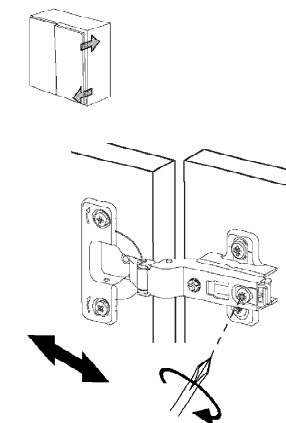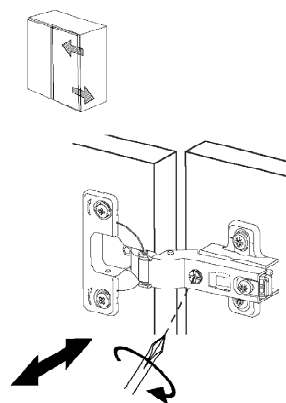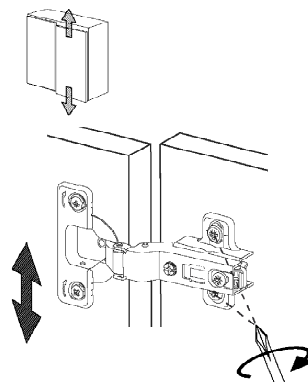

18

Kippsicherung !!

