




Assembly Instruction - 20080004-13

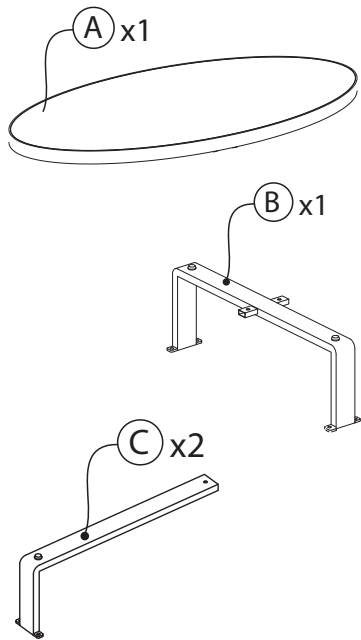




D	 Bolt- M6x20	x 10
E		x 10
F		x 10
G		x 1

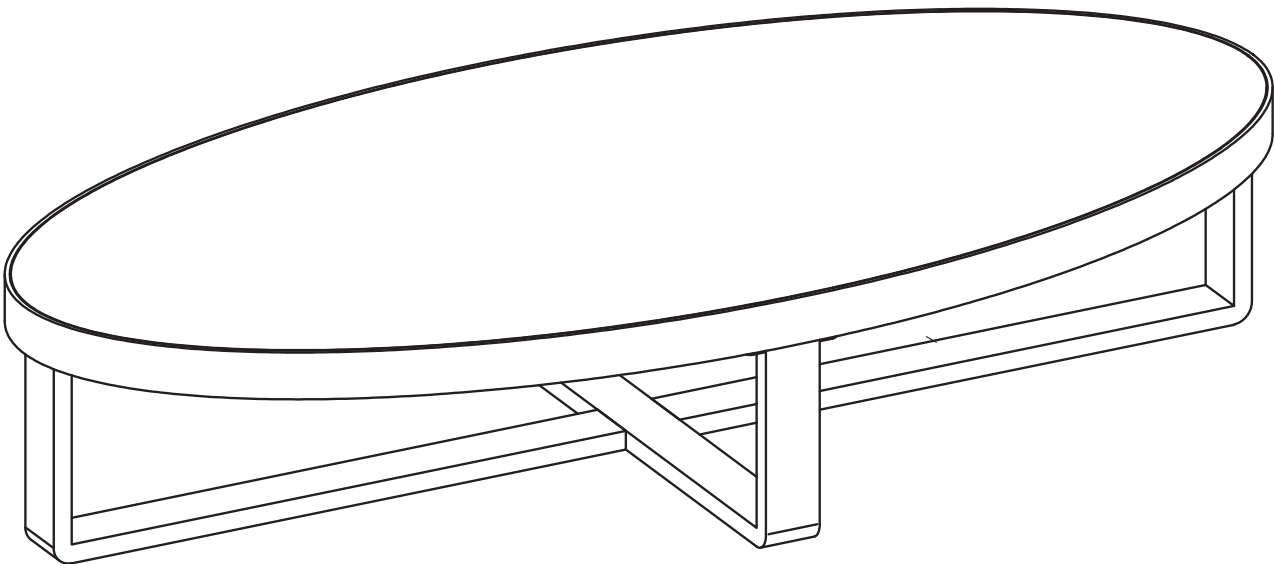



STEP 1

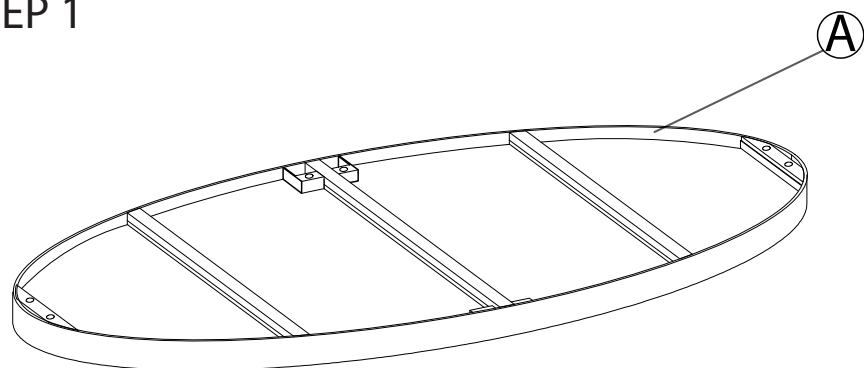



STEP 2

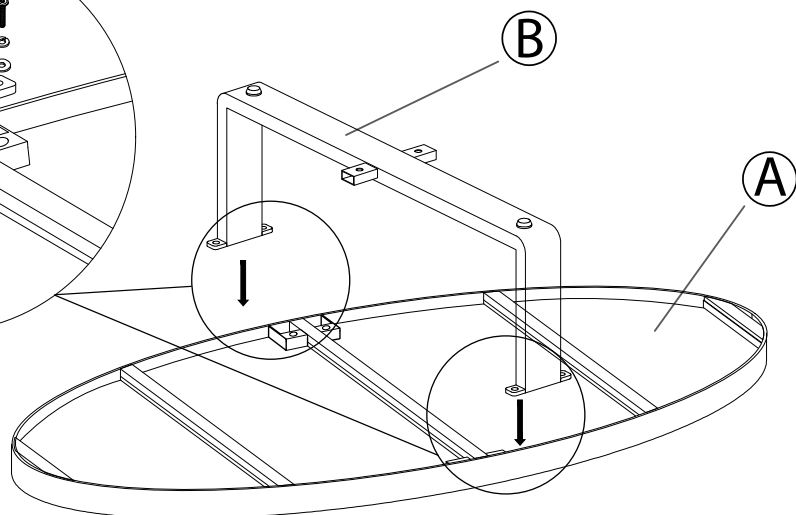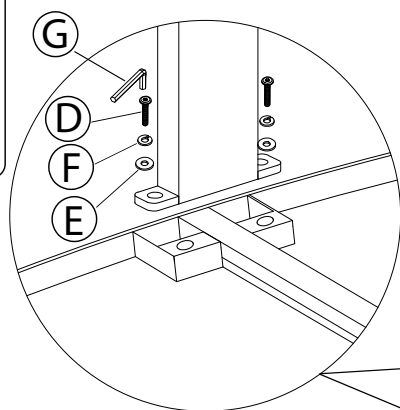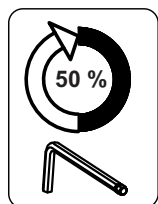

STEP 3

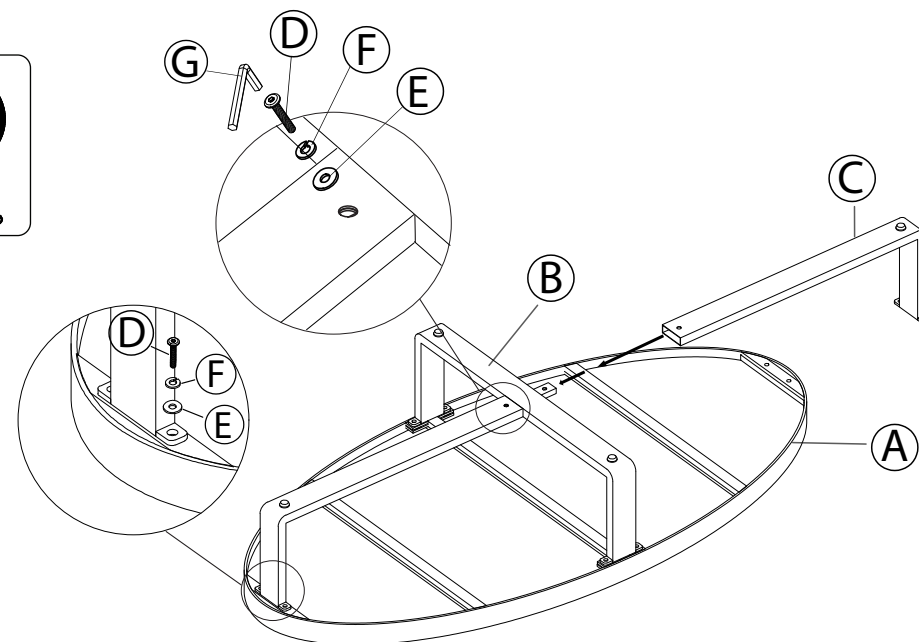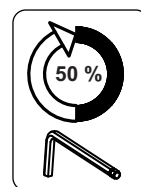

STEP 4

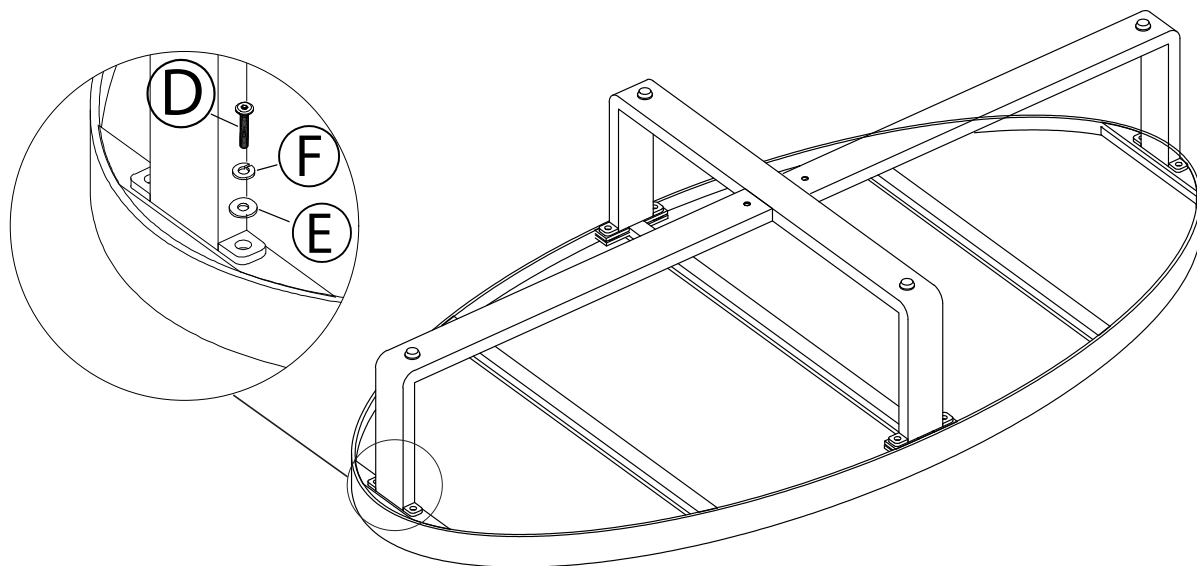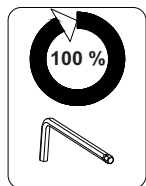

STEP 5

