


Concept Epure
MK-145

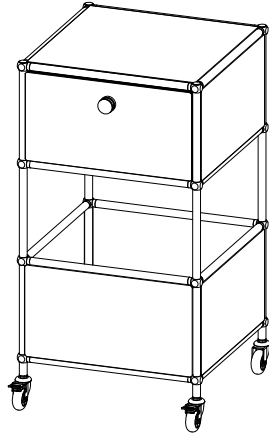


PART

PICTURE


QTY

⑤



1

⑥



1

⑦



1

⑧




12

⑨



4

(A)



4

(B)




2

(C)



2

(D)




12

PART

PICTURE

QTY

(E)



M6*15

4

(F)



M4*8

2

(G)



1

(H)



M5*8

4

(I)



M3

1


(J)



M4


1

(K)




1

(L)



1

(M)



1

PART

PICTURE


QTY

①



3

②




1

③



5


④



1


STEP

1

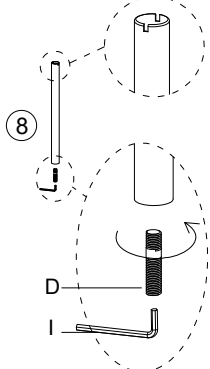

I	(I)	1
D	(D)	12


2

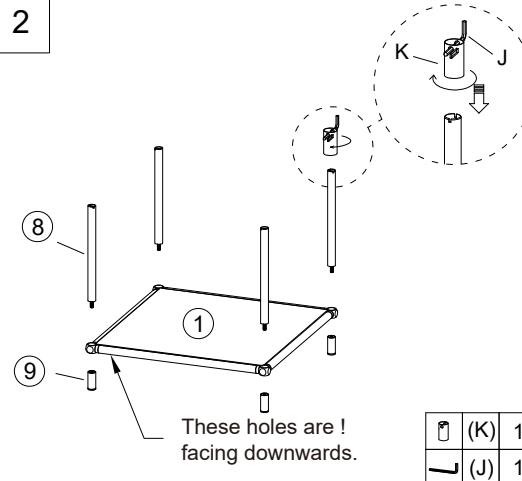

These holes are !
facing downwards.


A	(K)	1
I	(J)	1

3

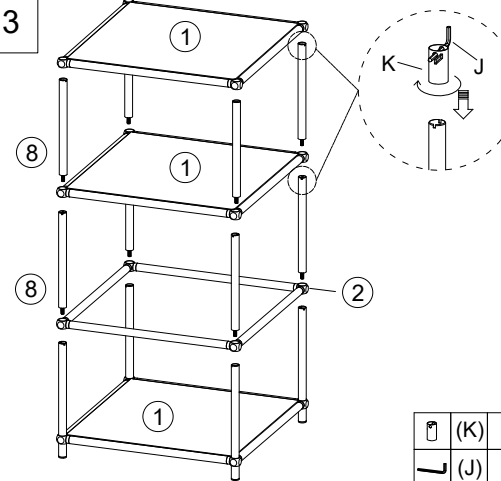

J	(K)	1
I	(J)	1

4

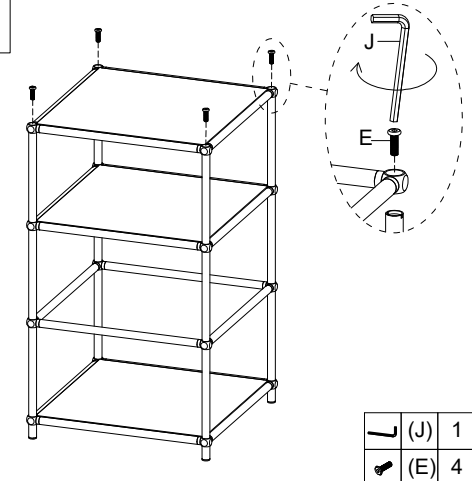

J	(J)	1
E	(E)	4

5

(A)

4

6

7

8

9

Don't tighten screws at this step.

step.a

4

F

G

step.b

5

L

H

	(G)	1
	(F)	2
	(H)	4

10

Pull out the rails on the side panels 6 and 7. Align the rails on the drawer 5 with them, then slide the drawer in gently and evenly.

11

If the drawer is not installed properly, you need to hold the clip on both sides, pull out the drawer, and repeat the step 10.

12

If the drawer is not closing completely, adjust the wheels B or C as needed. ensure it is level for proper drawer closure. (use a spirit level if needed)

13

Tighten the screw (H) after drawer close perfectly.

14

Unsere Marken:

Velvet Trading GmbH / Ost-West Handelsgesellschaft GmbH

www.floordirekt.com