

ASSEMBLY INSTRUCTION

DE - MONTAGEANWEISUNG

FR - INSTRUCTIONS DE MONTAGE

DK - MONTAGEVEJLEDNING

CZ - NÁVOD K MONTÁŽI

ES - INSTRUCCIONES DE MONTAJE

FI - ASENNUSOHJE

HR - UPUTE ZA MONTAŽU

SE - MONTERINGSANVISNING

SI - NAVODILA ZA MONTAŽO

TR - MONTAJ TALIMATI

NO - MONTASJEANVISNING

IT - ISTRUZIONI DI MONTAGGIO

GR - ΟΔΗΓΙΑ ΣΥΝΑΡΜΟΛΟΓΗΣΗΣ

NL - MONTAGE INSTRUCTIE



PT - INSTRUÇÕES DE MONTAGEM

PL - INSTRUKCJA MONTAŻU


HU - SZERELÉSI UTASÍTÁS



10 min

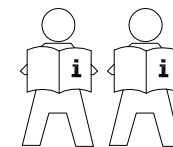


① x 8



HW-ST-02-055
(8x45)

② x 4




HW-ST-04-294
(40x20x3)

③ x 1



HW-PL-08-220
(Ø62x20.5)




④ x 1



HW-MM-18-026
(125)






Ⓐ x 2




SU-TB-LF-1810

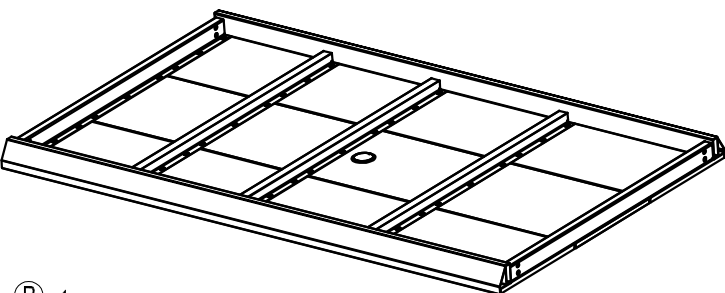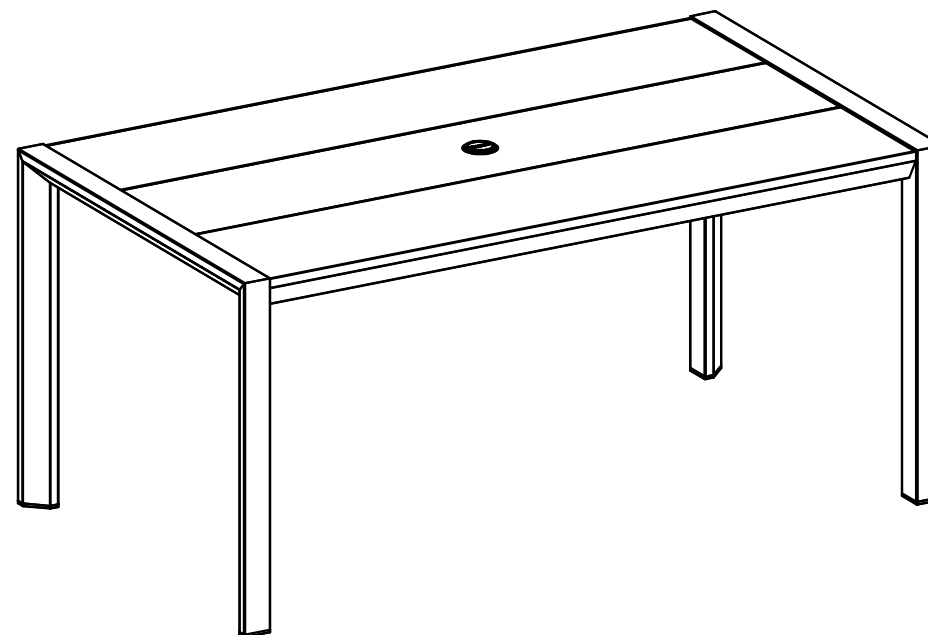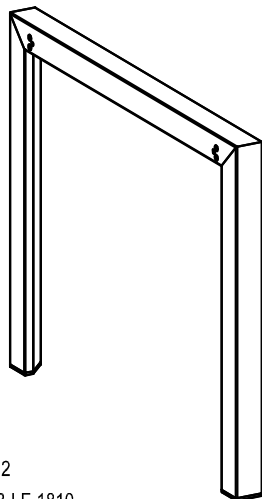


Ⓑ x 1




SU-TB-TF-2519

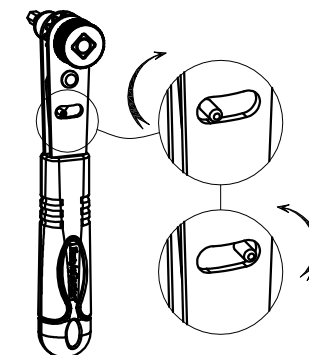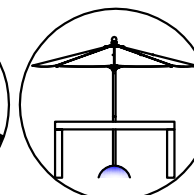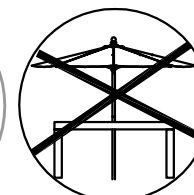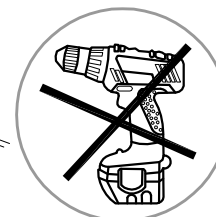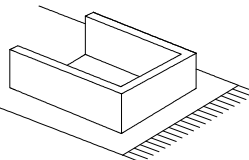





 ① x 8 HW-ST-02-055 (8x45)	 ② x 4 HW-ST-04-294 (40x20x3)	 ④ x 1 HW-MM-18-026 (125)
---	--	--

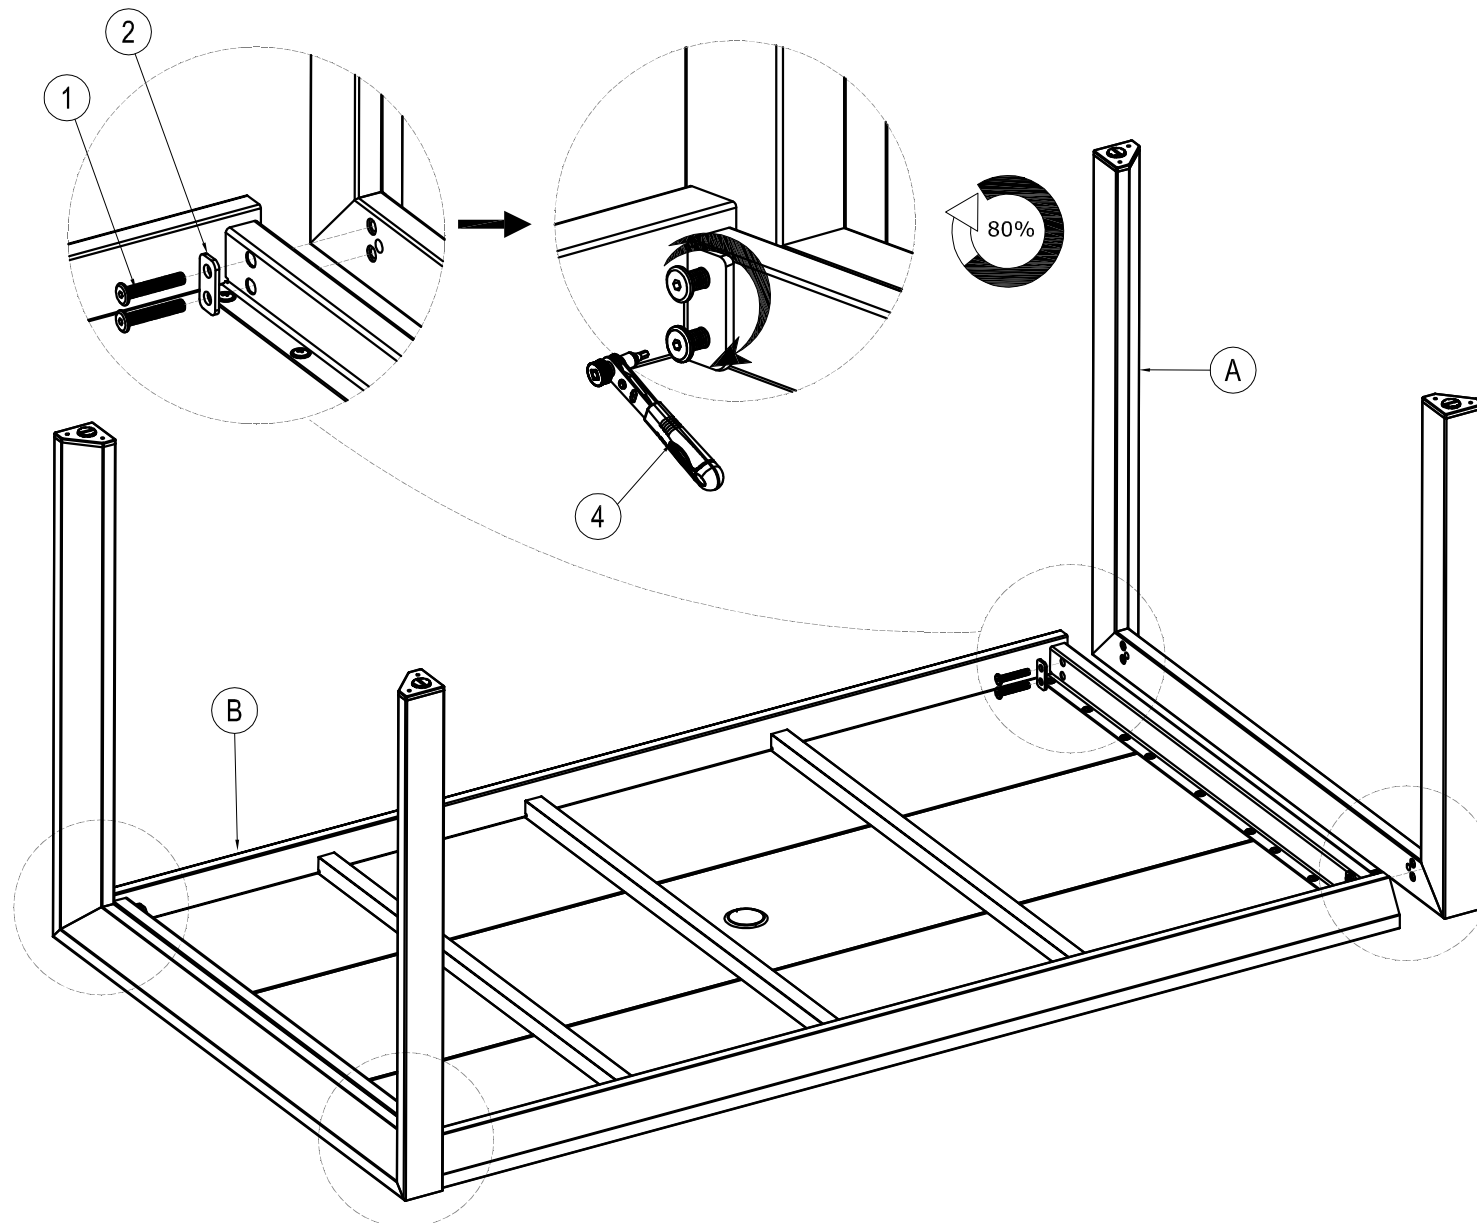

④ × 1

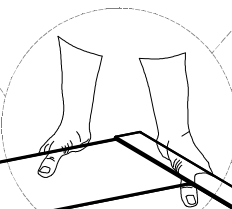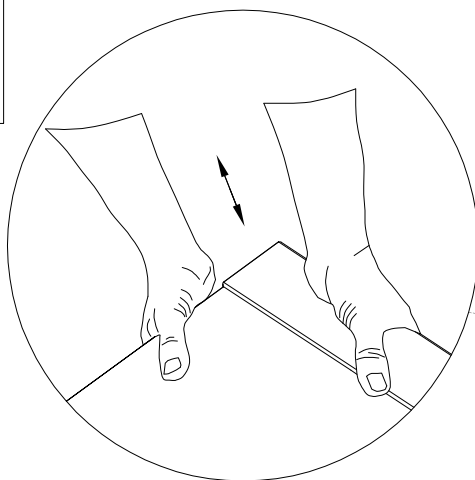HW-MM-18-026
(125)

④

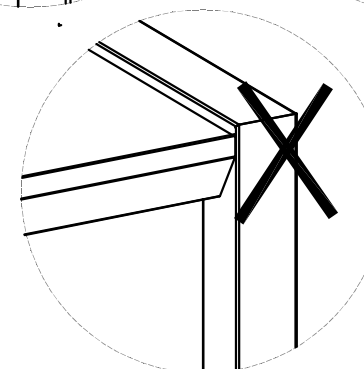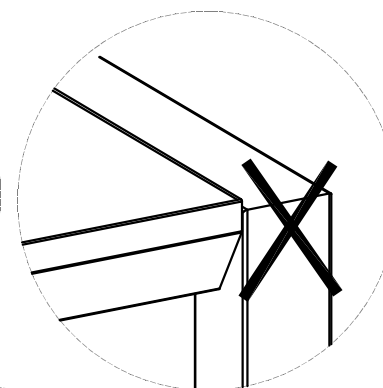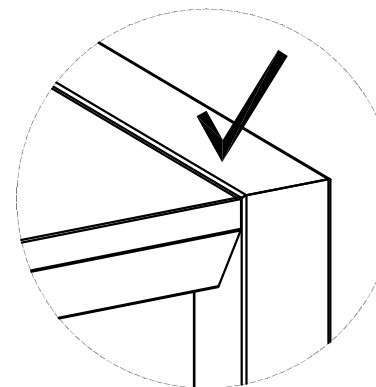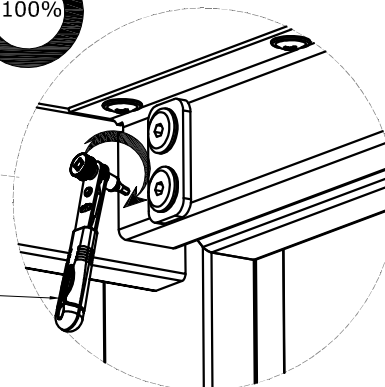

3 × 1

HW-PL-08-220
(Ø62x20.5)