
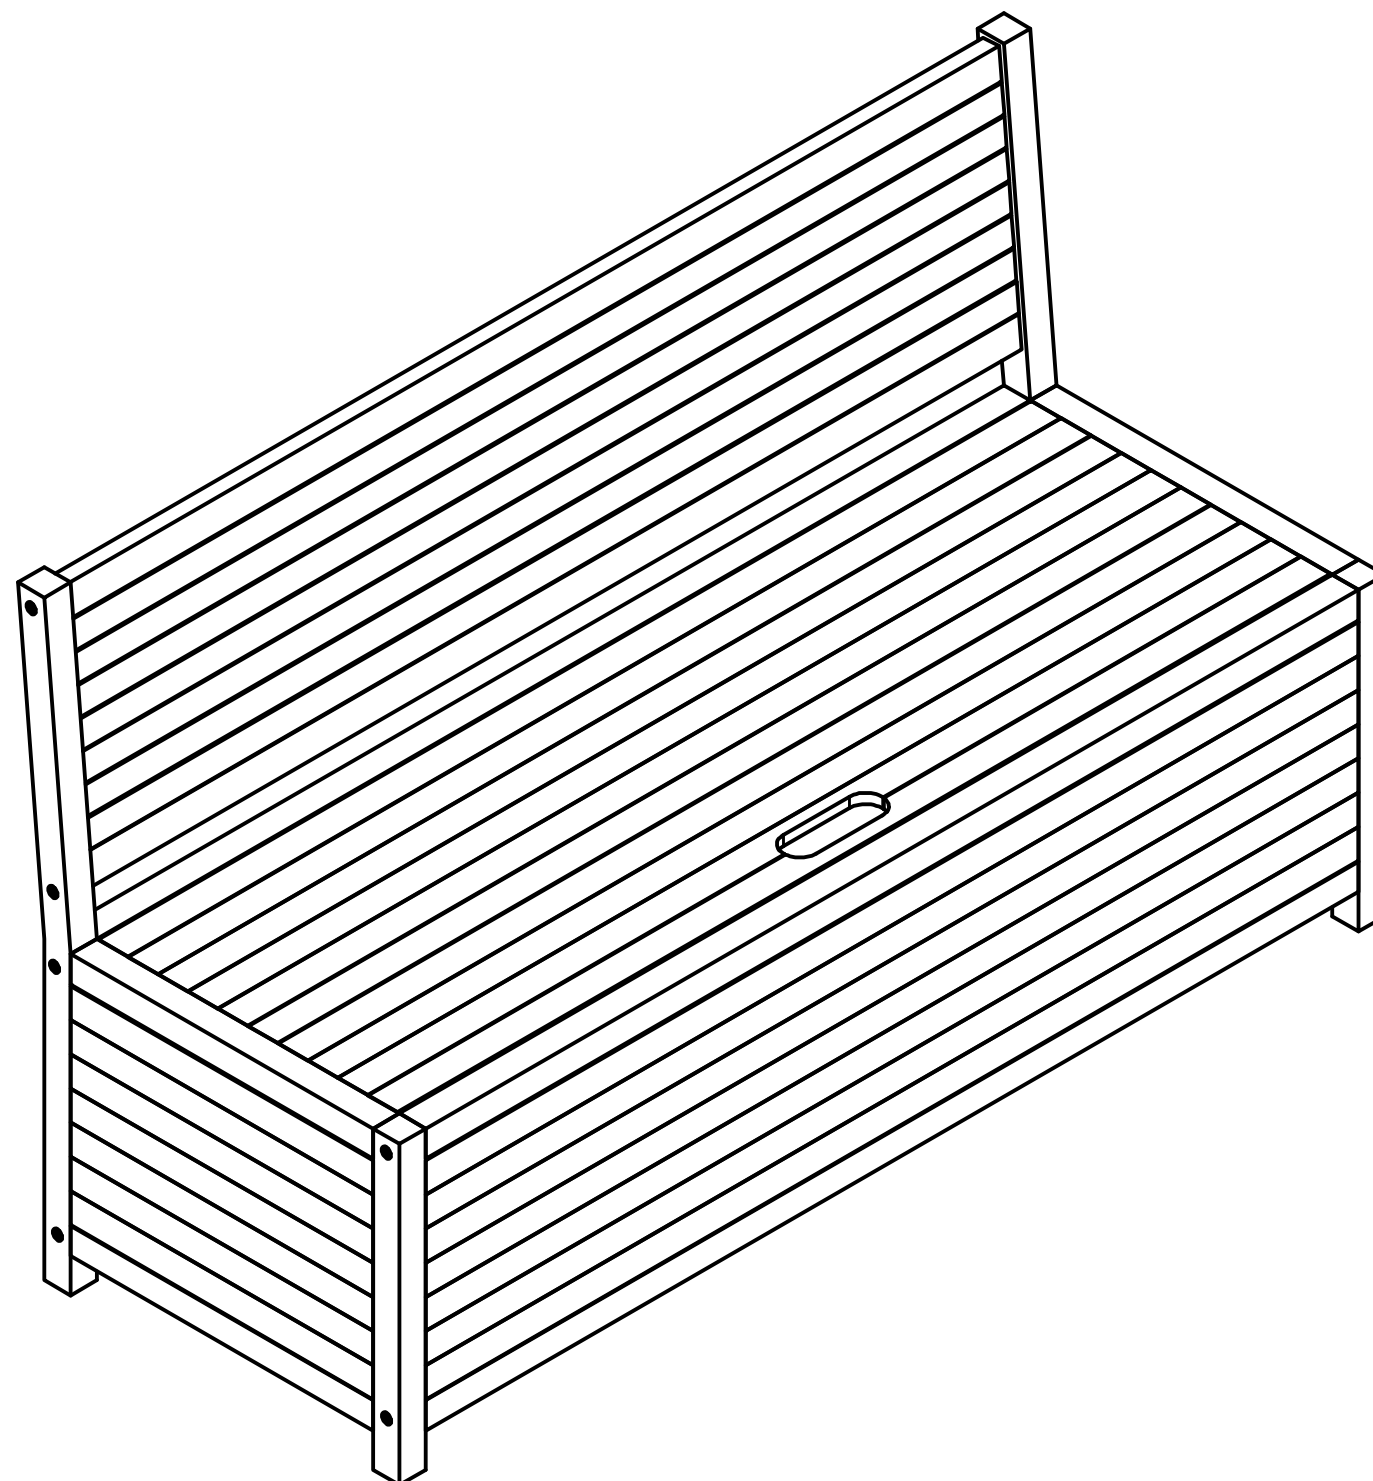
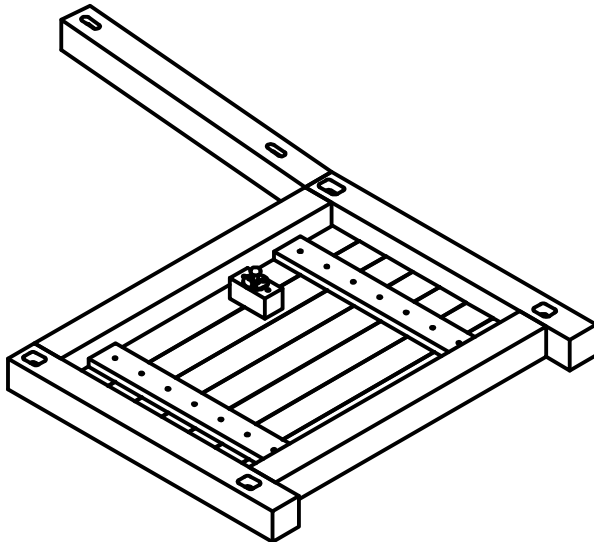
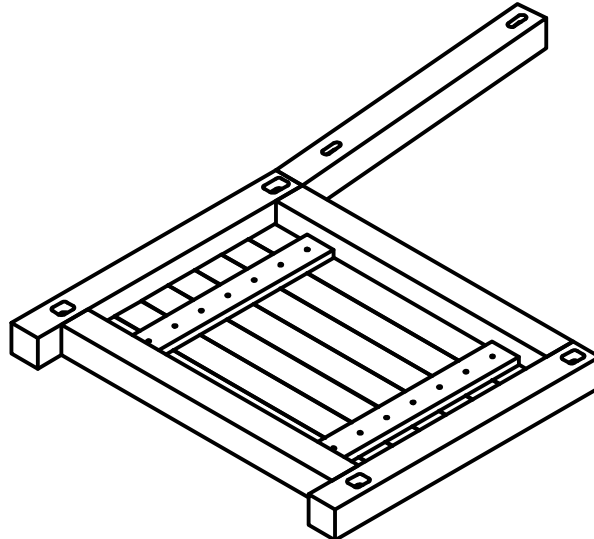


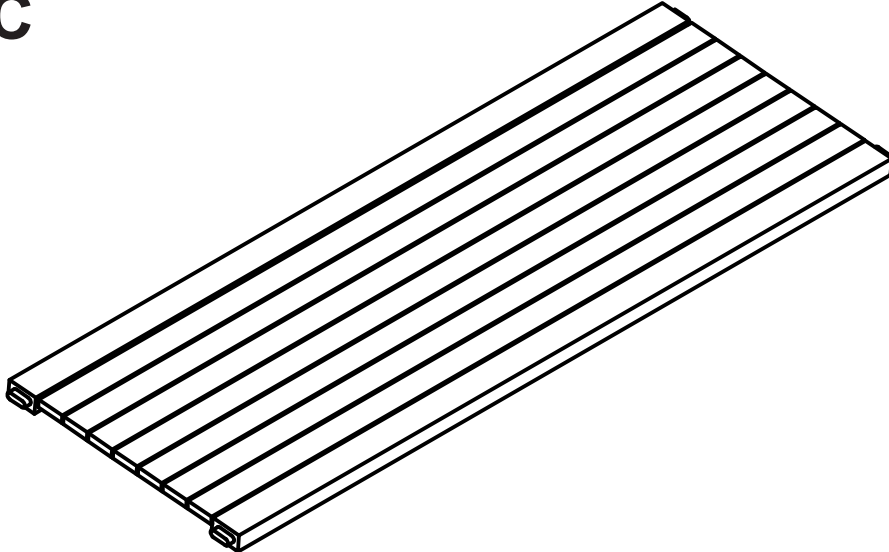
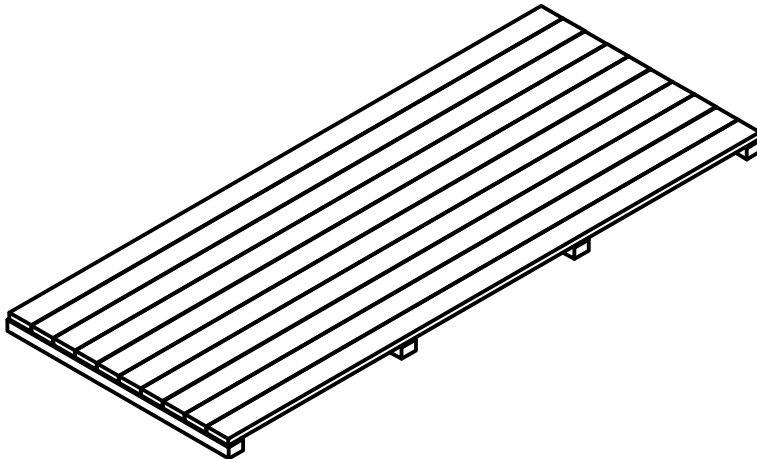
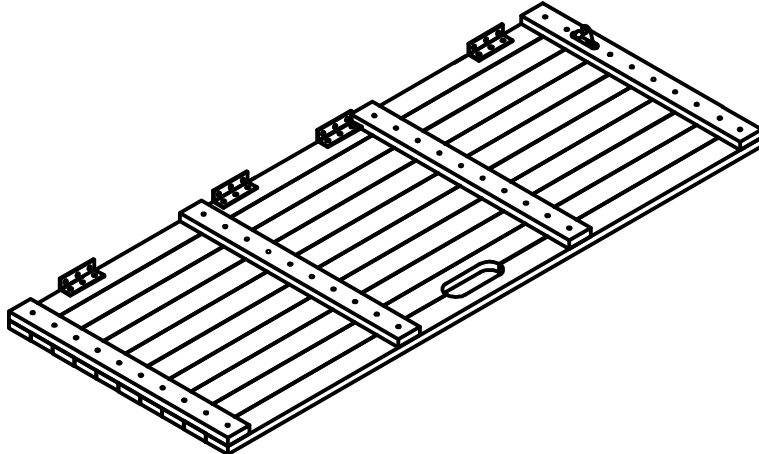
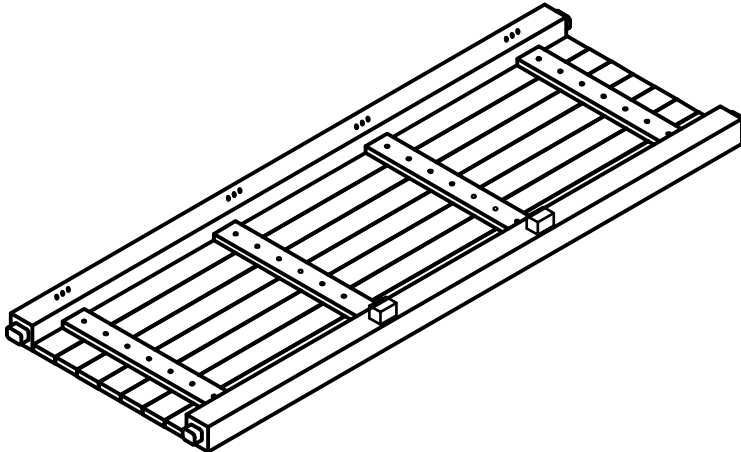


ASSEMBLY INSTRUCTION: 12540083/13

ambia. GARDEN


XXXLutz KG
Roemerstrasse 39
AT-4600 Wels, Austria

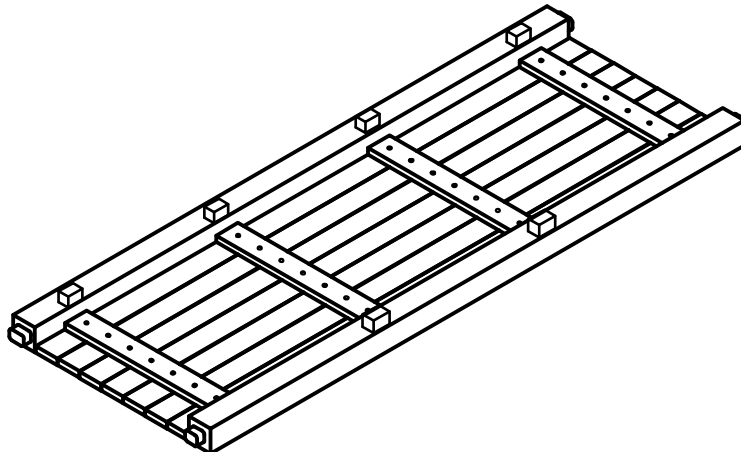



ASSEMBLY INSTRUCTION: 12540083/13				
No	Name of Hardware	Fix	Qty	A B
1	Screw M6x80 mm		12	
2	Piston		1	
3	Screw M4x15		12	
4	Allen Key		2	
C		D		E
F		G		

ASSEMBLY INSTRUCTION: 12540083/13

Step 1:

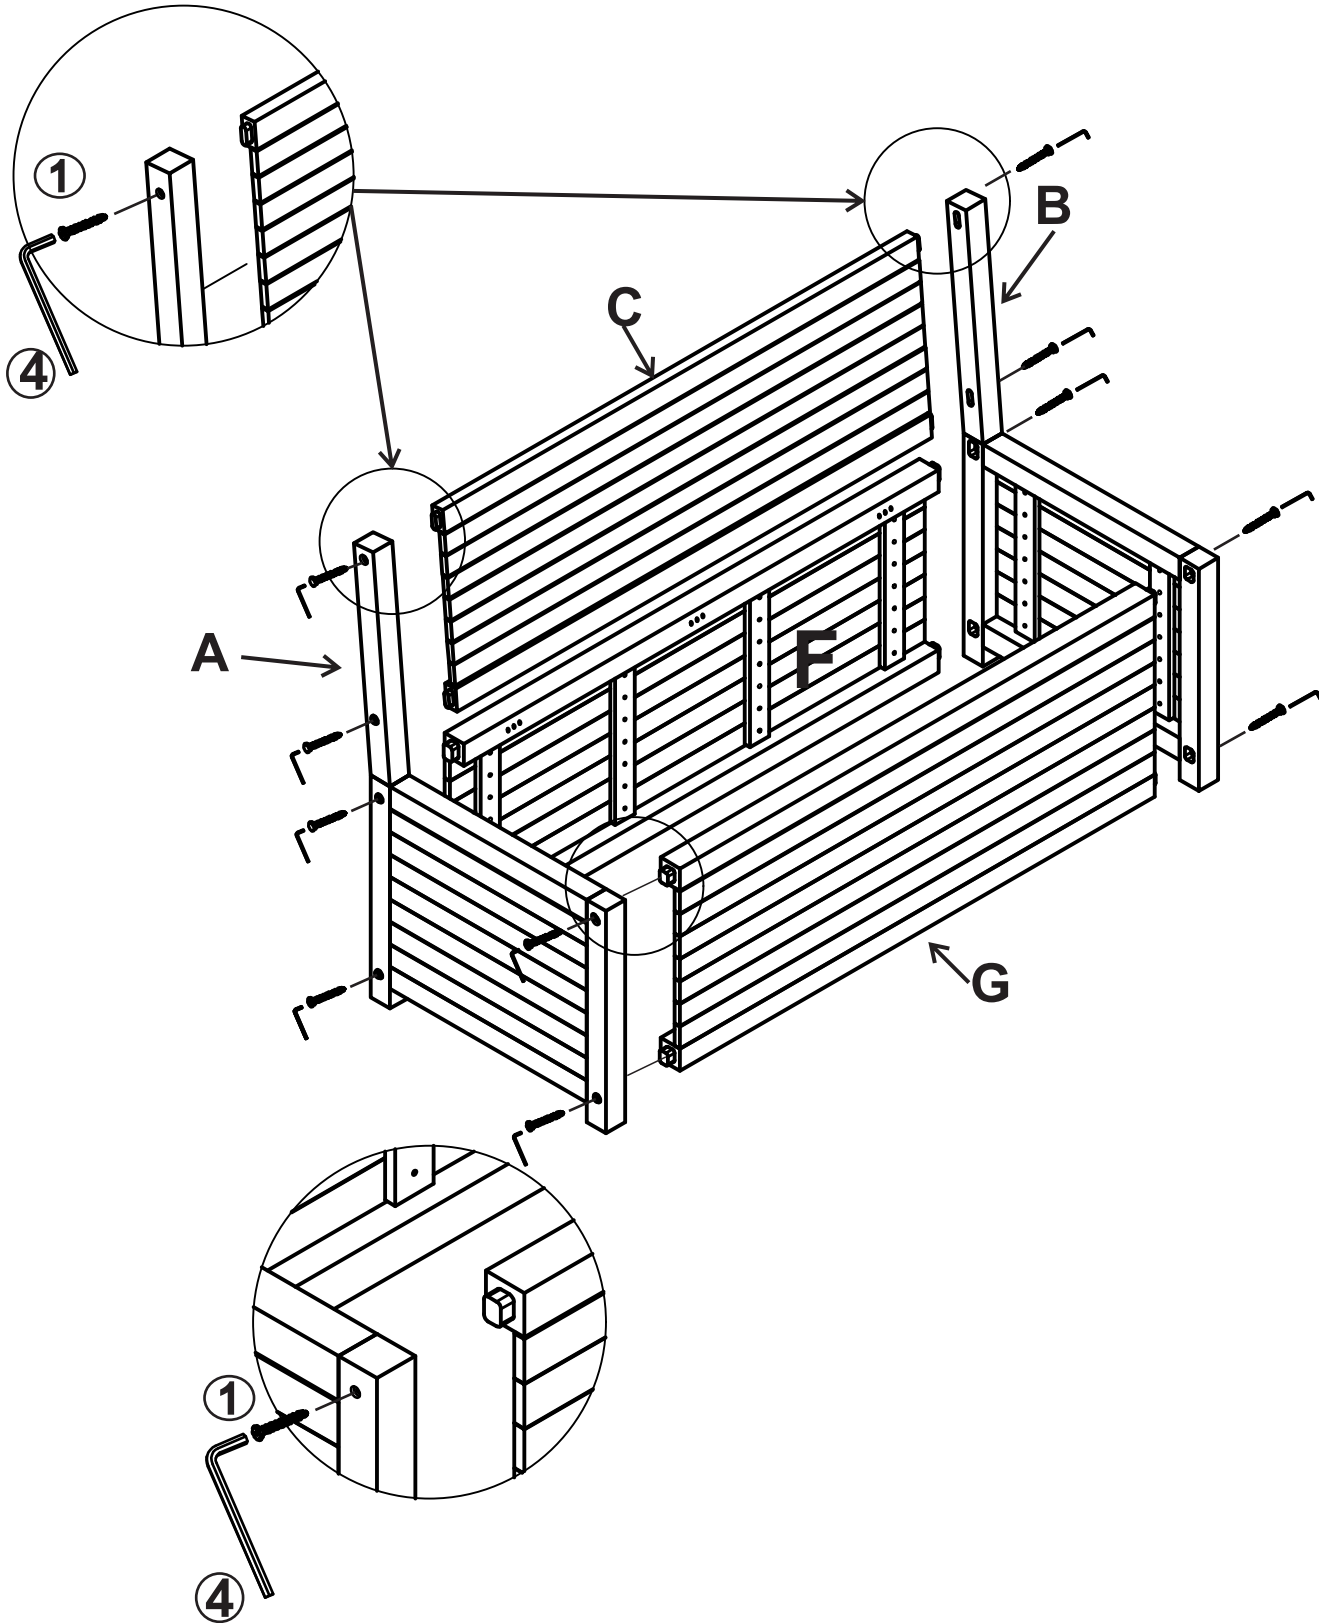


Step 2:

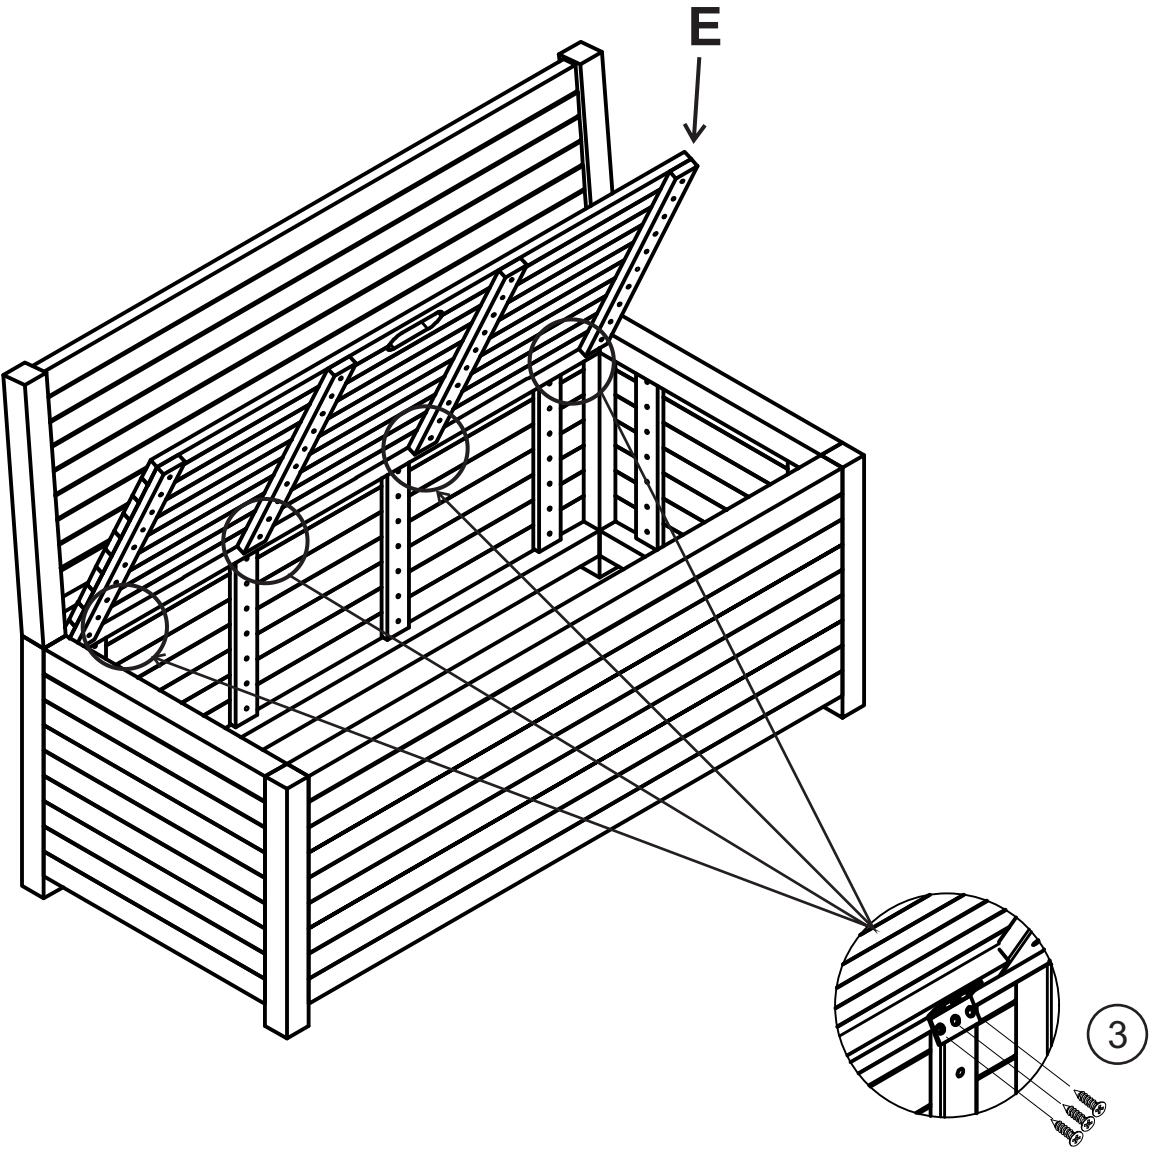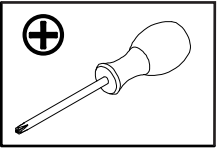

ASSEMBLY INSTRUCTION: 12540083/13

Step 3:

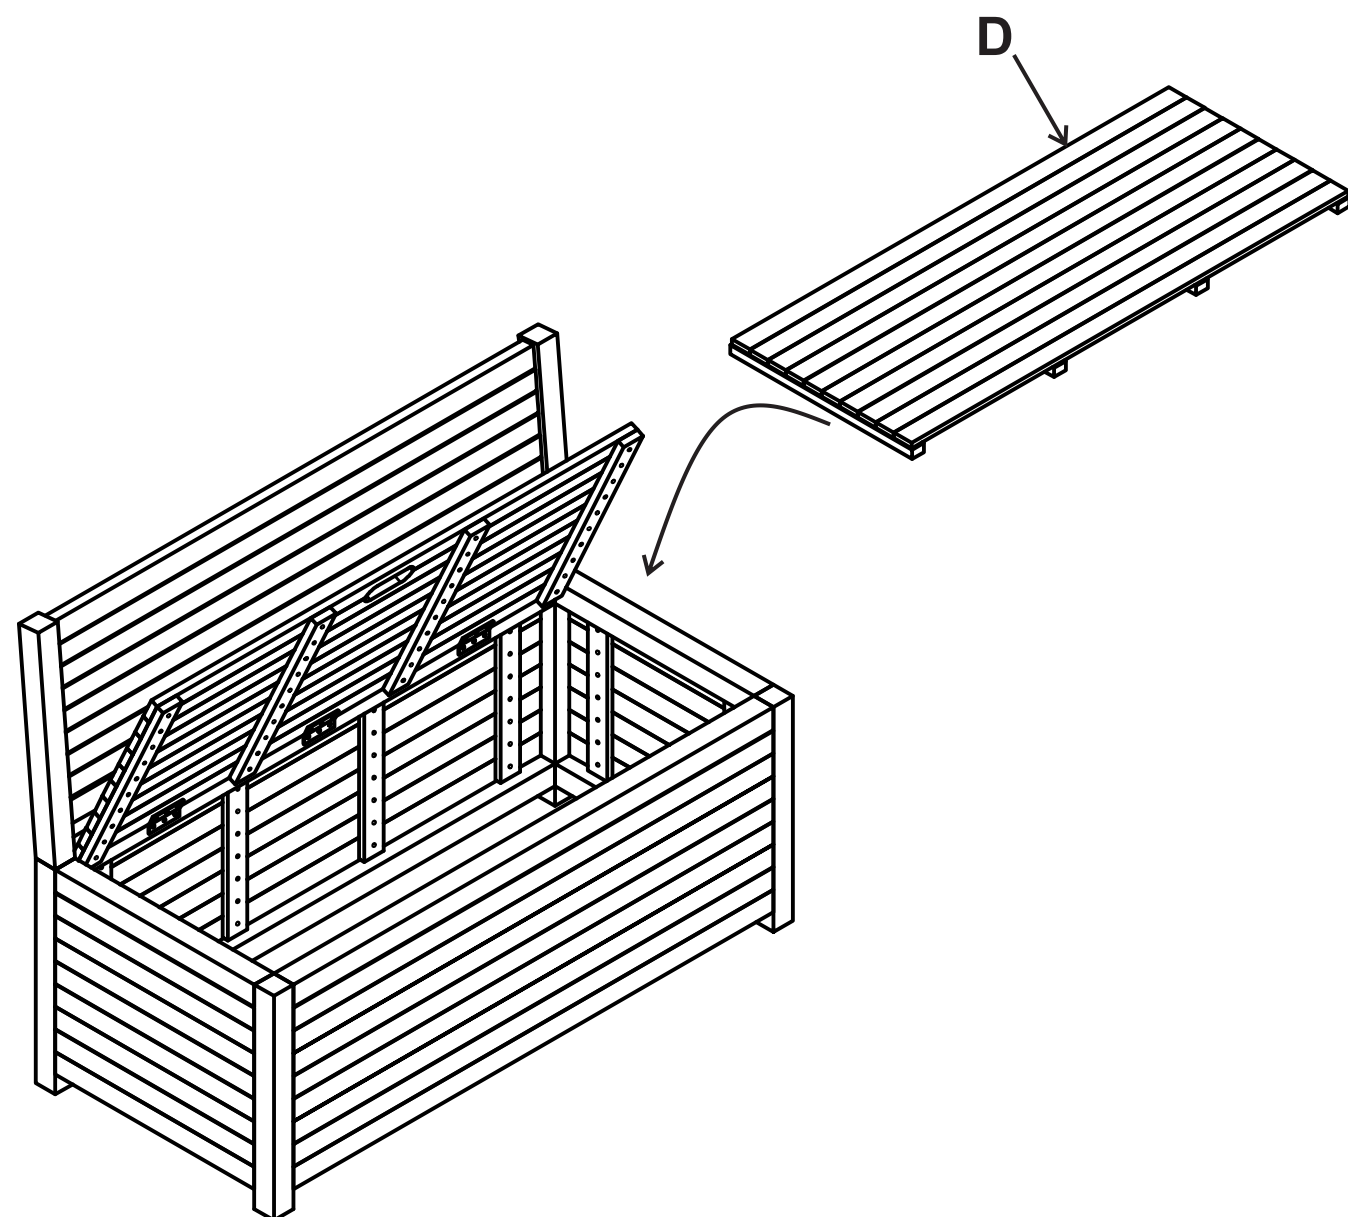

Step 4:

