
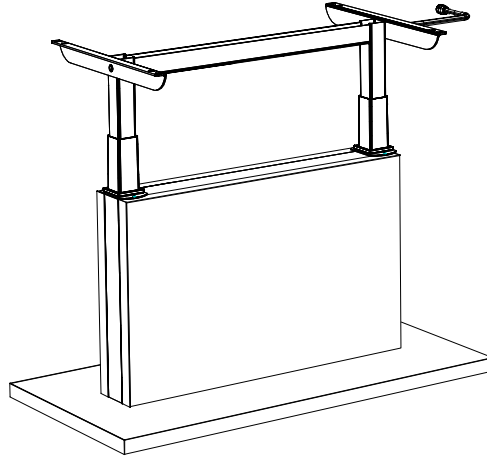
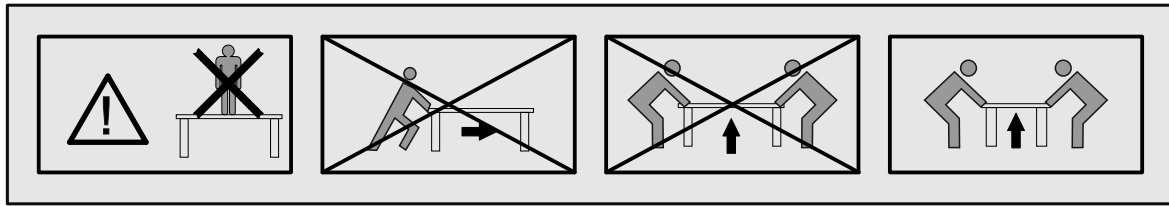


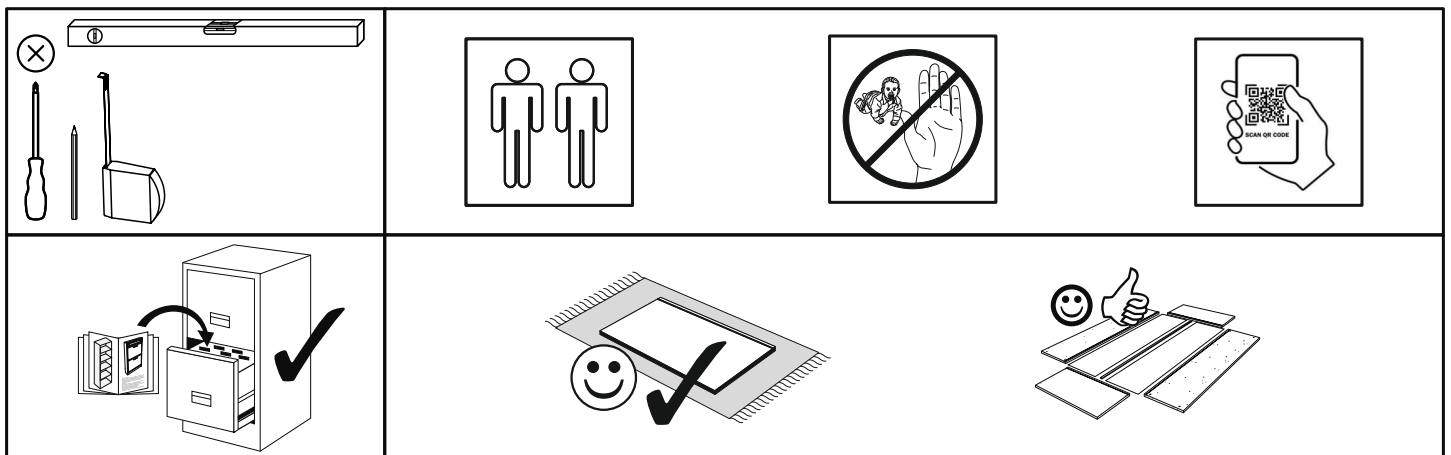

Artikel.-Nr.:






0209-CT-Lift


Montageanleitung.-Nr.:

MA1-00593


SCAN ME

BT1-00691 Colli 1/1


B01-20		B01-33		B01-266		B01-360	
6x	7,0x70	12x	4,0x17	4x	M8x40	4x	M6
B01-241		B01-242		B01-245		B02-183	
1x	SW 5	1x	SW 6	1x		4x	M6x20




Colli 1/1

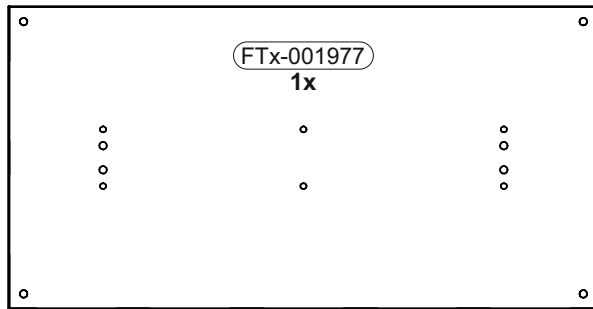



780x400

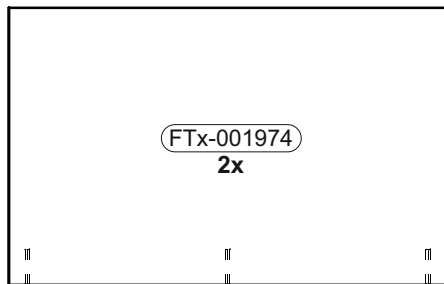


580x367

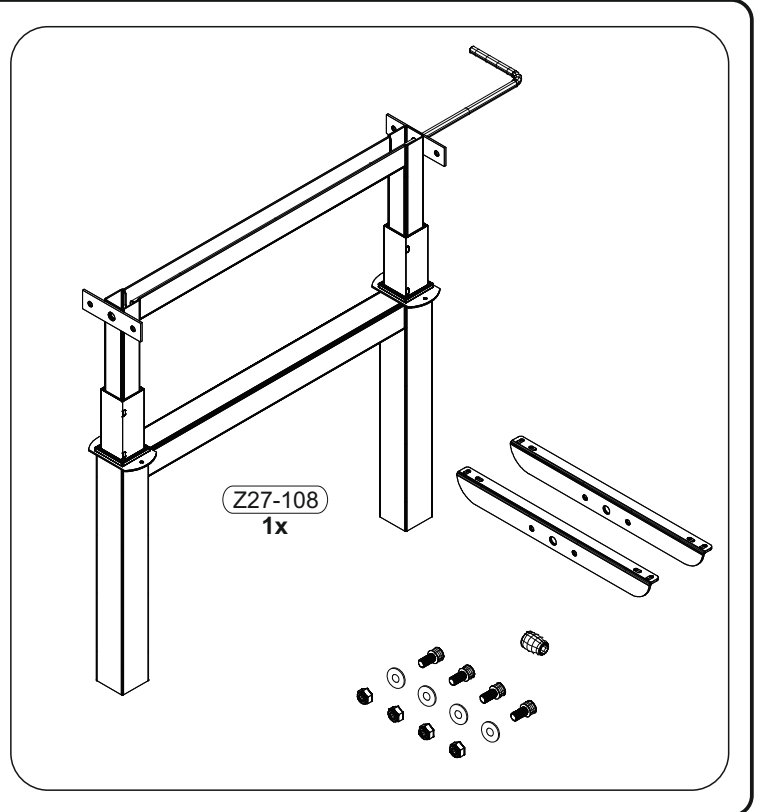


1		B01-360		B01-242		B02-183	
		4x		1x		4x	

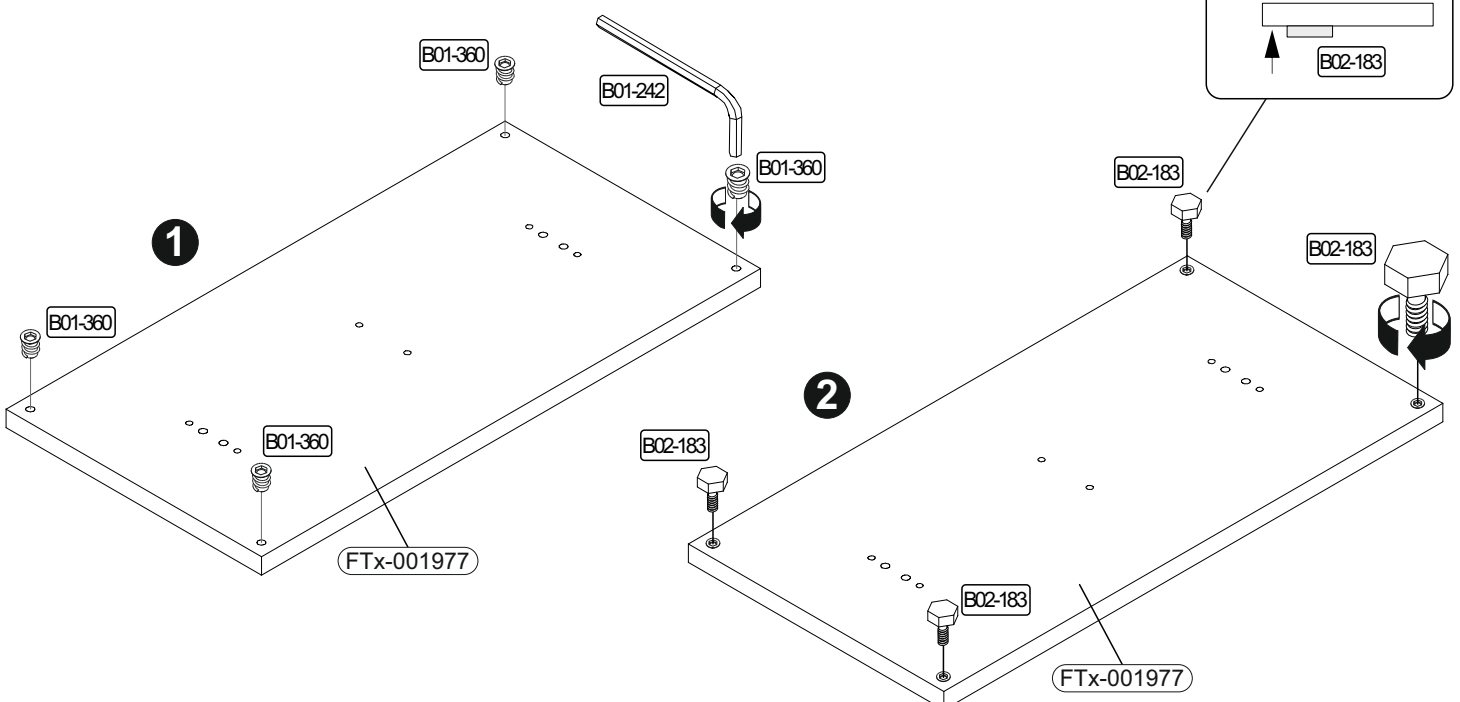


2

					
		1x	SW 5	1x	

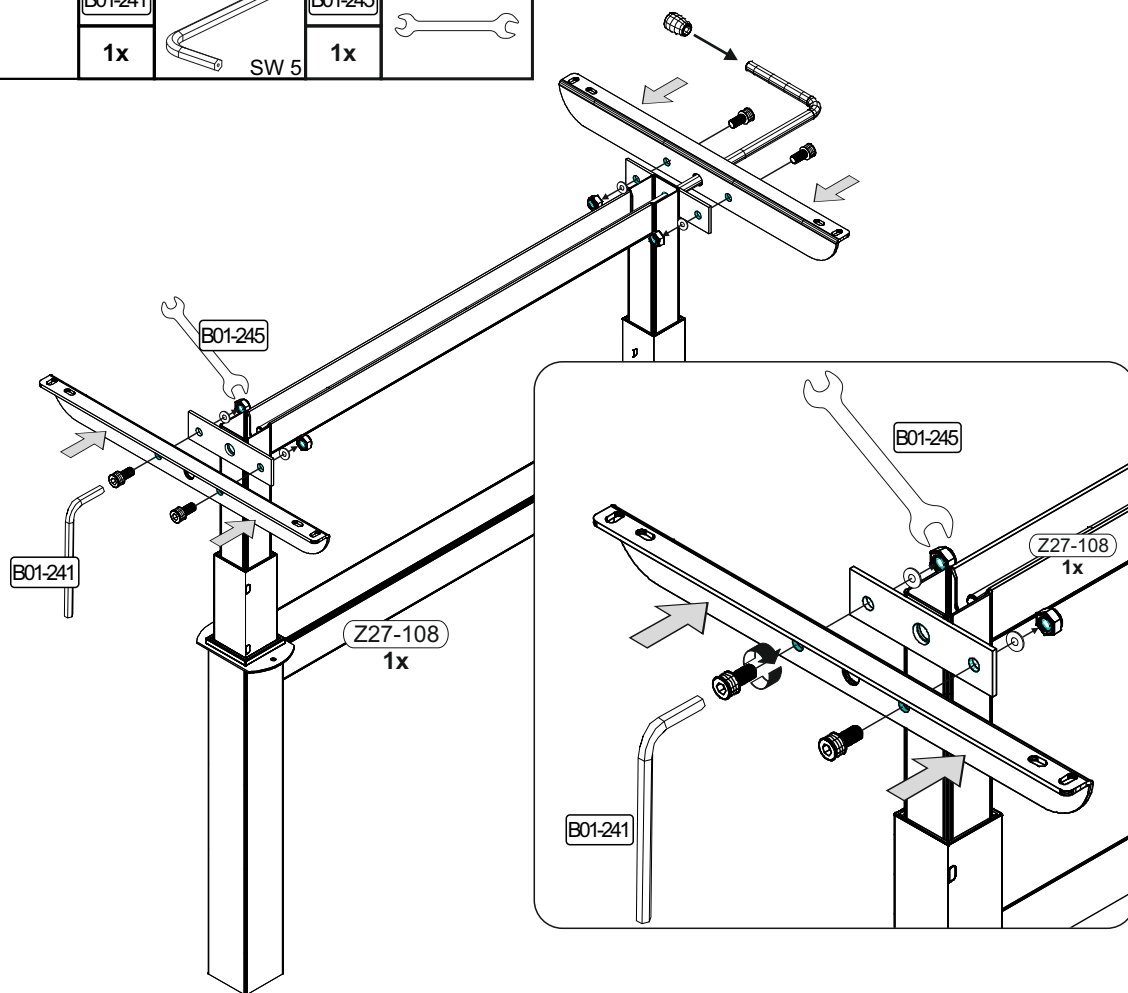


3

	
4x	M8x40
	
1x	SW 5

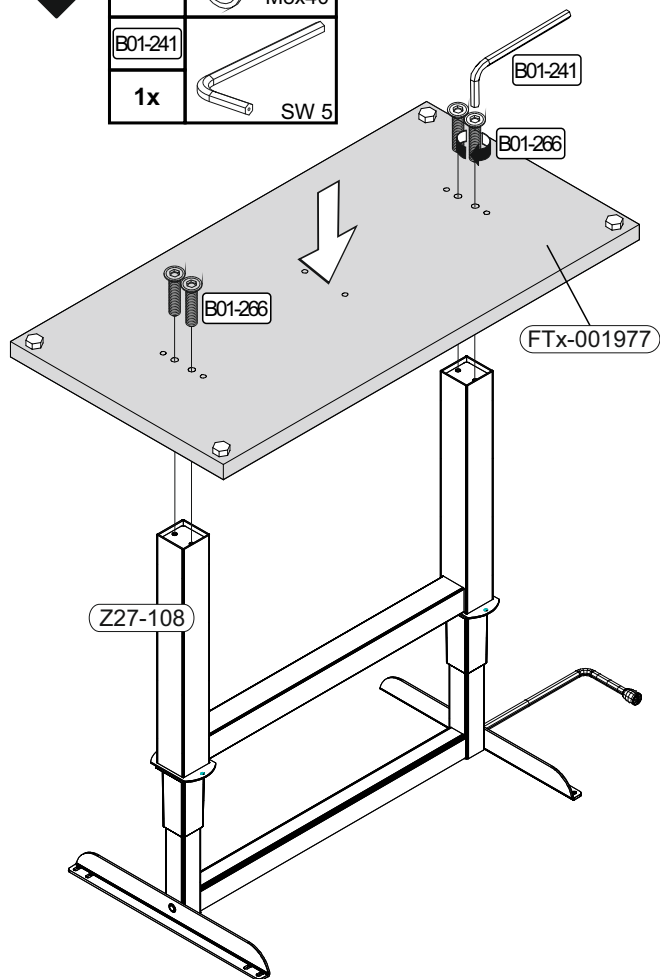




4

	
	6x
	
	7,0x70

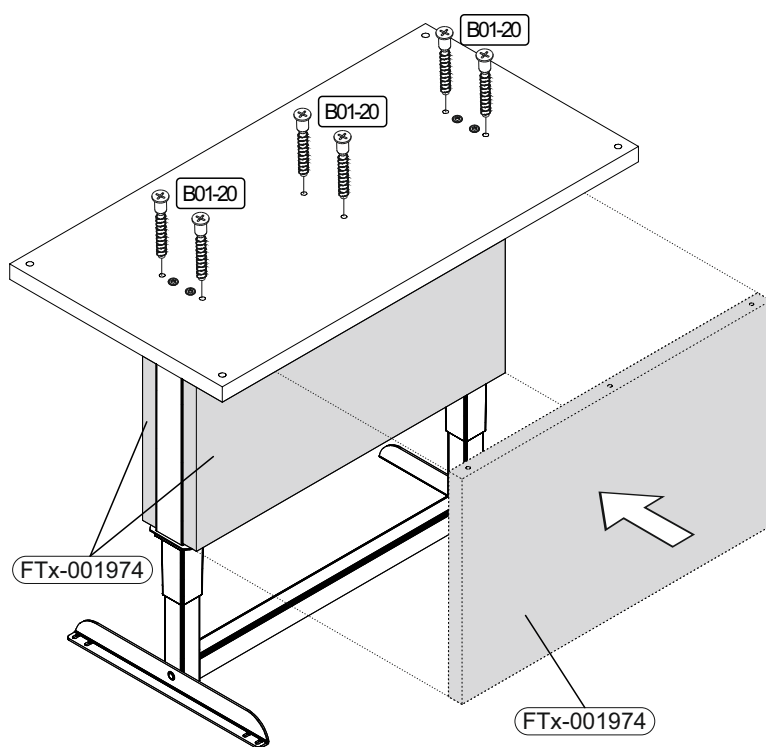



5

	B01-33	
4x		4,0x17

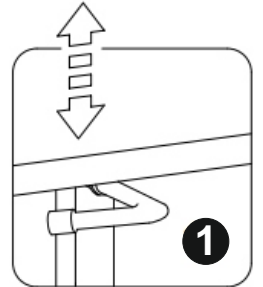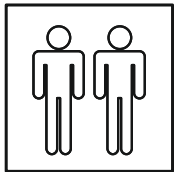
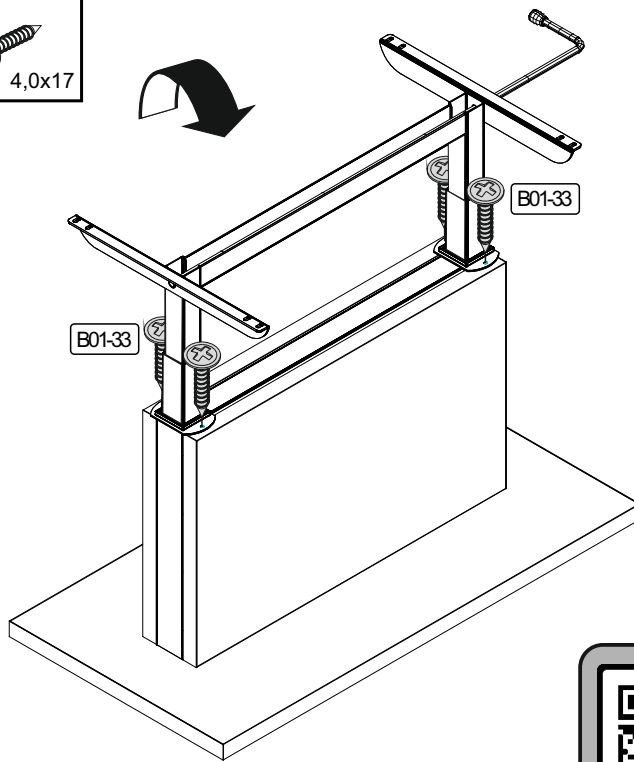


6

	B01-33	
8x		4,0x17

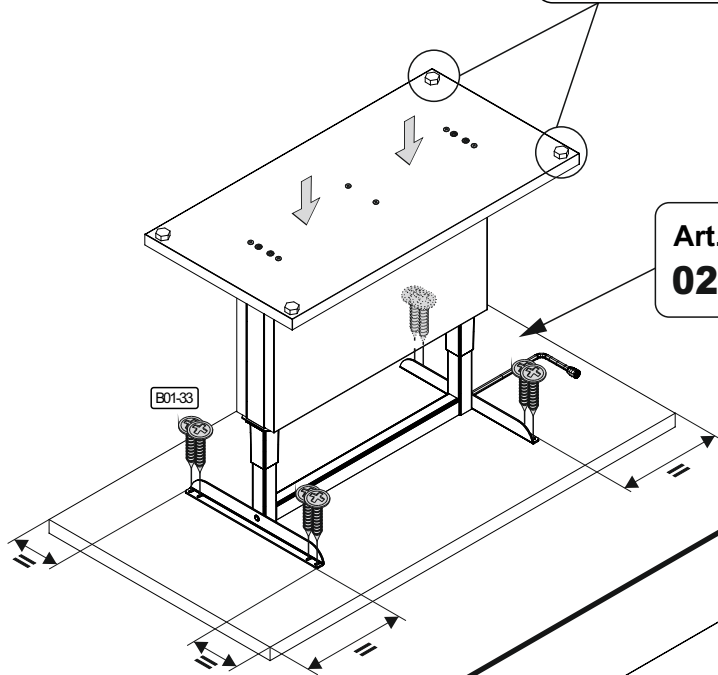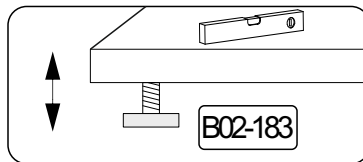





Art.-Nr. :
0205_120 P1

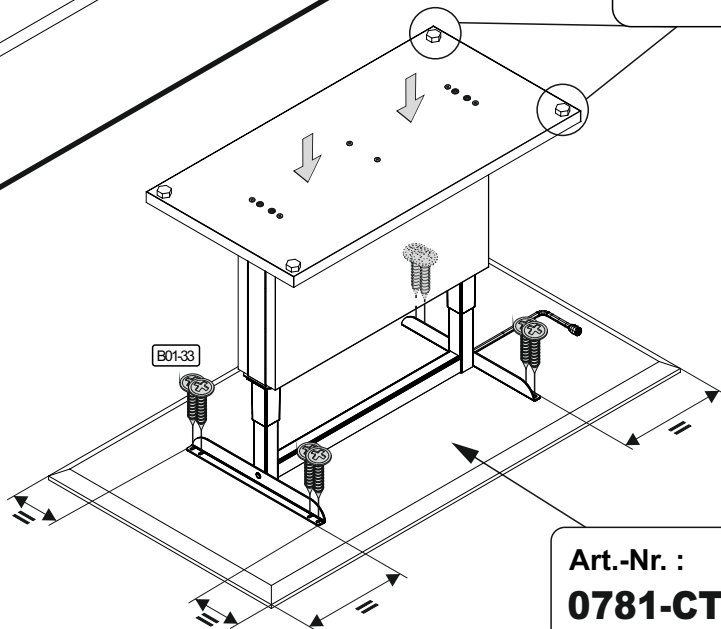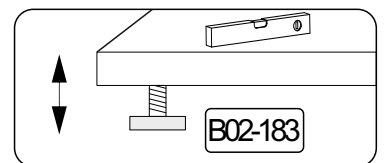

Art.-Nr. :
0781-CT-110x60

7

	B01-33	 4,0x17
	8x	

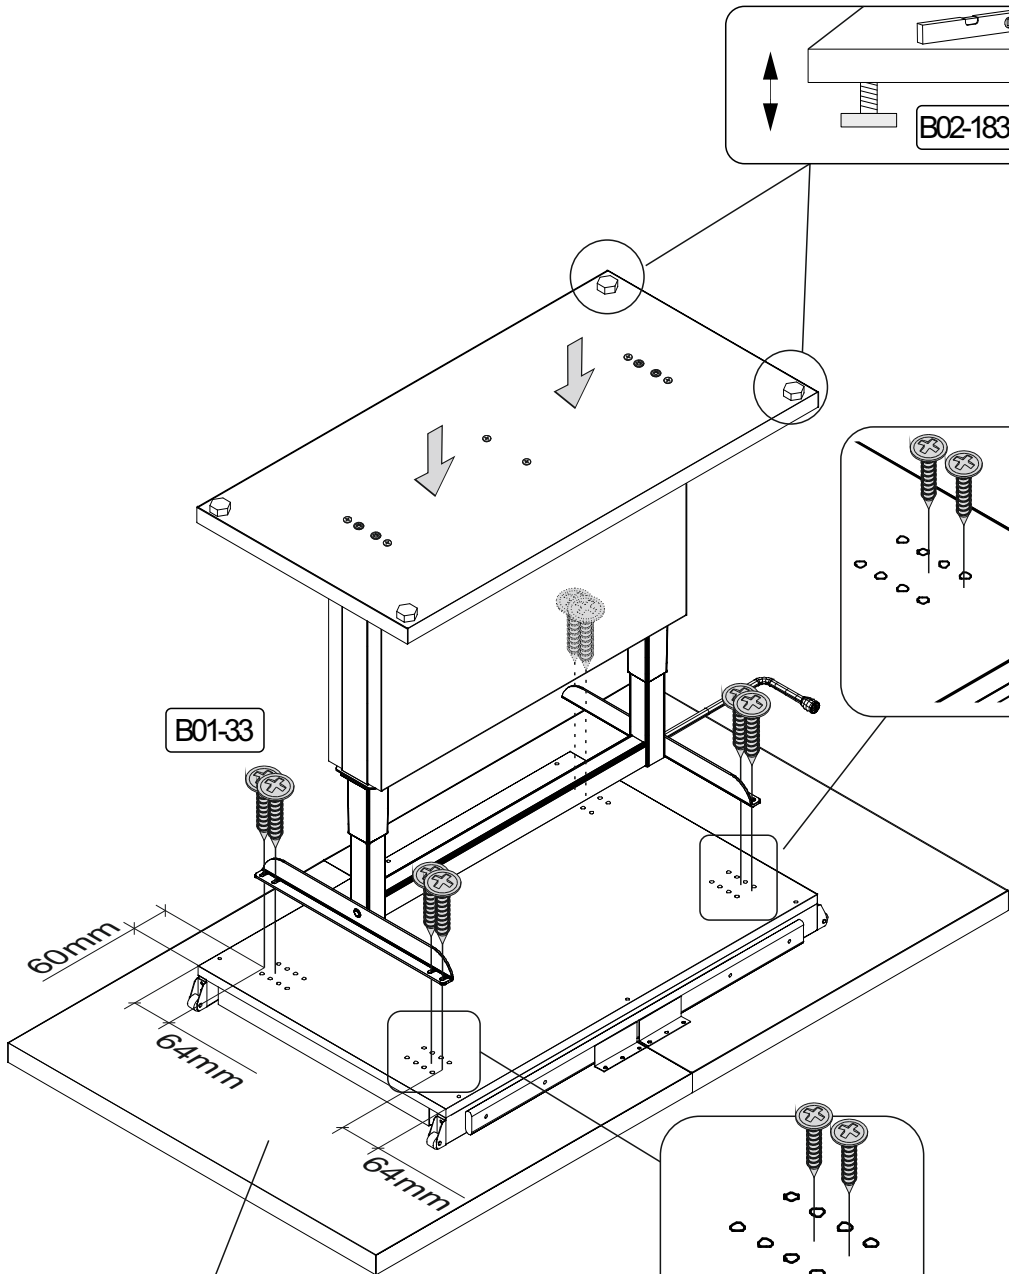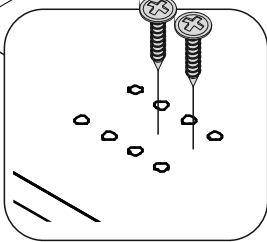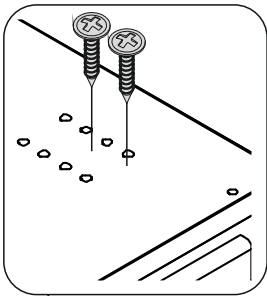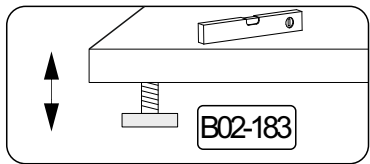

Art.-Nr. :
0210_120-160 P1

