







BOXSPRING ASSEMBLY INSTRUCTIONS


A	B	C	D
			
Headboard Bracket (2 Pieces)	Box Bracket (2 Pieces)	M8 Bolt (8 Pieces)	Feet (12 Pieces)




1

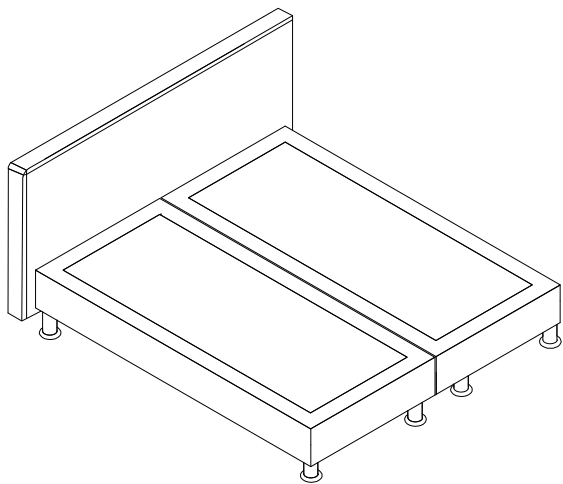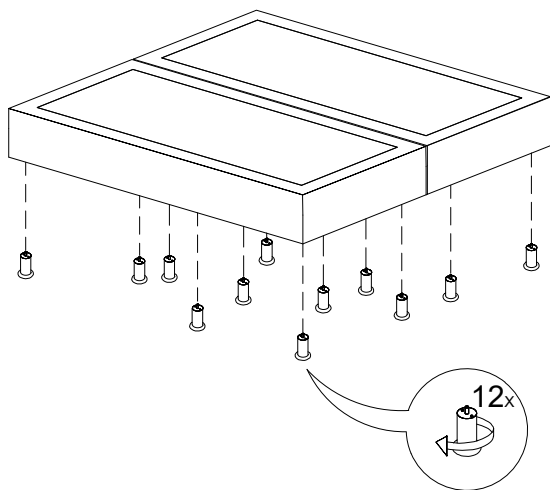

2

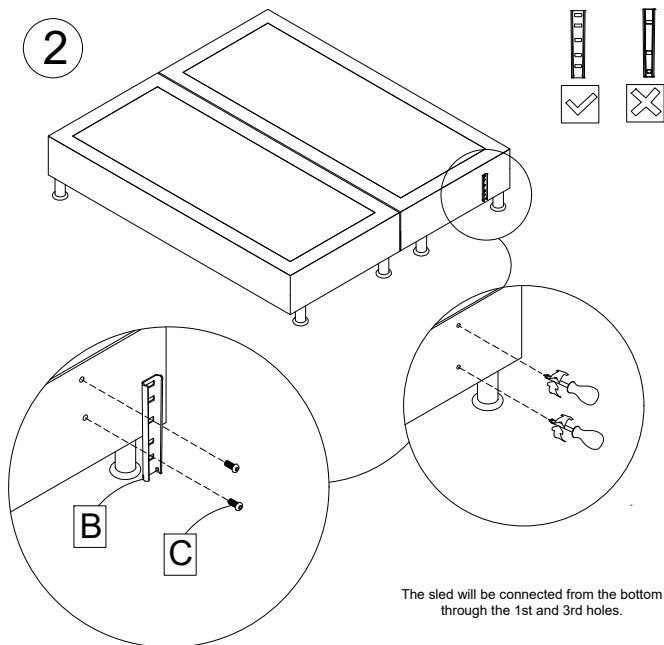

3

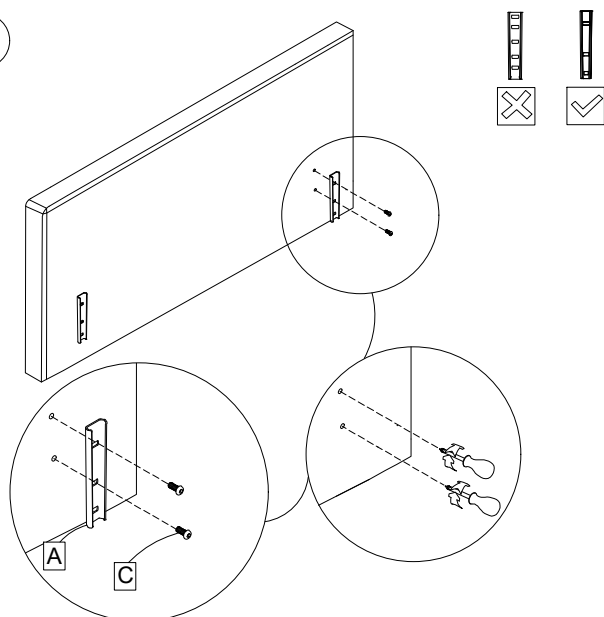

4

