



# Flan\_prm1262

Istruzioni montaggio piedi

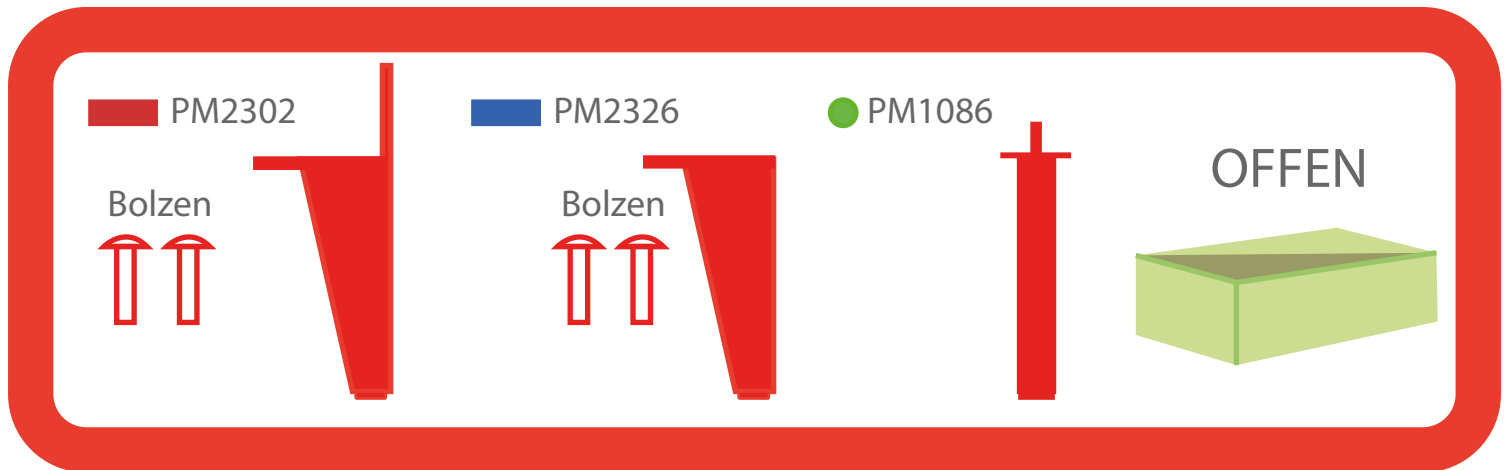


Entfernen Sie die  
Kunststofffüße vor  
der Montage

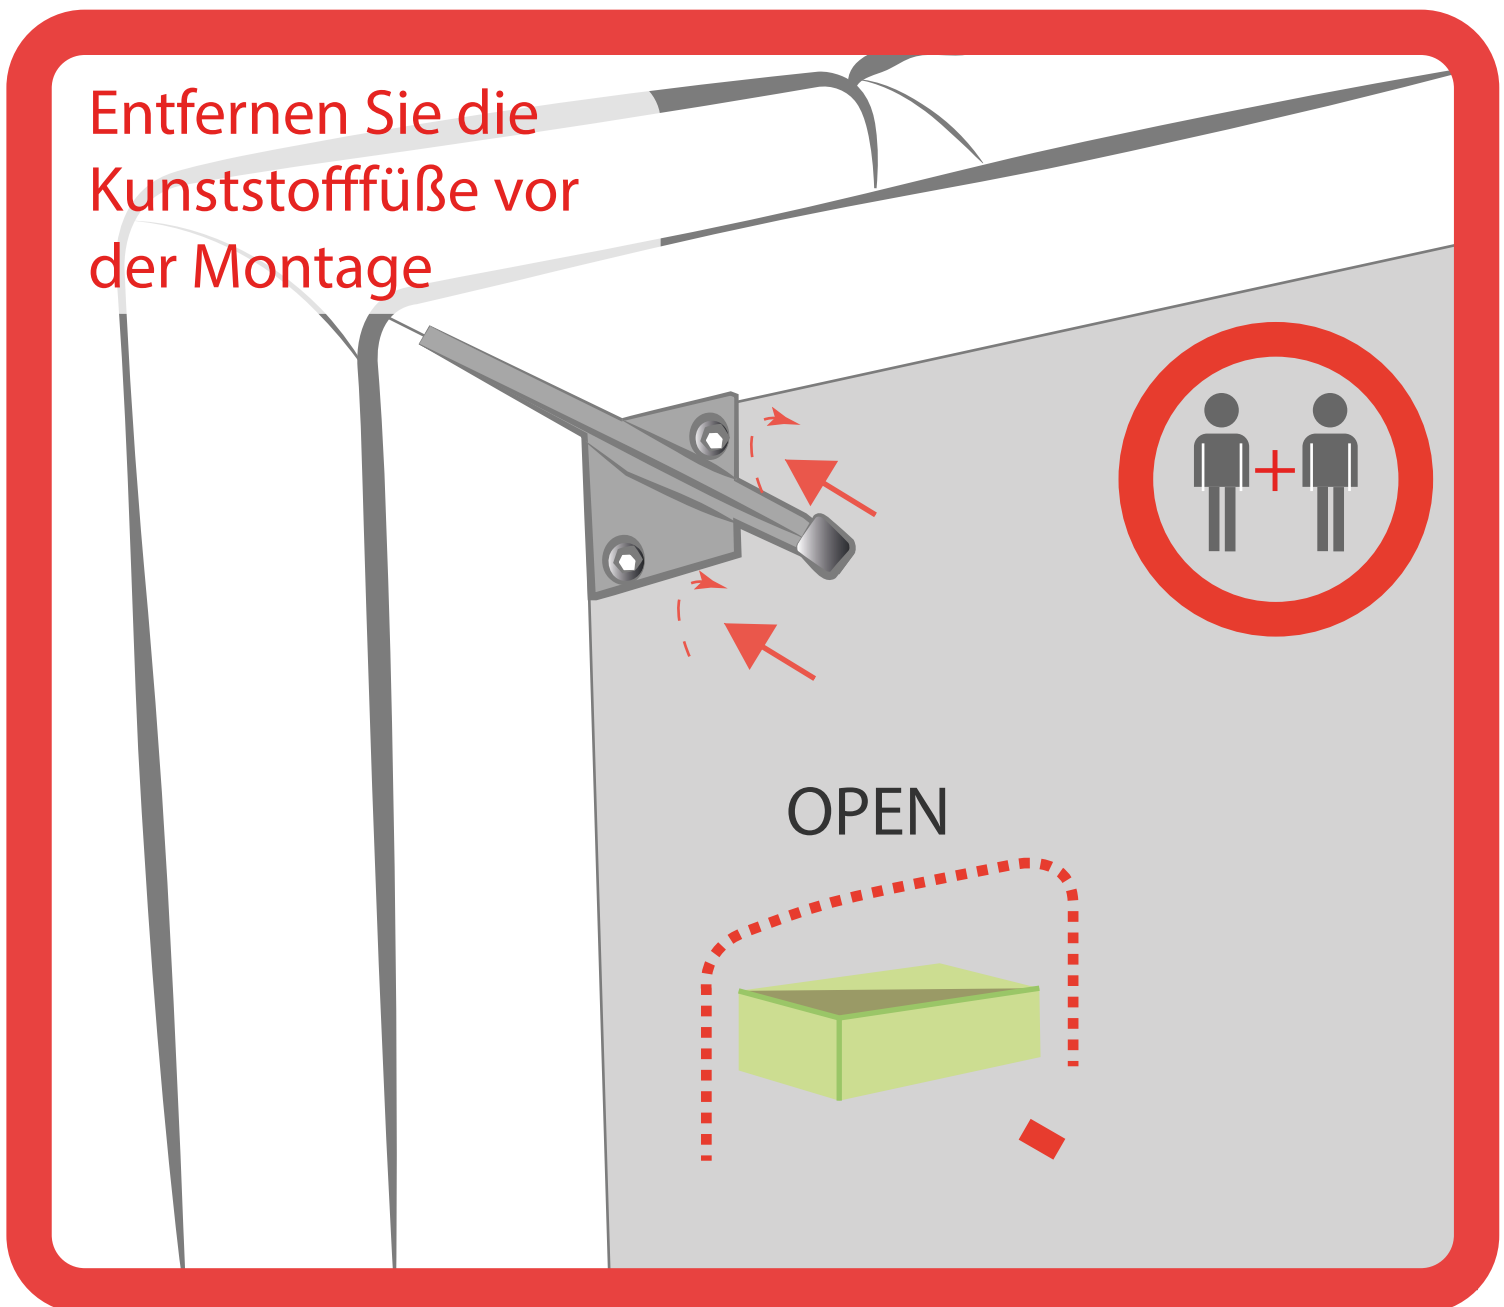


# Flan\_prm1262

Istruzioni montaggio piedi


200




240



300



354



540



635



110



120




114




124




210




220




251




252




310




320




410



420



601



602

