



2X	10 MIN		130kg MAX	(D) AUFBAUANLEITUNG (NL) HANDLEIDING VOOR DE MONTAGE (TR) MONTAJ TALIMATI (RO) INSTRUCTIUNI DE ASAMBLARE (F) INSTRUCTION D'ASSEMBLAGE (CZ) POKYNY K MONTÁŽI (BG) ИНСТРУКЦИИ ЗА МОНТАЖ (HR) NAPUTCI ZA MONTAŽU (E) INSTRUCCIONES DE MONTAJE	(GB) ASSEMBLY INSTRUCTIONS (PL) INSTRUKCJA MONTAŻU (RU) Инструкция по монтажу (I) PROCEDURA DI ASSEMBLAGGIO (SK) POKYNY K MONTÁŽI (HU) KÖZGYŰLÉS UTASÍTÁSOK (SLO) ASSEMBLY INSTRUCTIONS (S) MONTERINGSANVISNING (LT) DIEGIMO INSTRUKCIJOS
MODEL "COLOSSEO"					

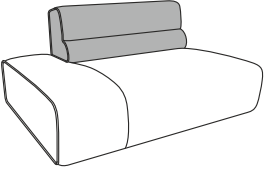

designwerk
FIRST CLASS LIVING





2HT LI RVM

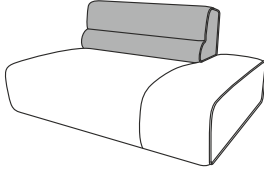

2HT RE RVM


1/2

A 65mm  4x	B  1x	C  4x	
--	---	---	--


HARDWARE BAG / SACHET MATÉRIEL / ZUBEHÖRBEUTEL / SACCHETTI MATERIALE / BOLSA DE MATERIALES / WOREK MATERIALOWY

0
10
20
30
40
50
60
70
80
90
100
110
120
130
140
150
160
170
180

1

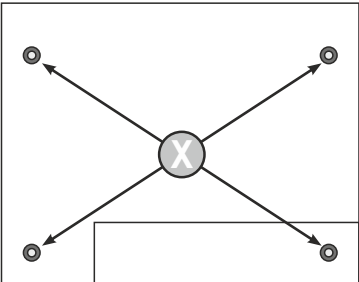



2HT LI

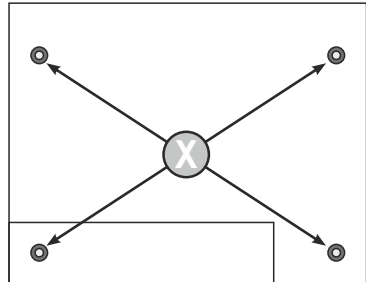


2HT RE


2

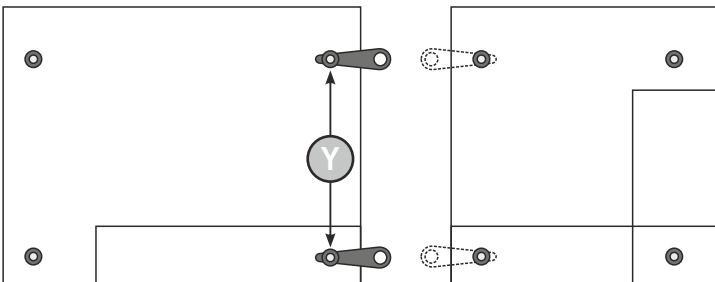


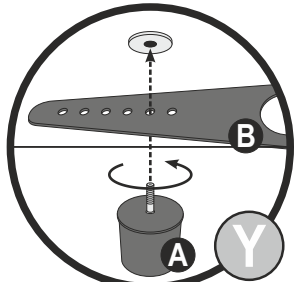


3

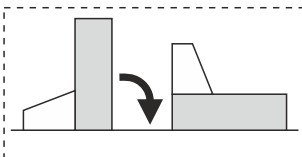

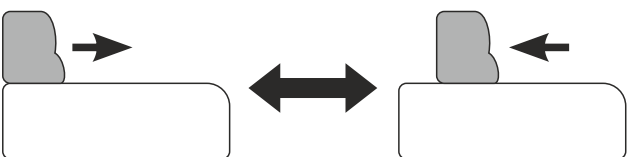

2X	10 MIN		130kg MAX	D AUFBAUANLEITUNG NL HANDLEIDING VOOR DE MONTAGE TR MONTAJ TALIMATI RO INSTRUCTIUNI DE ASAMBLARE F INSTRUCTION D'ASSEMBLAGE CZ POKYNY K MONTÁŽI BG ИНСТРУКЦИИ ЗА МОНТАЖ HR NAPUTCI ZA MONTAŽU E INSTRUCCIONES DE MONTAJE	GB ASSEMBLY INSTRUCTIONS PL INSTRUKCJA MONTAŻU RU Инструкция по монтажу I PROCEDURA DI ASSEMBLAGGIO SK POKYNY K MONTÁŽI HU KÖZGYŰLÉS UTASÍTÁSOK SLO ASSEMBLY INSTRUCTIONS S MONTERINGSANVISNING LT DIEGIMO INSTRUKCIJOS
MODEL "COLOSSEO"					

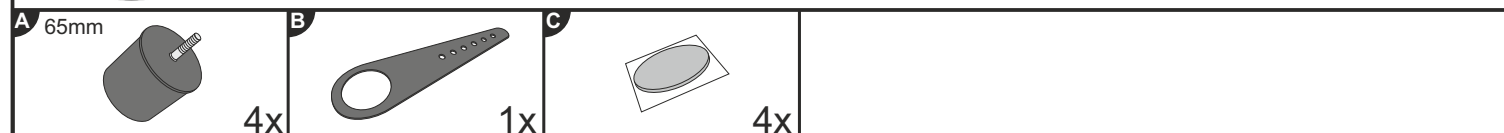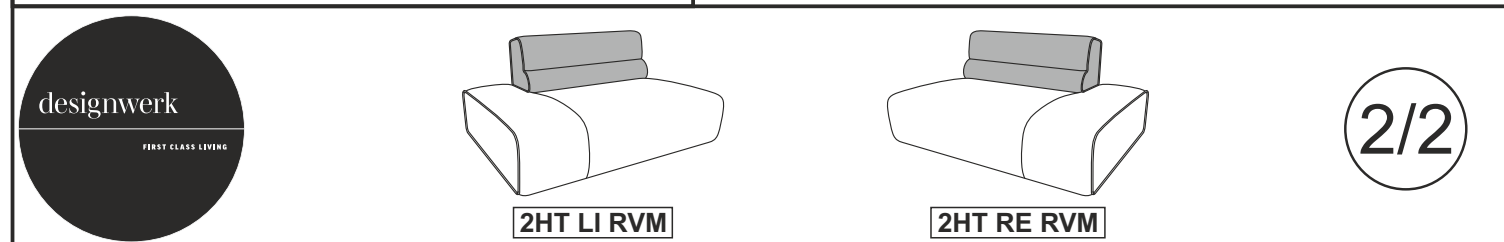

HARDWARE BAG / SACHET MATÉRIEL / ZUBEHÖRBEUTEL / SACCHETTI MATERIALE / BOLSA DE MATERIALES / WOREK MATERIALOWY

