
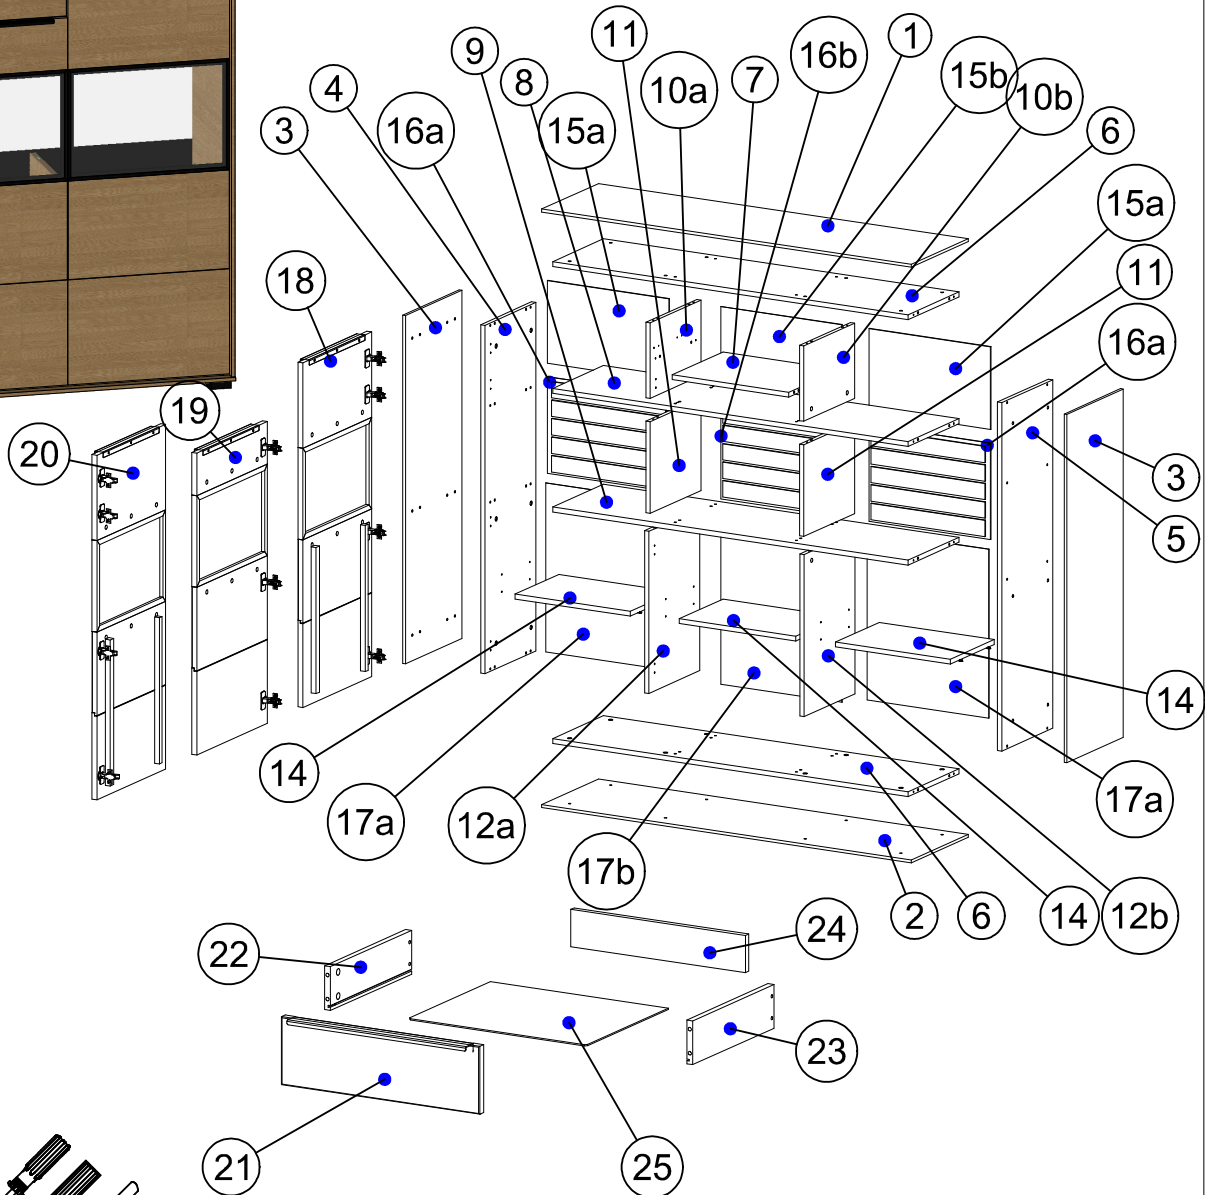


2646











versionsnummer:




12.2023

Naturholz kann sich werkstoffbedingt verziehen. Durch das Montieren ziehen sich Teile wieder plan.








x2		3h 20'					
A Ø 8x30 A1 Ø 8x50 8		E 8		F 8		B1-D1-Z1 9/9/9	
J Ø 5x13 42		L Ø 6,4x50 36		M 4		D 16	
C1 Ø 4x30 12		T Ø 3x16 2		R 3		B 16	
I 12		G M6x20 28		H Ø 3x16 84		Filz 6	
O OL1/OR1		P 40		E1 Ø 6,3x13 3		F1 3	
N 2		V 6		R1 1		K M6x22 28	
Z 52							

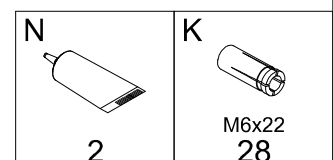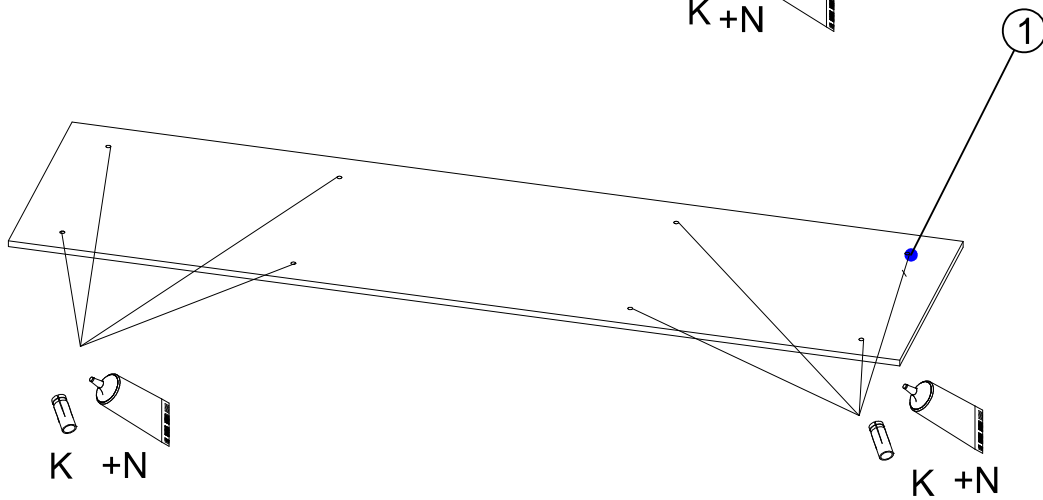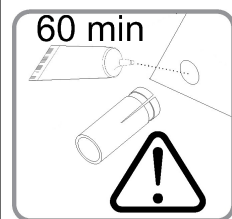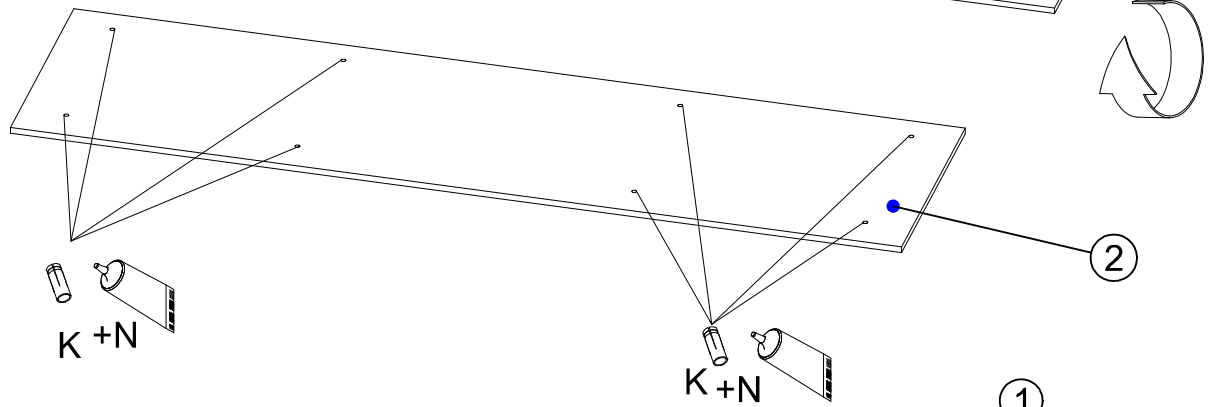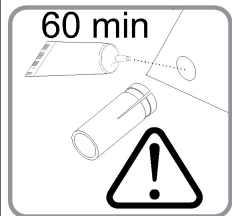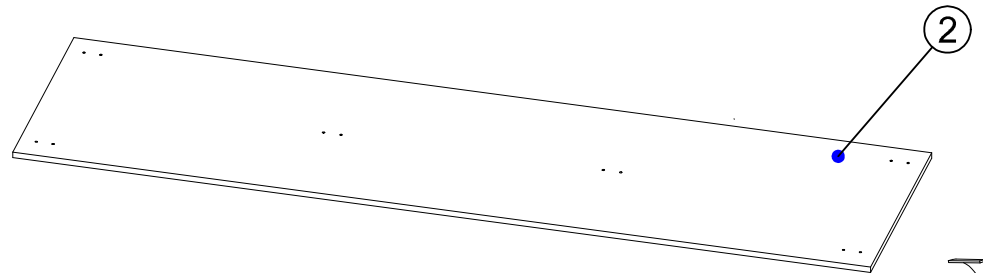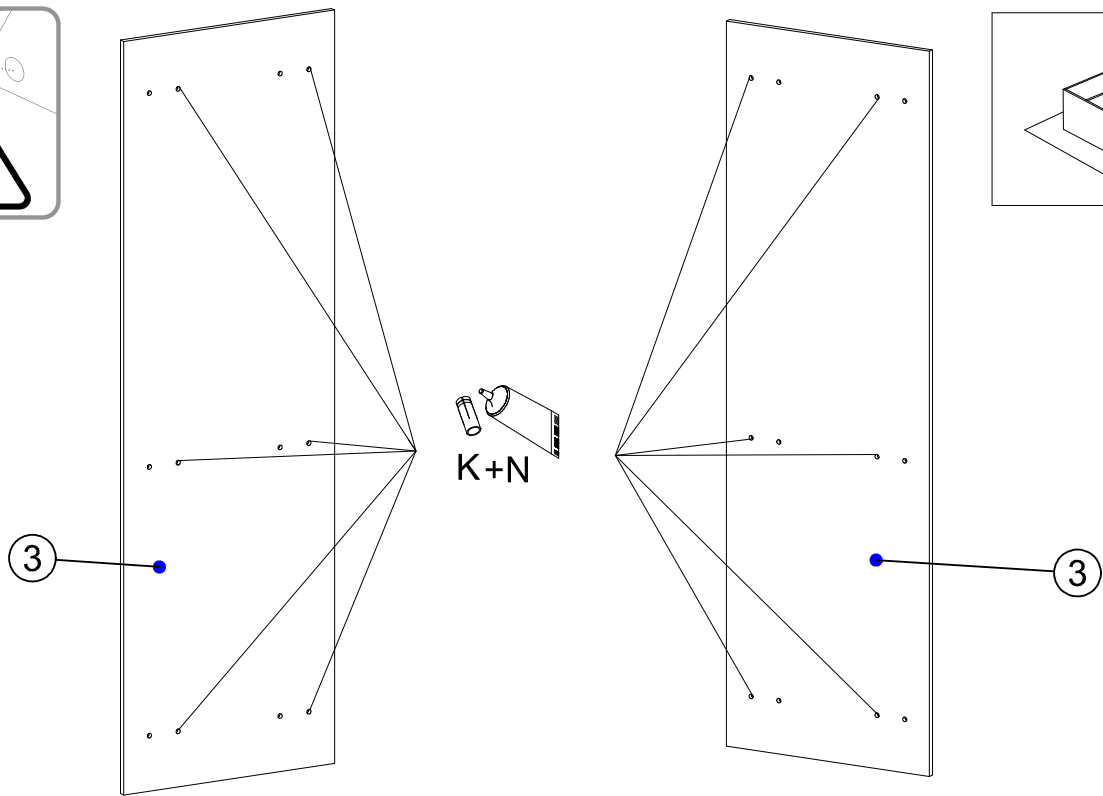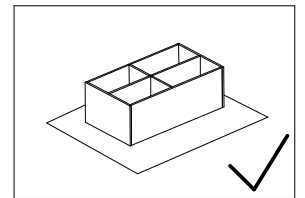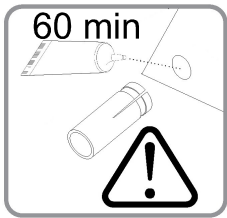

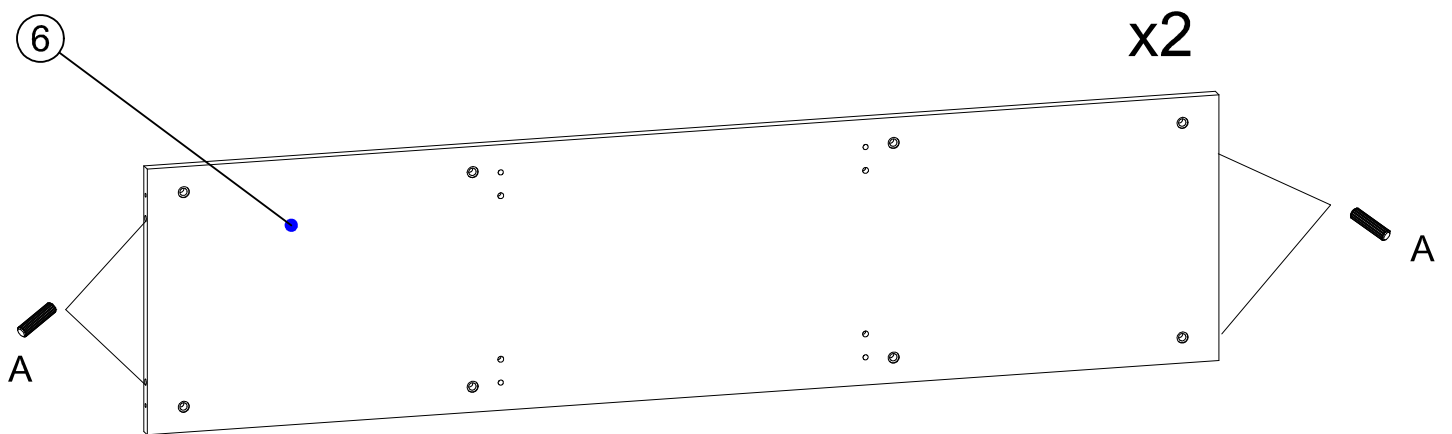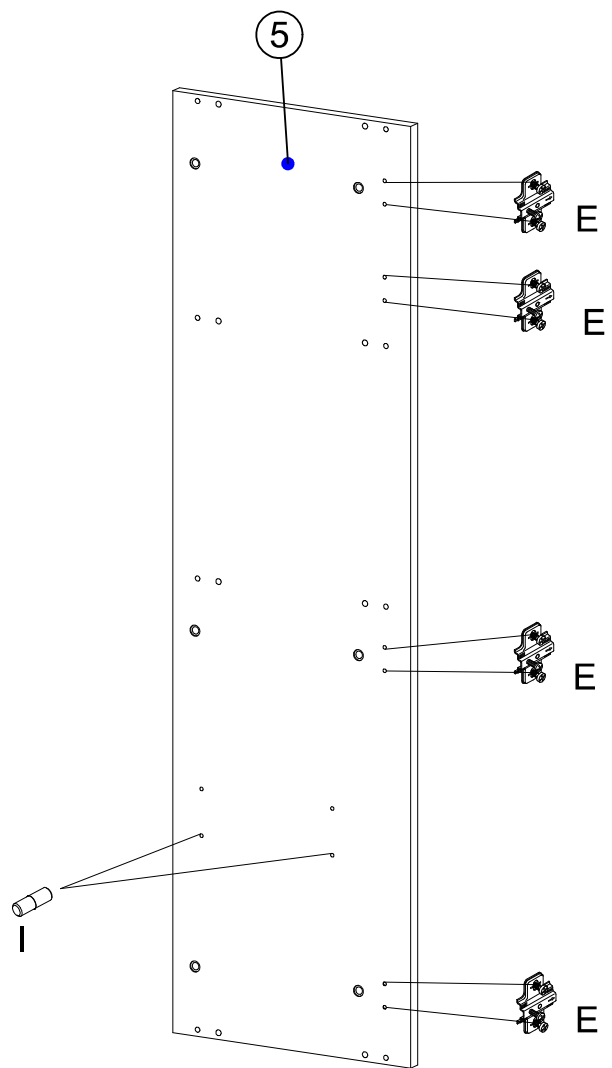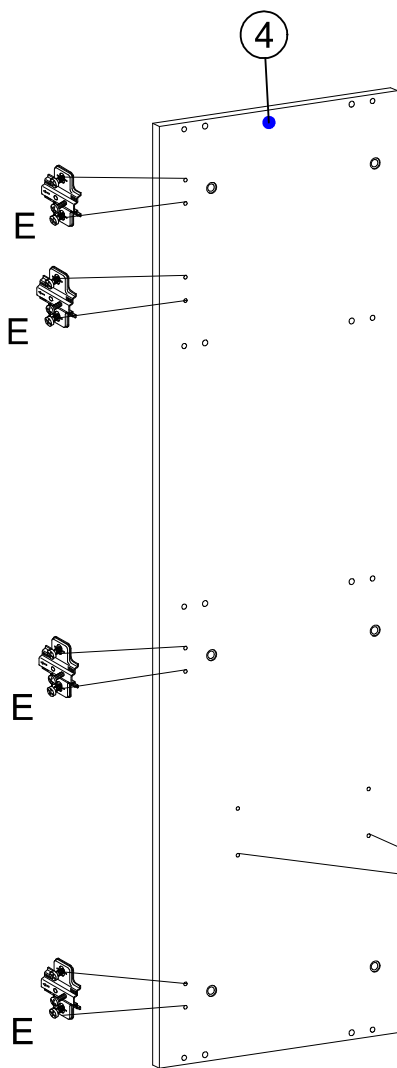


II


A  Ø 8x30 8	E  Ø 6.3x13 8	I  4
--	--	---

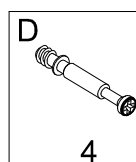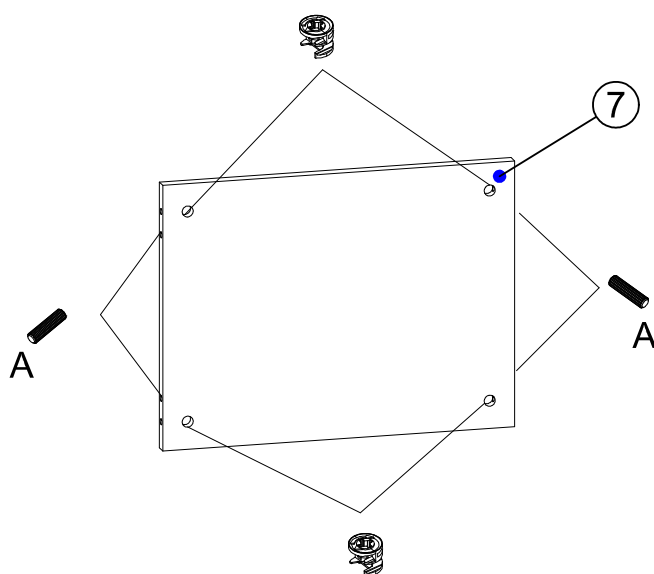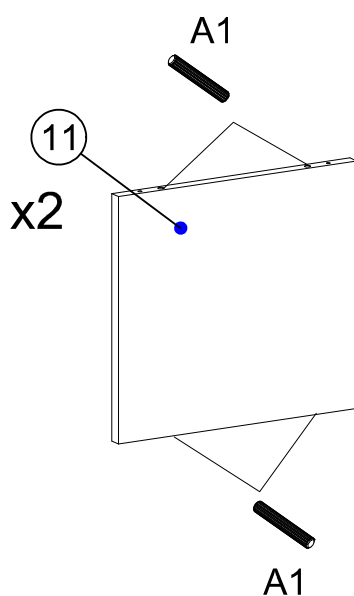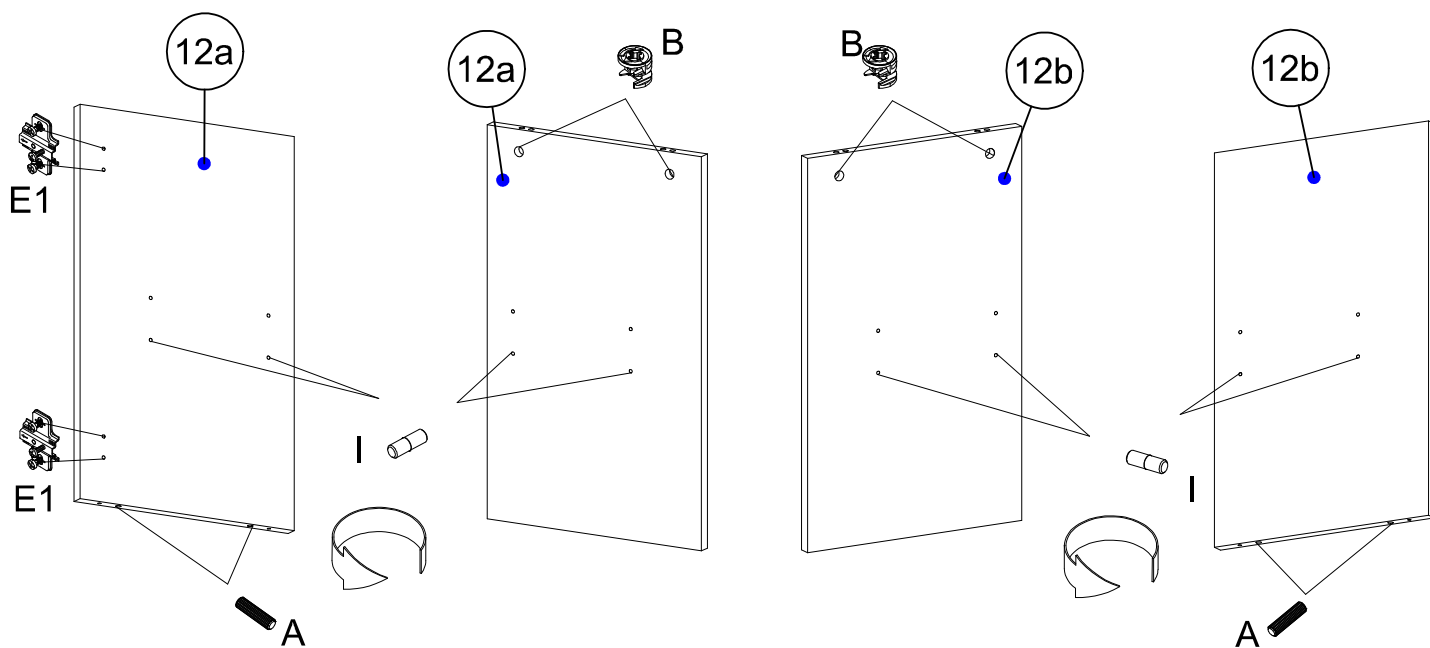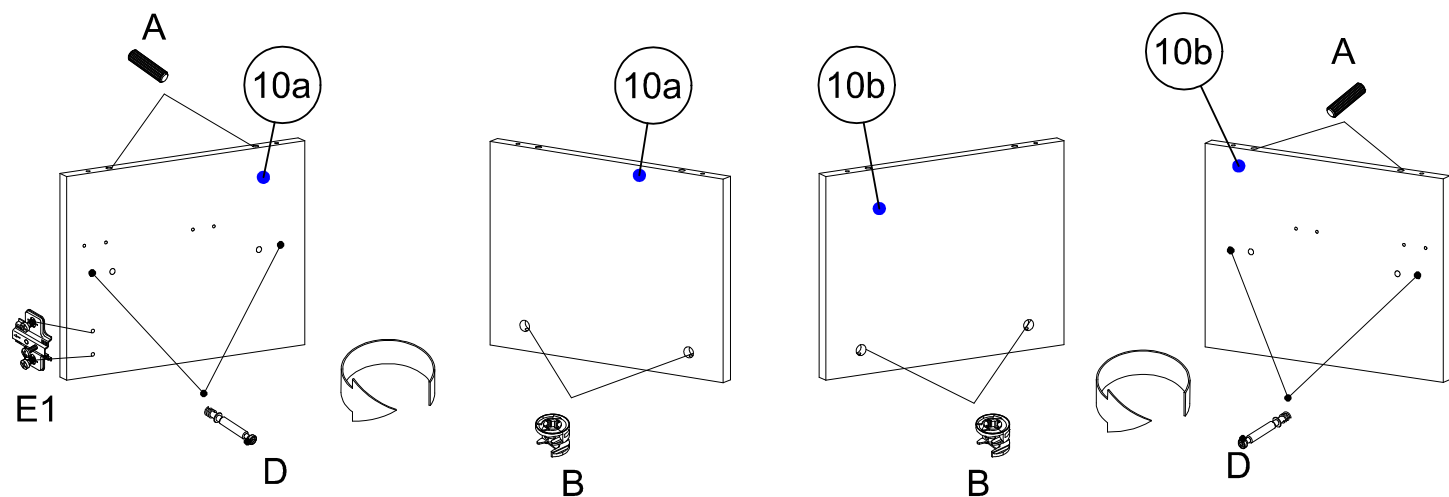


4

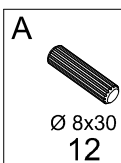

Ø 8x30
12

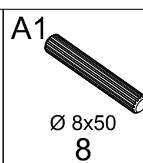


Ø 8x50
8




12







3





8

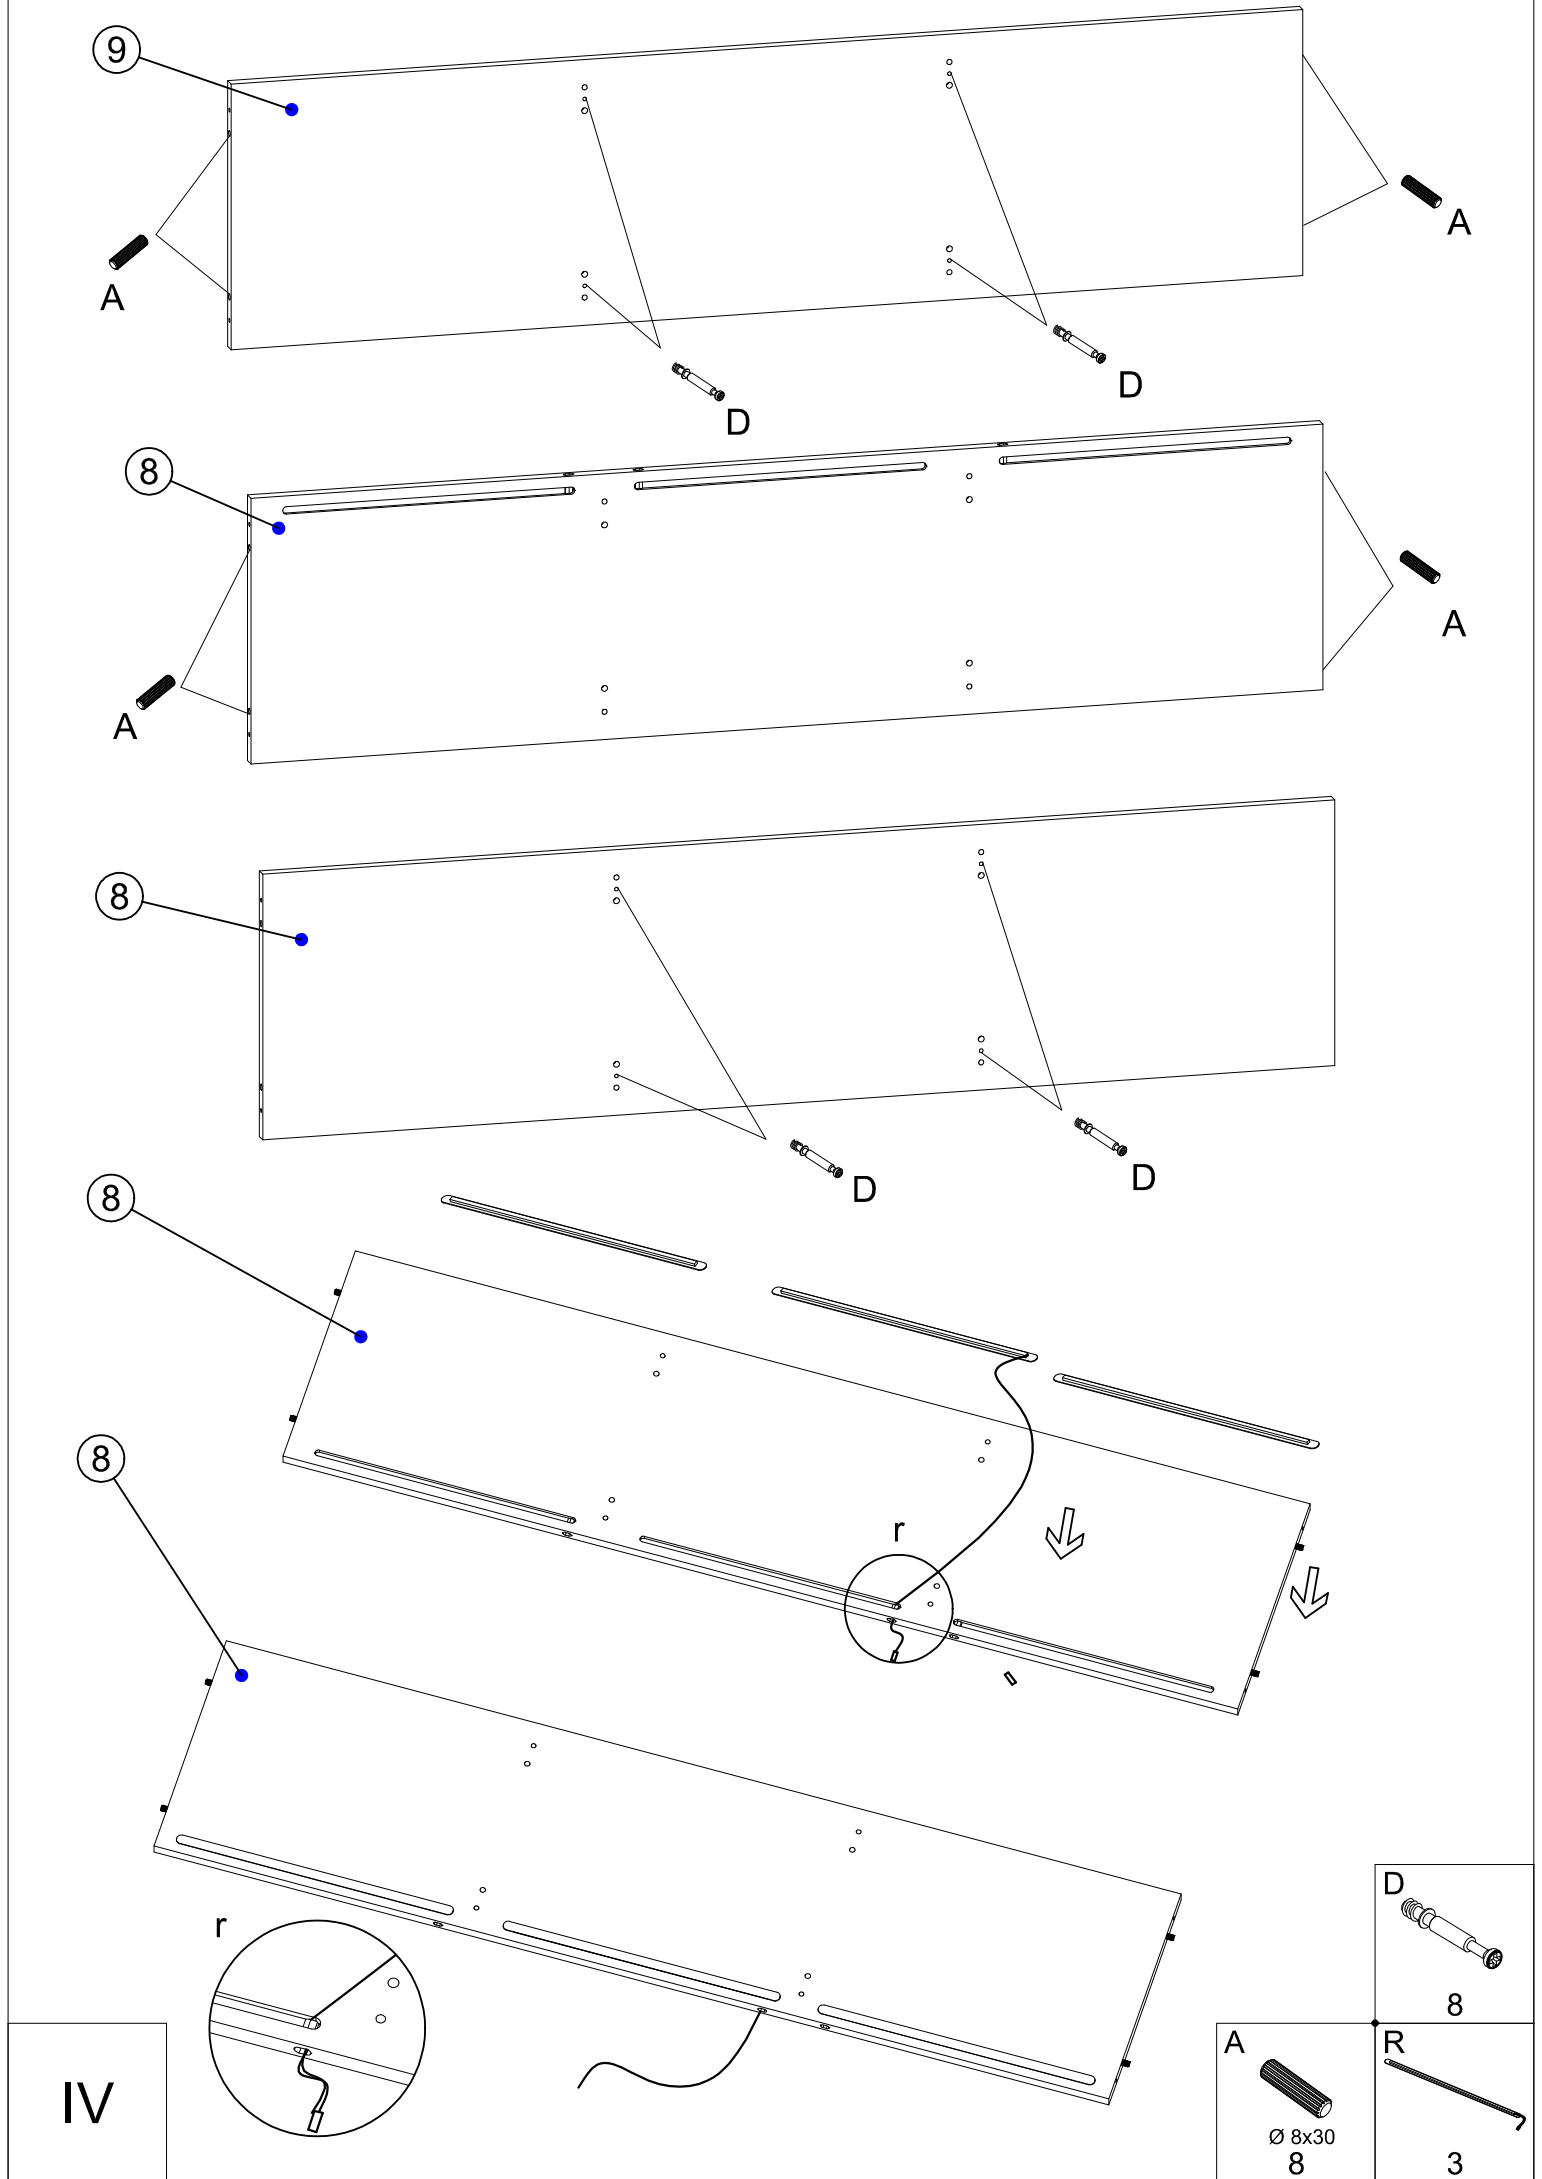

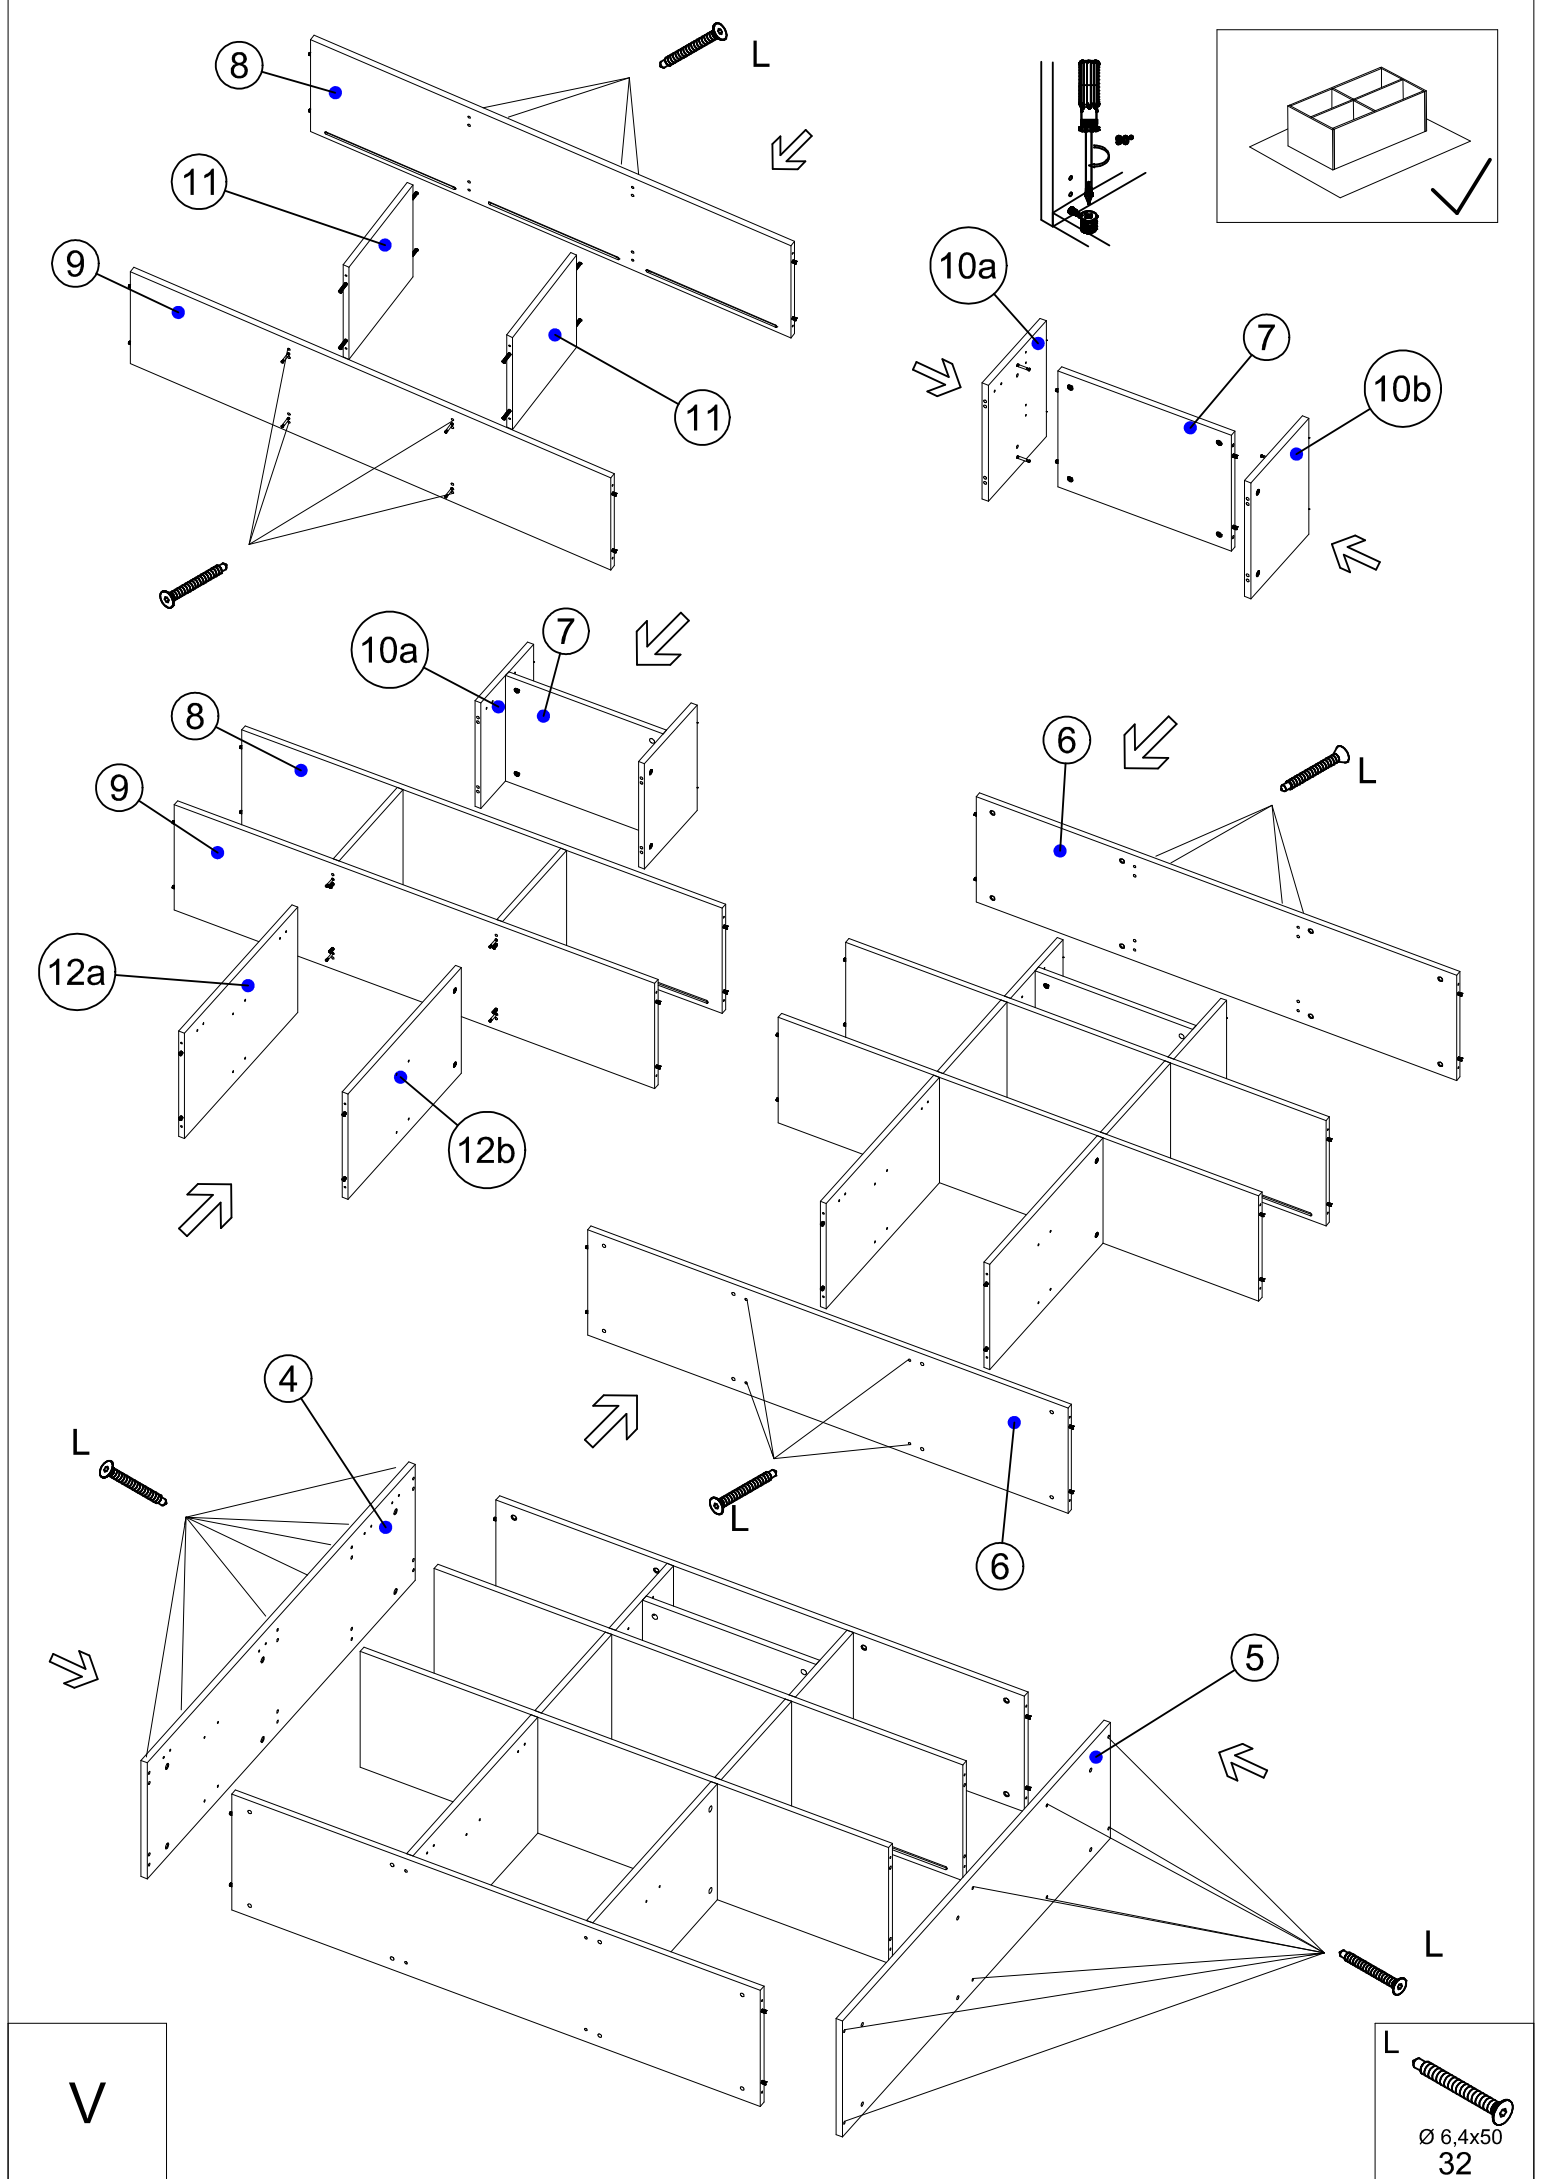

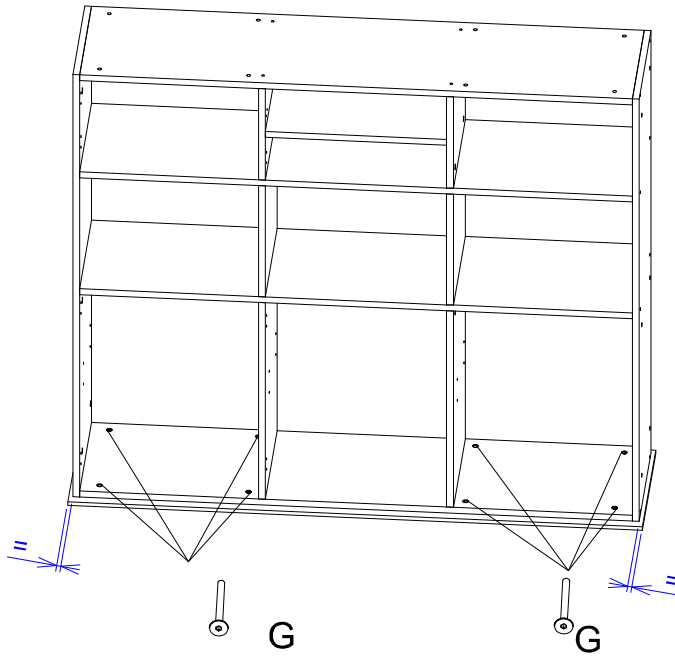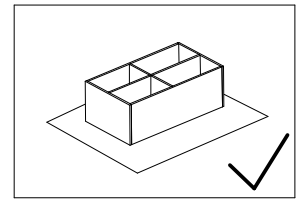
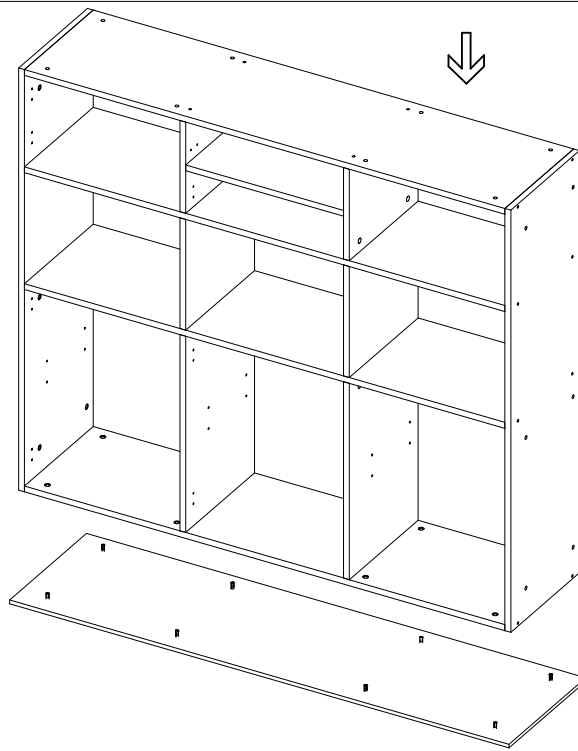


VI

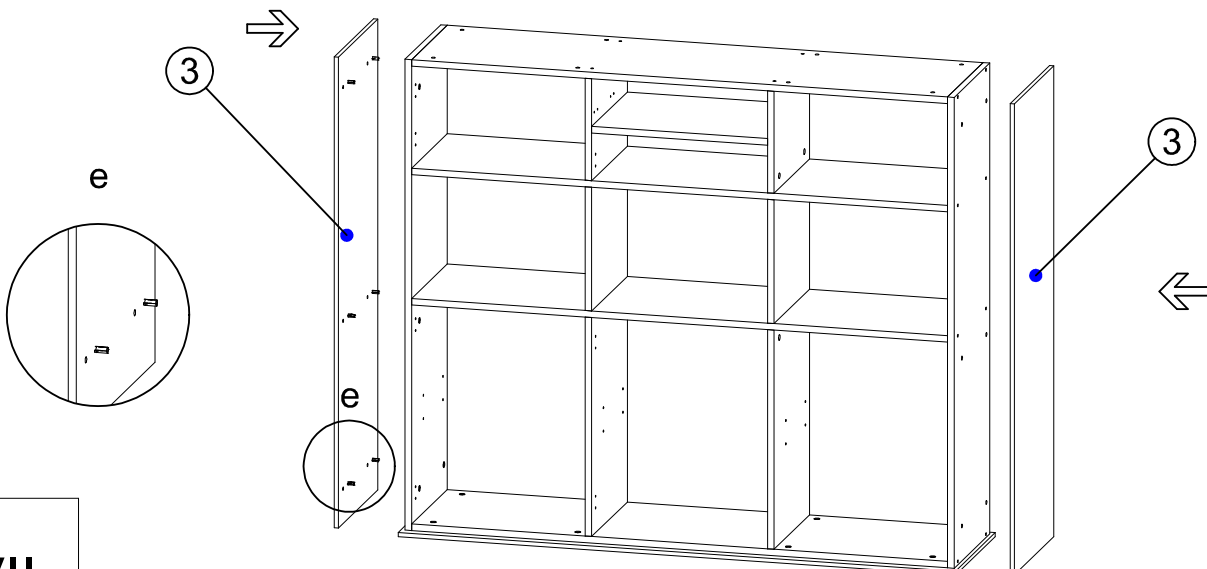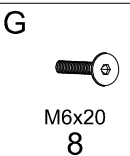

VII

VIII

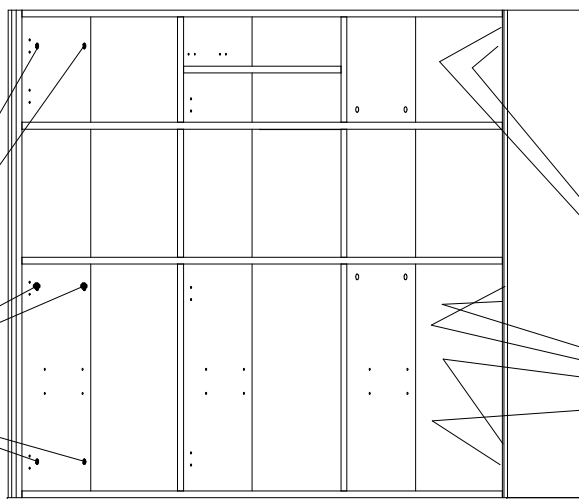



G



M6x20
12



1

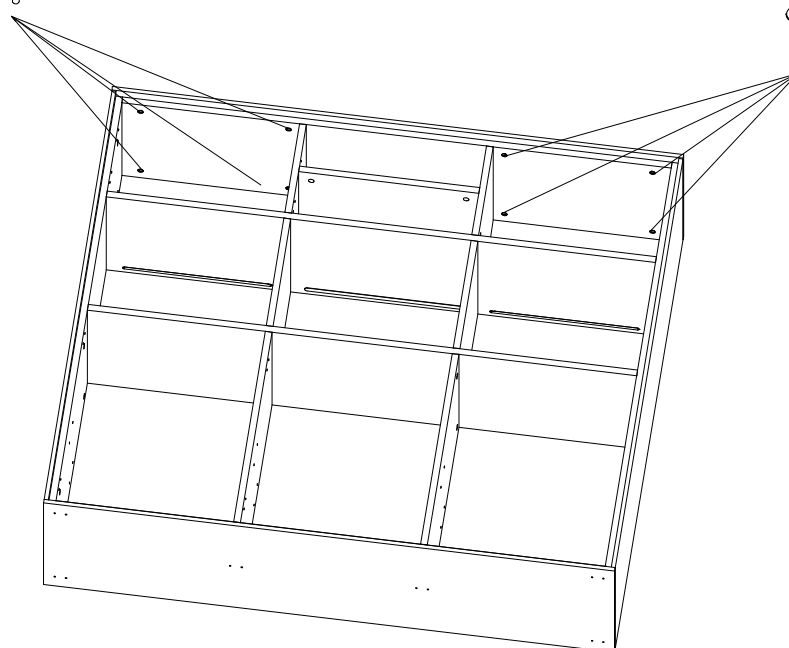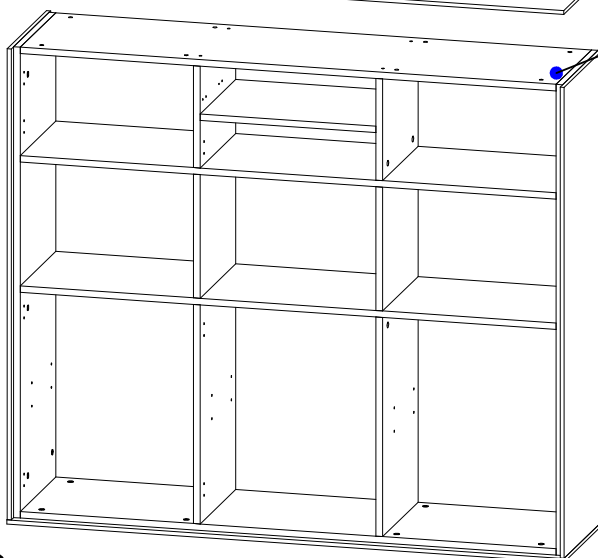


IX

G




M6x20
8

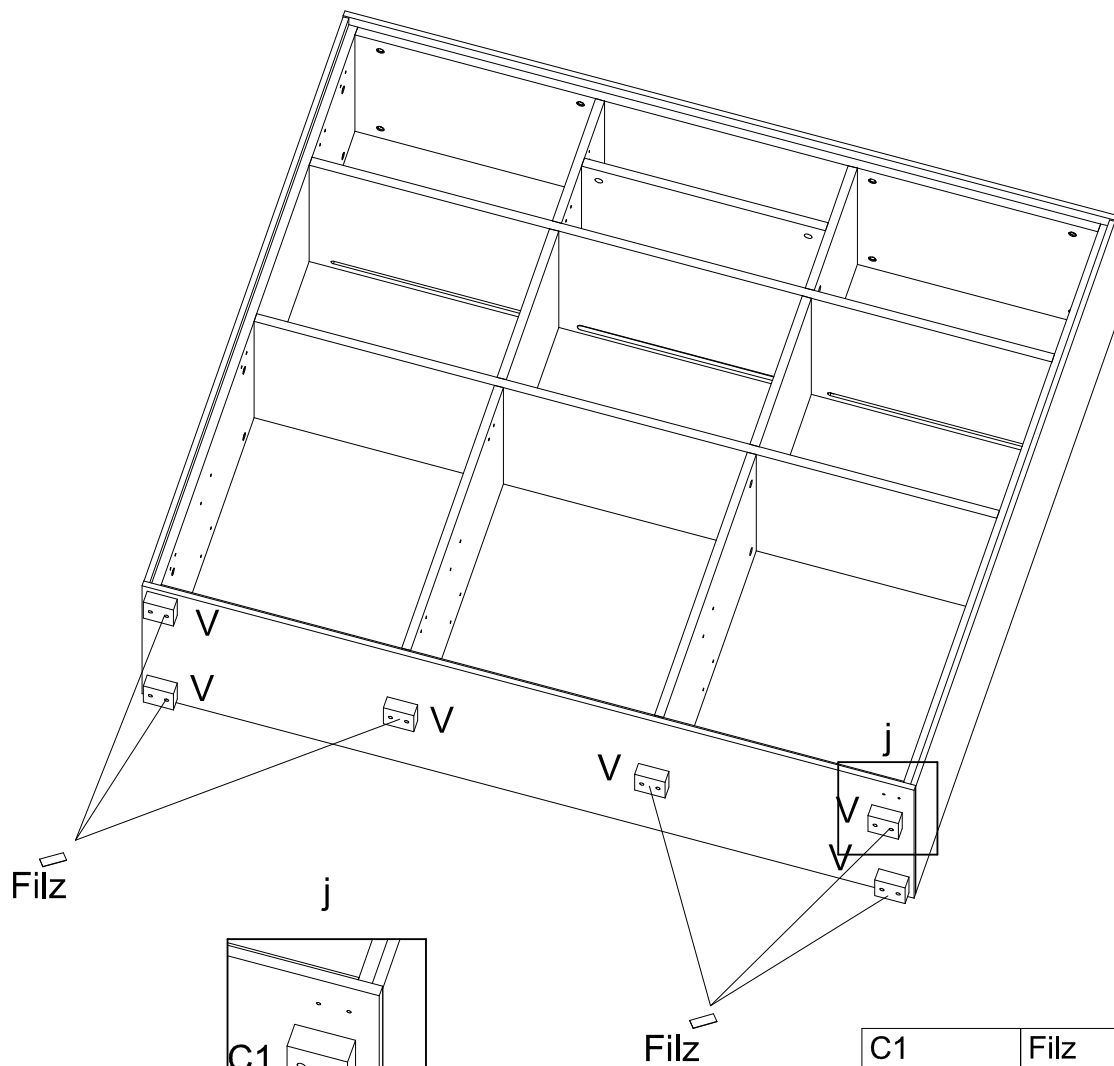





X

C1	Filz	V
 Ø 4x30 12	 6	 6


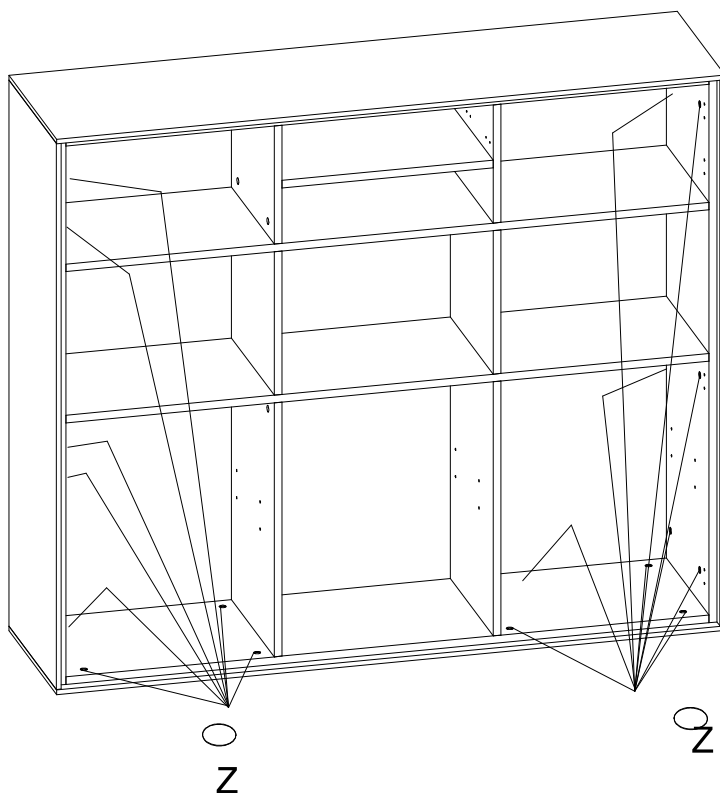







XI


Z
 48

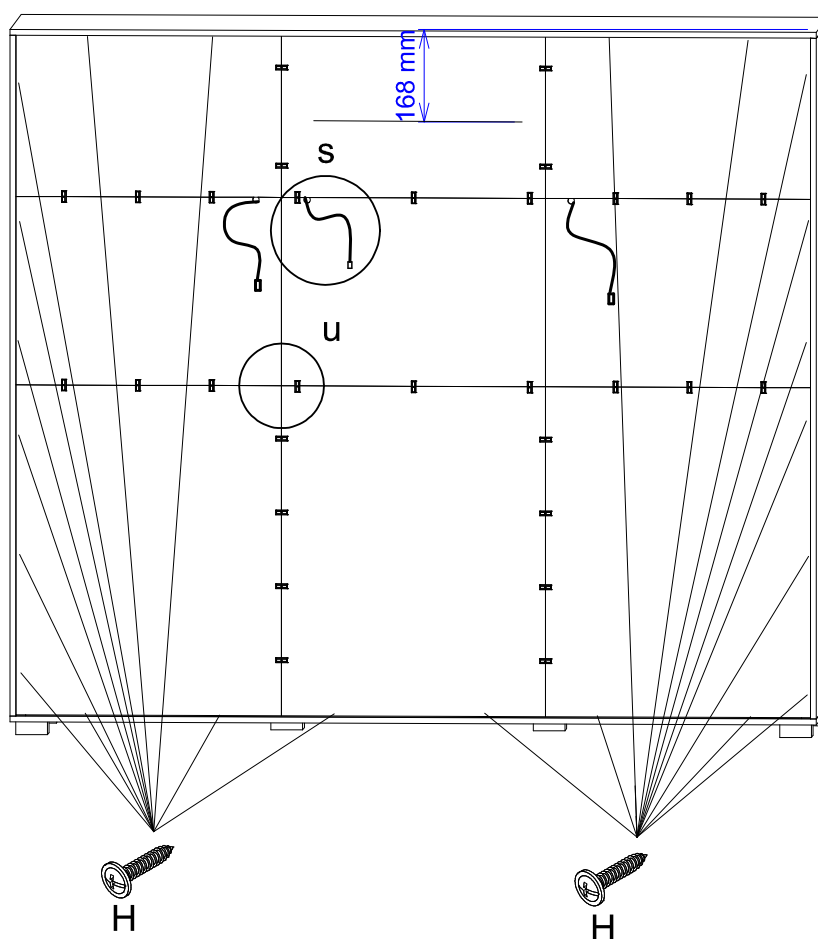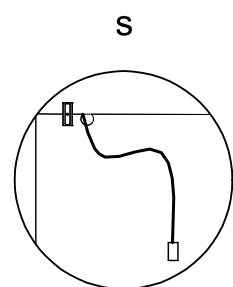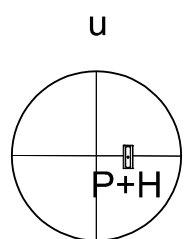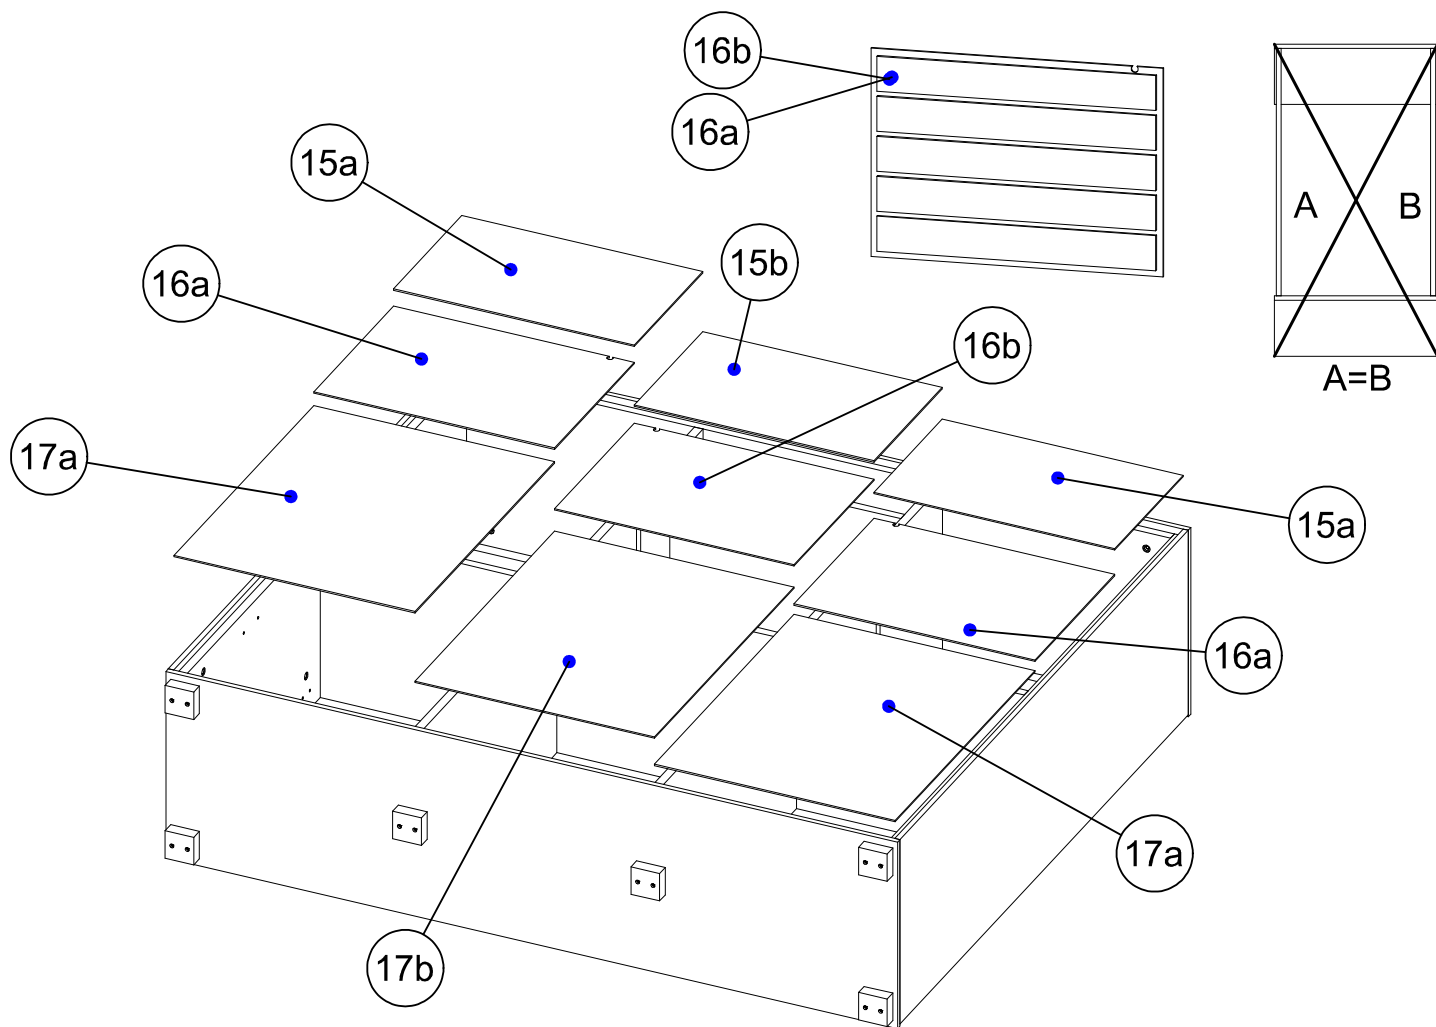


XII

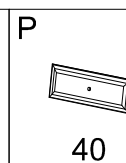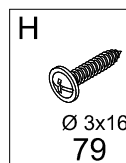

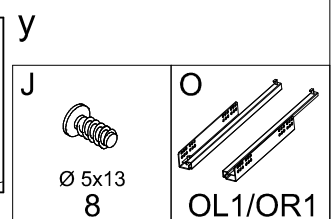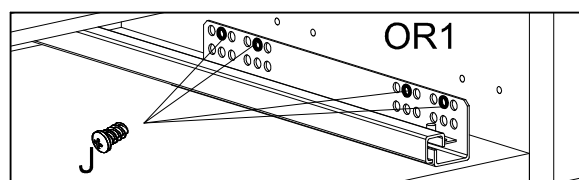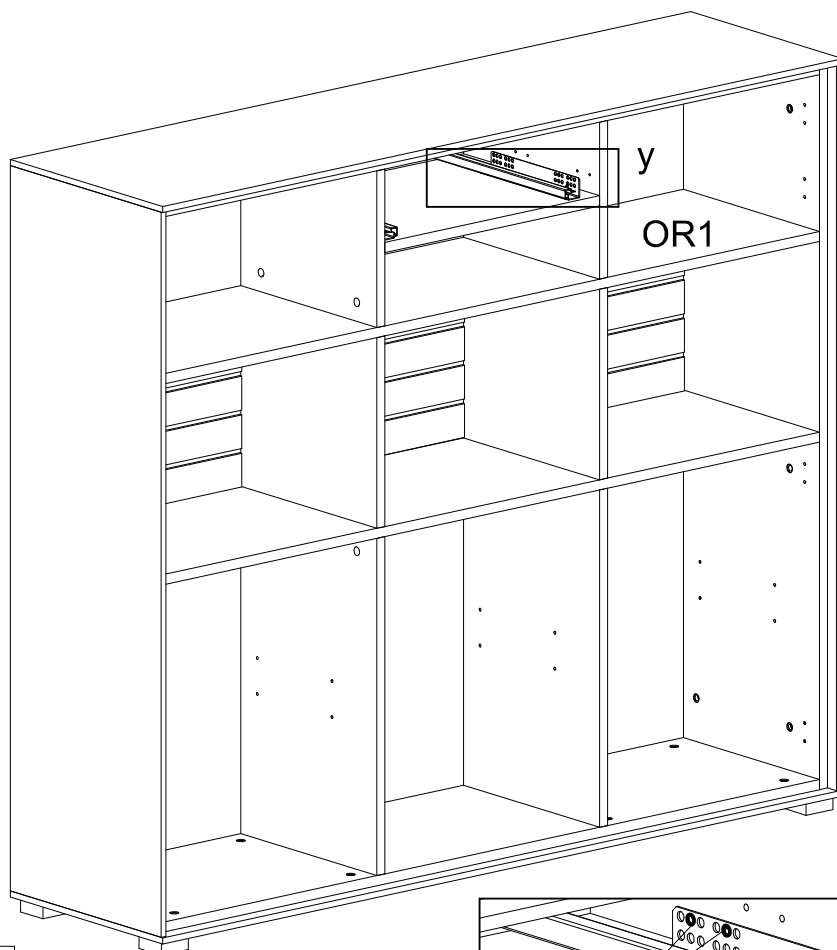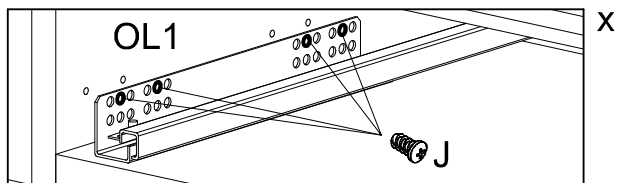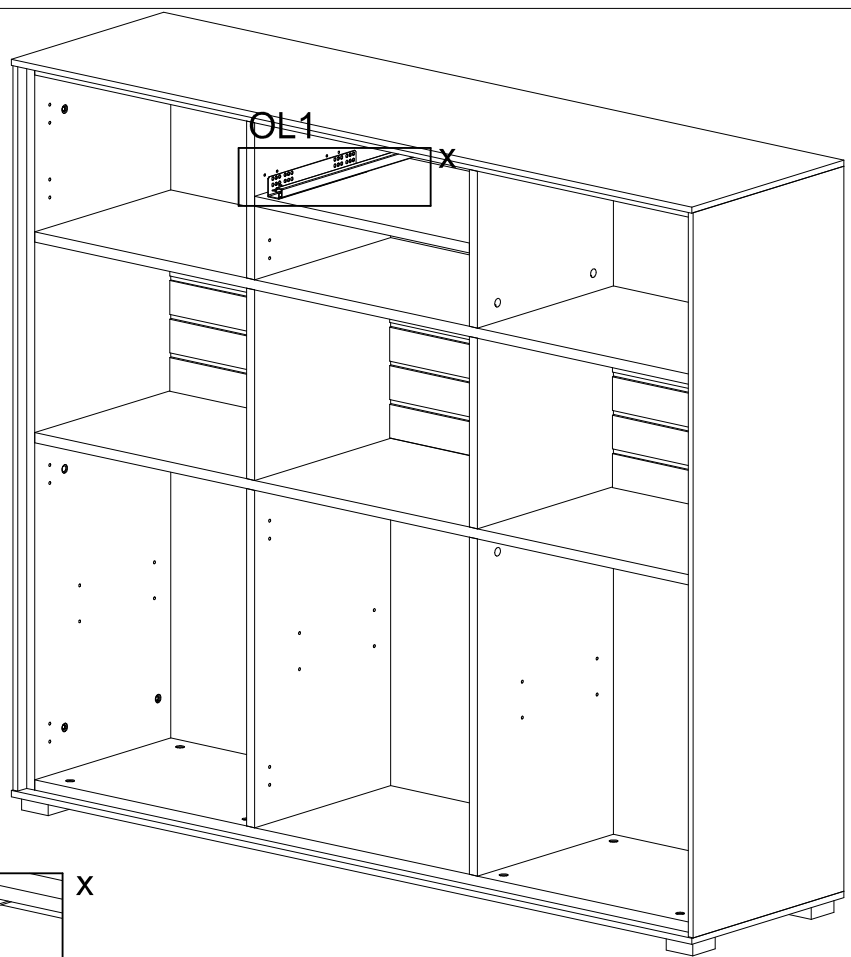


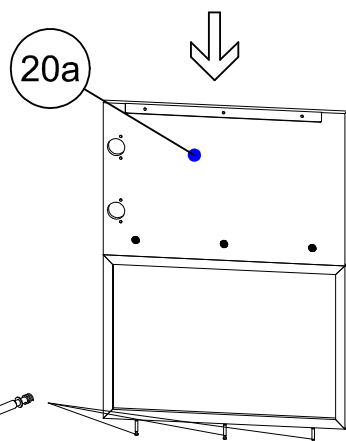


D1

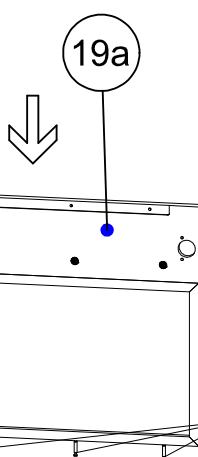

19a

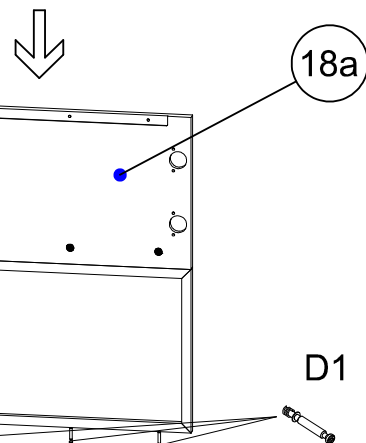


18a

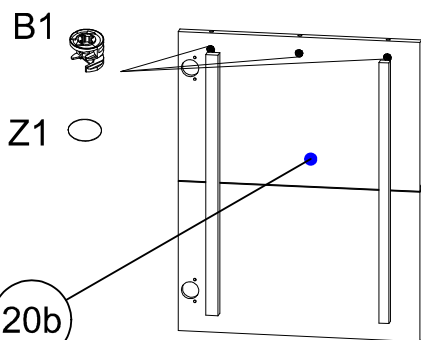

B1

Z1


20b

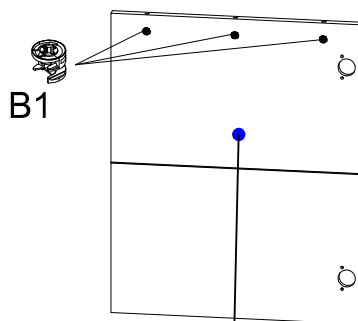

B1

Z1

19a

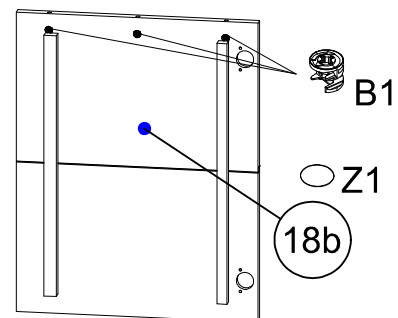

B1

Z1


18b

XIV

B1-D1-Z1



9/9/9

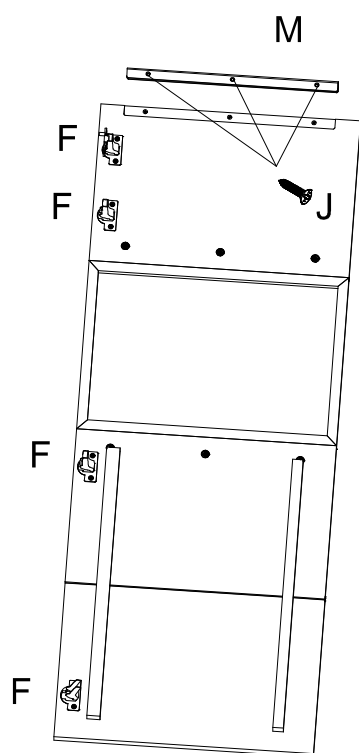


M

F

F

F

F

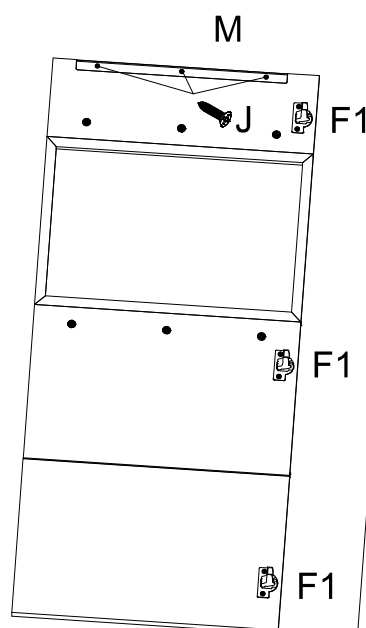


M

J

F1

F1

F1

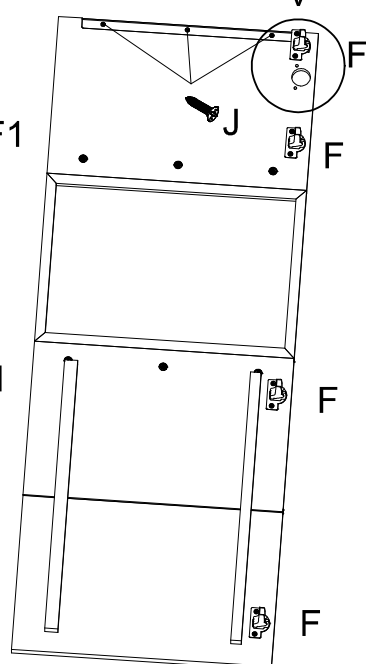

M


J

F

F

F

F

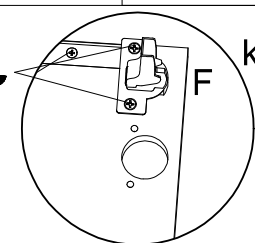

J

M

J

F


F

F


F

k


XV

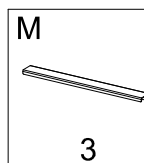


3

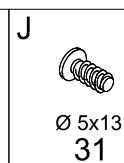





Ø 5x13
31

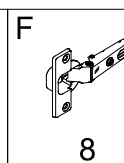

8

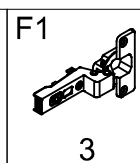

3

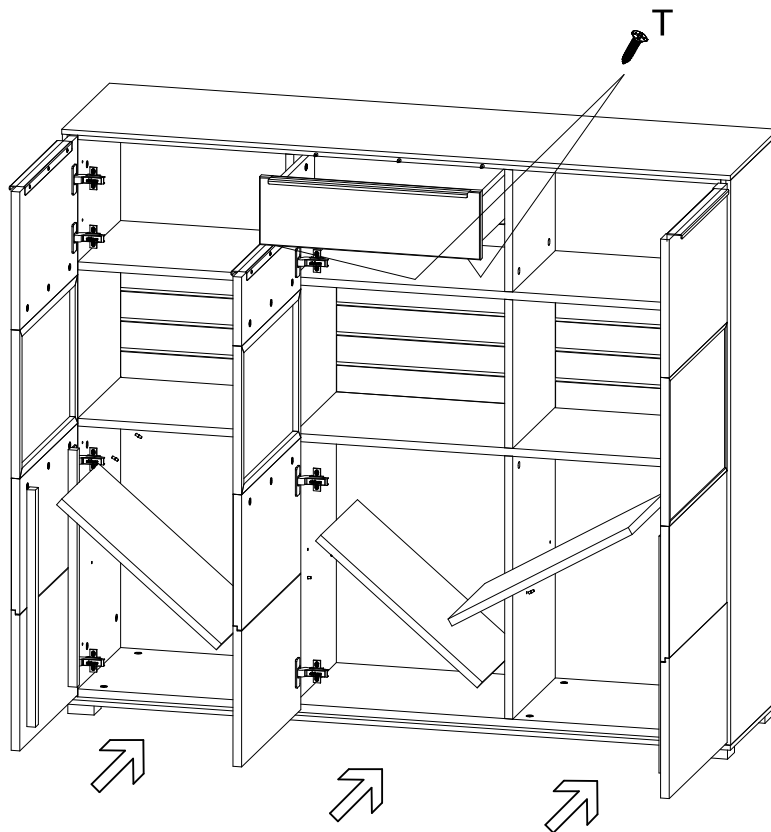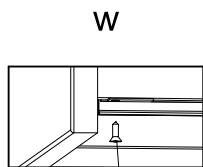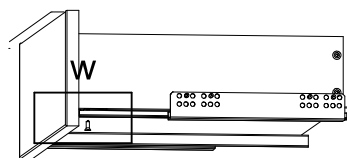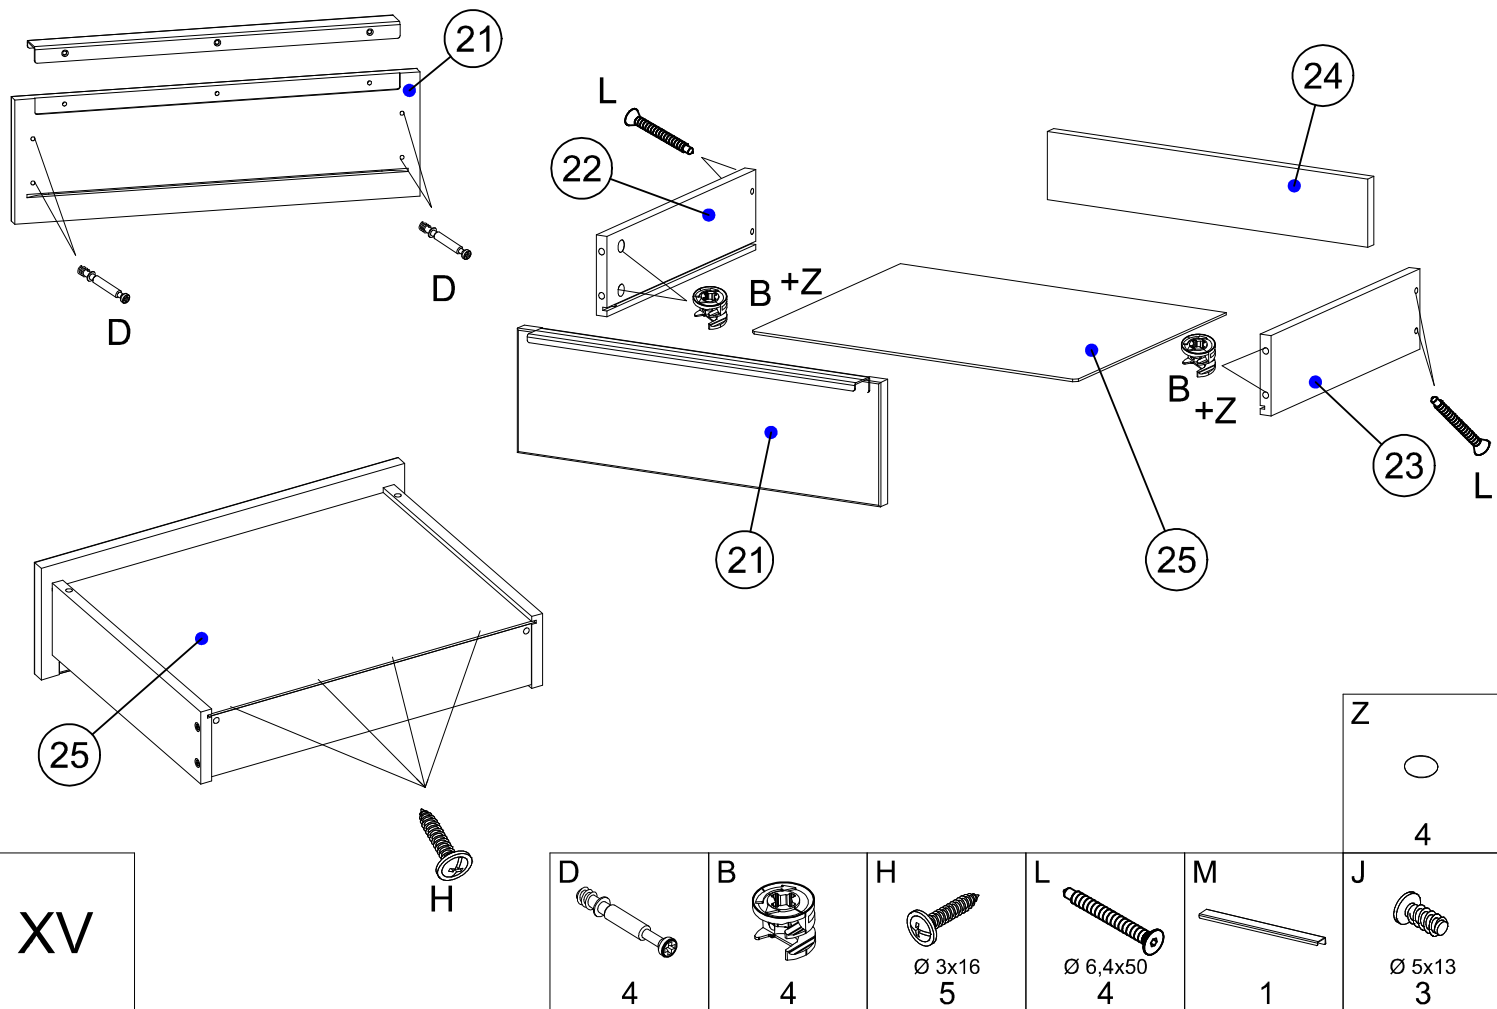

XVI

