













1:1
DIN A3



ca. 2,0h



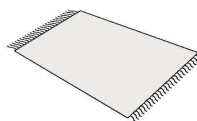


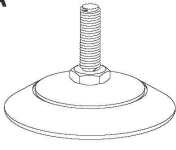A  4x 671 7913 GRAU	B  2x 681 5550	C  M5 x 30 2x 681 3819	X  M6 x 40 2x 671 7755	Y  M6 x 30 4x 671 7914	E  3x 681 7475	F  M4 x 10 8x 681 3804	H  M6 x 80 3x 671 7756		
J₁  GRAU 1x 671 7910	J₂  GRAU 1x 671 7911	K  4x 681 7047	L  4,0 x 30 4x 681 4910	M  4 x 35 4x 681 5001	N  4,0 x 20 6x 681 4917	O  26 mm 2x 671 7762	 SW4 lang 1x 681 3010		 SW2,5 1x 671 3005

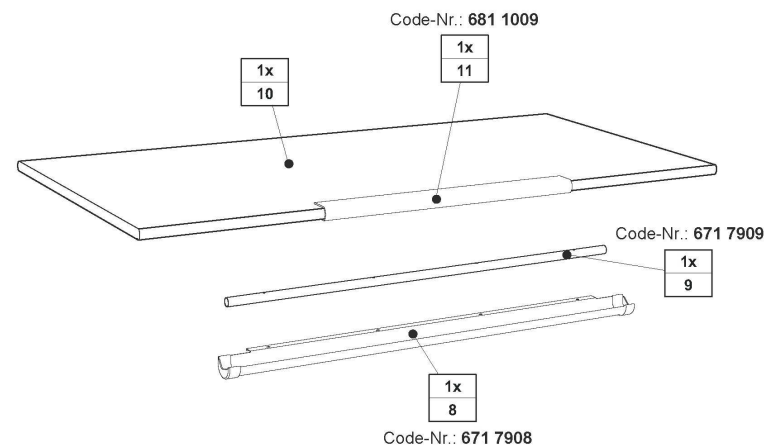


DIEGO
Schreibtisch 120


DIEGO
Schreibtisch 140

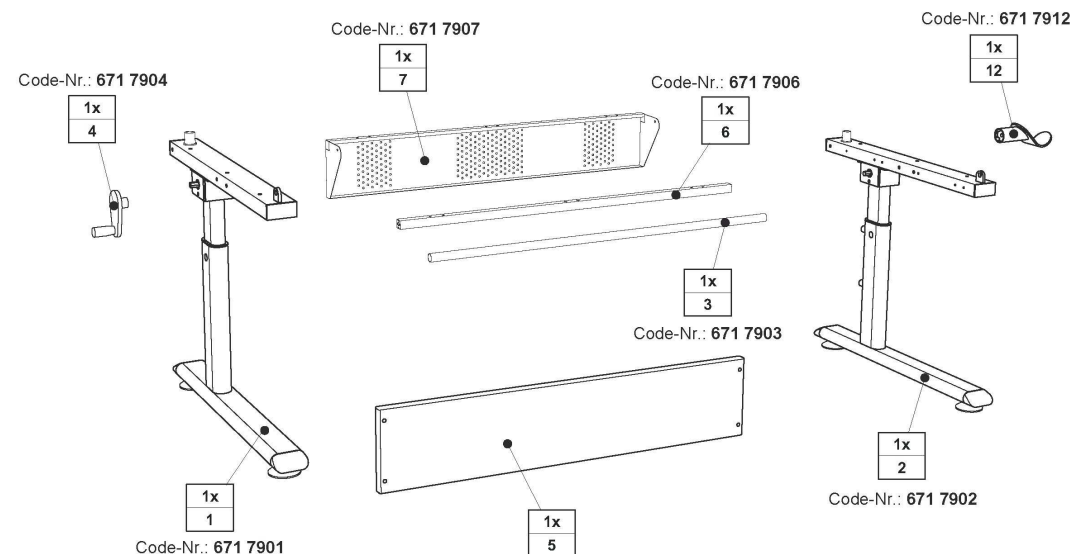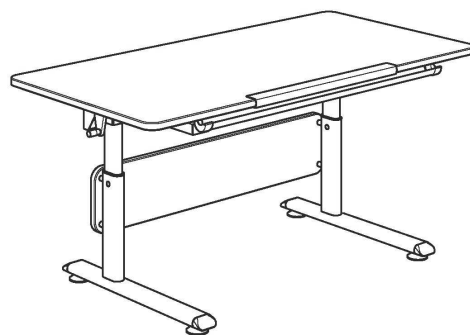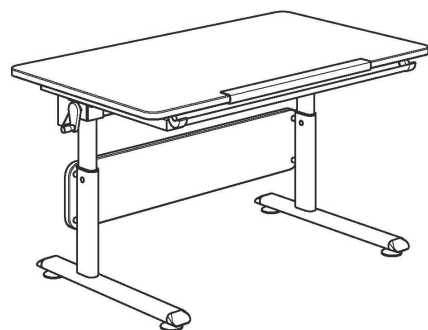


V1

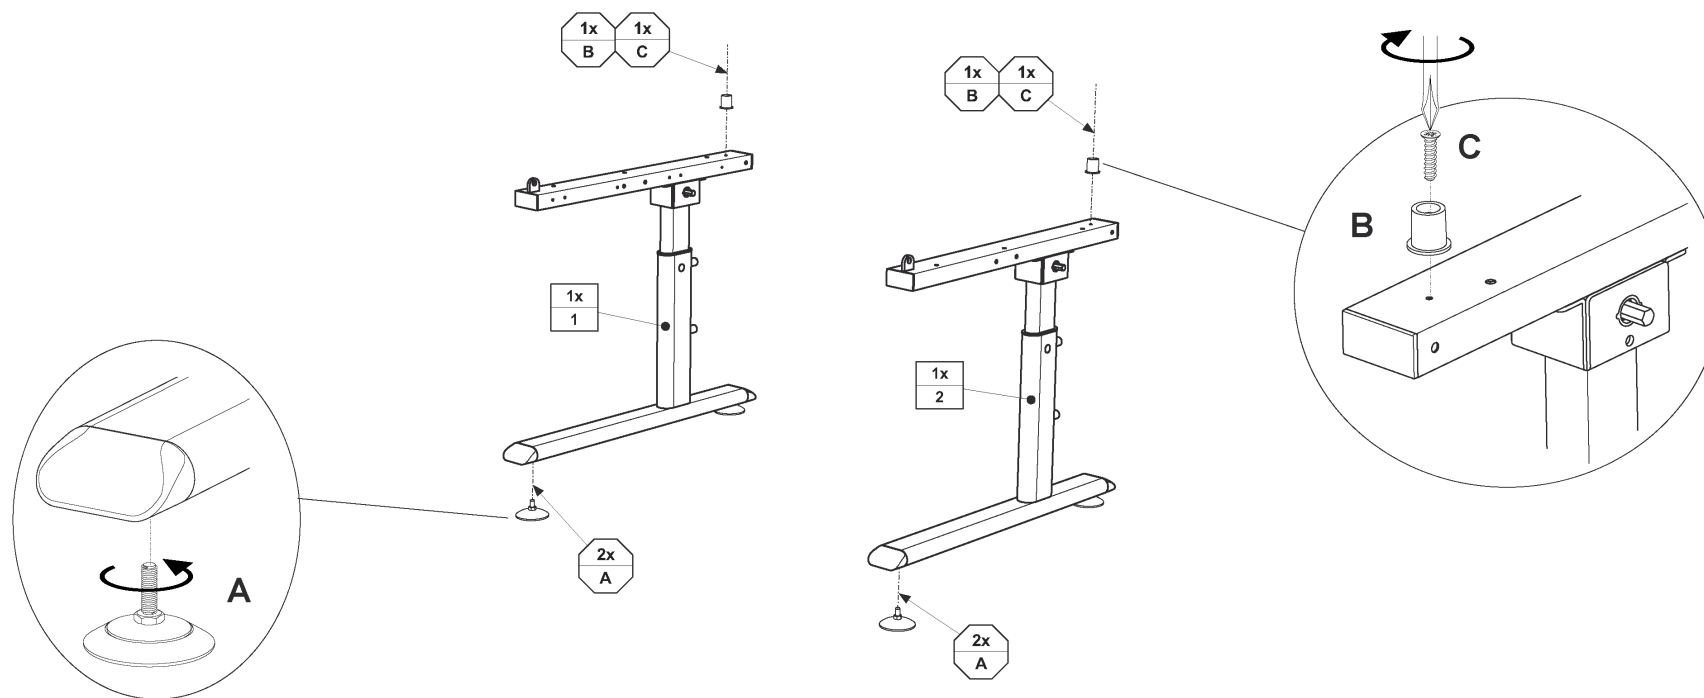

V2

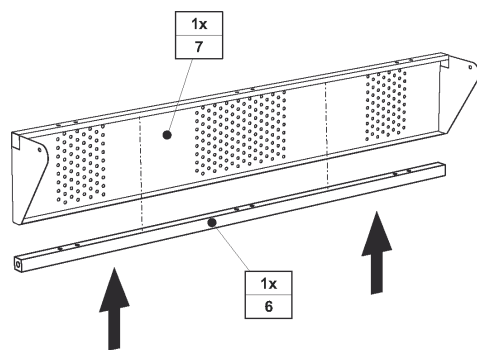


V3

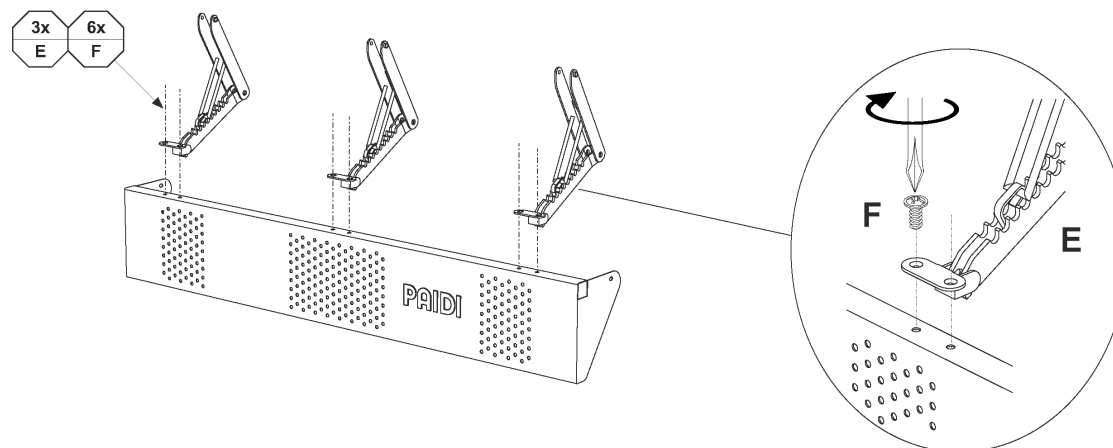


V4

ACHTUNG !!
Aufbau **ohne** Schubkasten

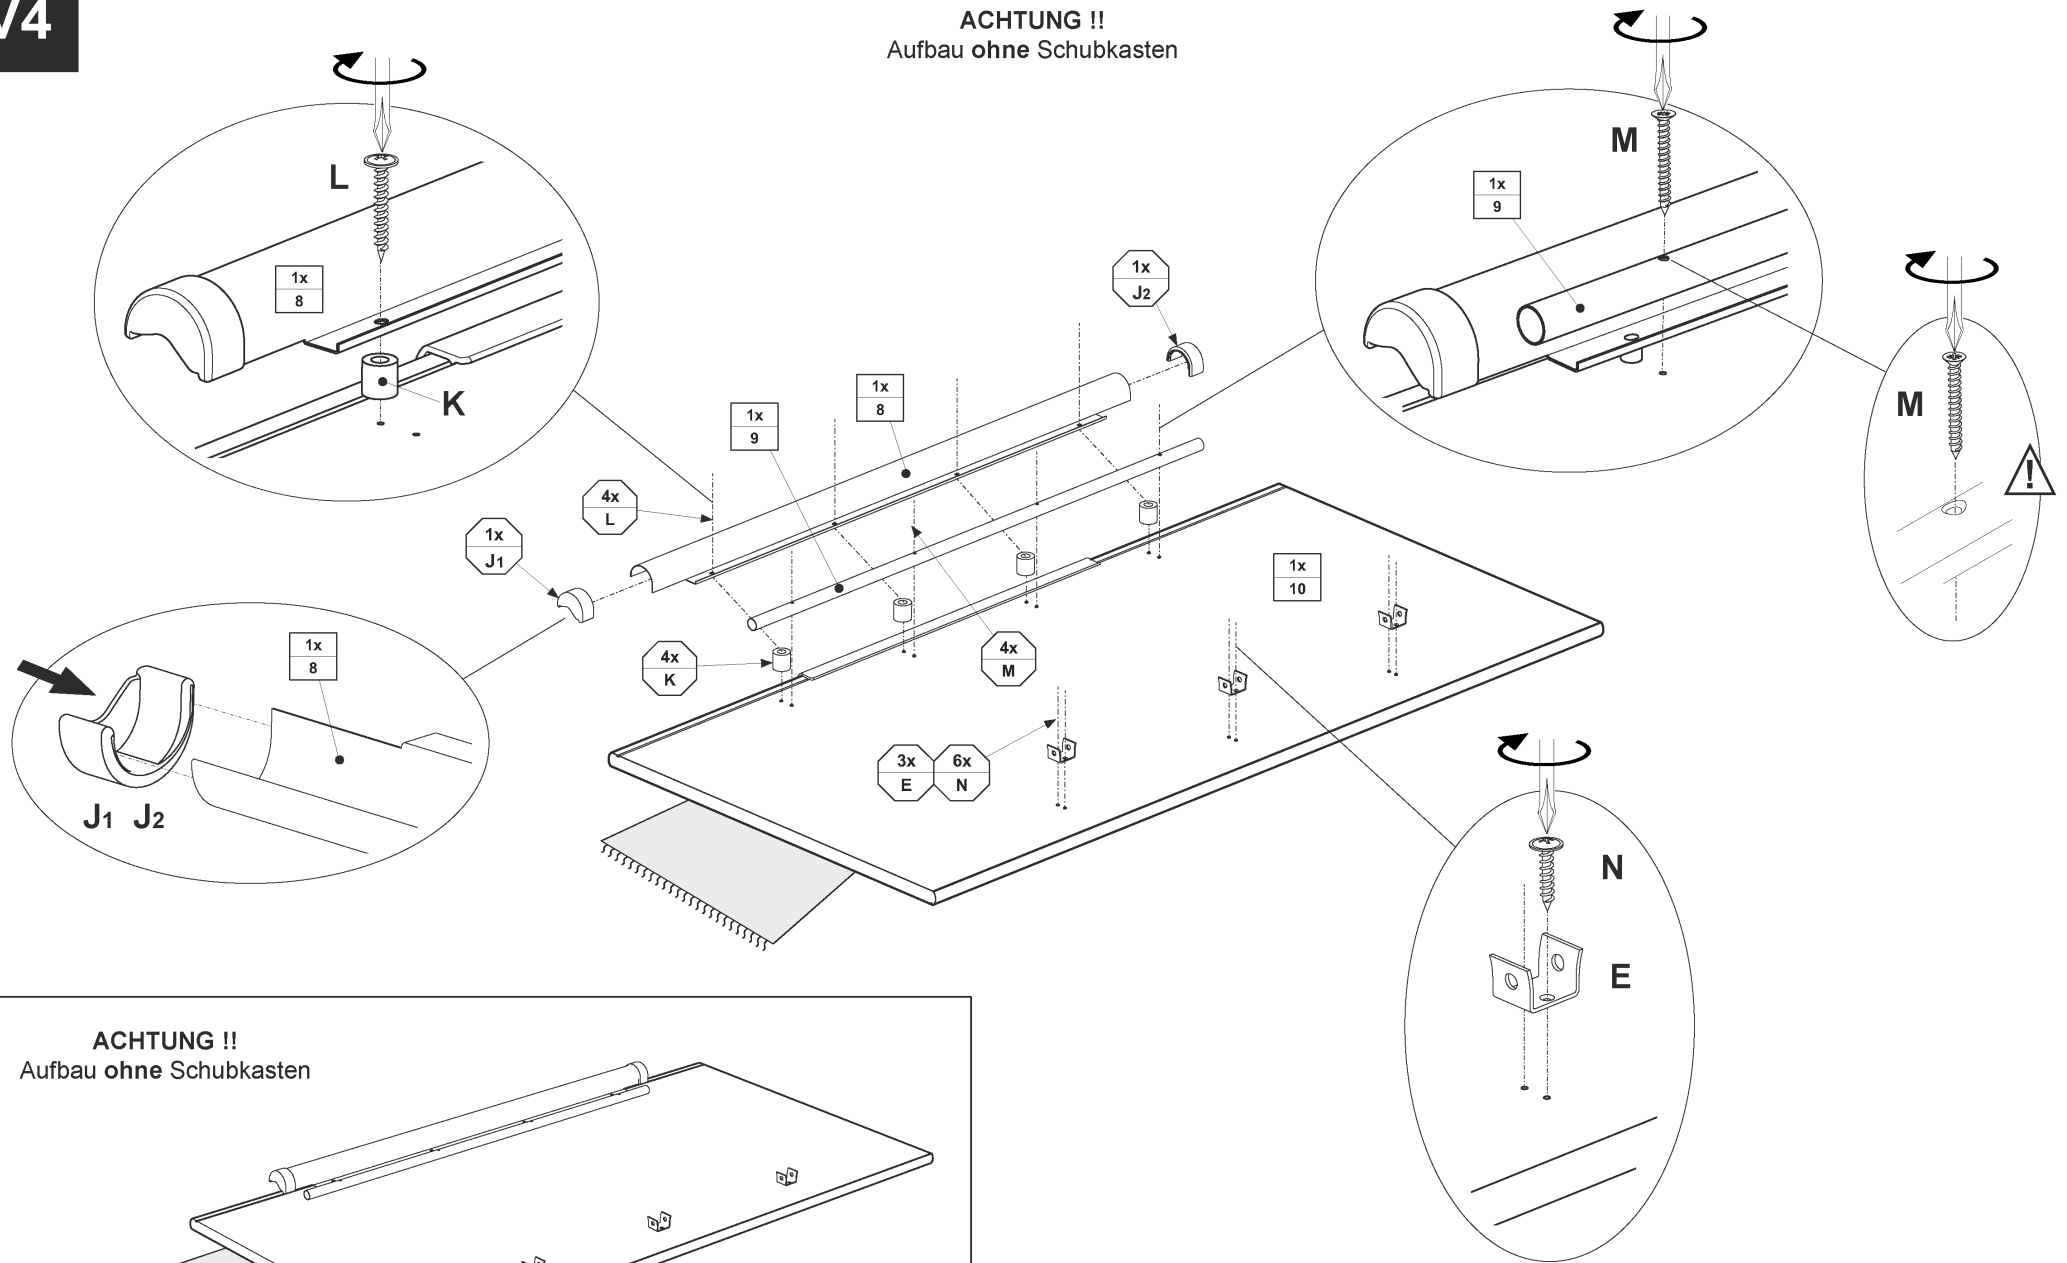

ACHTUNG !!
Aufbau **ohne** Schubkasten

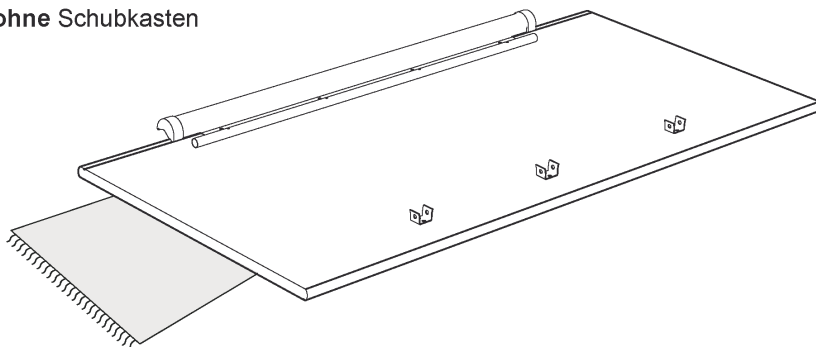


V4


ACHTUNG !!
Aufbau mit Schubkasten








Montage Schubkasten
auf **separate** Gebrauchsanleitung !!

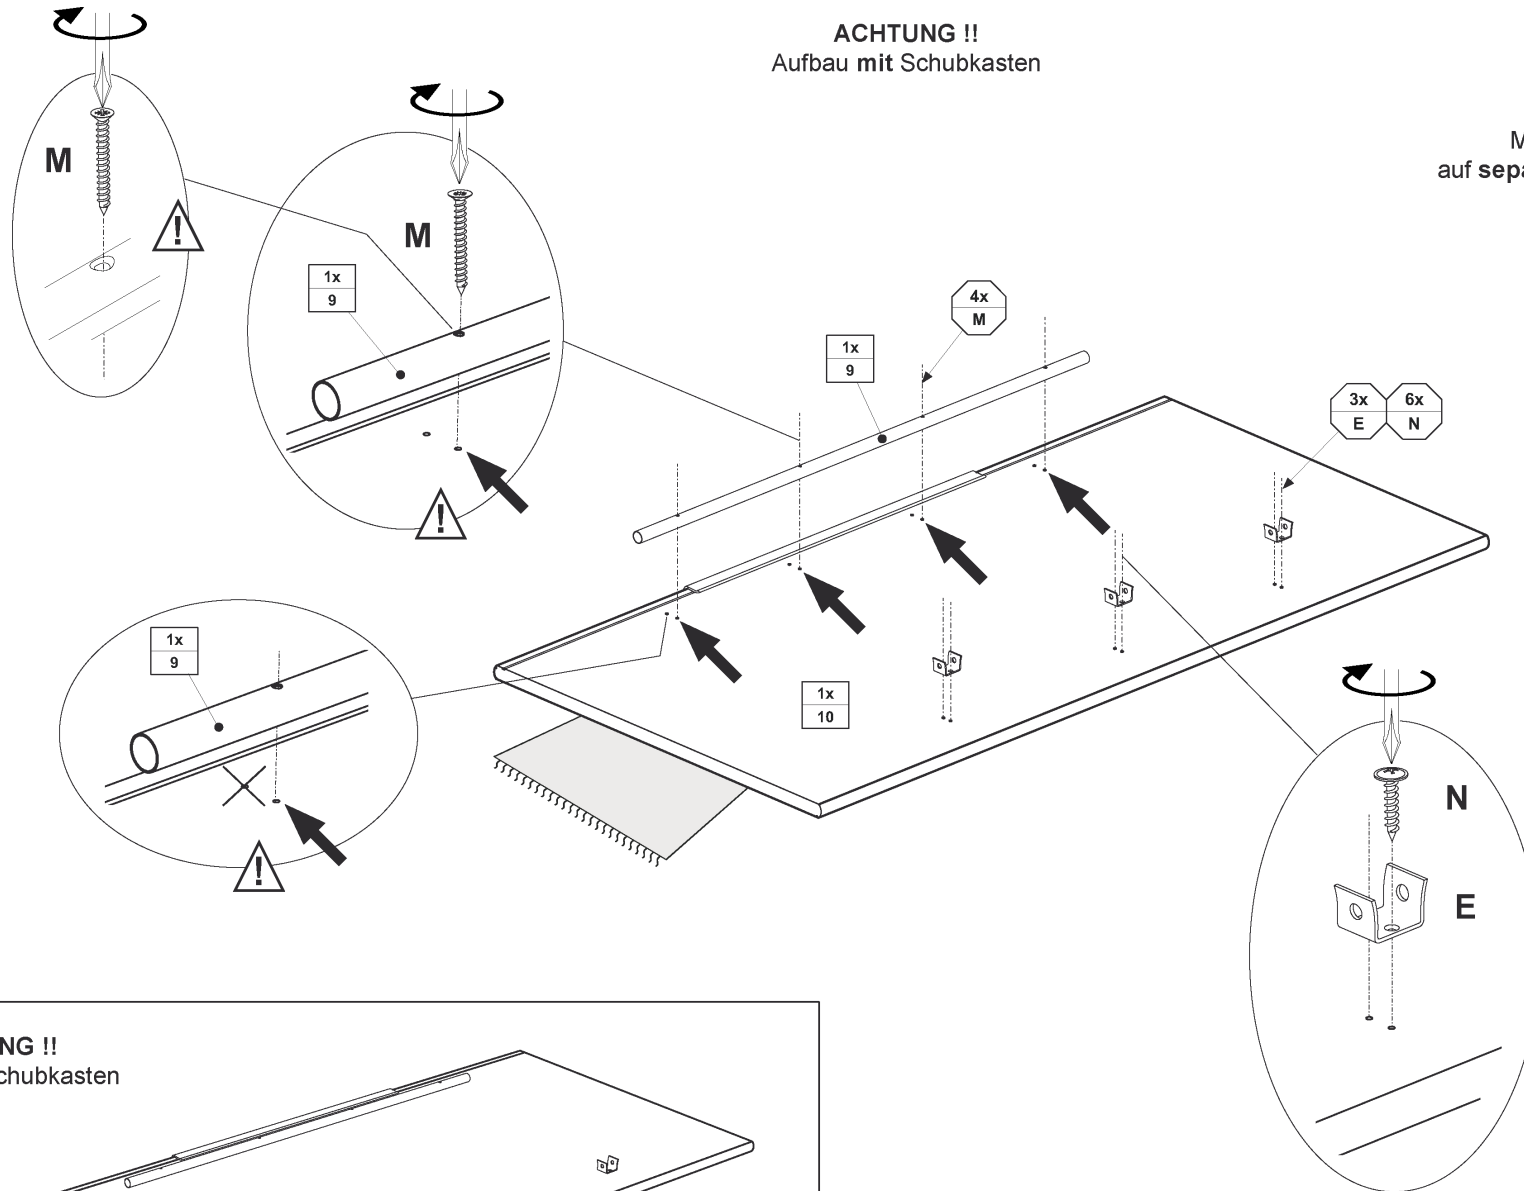


ACHTUNG !!
Aufbau mit Schubkasten

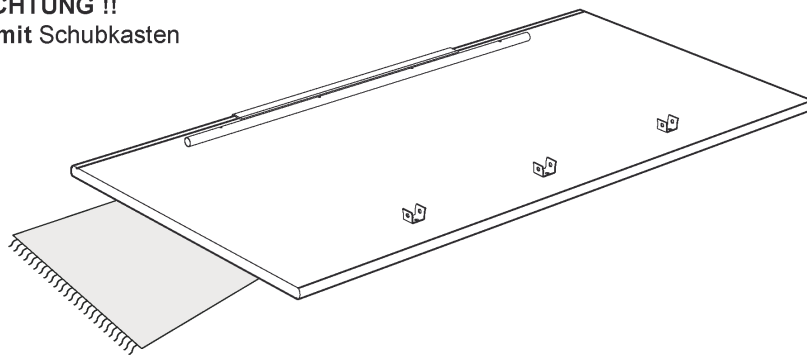


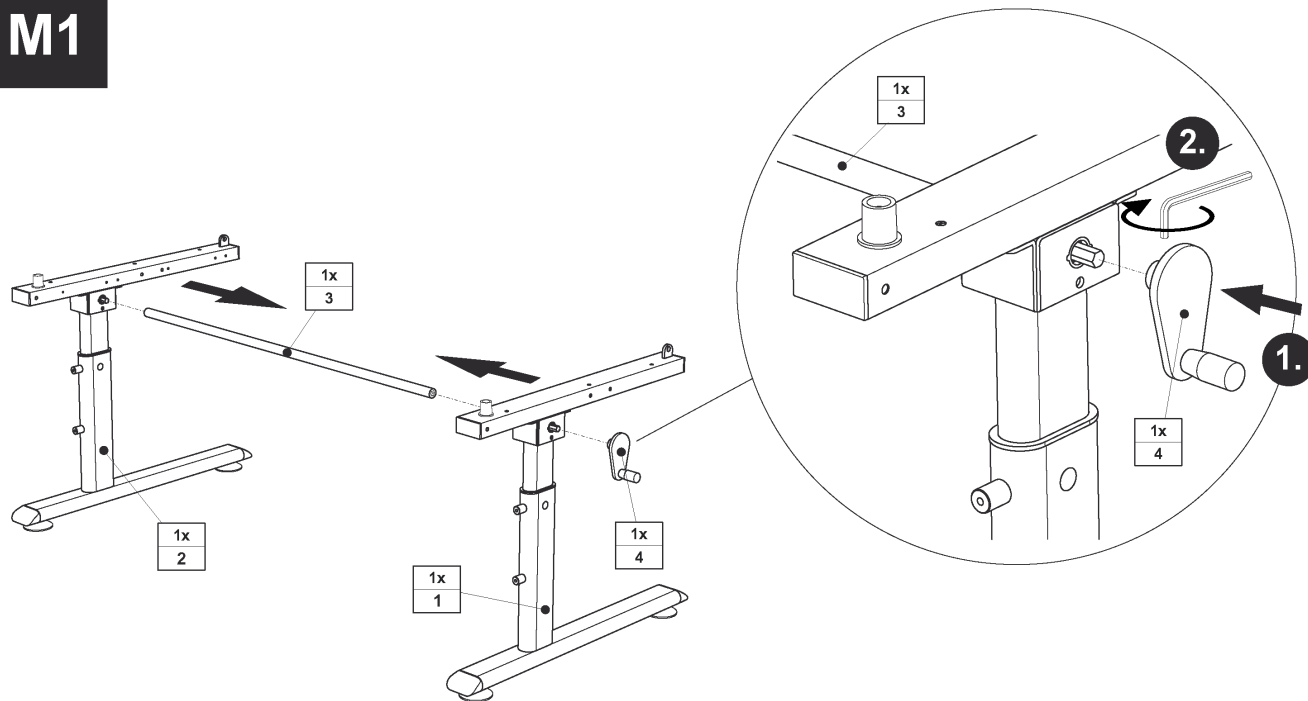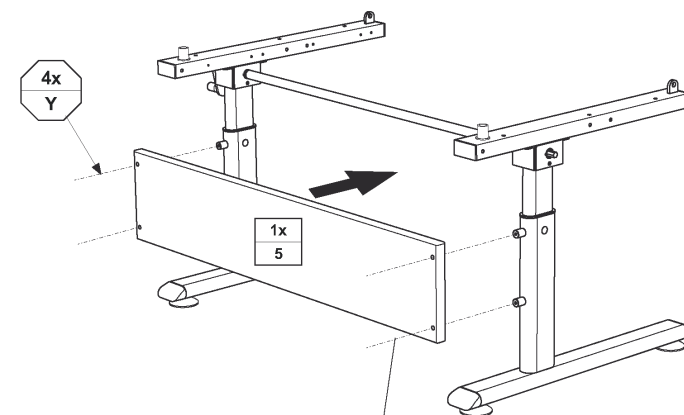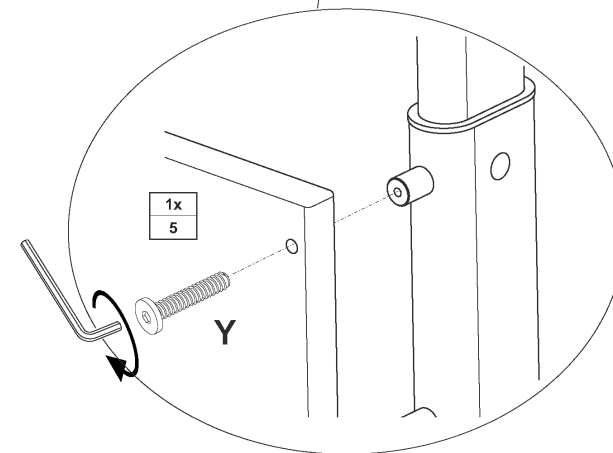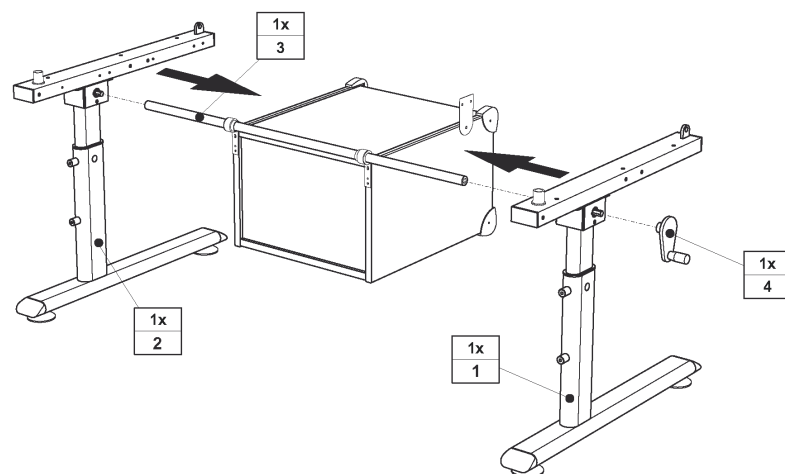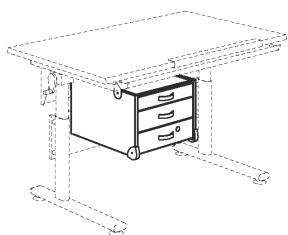
M1**M2****Einhängecontainer**

M3

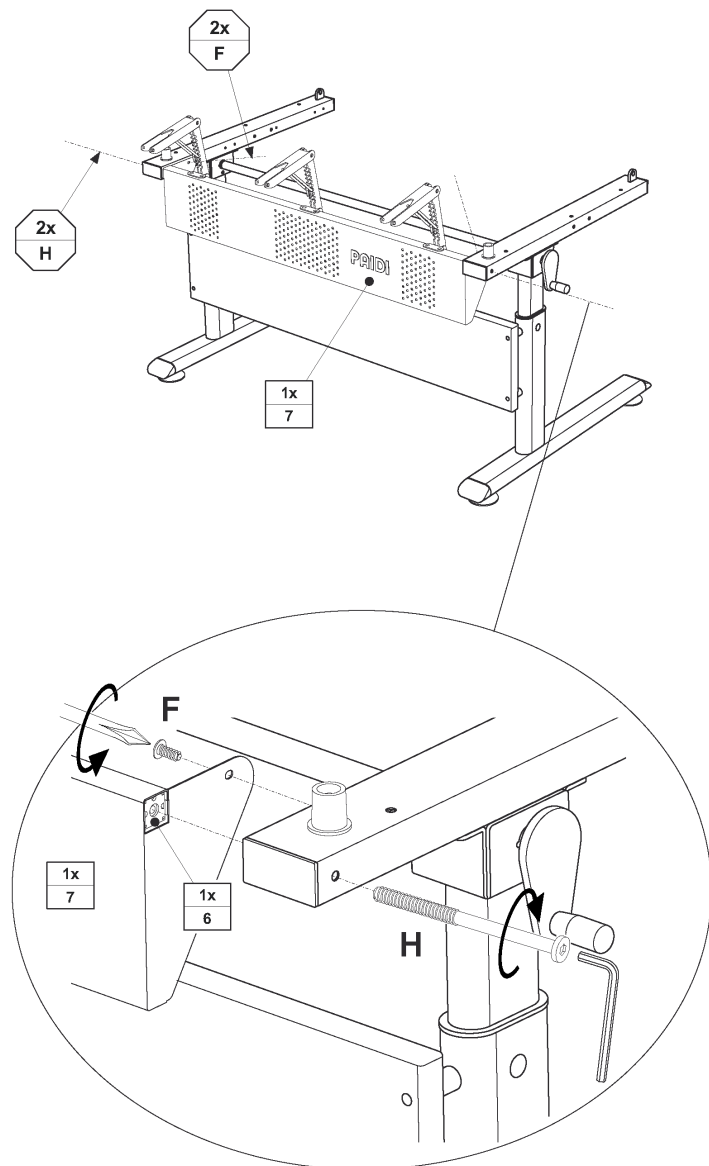


M4

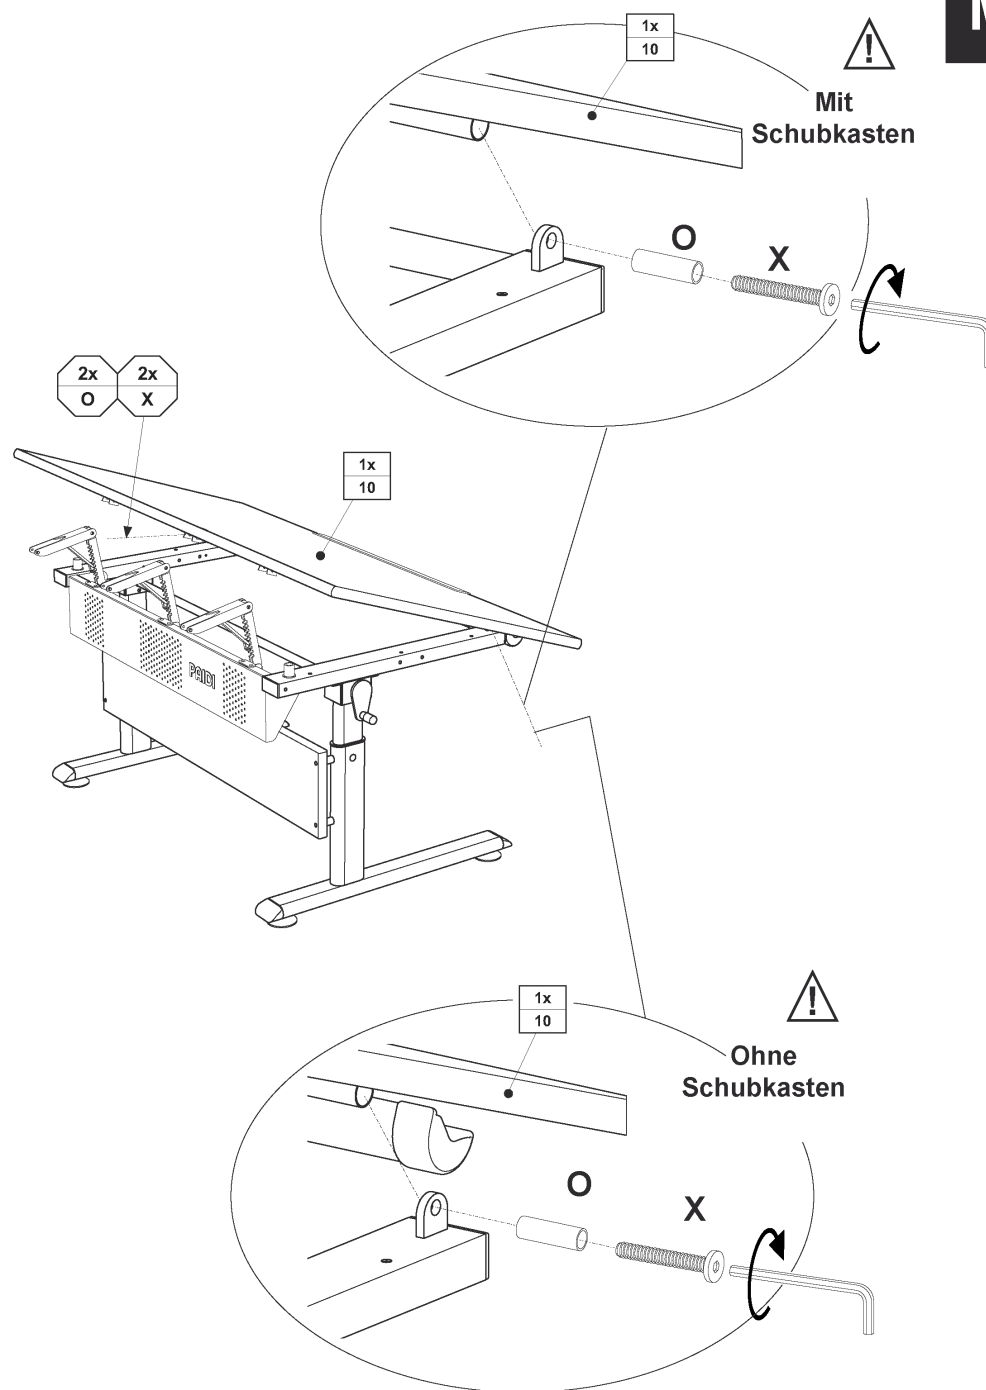

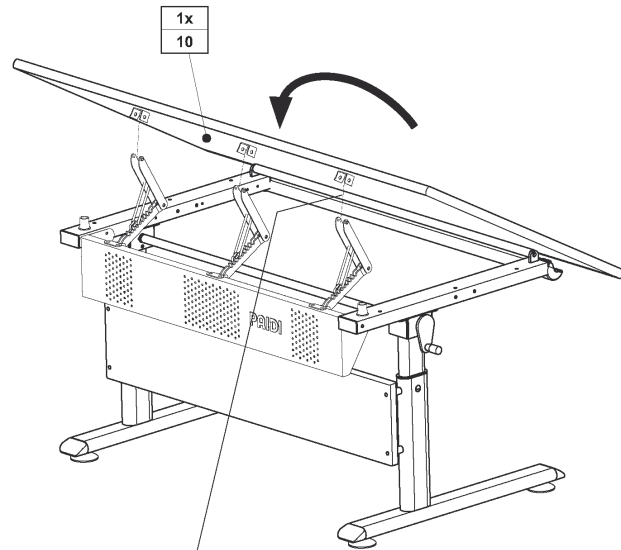M5

Rasterschere (W) auf das Anschraubteil (X) aufschieben, so daß die Bohrungen (Y) in den Bolzen (Z) einrastet.

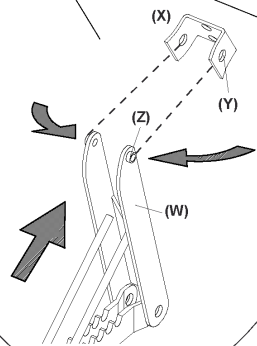**M6**