




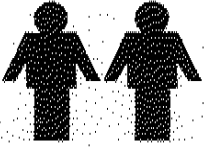






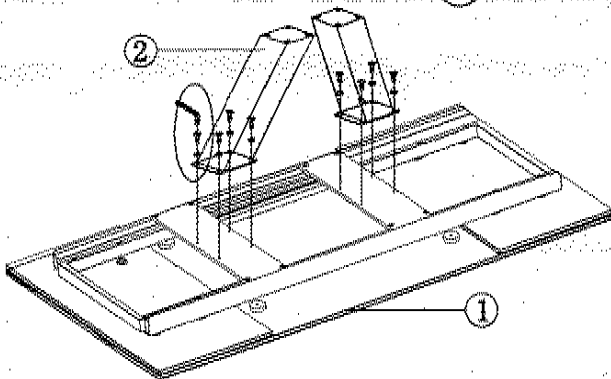
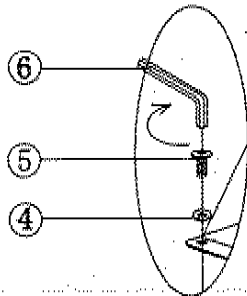
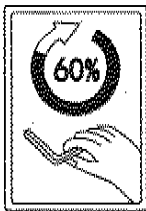
ASSEMBLY INSTRUCTION

00690008/01



1104233

	 ①×1	 ②×2	 ③×1	 ø8 ④×16
	 M8×16mm ⑤×8	 5# ⑥×1	 M8×45mm ⑦×8	 13# ⑧×1




STEP 1



STEP 2

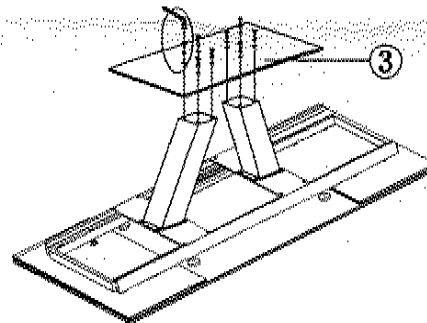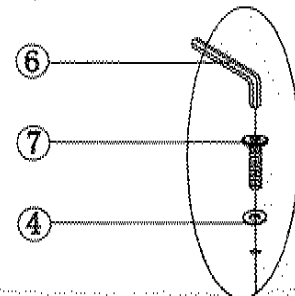


STEP 3

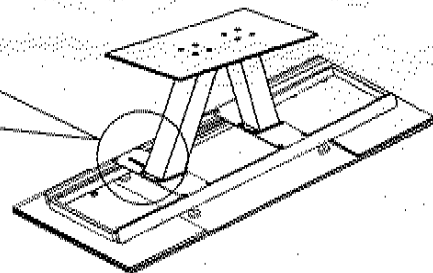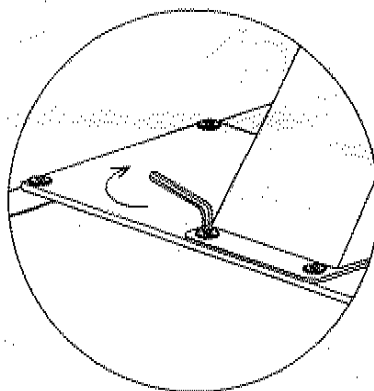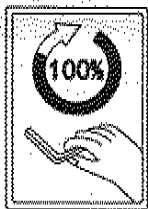


STEP 4

Open

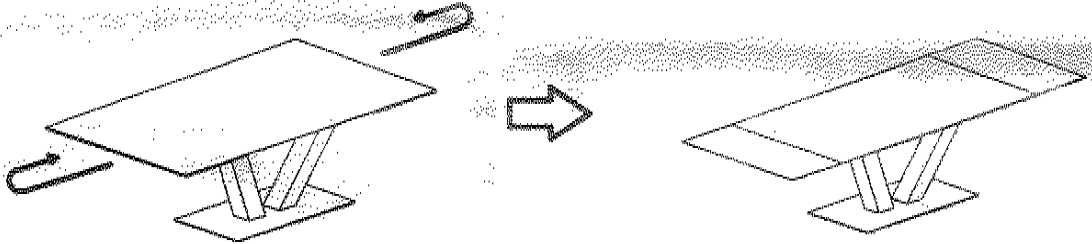


STEP 5


Close

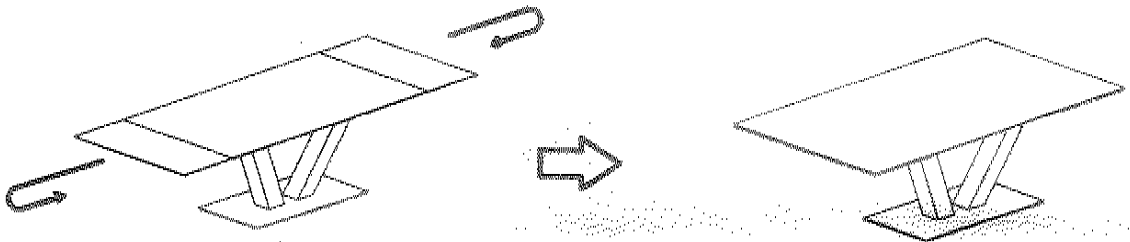

1

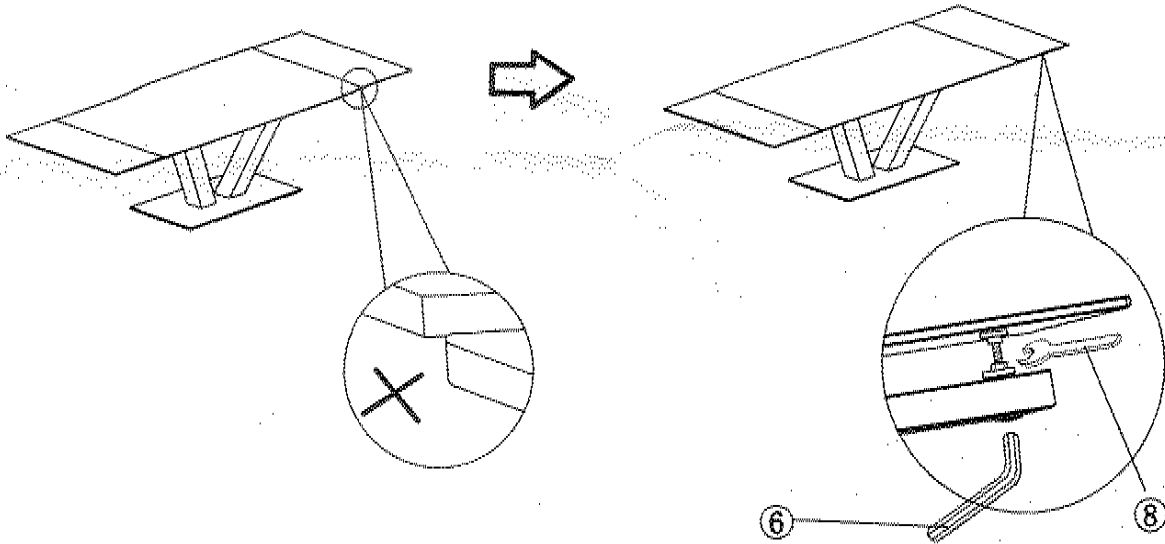


2

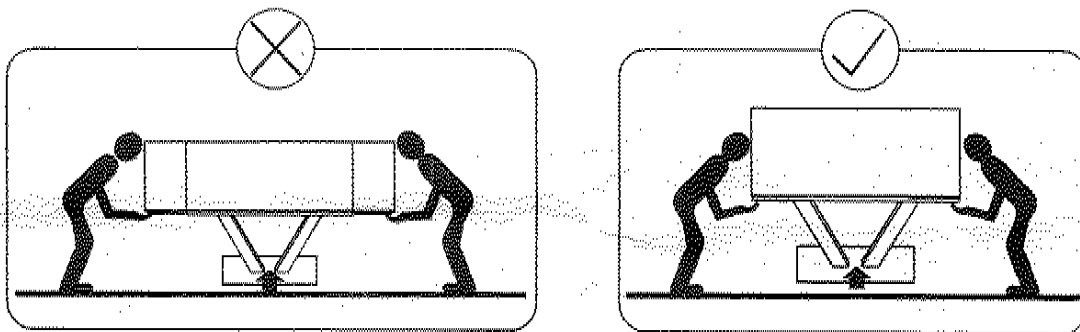

STEP 4

Open

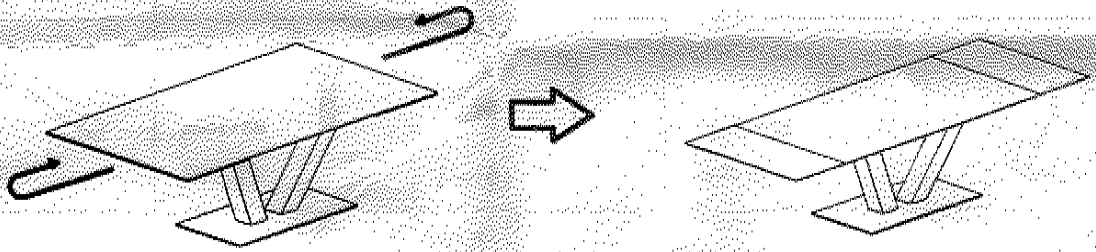

STEP 5

Close

