


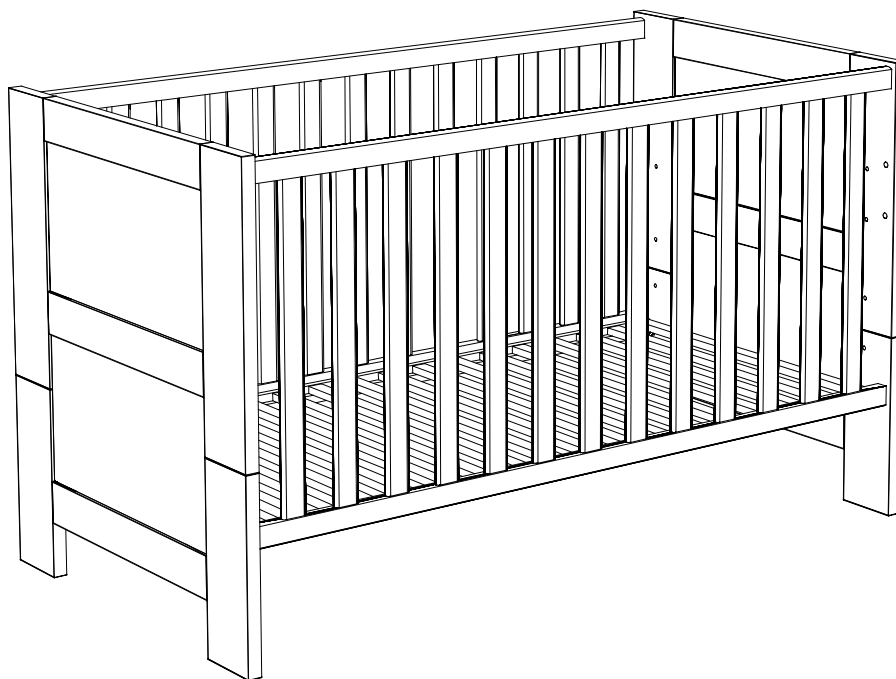


Artikel.-Nr.:

4001-BH P1



Montageanleitung.-Nr.:

MA1-00612

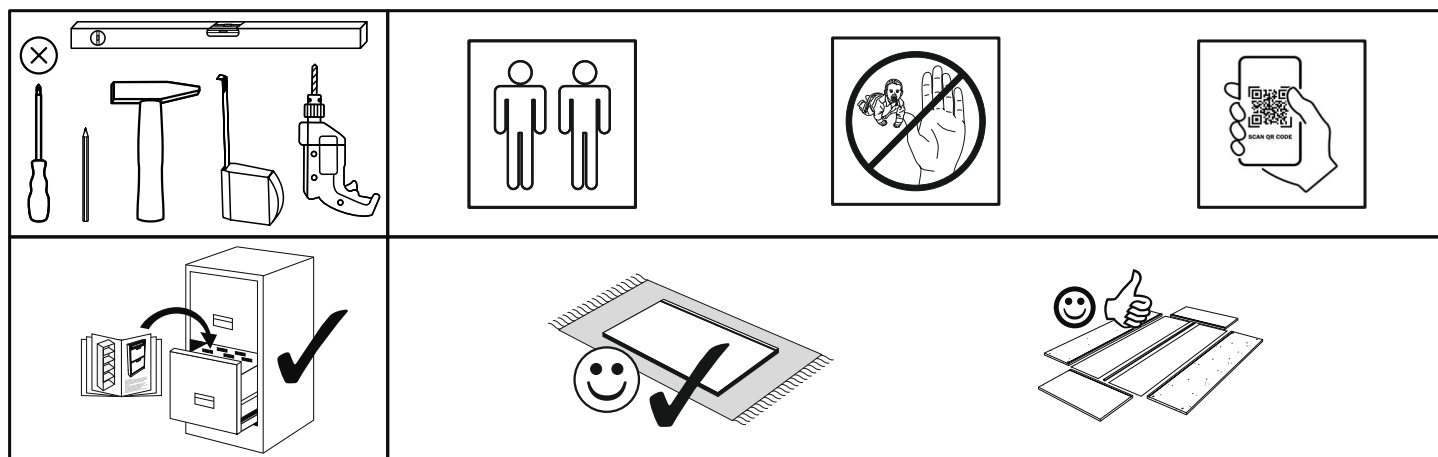

Das Ersatzteil-Anforderungsformular finden Sie auf
The replacement parts requisition form you find on
<https://www.maeusbacher.de/ersatzteile/>

BT1-00711 Colli 1/2








B10-101	 8x M6x6 SW3	B10-105	 8x	B10-110	 8x	B10-115	 16x 12x10 M6
B10-80	 2x	B10-85	 2x	B10-90	 20x	B10-95	 4x 6,3x19
B02-107	 64x 8x70	B05-130	 5x Leim	B01-239	 1x SW 3	B05-273	 1x




L = 20 mm




Colli 1/2

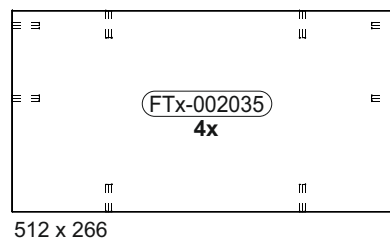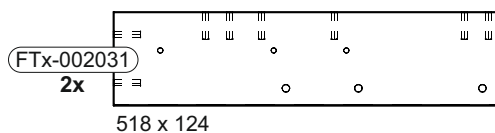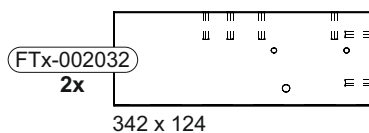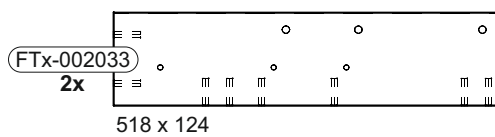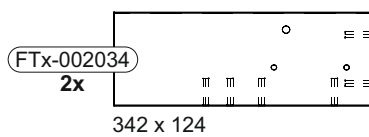


Colli 2/2

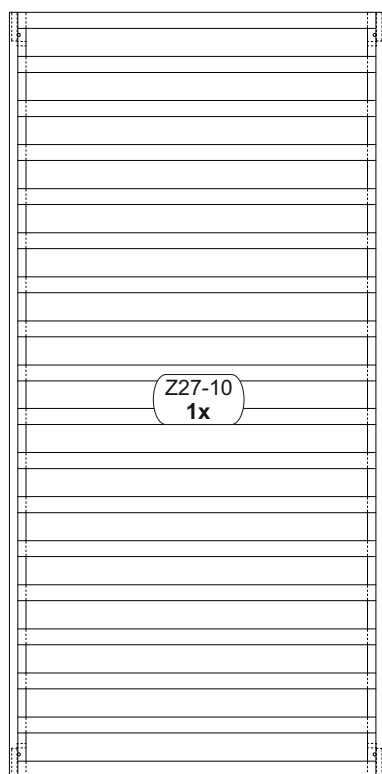

1388 x 680

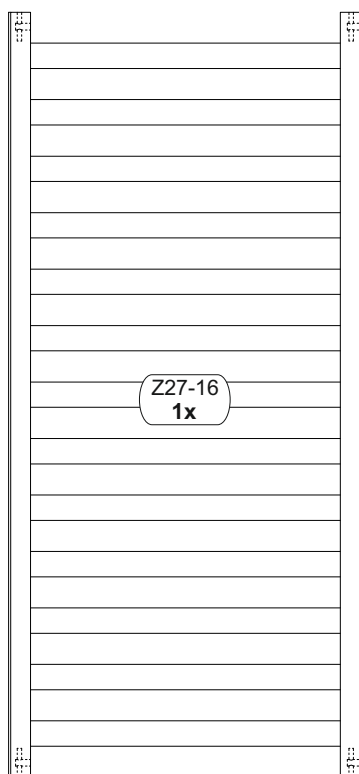



1388 x 642

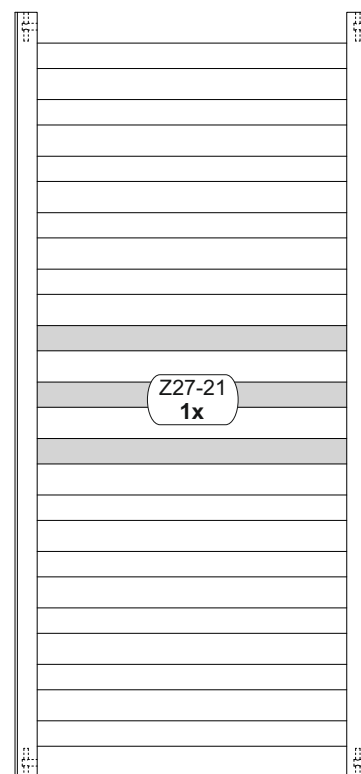


1388 x 642

1


	B02-107		B05-130	
	56x	8x70	2x	Leim

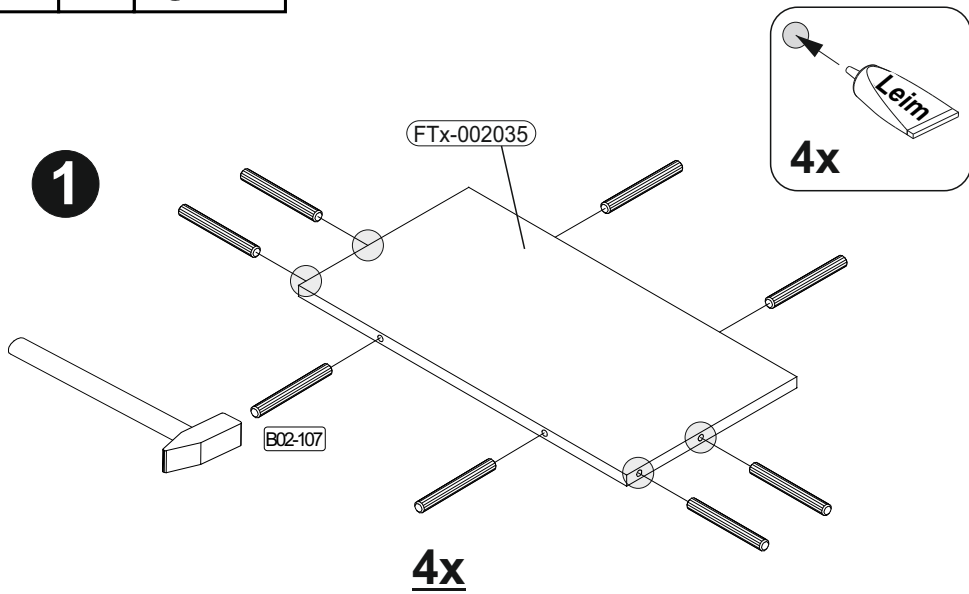


2

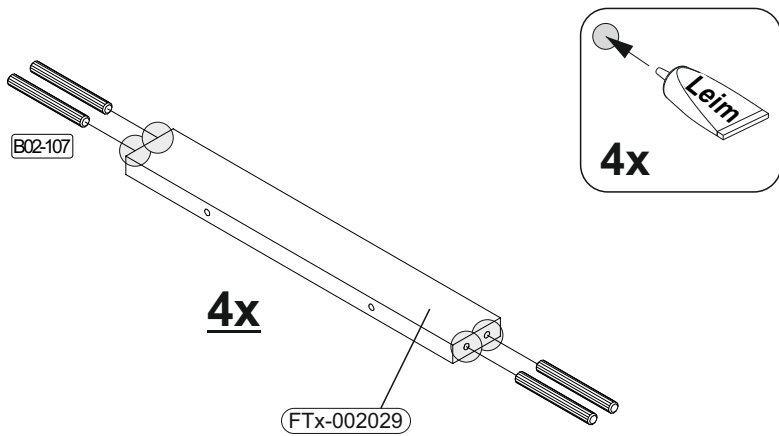


3

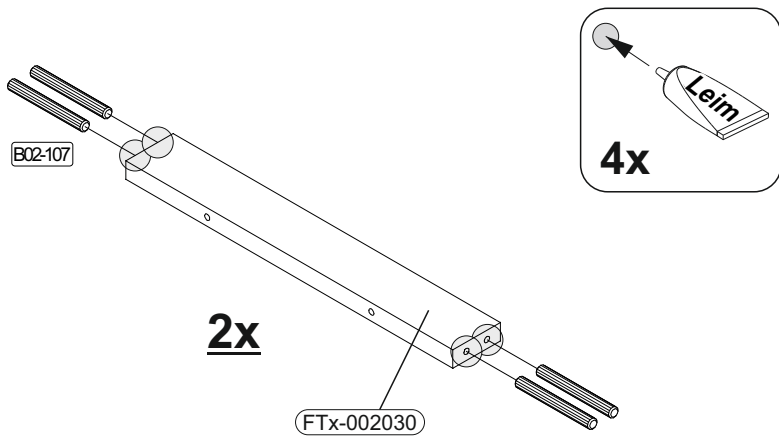


2

B05-130	
1x	


1

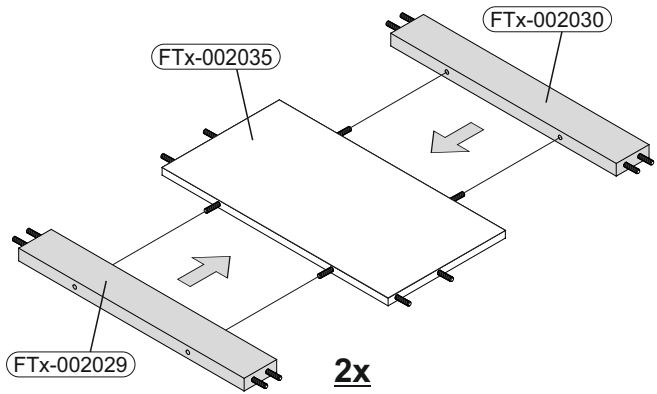


2

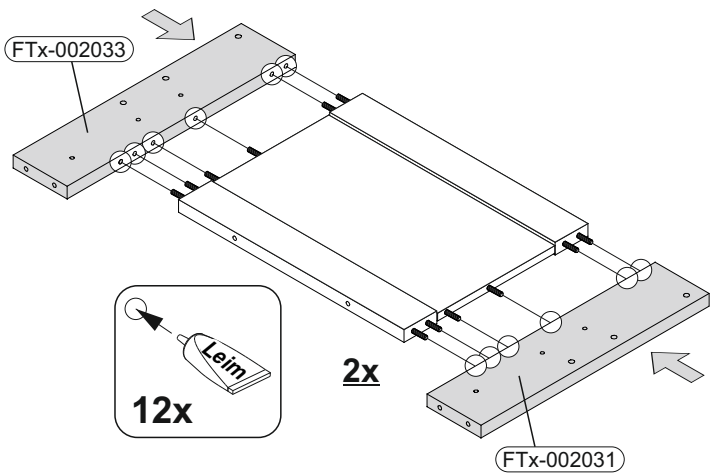


3


B05-130	
1x	

1

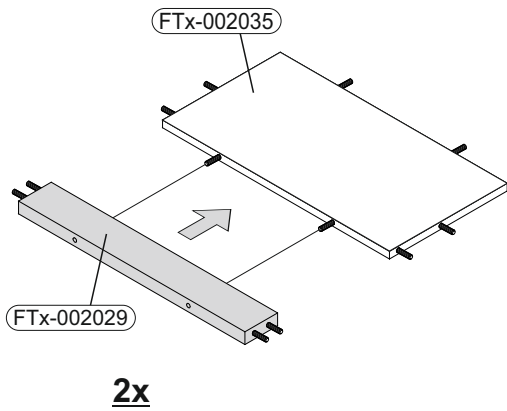


2

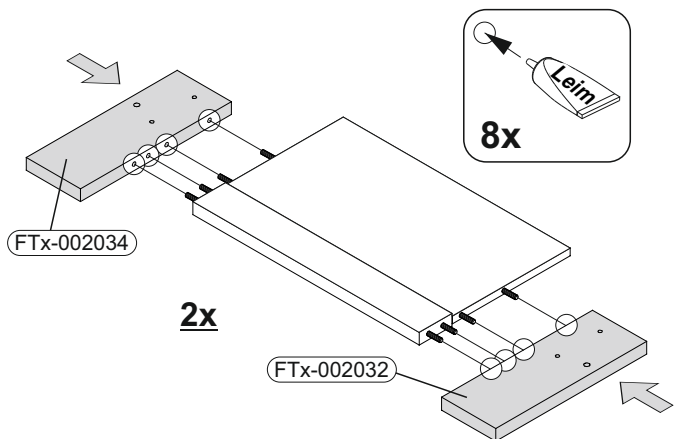




1

2x

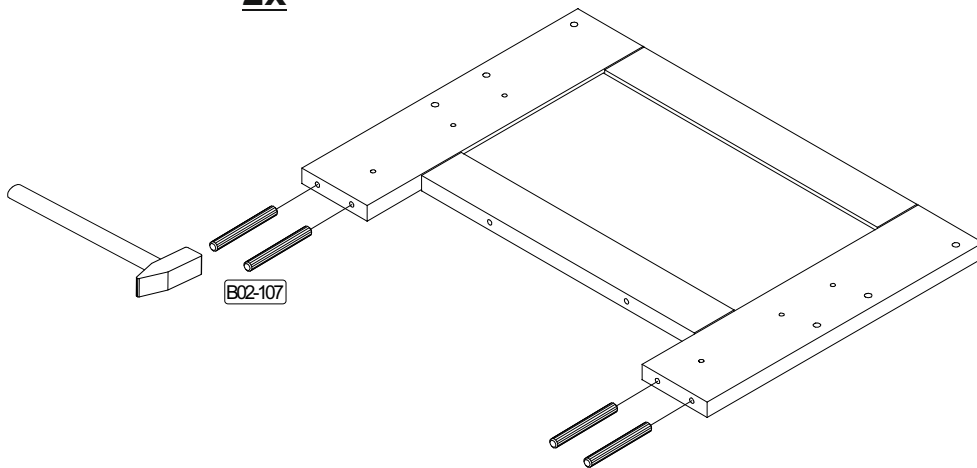


2


2x

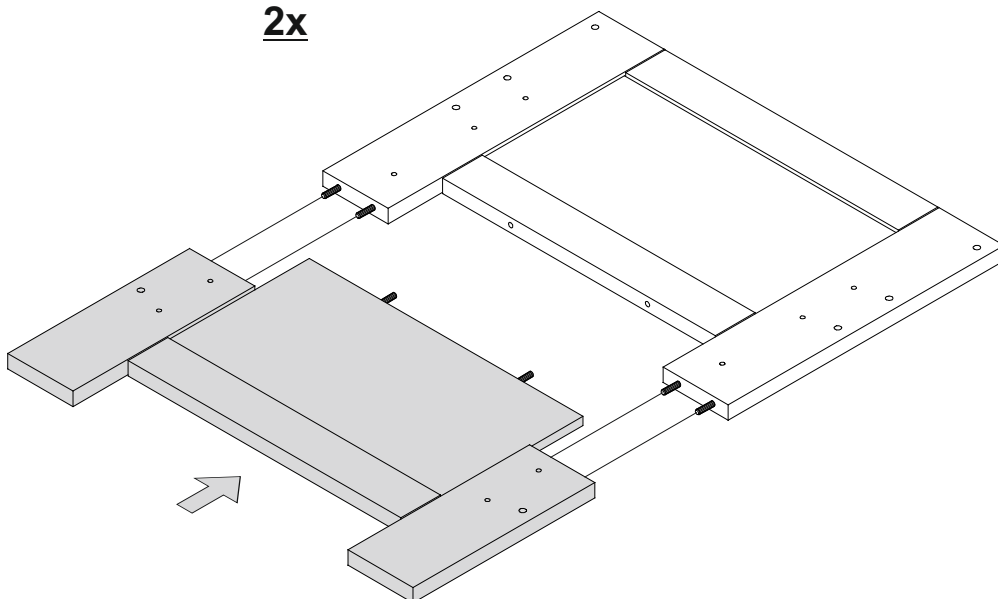


5





B10-115		B10-90	
16x	12x10 M6	20x	

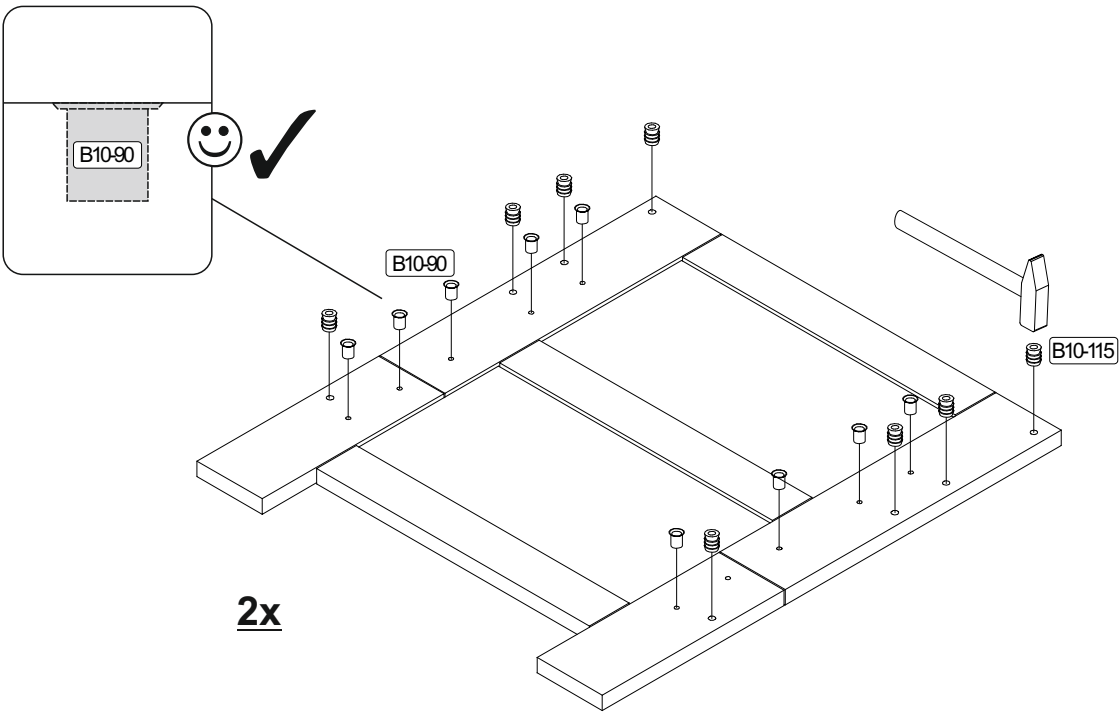

6






B10-110	
8x	

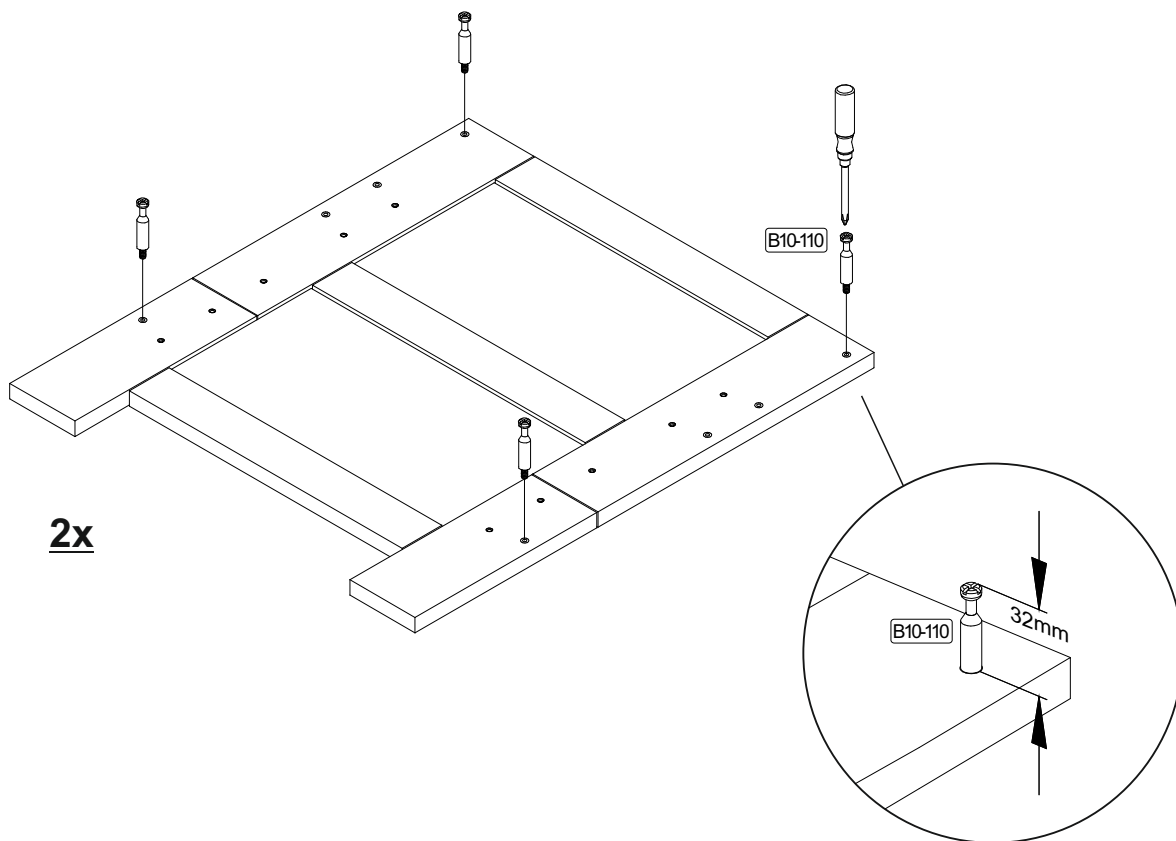










7

								
	B10-95	6,3x19	B10-105		B10-80		B10-85	
	4x		8x		2x		2x	

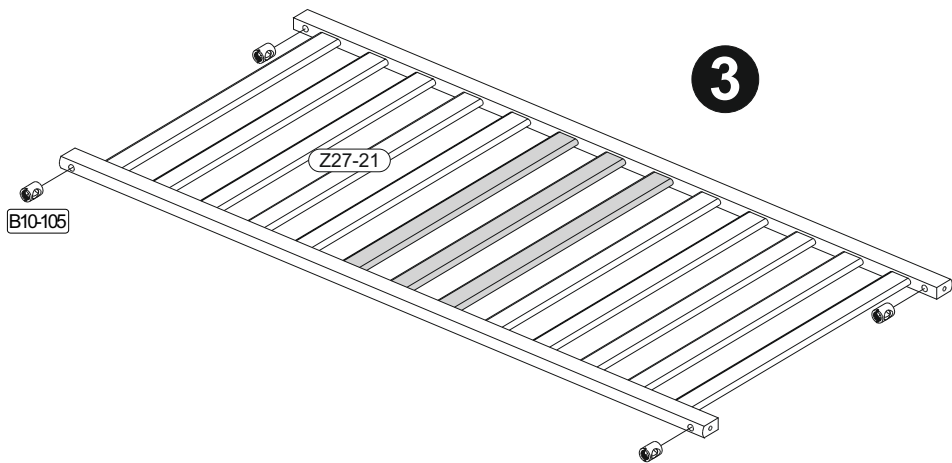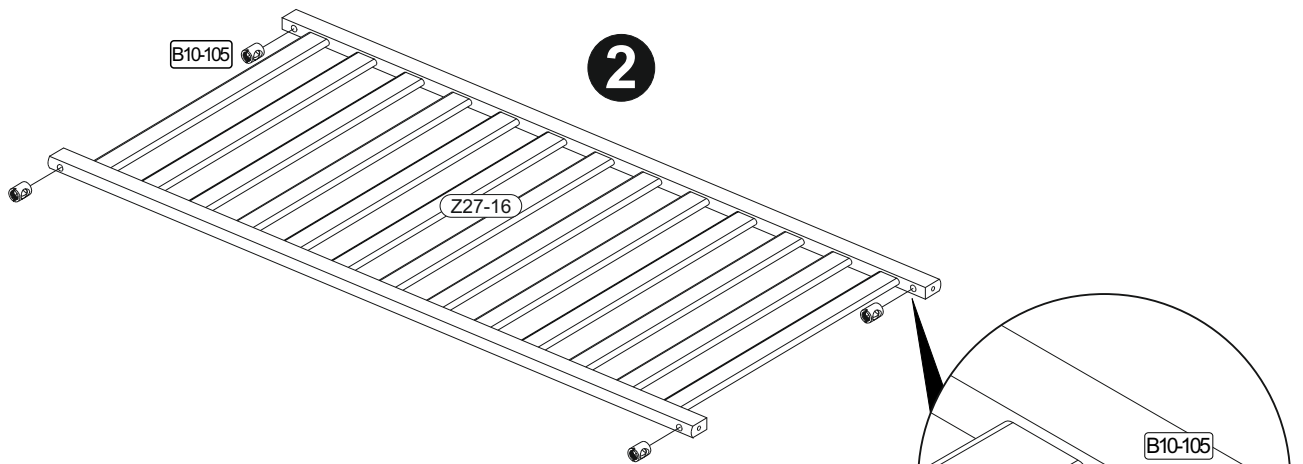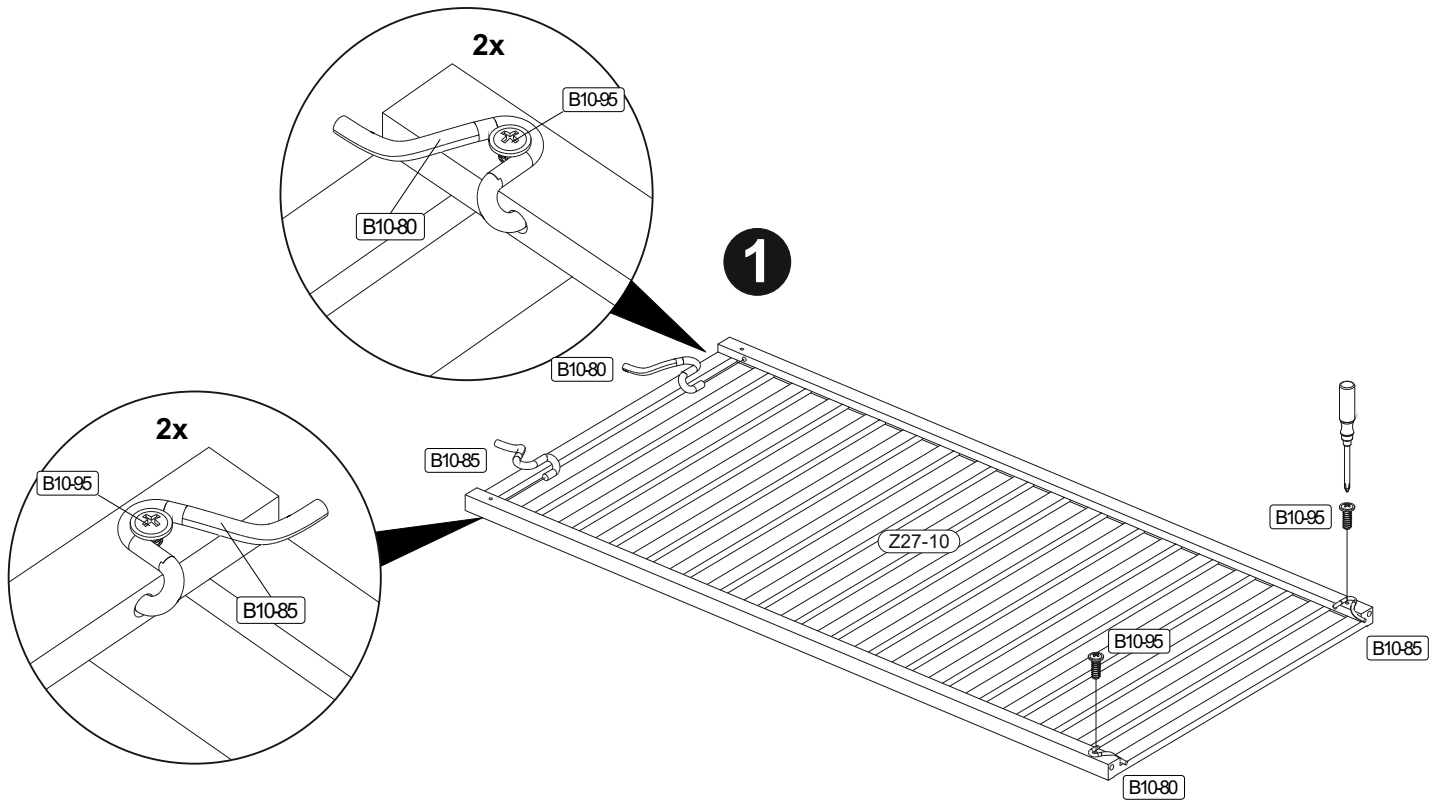


8

	B10-101		B01-239	
8x		M6x6 SW3	1x	SW 3

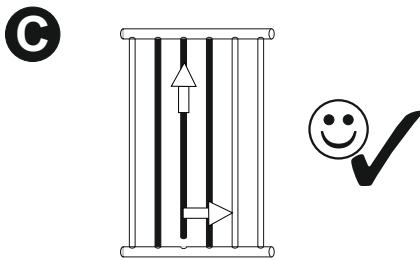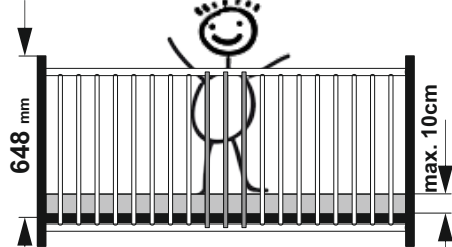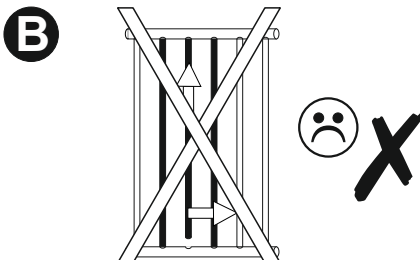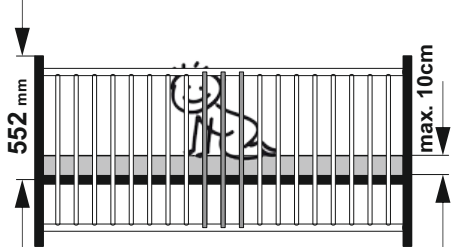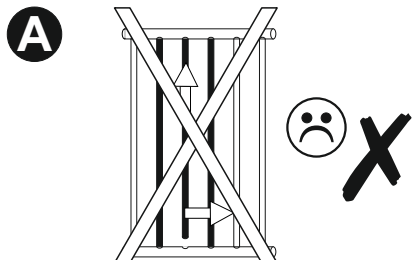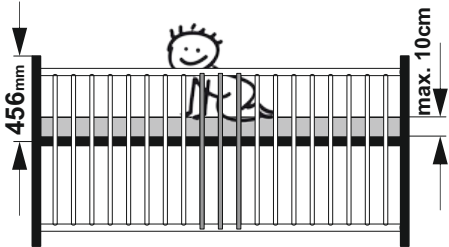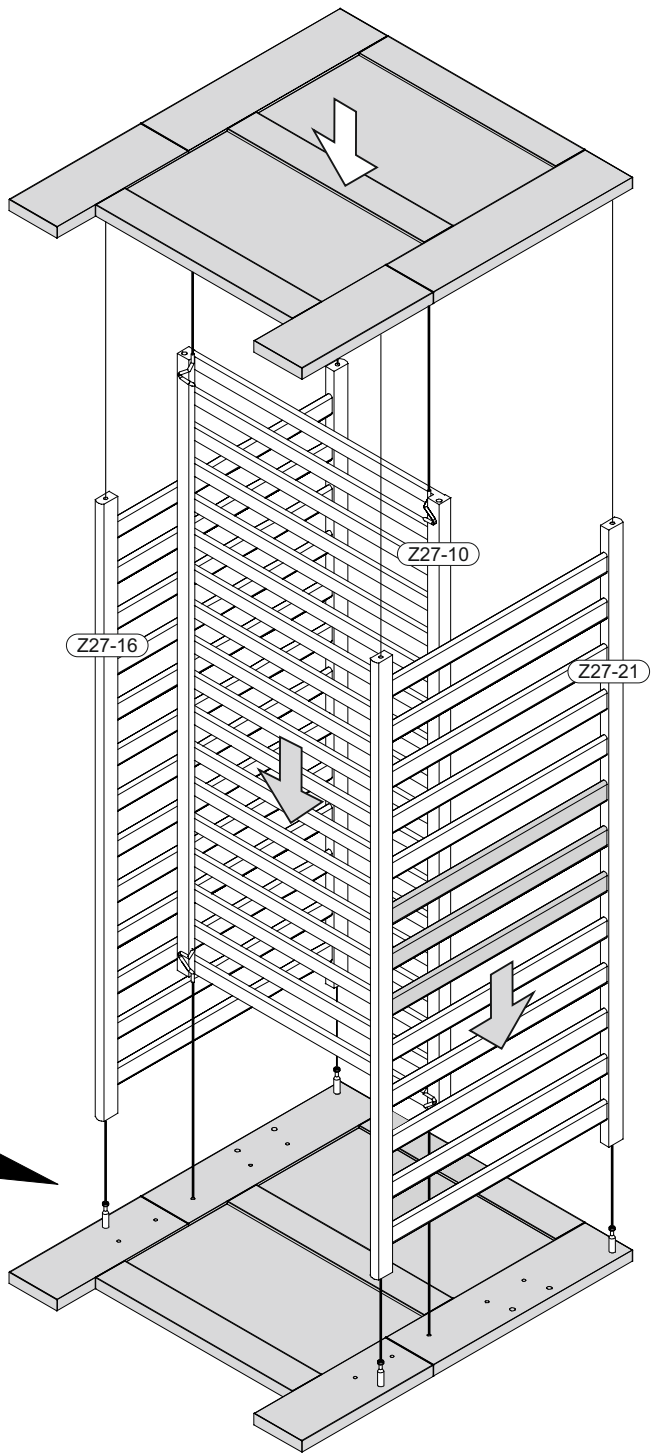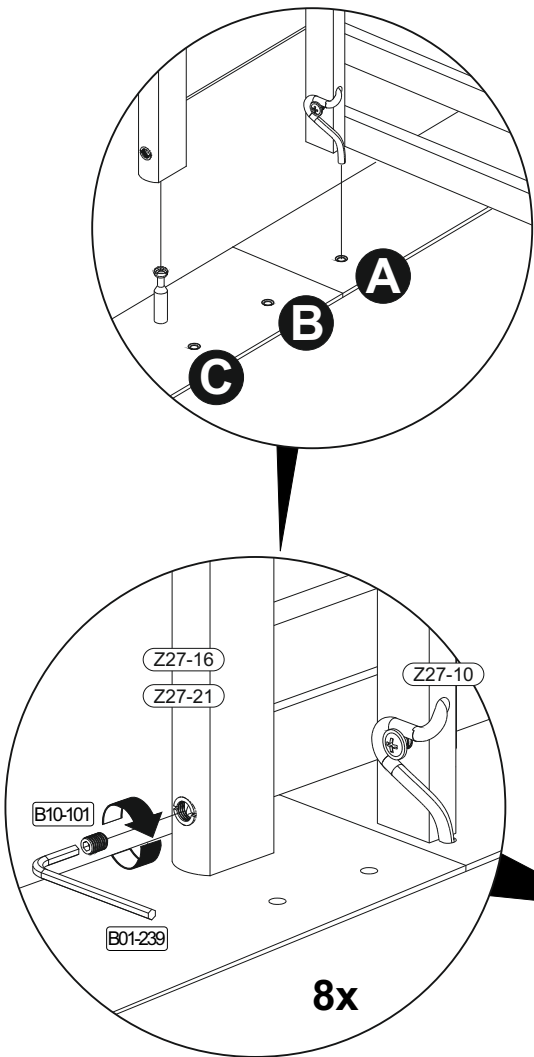


9

 +	B05-273	
	1x	

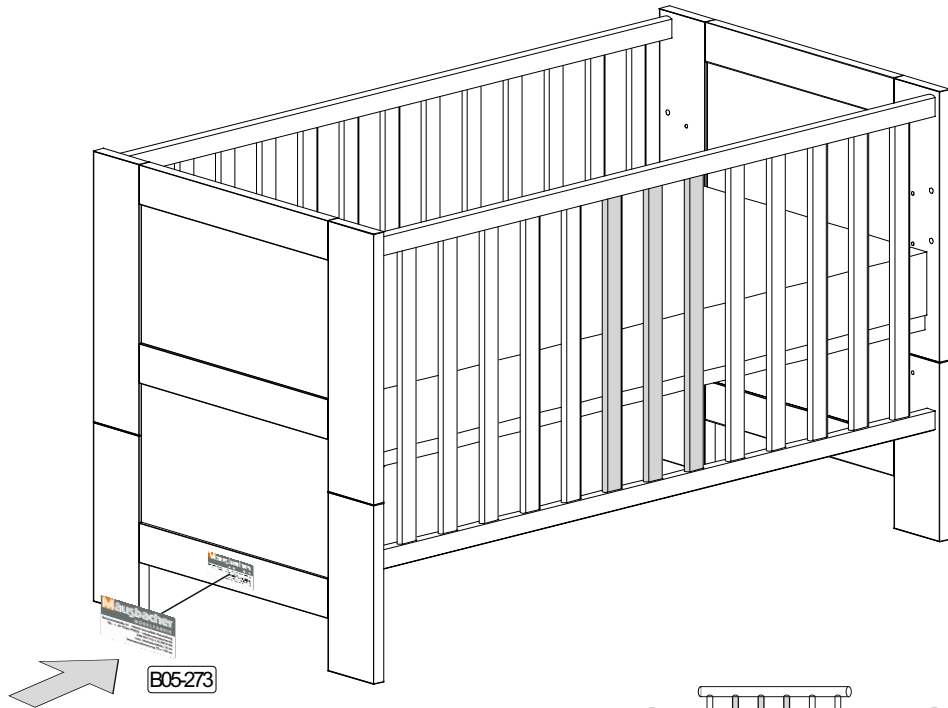

1

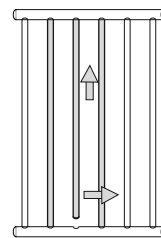

2

