


ANDRA

Montagehinweis für Hängenelement (S720 / S721)

- 1. Legen Sie an der Wand die Oberkante und seitliche position des Hängenelementes fest und markieren diese.
- 2. Zeichnen Sie die Löcher für die Wandleiste wie in der Skizze unten dargestellt an und bohren diese (D = 8 mm)
- 3. Dübel 8 x 40 mm einstecken und Wandleiste mit je zwei Schrauben 5 x 60 mm anschrauben.
- 4. Hängenelement auf die Wandleiste einhängen und wenn nötig an den Stellschrauben des Aufhängebeschlags einstellen.
- 5. Die Löcher der Rückwand mit den Abdeckkappen verschließen.

Bohrmaße von Korpus-Außenkante für Wandleiste

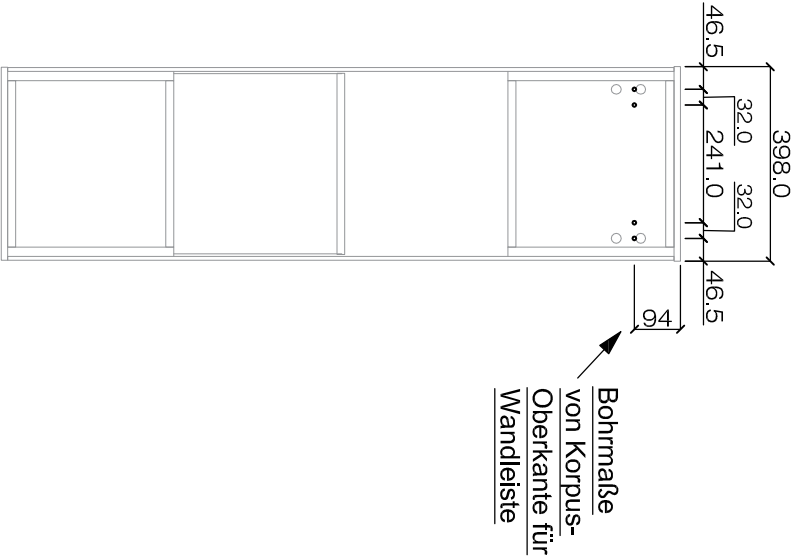

Befestigung der Wandleiste

Wandbohrung	Dübel	Wandleiste	Spax-Schraube
Ø 8 mm	8 x 40 mm LA0005404	60mm VE0005221	5 x 60 mm LA0005363


ANDRA

Assembly information for hanging cabinets

(S720 / S721)

1. Define the position of the unit on the wall. Mark the top and the side edge.
2. Mark the drilling holes as shown in the below drawing. Drill the holes with a 8 mm drilling bit.
3. Insert the anchor bolts 8 x 40 mm and screw on the bearing plates with 2 screws 5 x 60 mm.
4. Hang up the cabinet on the bearing plates. If necessary adjust with the adjusting screws on the hanging fitting.
5. Close the holes in the back with the plastic covers.

drilling measurements from the carcass side edge for bearing plates

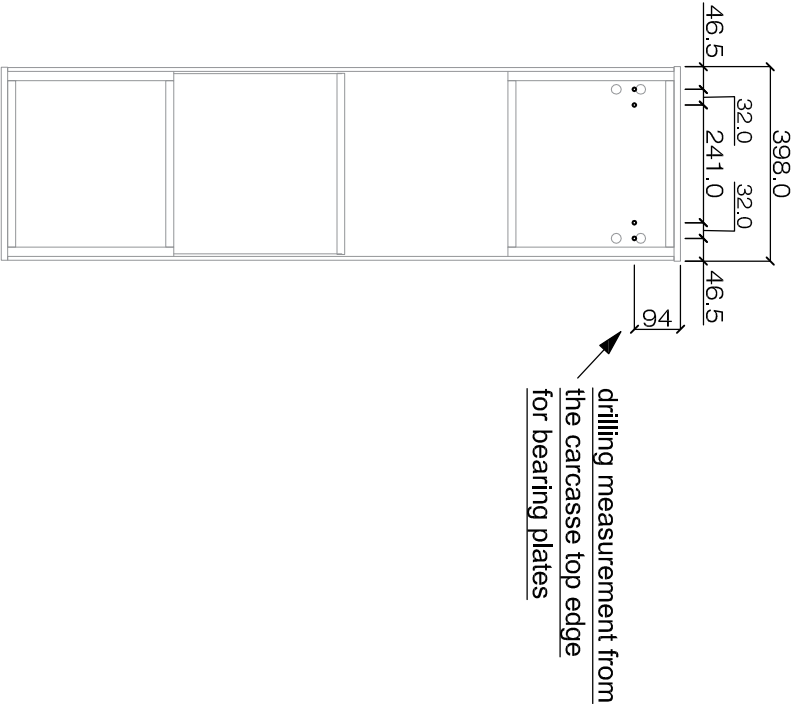

Fixing of the bearing plates

hole	anchor bolt	bearing plate	Spax-screw
Ø 8 mm	8 x 40 mm LA0005404	60mm VE0005221	5 x 60 mm LA0005363
			