

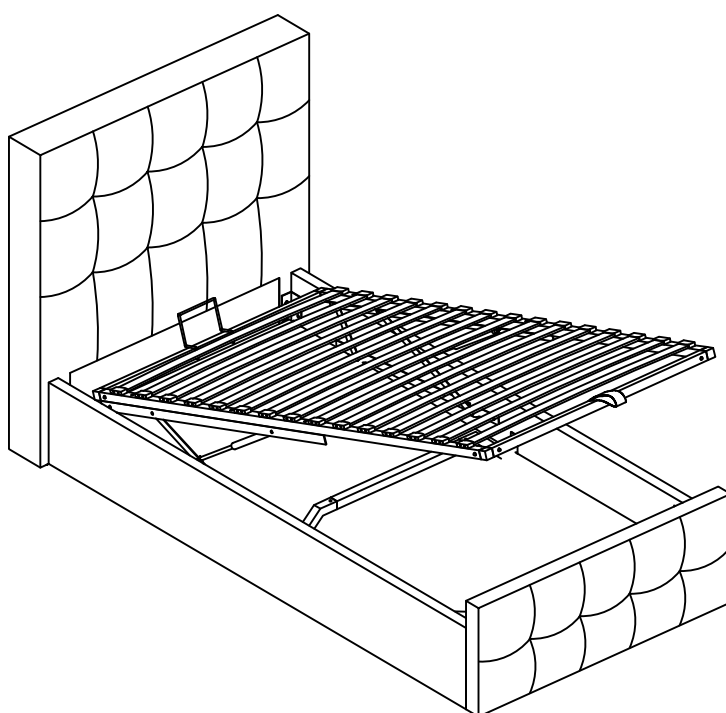
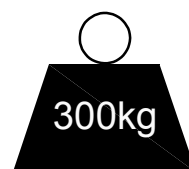











28940005-04/05/06

BDSK Handels GmbH &
Co. KG
Mergentheimer Straße 59
D-97084 Würzburg
UID-Nr.: DE279448078





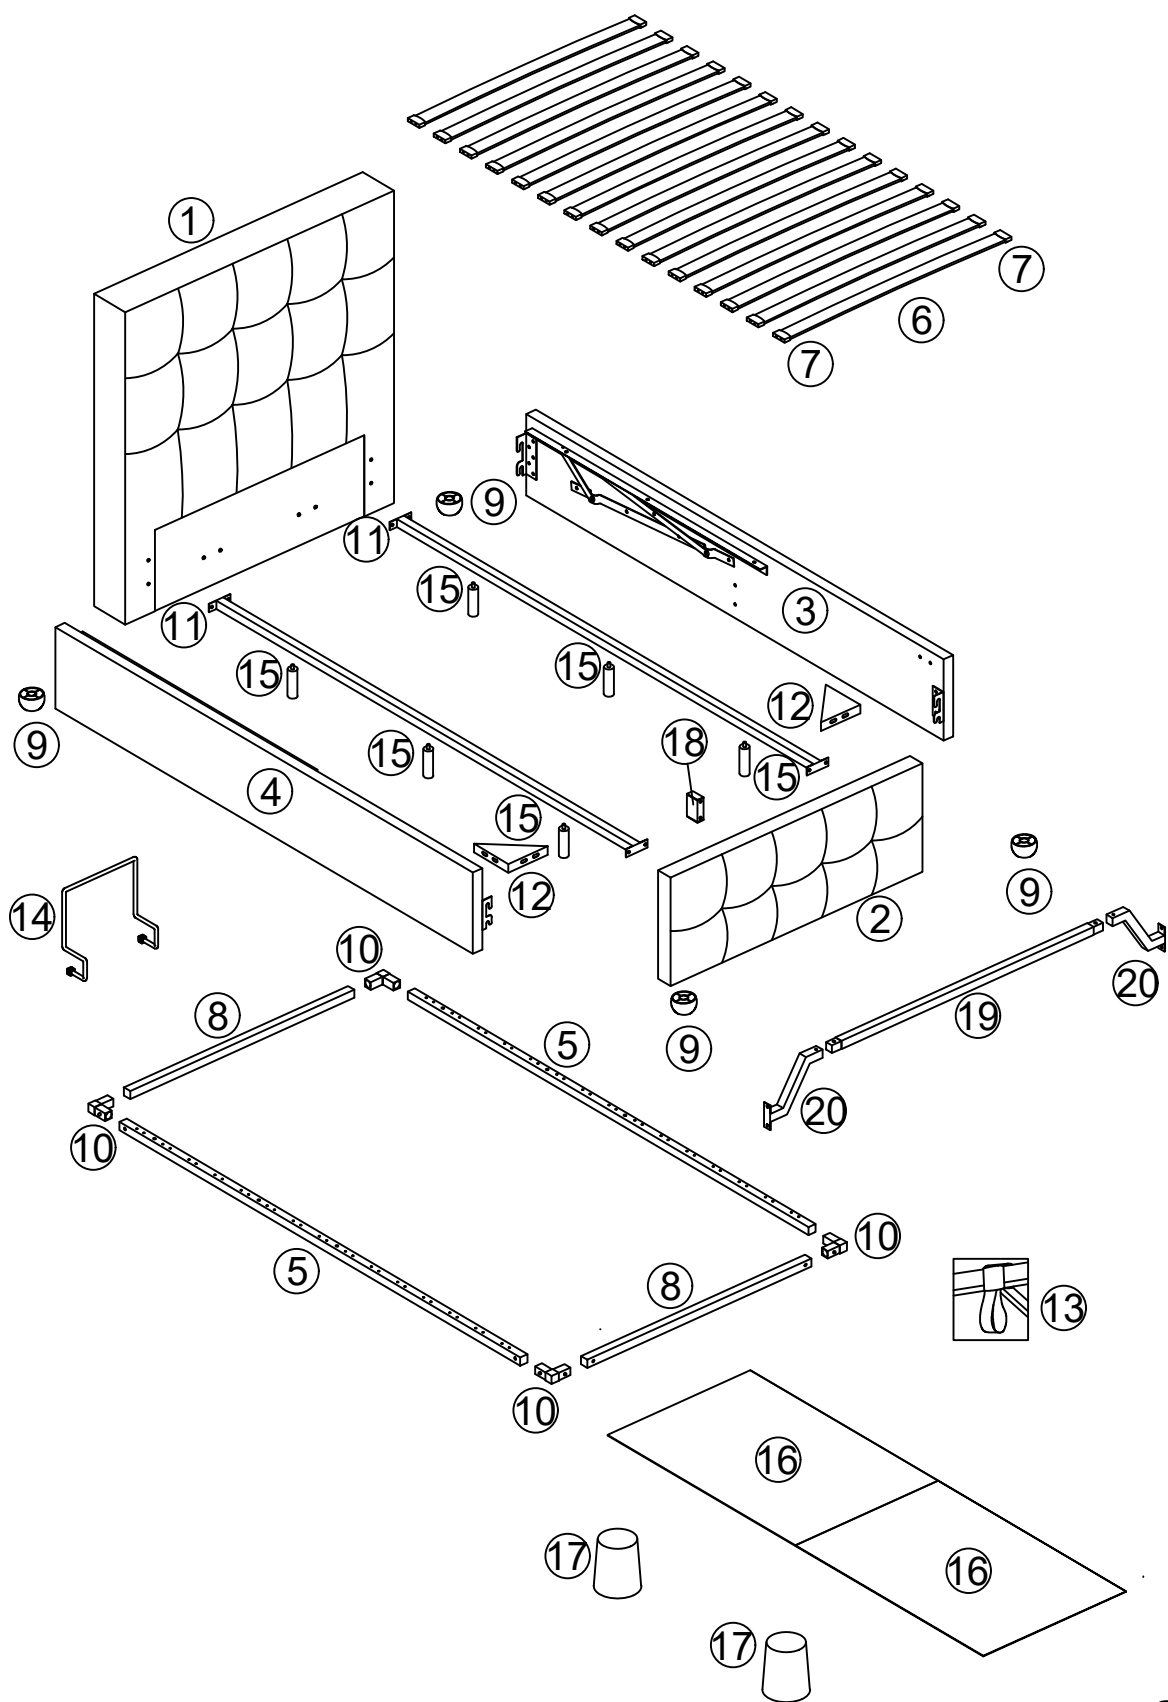

Parts List

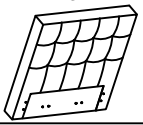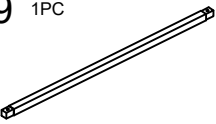
1 HEAD BOARD 1PC 	2 FOOT BOARD 1PC 	3 SIDE RAIL 1PC 	4 SIDE RAIL 1PC 
5 BEDSTEAD RAIL 2 SETS 	6 SLAT 15PCS 	7 Single Plastic Cap 30PCS 	8 BEDSTEAD RAIL 2 SETS 
9 LEG 4PCS 	10 4PCS 	11 2PCS 	12 2PCS 
13 Digging rope 1PC 	14 1PC 	15 Support Leg 6PCS 	16 2PCS 
17 2PCS 	18 1PC 	19 1PC 	20 2PCS 

Hardware List

A M8*30 x28 PCS 	B M8*40 x6 PCS 	C 6 PCS 	D 8 PCS 
E 10 PCS 	F M5 x1 PC 	G 1 PC 	H 1 PC 
I M4*40 x4 PCS 	J M8*70 x2 PCS 	K M6*20 x2 PCS 	L M4 x2 PCS 



1

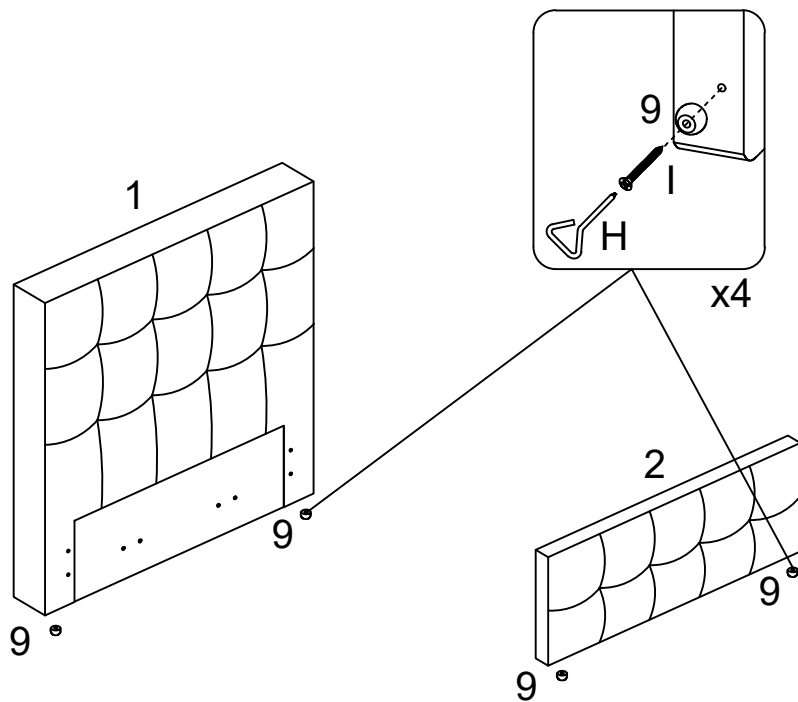


I. X4

M4*40mm

H. X1



2

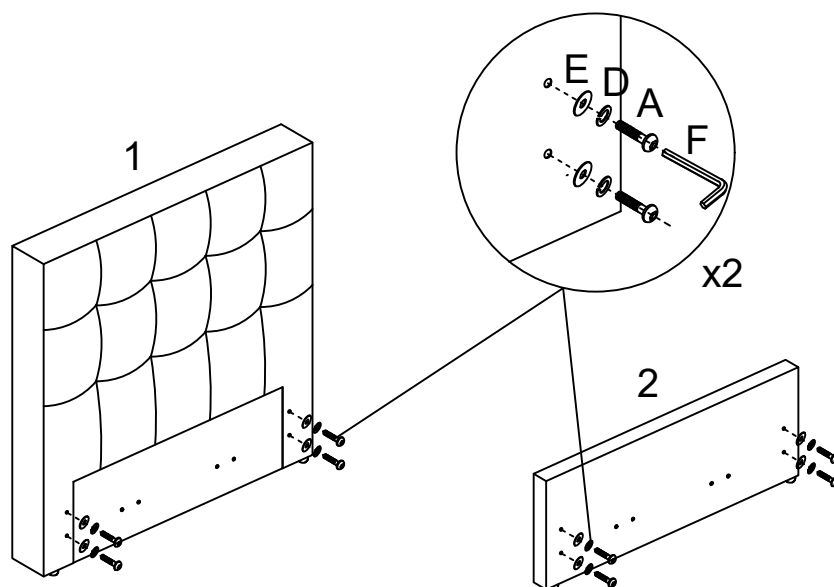

F. X1



M8

E. X8



M8

D. X8



M8

A. X8




M8*30mm


4



3

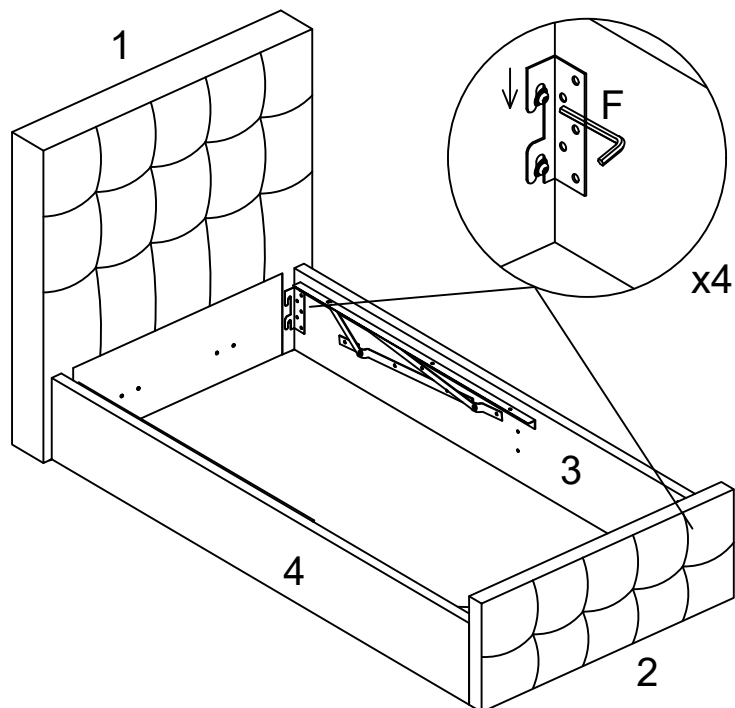

4

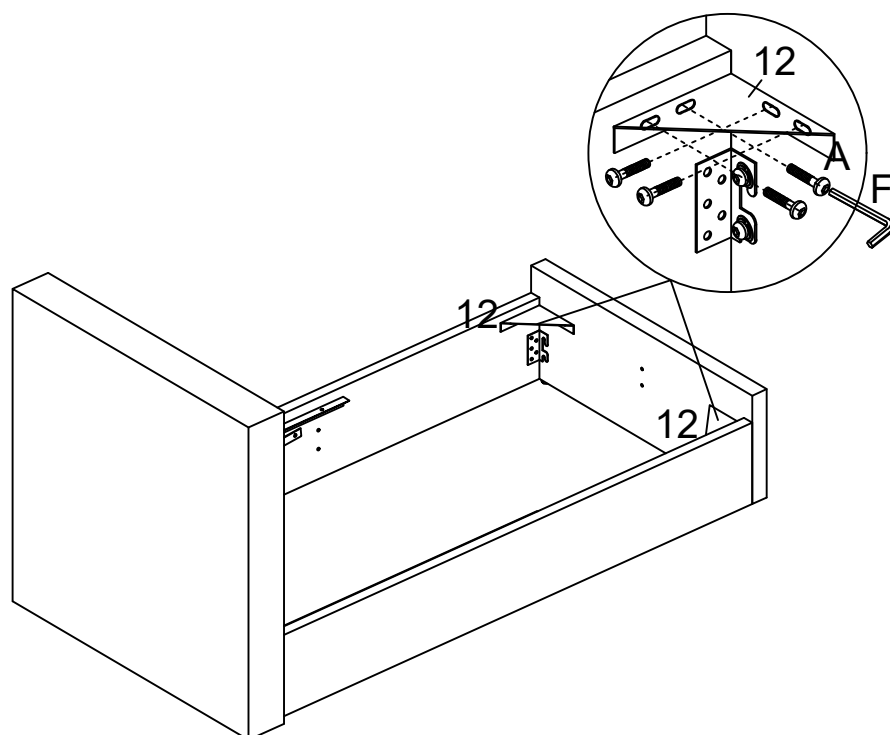

F. X1



M8

A. X8





M8*30mm

5



5

Please tighten the screw.

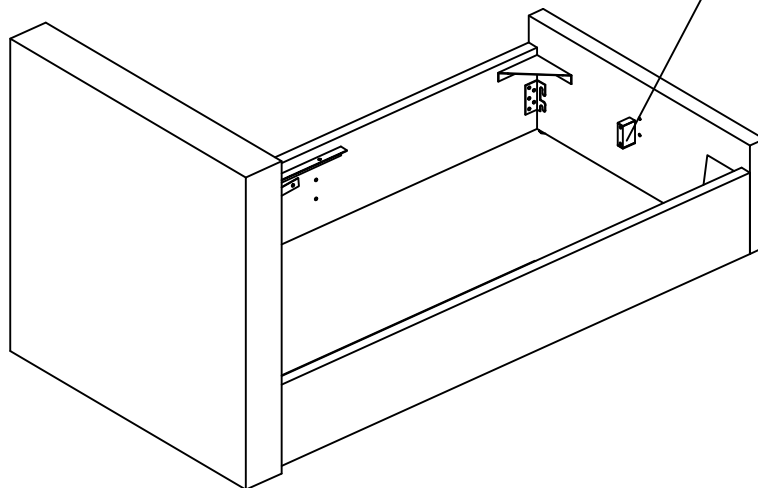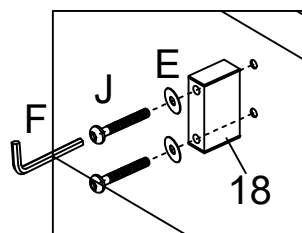

F. X1



M8

E. X2




M8

J. X2



M8*70mm


6

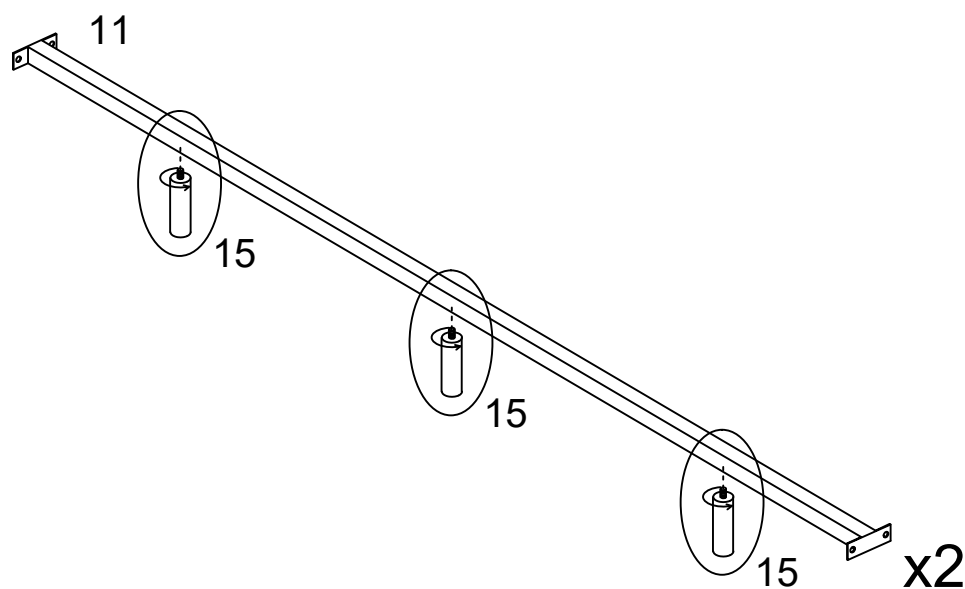

6



7

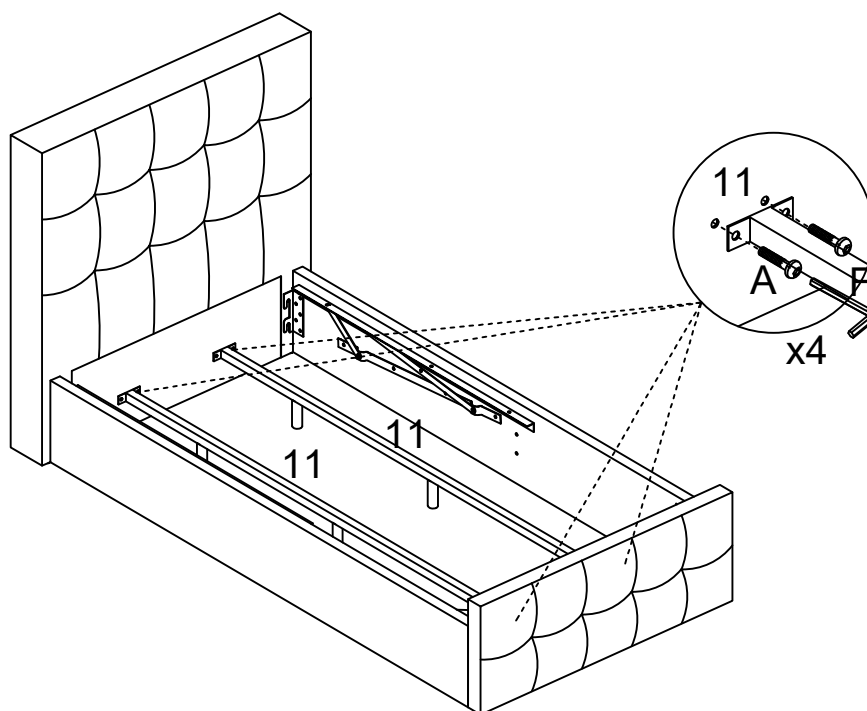

F. X1




M8

A. X8



M8*30mm

8

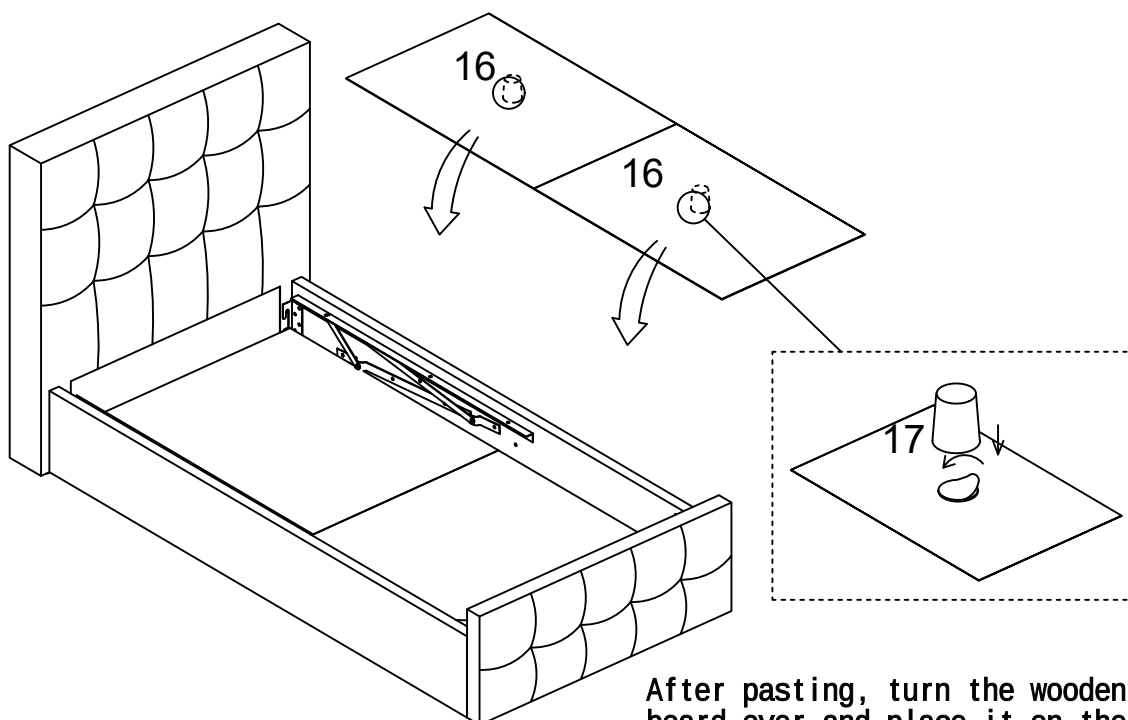


After pasting, turn the wooden board over and place it on the tube 11.

7



9

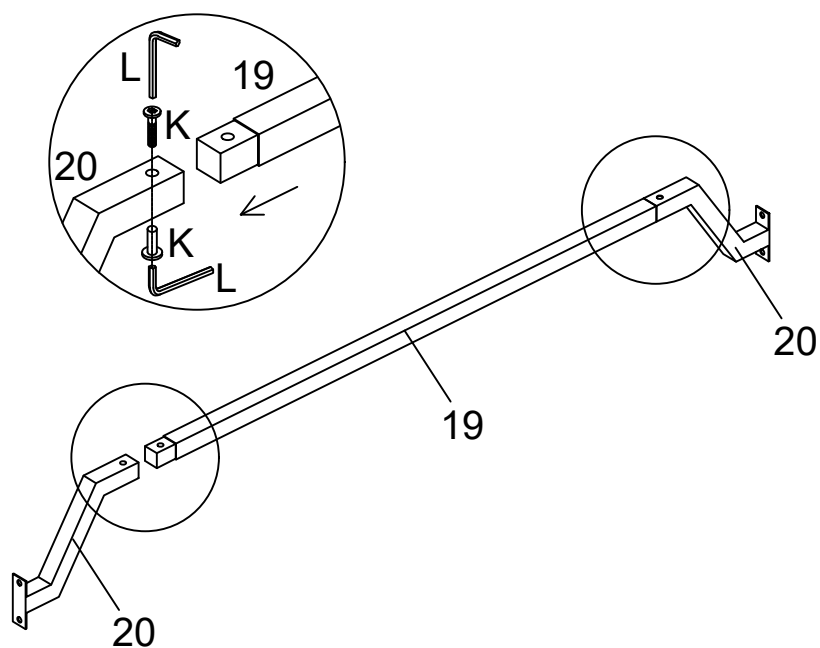


L. X2



K. X2



10

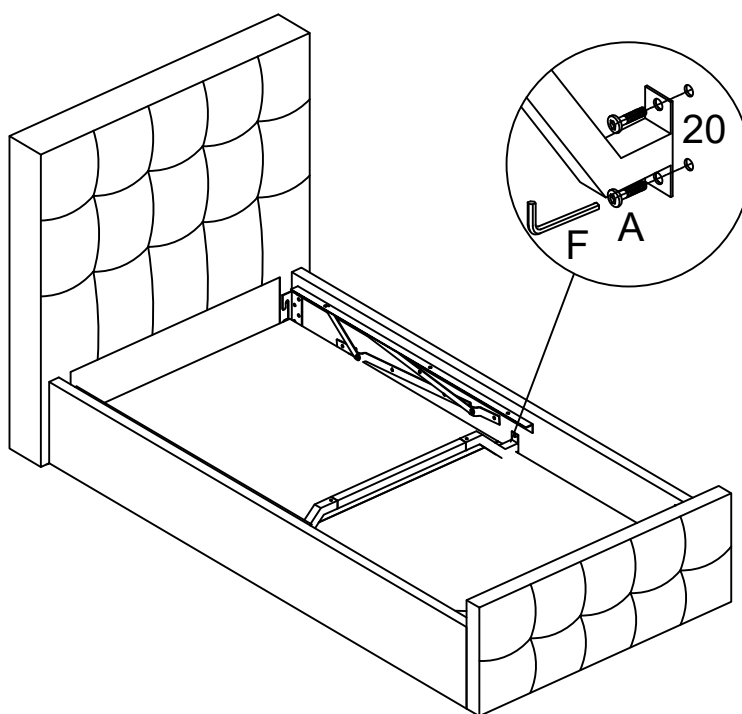

F. X1




A. X4




8



11

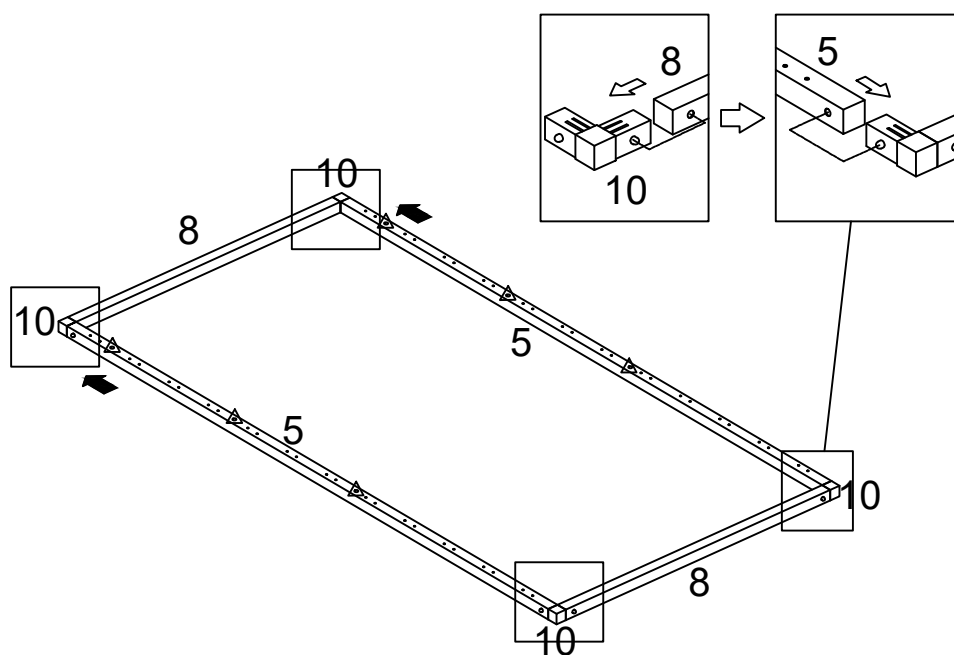

12

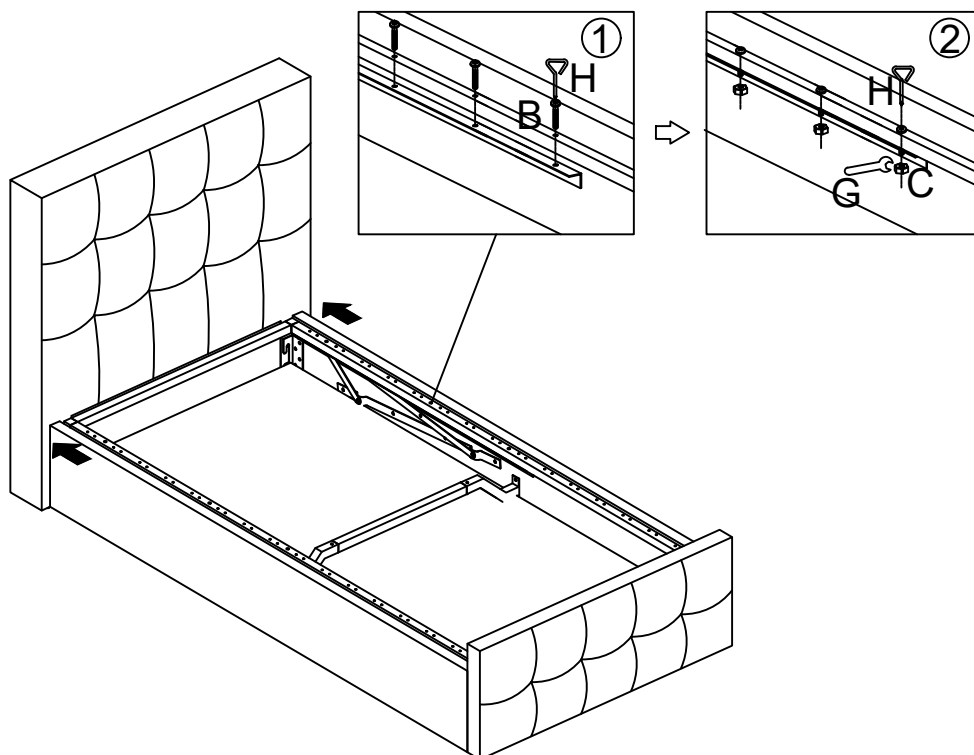

- G. X1

M8
- H. X1

M8
- C. X6


M8
- B. X6

M8*30mm

9




13

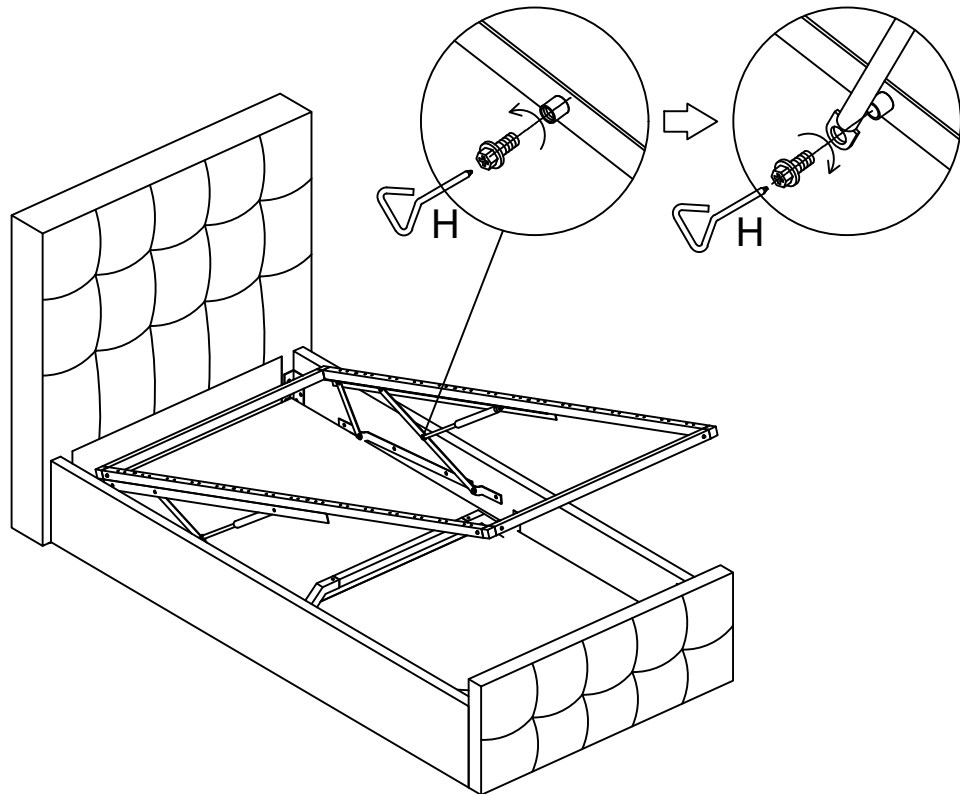

H. X1




14

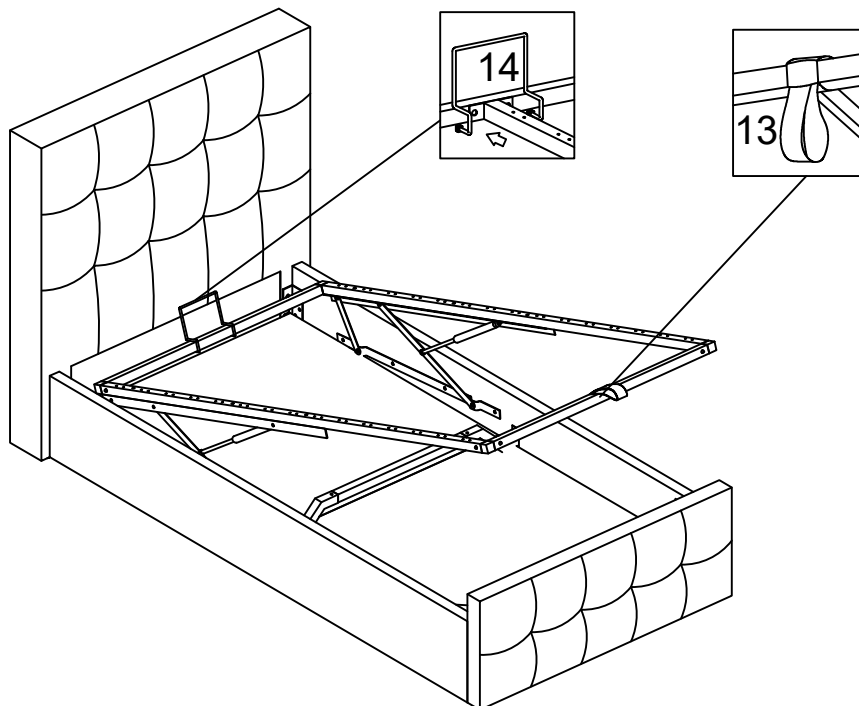


10



15

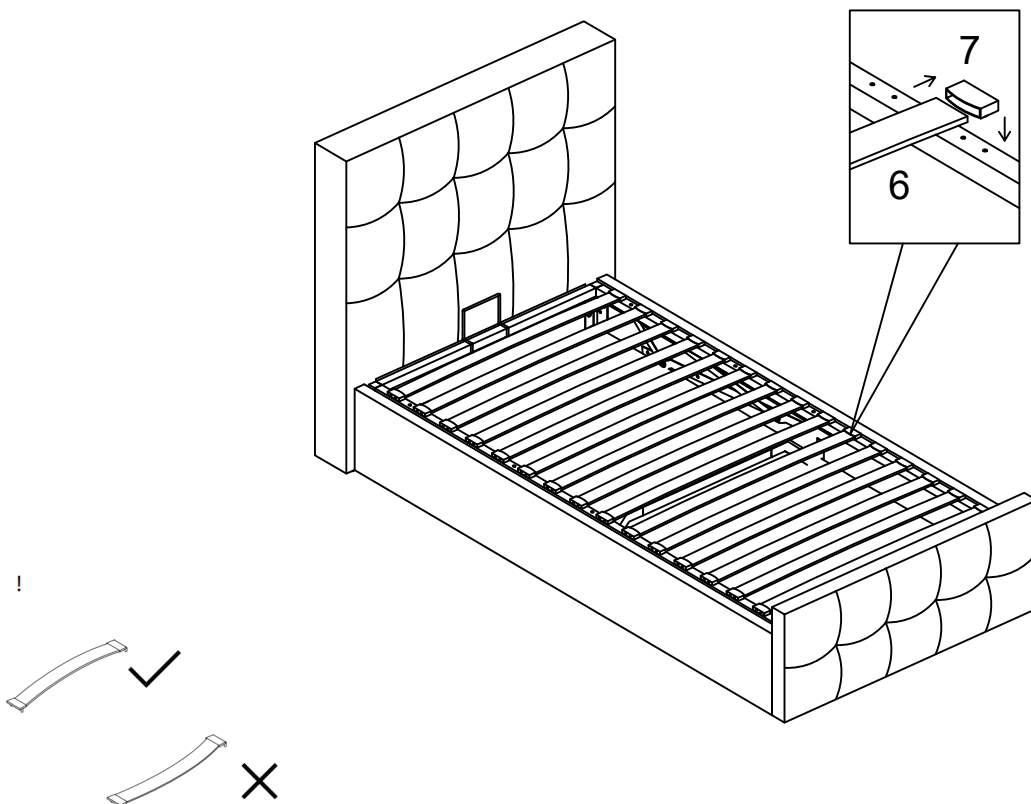

16

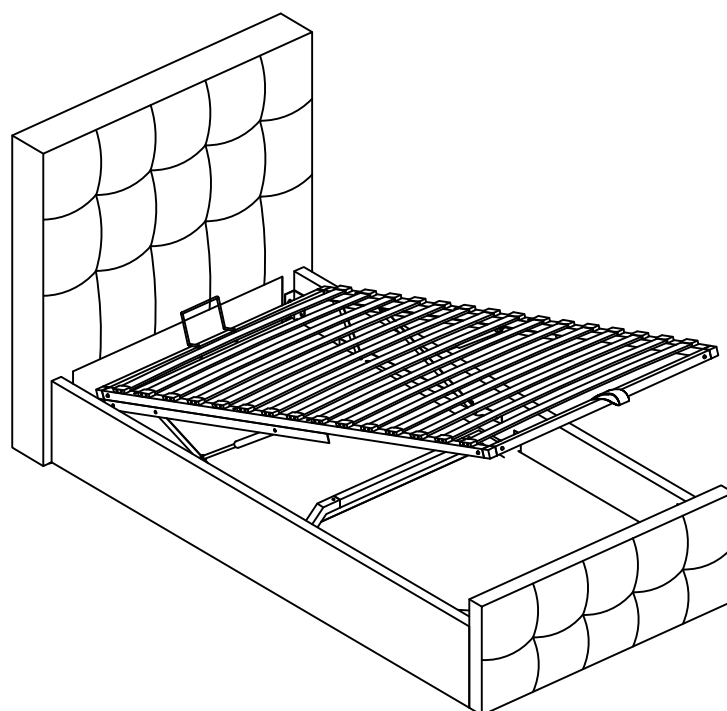

11

