










Stand_2019_07

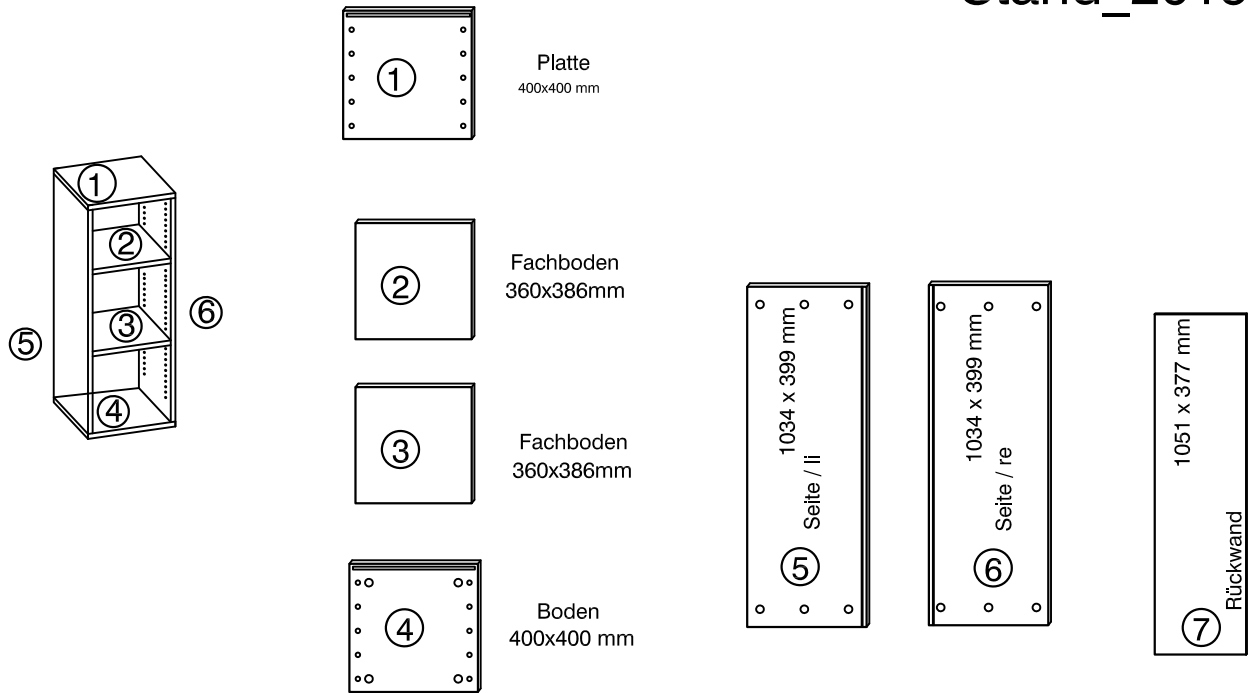





Beipack: Korpus

538RE**





555951

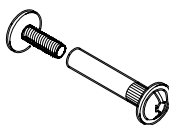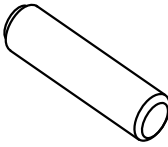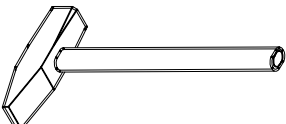4 x (A)  500568	12 x (B)  500270	12 x (C)  500360	4 x (D)  500378	
8 x (F)  508667	4 x (G)  500273 + 500274		8 x (J)  500578 8x30mm	4 x (K)  500547 18/14
● Sie benötigen dieses Werkzeug / tool :   Ø 5mm  				1 x (L)  SW4 500278






1

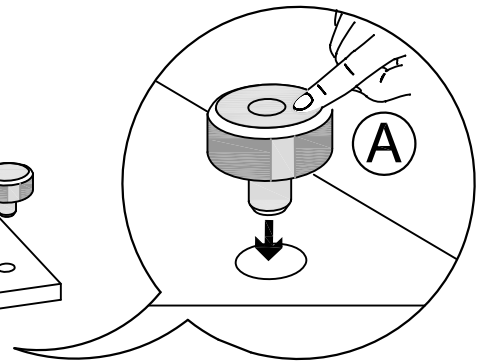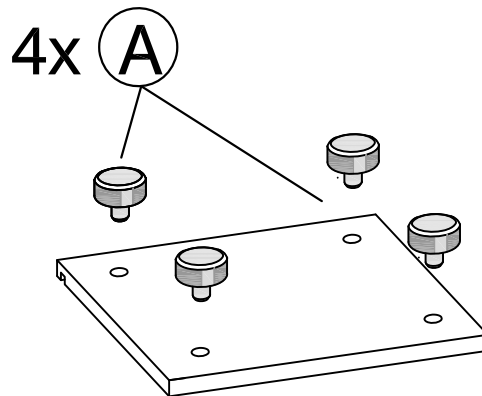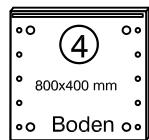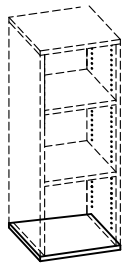




2

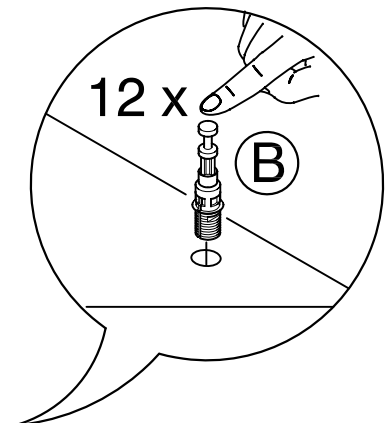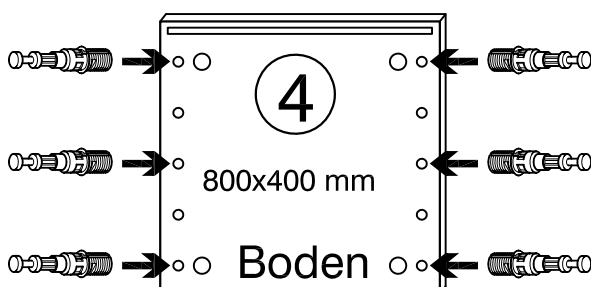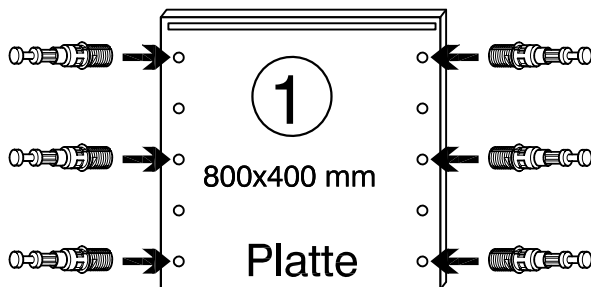
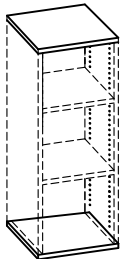


3

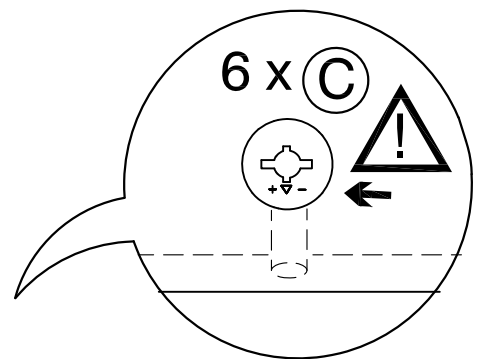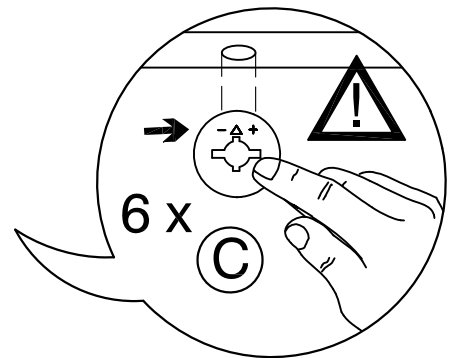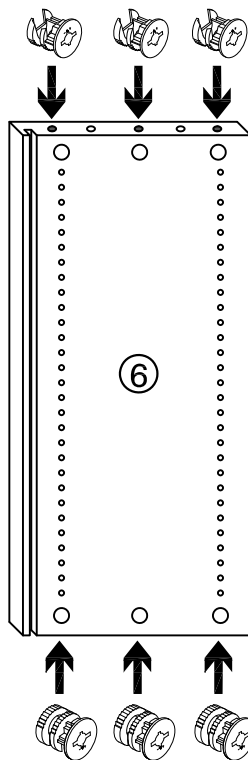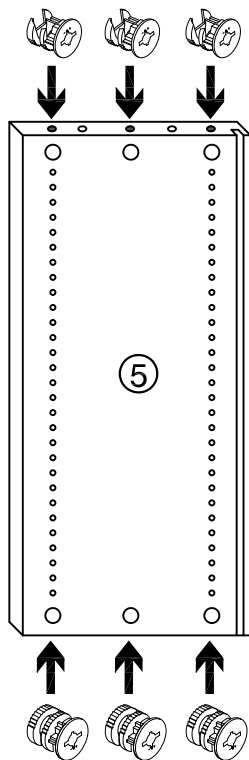
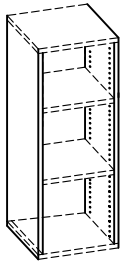


4

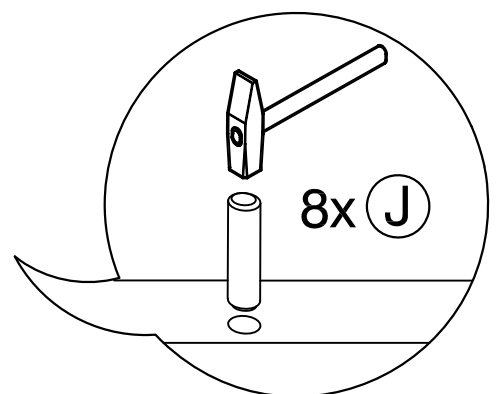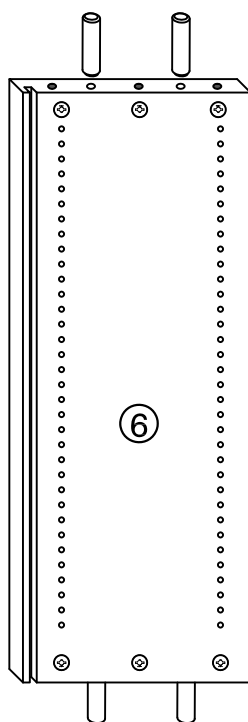
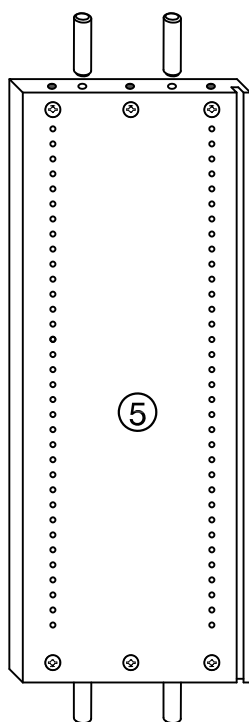


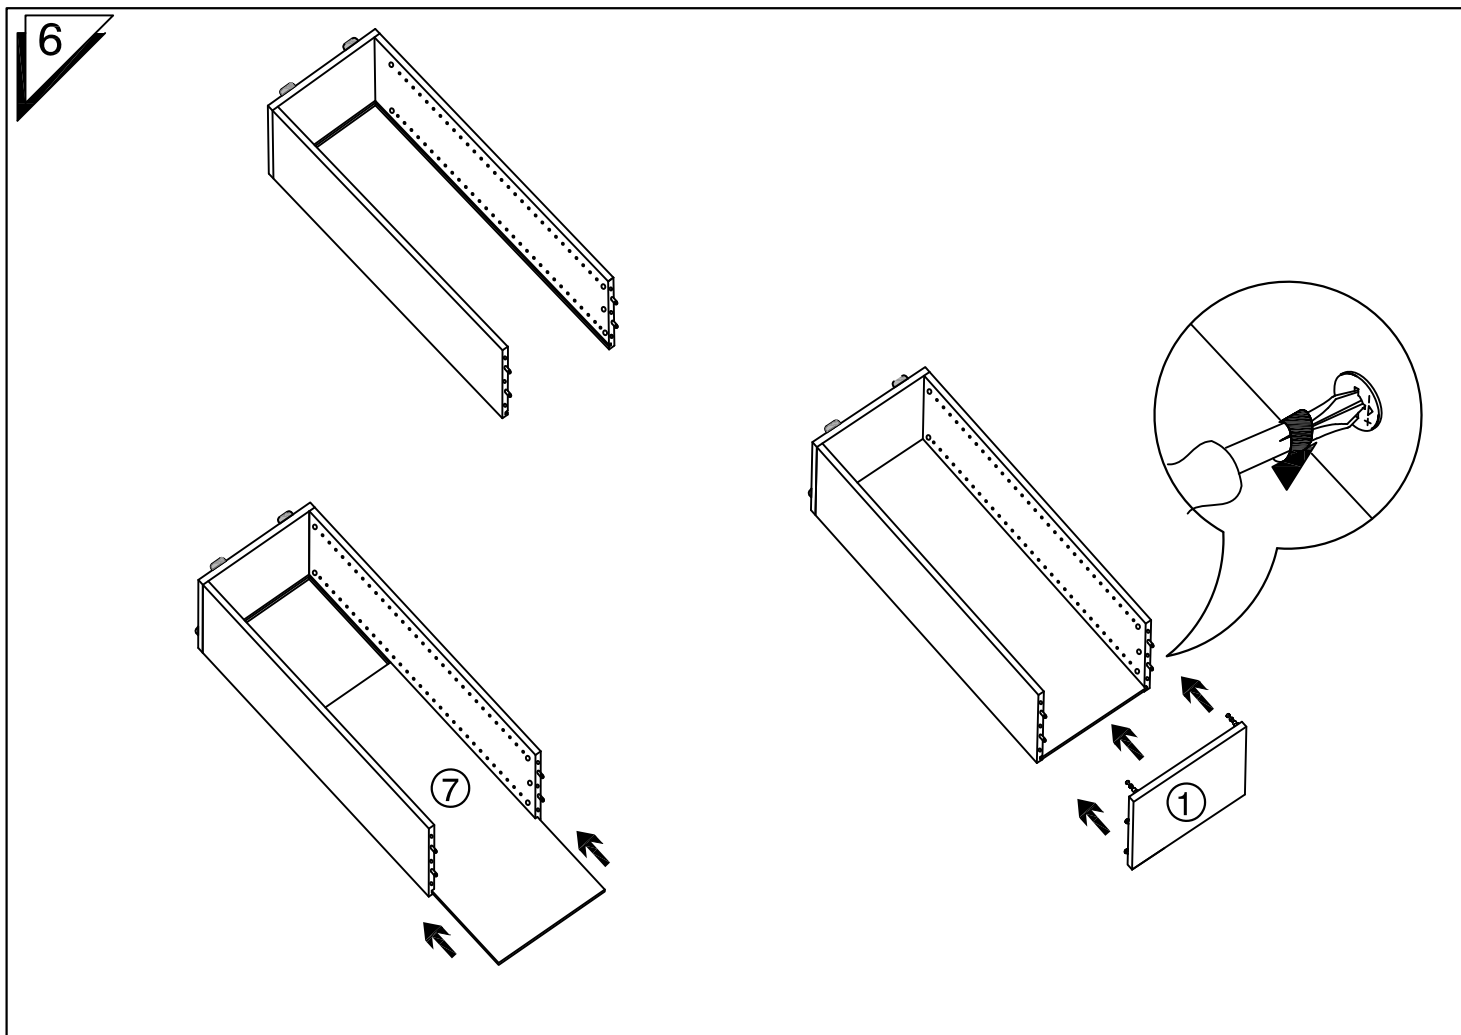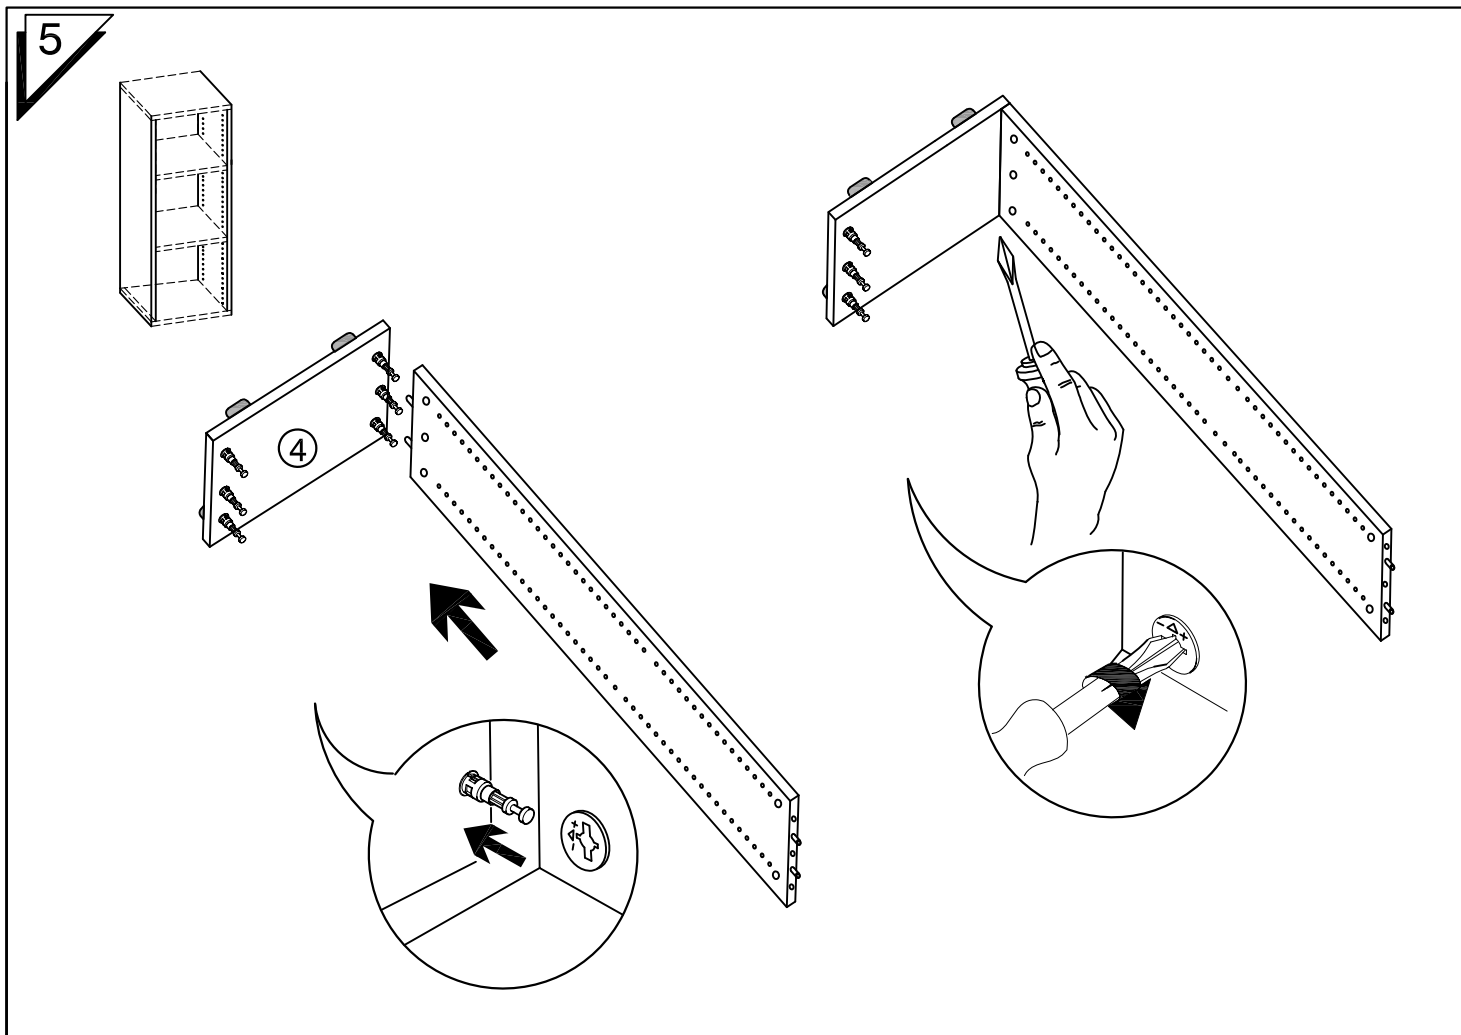



7

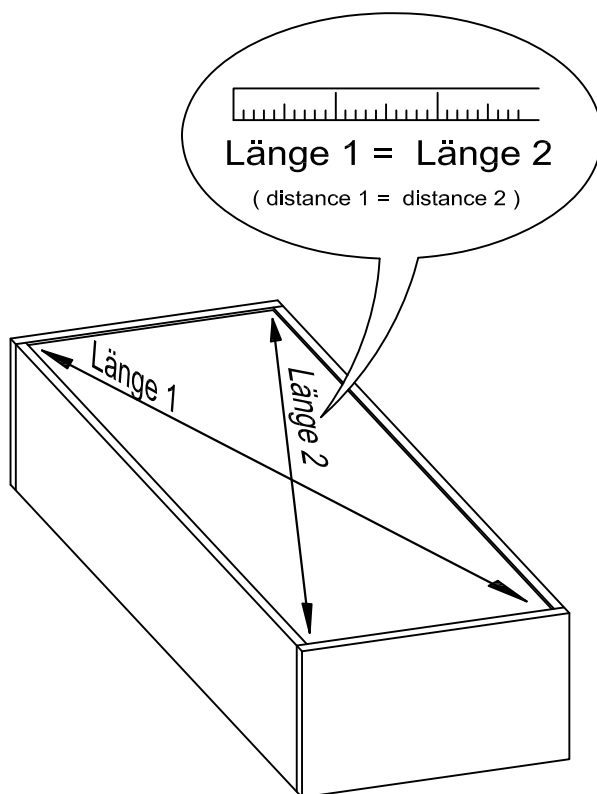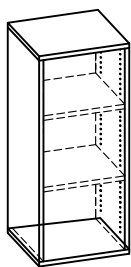

8

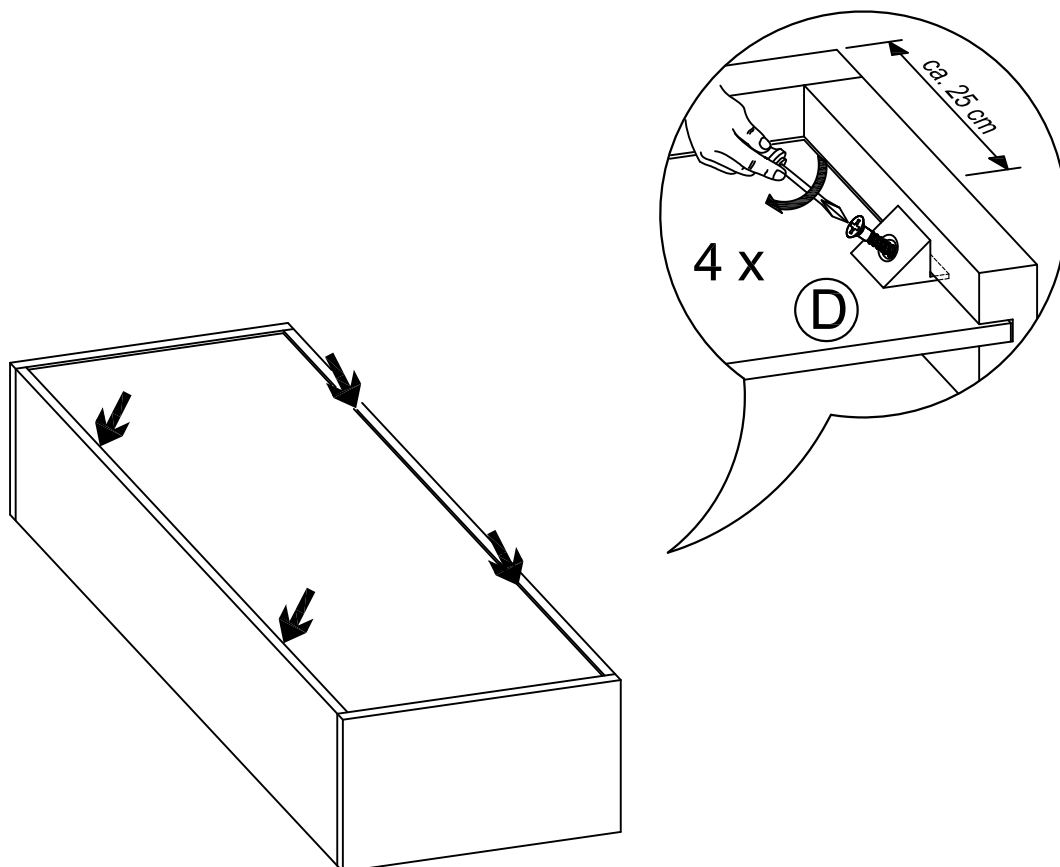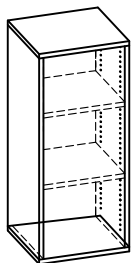


9

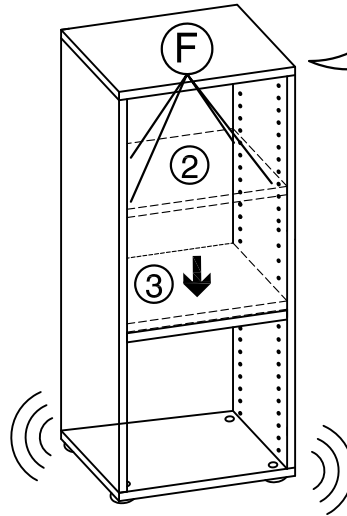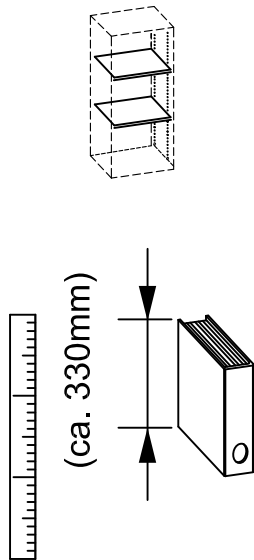



je 4 x

F



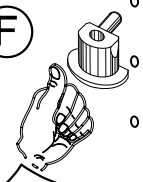


4 x

K

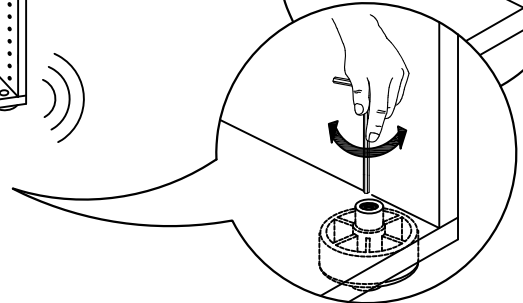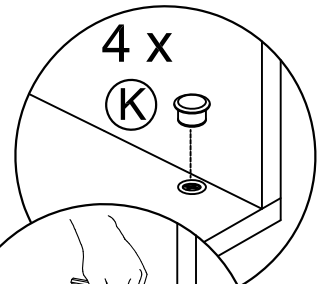

10

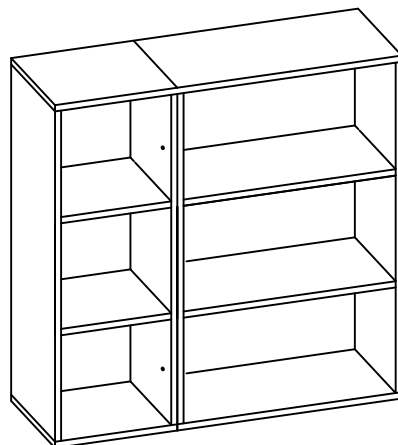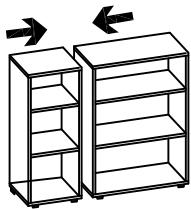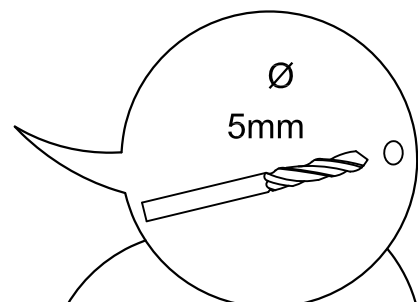
 $\varnothing$
5mm


G

