



ASSEMBLY INSTRUCTION















23060023/01

23060028/09

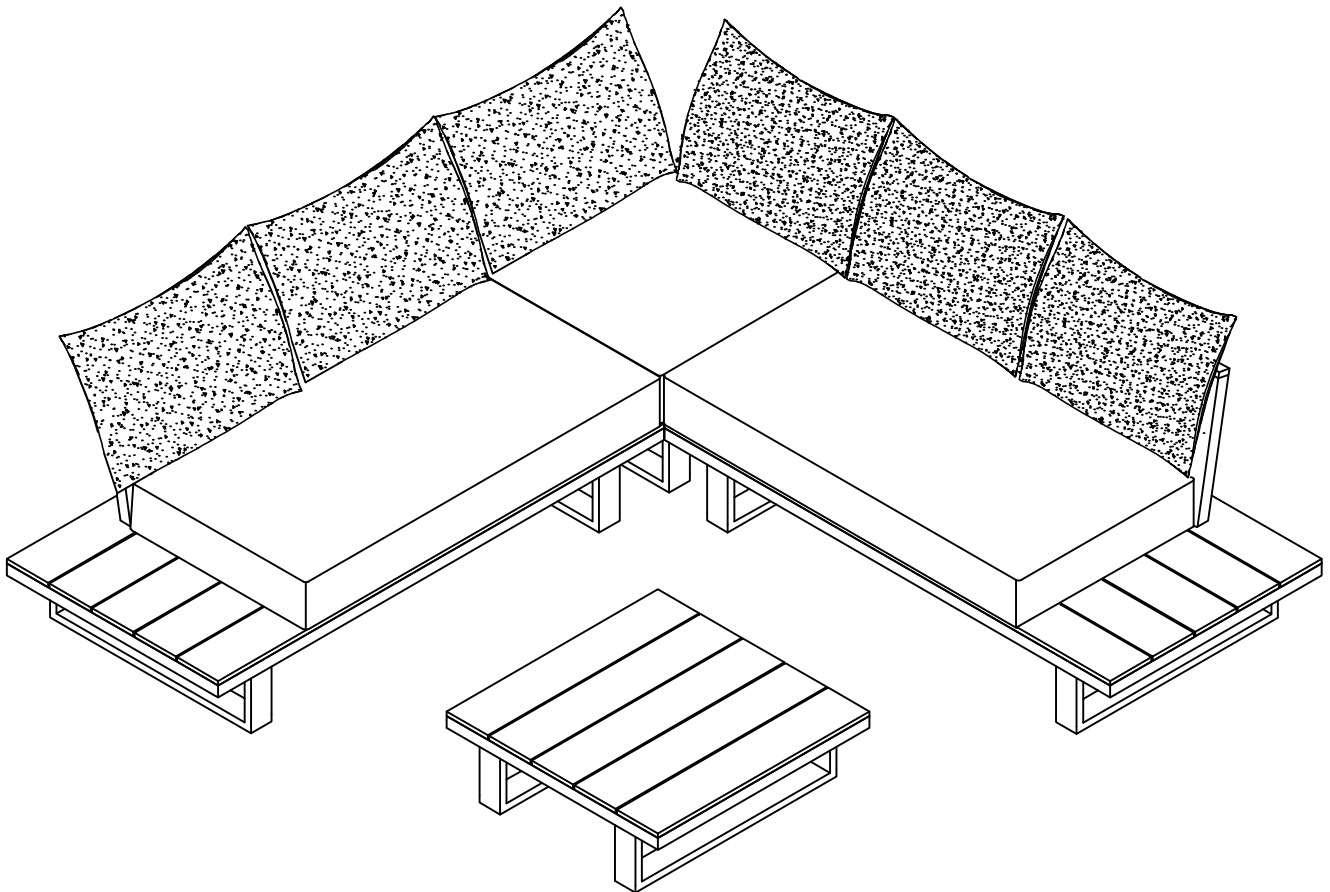




ASSEMBLY INSTRUCTION

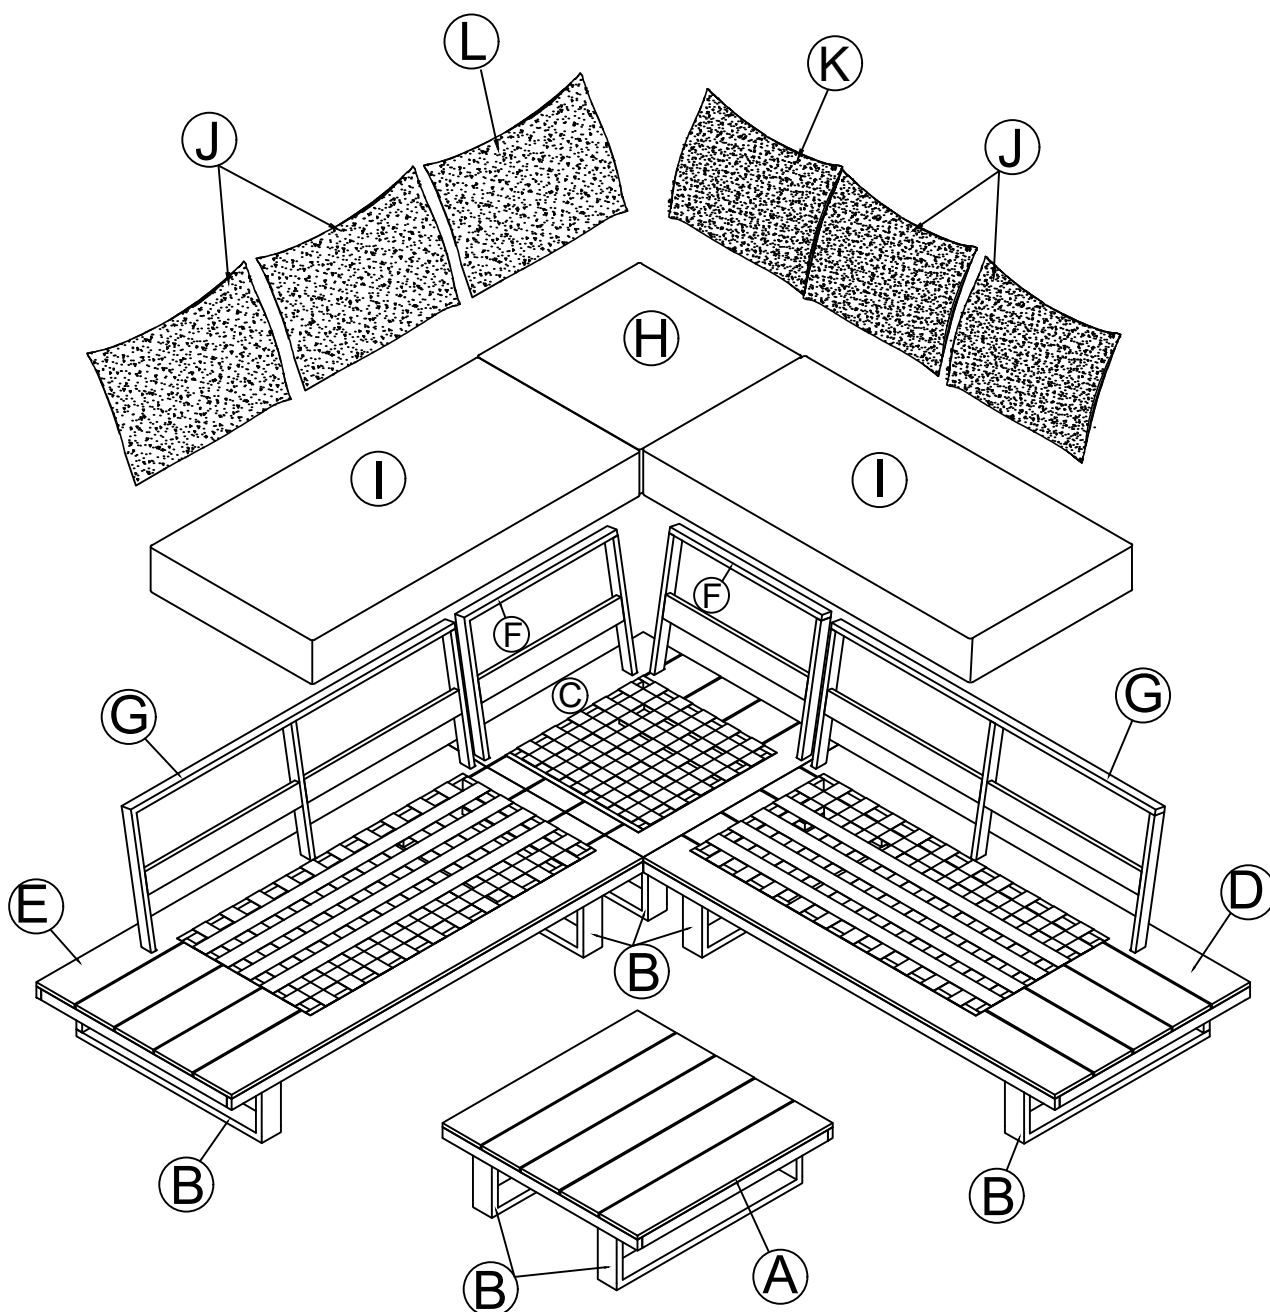

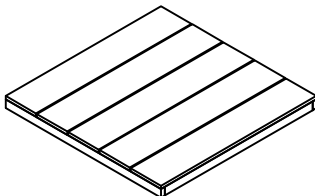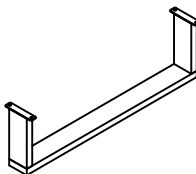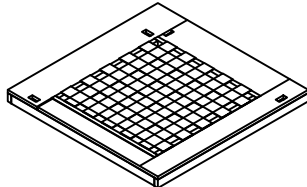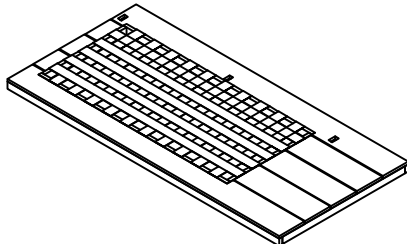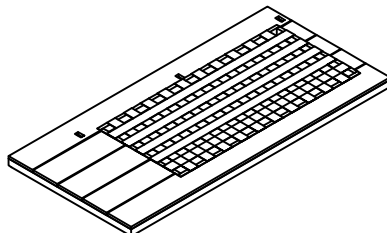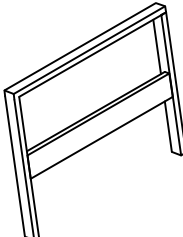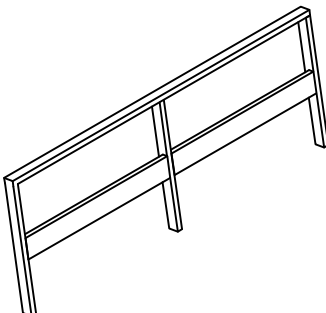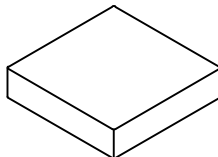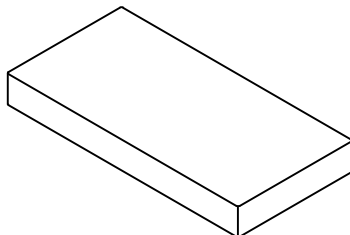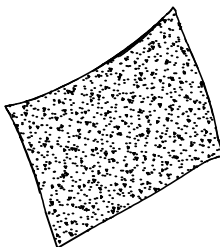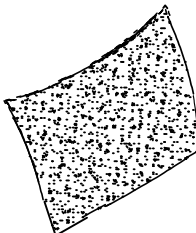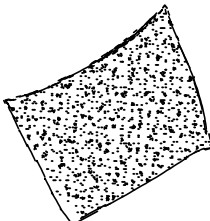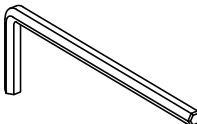
Ⓐ x1 	Ⓑ x8 	Ⓒ x1 	
Ⓓ x1 	Ⓔ x1 	Ⓕ x2 	
Ⓖ x2 	Ⓗ x1 	Ⓘ x2 	
Ⓙ x4 	Ⓚ x1 	Ⓛ x1 	
① x20  Allen Bolt M6*35	② x32  Allen Bolt M6*15	③ x52  Washer M6*16*1.0	④ x2  Allen Key K4

ASSEMBLY INSTRUCTION

1

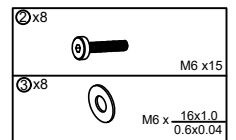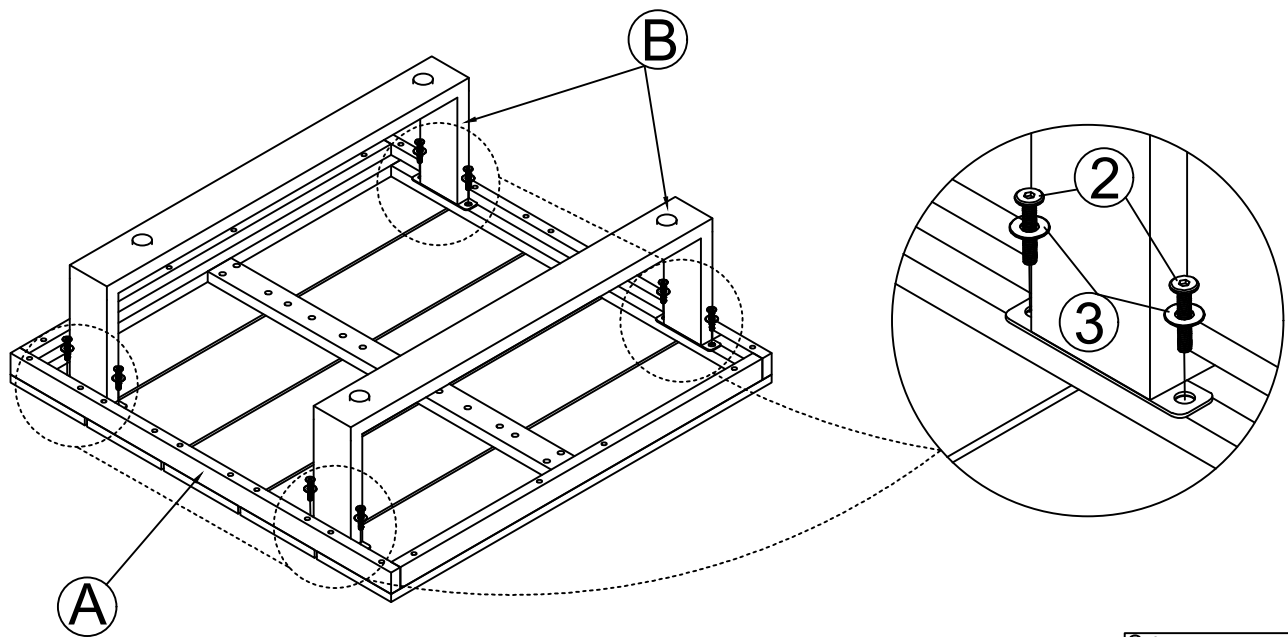



2

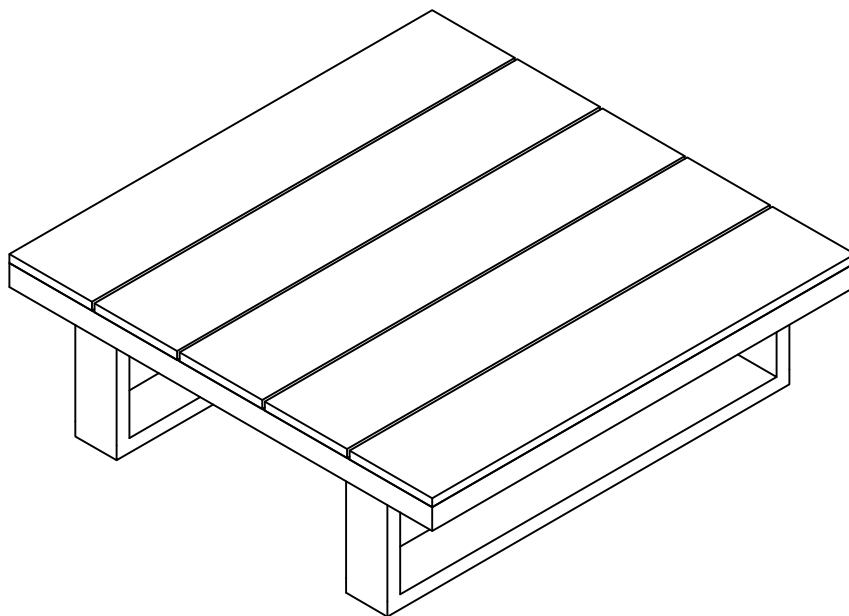



ASSEMBLY INSTRUCTION

3

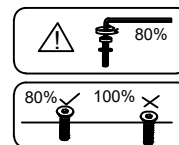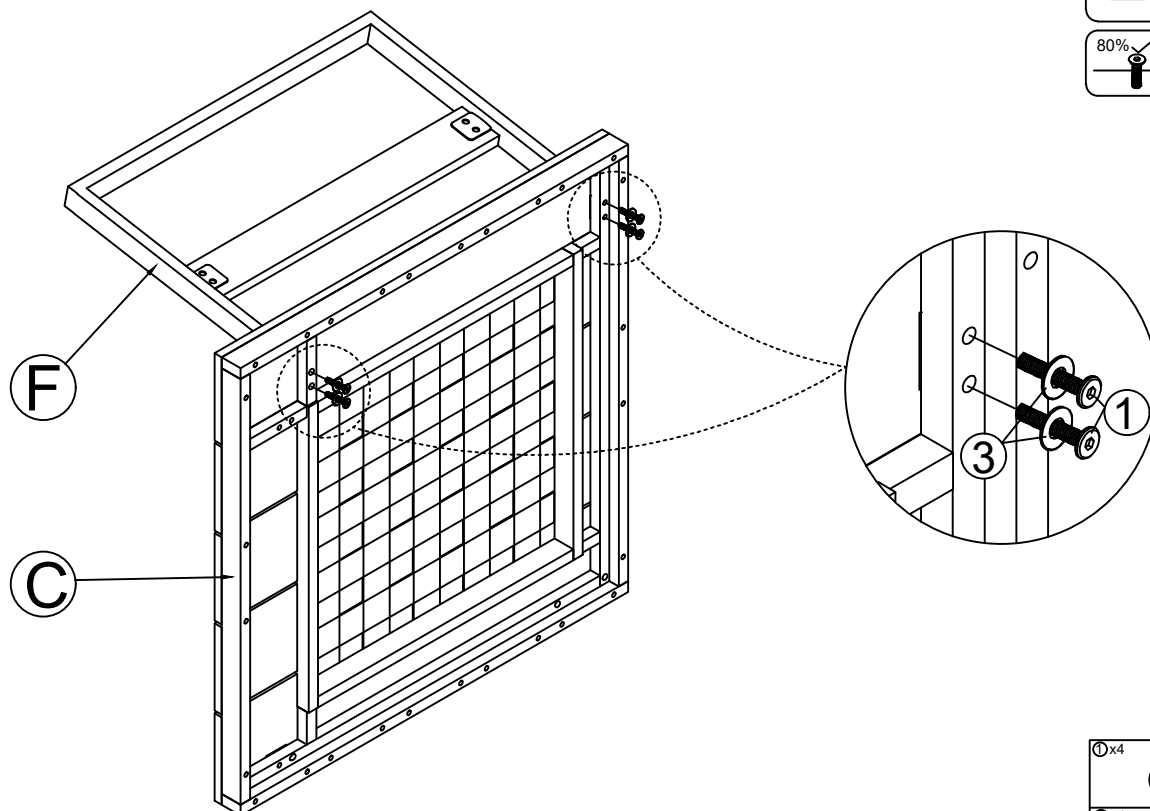

① x4		M6 x35
③ x4		M6 x $\frac{16 \times 1.0}{0.6 \times 0.04}$


4

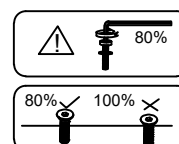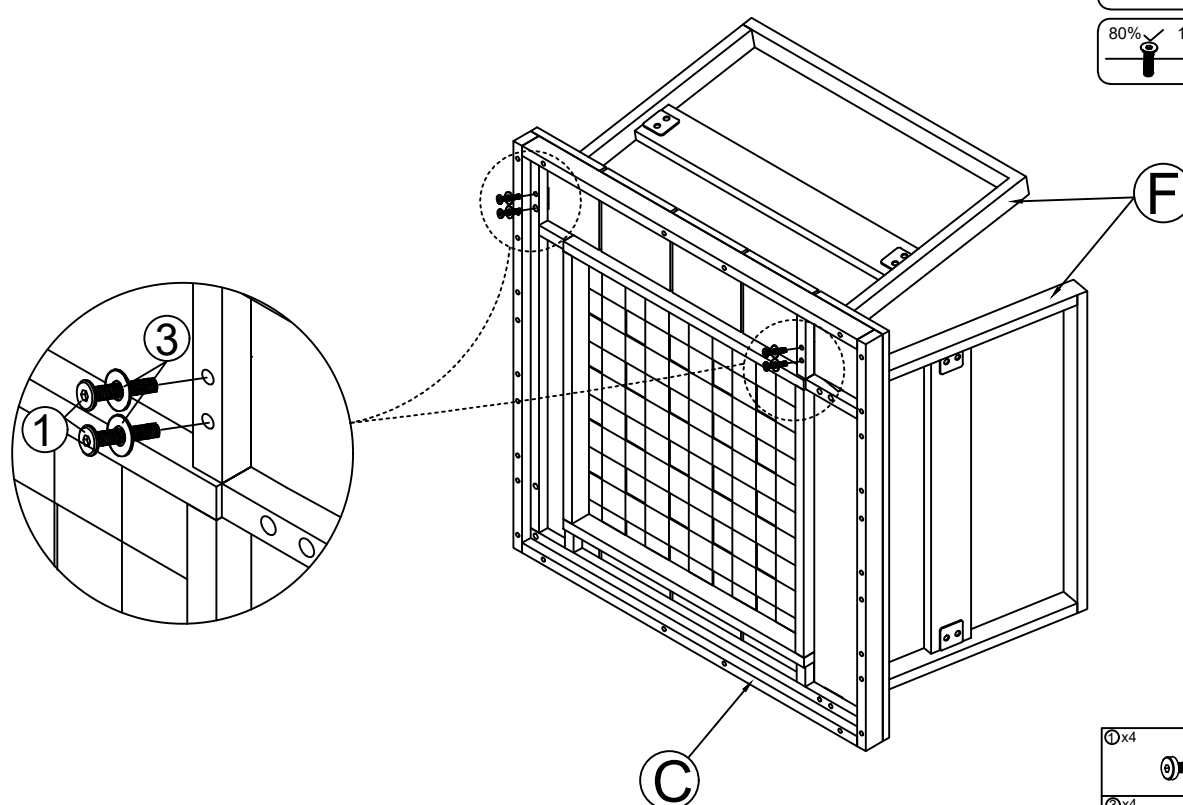

① x4		M6 x35
③ x4		M6 x $\frac{16 \times 1.0}{0.6 \times 0.04}$



ASSEMBLY INSTRUCTION

5

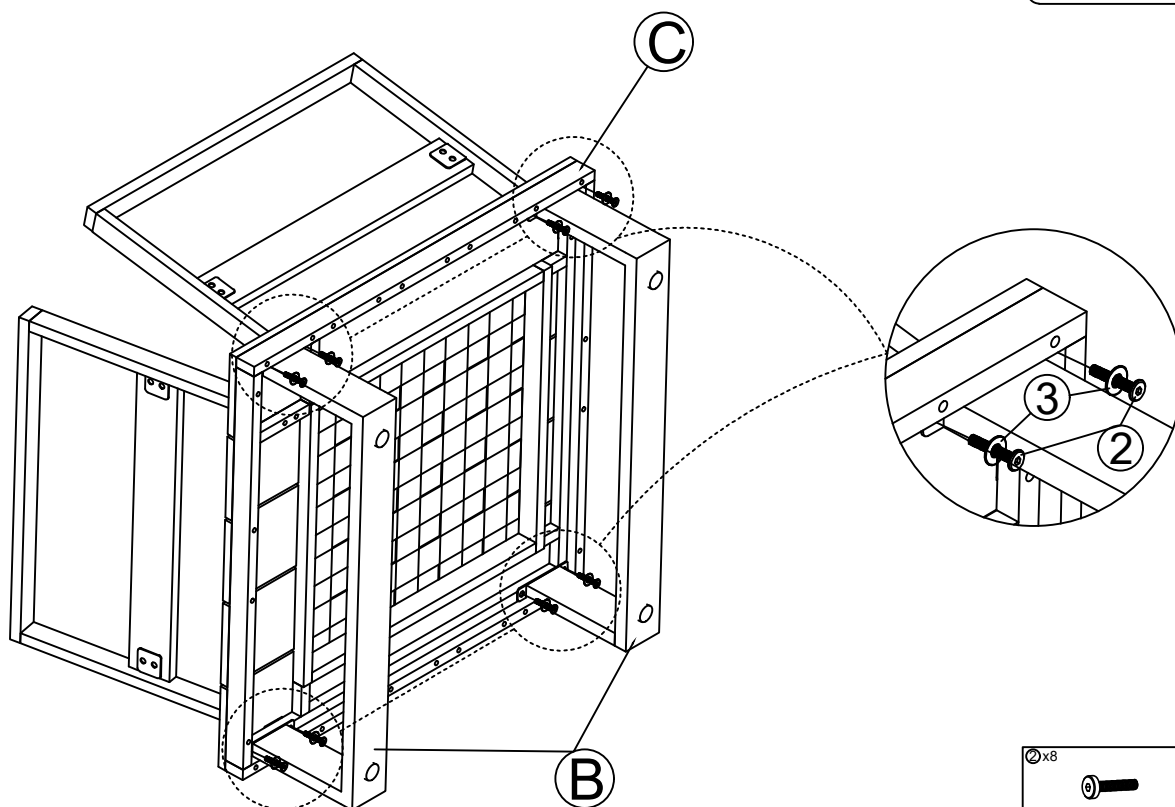

① x8		M6 x15
② x8		M6 x $\frac{16 \times 1.0}{0.6 \times 0.04}$


6

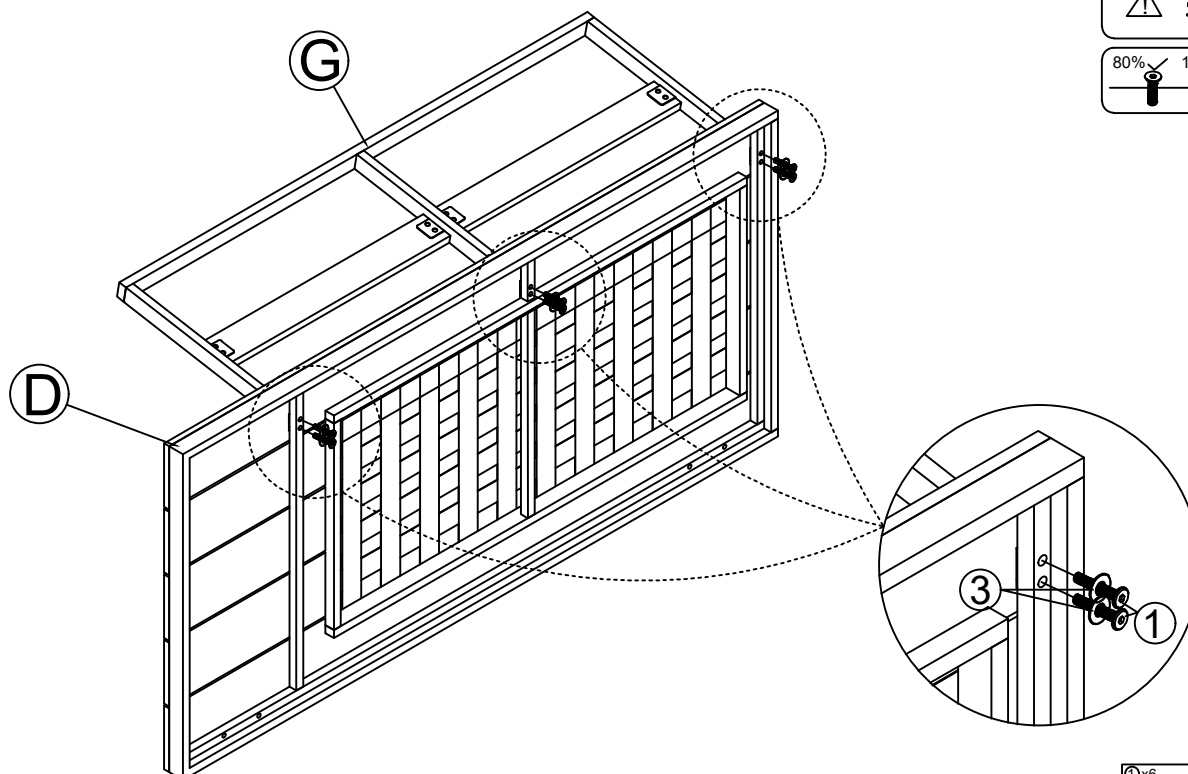

① x6		M6 x35
② x6		M6 x $\frac{16 \times 1.0}{0.6 \times 0.04}$



ASSEMBLY INSTRUCTION

7

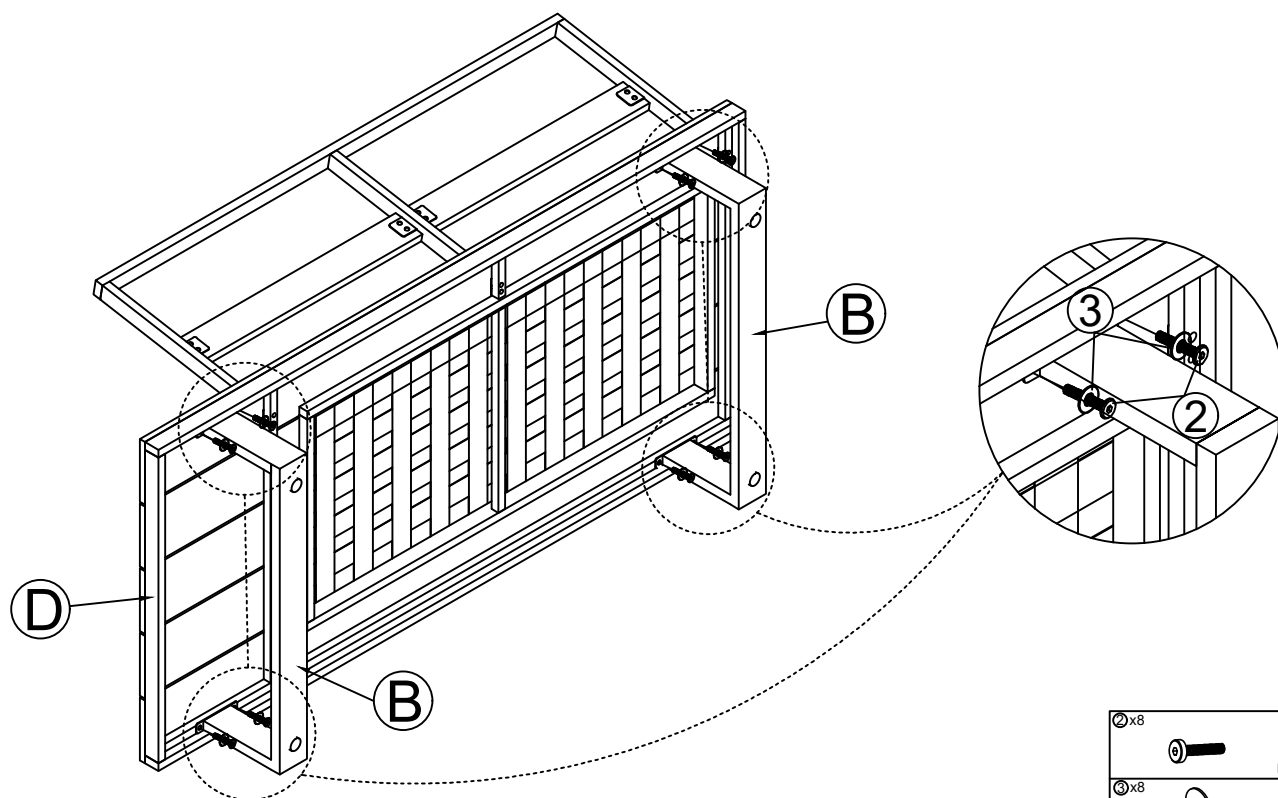

① x8	①	M6 x15
② x8	②	M6 x $\frac{16 \times 1.0}{0.6 \times 0.04}$


8

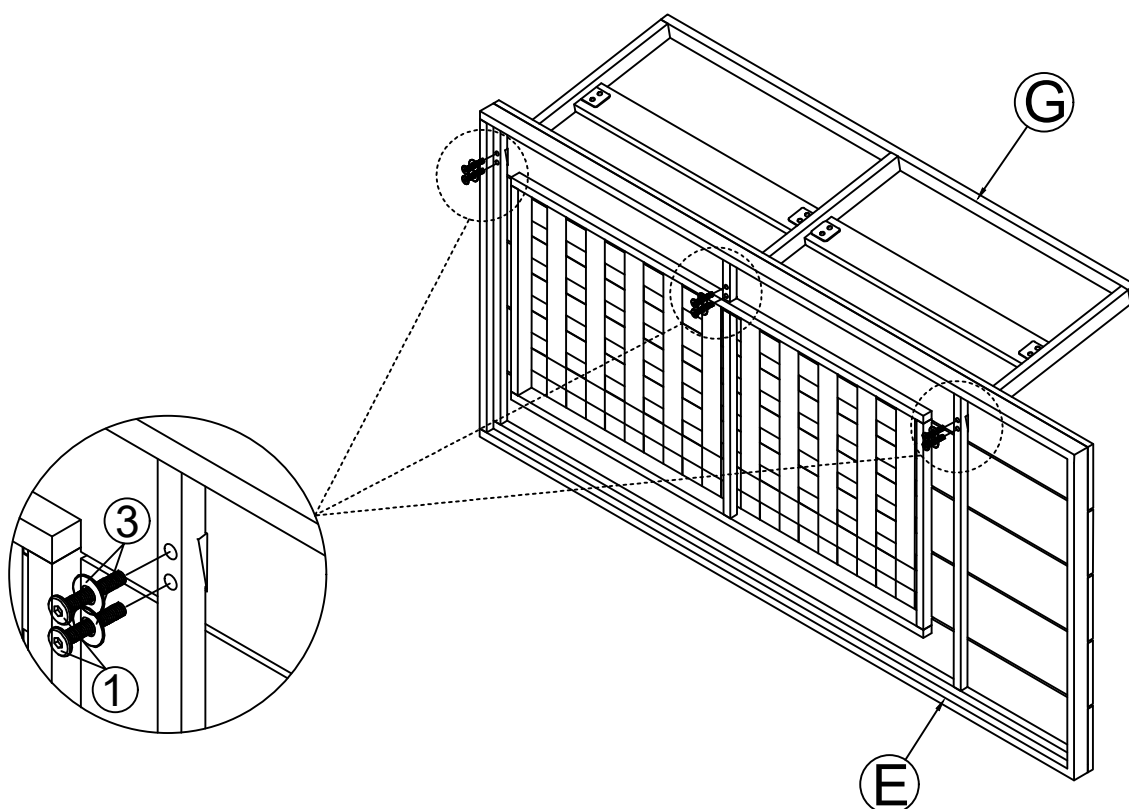


① x6	①	M6 x35
② x6	②	M6 x $\frac{16 \times 1.0}{0.6 \times 0.04}$

ASSEMBLY INSTRUCTION

9

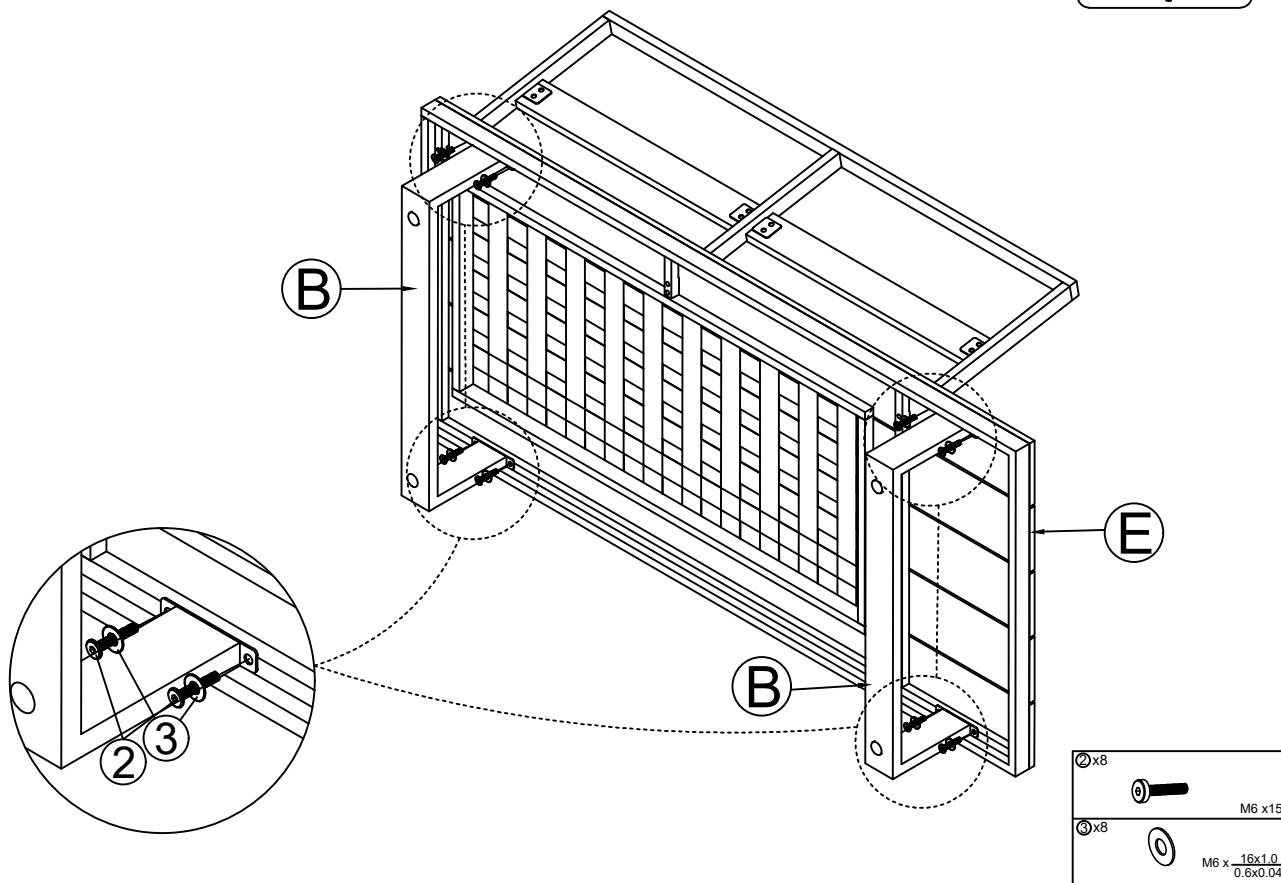


10

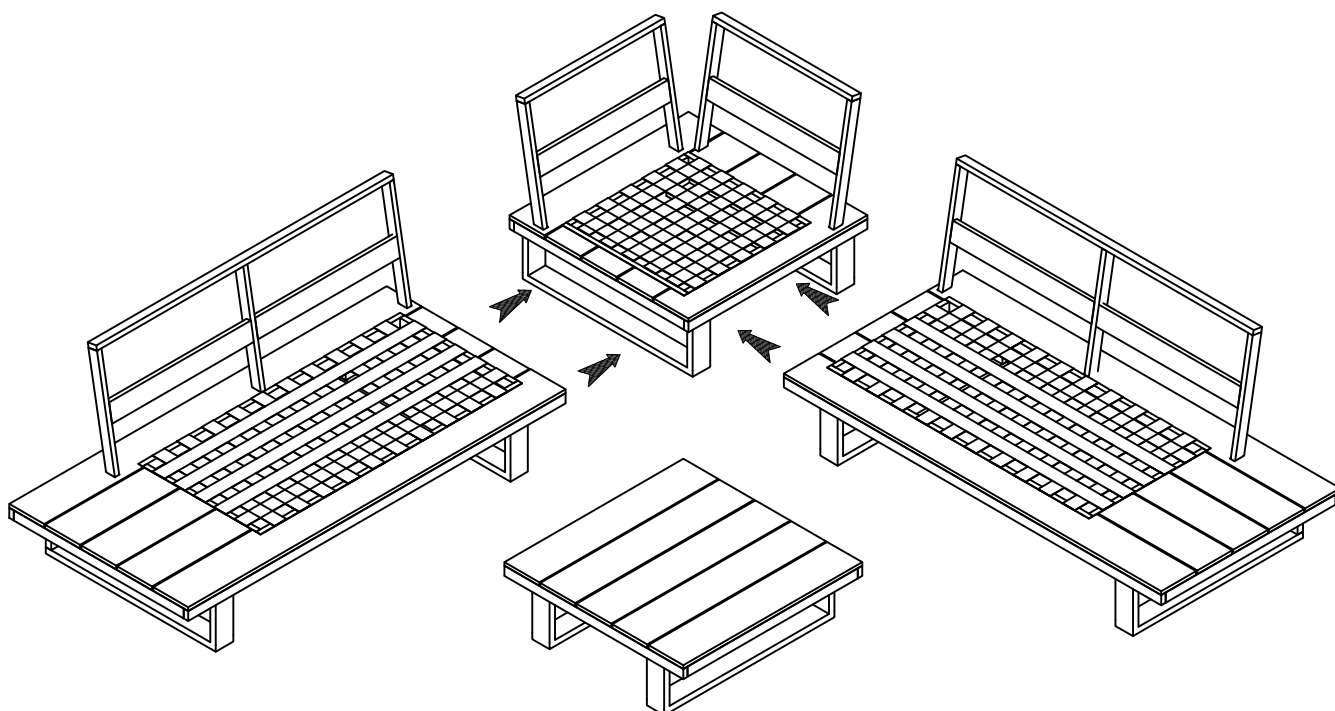


ASSEMBLY INSTRUCTION

11

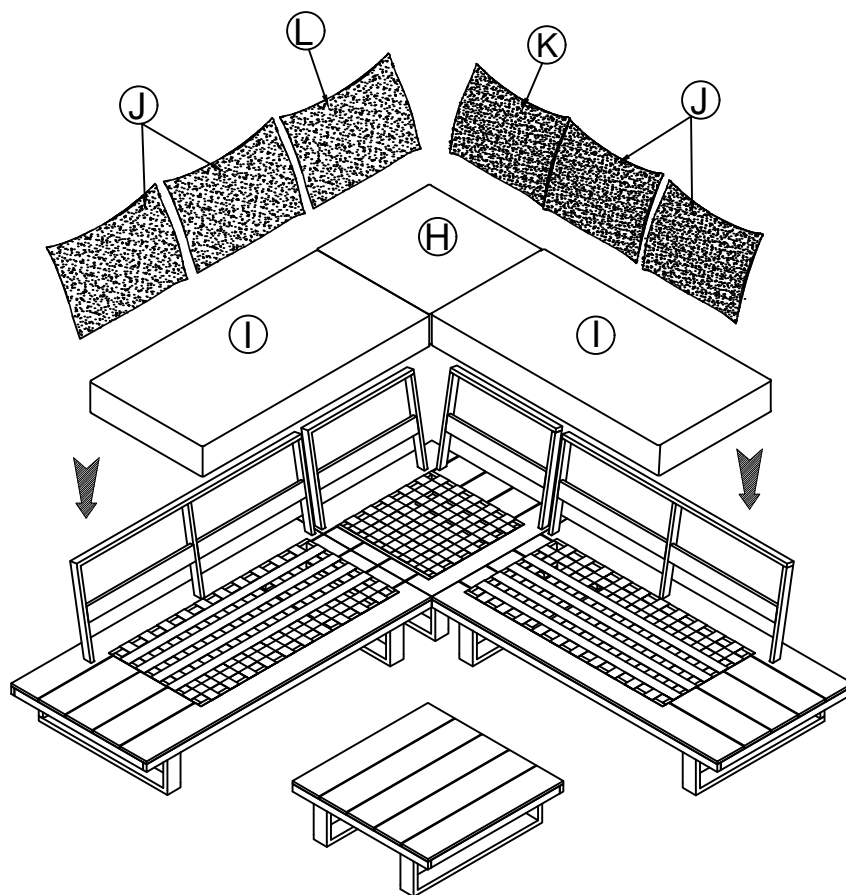

12

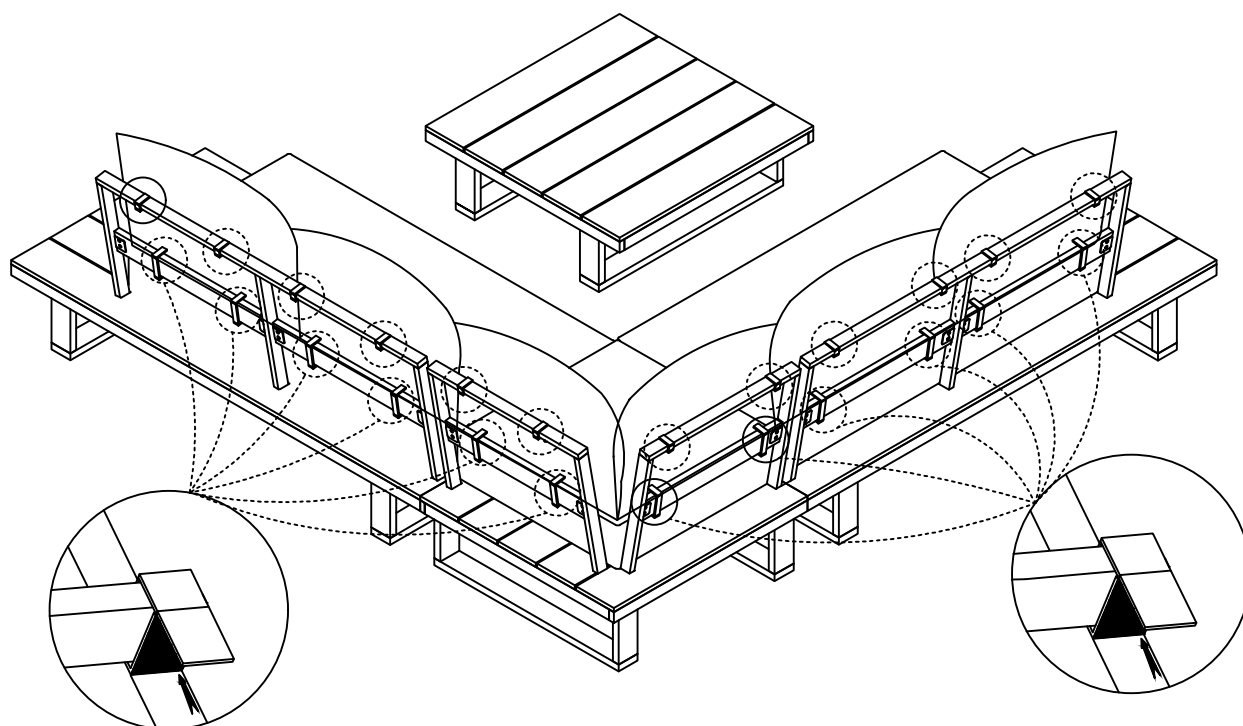

ASSEMBLY INSTRUCTION

13 Finish

