

Montageanleitung

Assembly instructions

Instructions de montage

Instrucciones de montaje

Istruzioni per il montaggio

Инструкция для монтажа

Instrukcja montażu

Montážní návod

Návod na montáž

Szerelési utasítás

Инструкция за монтаж

Kurulum Talimatları


Navodilo za montažo

Montagehandleiding

A s e n n u s o h j e


Upute o montaži

Beschläge / fittings / Ferrures pour meubles / Herrajes / Guarnizioni / Железные оправы для мебели / Okucia / Kování / Kovanie / Vasalások / обков / Parçaları / okovje / Hang- en sluitwerk / helat / Obloge

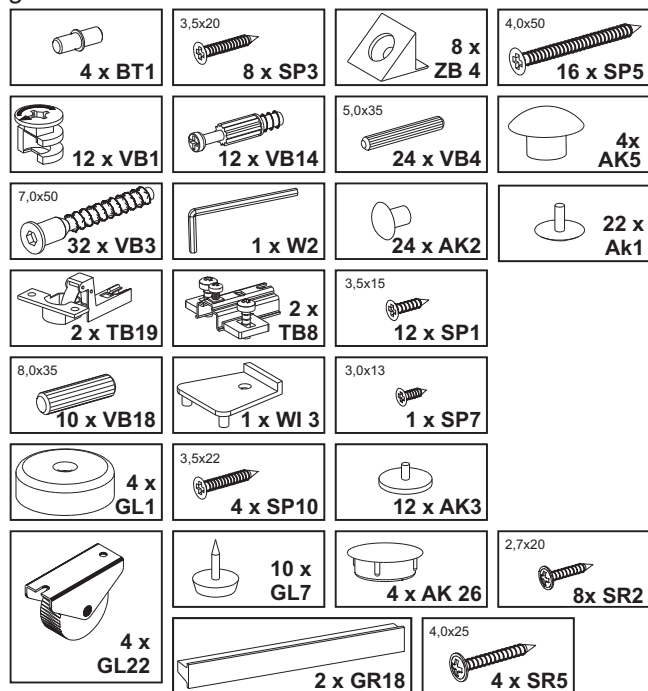





Sie benötigen:
You need:
Vous avez besoin de:
Necesita:
Le servono:
Вам нужно:
Potrebujete:
Tarvitset:



Potrzebne są:
Potřebujete:
Potrebujete:
Szükséges eszközök:
На Вас са Ви нужны:
Ihtiyaciniz:
U hebt nodig:
Trebatе:

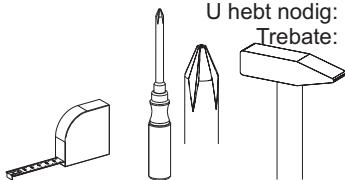

CARLO

Art.-Nr.810-001

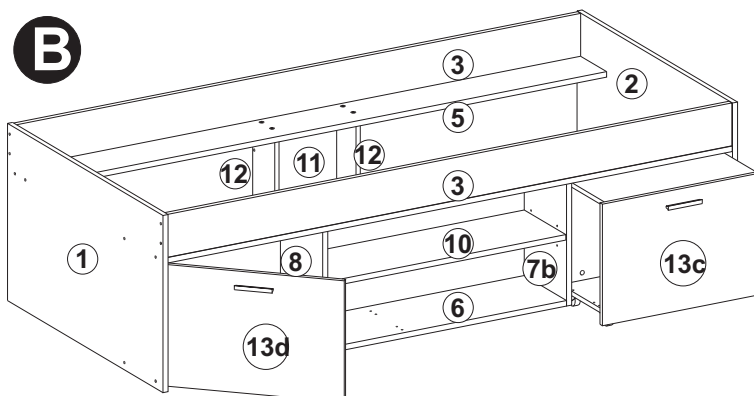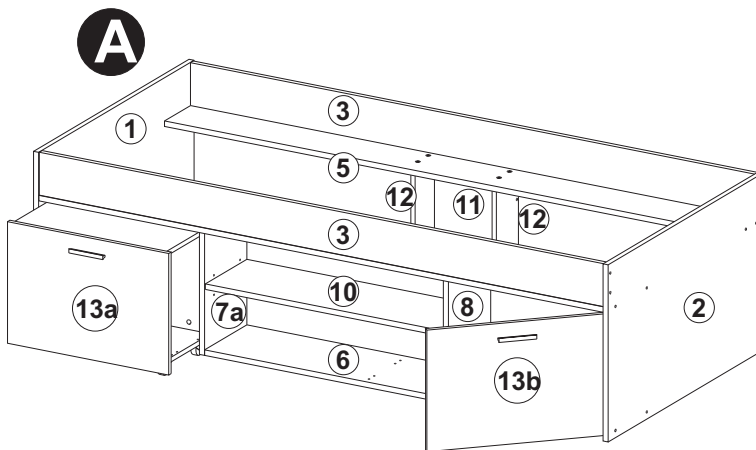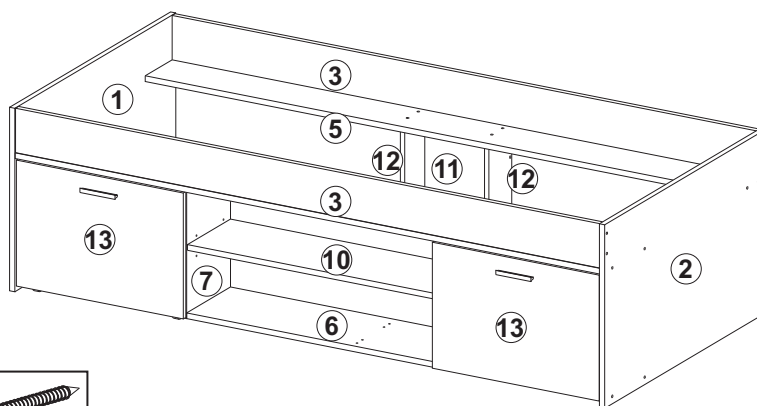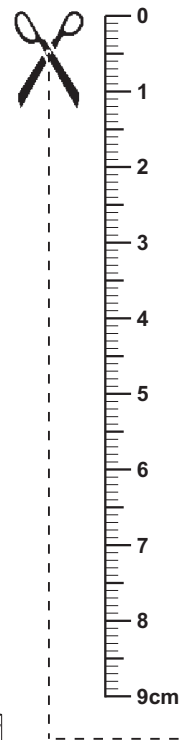

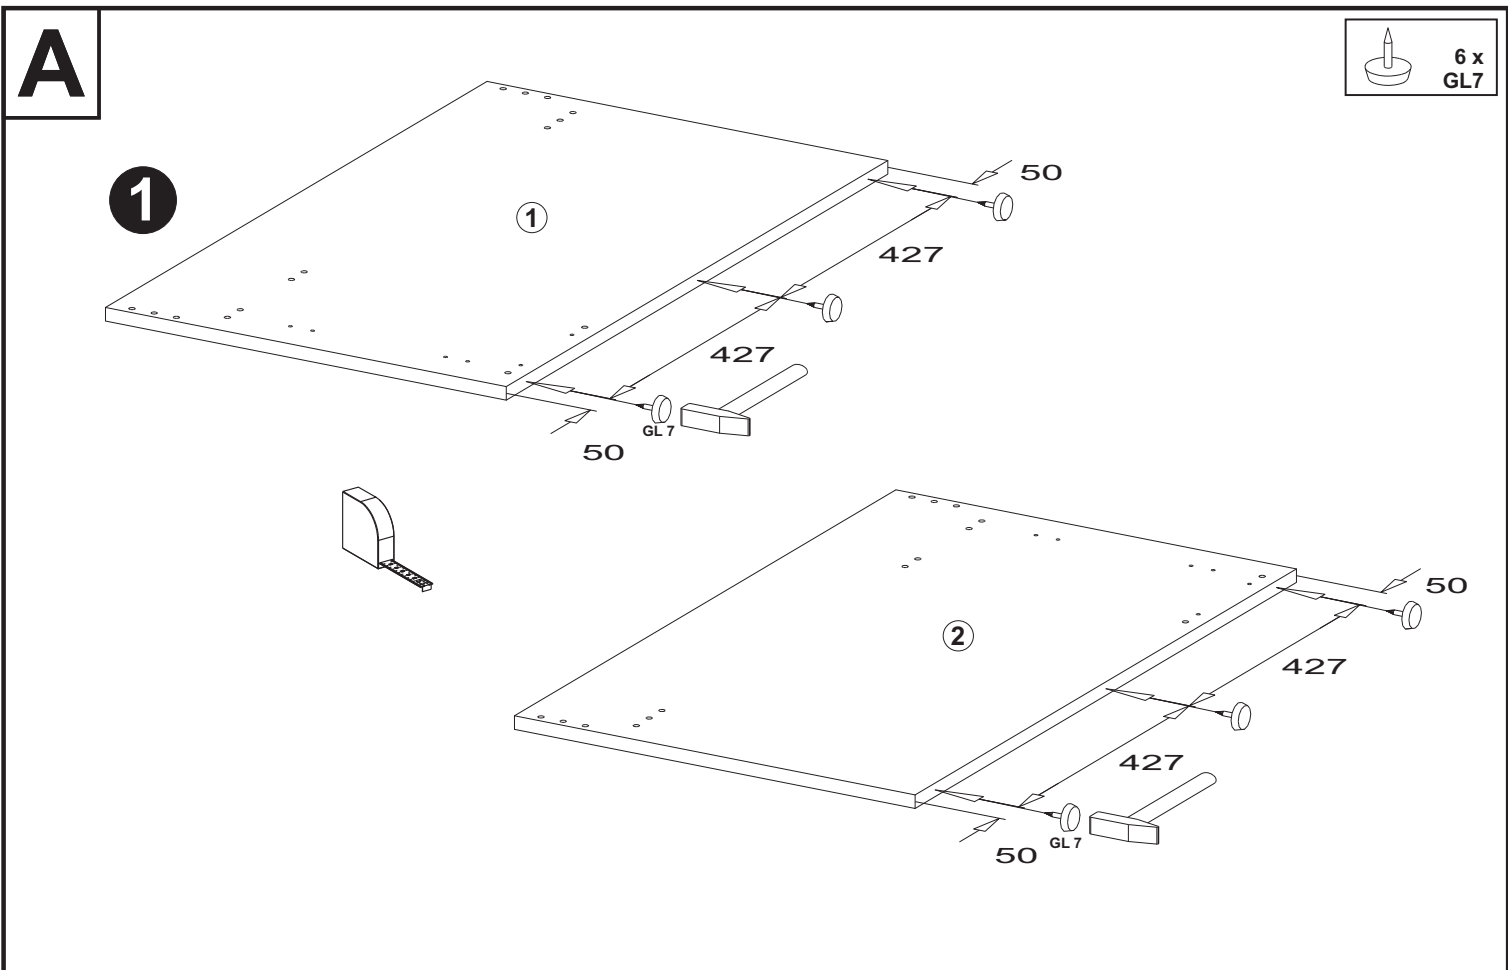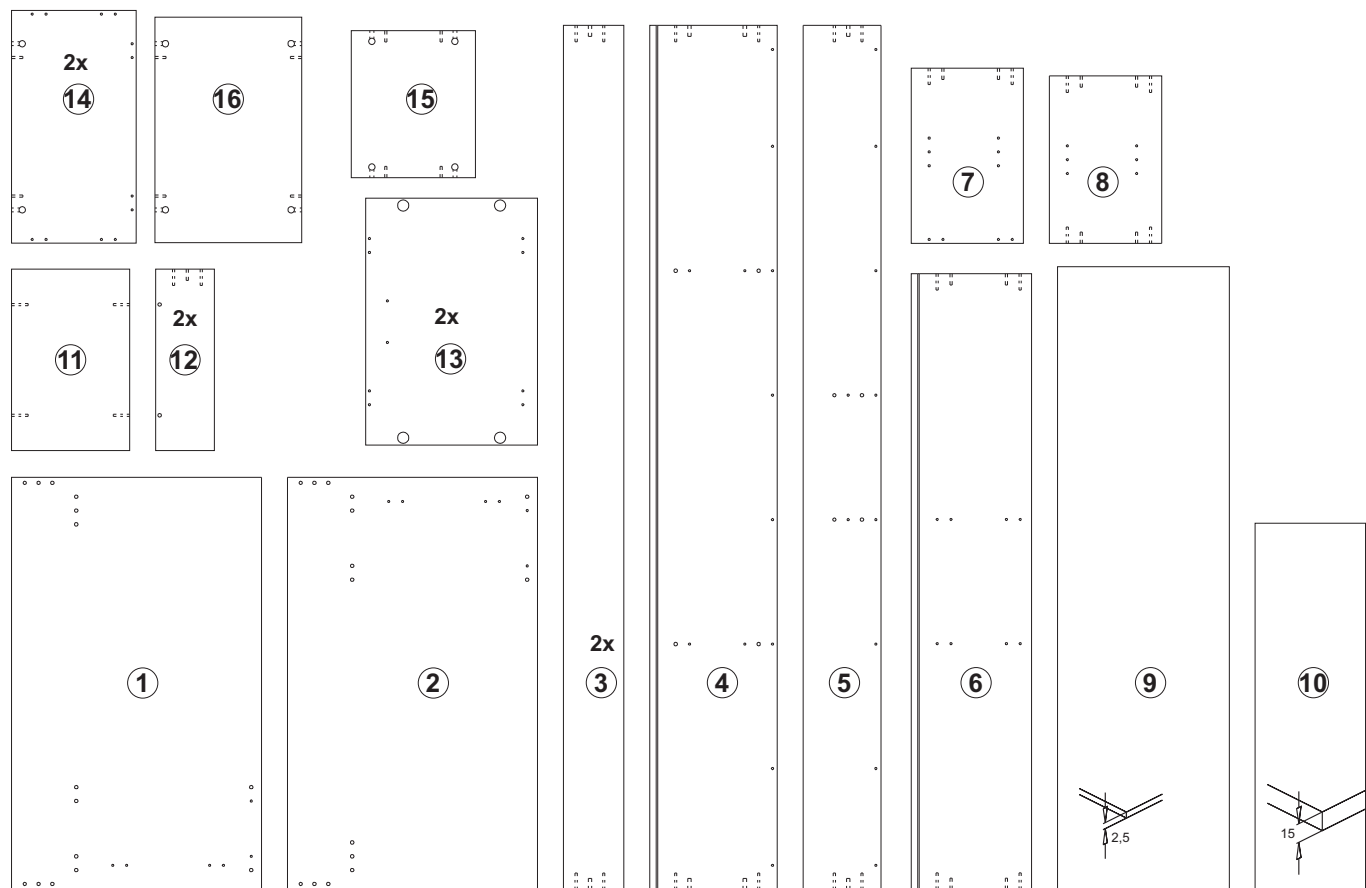


B

**4 x**
GL7

**6 x** VB4

**10 x** VB18

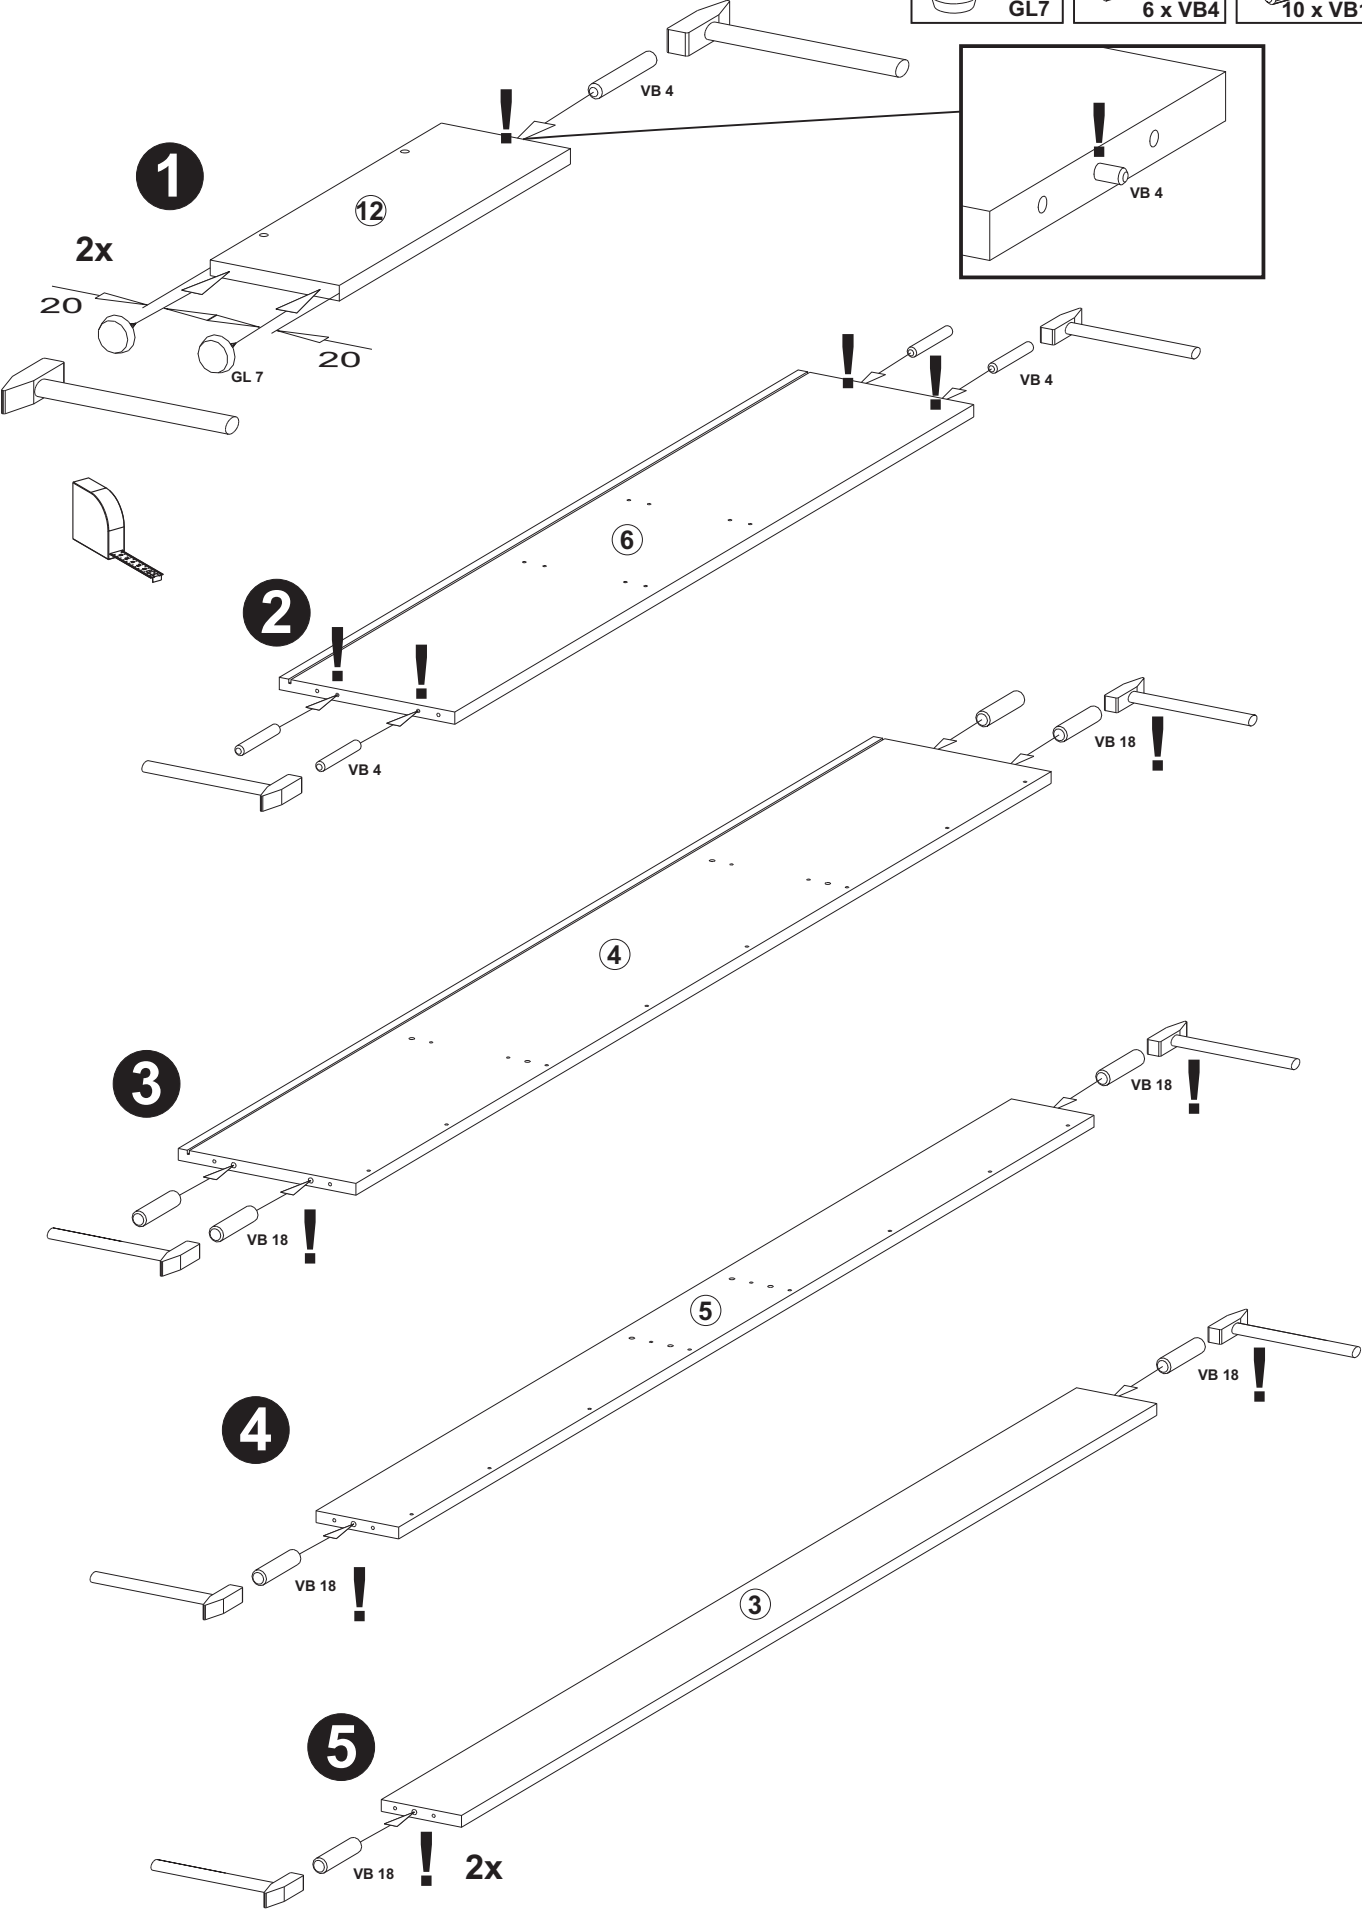

C








2 x BT1



12 x VB4








8 x VB1

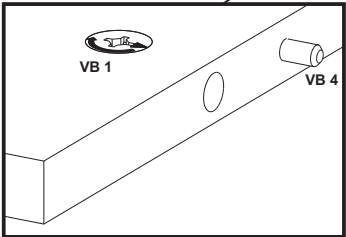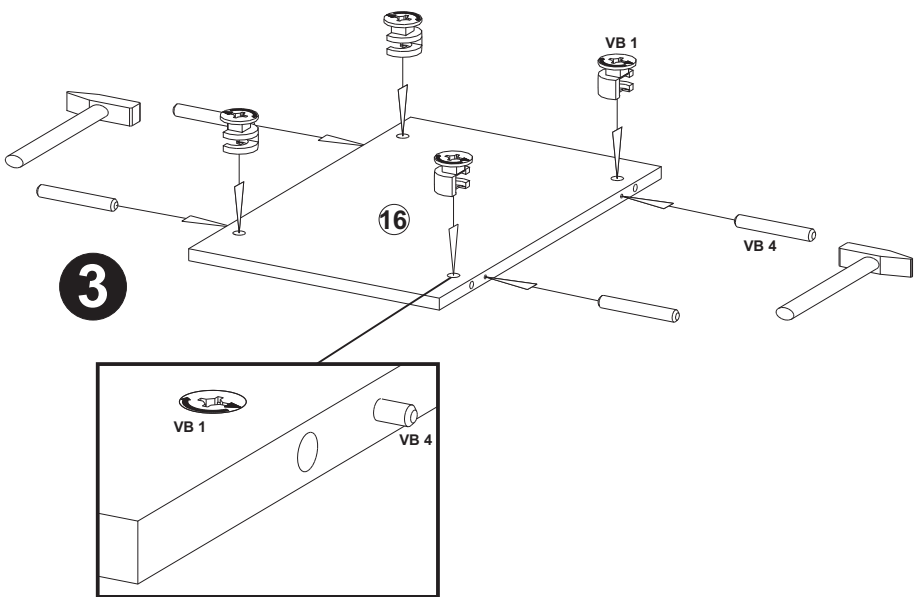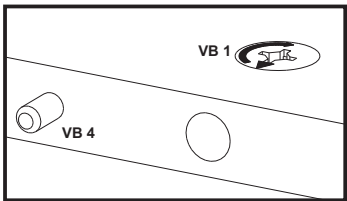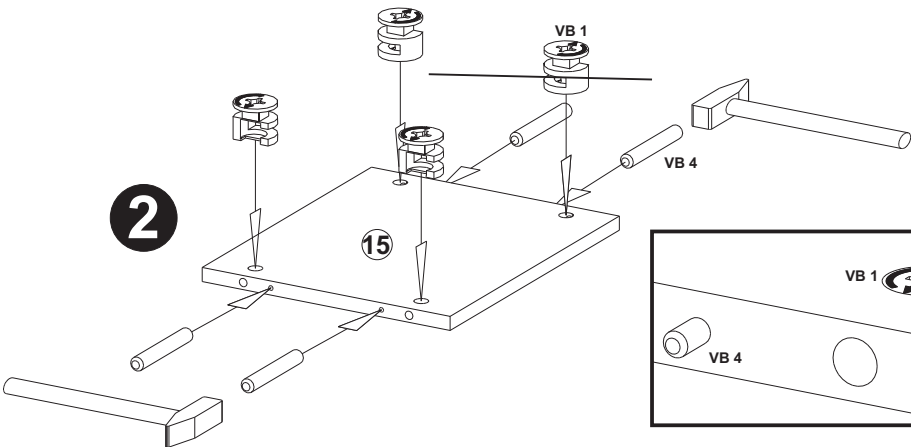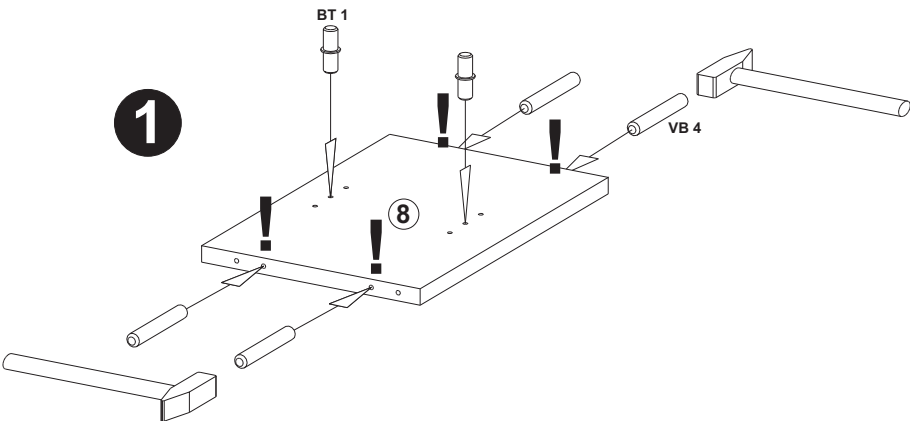






D1

A

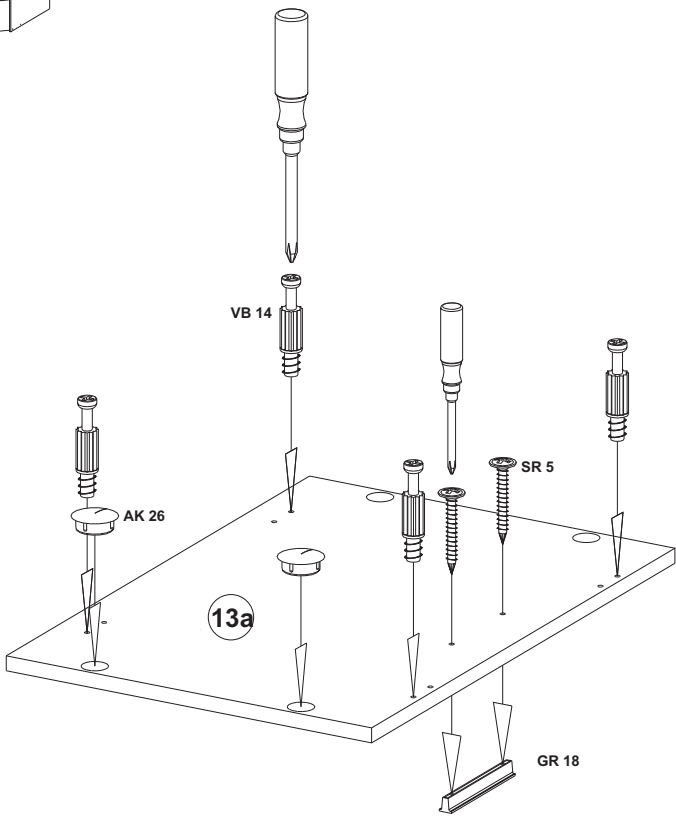



D2

B

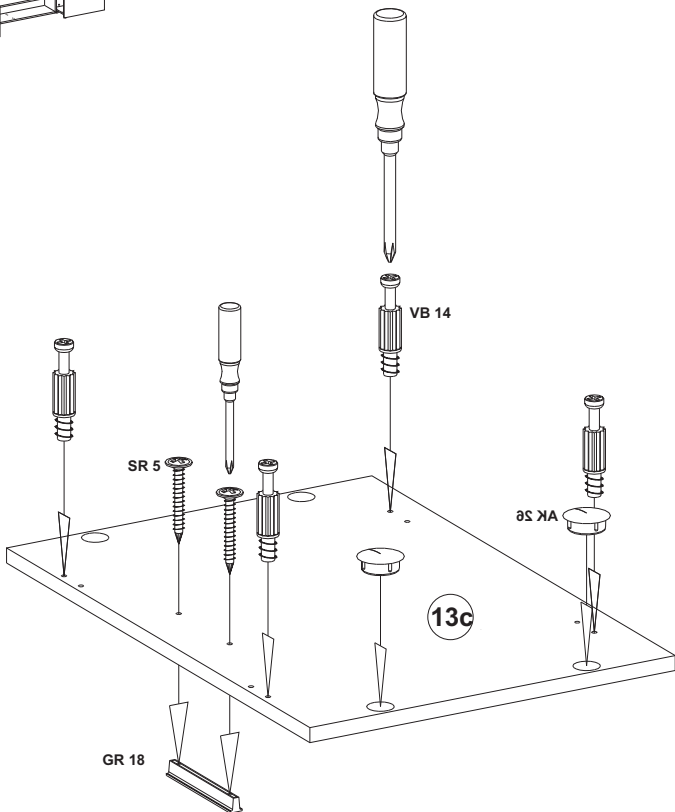

E1

A



1 x GR18




4,0x35
2 x SR5



2 x AK26




8 x AK2




5,0x35
2 x VB4




3,5x15
4 x SP1



2 x BT1




2 x TB19




2 x TB8

1

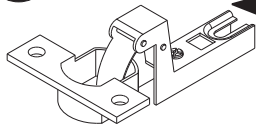


TB 19

2x



TB 8

2

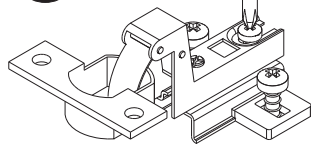


TB 19

TB 8

2x

3

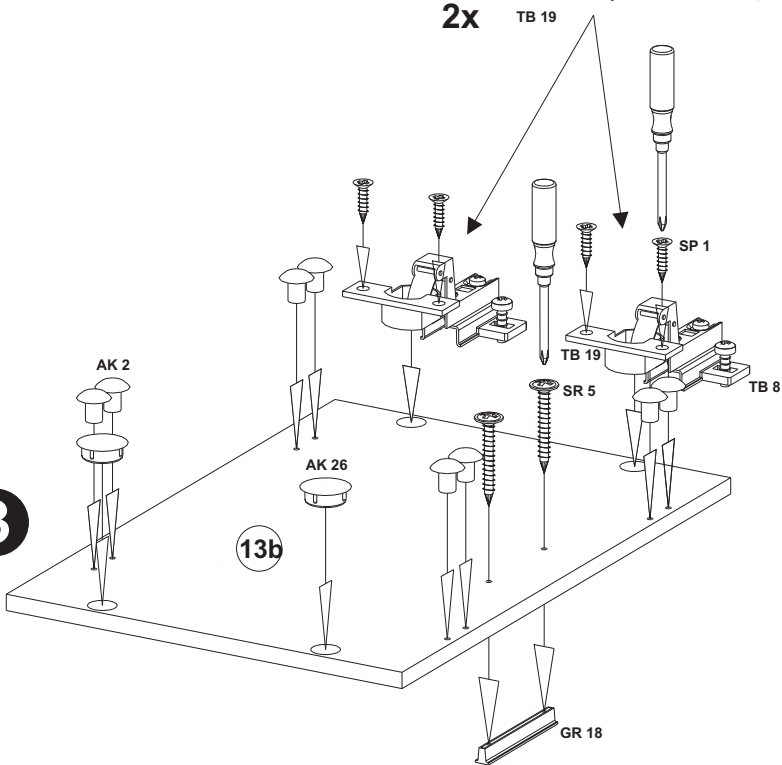

AK 2

AK 26

13b


GR 18

SP 1

TB 19


TB 8

SR 5



26


4

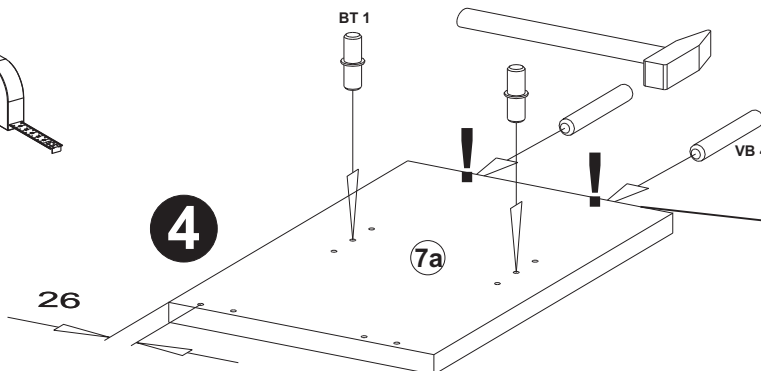

BT 1

VB 4

7a






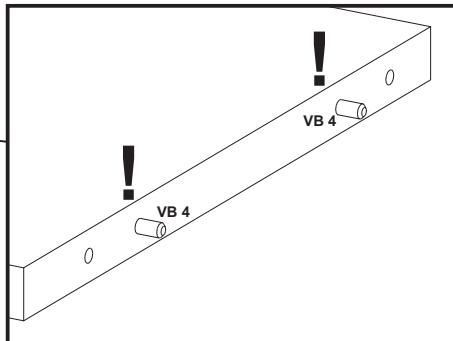


VB 4


VB 4

E2


B




1

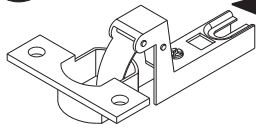


2x



2


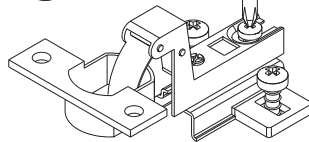


2x

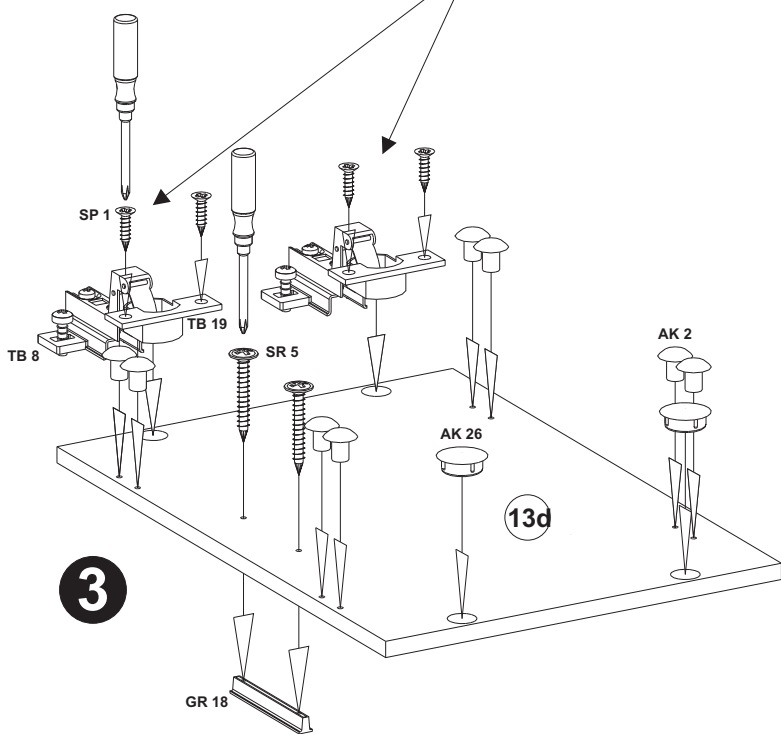

3


GR 18

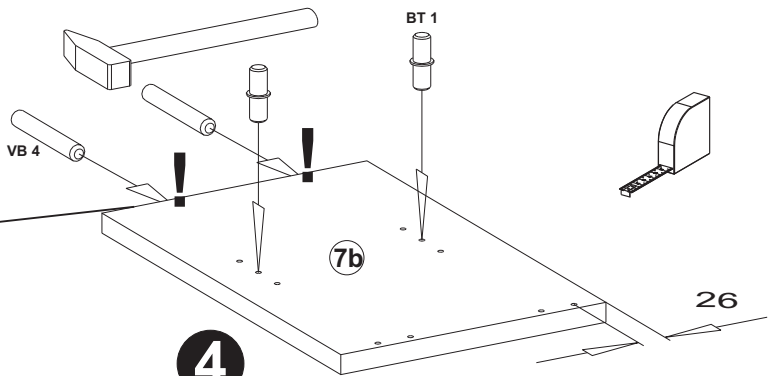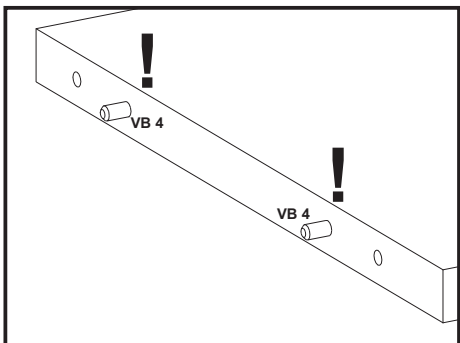

4

F1

A





8 x VB14

5,0x35
4 x VB4


4 x VB1

3,5x15
8 x SP1


4 x GL22

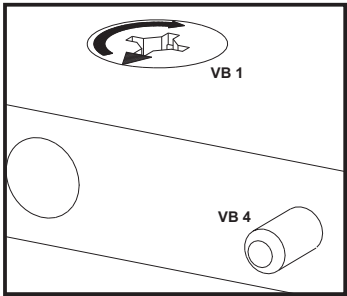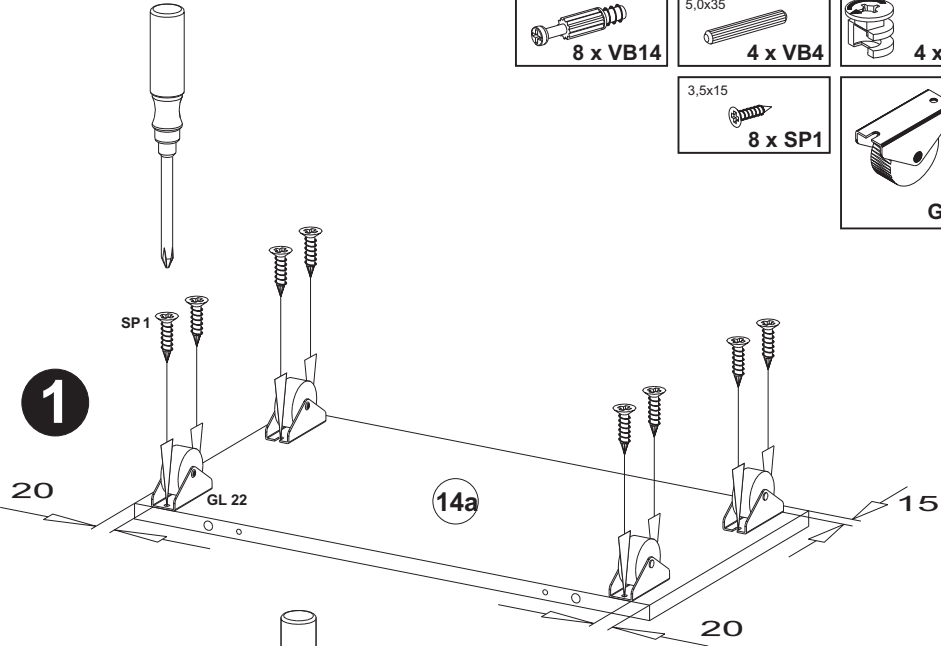







2

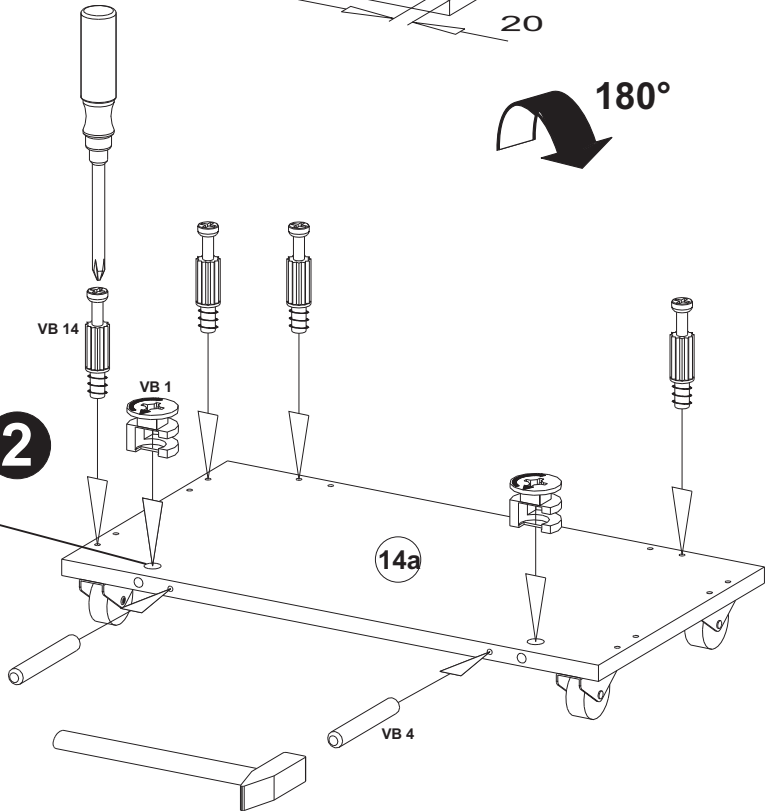

3

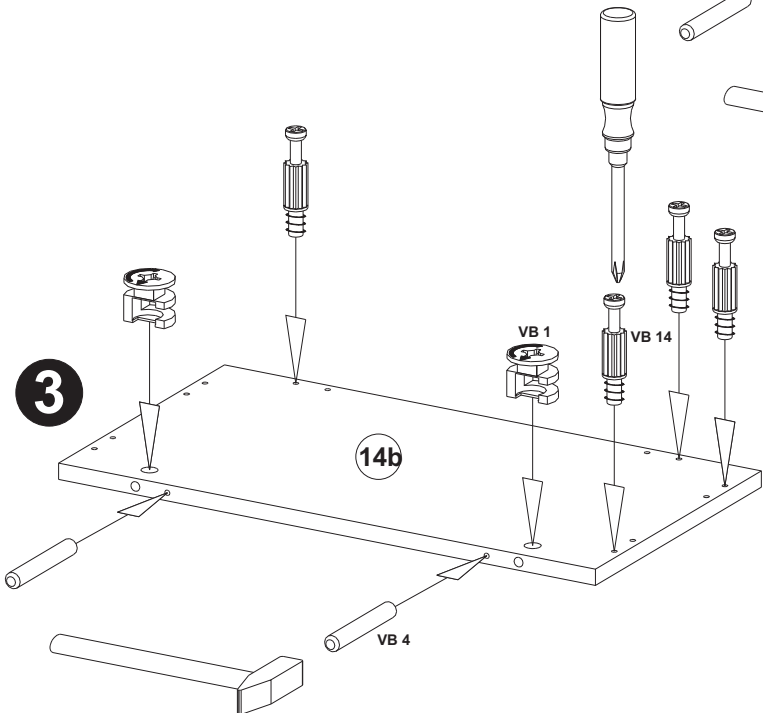



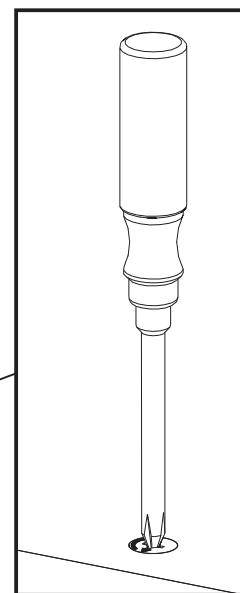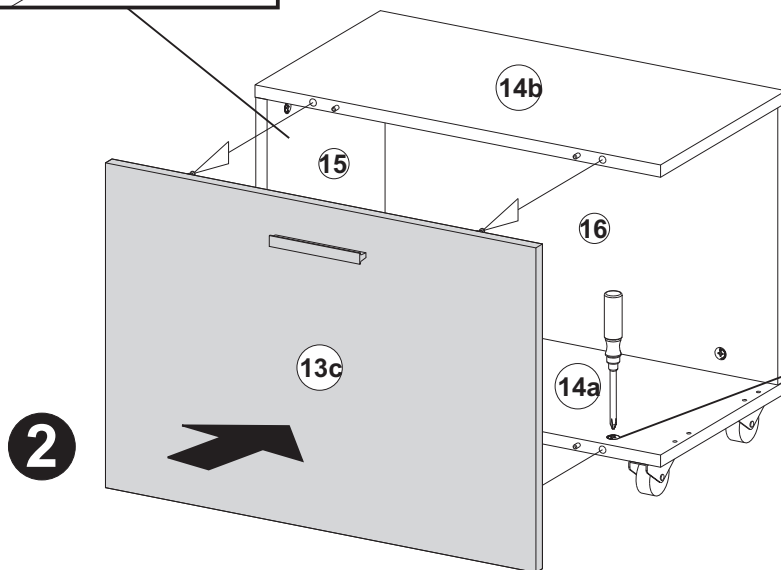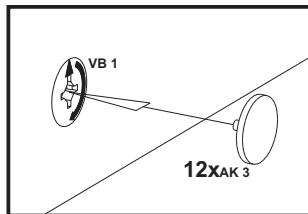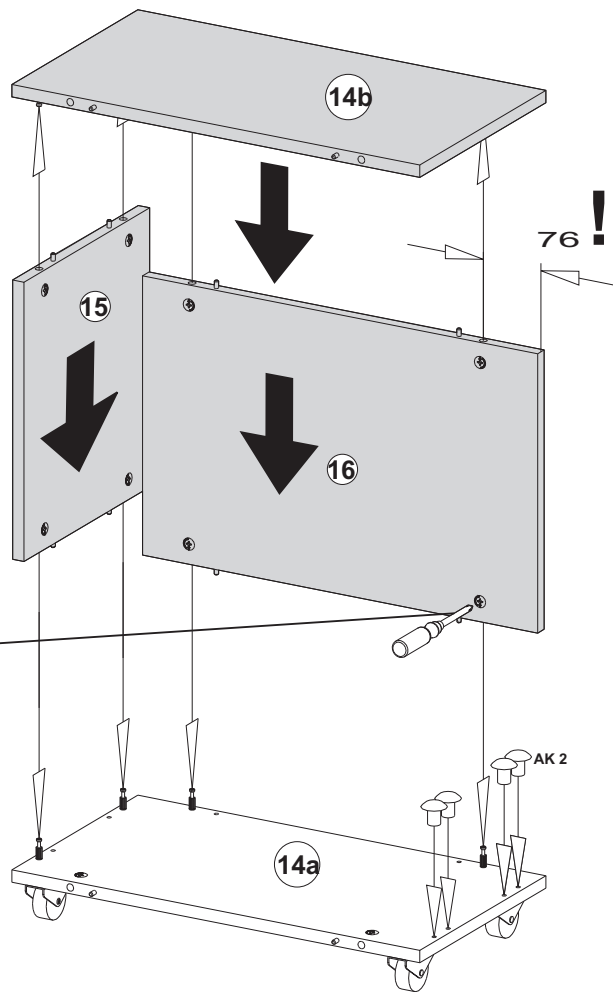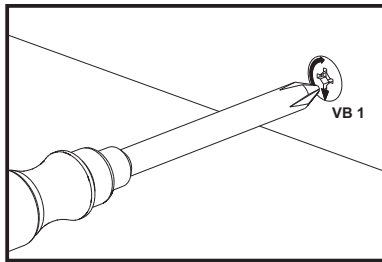

H1

A



4 x AK2

18 x Ak1

7,0x50
24 x VB3

W2


1

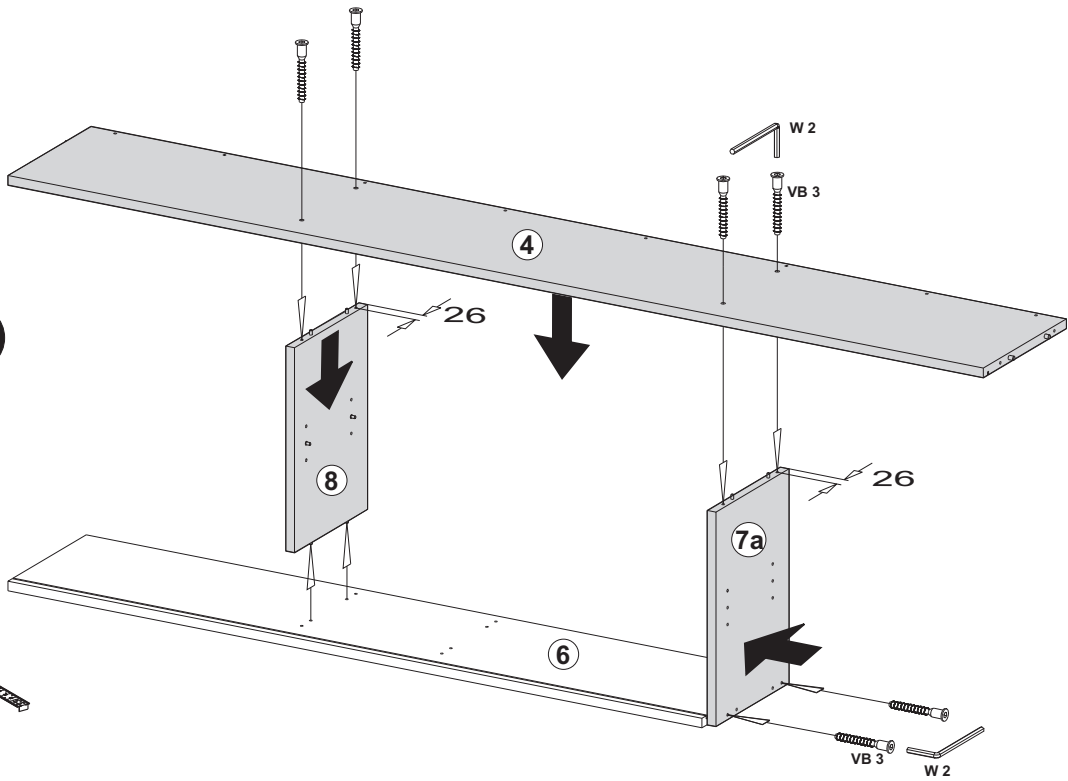

180°







2


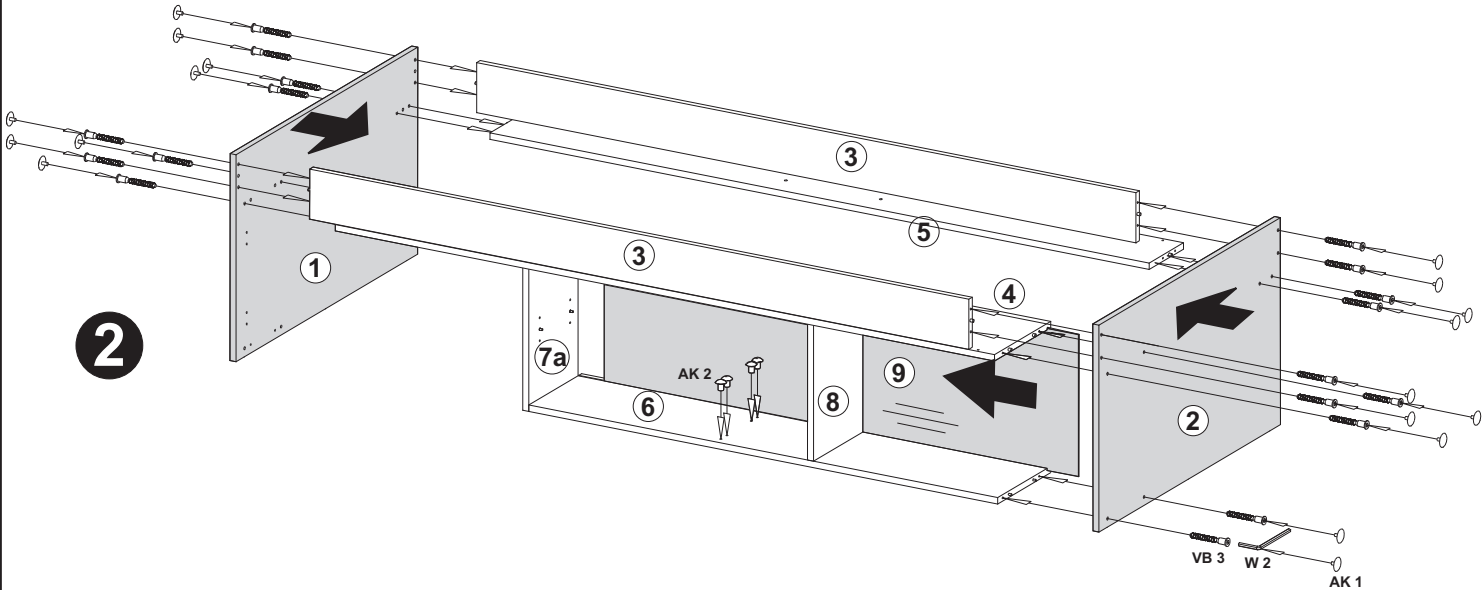


I1

A






1

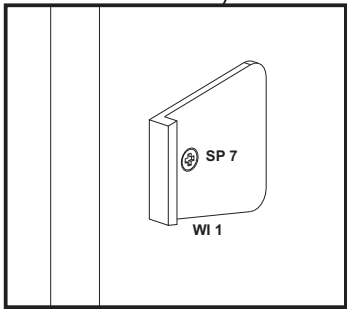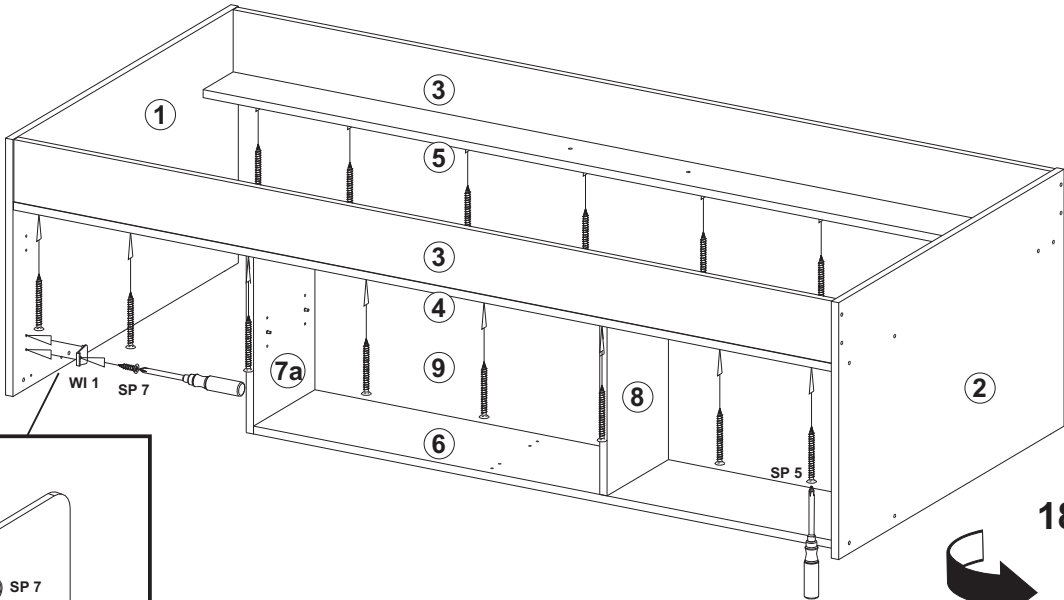





90°

2

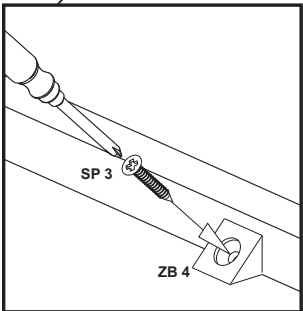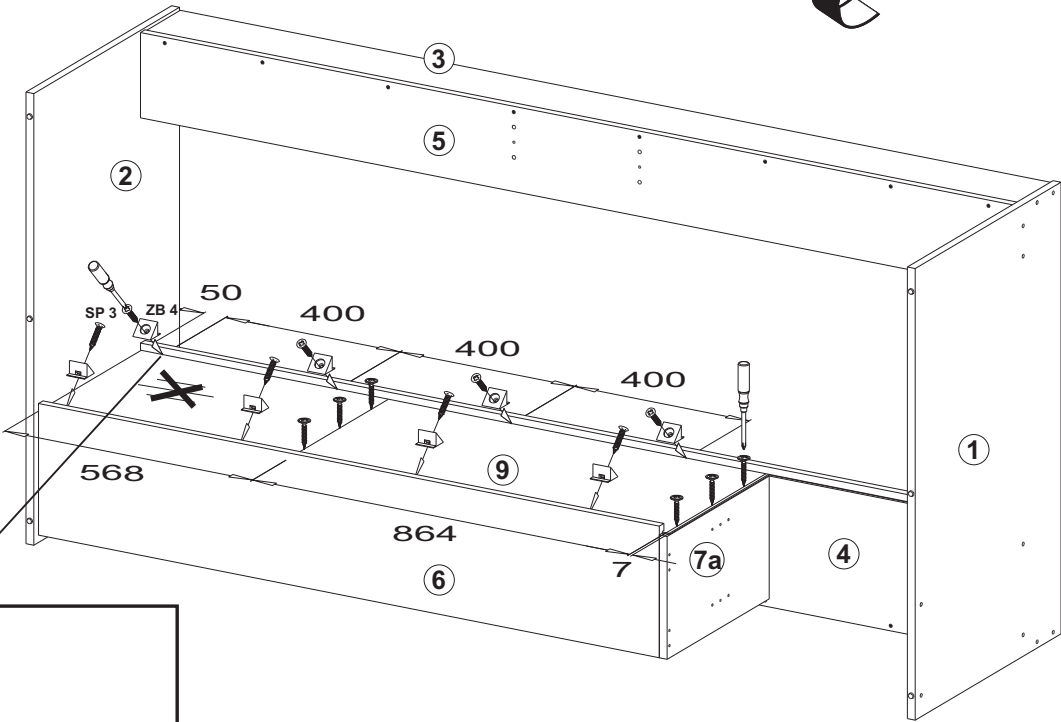

J1

A

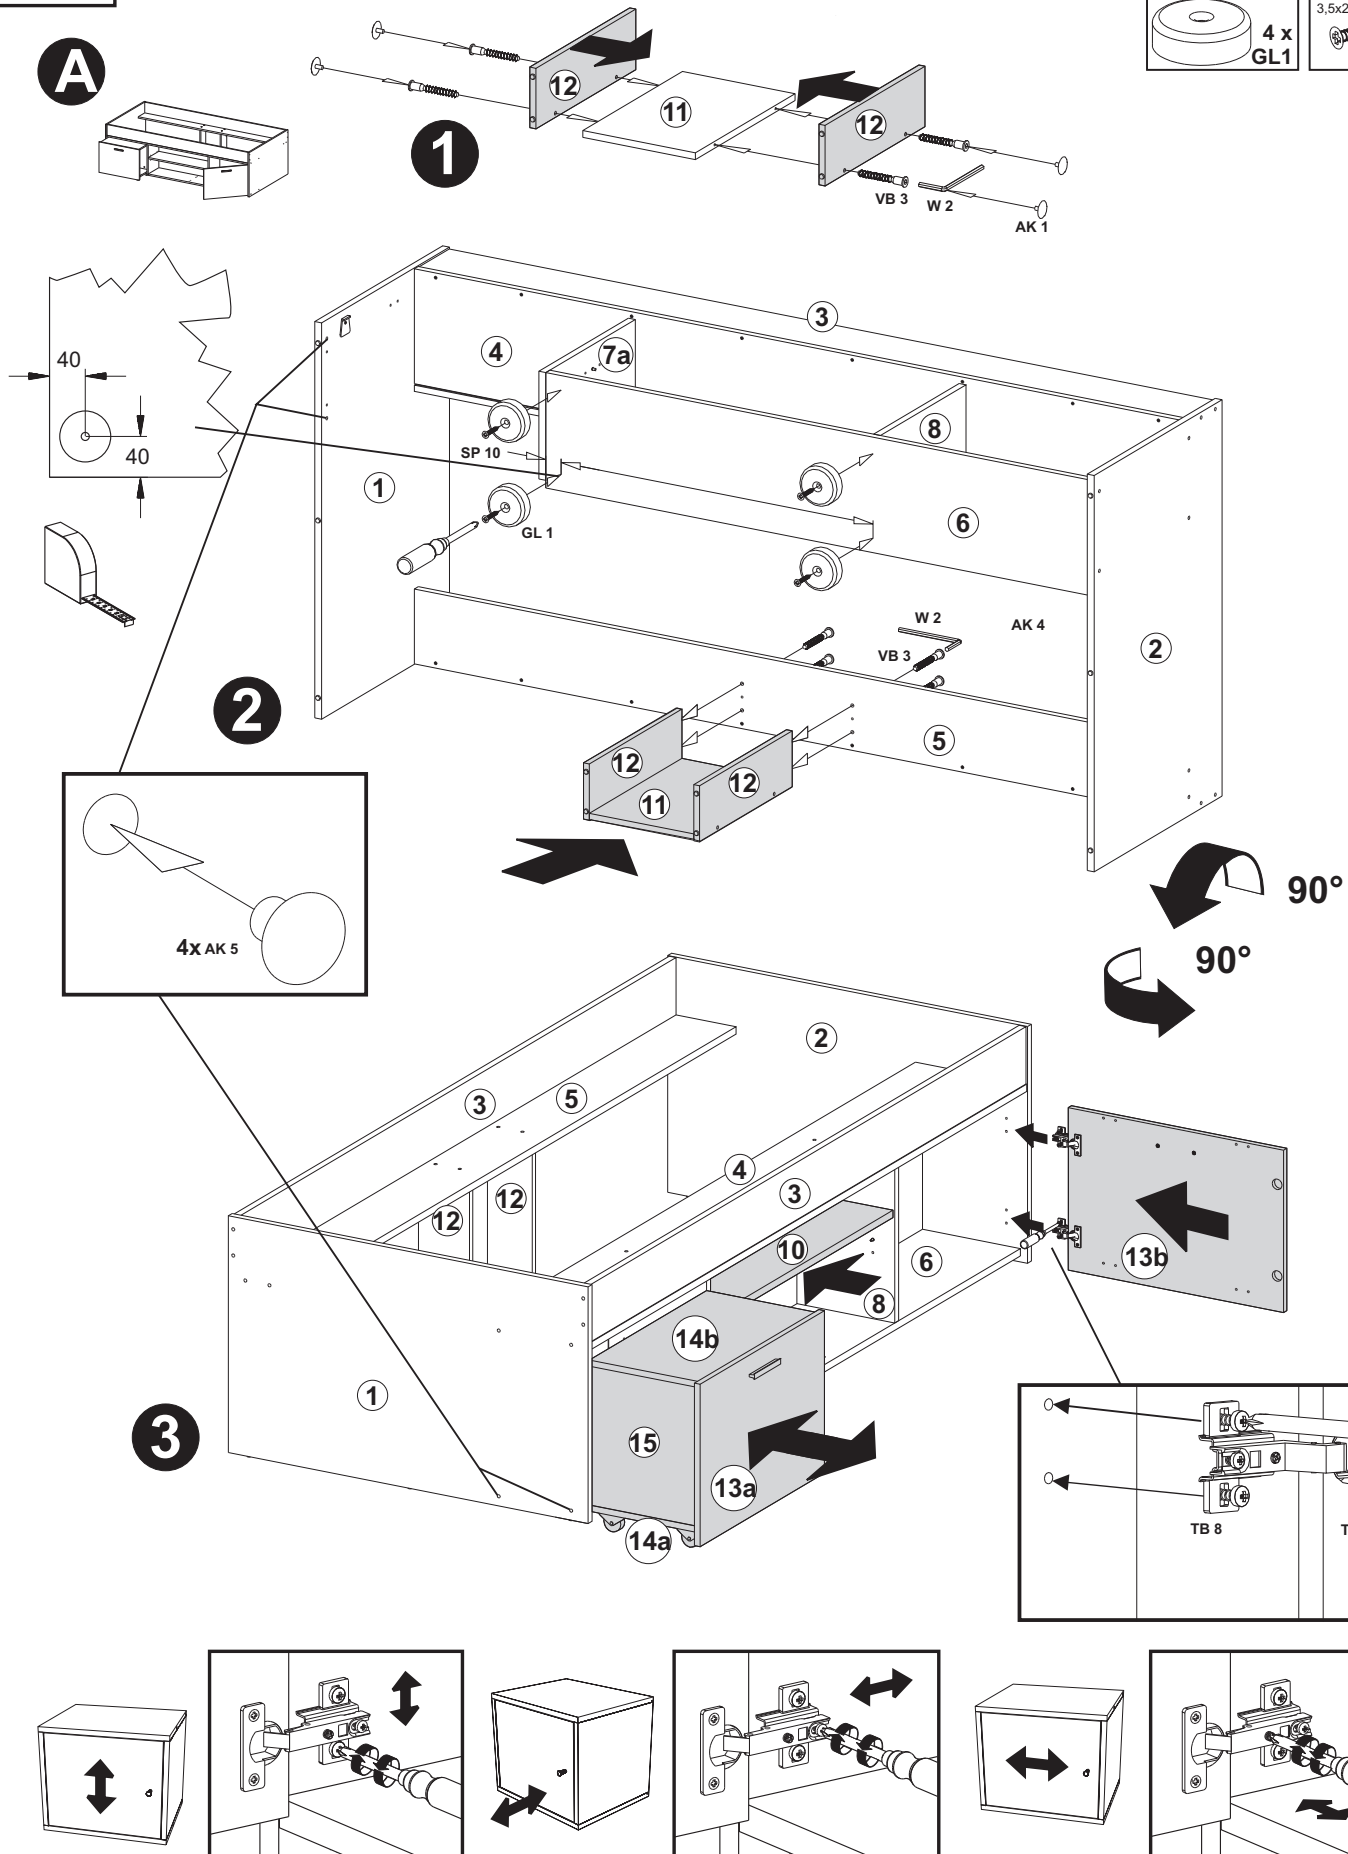




G2

B

4 x AK2

12 x AK3

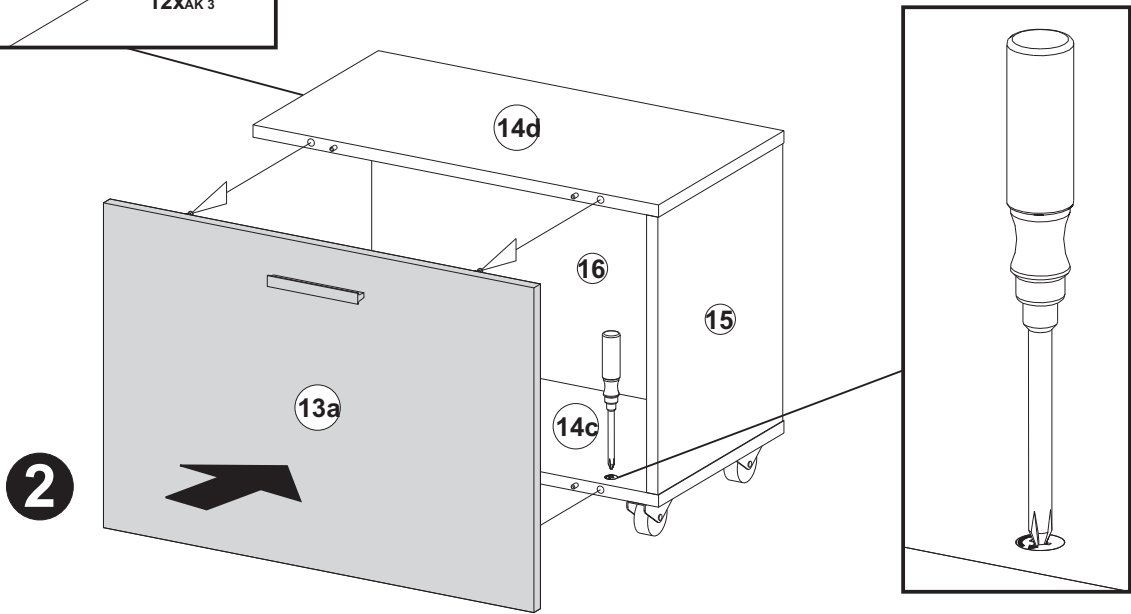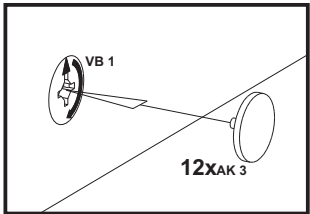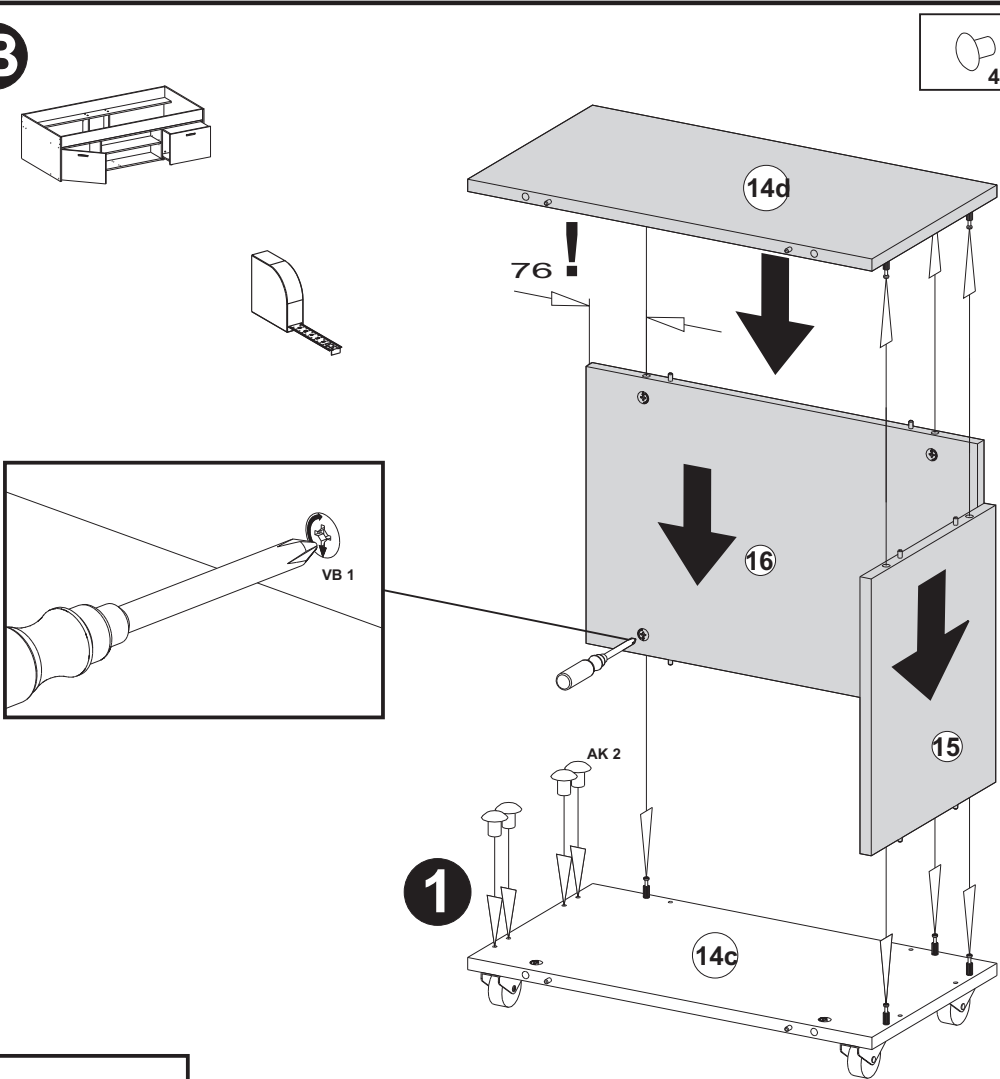

H2


B

4 x AK2


18 x Ak1

7,0x50
24 x VB3


W2



1




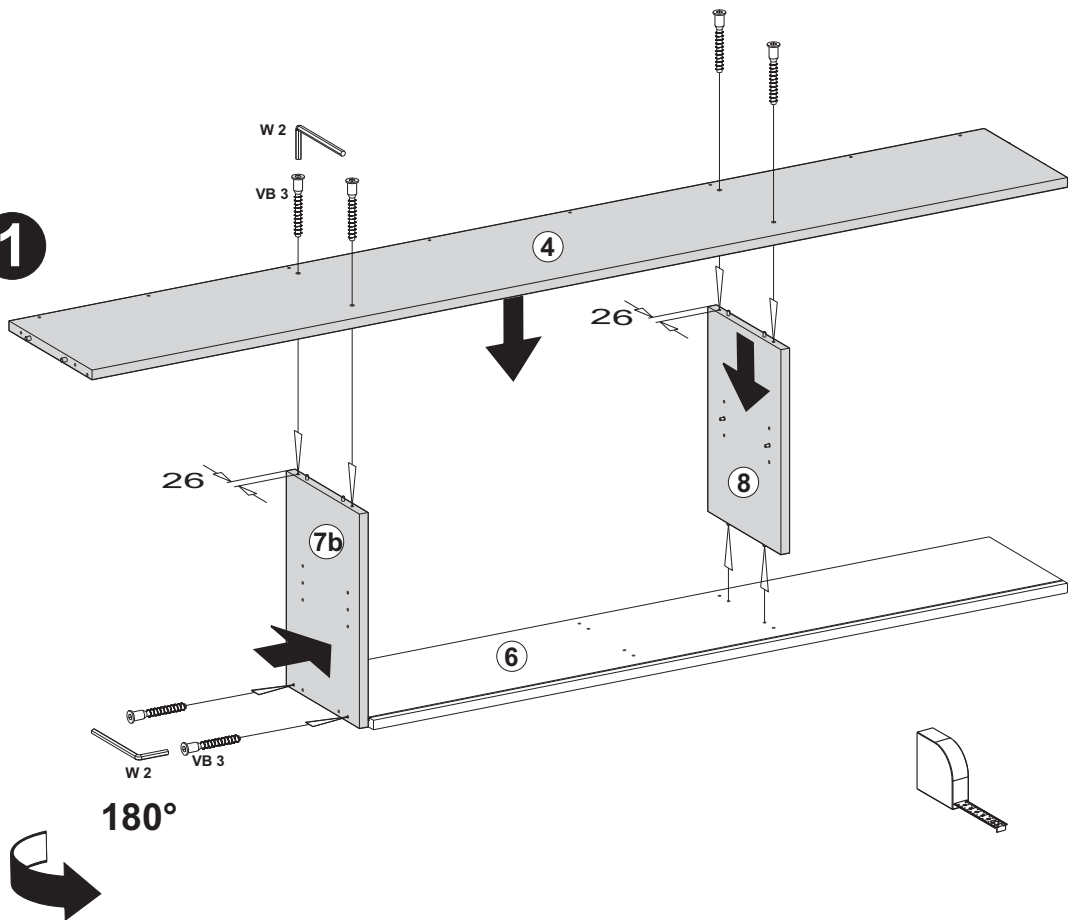


2


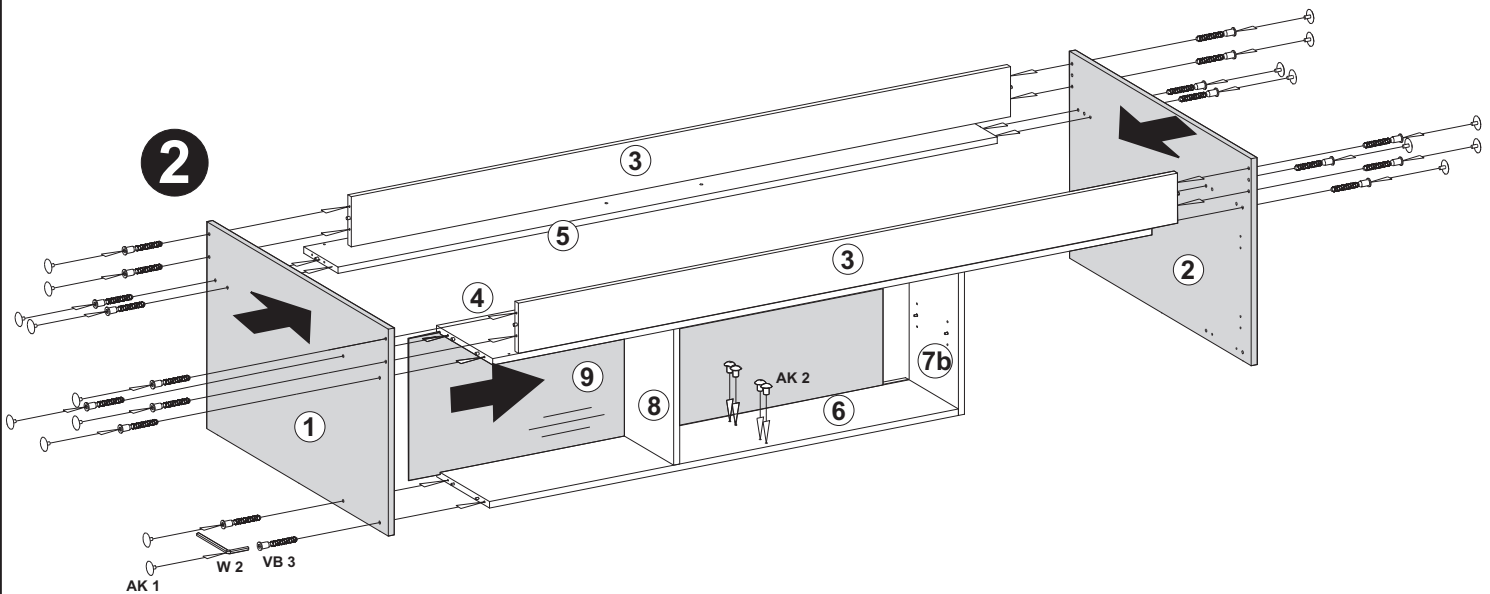


I2




B



1

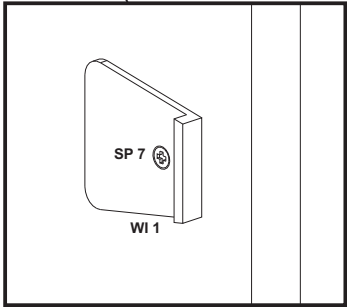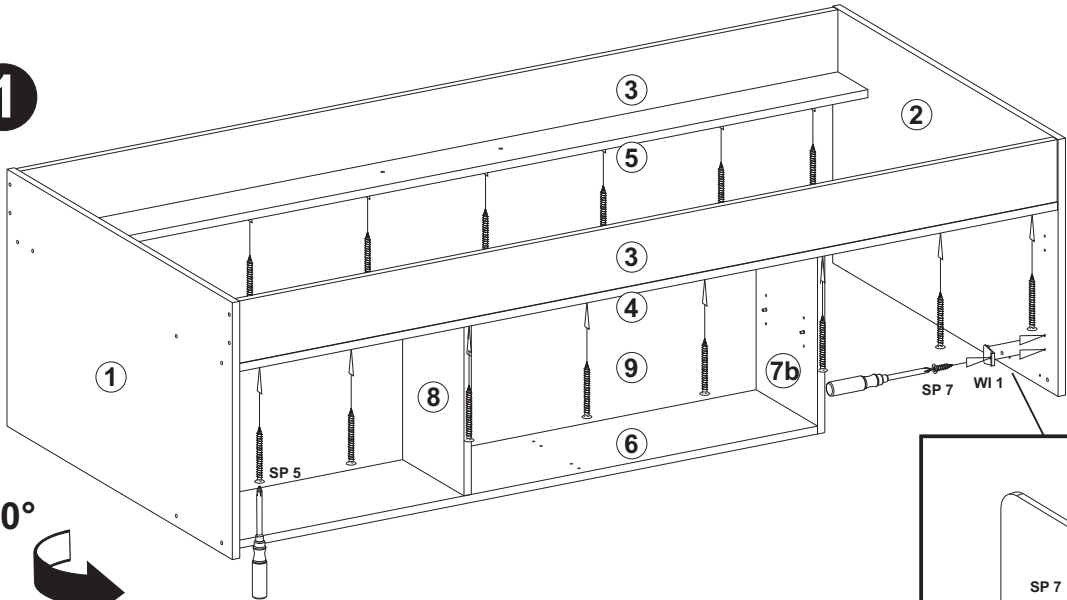










2

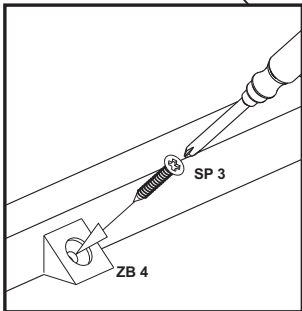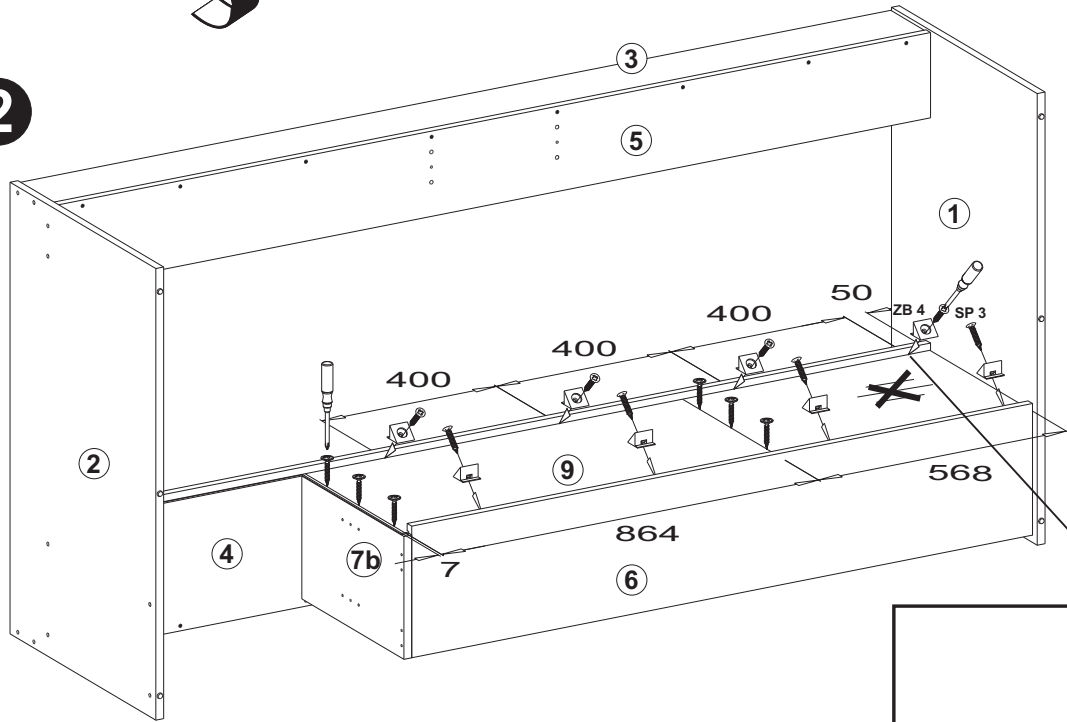

J2

B

1

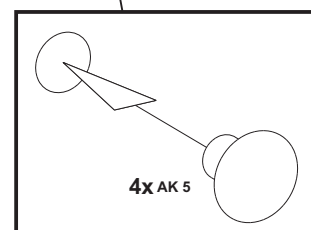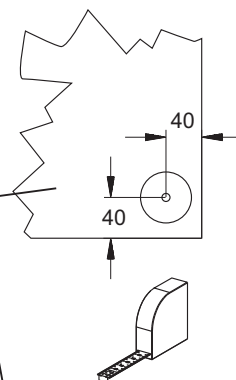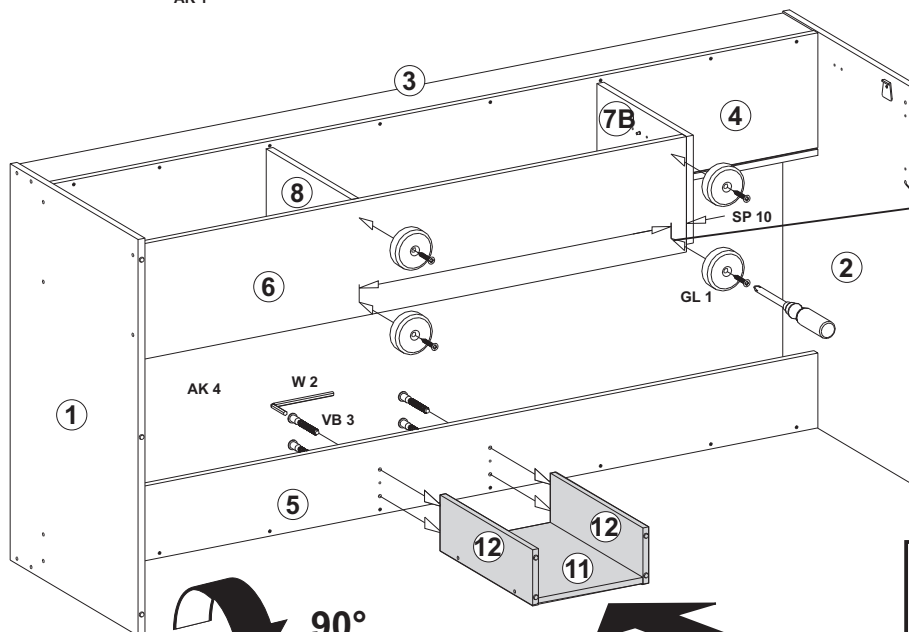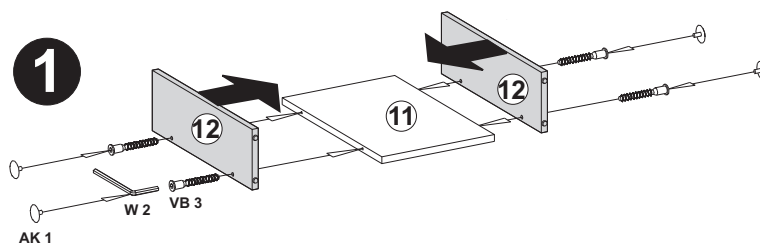

3

