

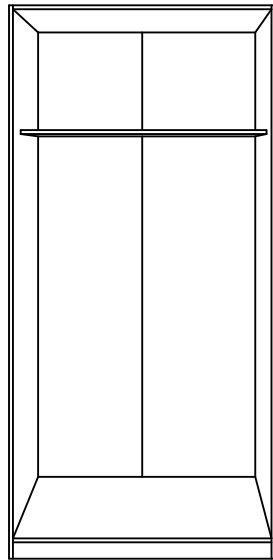







1089

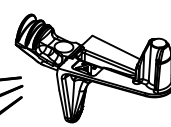



1

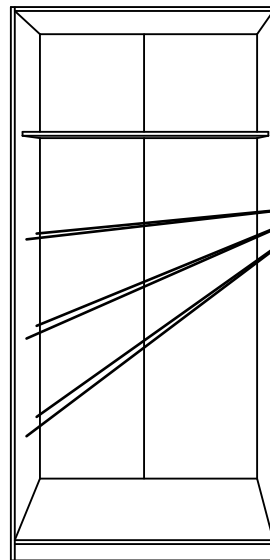


1089

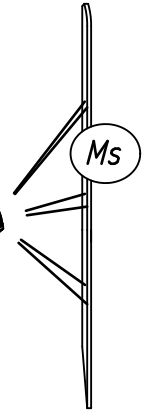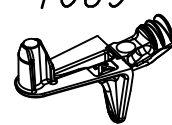

2

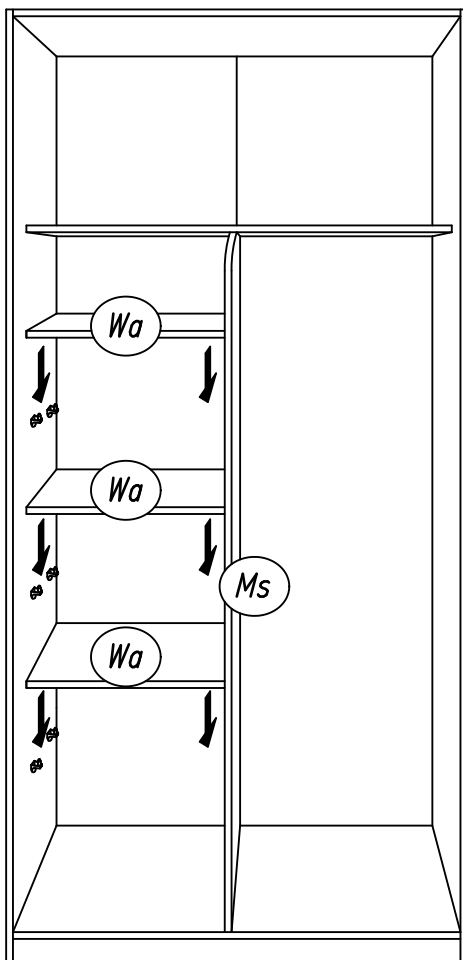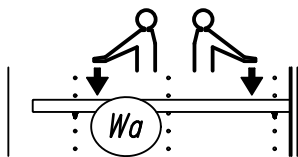





3

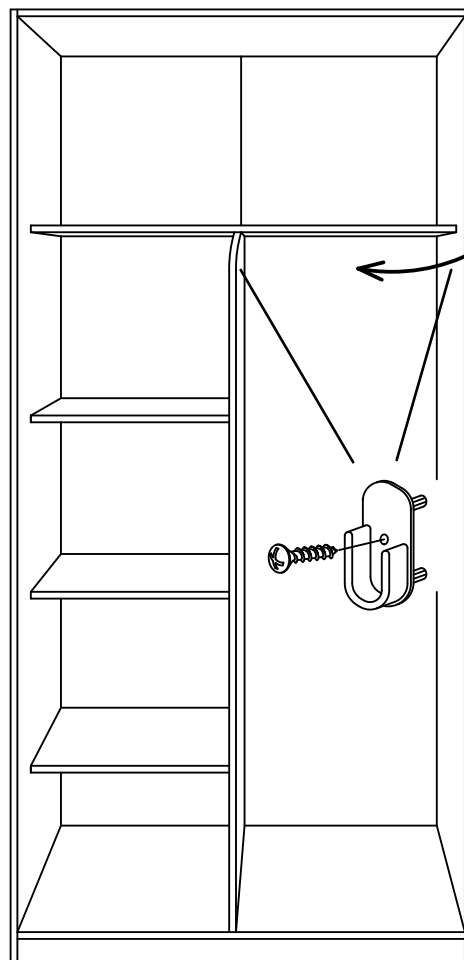









1.

MD162_01

rauch


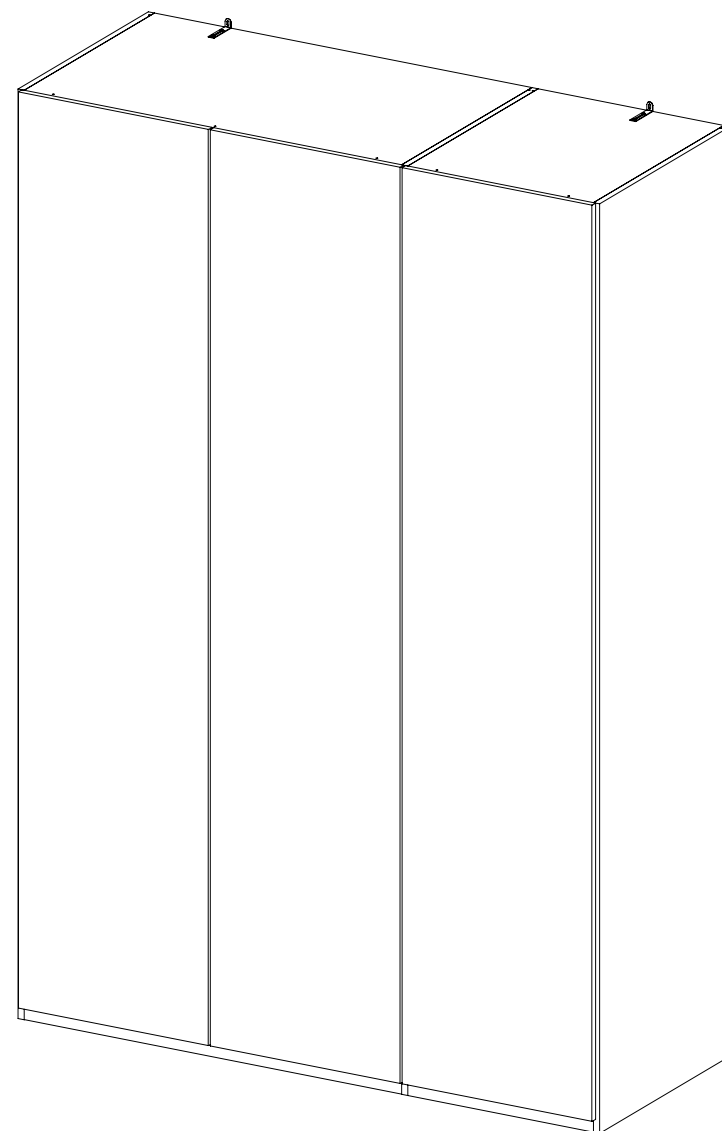
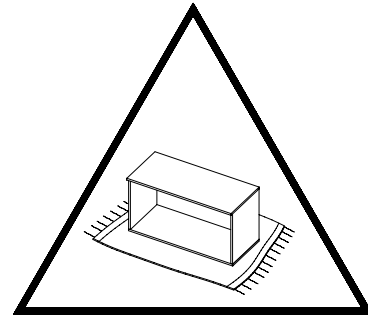
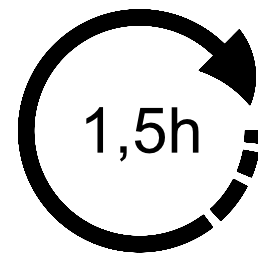
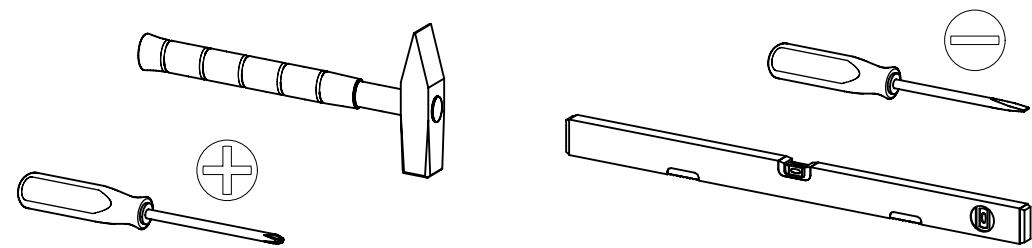


2.

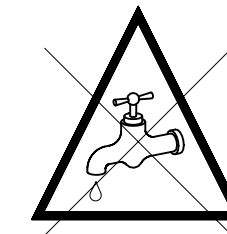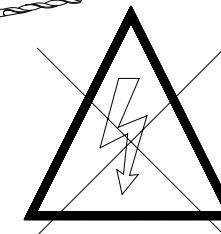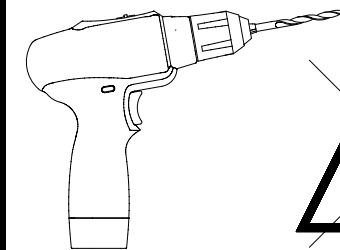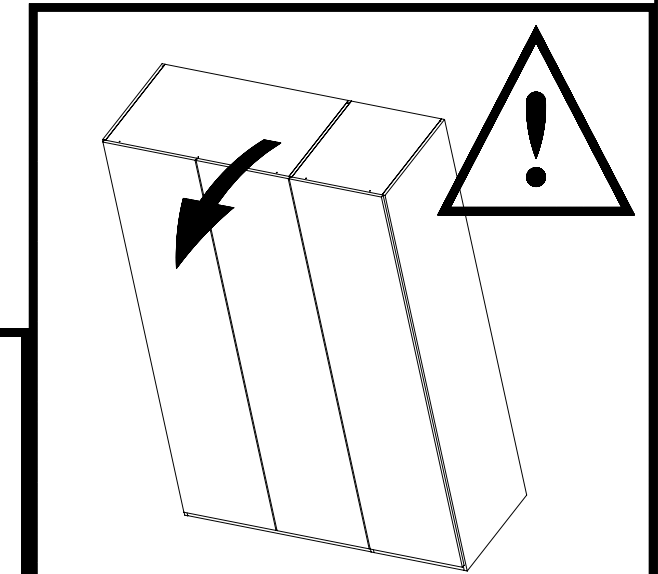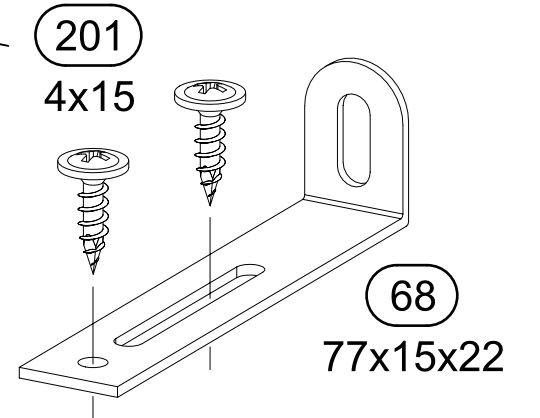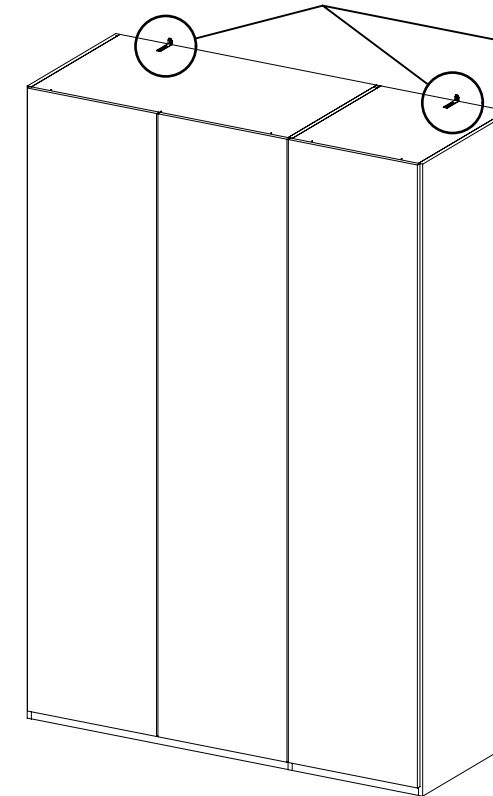


?


ØXmm











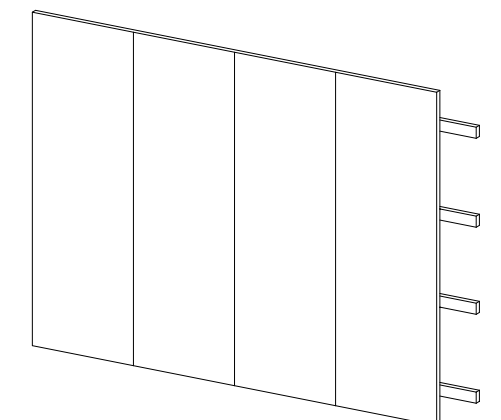
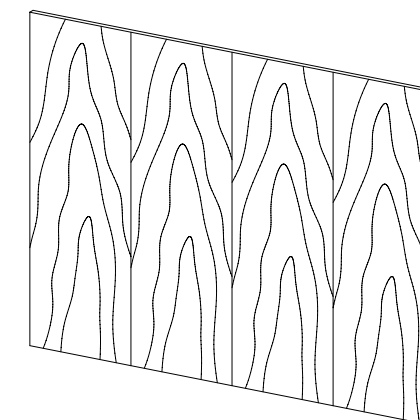
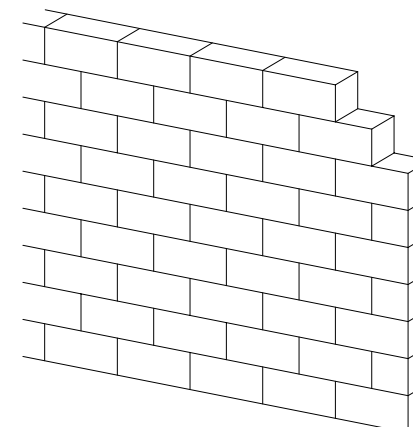





3.

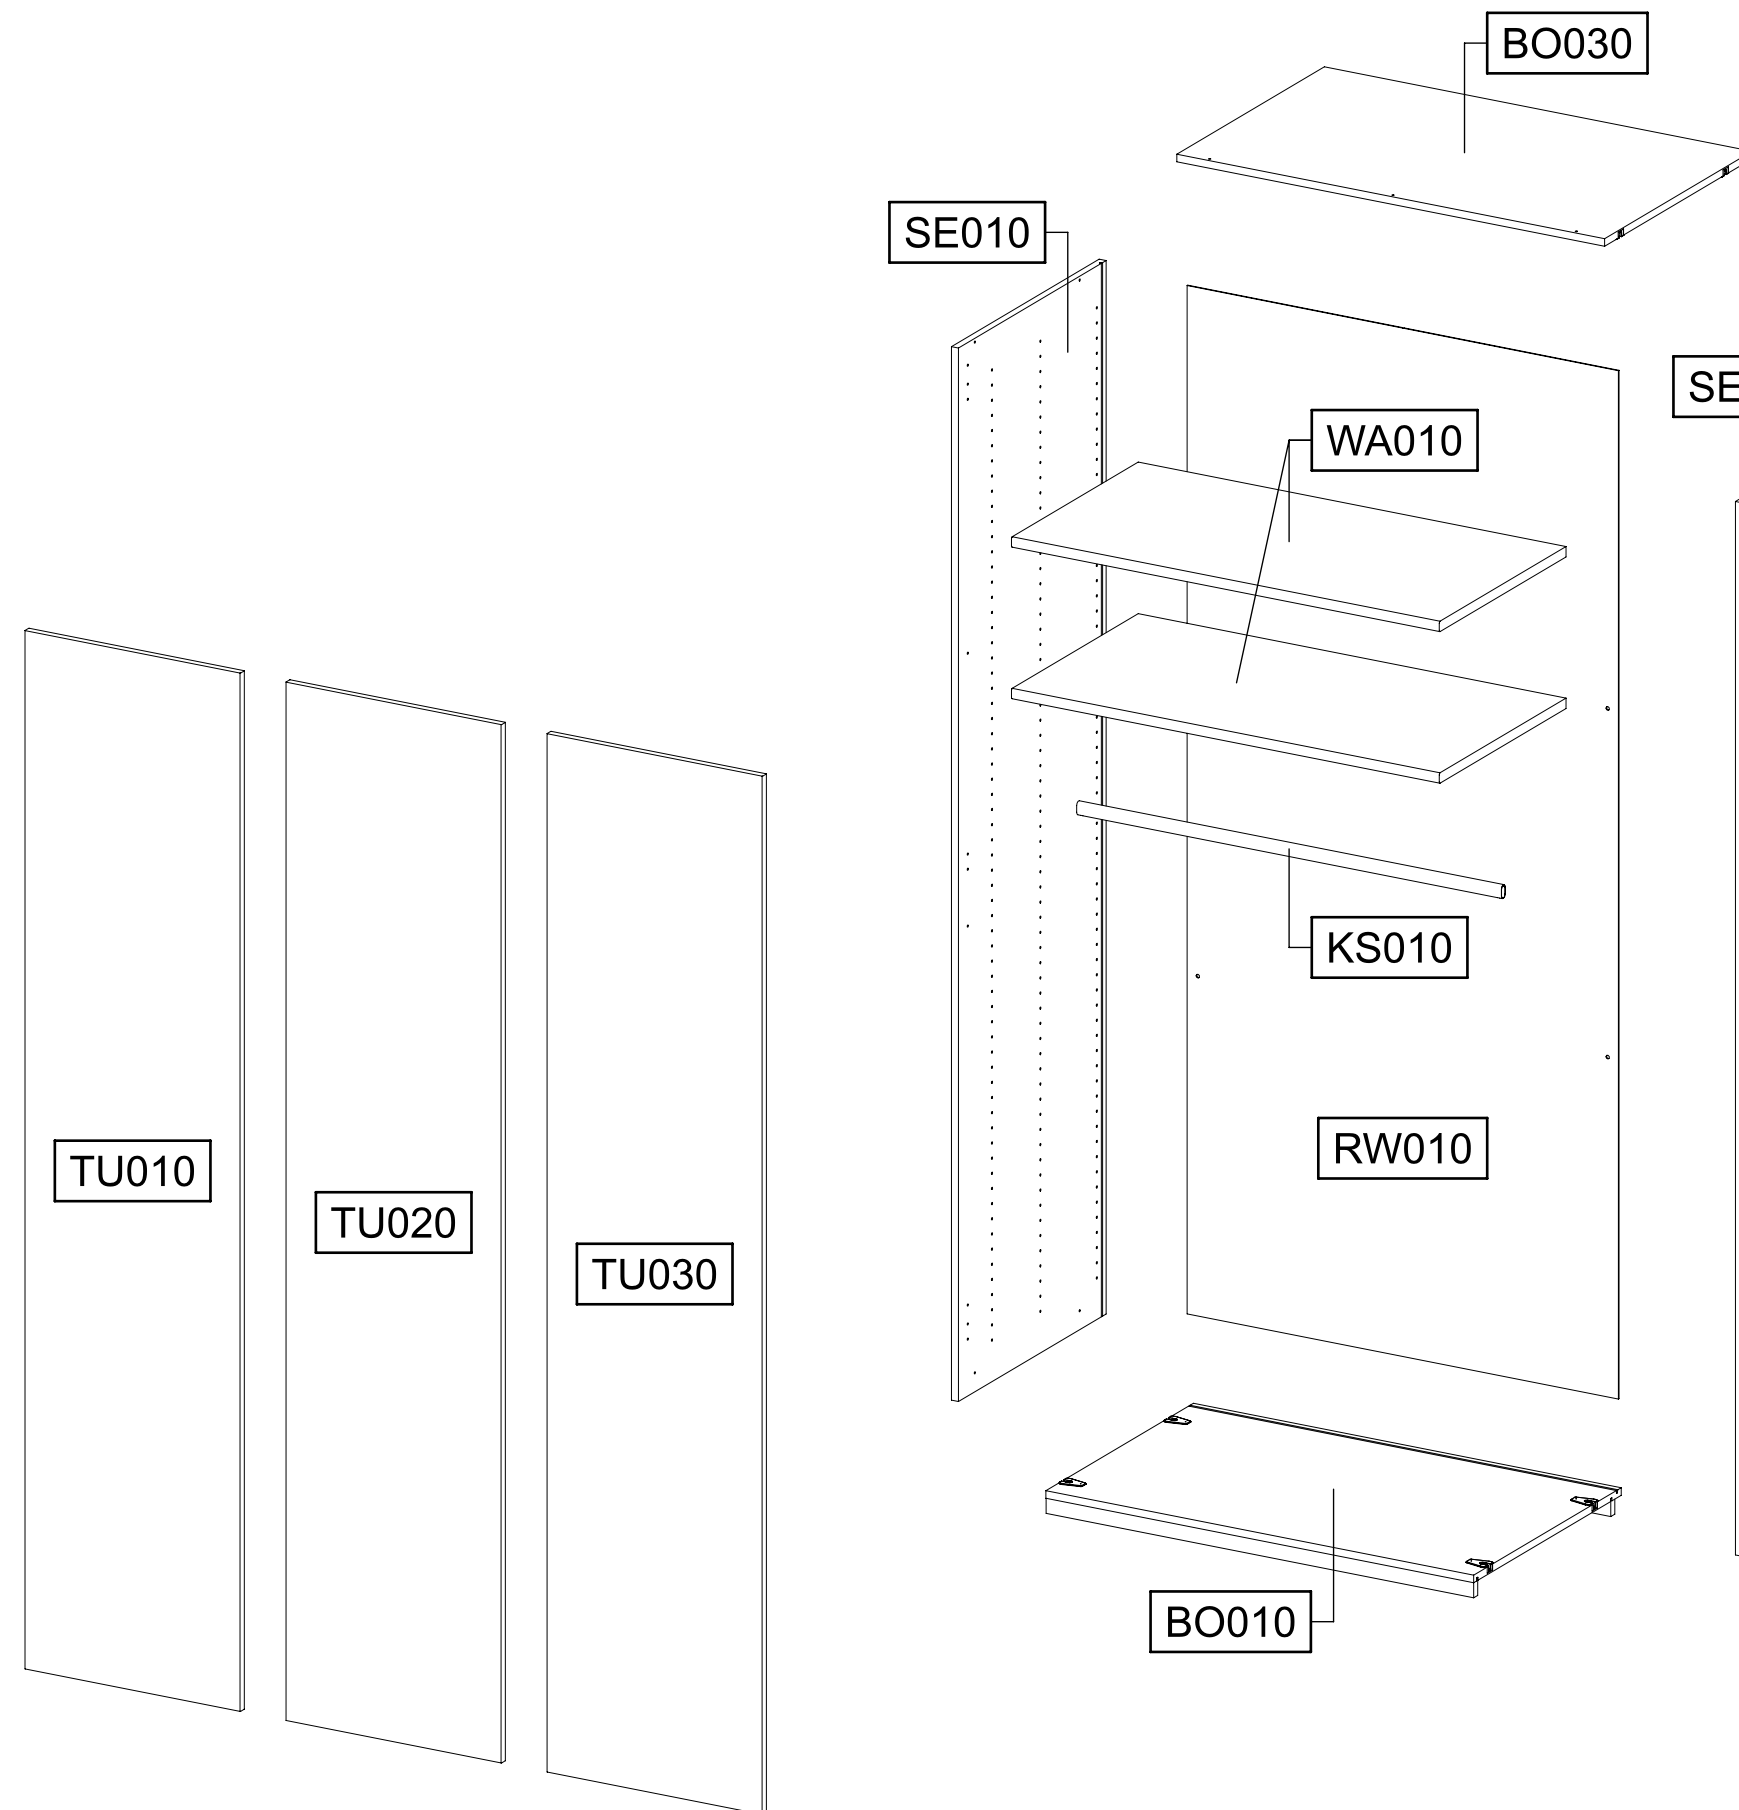


4.

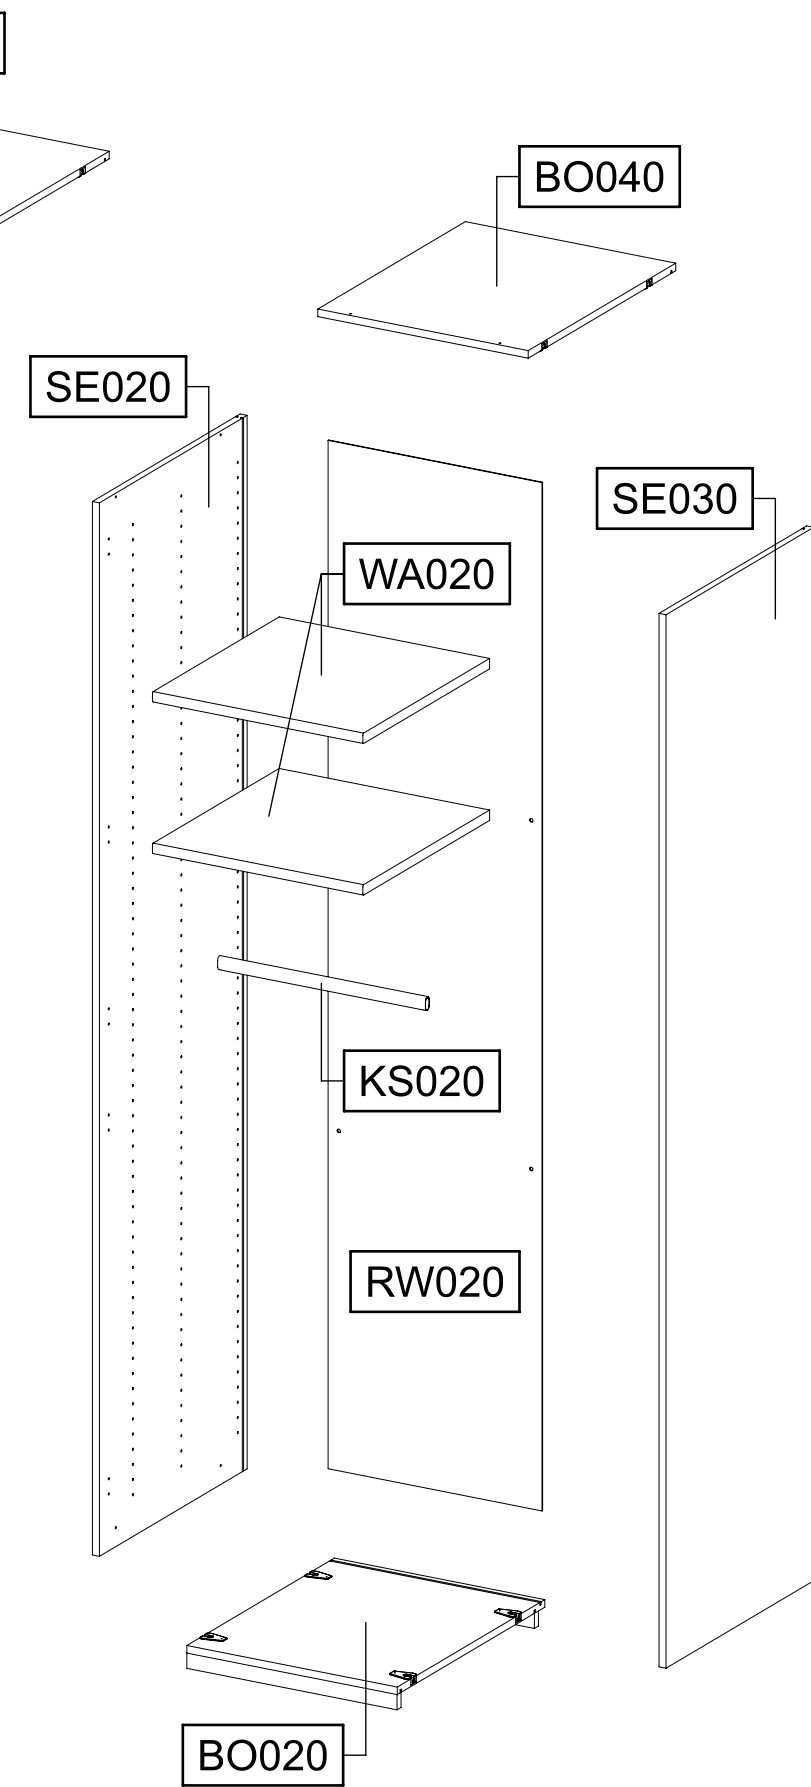

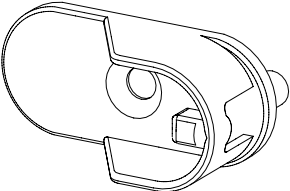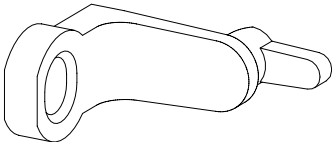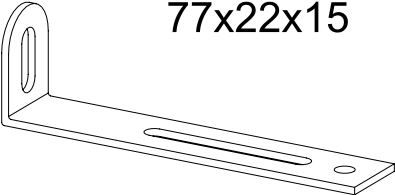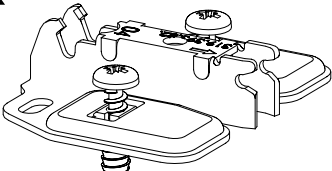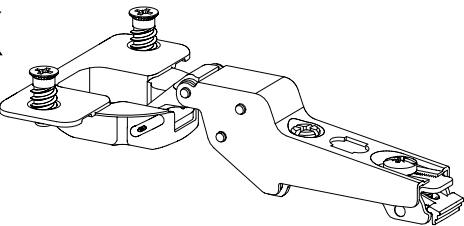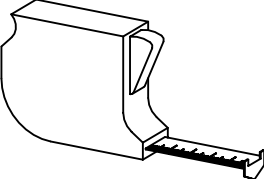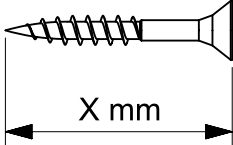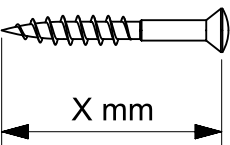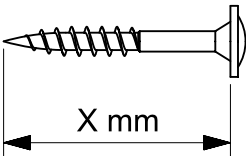
0-6x 55x16x6,2 12 	4x 29 
8x 47 	2x 77x22x15 68 
4x 4x15 201 	4x 3,5x15 205 
18-24x 4x13 621 	8x 6,5x12 779 
8x 1085 	4x 1086 
16x 1089 	9-12x 1291 
9-12x 1292 	
   	


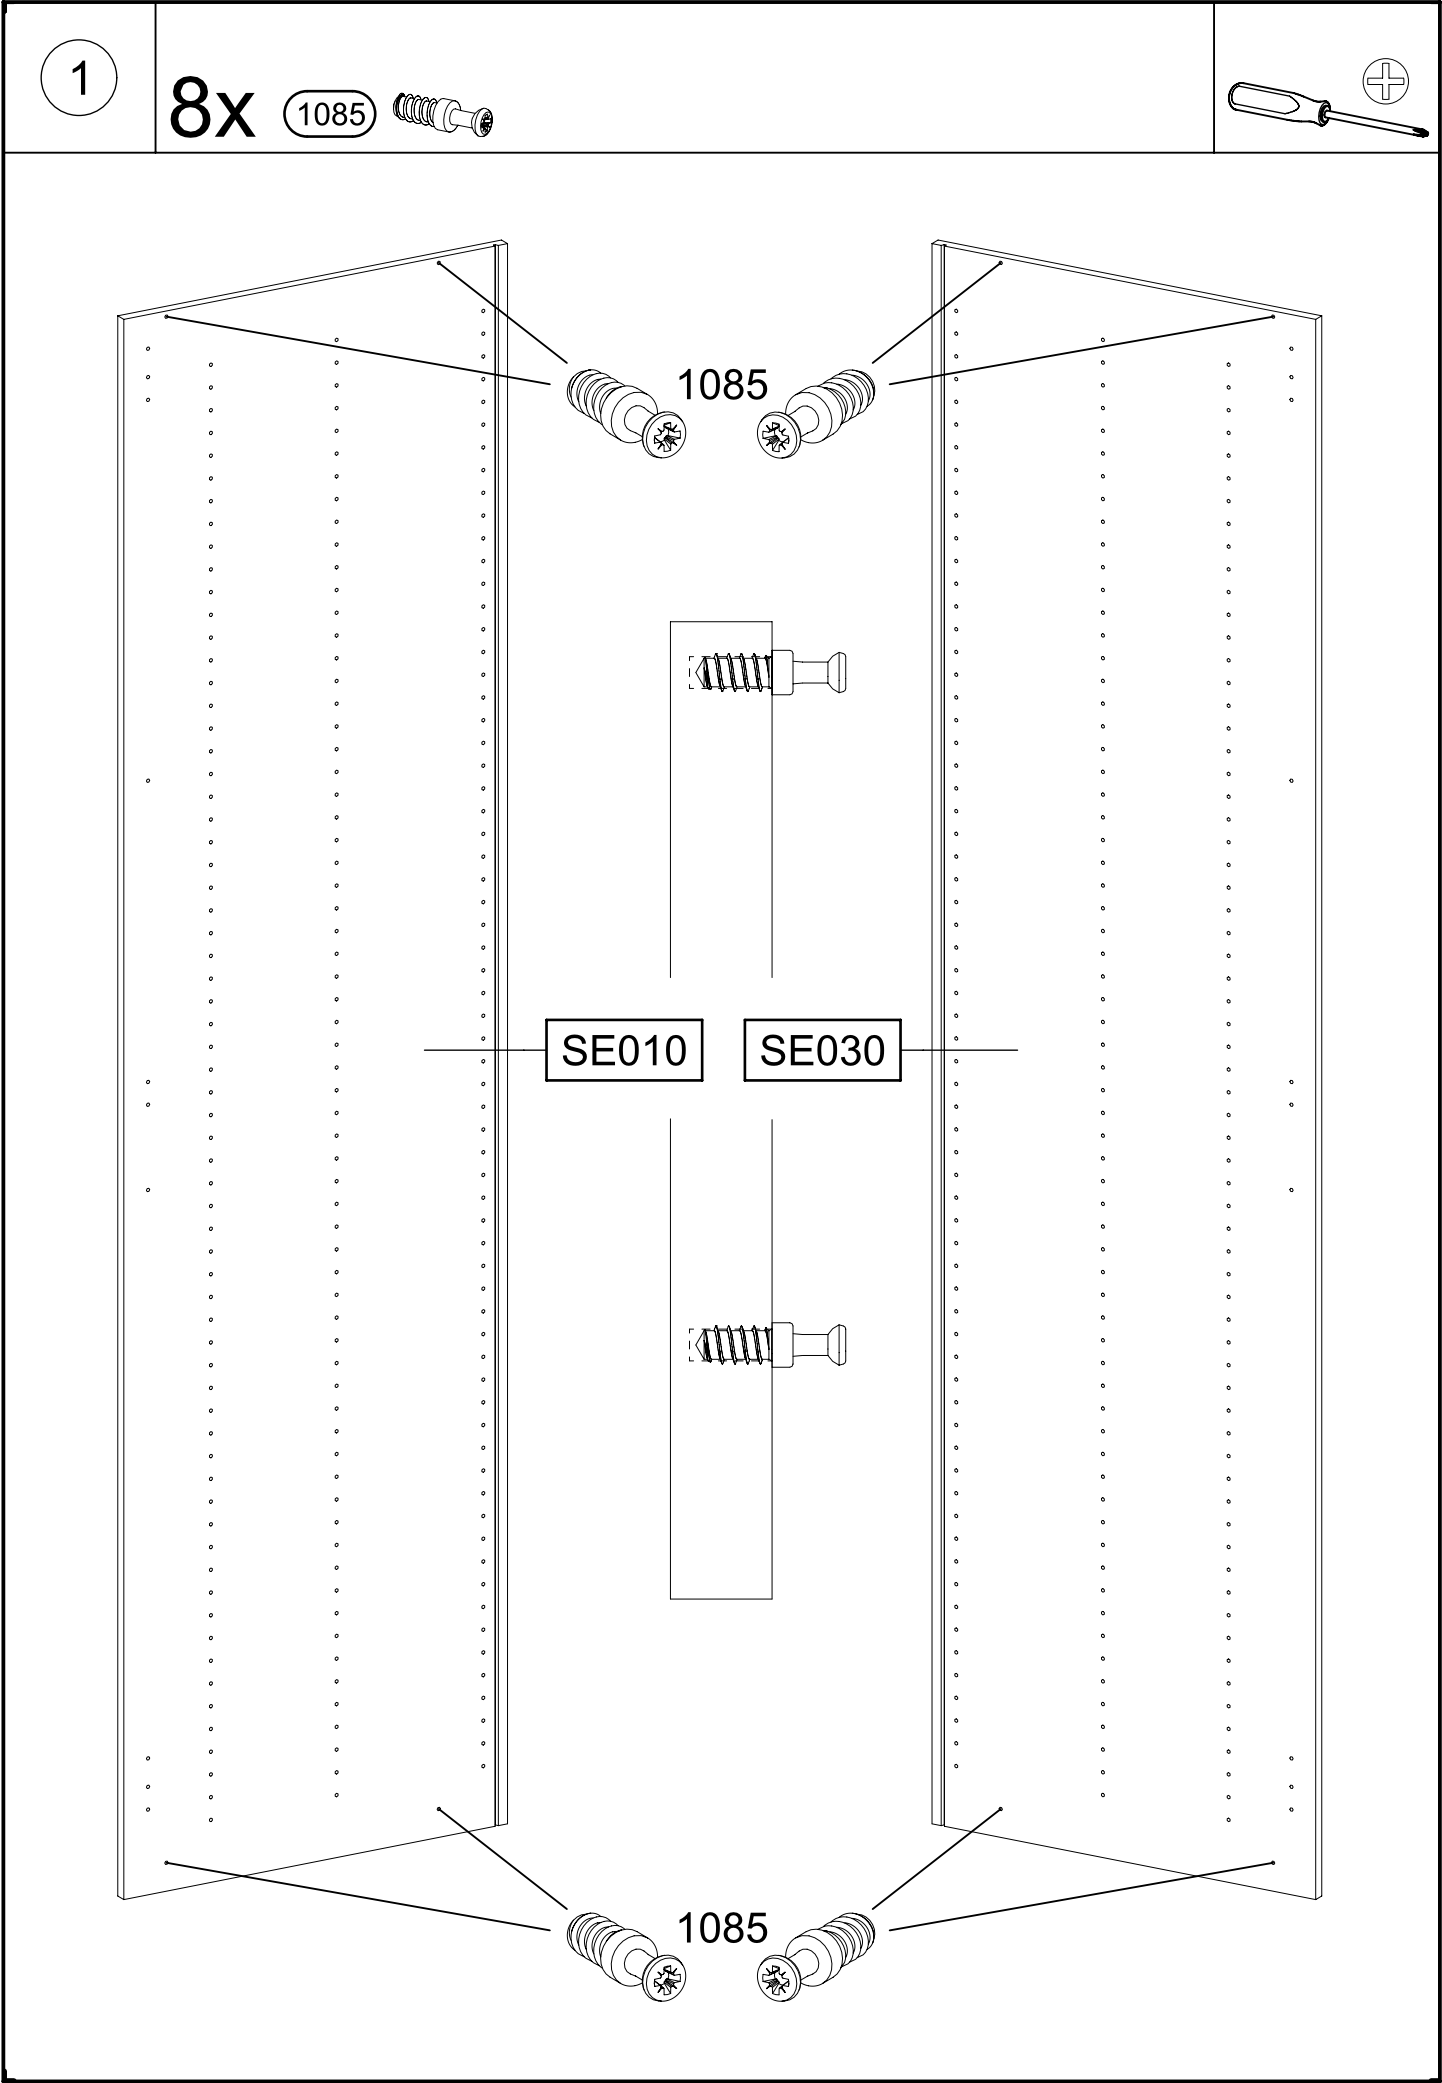




7.

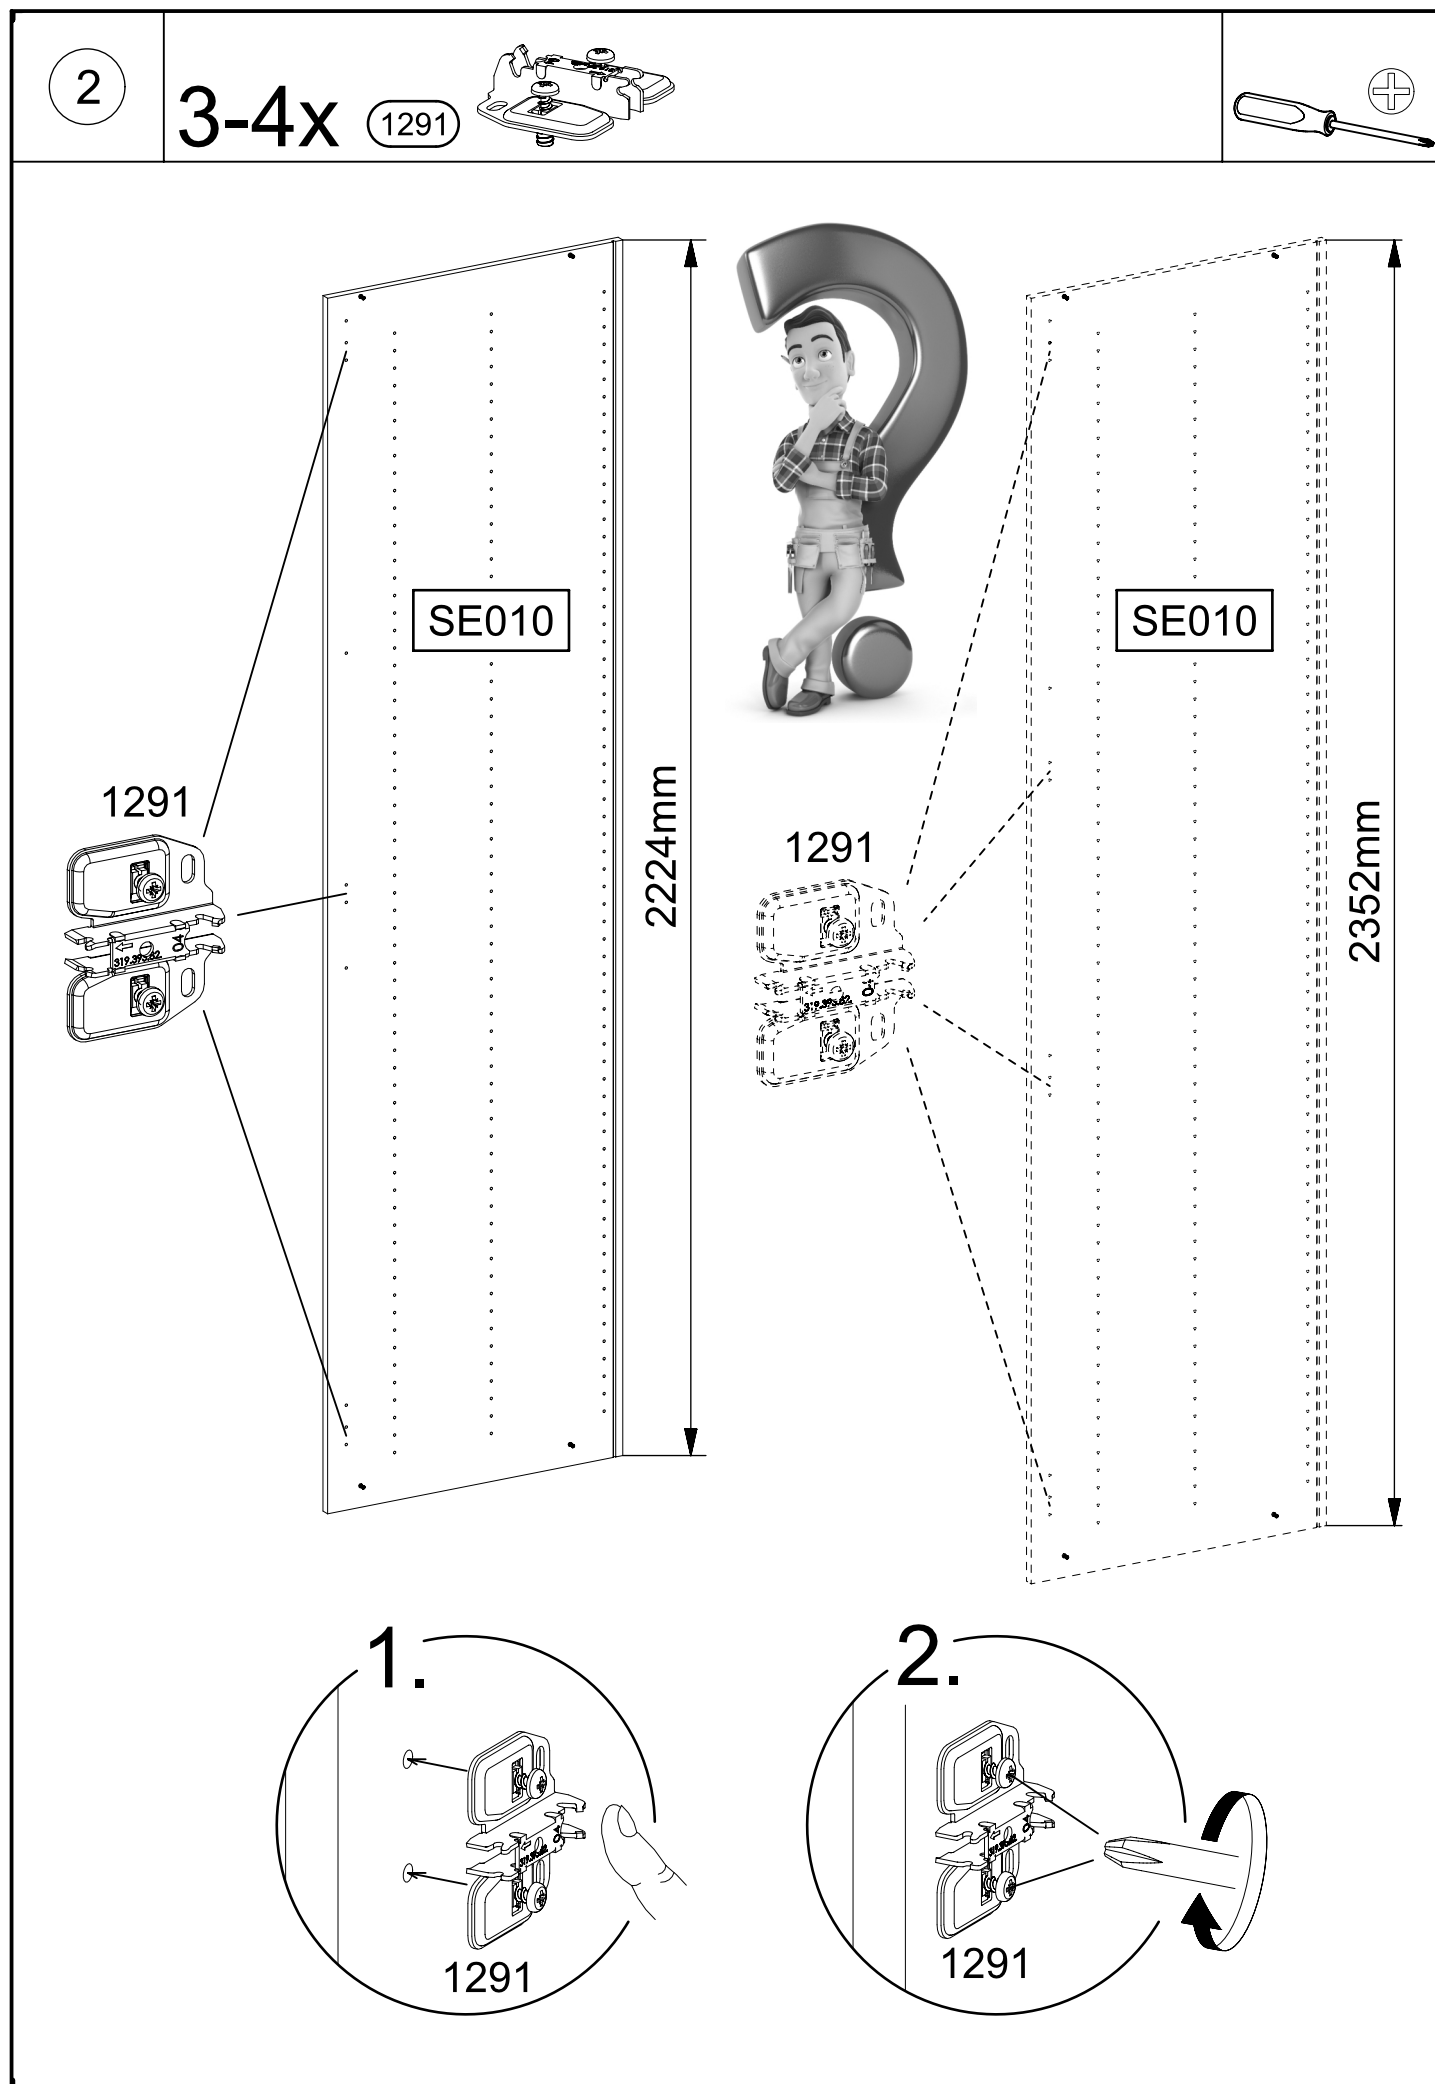


8.

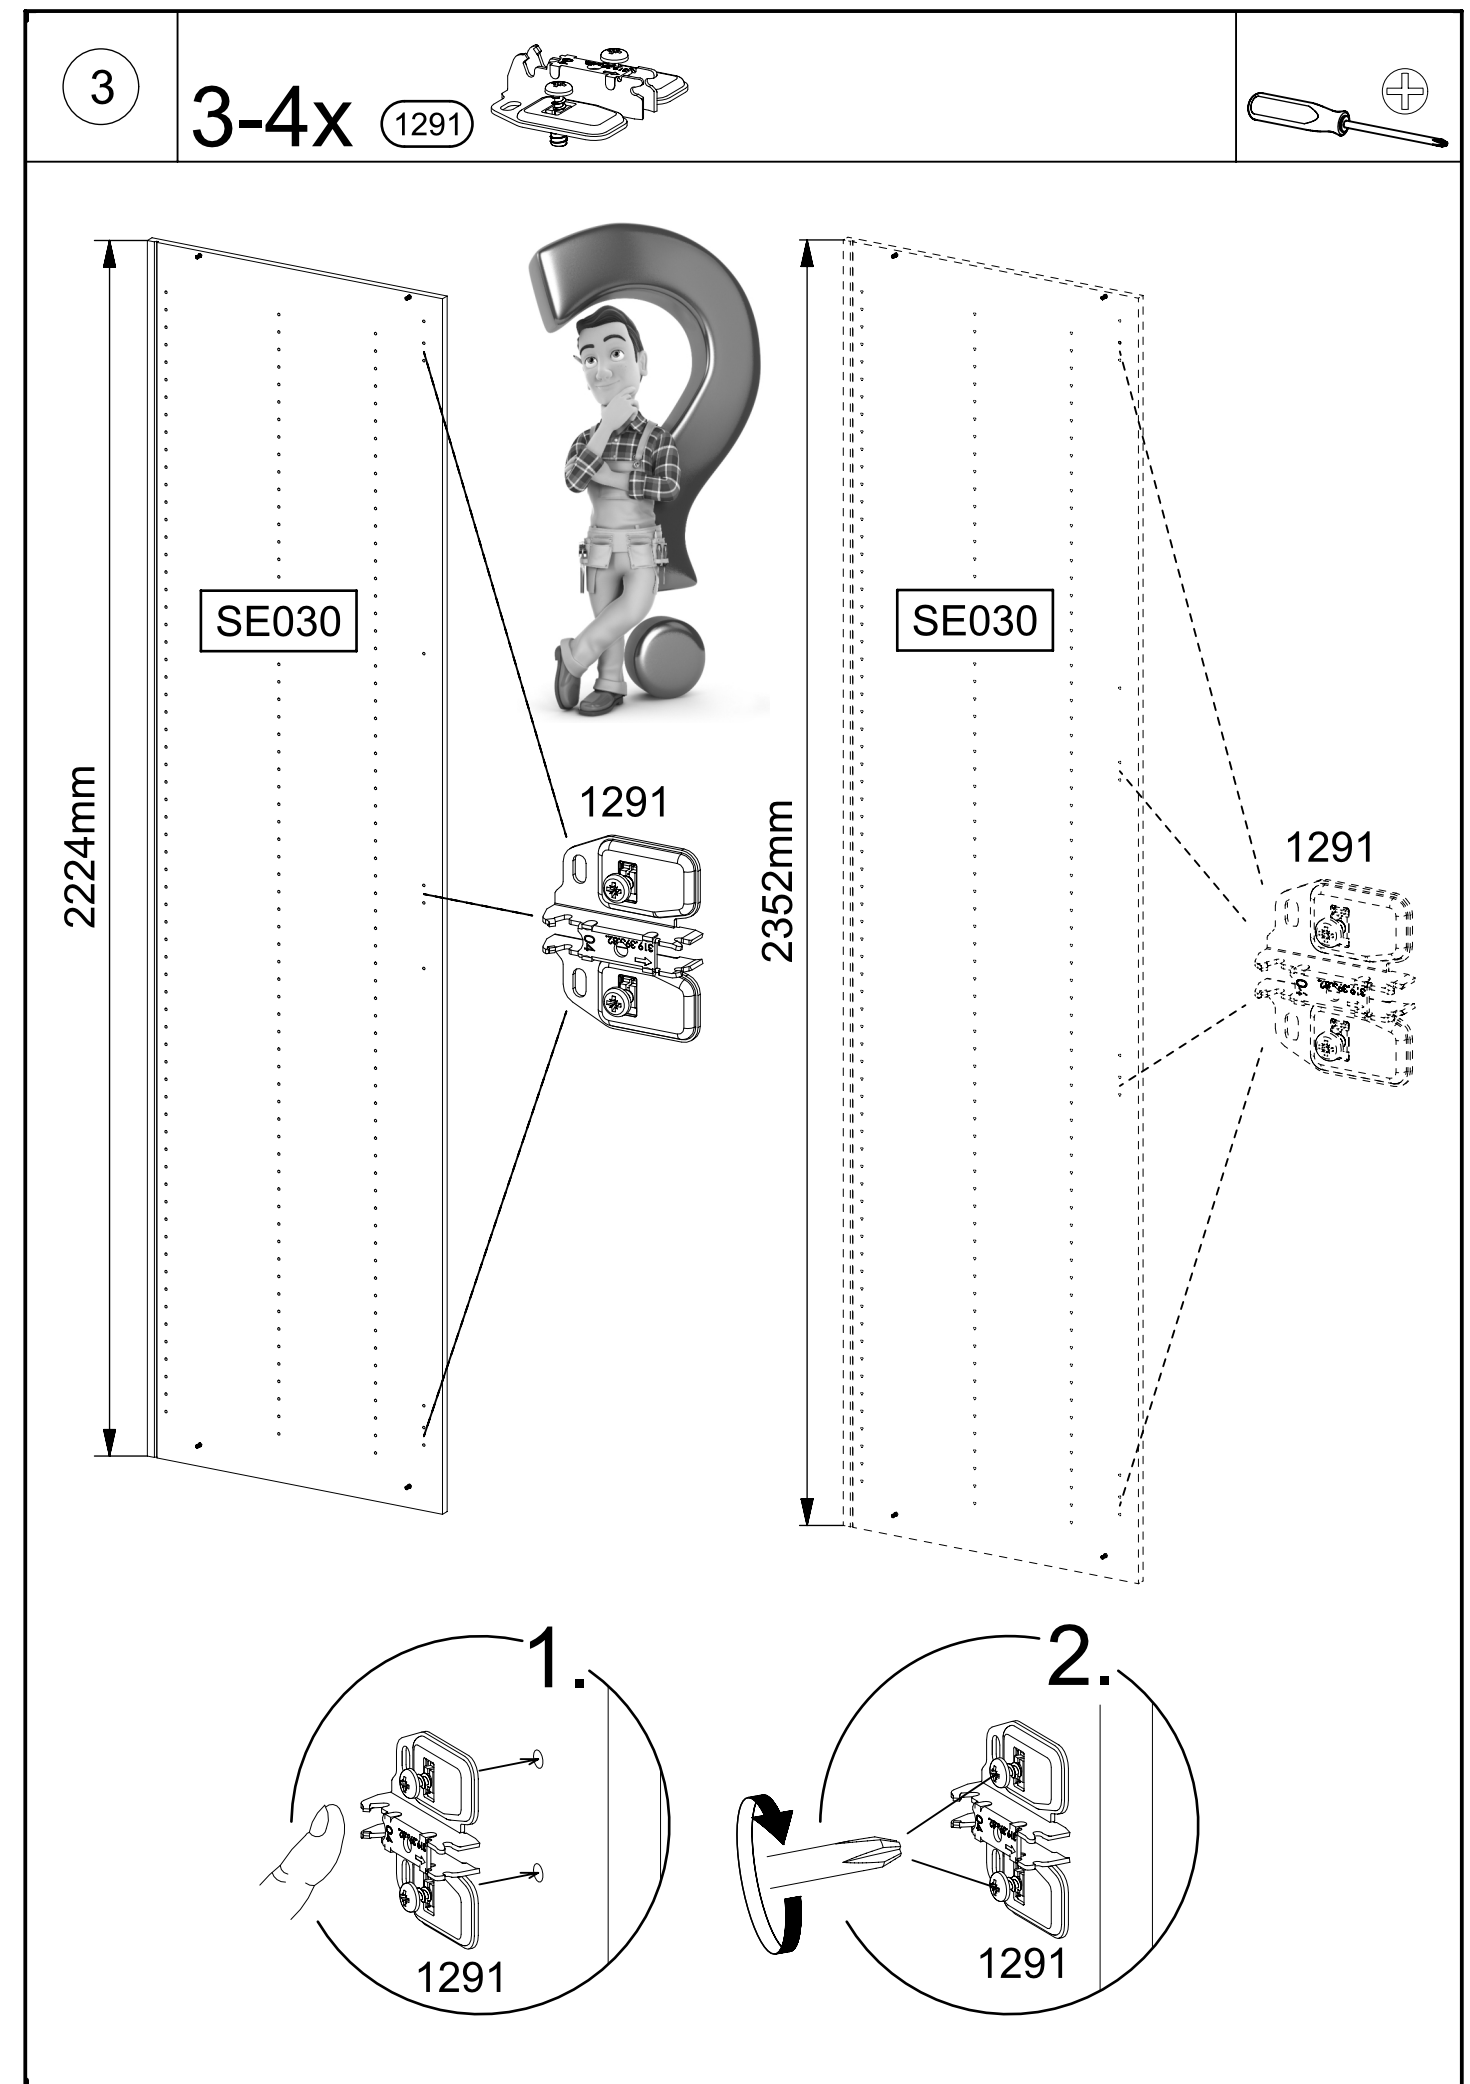

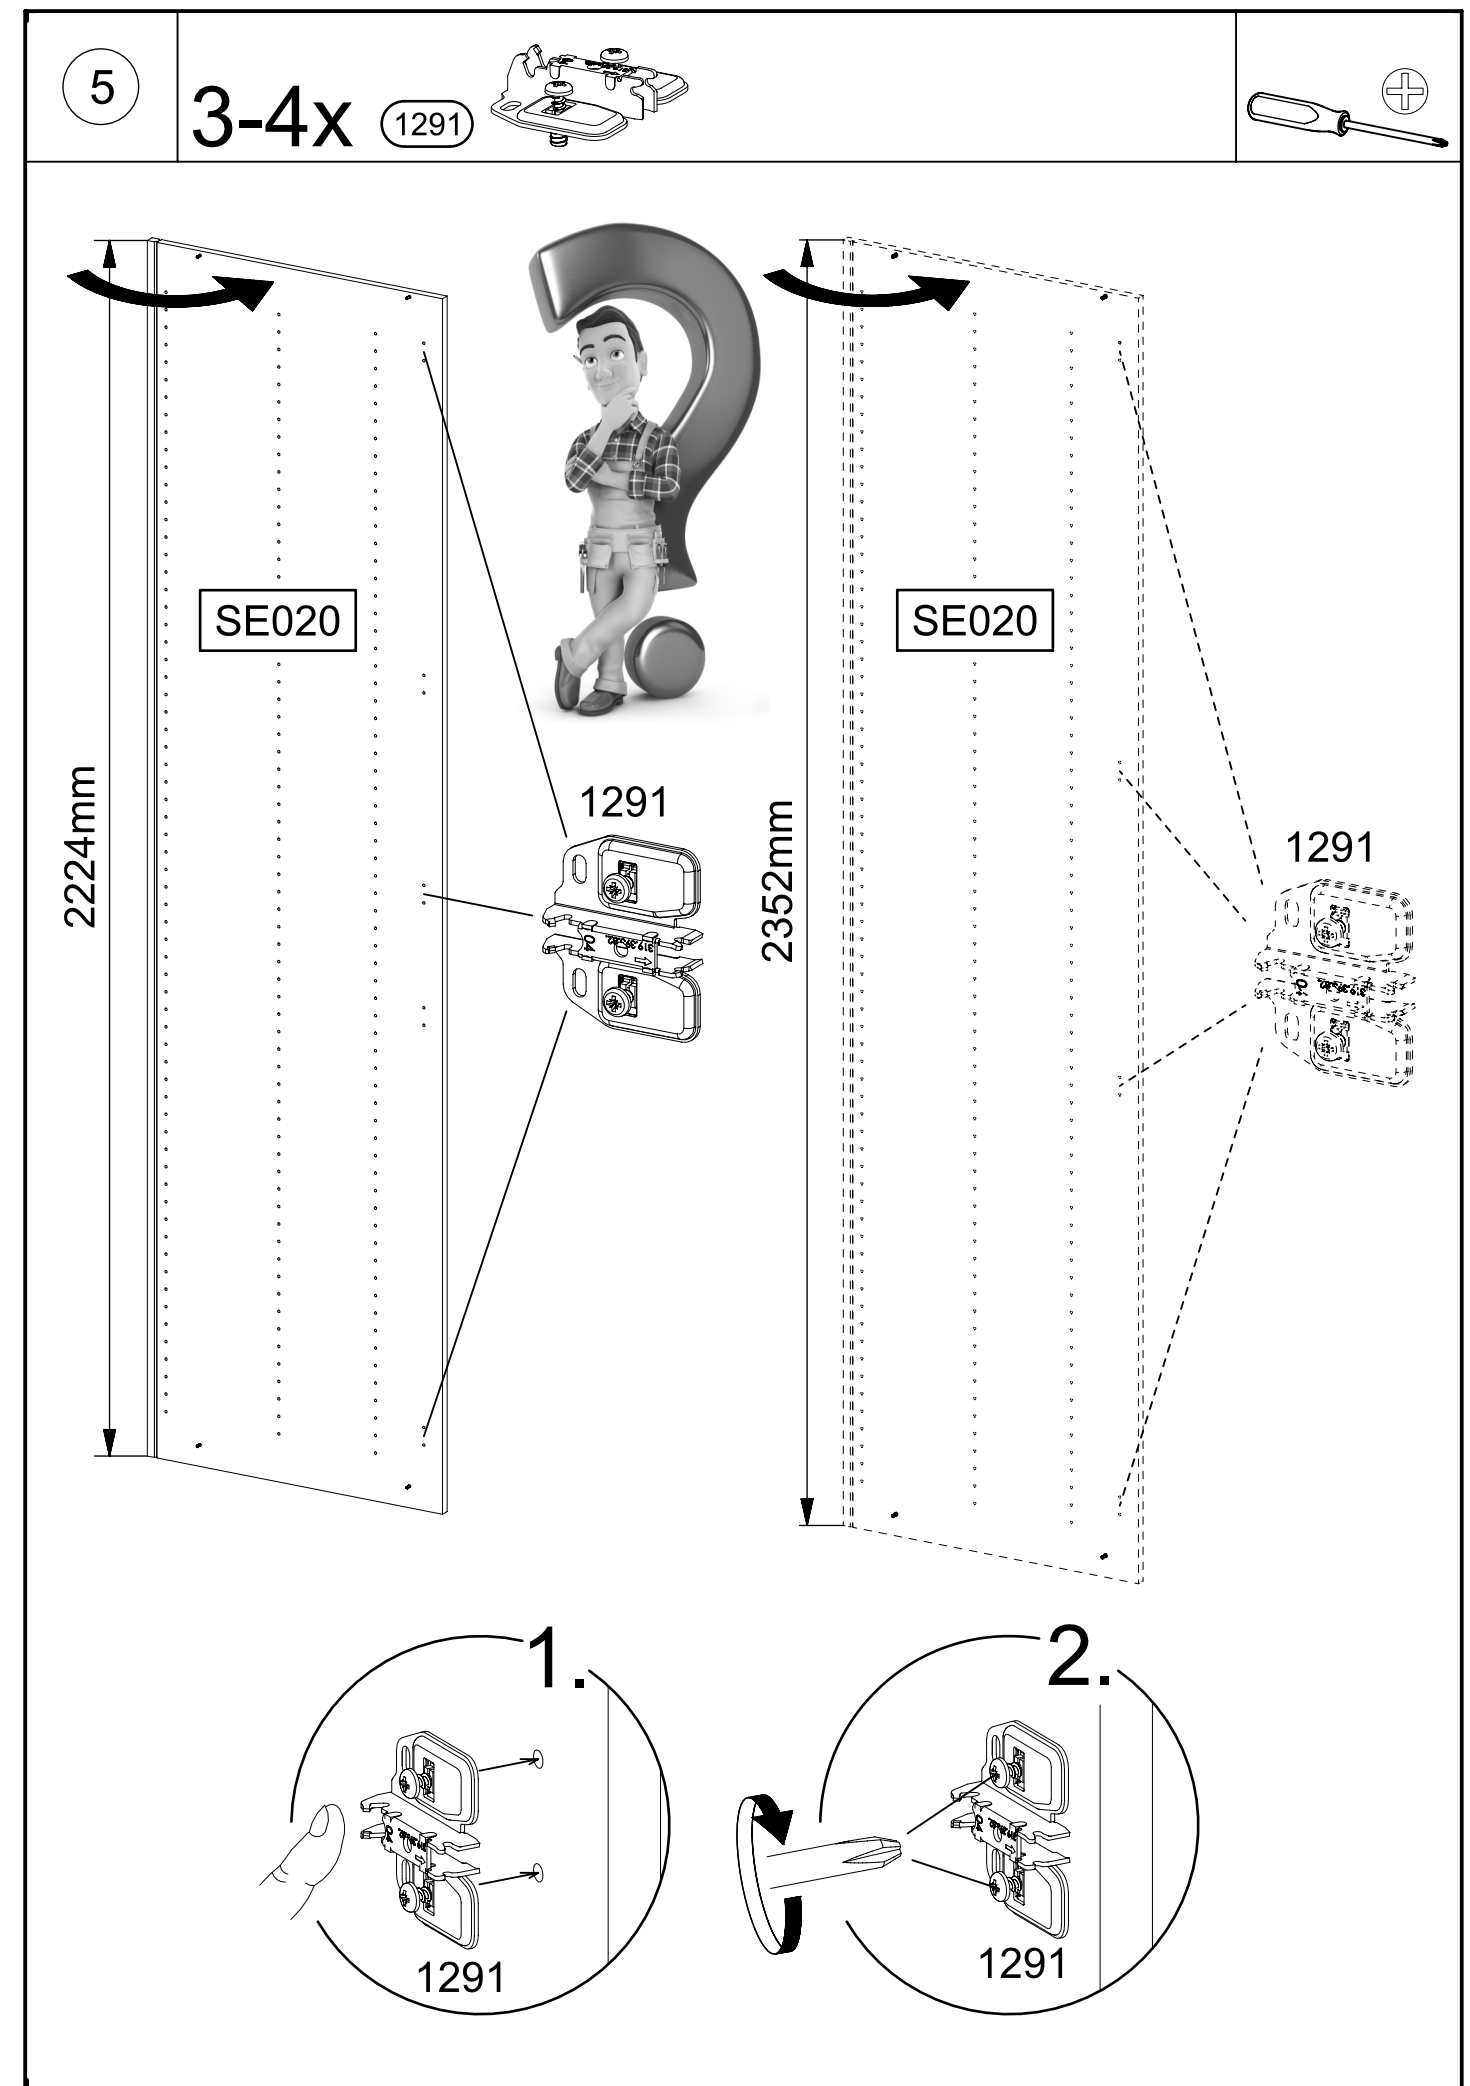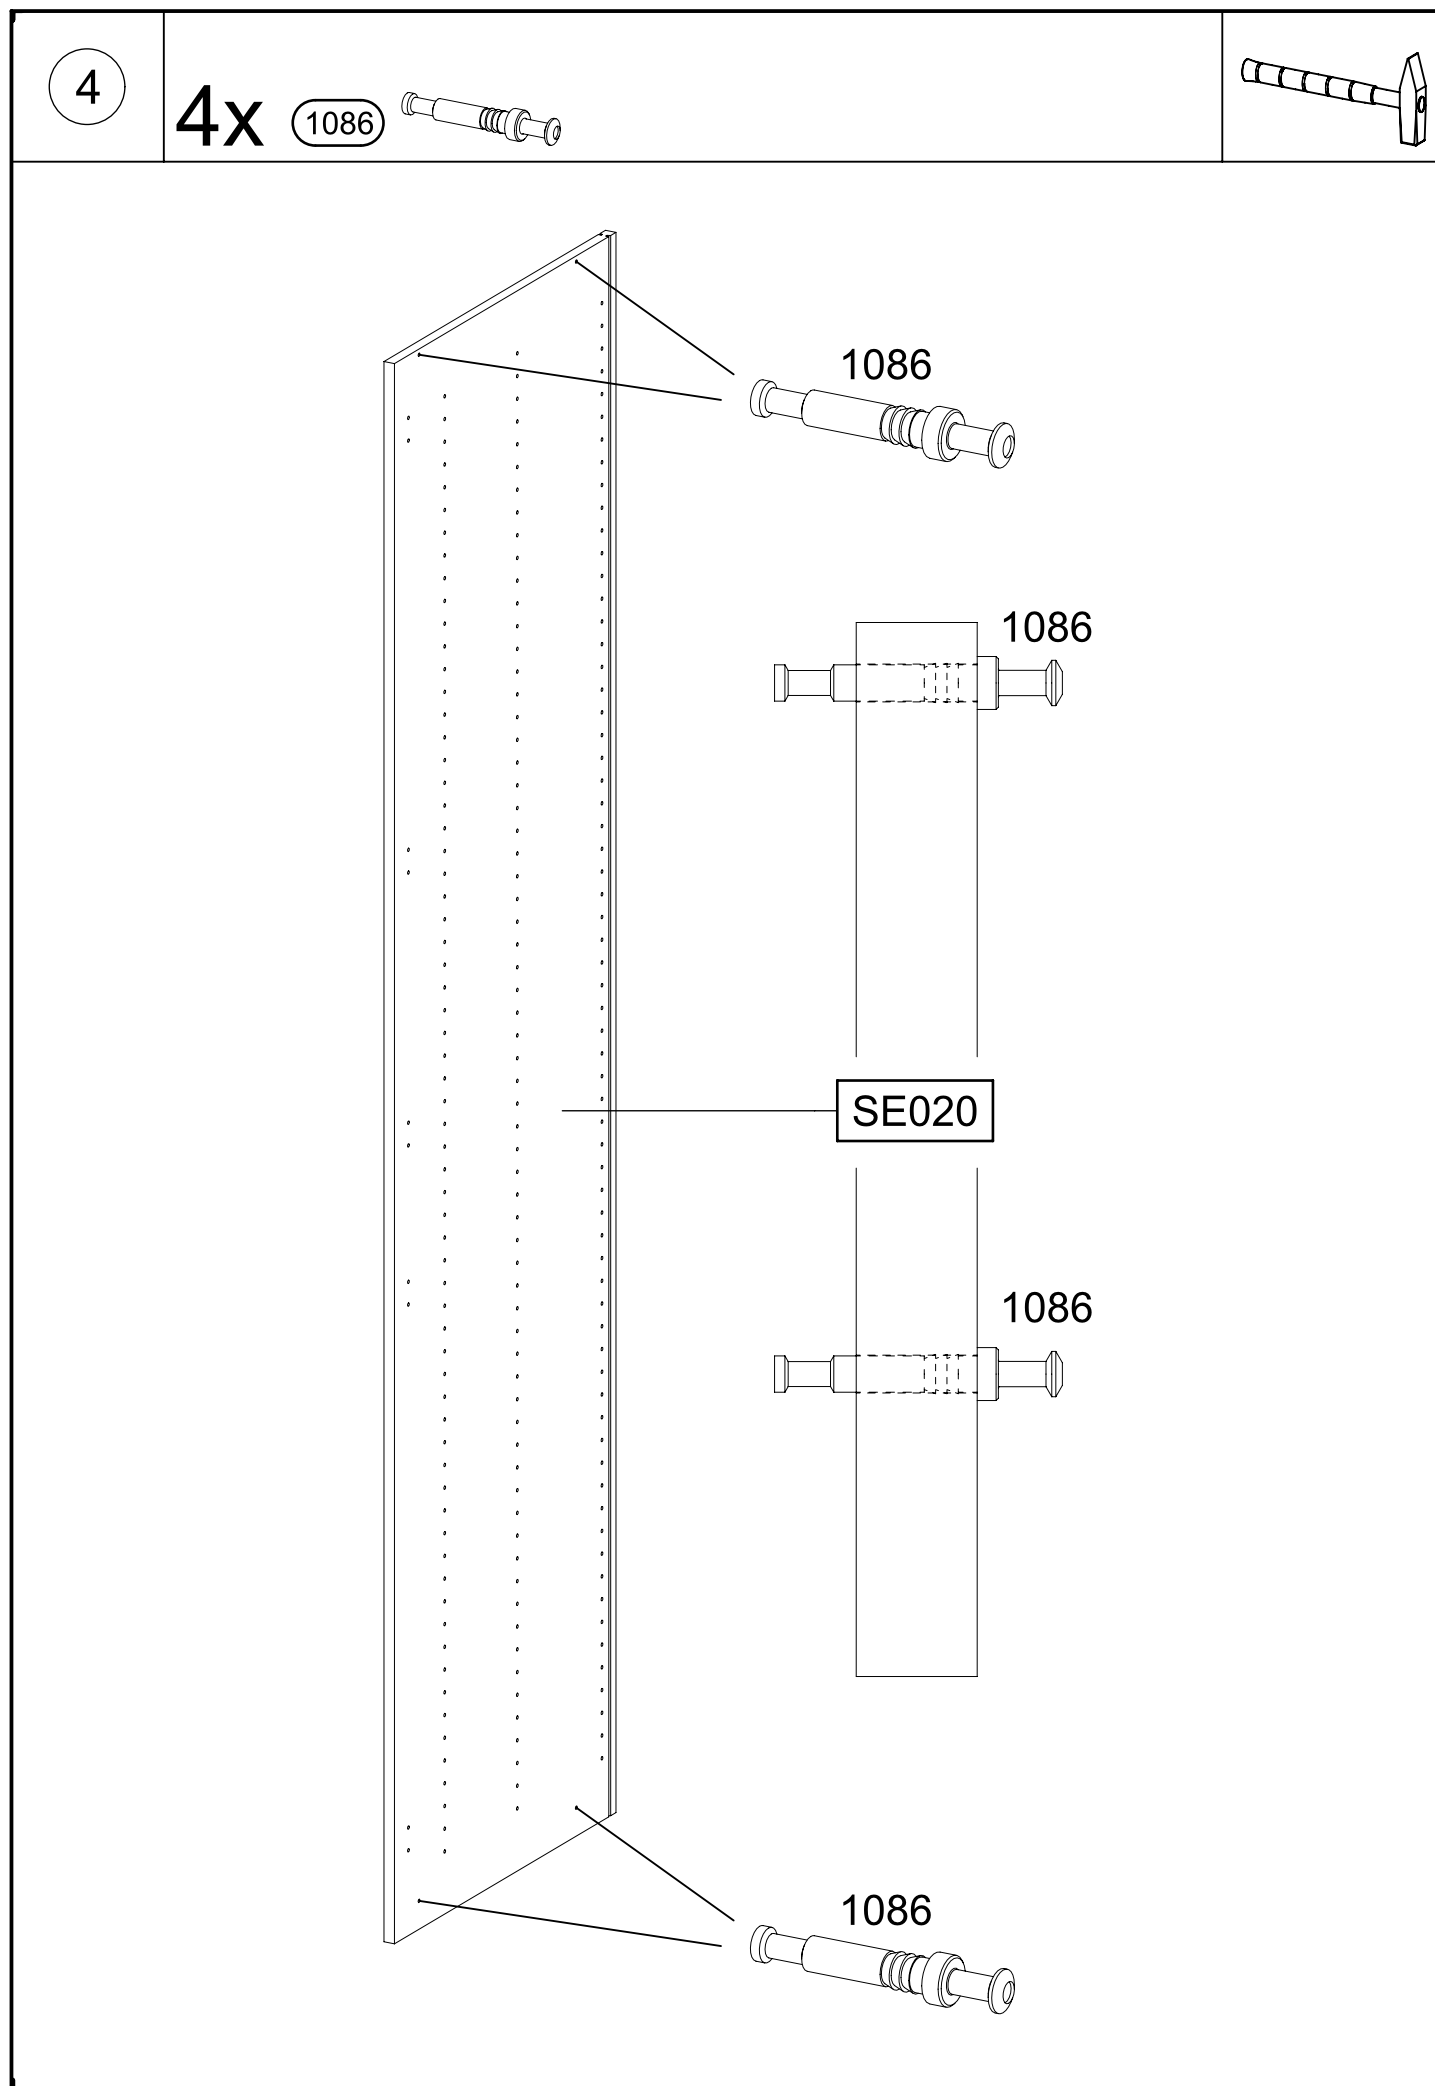

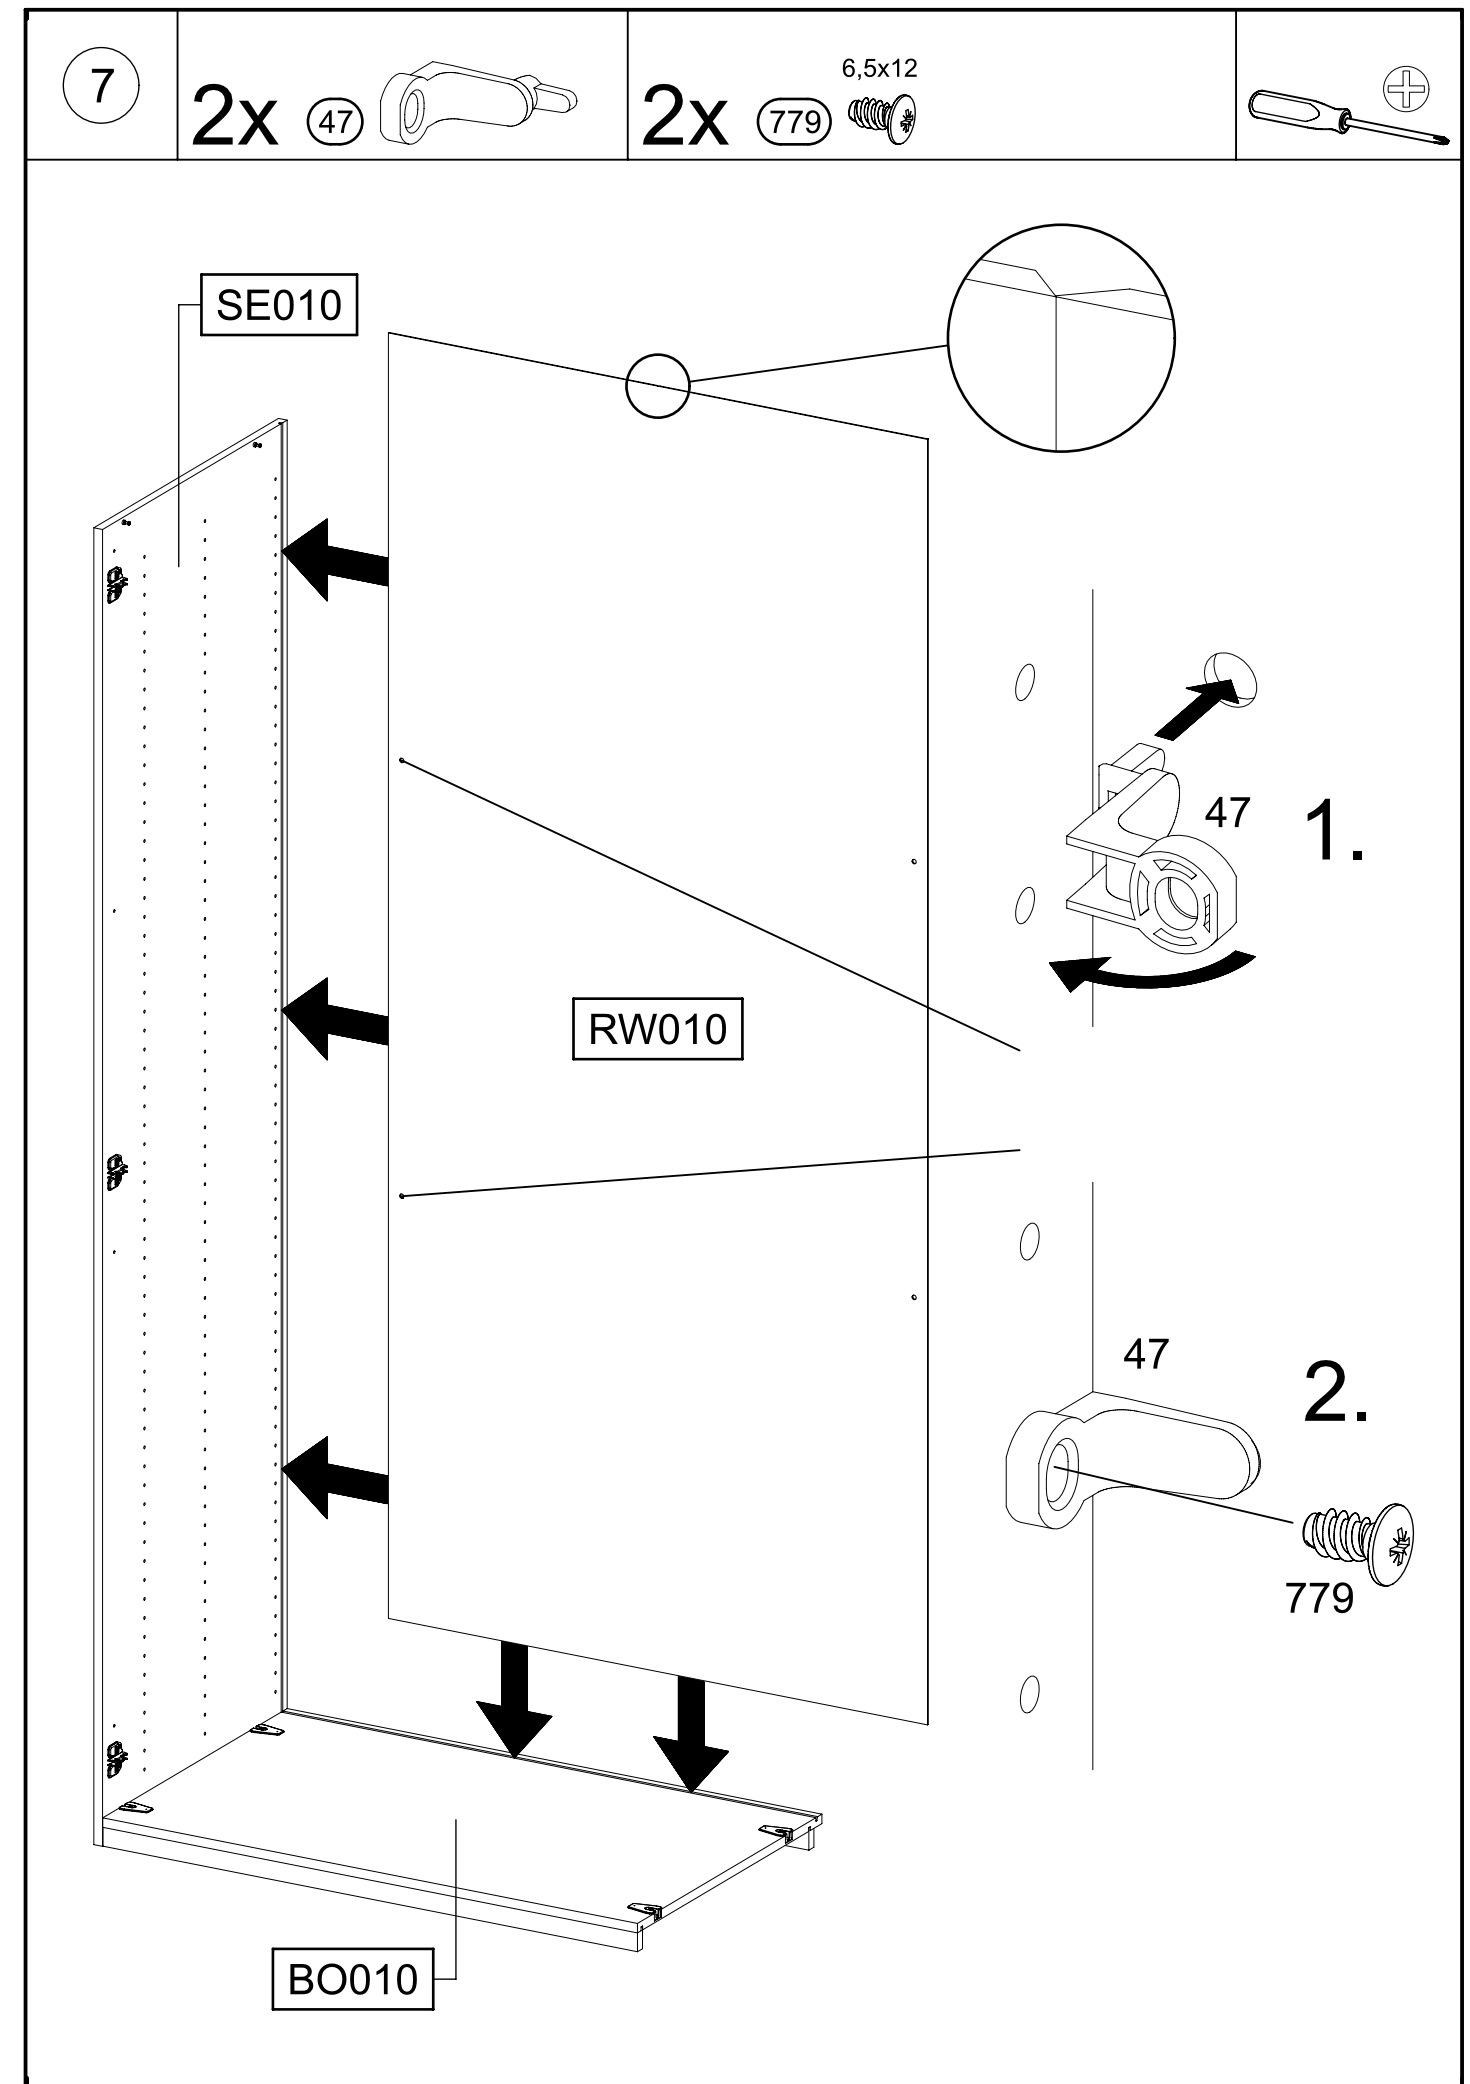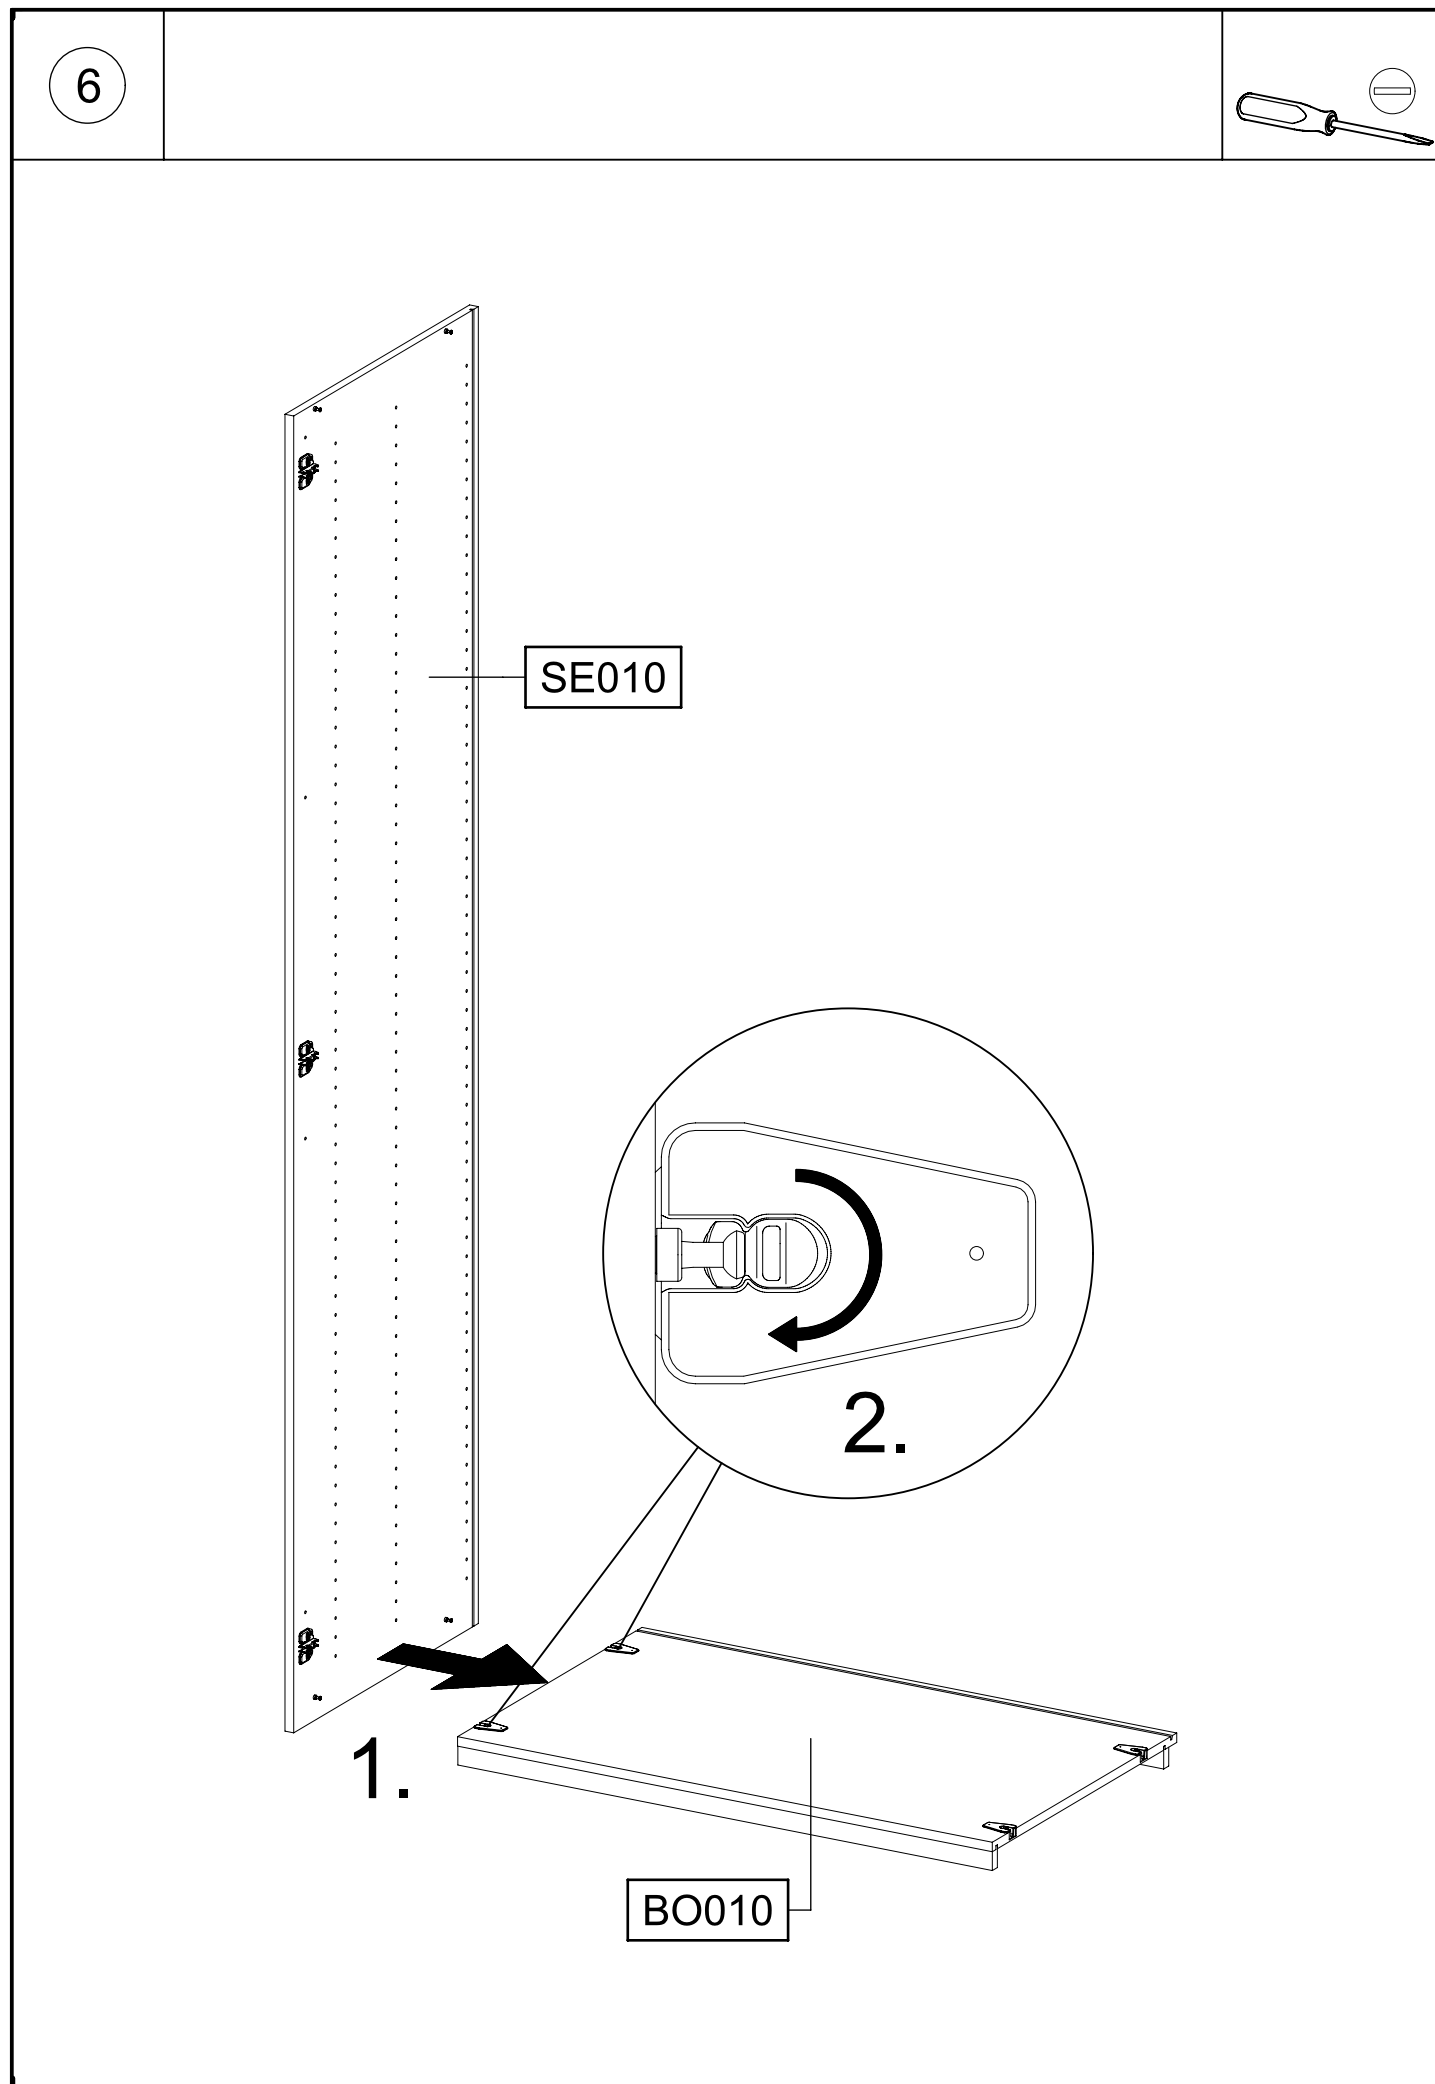


13.

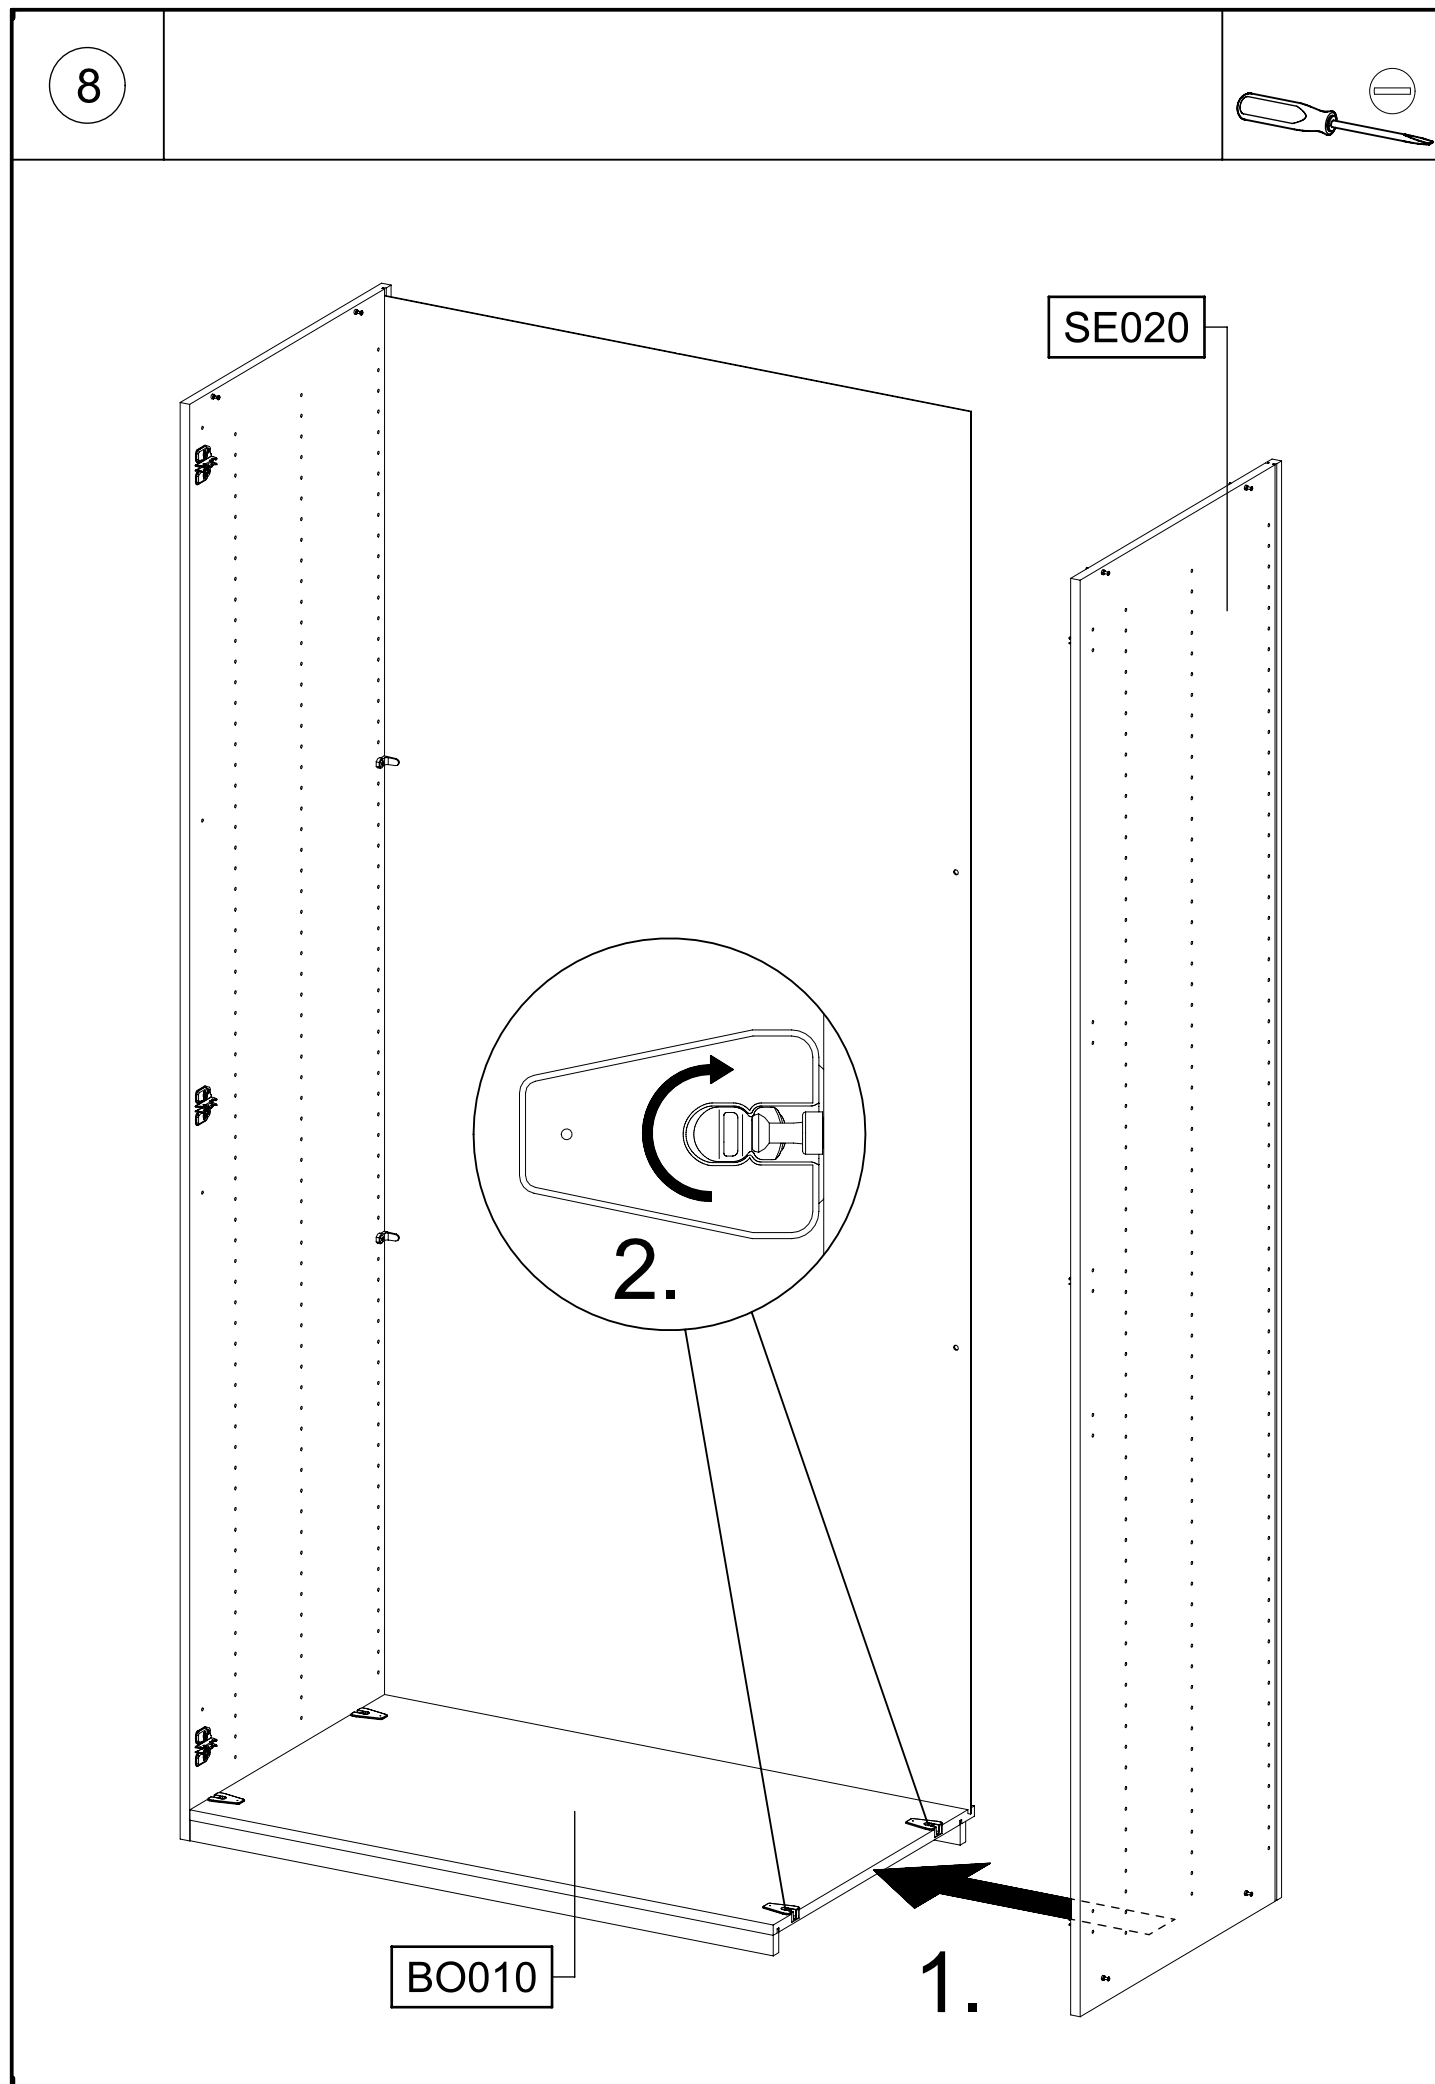


MD162

14.

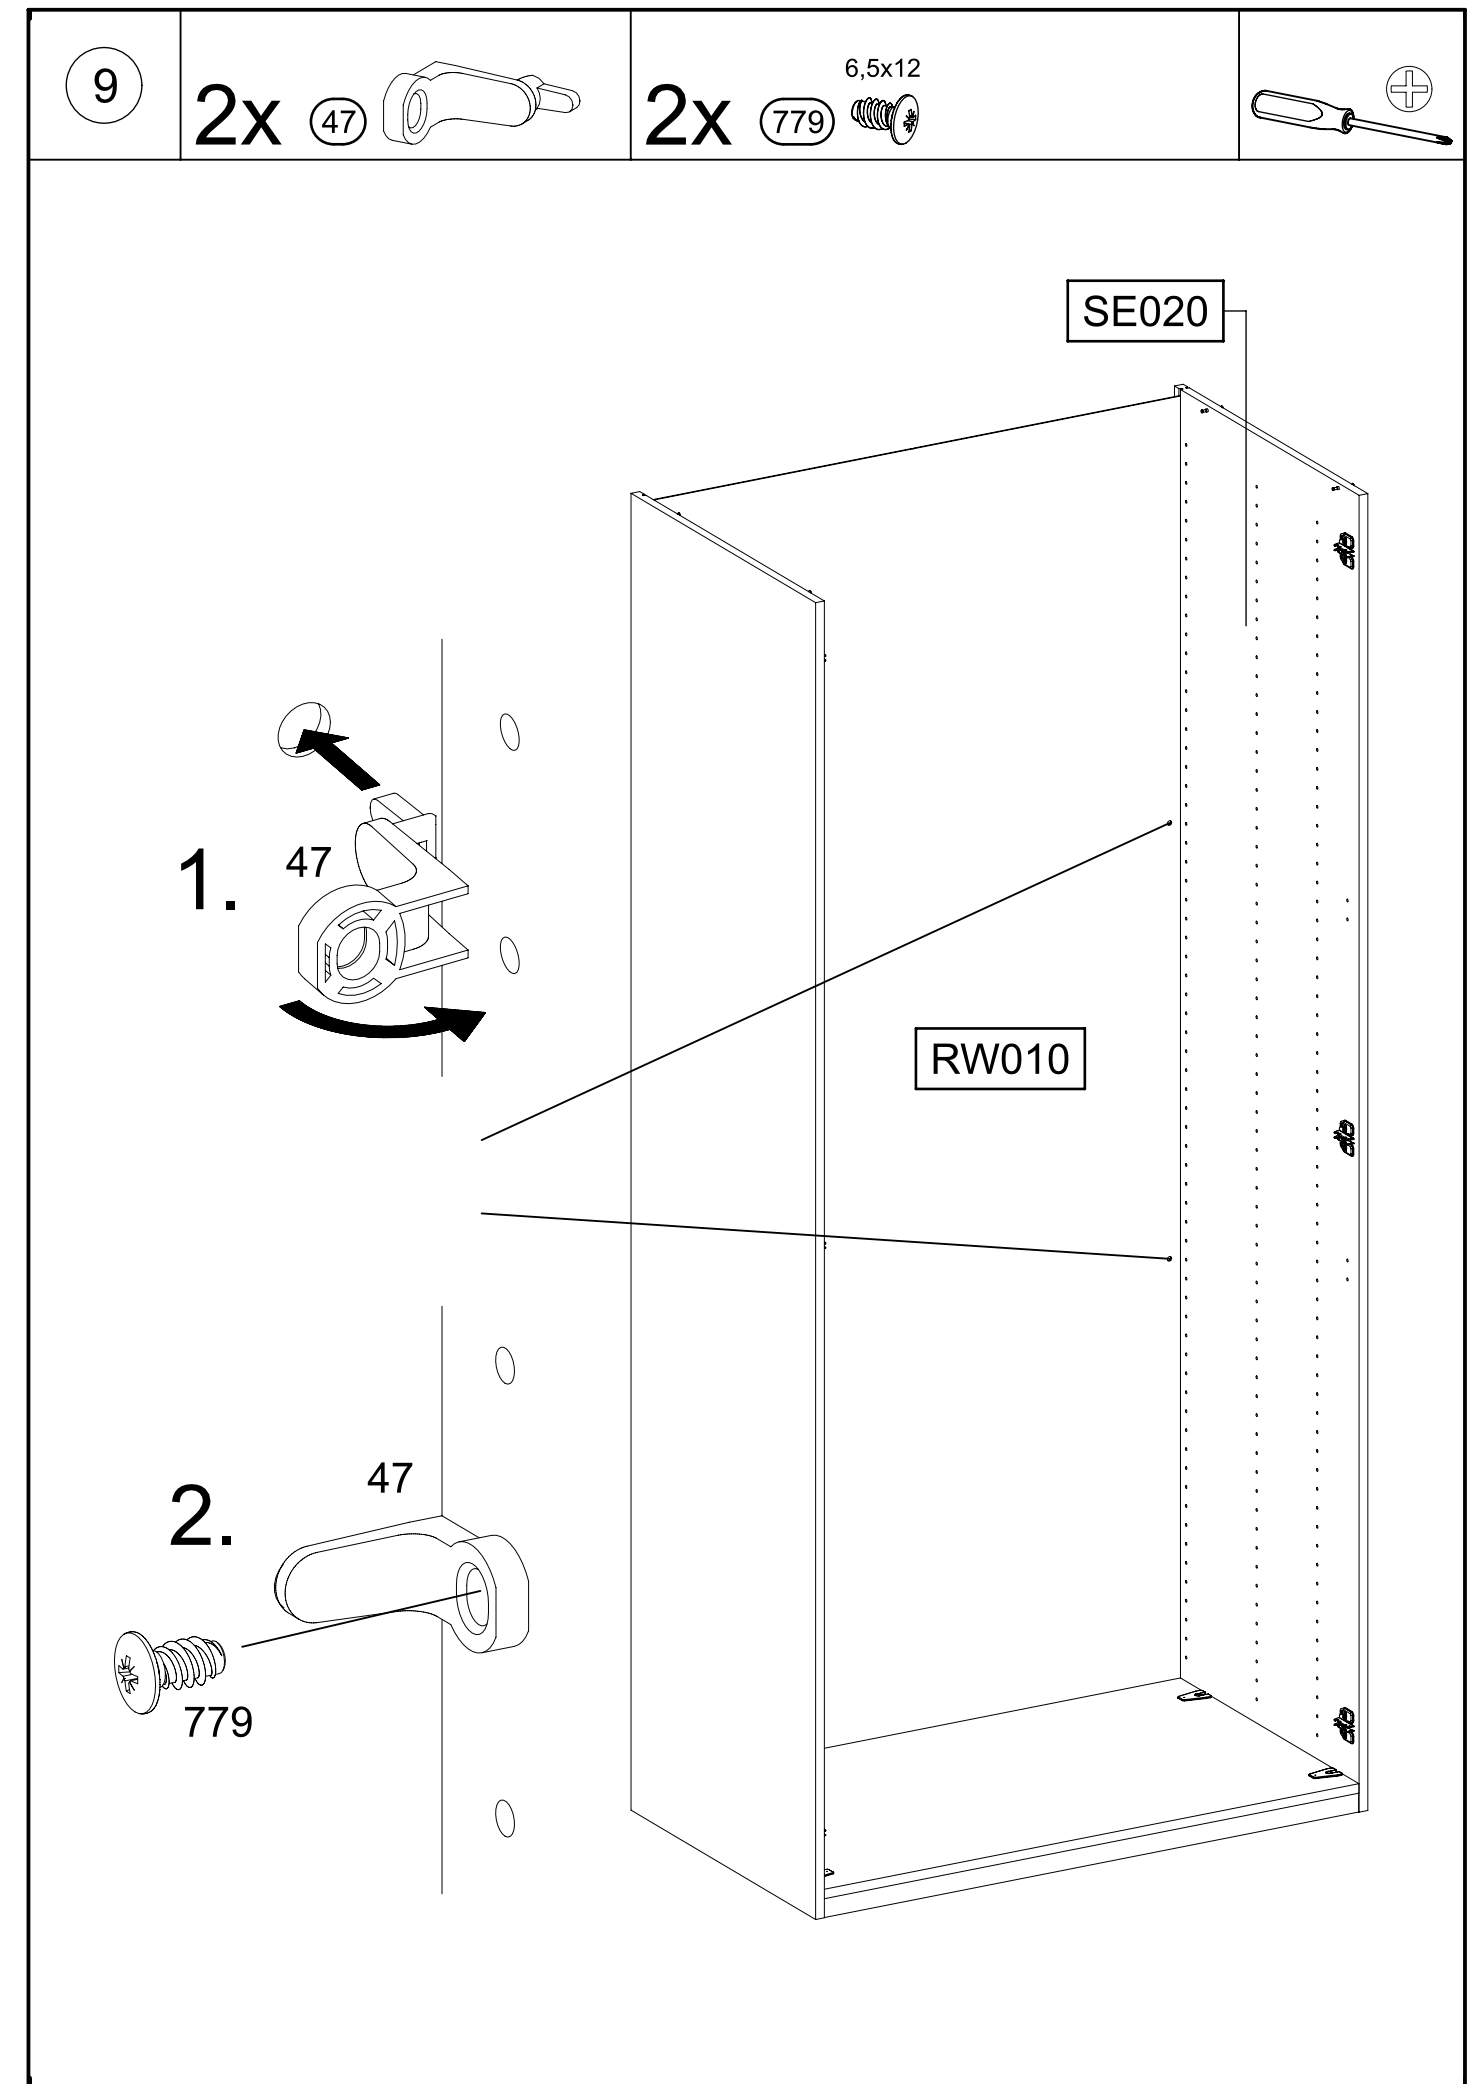


MD162

15.

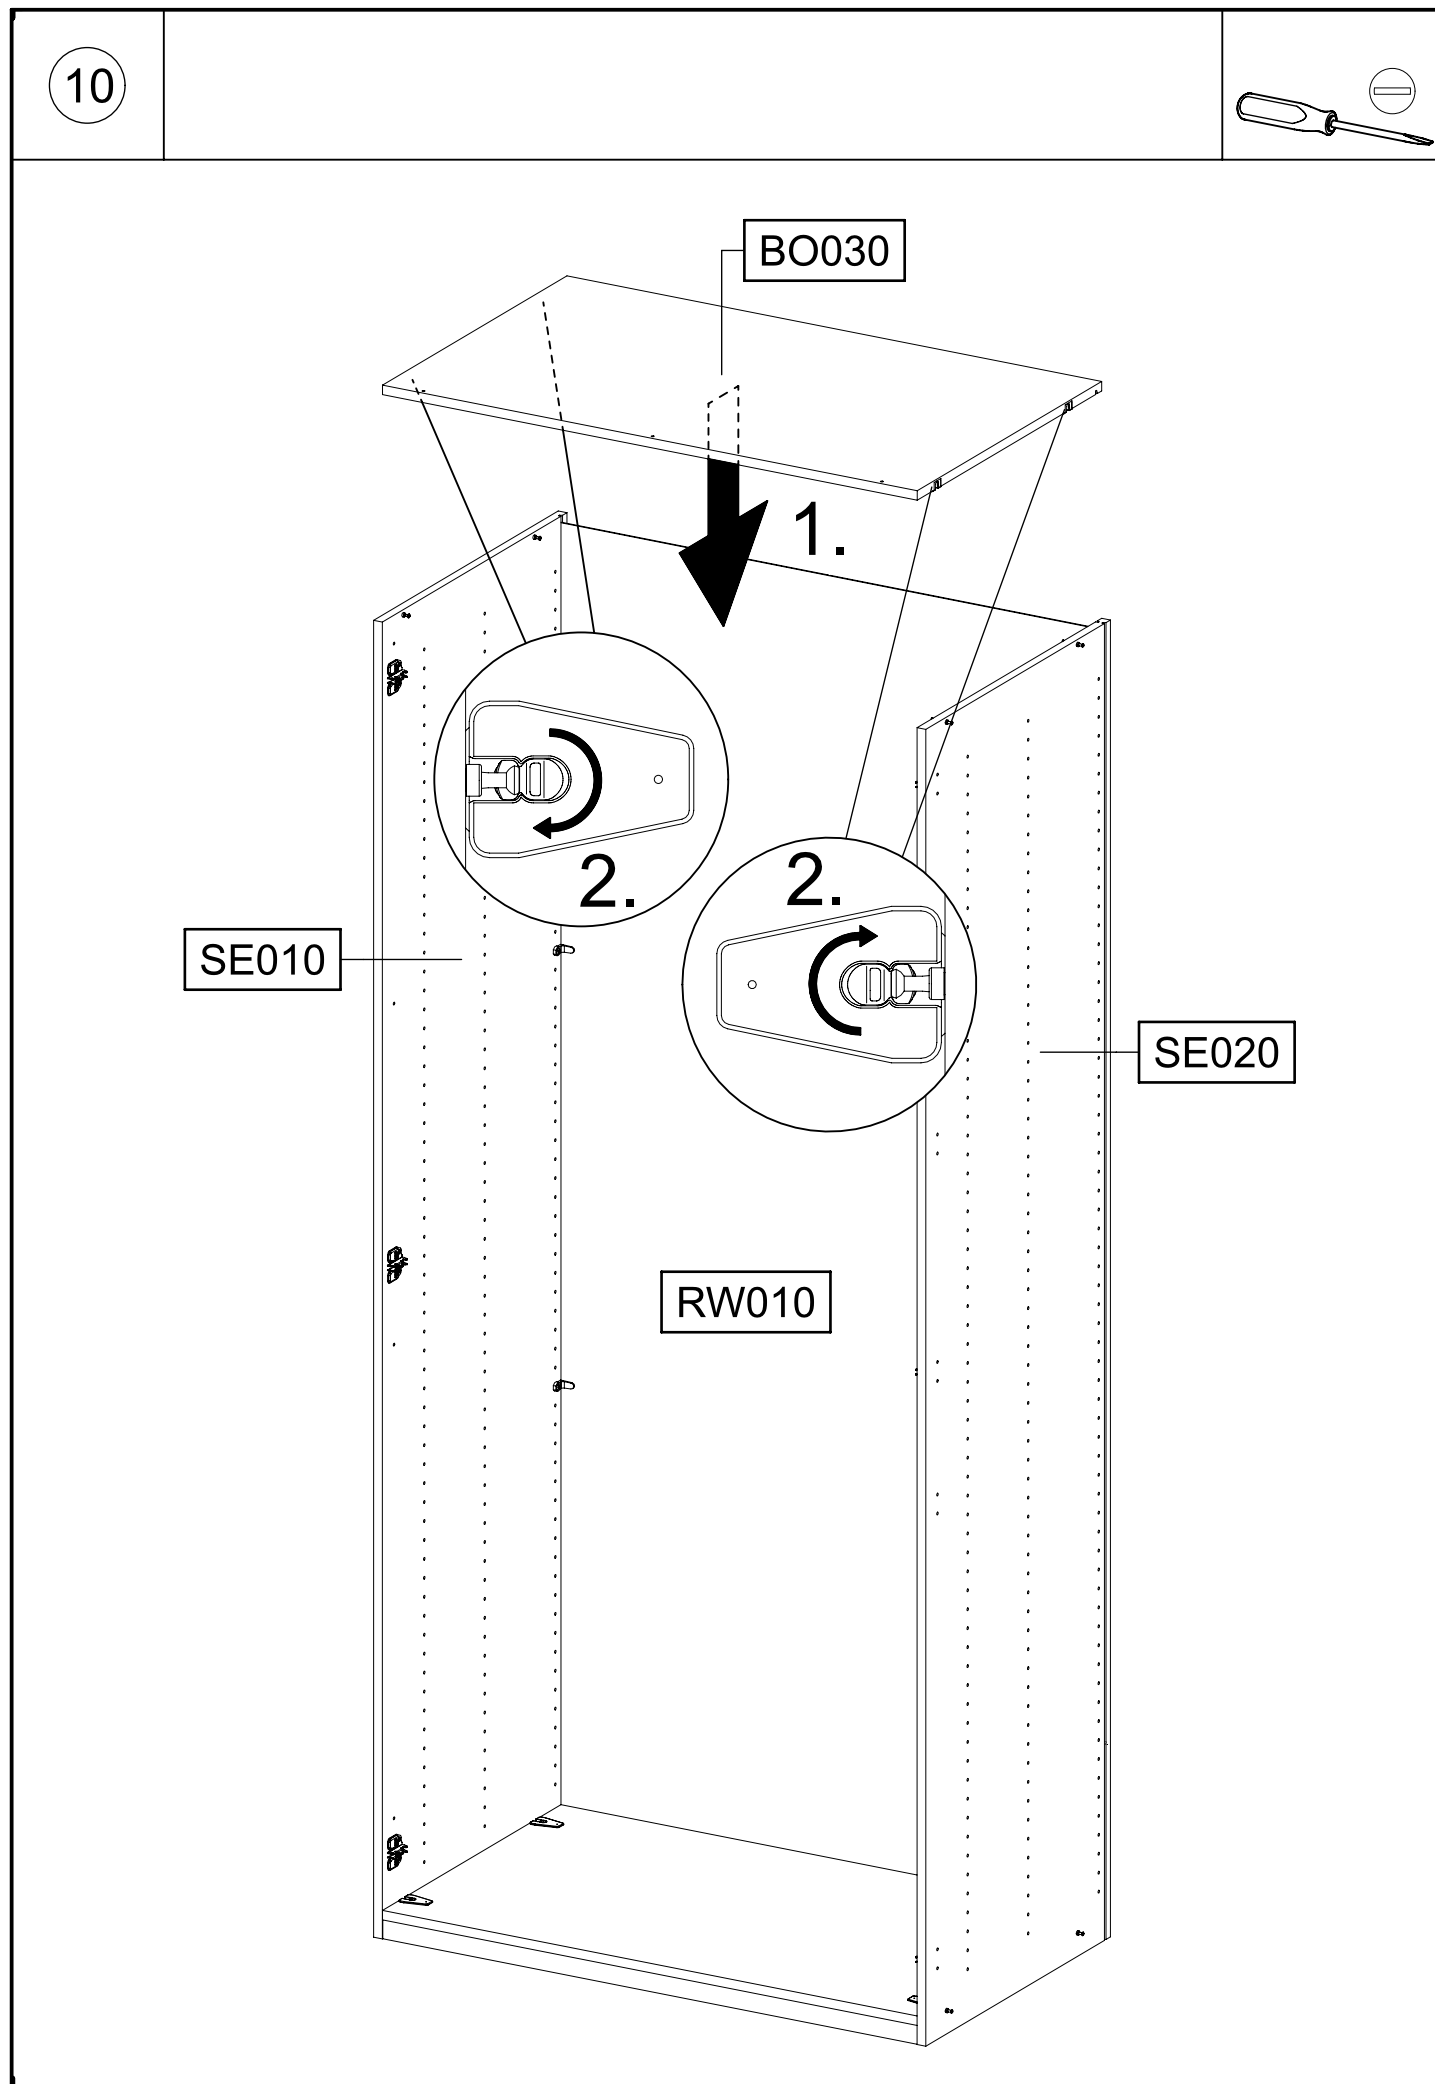


MD162

16.

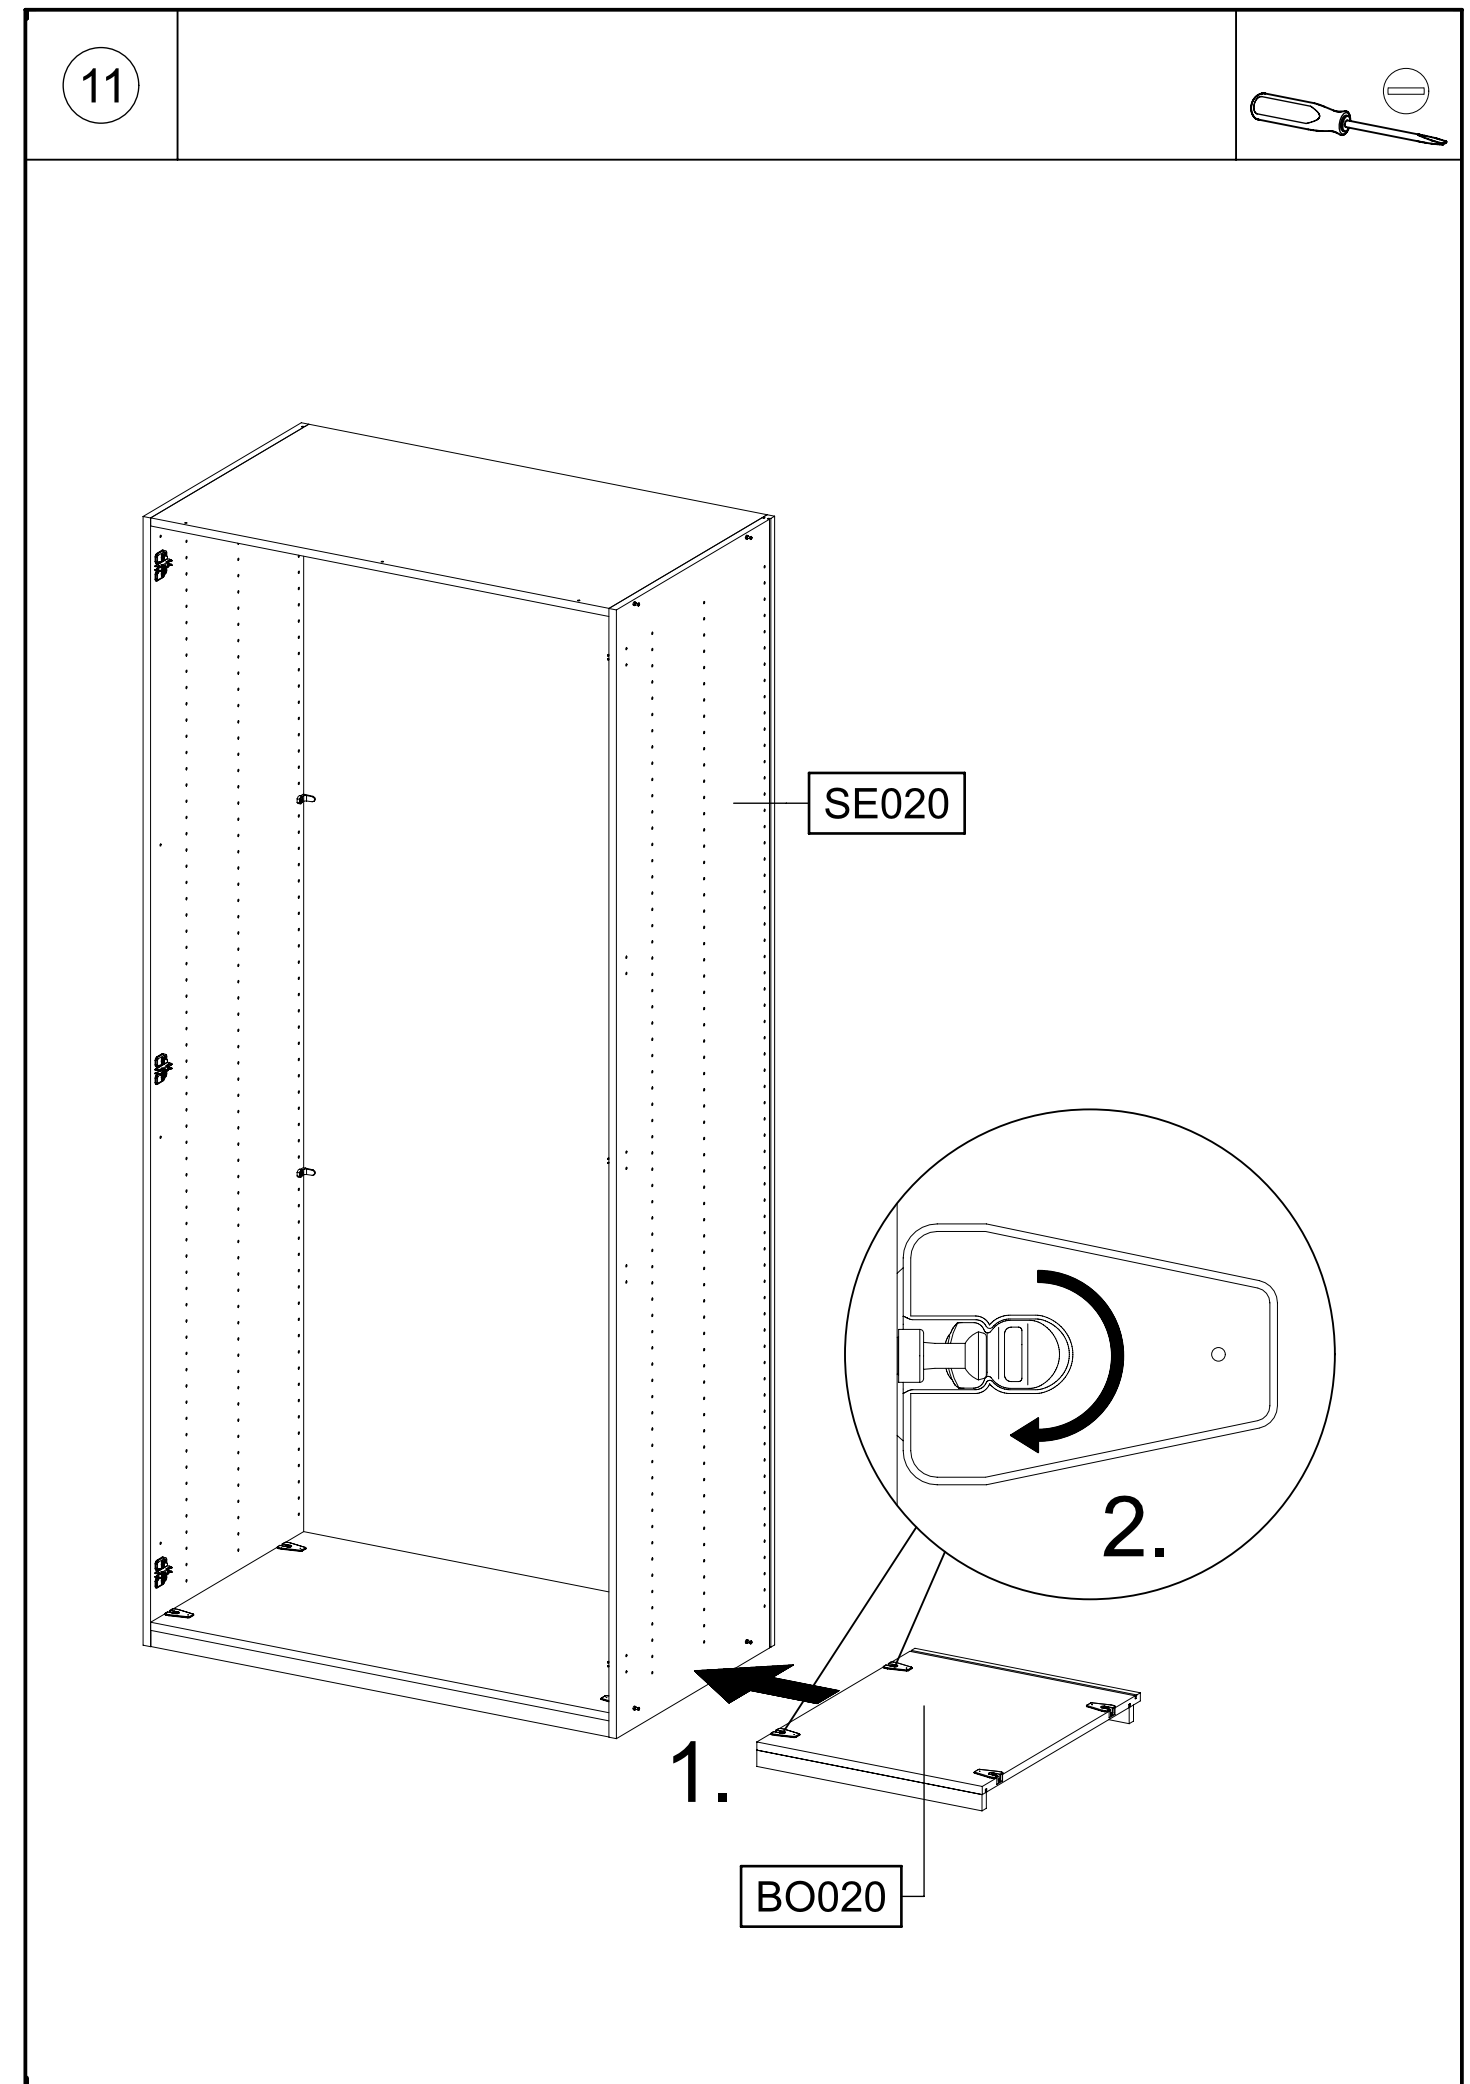


MD162

17.

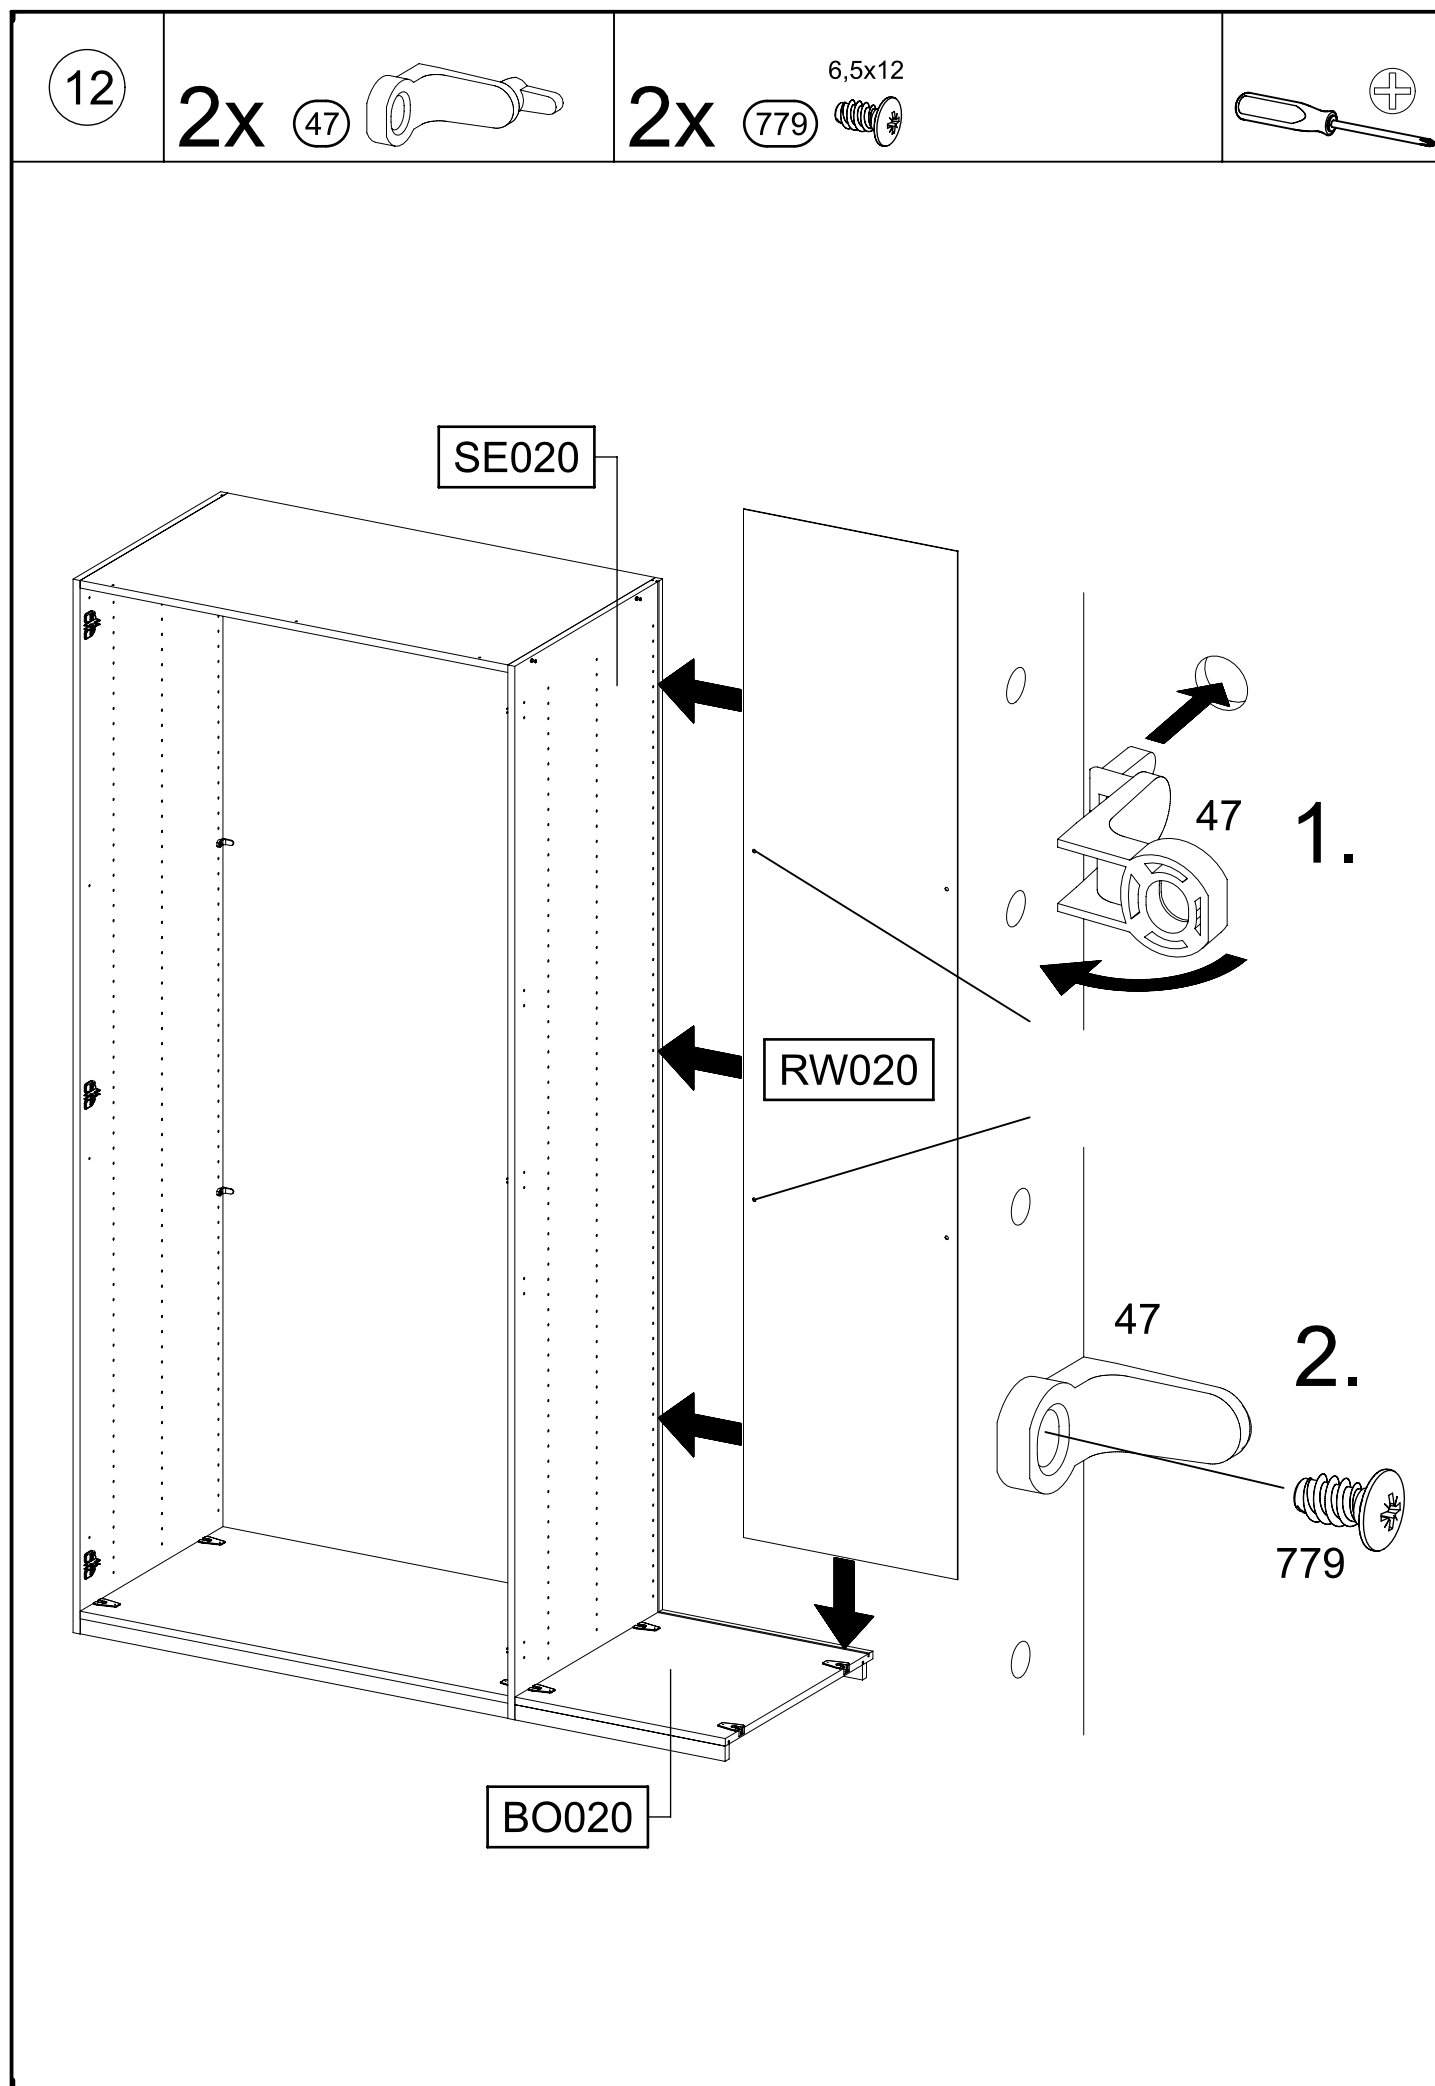


MD162

18.

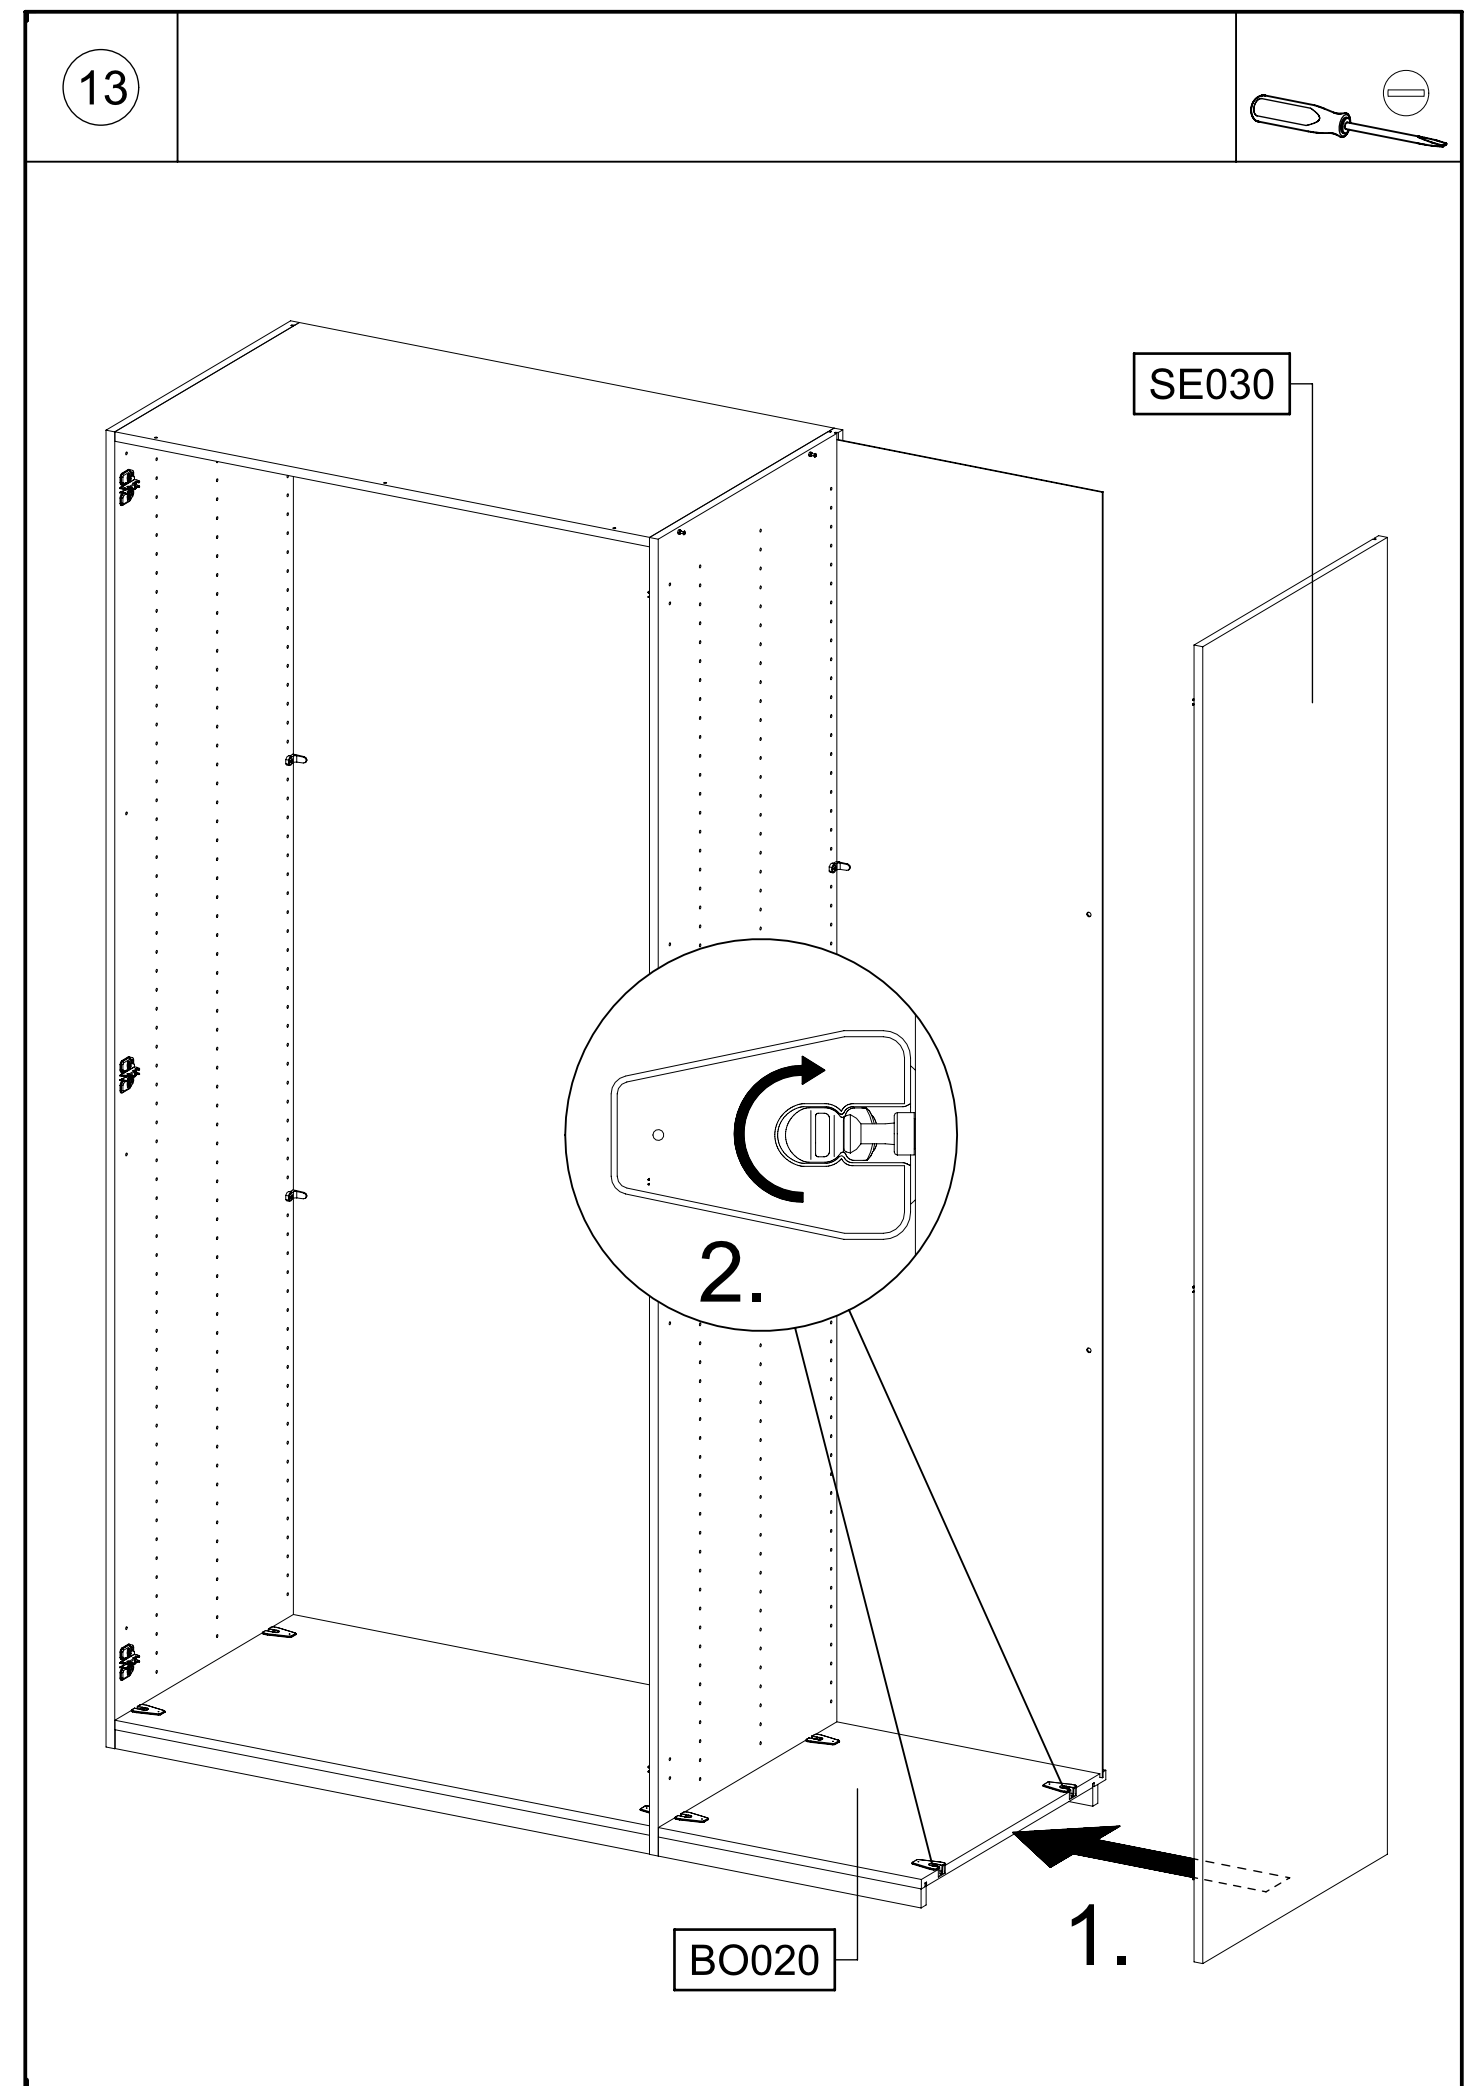


MD162

19.

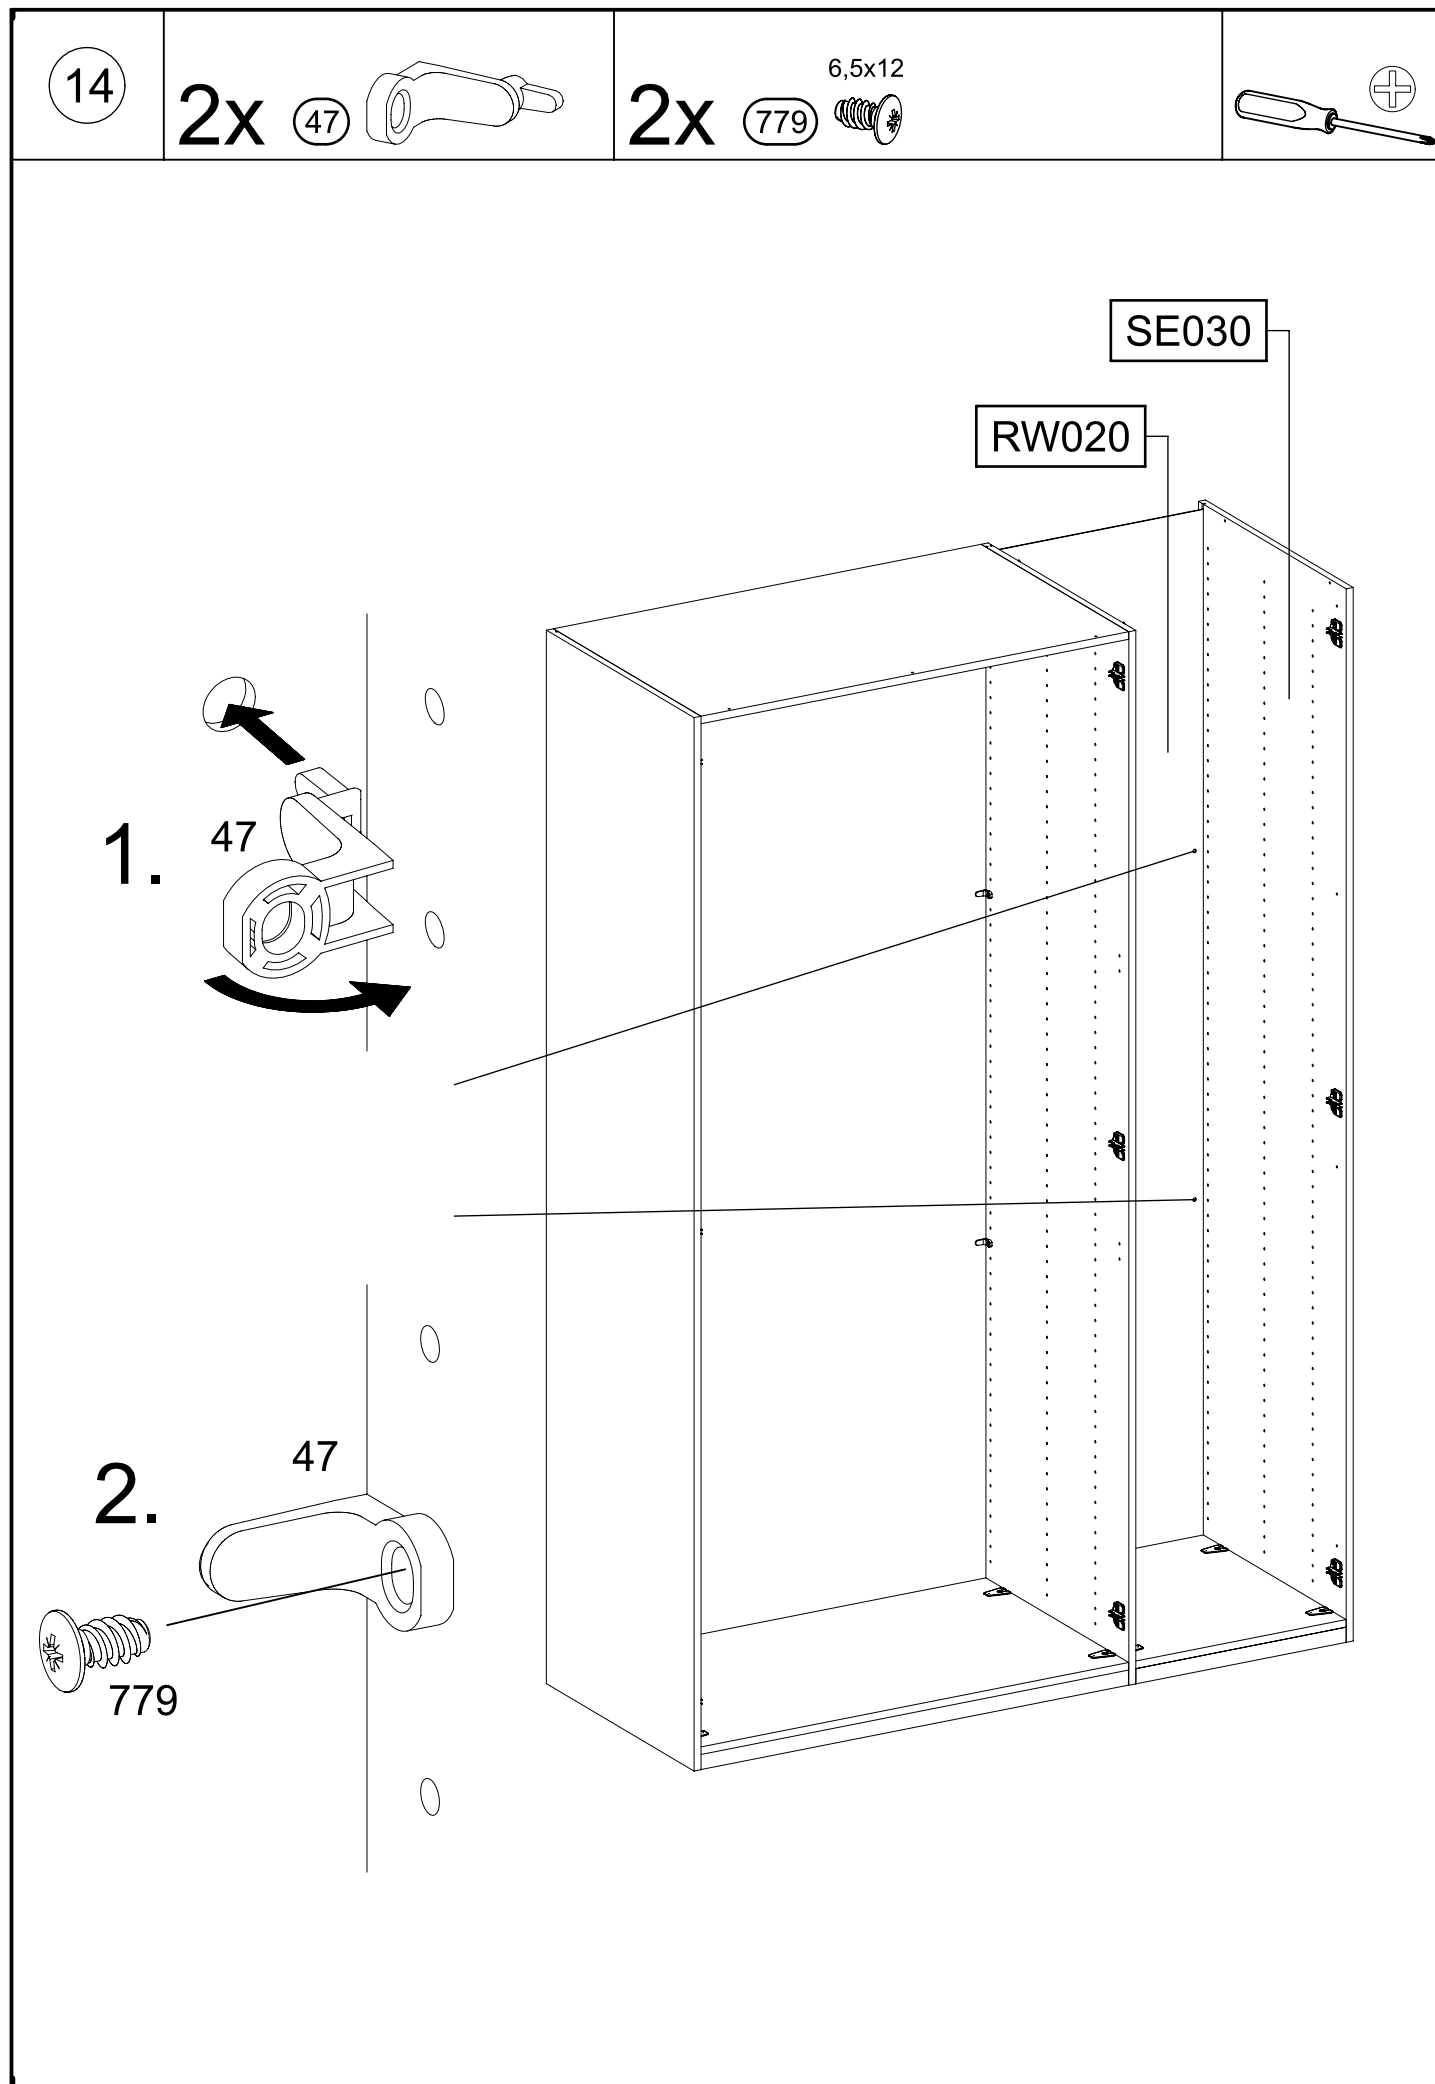

MD162

20.

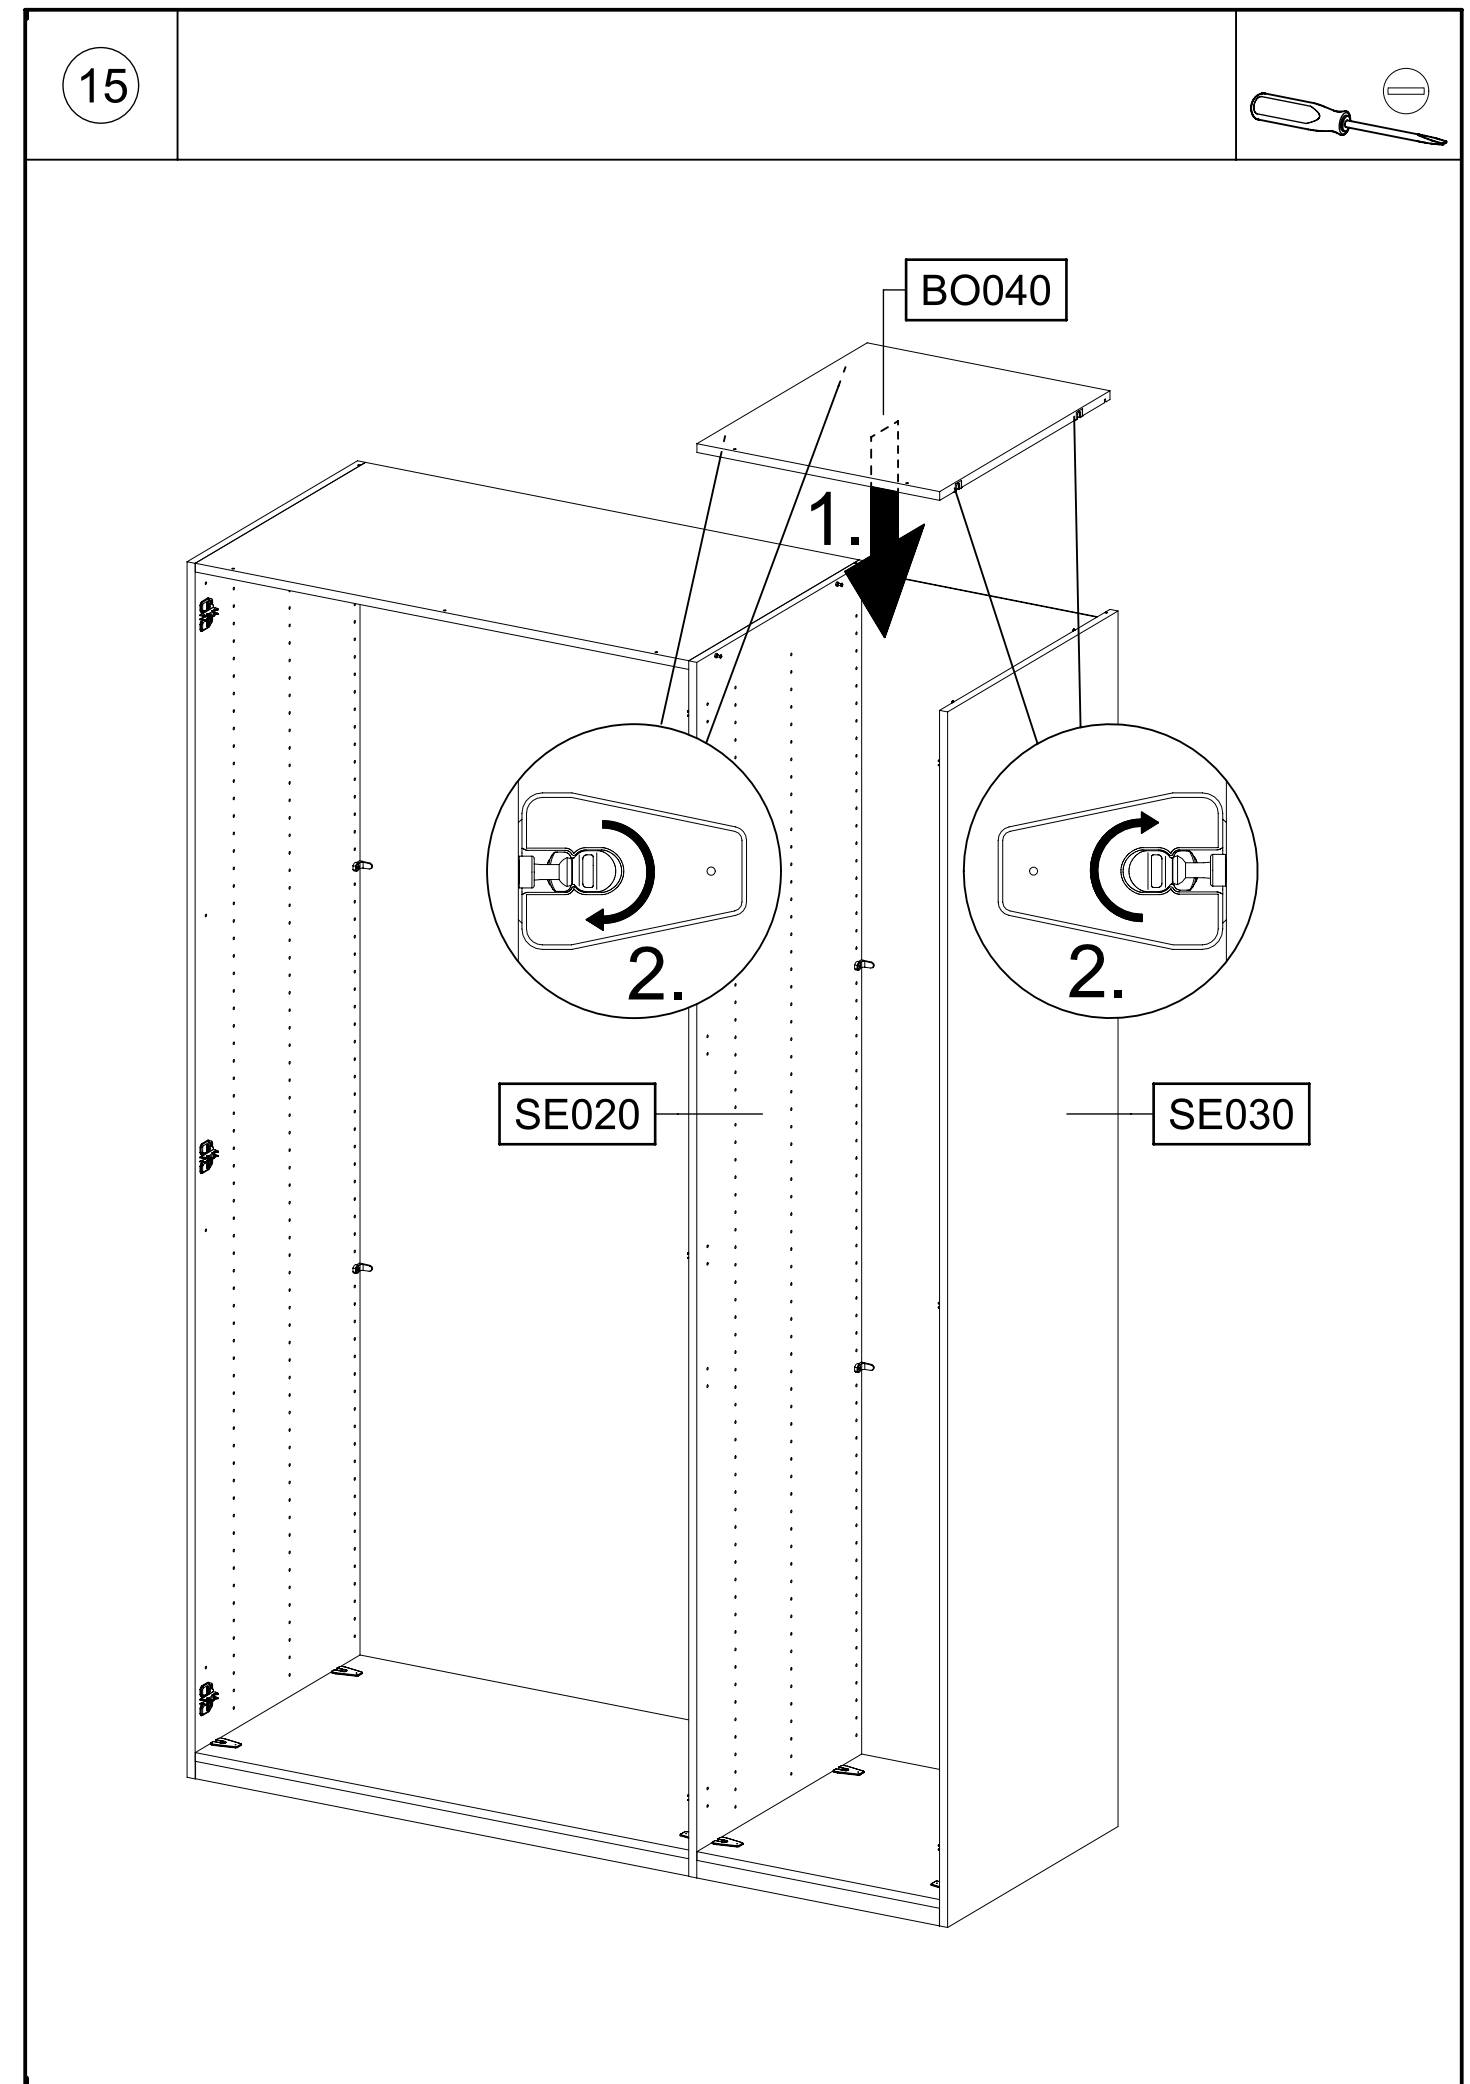

MD162

16

16x


1089



WA010



2.

WA020

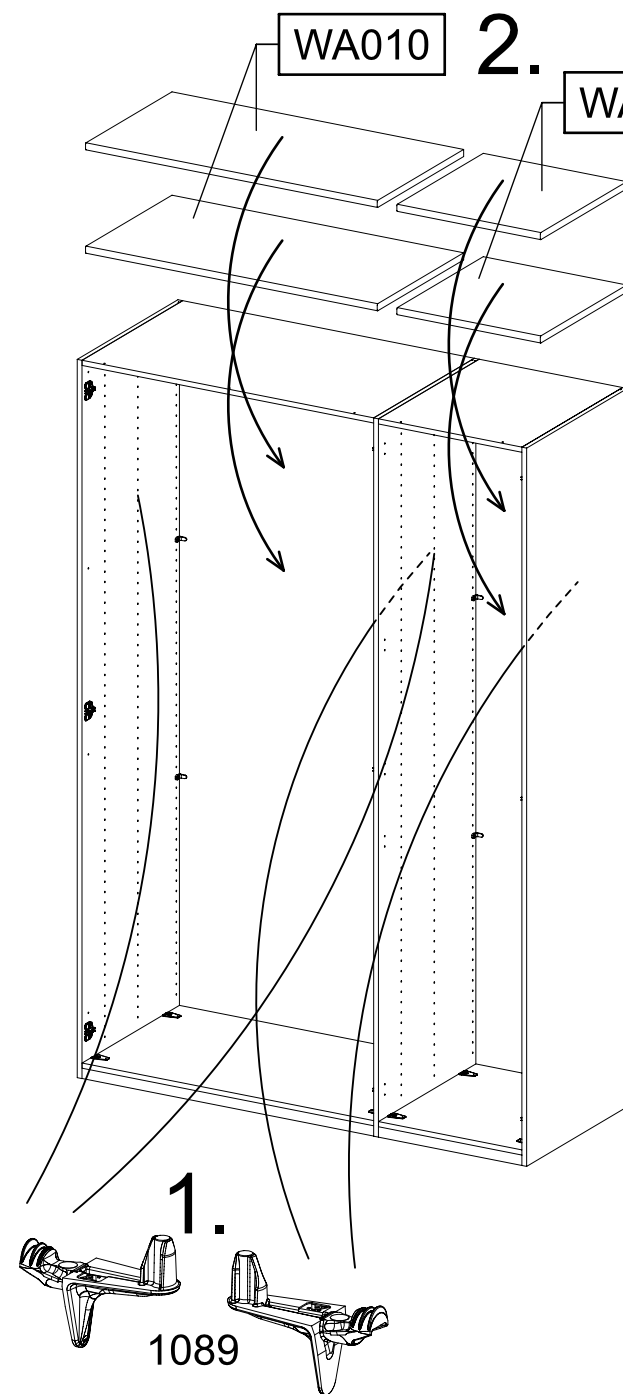

1.


1089

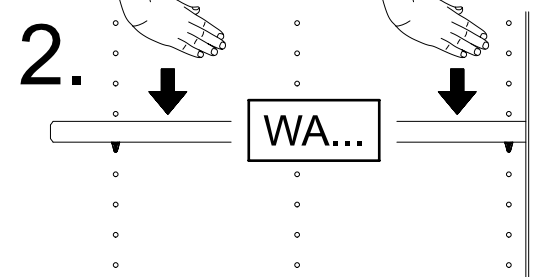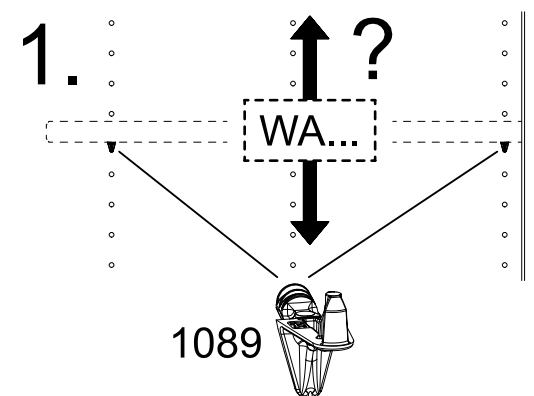

17

4x


29

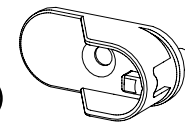

4x

205


3,5x15



KS010

KS020

2.

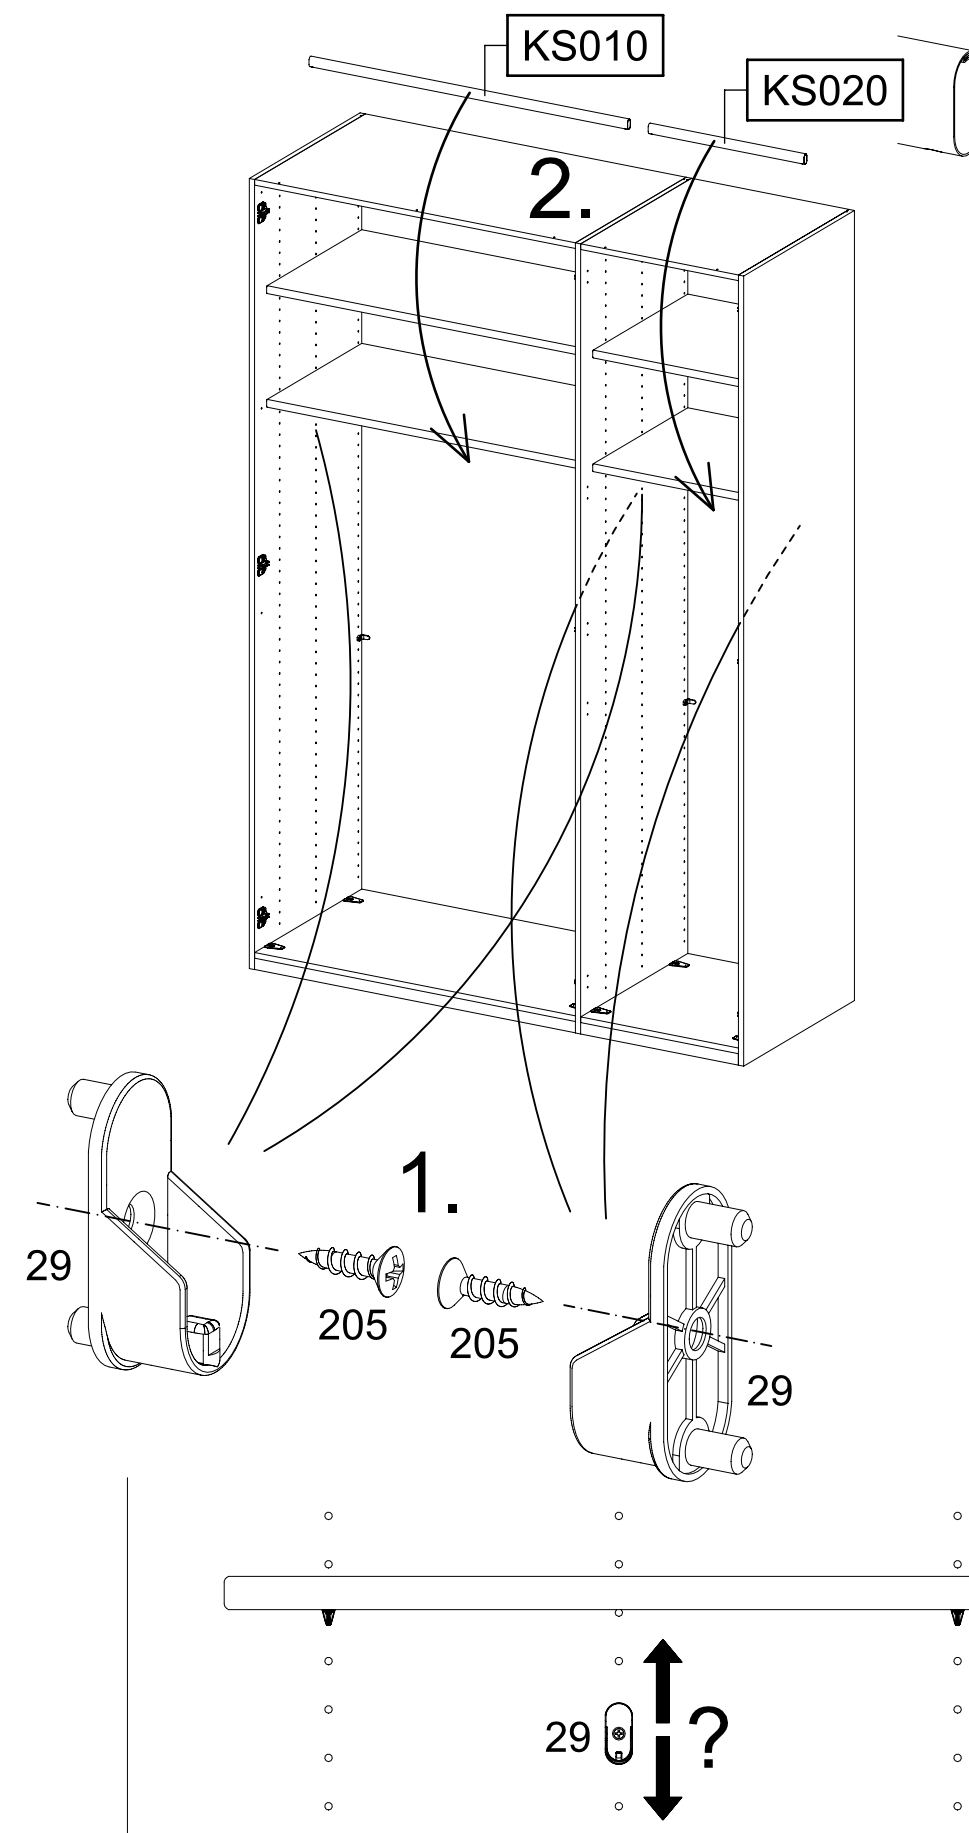

1.

29

205

205






29

29




?

18

9-12x (1292)

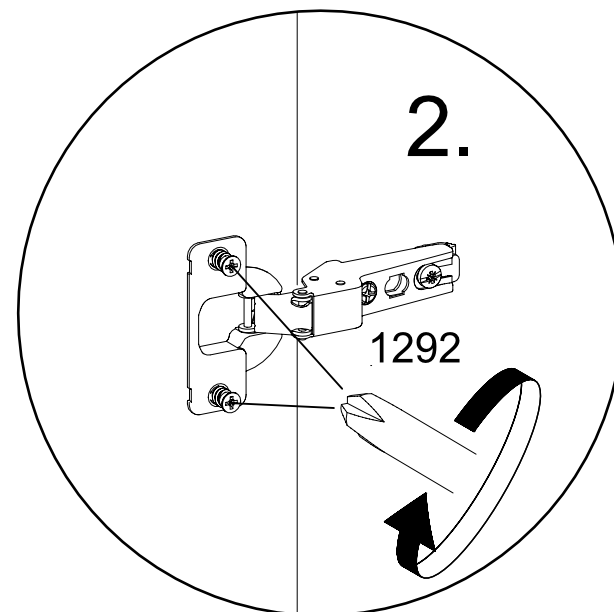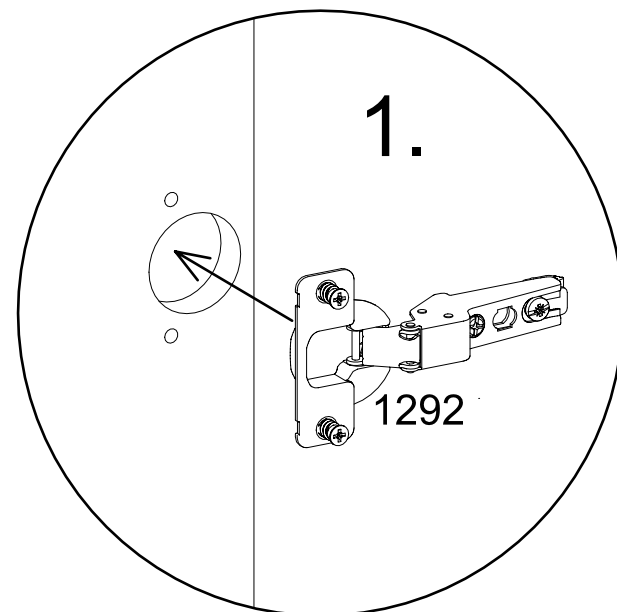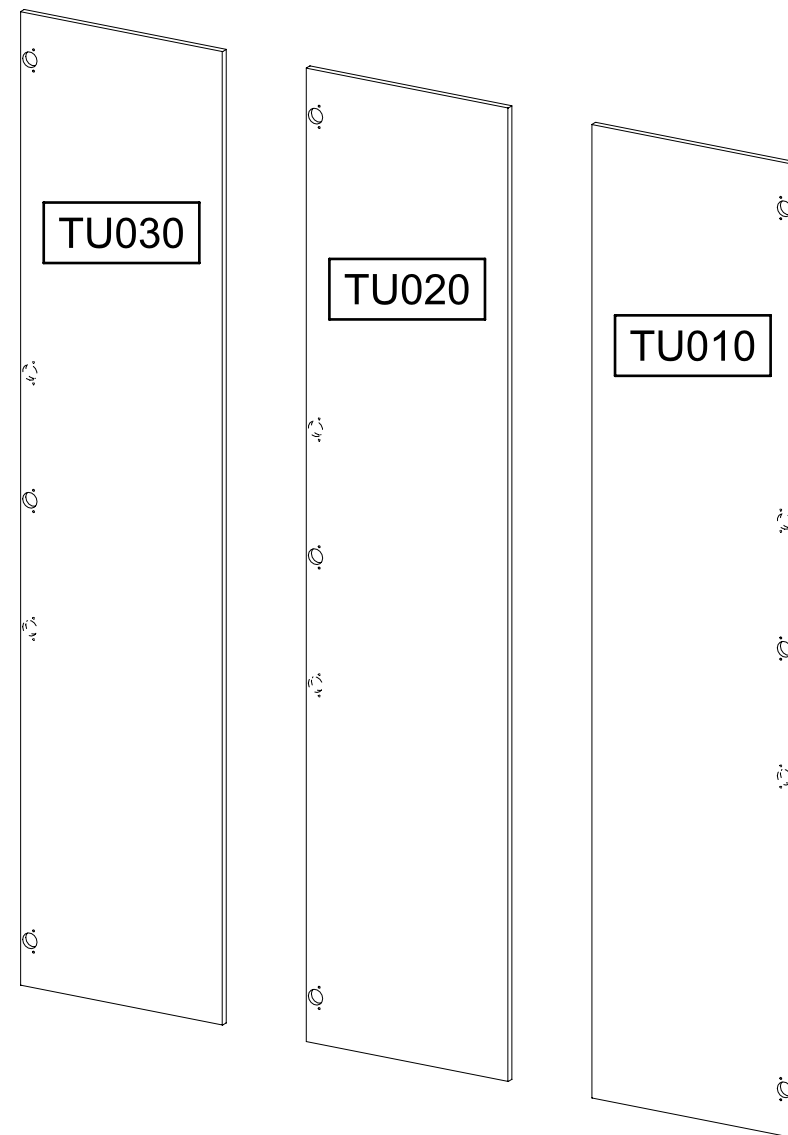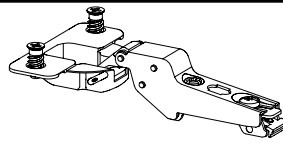

19

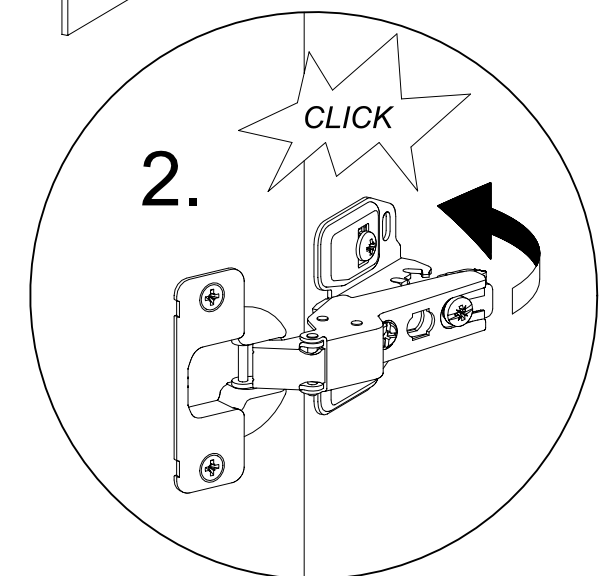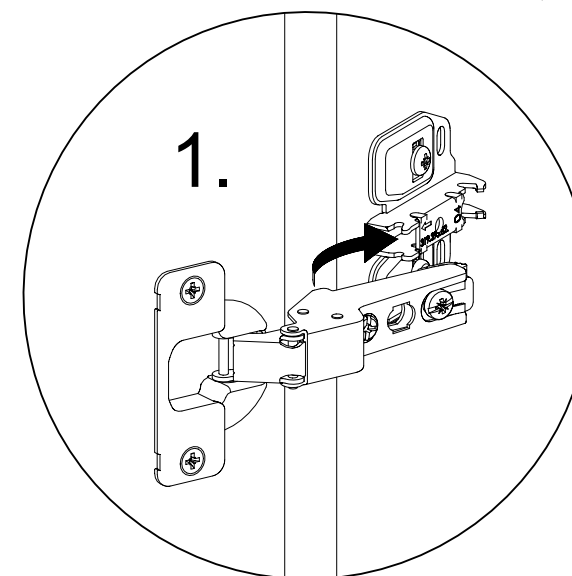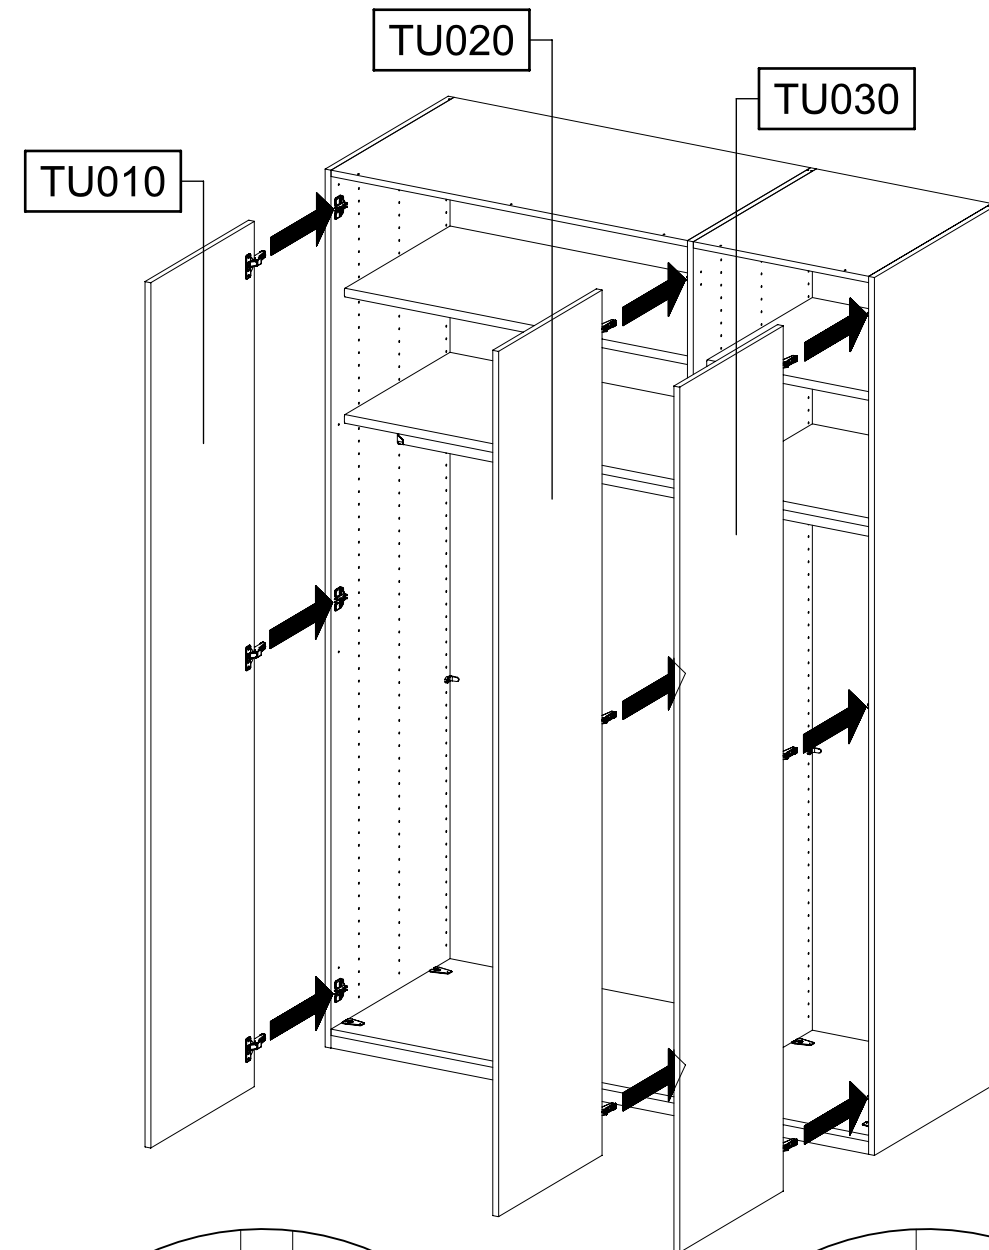


20








0-6x



12




55x16x6,2



21

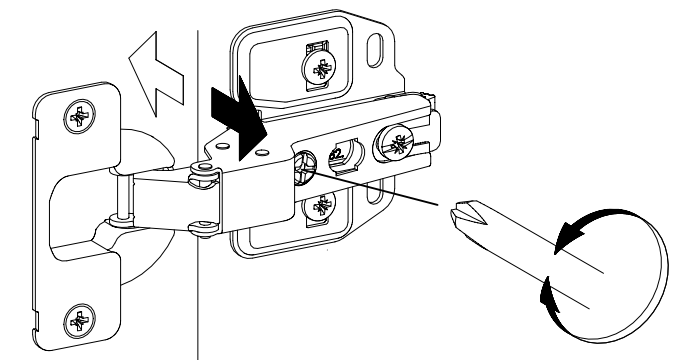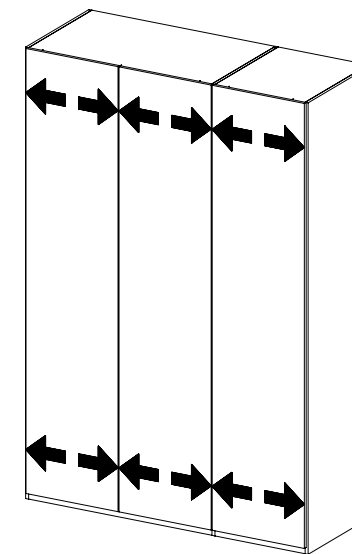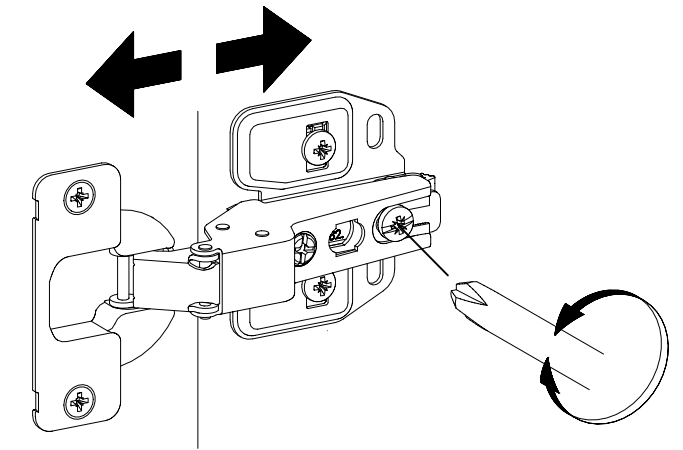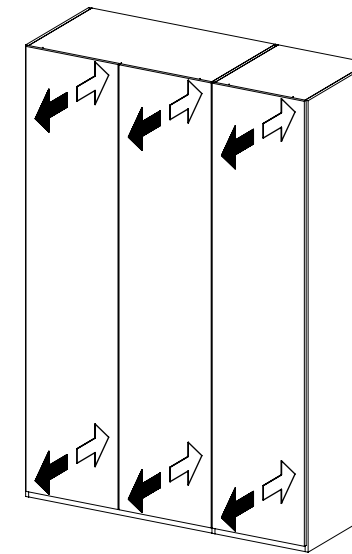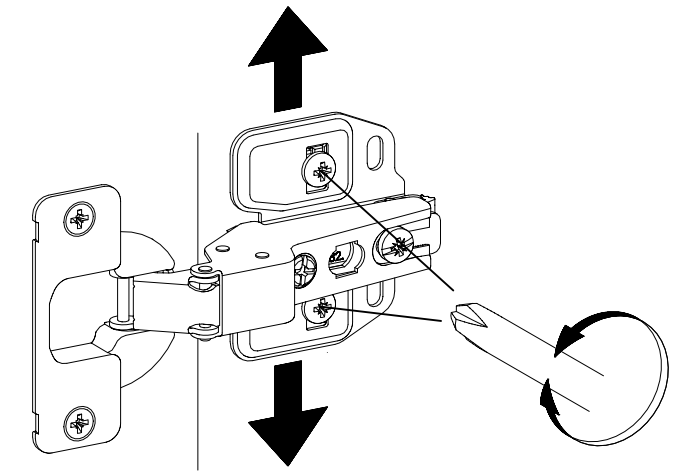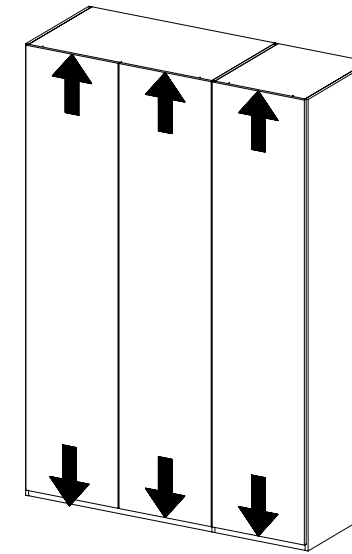

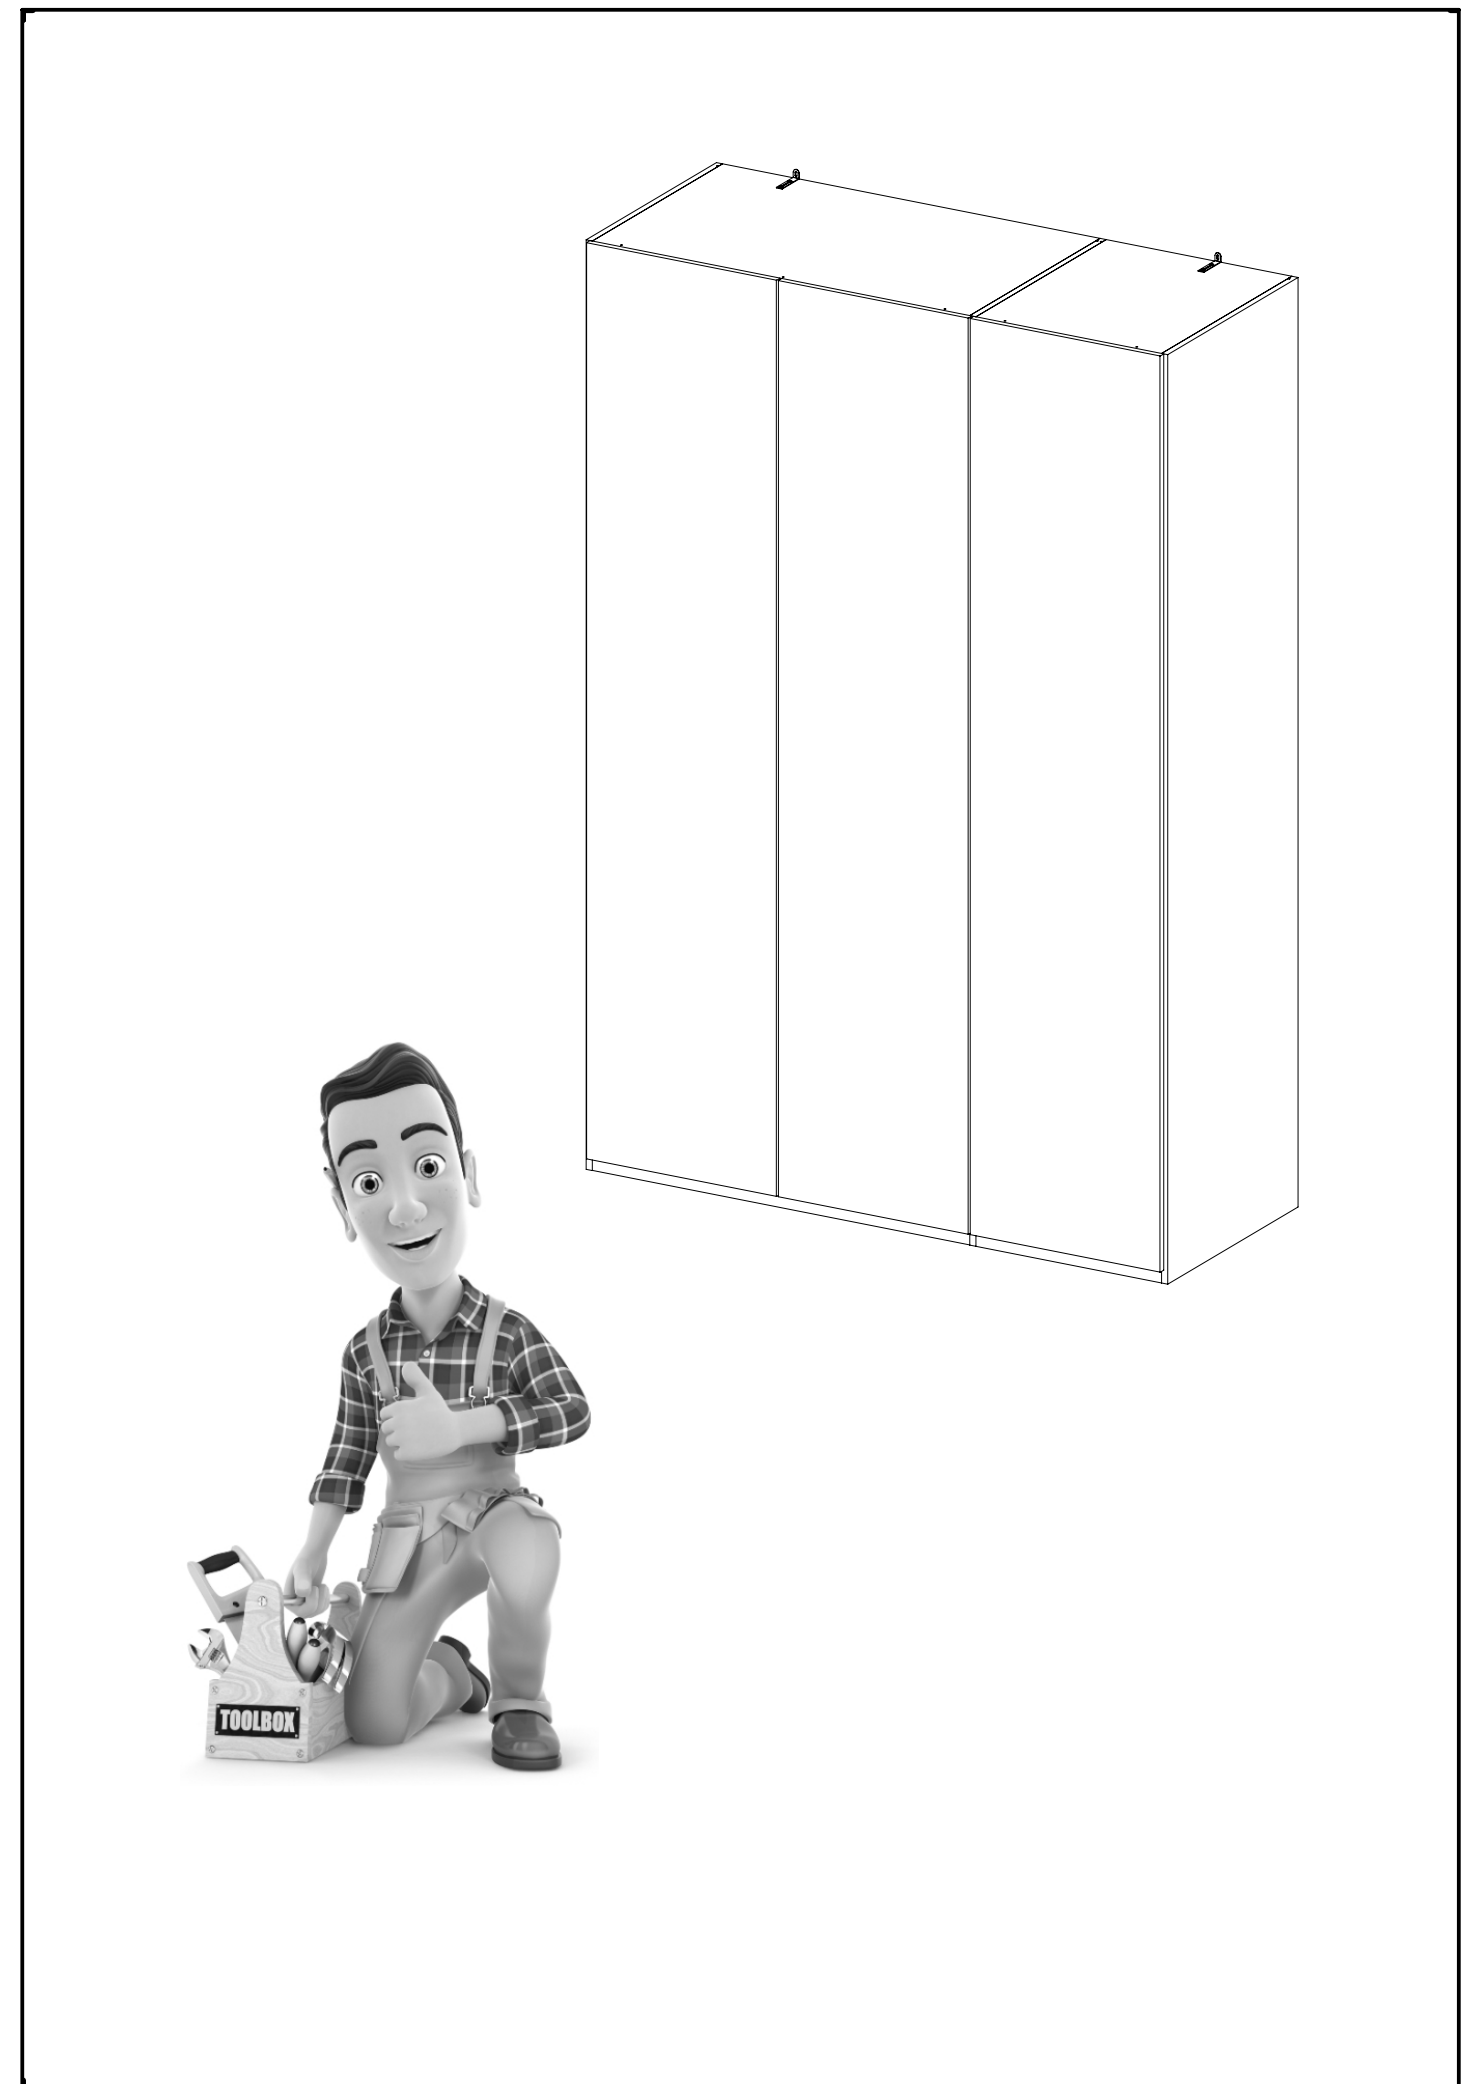
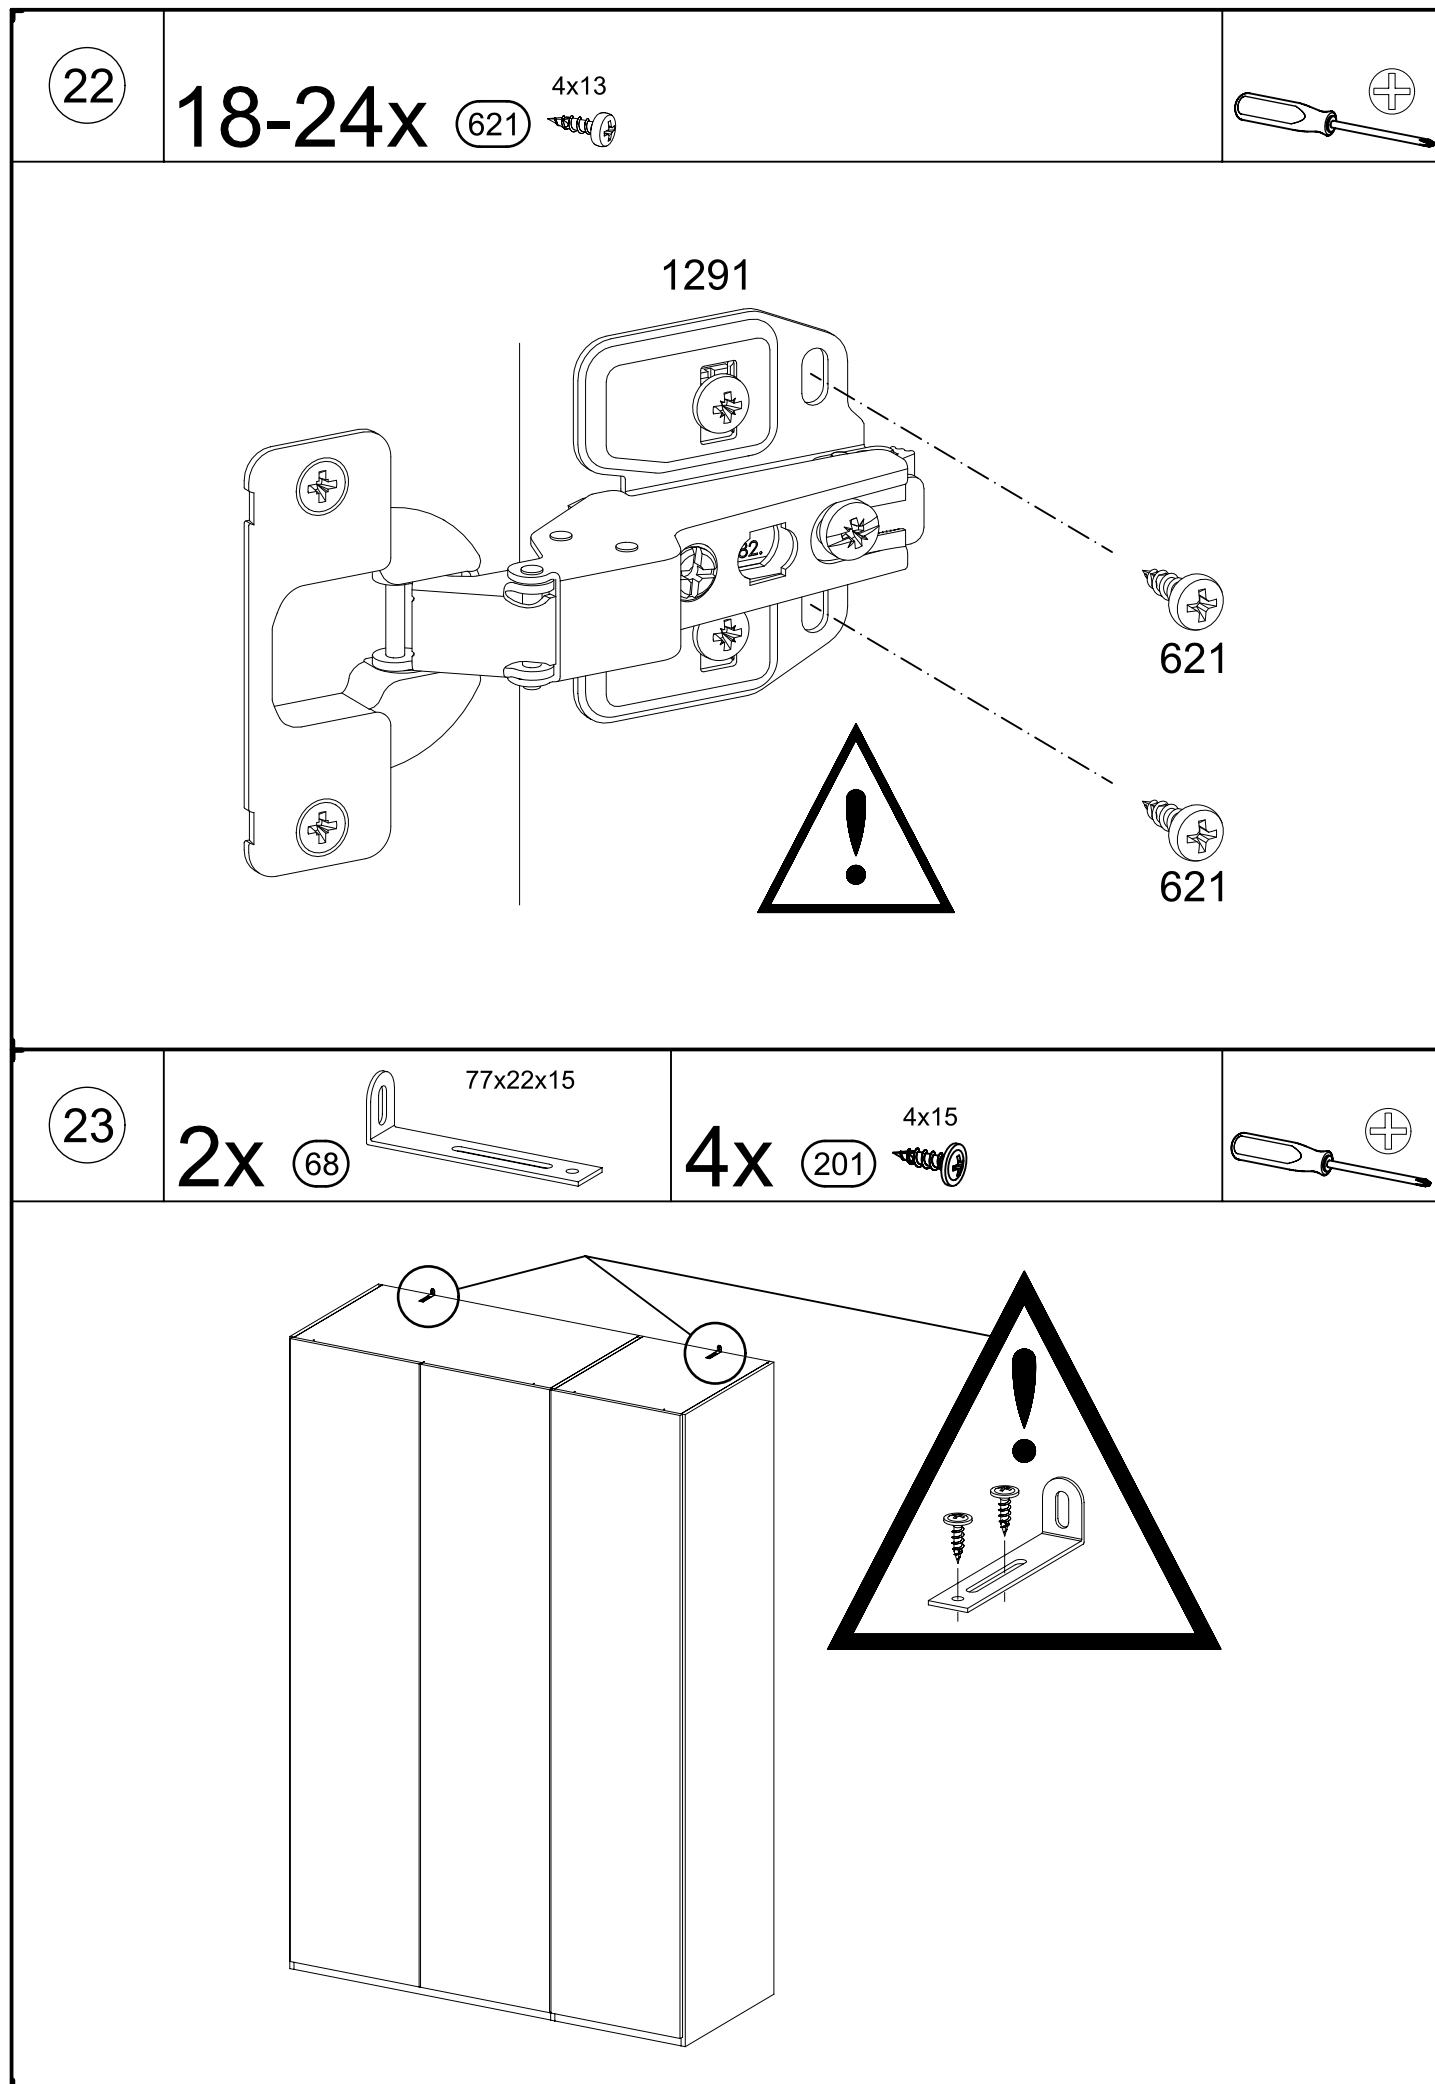


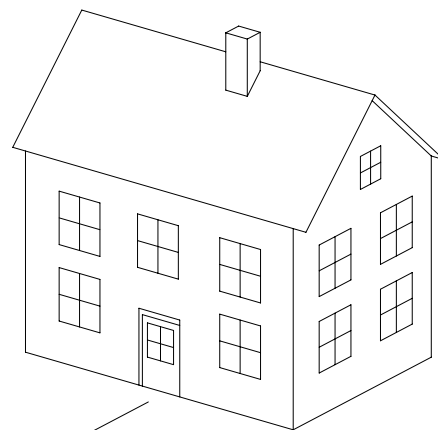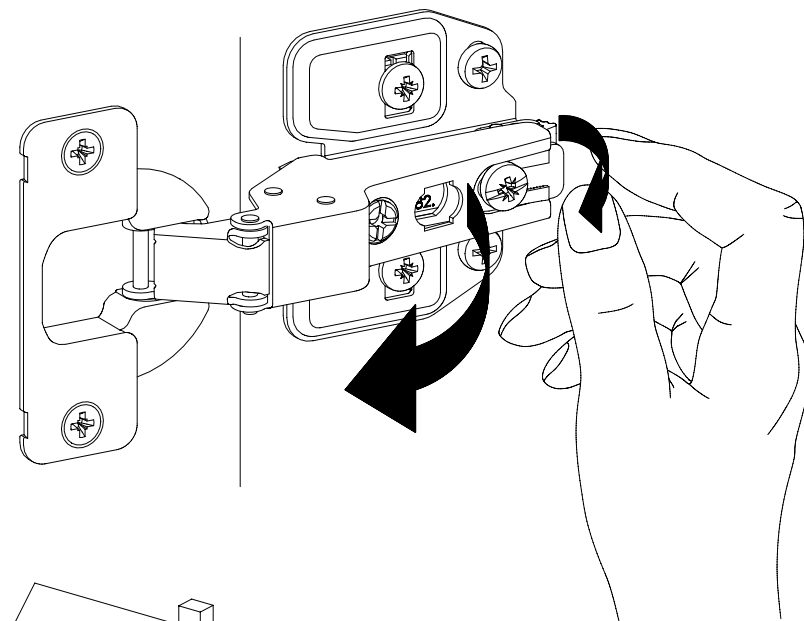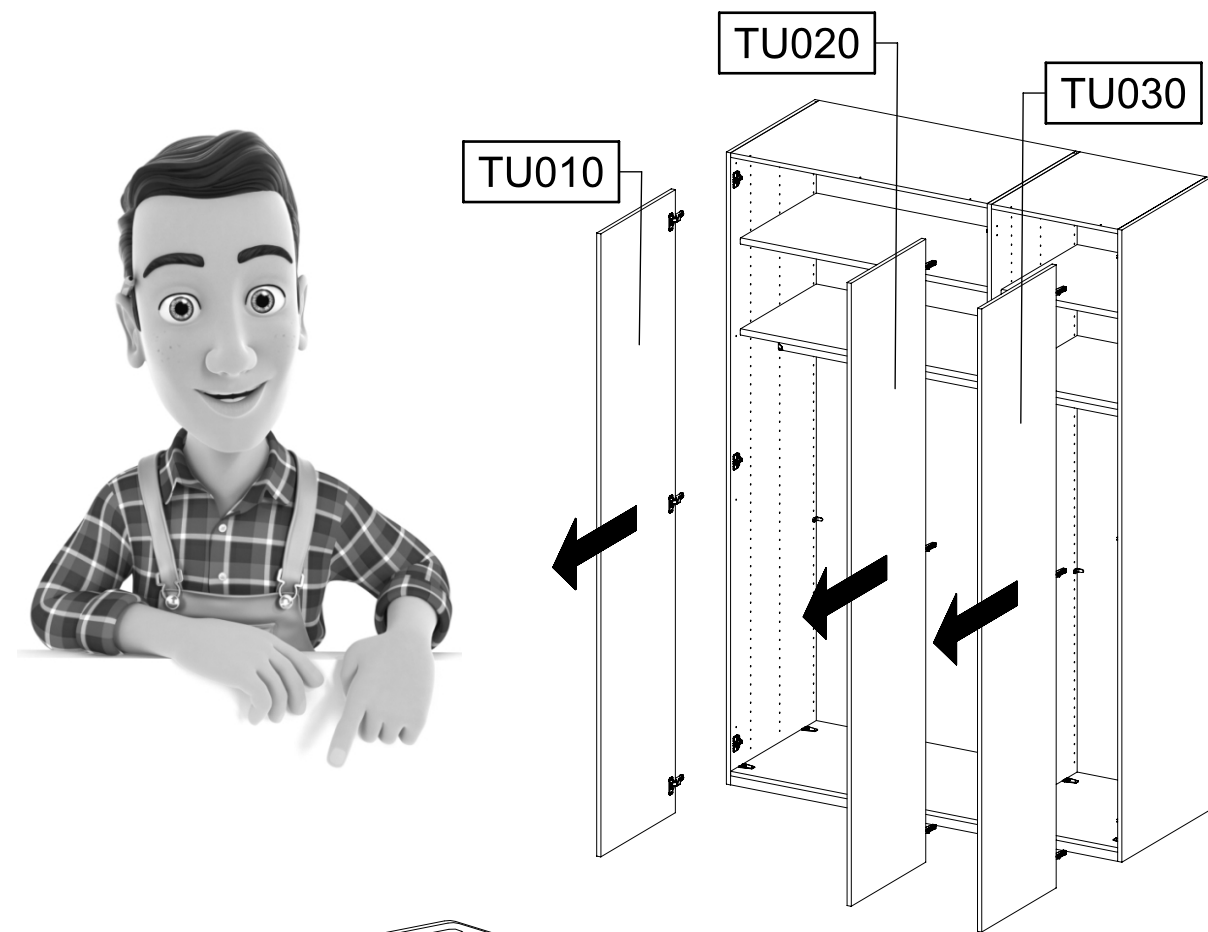

1.

ME190_02


rauch

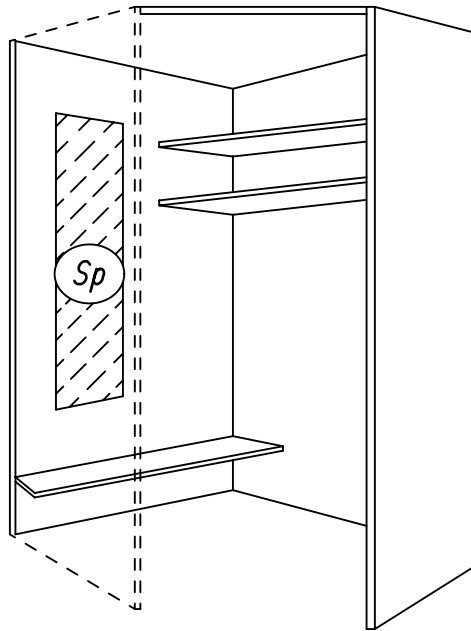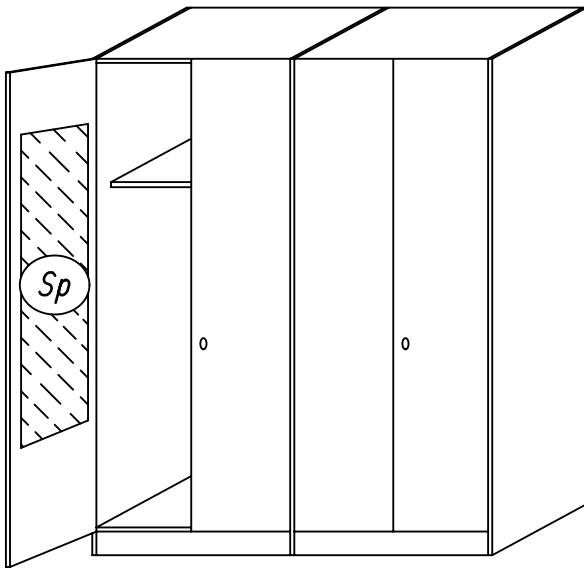

637




492




3x15


1

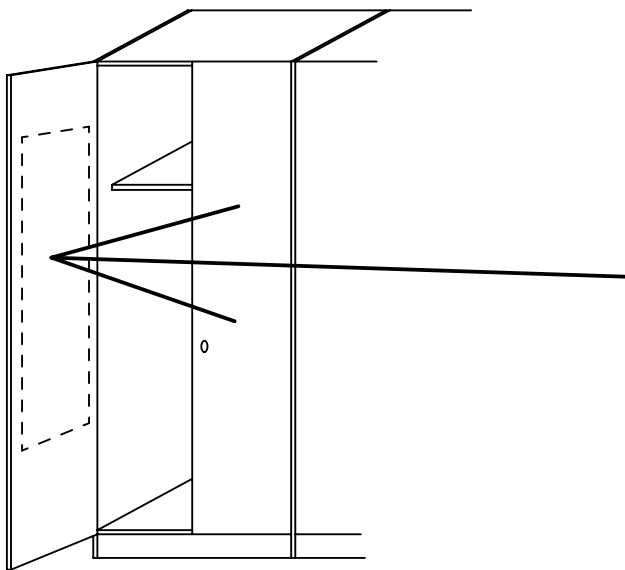



2

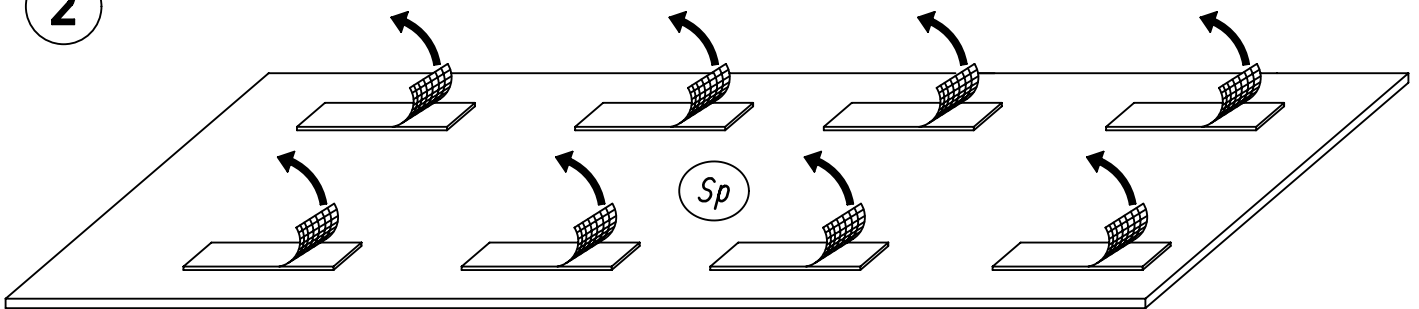

3

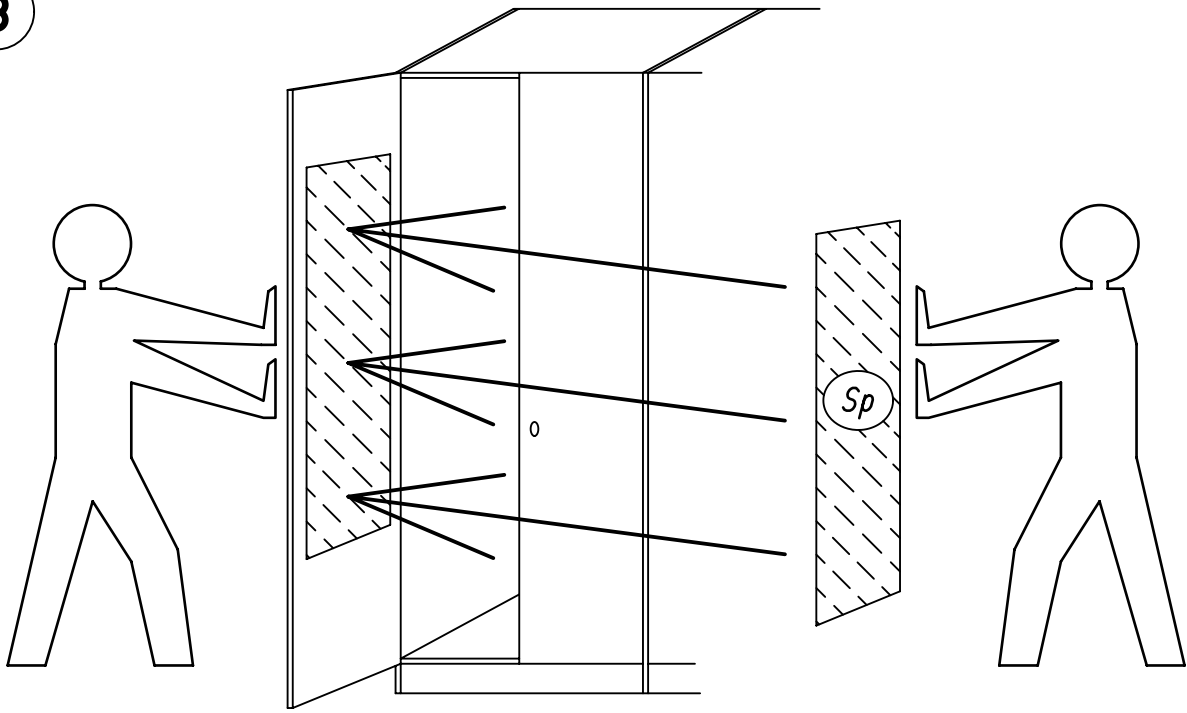


4

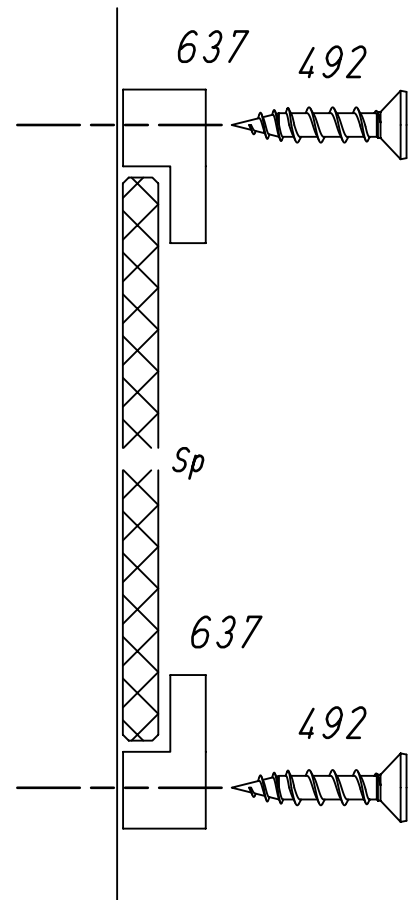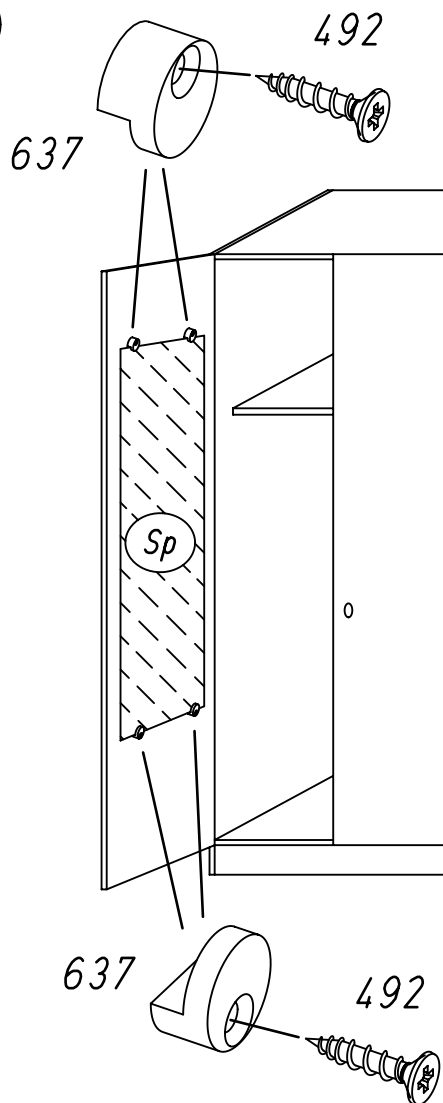



Montageanleitung / Mounting Instruction – Nexis für Nexis Bänder / Nexis for Nexis hinges

Zuerst Türeinrichtungen vornehmen / Make door adjustments first



1

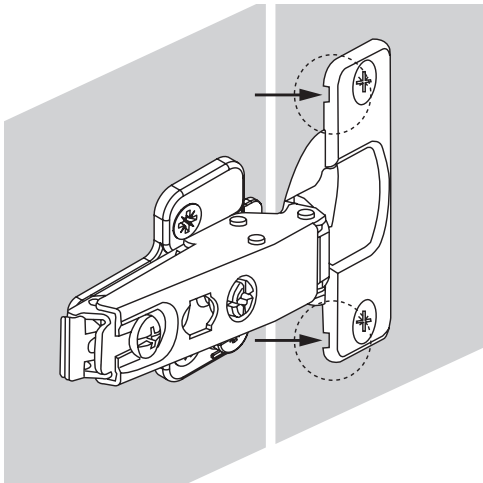



2

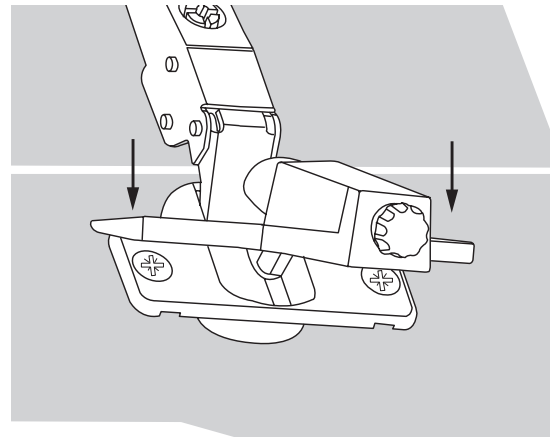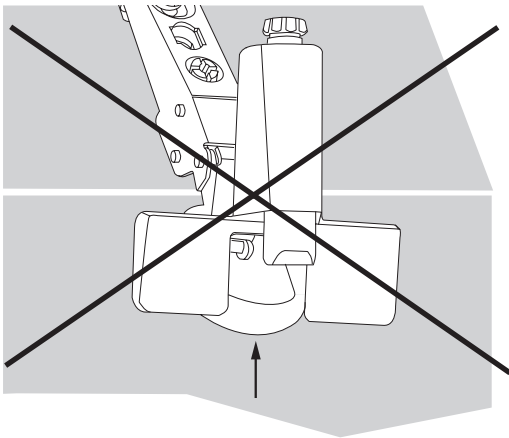

3

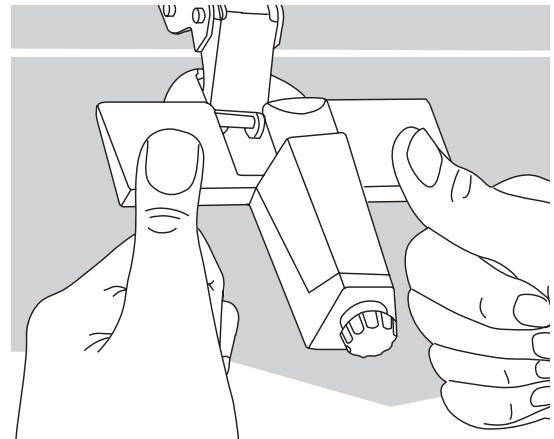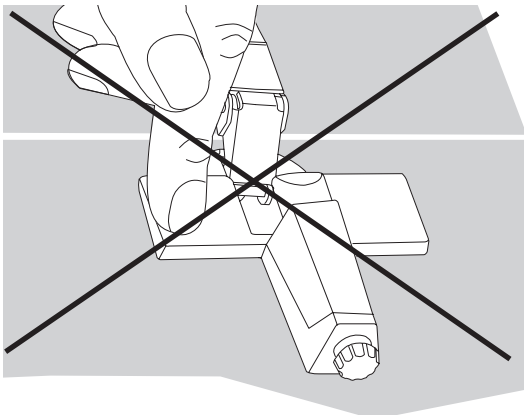

4

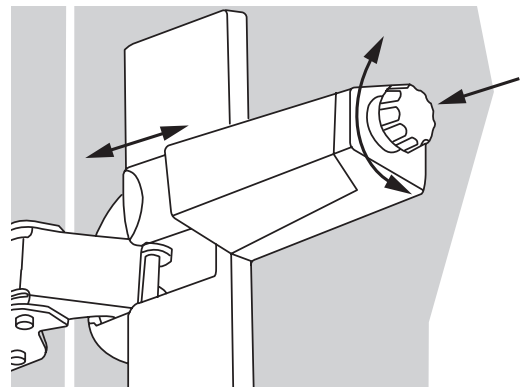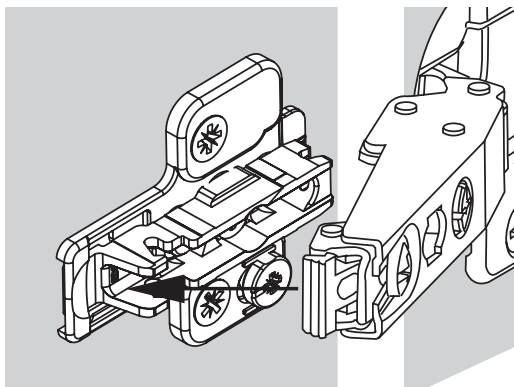

Demontage / Dismounting

