
















# ASSEMBLY INSTRUCTION

<b>A</b>  x1	<b>B</b>  x1	<b>C</b>  x1	<b>D</b>  M6x16 x4	<b>E</b>  M8x13 x2	<b>F</b>  M8 x2	<b>G</b>  M6 x4
<b>H</b>  x1	<b>I</b>  x1	Spare Parts  M6x16 x1	Spare Parts  M8x13 x1	Spare Parts  M8 x1	Spare Parts  M6 x1	


## STEP 1

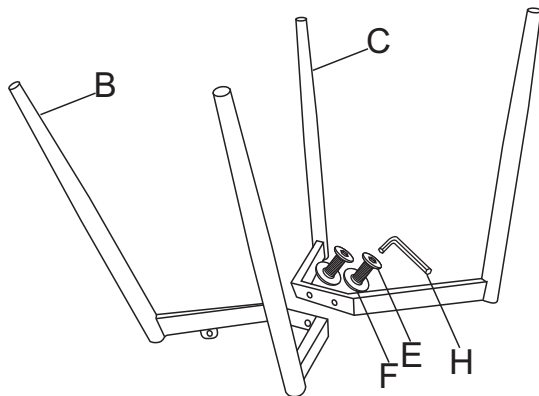

## STEP 2

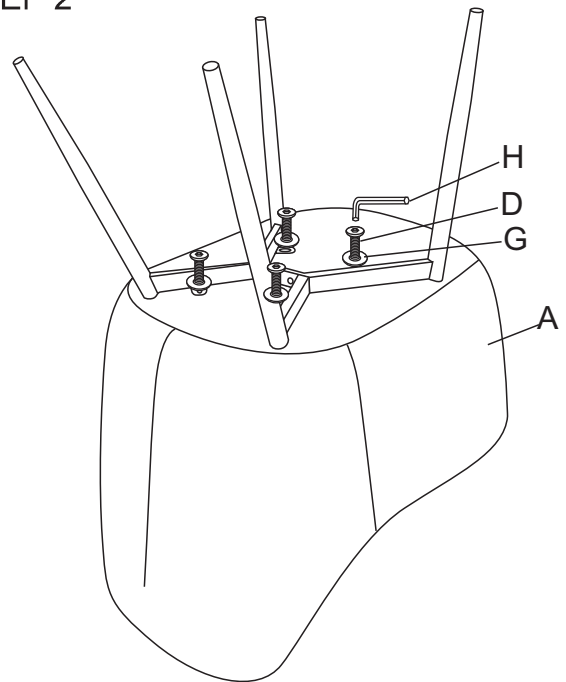

## STEP 3

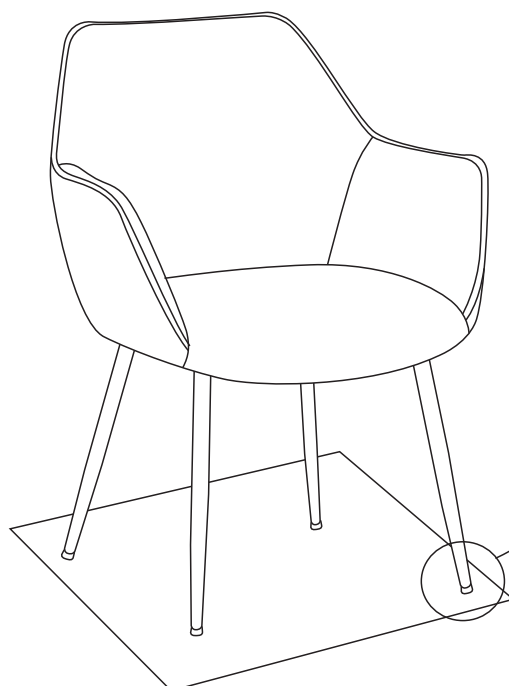

Adjust the floor protector.  
then tighten the lock nut usel.

