

# SHEMA SPAJANJA

NOGA MARKELO ( A )


VIJAK M8x 120DIN 933  
KOM. 2

NOGA MARKELO ( B )

NOGA MARKELO ( C )

## SET SPOJNIH ELEMENATA

| NAZIV                | SLIKA                                                                               | KOM. |
|----------------------|-------------------------------------------------------------------------------------|------|
| VIJAK M8x 120DIN 933 |  | 2    |
| KLJUČ ZA SPAJANJE    |  | 1    |

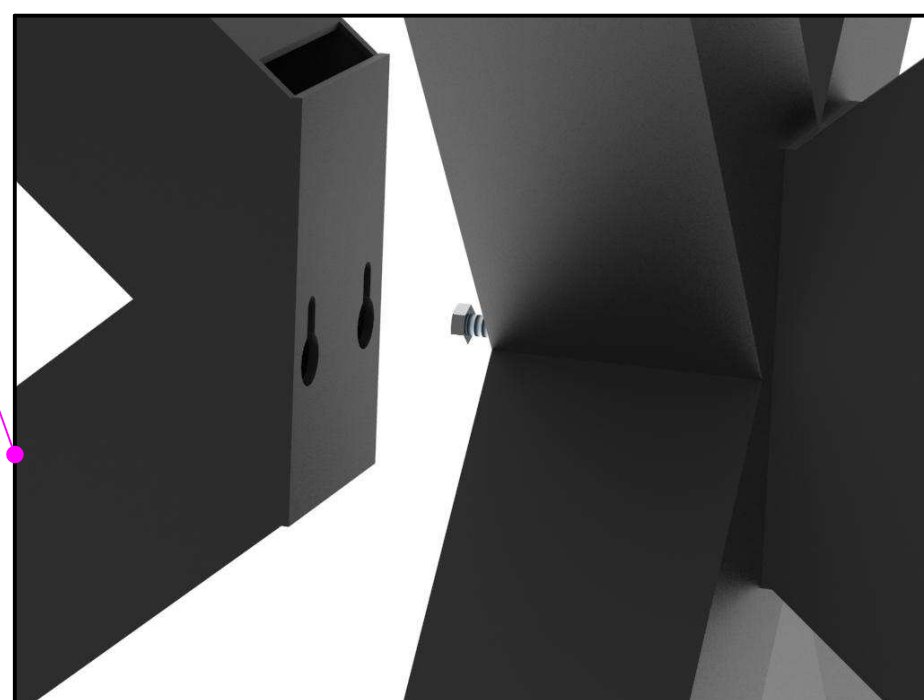

PROIZVODNJA  
METALNE I TEKSTILNE  
GALANTERIJE

**MEDIX**

Proizvodnja okova za namještaj

Hrv. branitelja 230, Stari Slatnik

35253 Brodski Stupnik

tel./fax: +385 (35) 426-878

tel.: +385 (35) 426-877

mob.: 098/340-576


e-mail: medex@hi.htnet.hr

[www.medex.hr](http://www.medex.hr)

OIB: 47219816385 • MB/JMBG: 1403974302137

IBAN : HR5823400091150162523

SWIFT: PBZGHR2X • VAT.NO.: HR47219816385

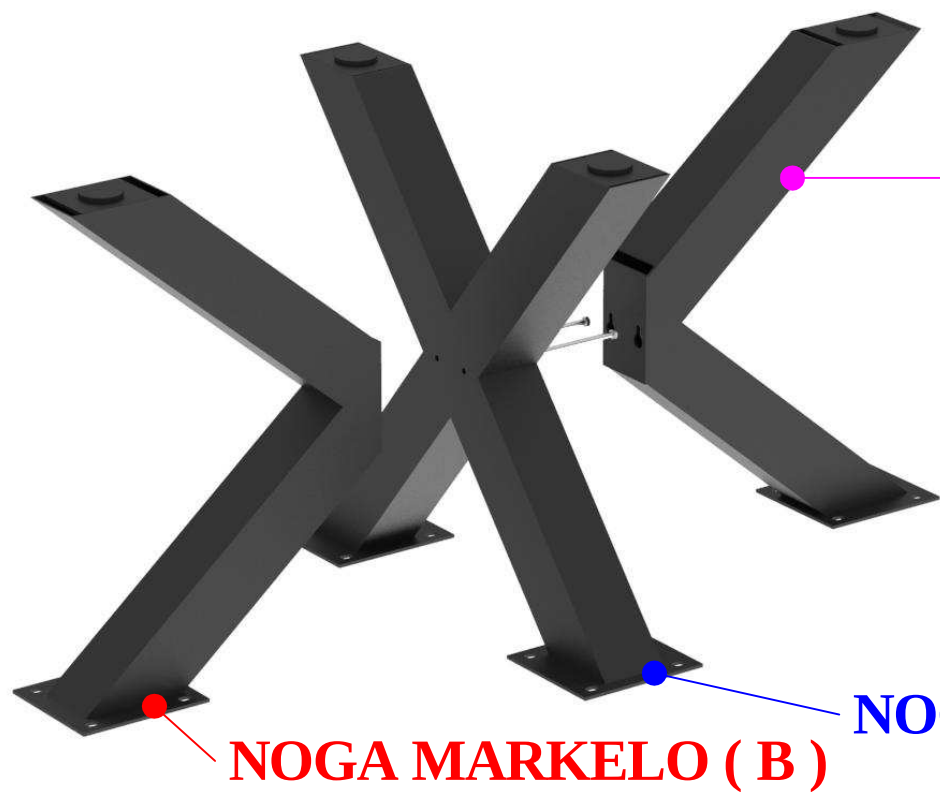

**NOGA MARKELO ( C )**

### Korak 1 ( Sl. 1)

- Nogu Markelo (A) i Markelo (B) pložiti tako da pričvrstne pločice budu na podu
- u zato predviđene rupe postaviti **VIJAK M8x 120DIN 933** i ključem za spajanje lagano pričvrstiri tako da između glave vijka i noge Markelo (A) ostane cca 5-6 mm (Sl.2)

**NOGA MARKELO A**

**NOGA MARKELO ( B )**



**NOGA MARKELO A**

**OTVOR ZA KLJUČ**


Korak 1 ( Sl. 1)



**NOGA MARKELO ( B )**

**NOGA MARKELO A**

Korak 1 ( Sl. 2)

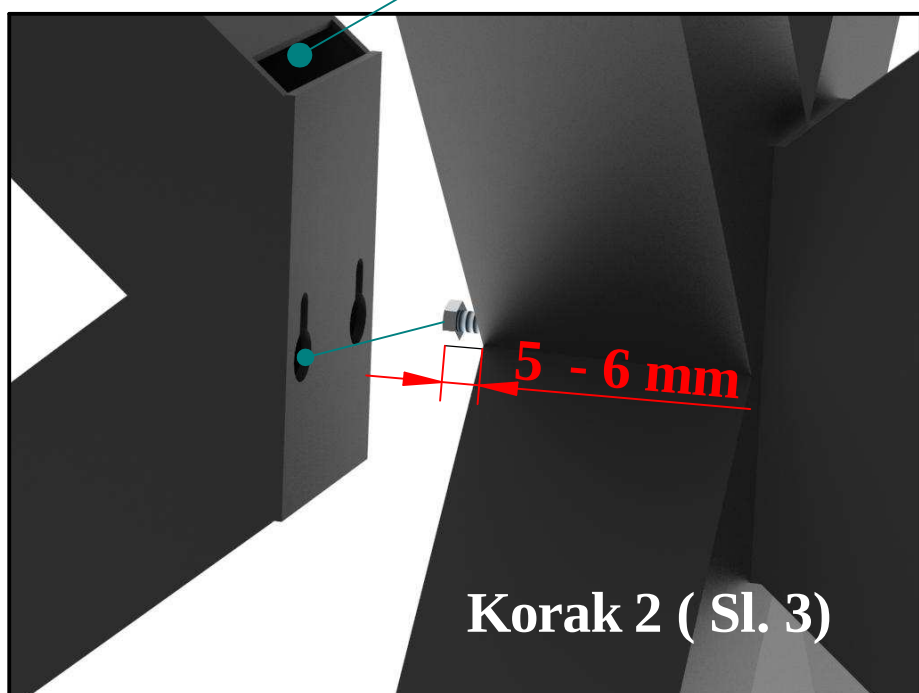


Korak 2 ( Sl. 3)


### Korak 2 ( Sl. 3)

- Nogu Markelo C prisloniti uz nogu Markelo A tako da glavu vijka postavimo u veći otvor na pločici noge Markelo C i lagano spustiti na tlo
- nakon toga ključem za spajanje (Sl. 4) pričvrstiti vijak **VIJAK M8x 120DIN 933** kroz za to predviđeni otvor za ključ na nogi Markelo C ( Sl.3 ) i ( Sl.5 )

**OTVOR ZA KLJUČ**  
**NOGA MARKELO C**

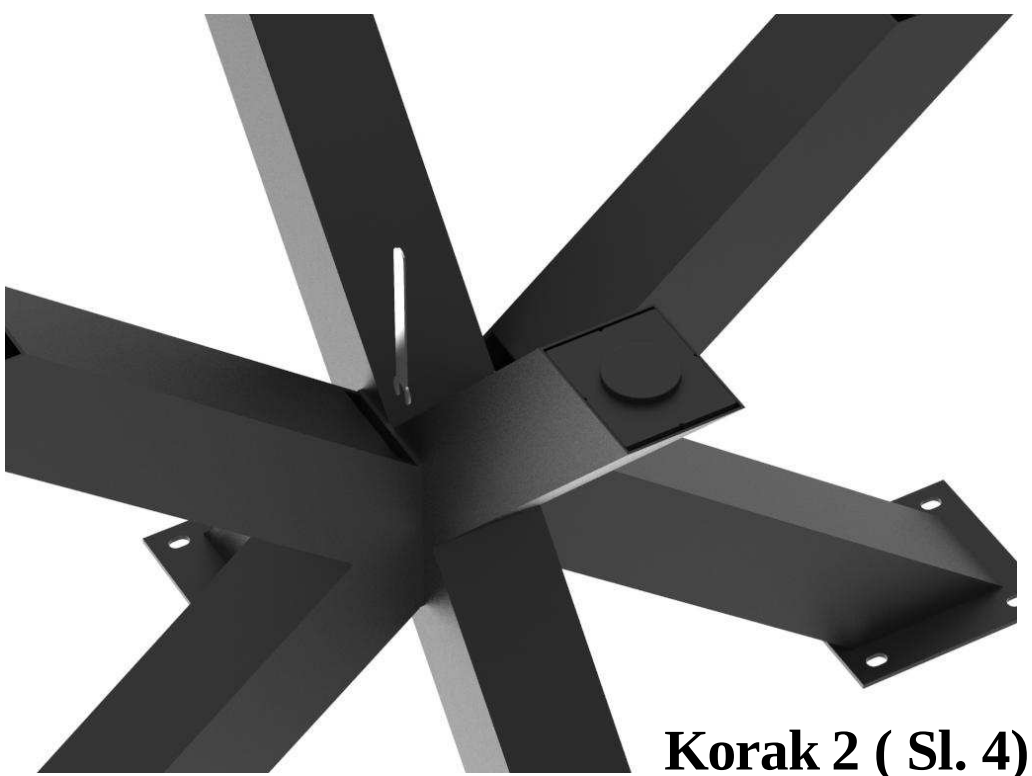

Korak 2 ( Sl. 4)

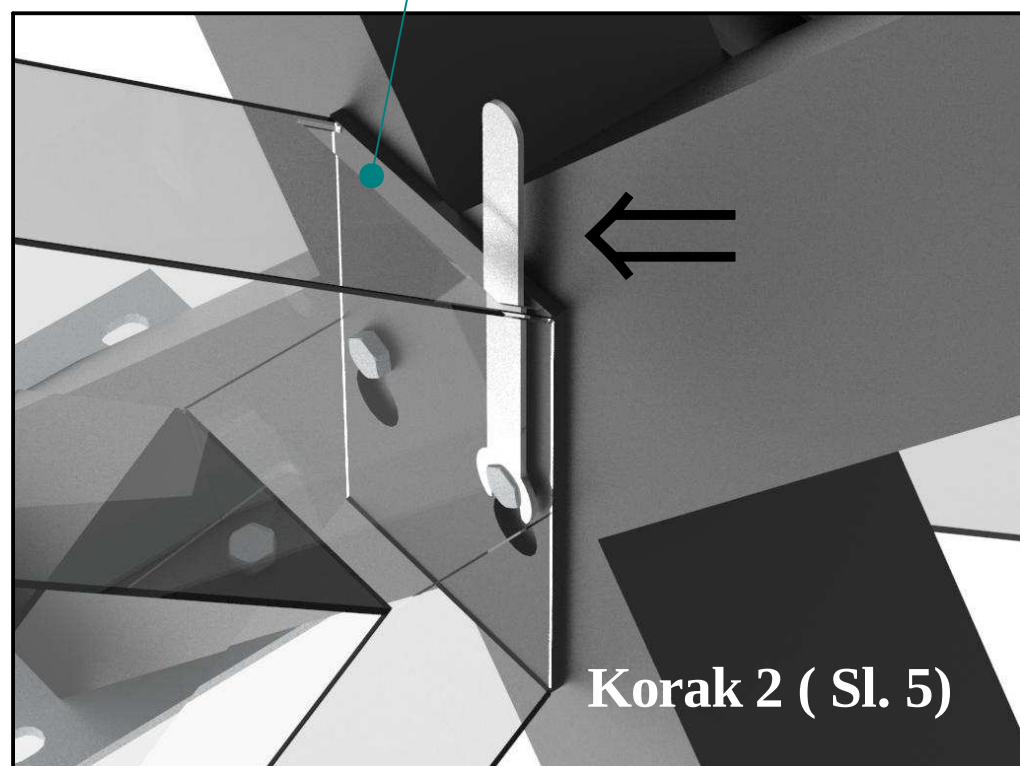

Korak 2 ( Sl. 5)