


MONTAGEANLEITUNG NOTICE DE MONTAGE ASSEMBLY INSTRUCTION ISTRUZIONE DI MONTAGGIO

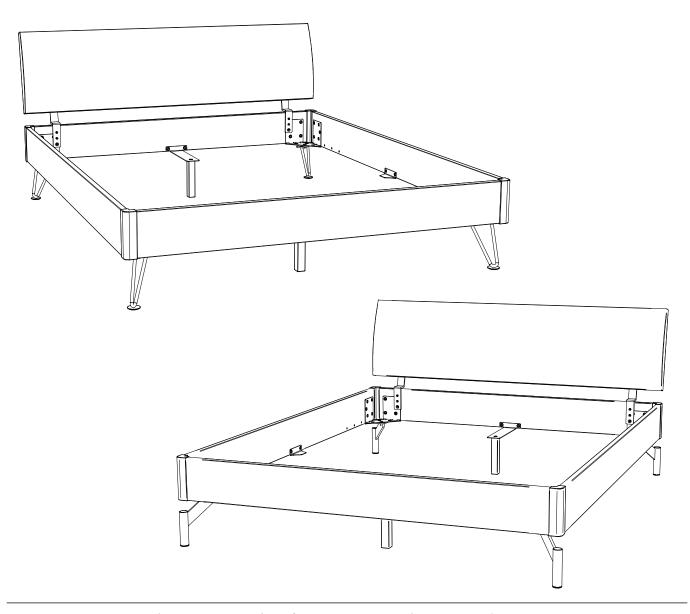



Broni & Lugano





Benötigte Werkzeuge – Outils Nécessaires – Tools Required – Attrezzi Necessari





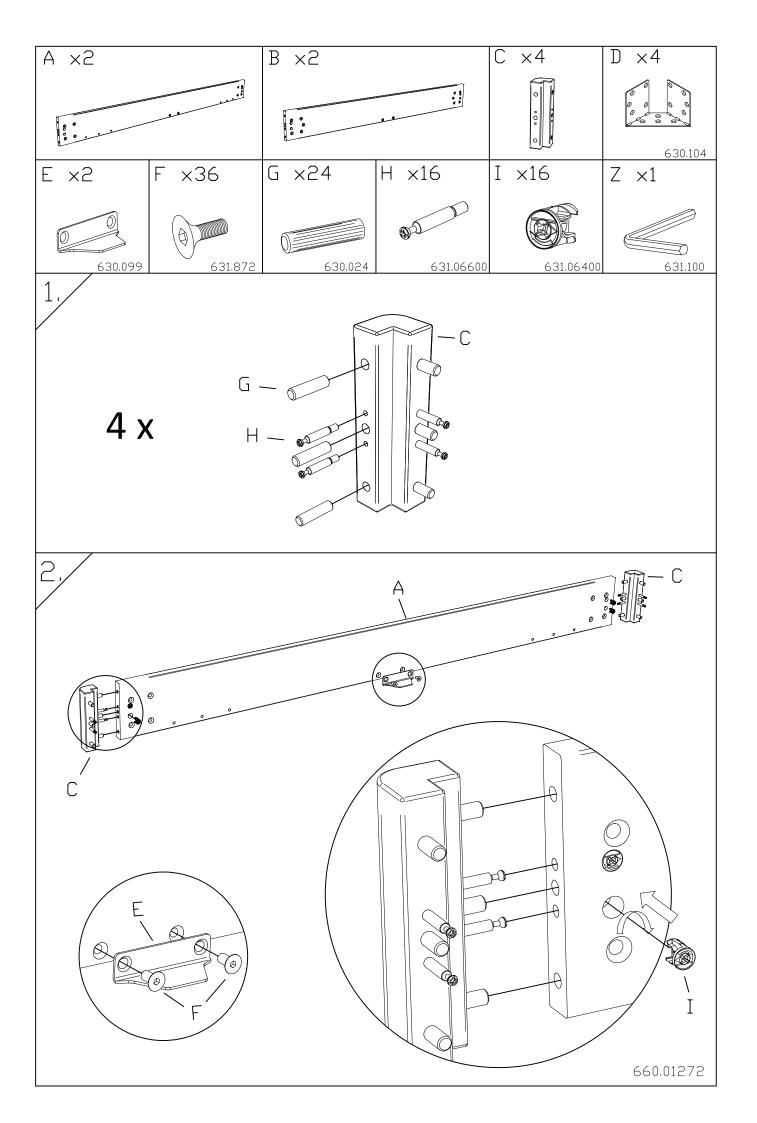

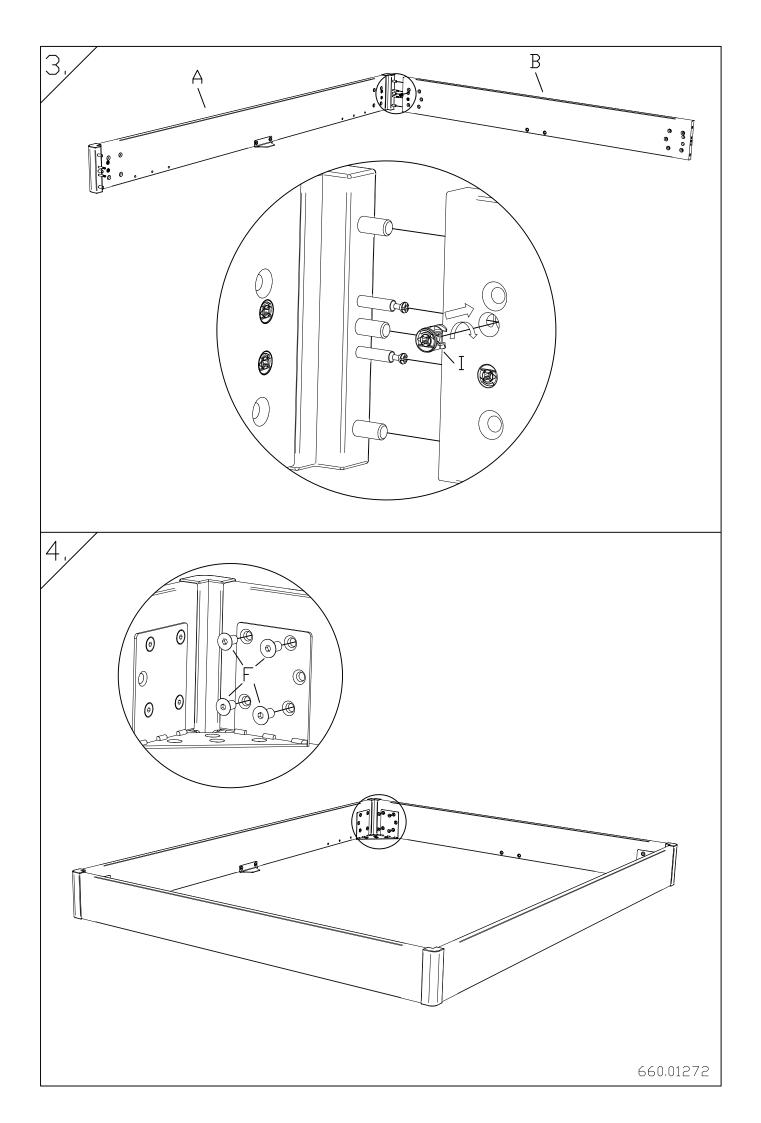

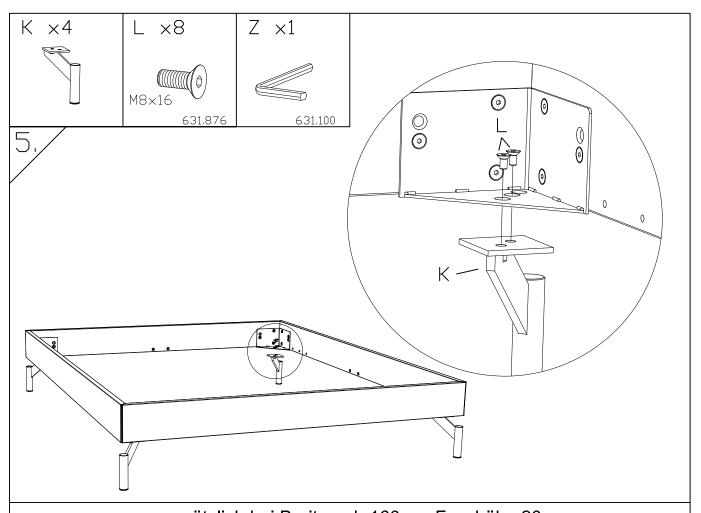

zusätzlich bei Breiten ab 160cm, Fusshöhe 20 additional for widths from 160cm, foot height 20 à partir des dimensions 160cm, Hauteur du pied 20 a partire della misura 160cm, Altezza del piede 20

