



NOTICE DE MONTAGE
ASSEMBLING INSTRUCTIONS
ISTRUZIONI DI MONTAGGIO
MONTAGEANLEITUNG
INSTRUCOES DE MONTAGEM
MANUAL DE MONTAJE
UPUTE ZA MONTAZU
KURULUM TALIMATLARI


COMO
U-Form EckeSofa mit Schlaffunktion
und Bettkasten
Metallfuß

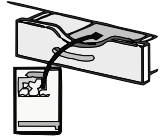

30 min


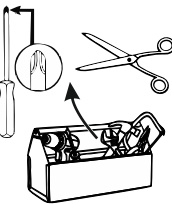


329 cm 188 cm

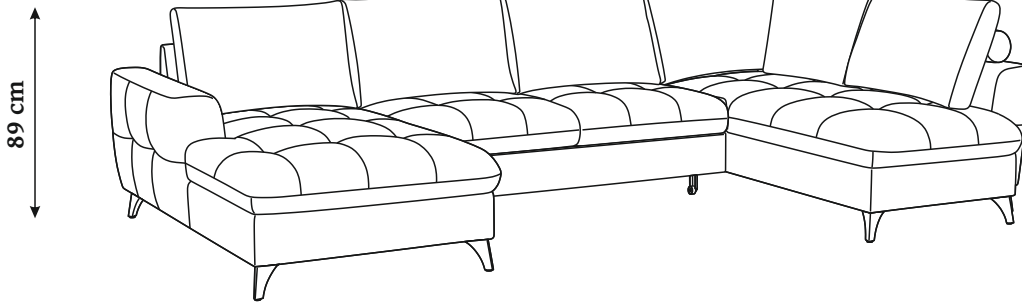

! +/- 2cm

188 cm 329 cm

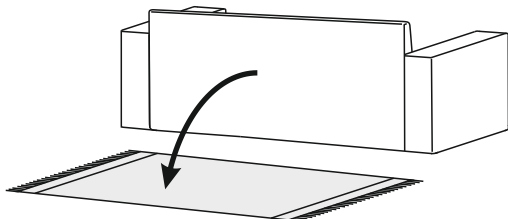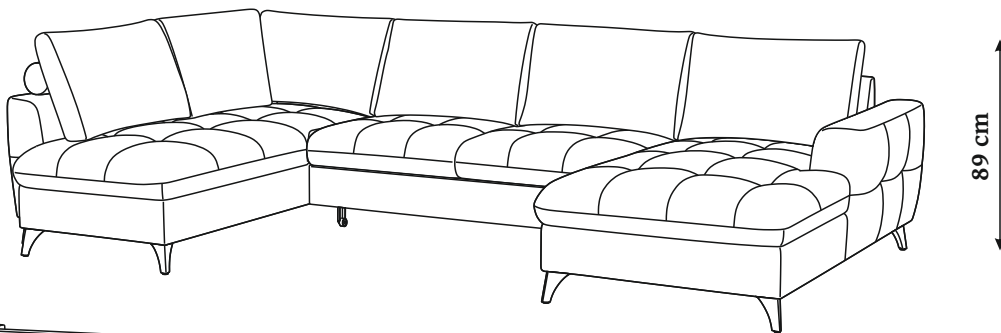

U-Form EckeSofa

09220018 / 01





3-7

Ecke rechts





8-12



Ecke links

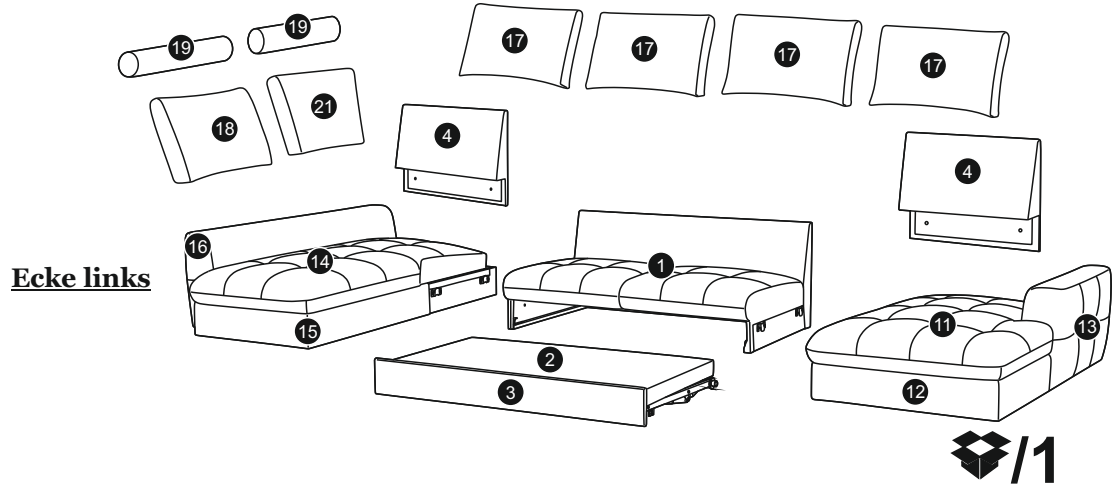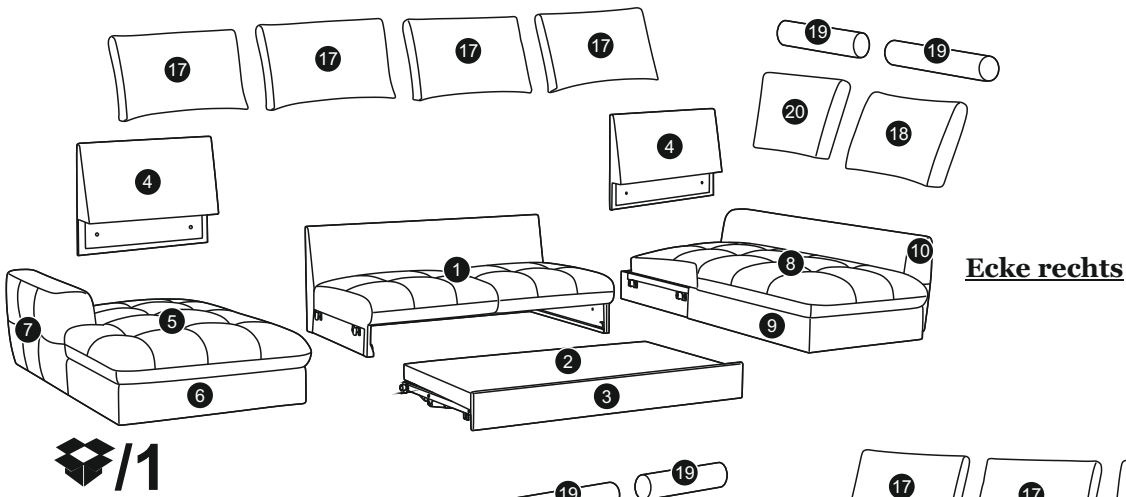


				PCS	
①	143 cm	58 cm	88 cm	x1	2/3
②	139 cm	17 cm	69 cm	x1	2/3
③	143 cm	18 cm	2 cm	x1	2/3
④	74 cm	58 cm	13 cm	x1	1/3
④	74 cm	58 cm	13 cm	x1	3/3
⑤	96 cm	18 cm	149 cm	x1	1/3
⑥	90 cm	18 cm	153 cm	x1	1/3
⑦	22 cm	52 cm	87 cm	x1	1/3
⑧	82 cm	18 cm	177 cm	x1	3/3
⑨	74 cm	18 cm	181 cm	x1	3/3
⑩	22 cm	52 cm	168 cm	x1	3/3
⑪	96 cm	18 cm	149 cm	x1	1/3
⑫	90 cm	18 cm	153 cm	x1	1/3
⑬	22 cm	52 cm	87 cm	x1	1/3
⑭	82 cm	18 cm	177 cm	x1	3/3
⑮	74 cm	18 cm	181 cm	x1	3/3
⑯	22 cm	52 cm	168 cm	x1	3/3
⑰	73 cm	47 cm	22 cm	x1	1/3
⑰	73 cm	47 cm	22 cm	x2	2/3
⑰	73 cm	47 cm	22 cm	x1	3/3
⑱	73 cm	47 cm	22 cm	x1	3/3
⑲	17 cm	17 cm	53 cm	x2	3/3
⑳	73 cm	47 cm	22 cm	x1	3/3
㉑	73 cm	47 cm	22 cm	x1	3/3

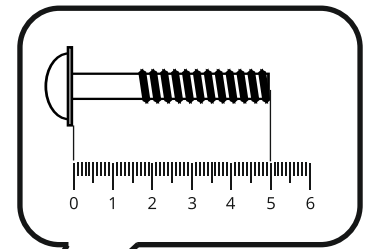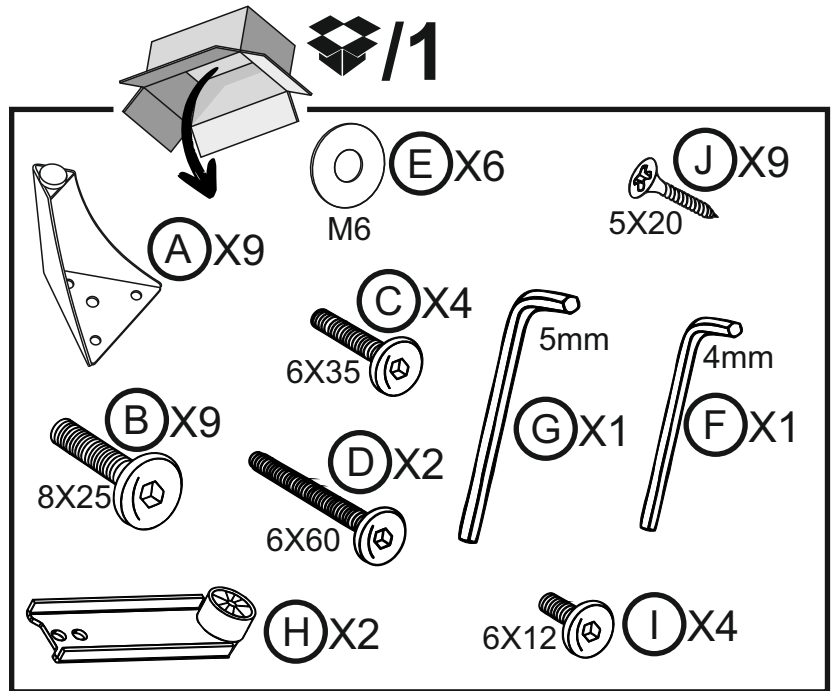








1.

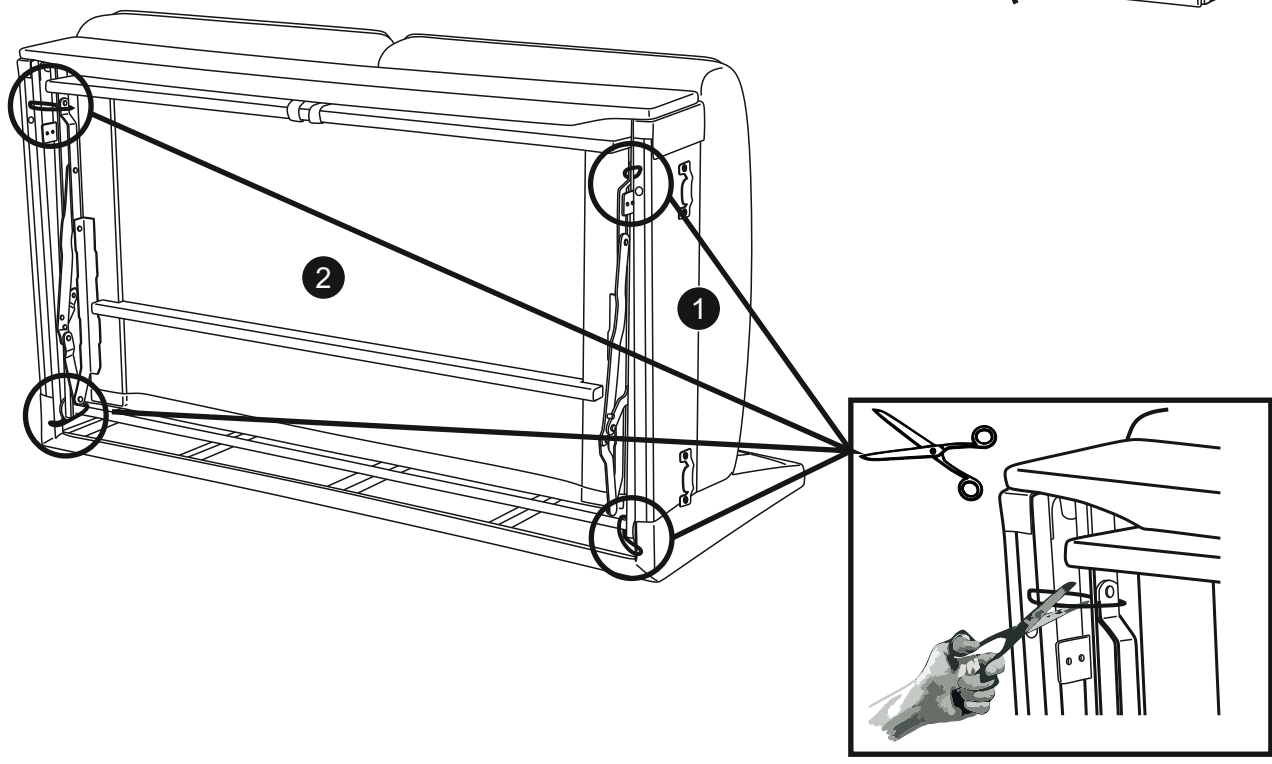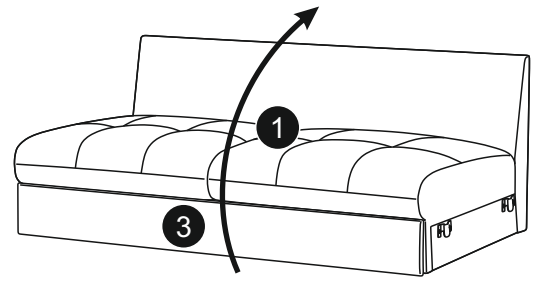







2.

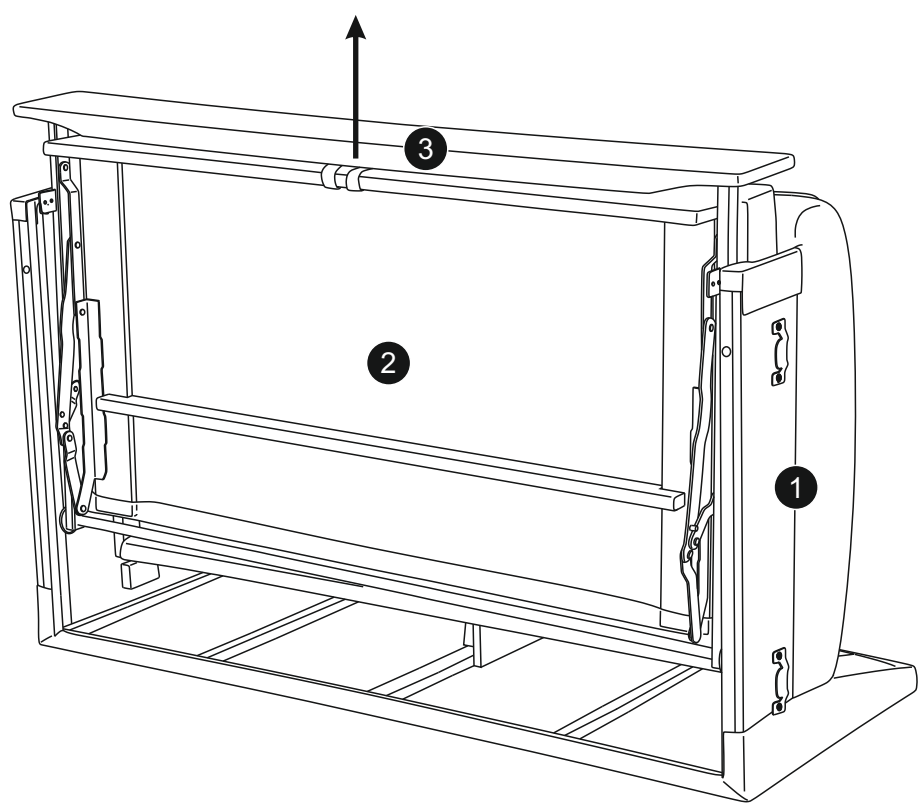








3.

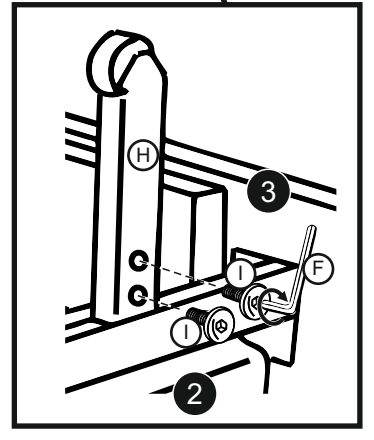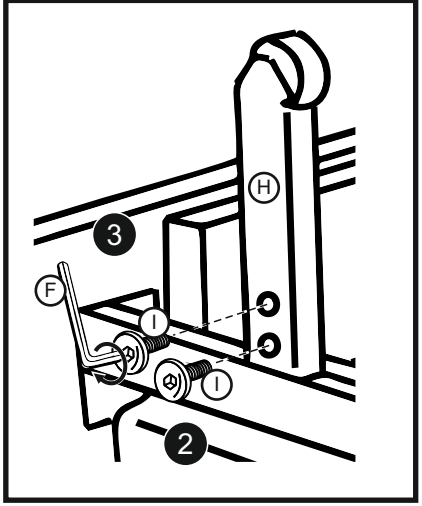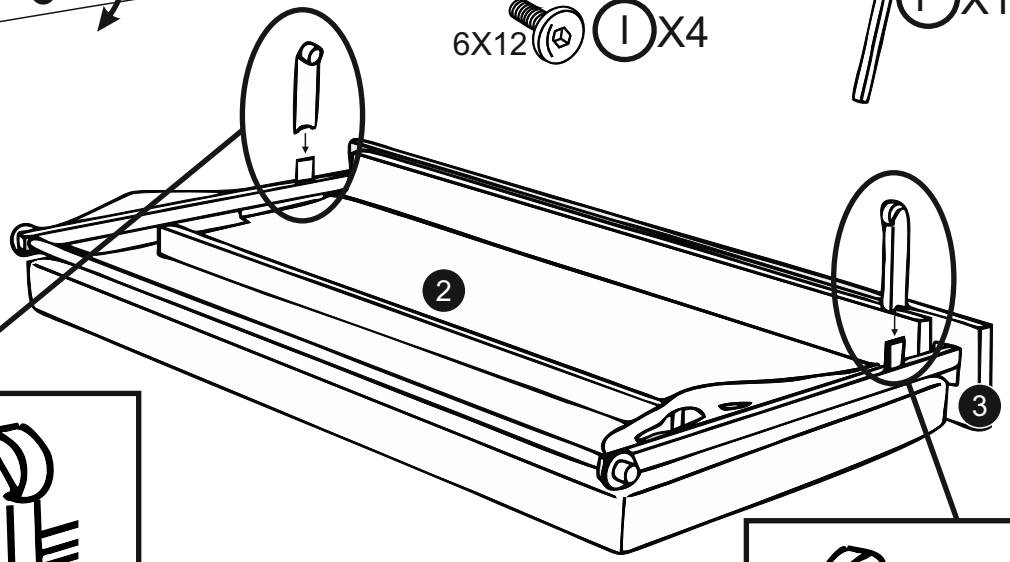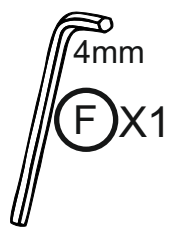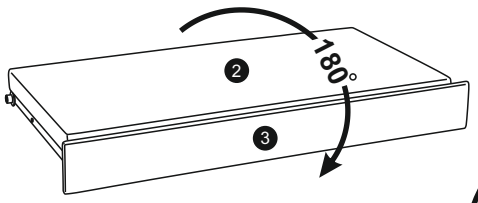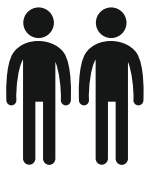







4.

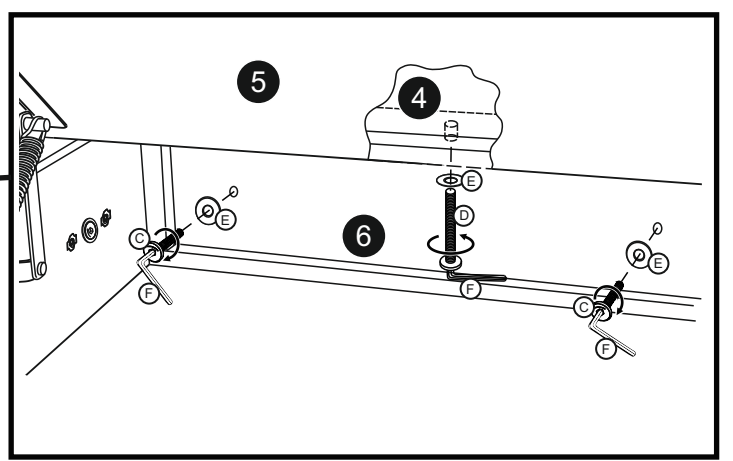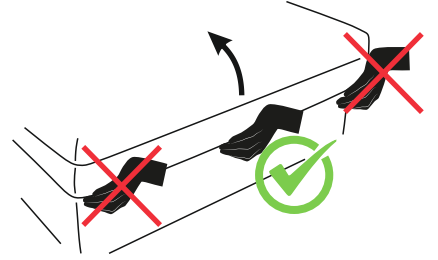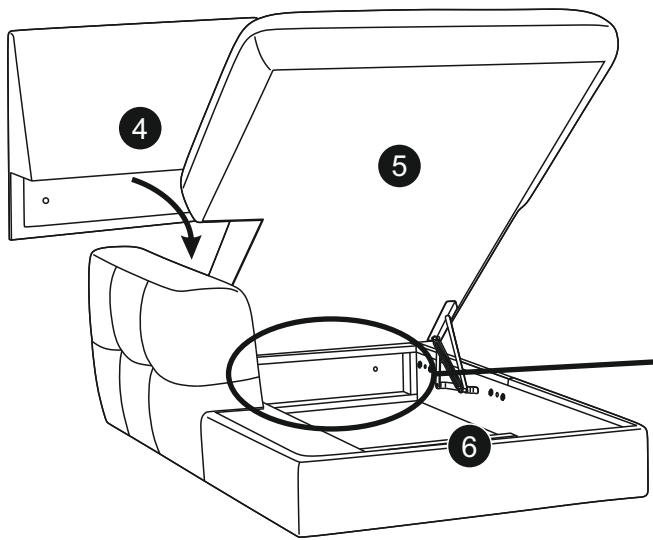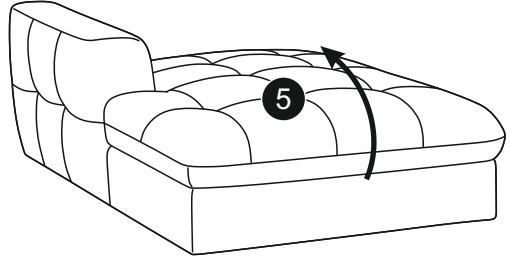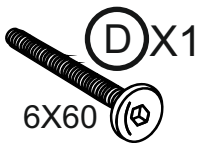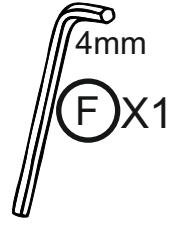








5.

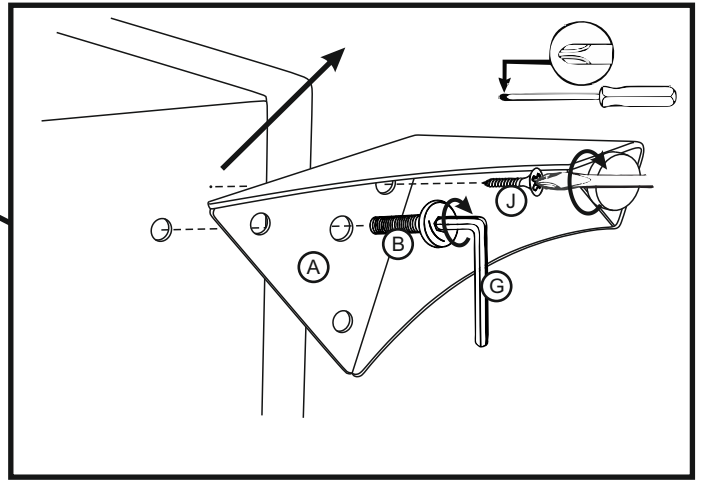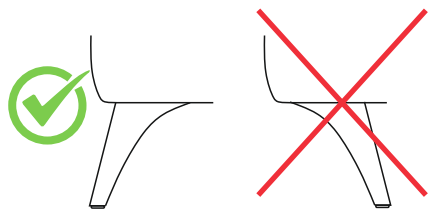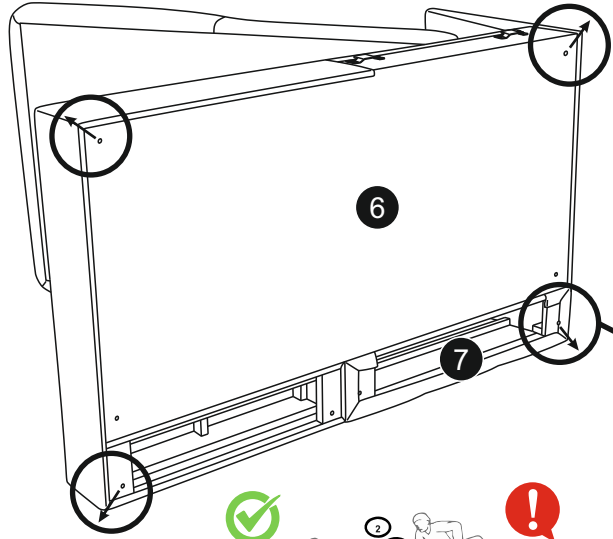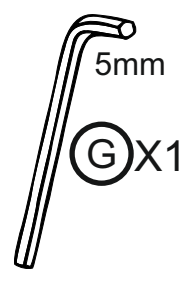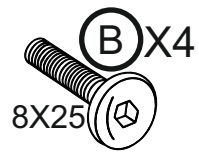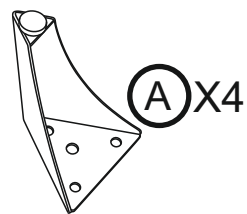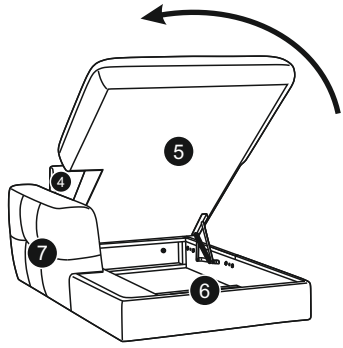





6.

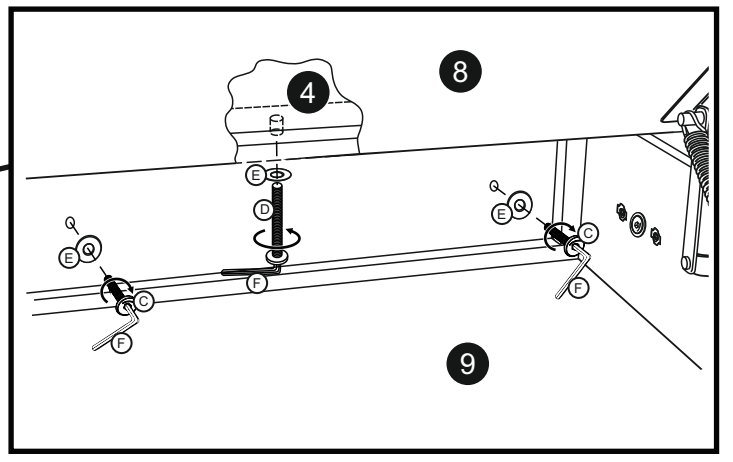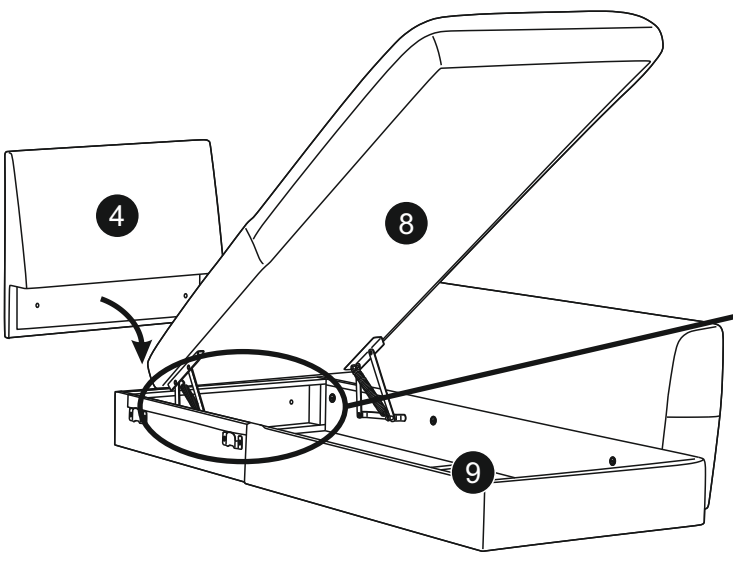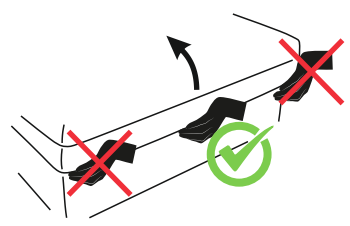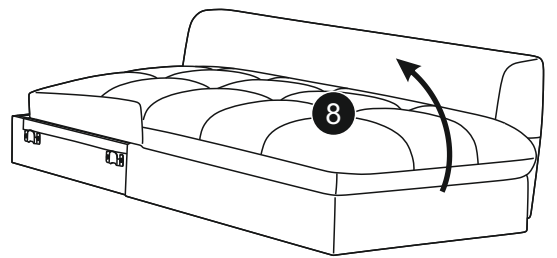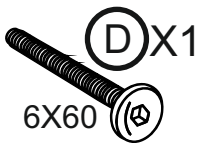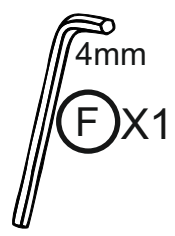

7.

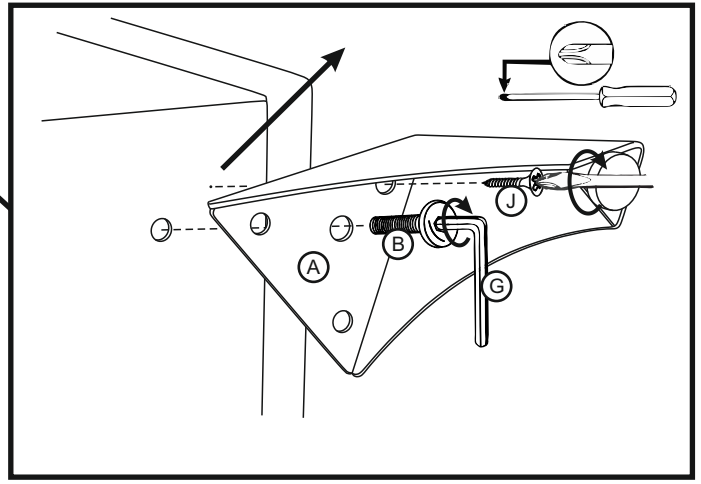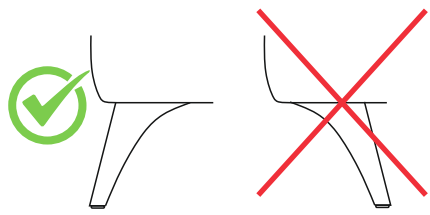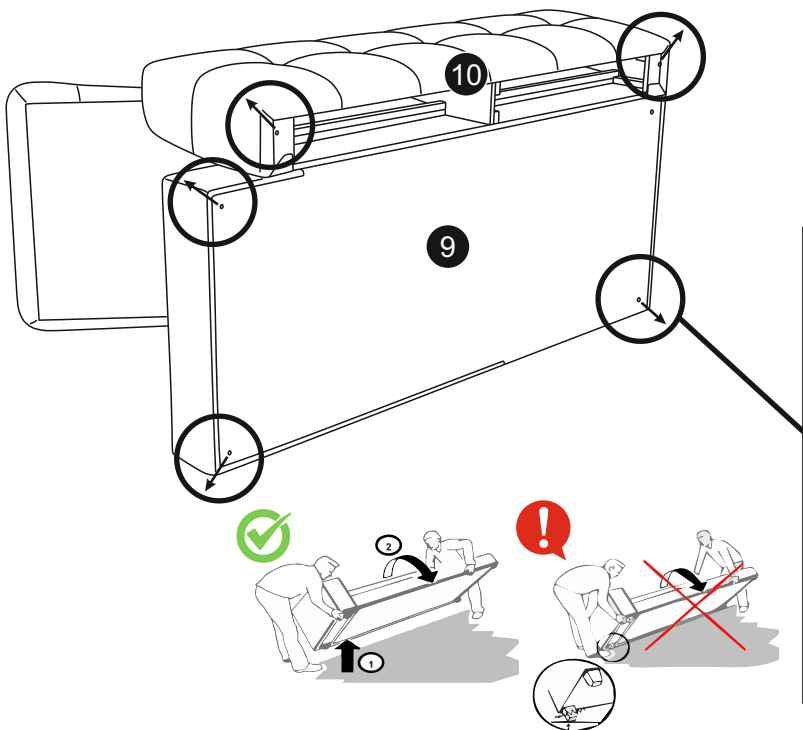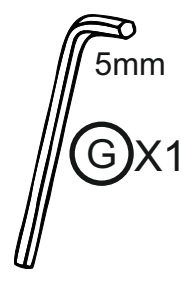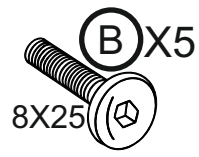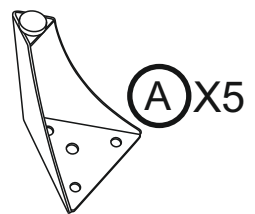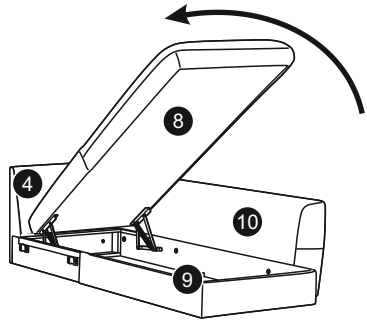


8.

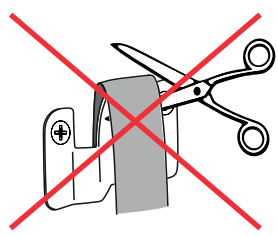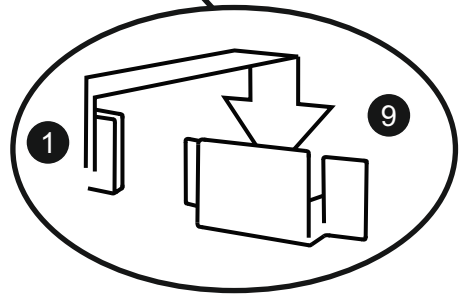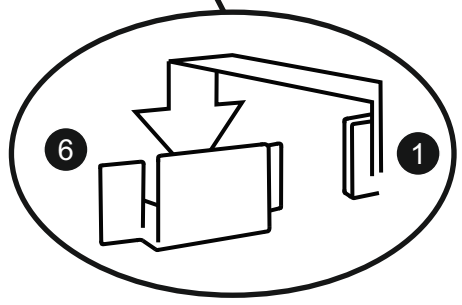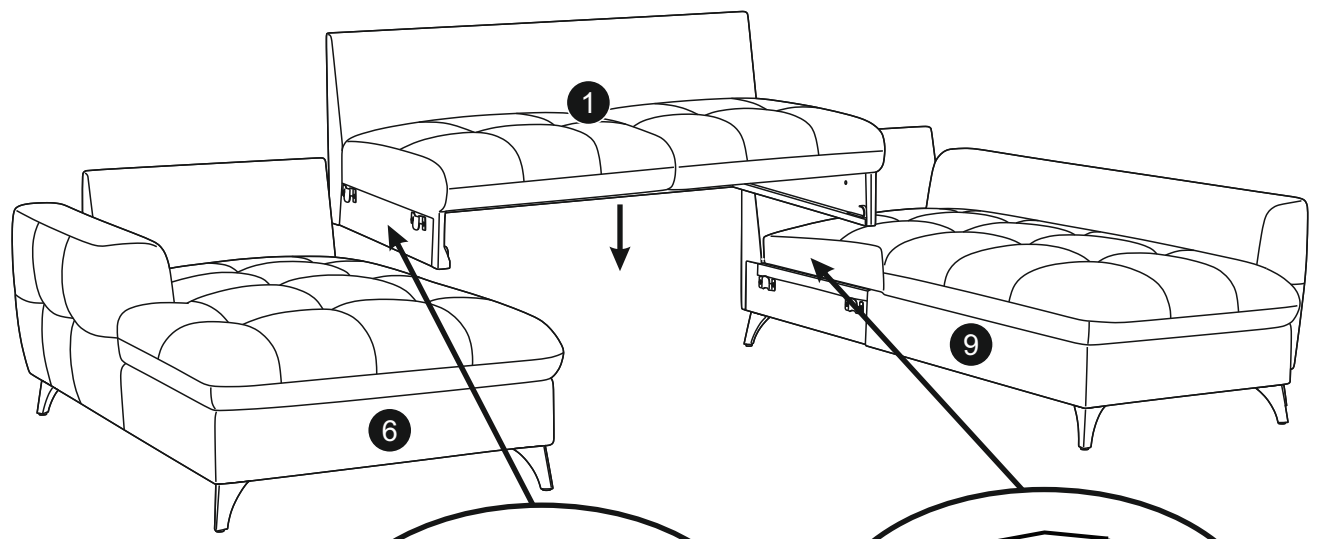


Bitte Schutzvlies nicht entfernen
(angebracht um Geräuschbildung zu vermeiden)




9.

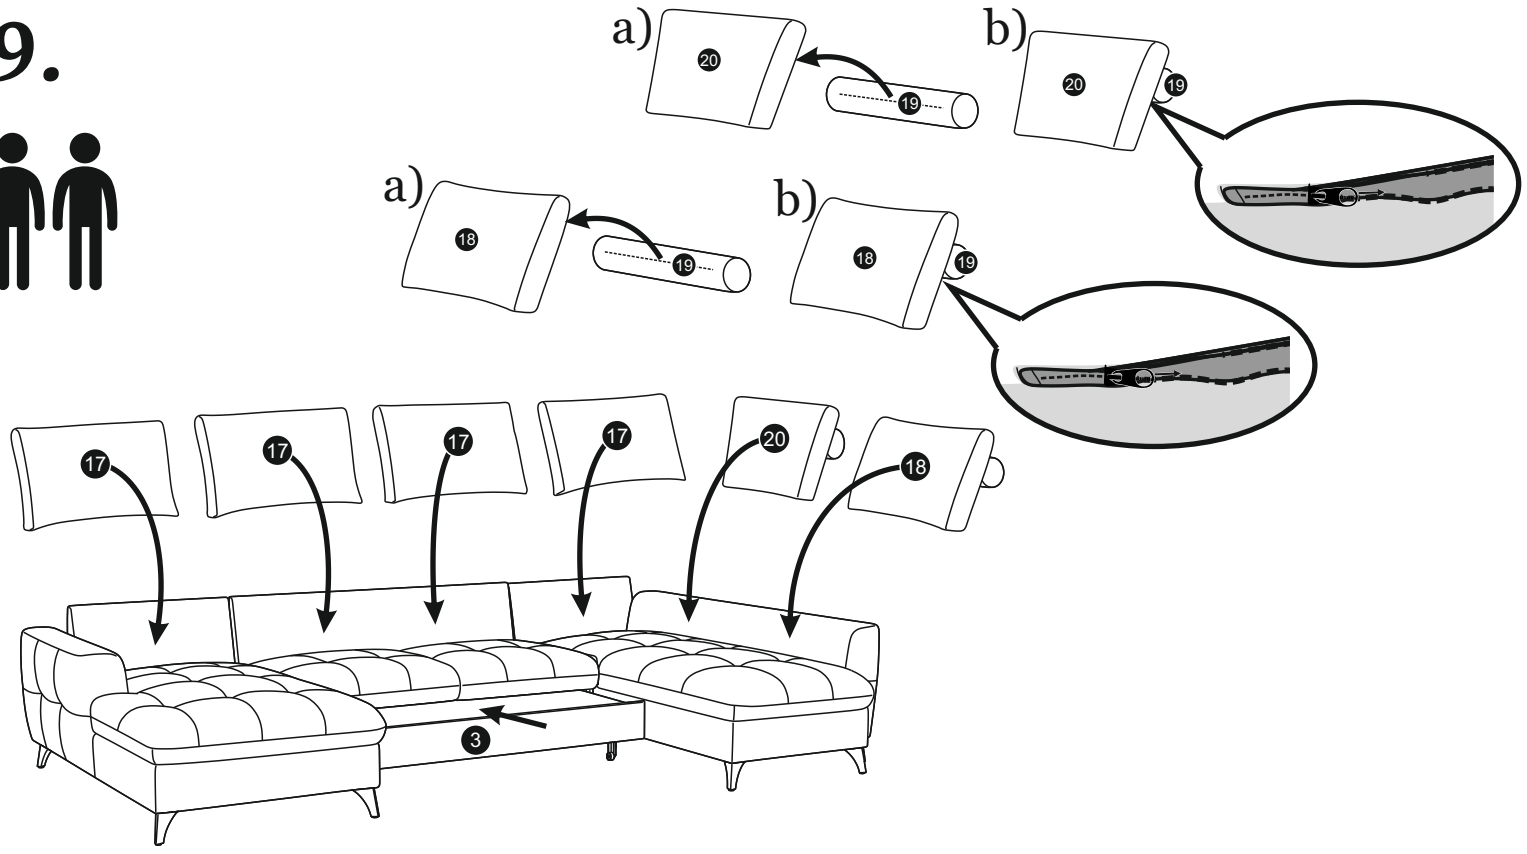


10.

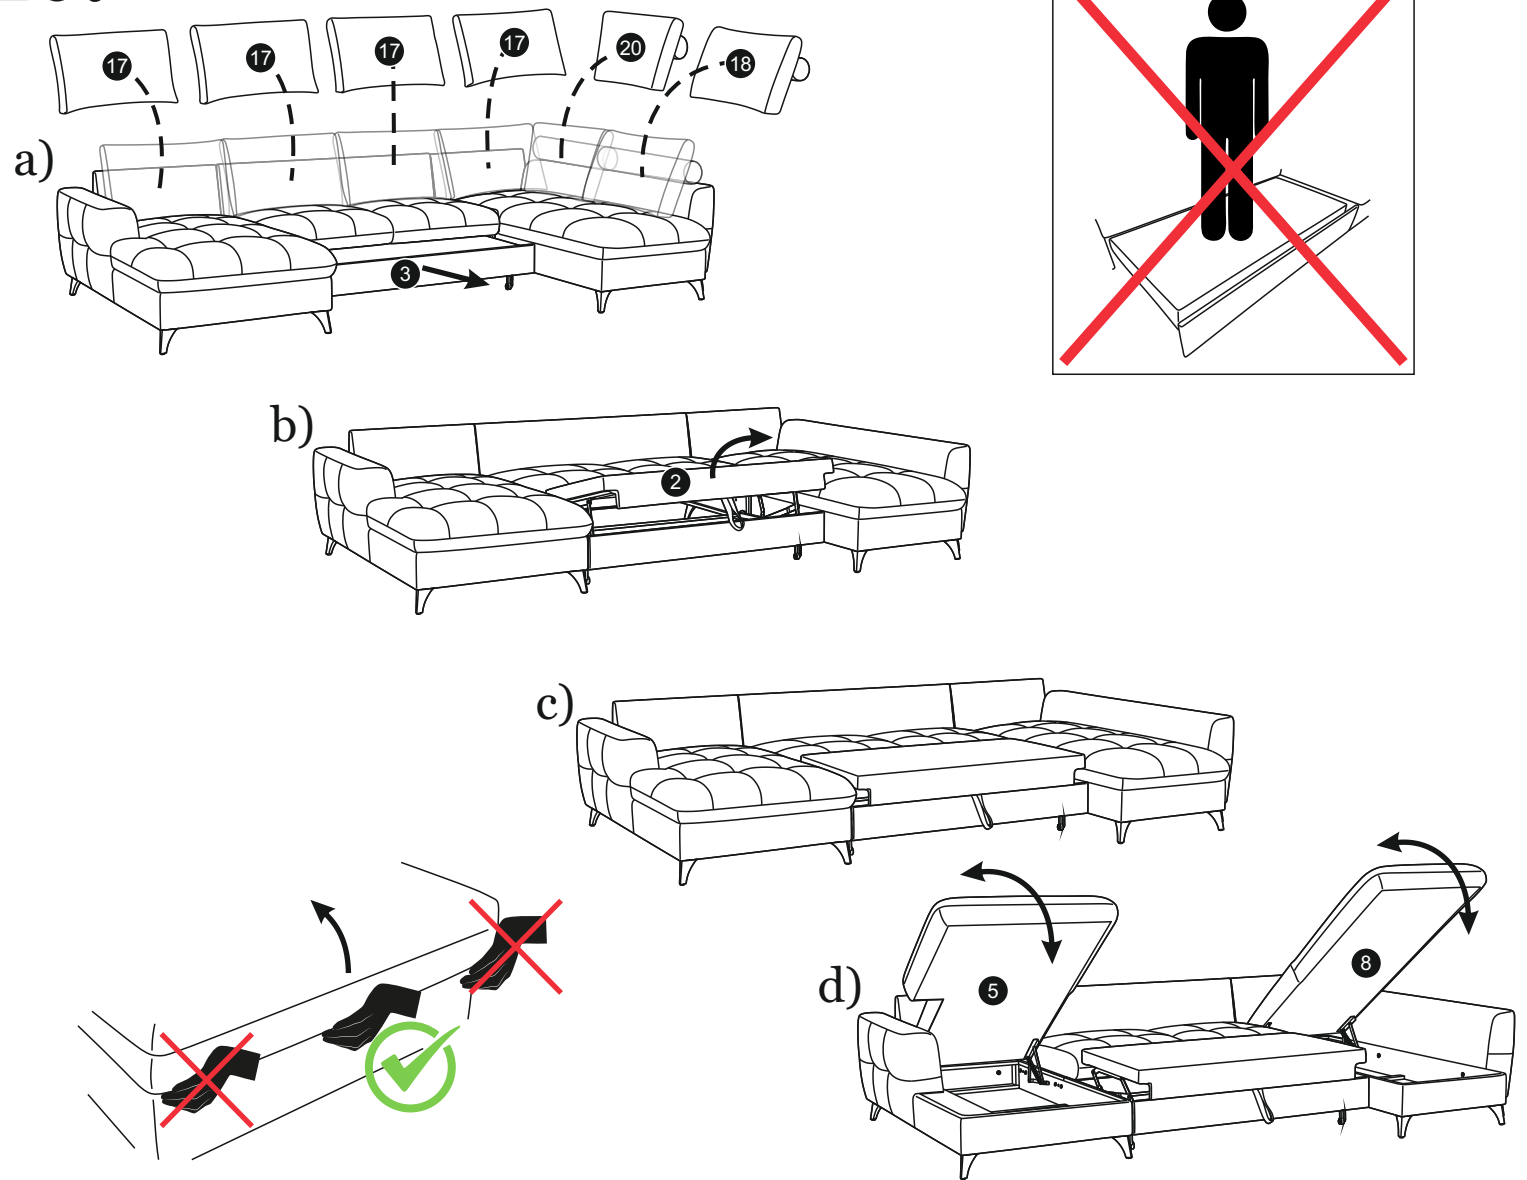







1.

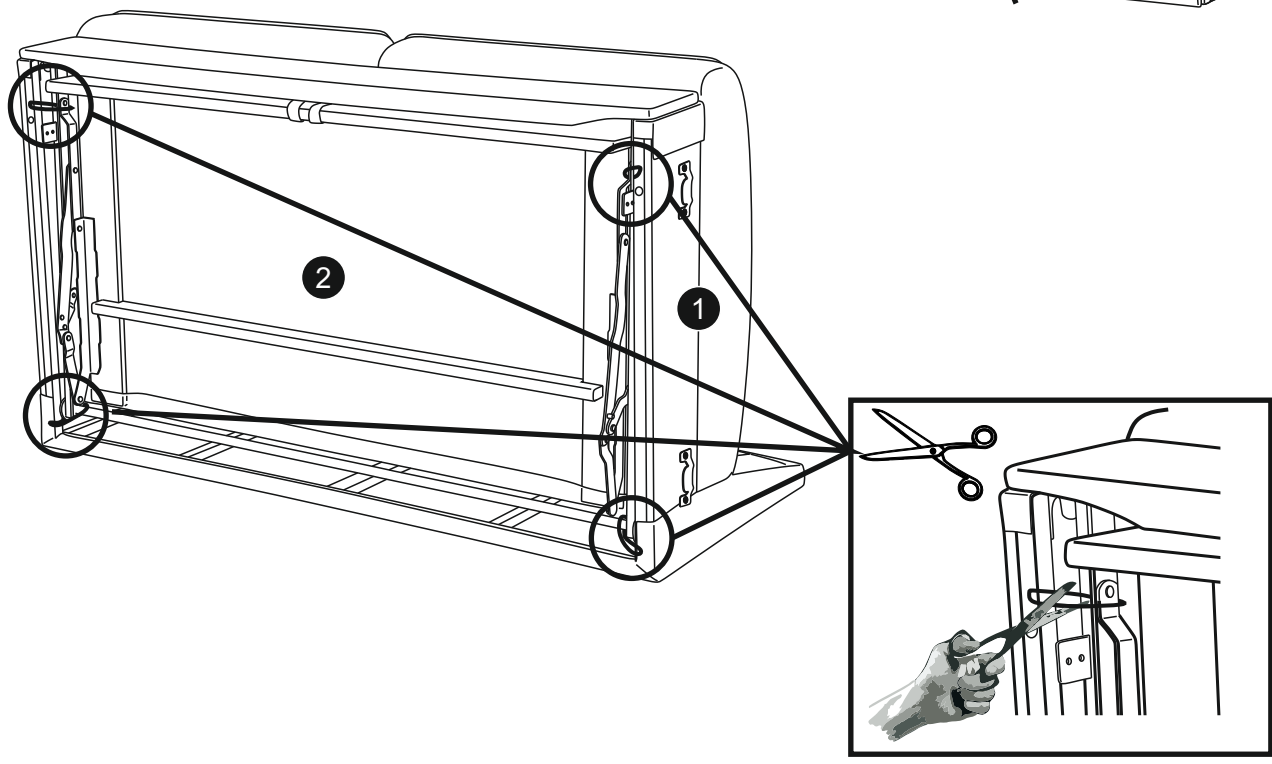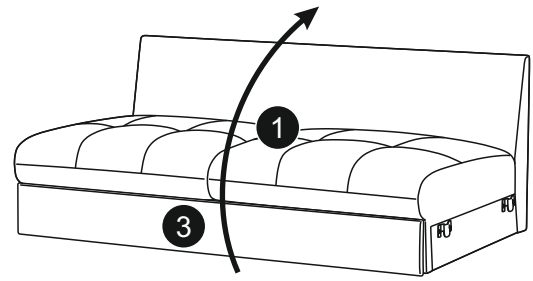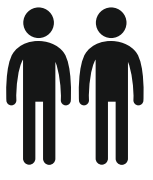







2.

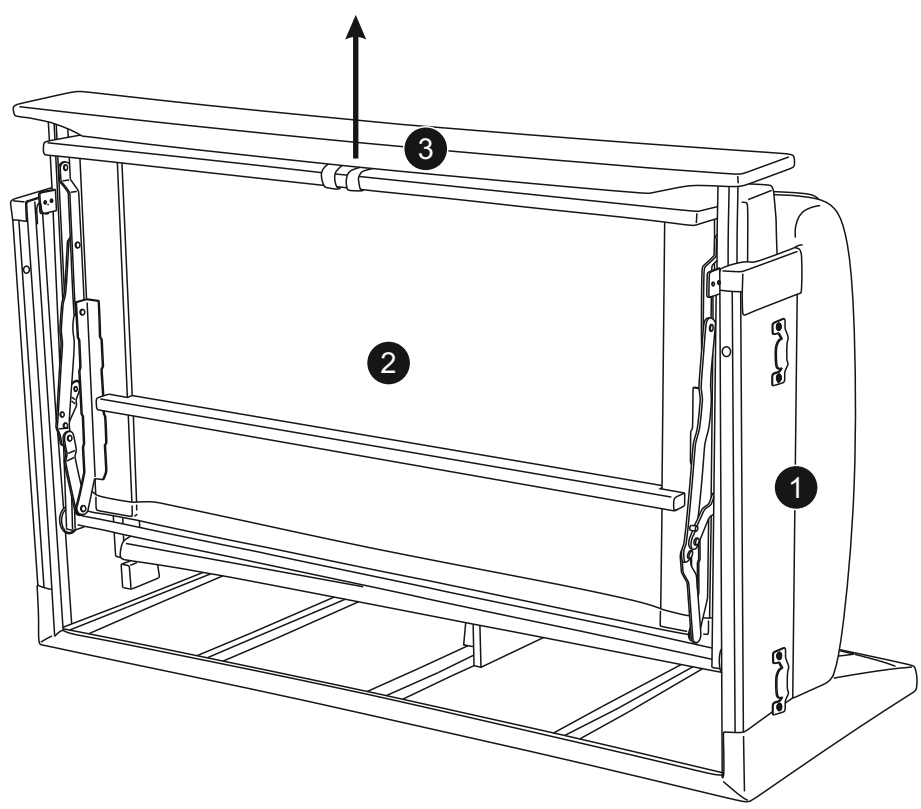









3.

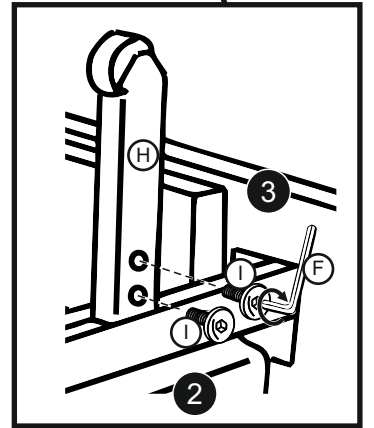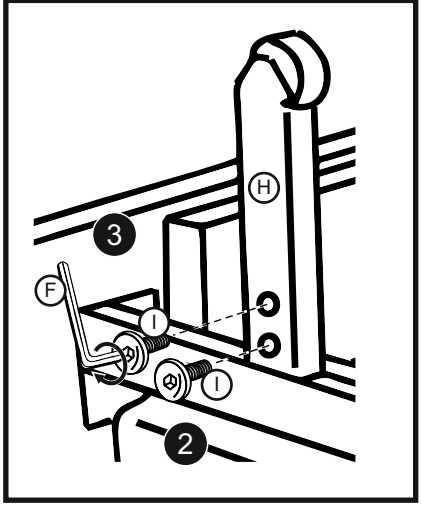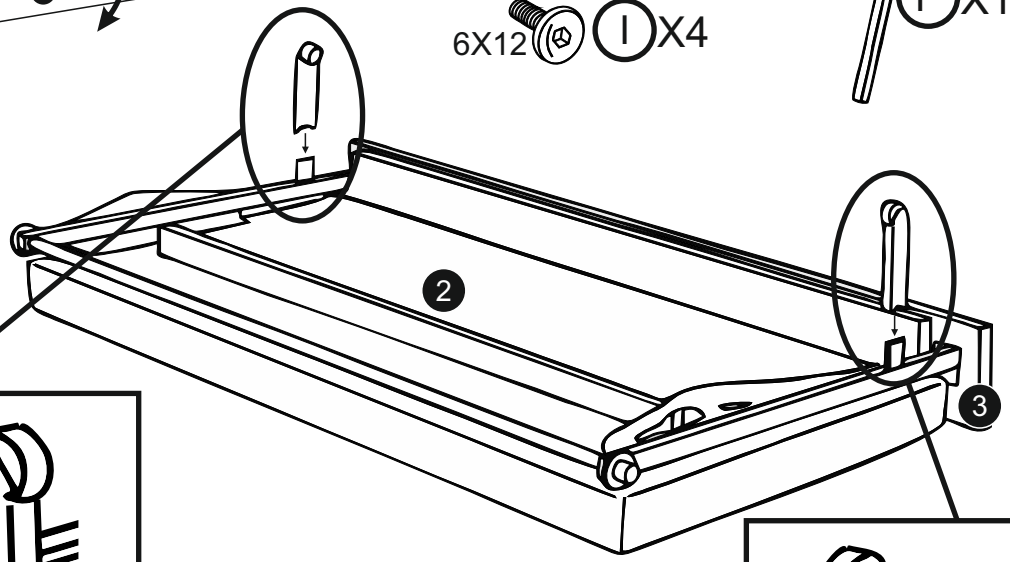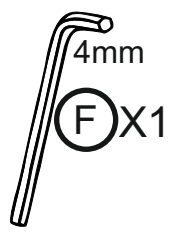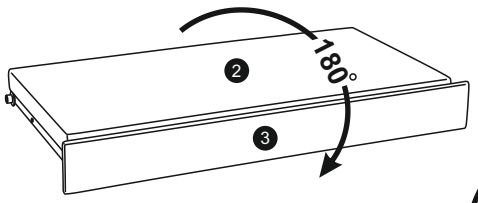







4.

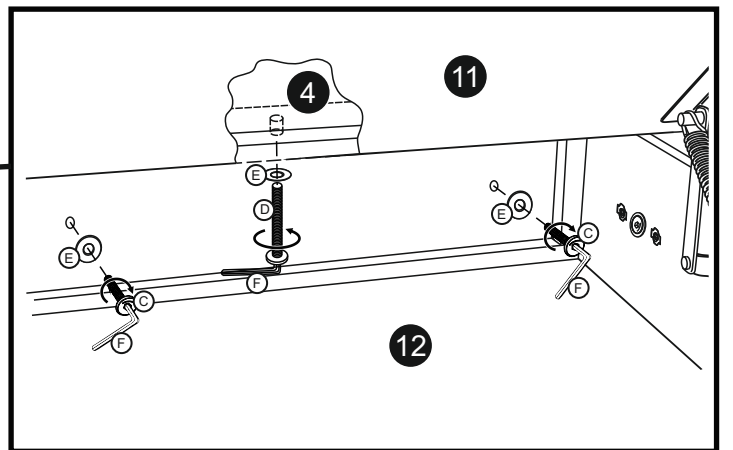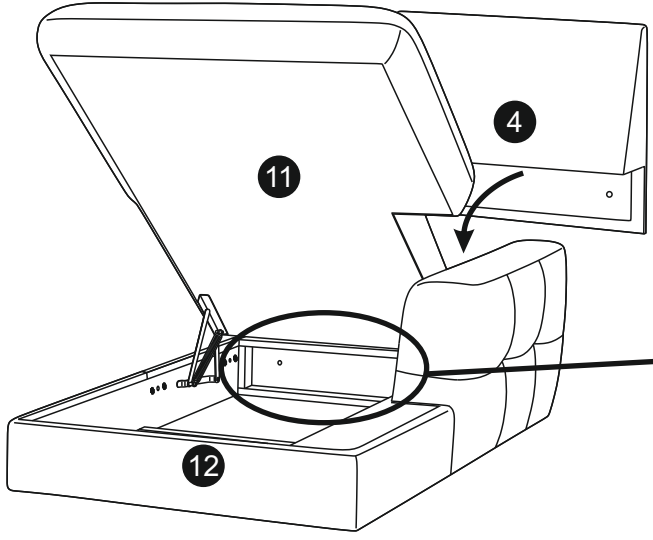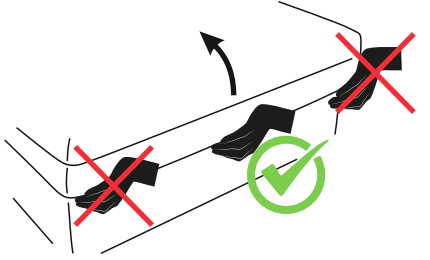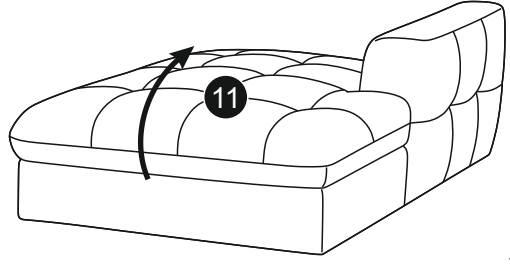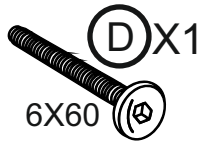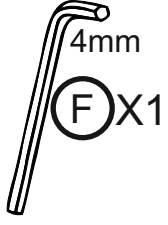









5.

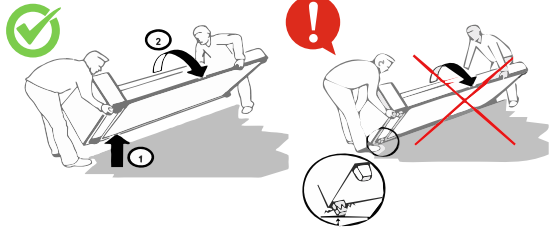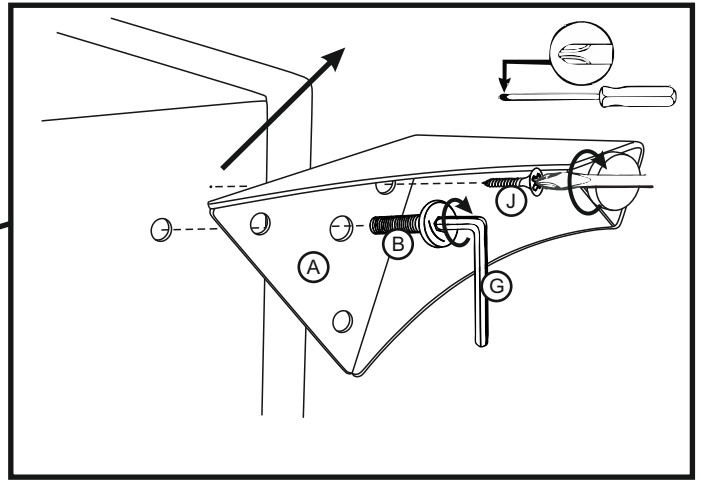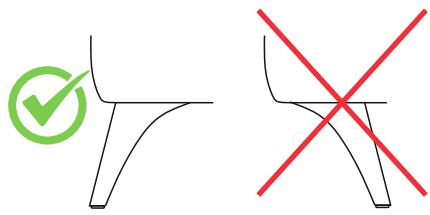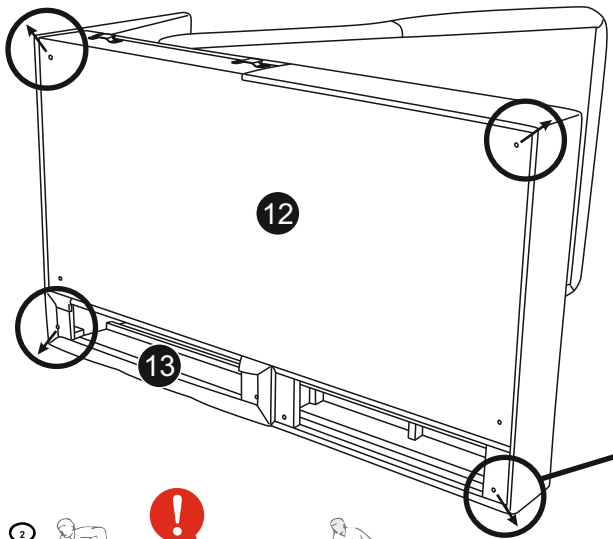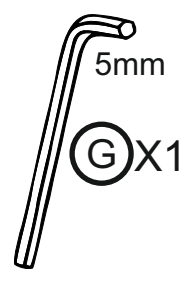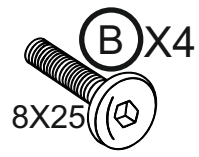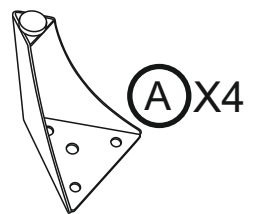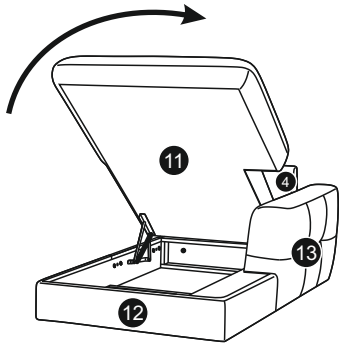





6.

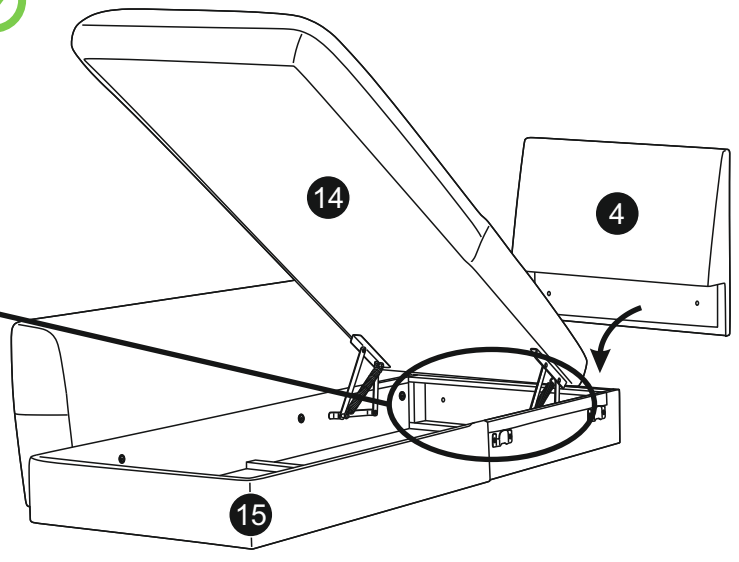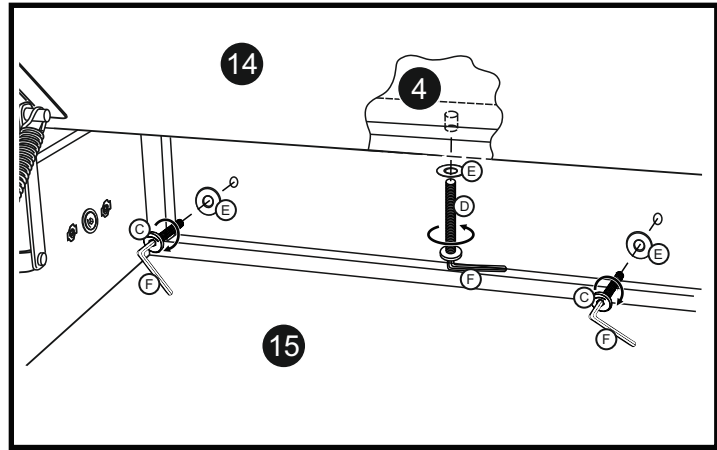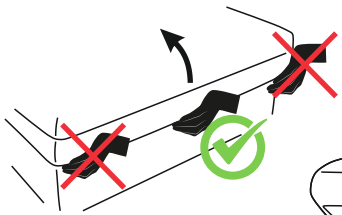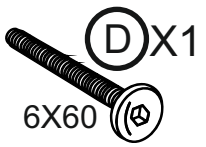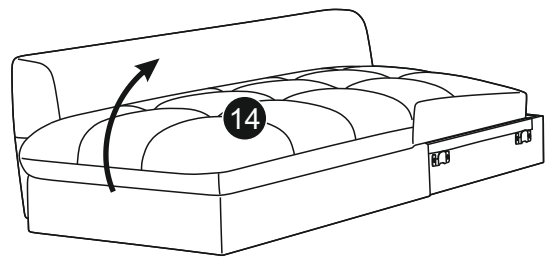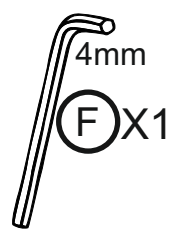

7.

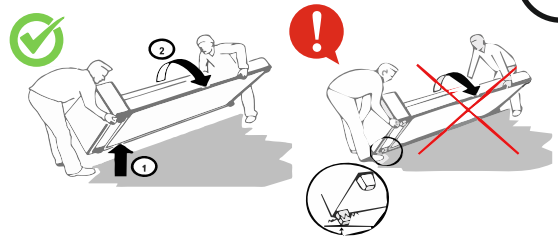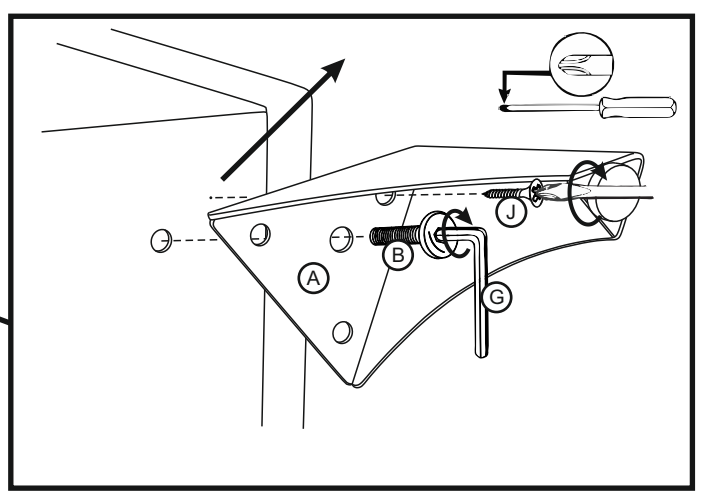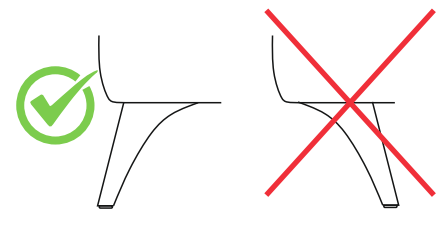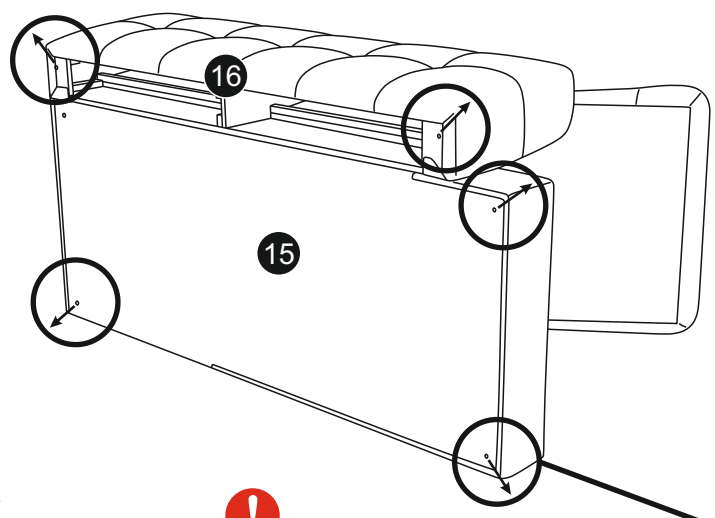
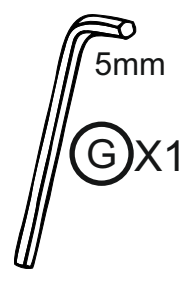
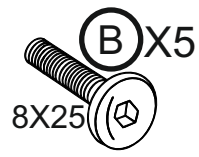
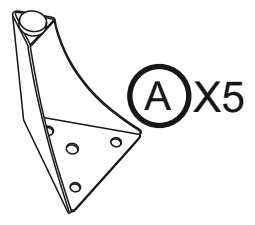
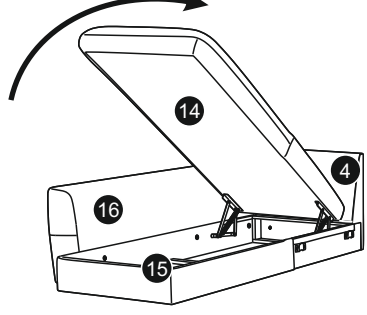


8.


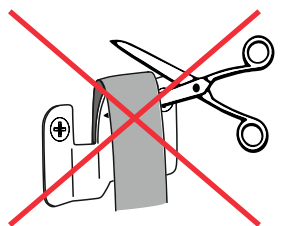
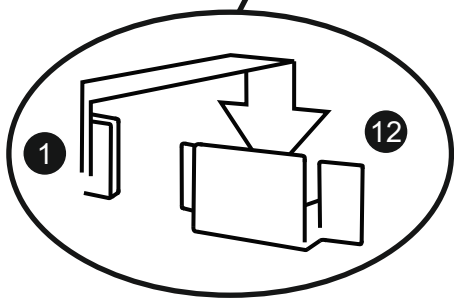
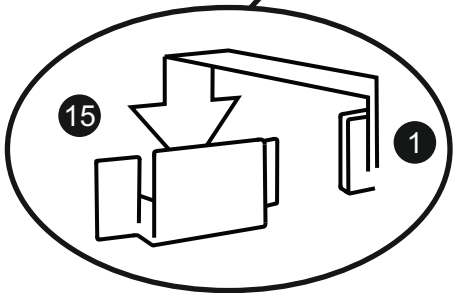
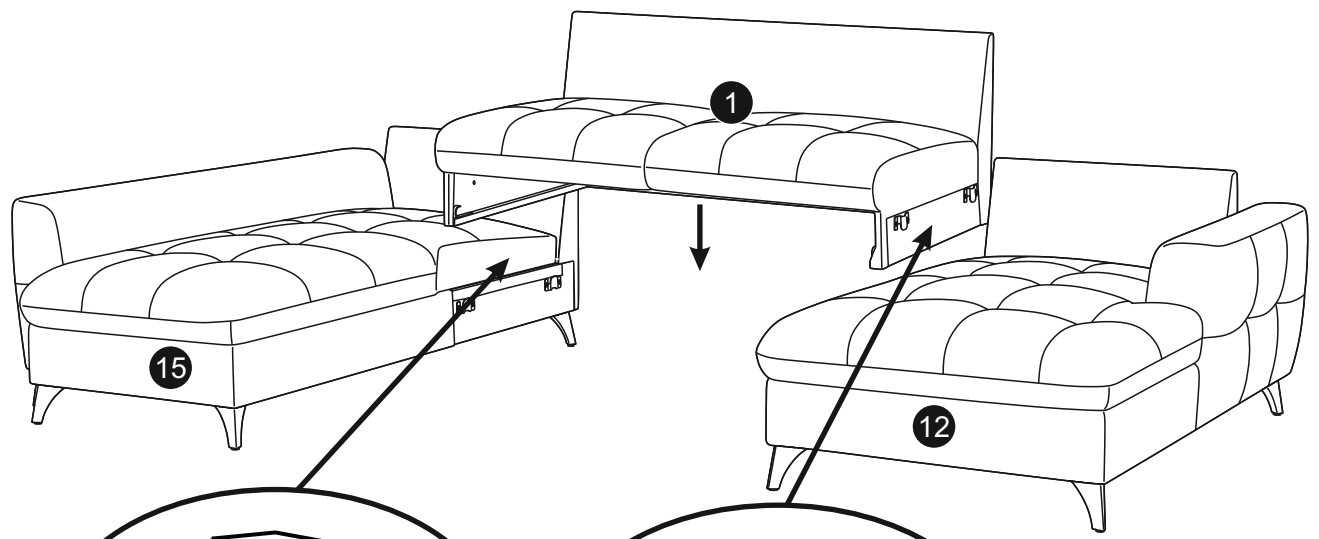


Bitte Schutzvlies nicht entfernen
(angebracht um Geräuschbildung zu vermeiden)

9.


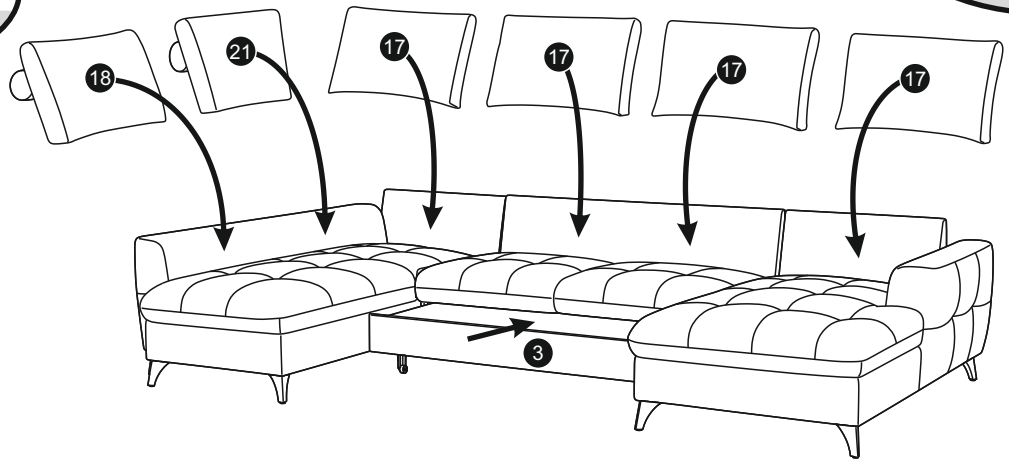
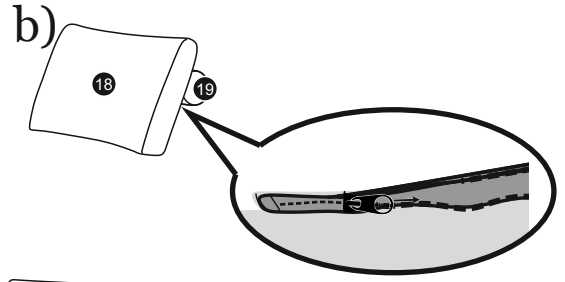
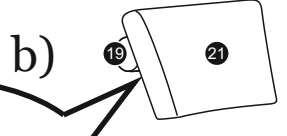
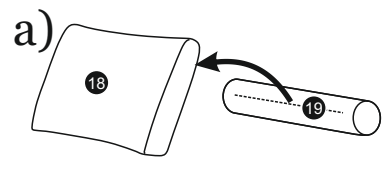
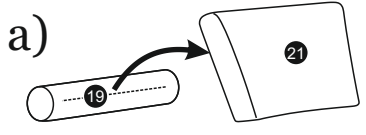


10.

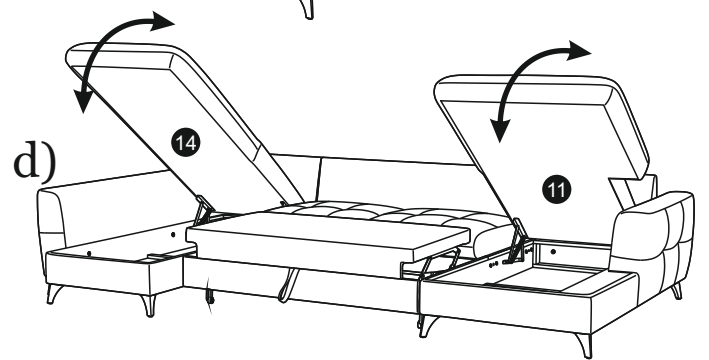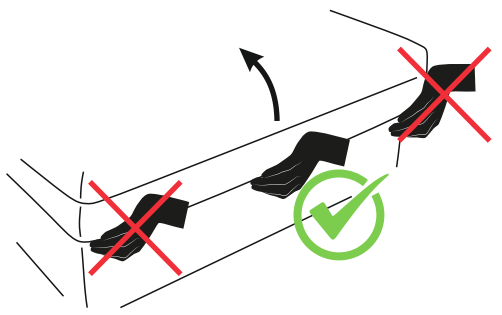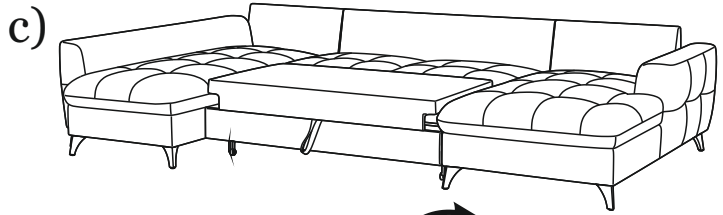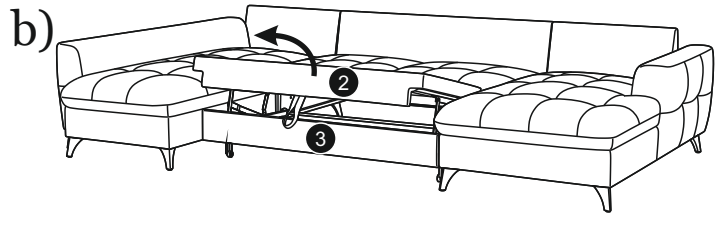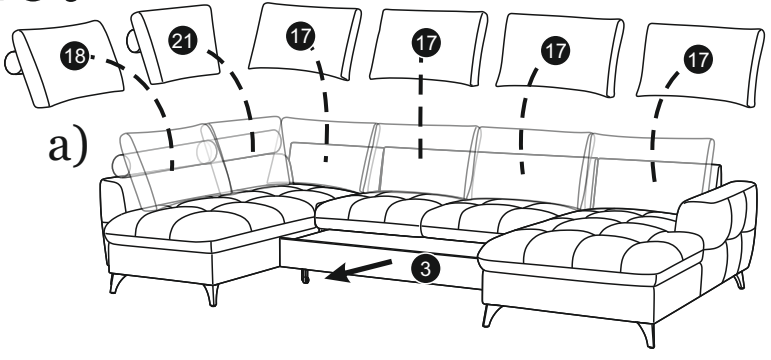




MAXIMALE BELASTUNG
CHARGE MAXIMALE
MAXIMUM LOAD

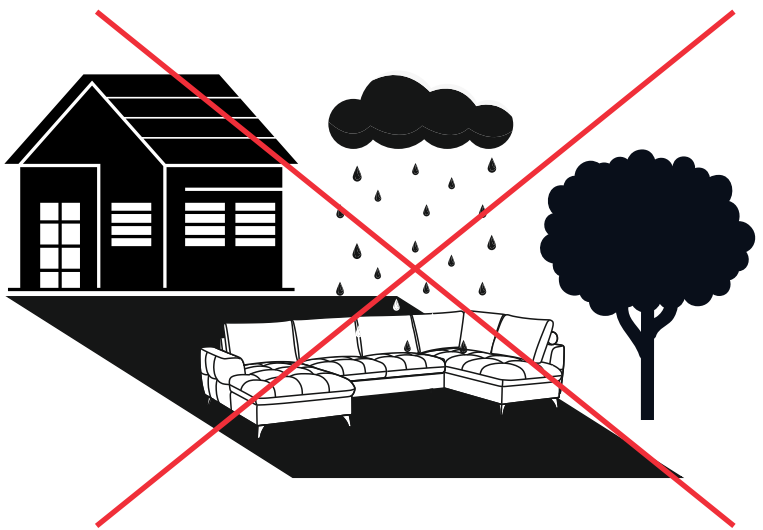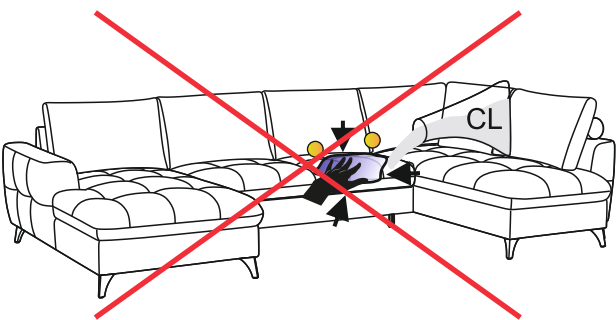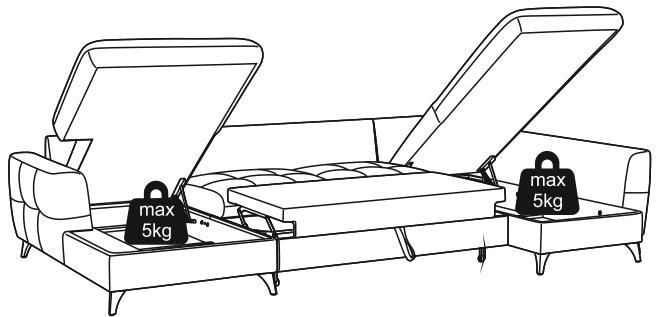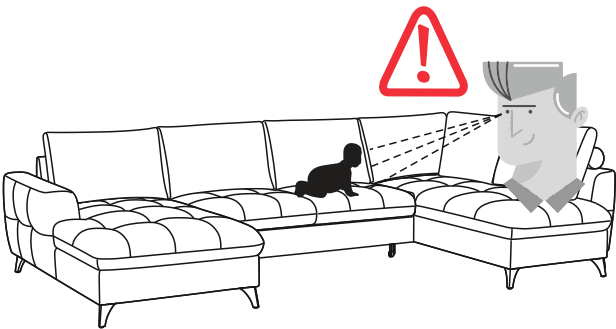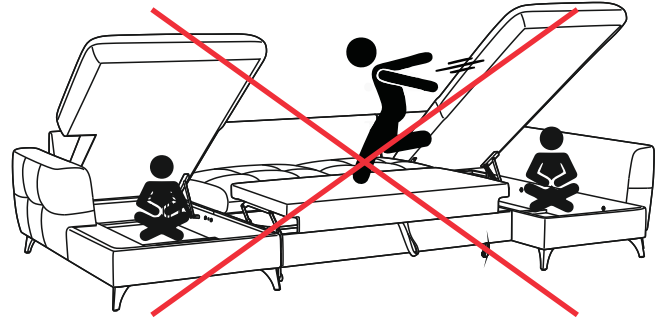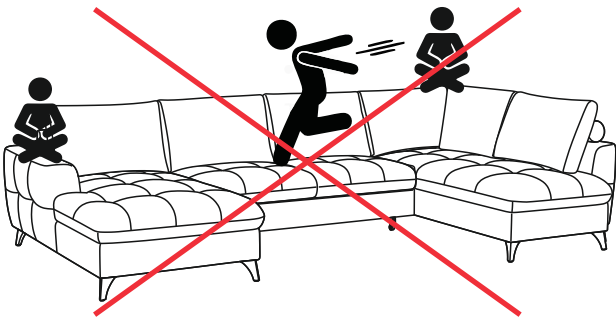

1



2

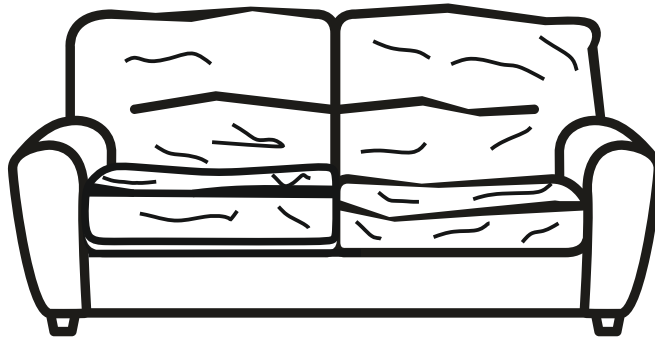

3



4

