



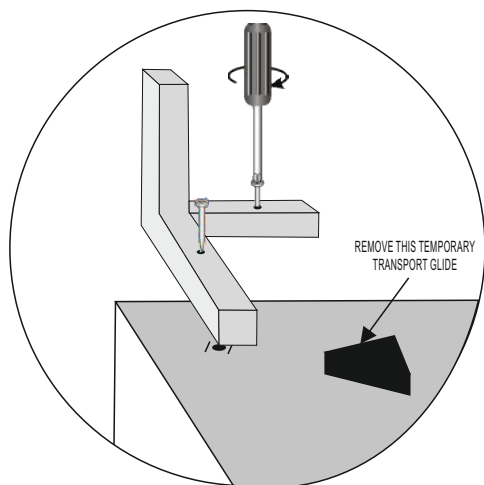

Packo

FOOT ASSEMBLY INSTRUCTION

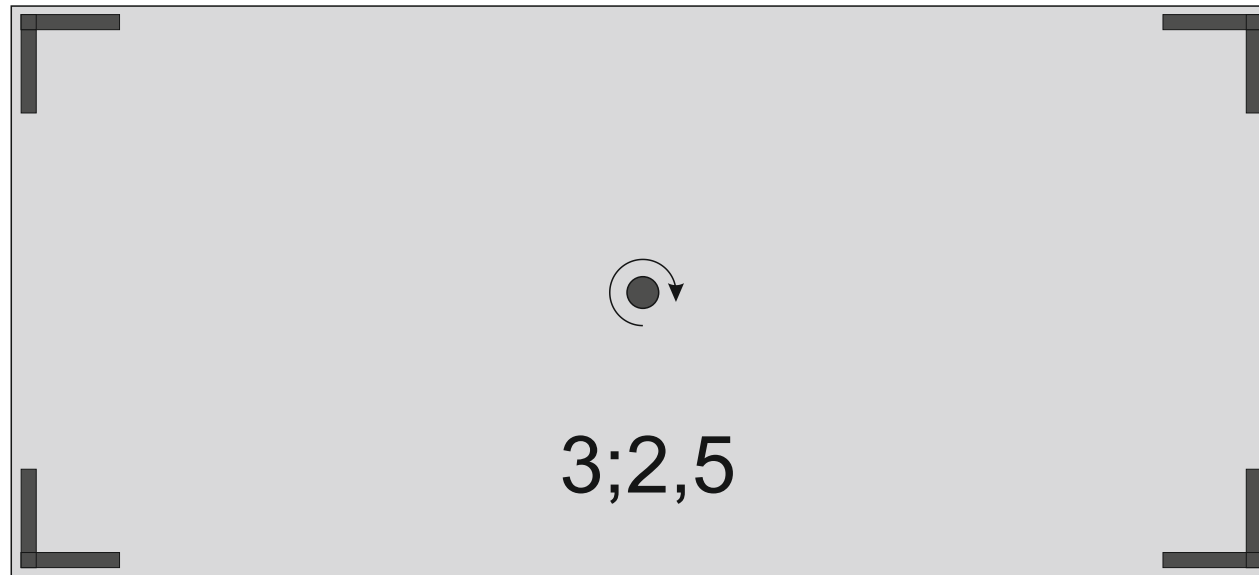






 1x - H-115-160mm

 - 4szt

 8x - 5x35





Packo

FOOT ASSEMBLY INSTRUCTION

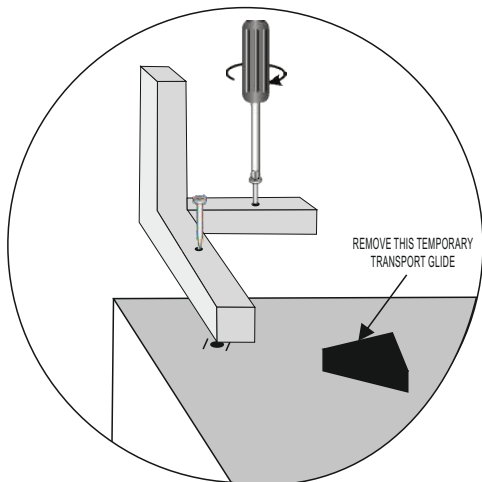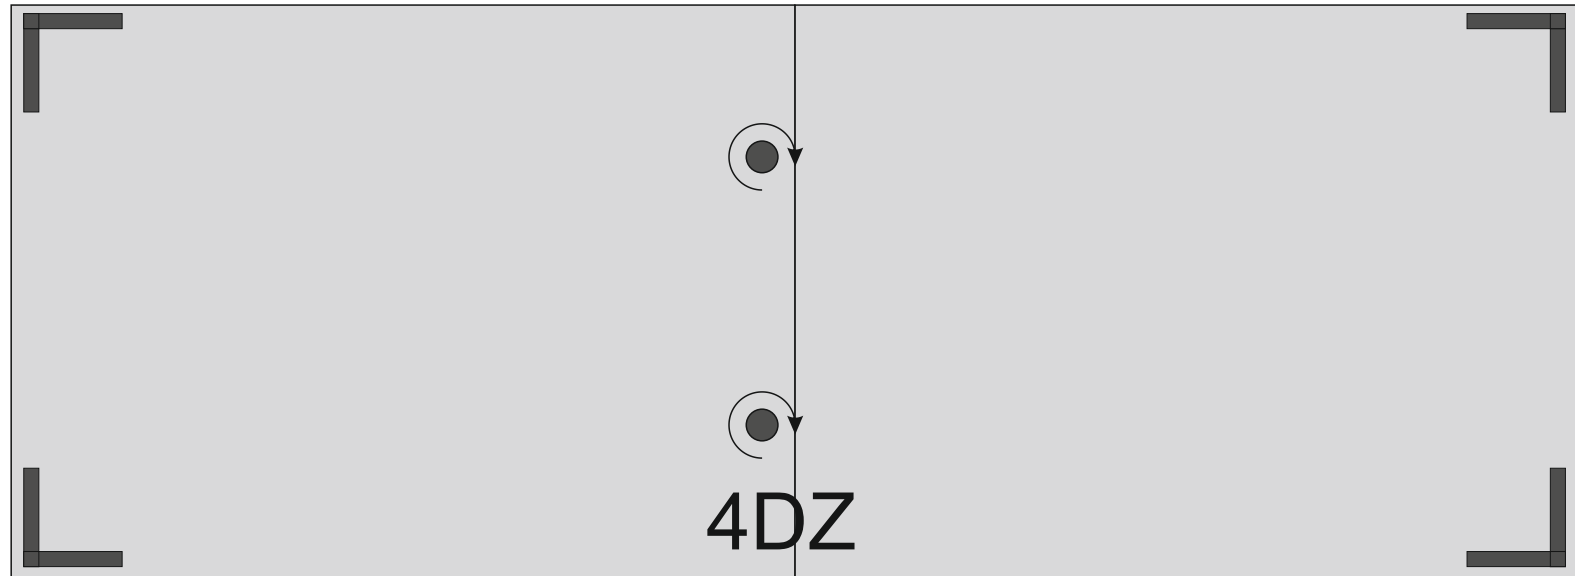



Packo


FOOT ASSEMBLY INSTRUCTION

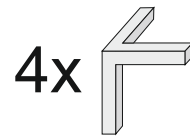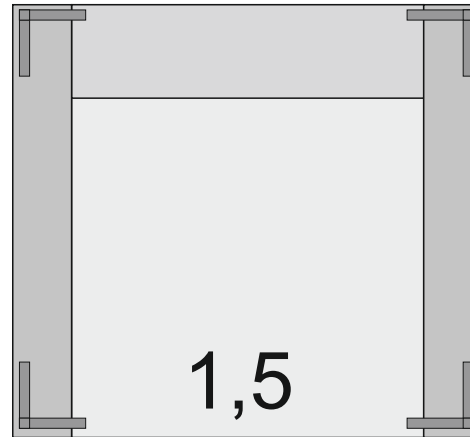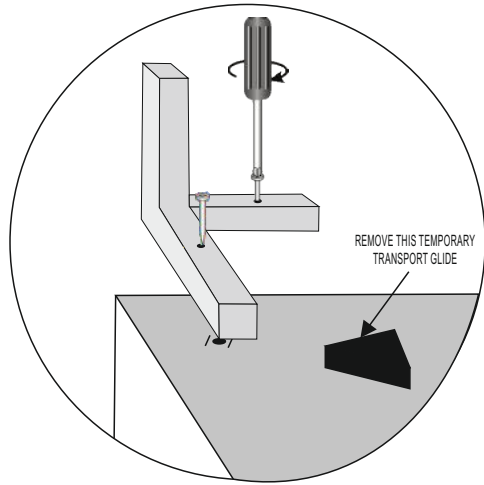


Packo

FOOT ASSEMBLY INSTRUCTION

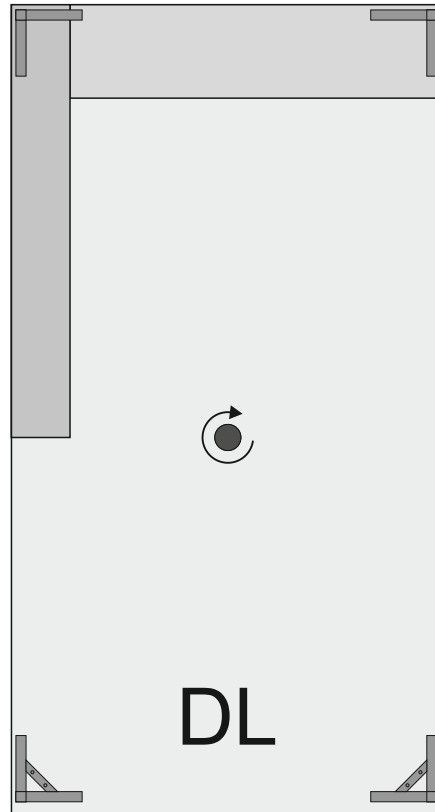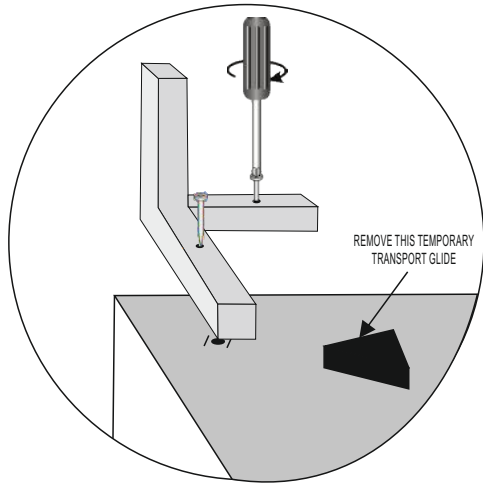



1x  H-115-160mm


4x 

 8x - 5x35


Packo

FOOT ASSEMBLY INSTRUCTION

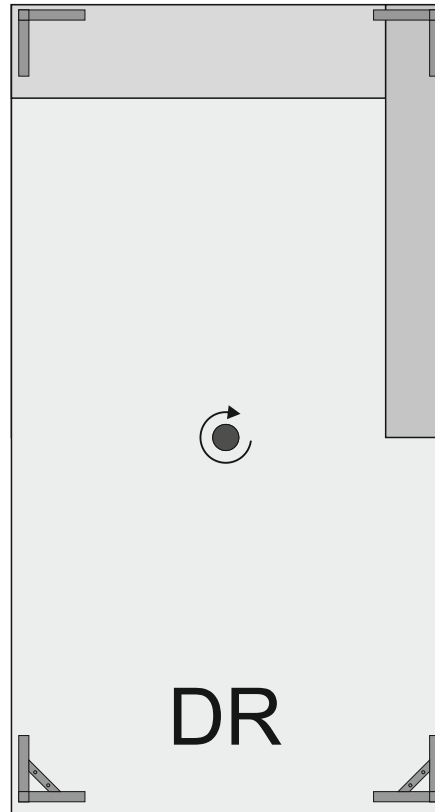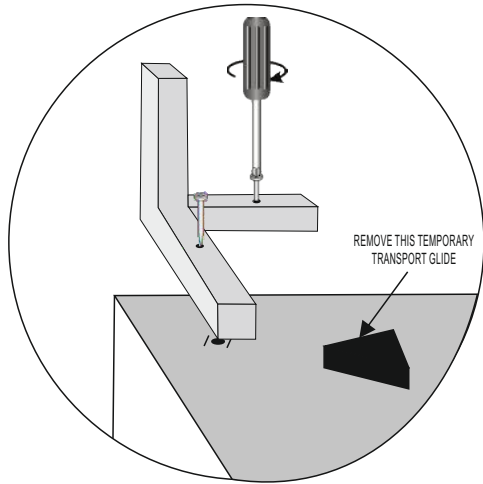



1x  H-115-160mm


4x 

 8x - 5x35


Packo

FOOT ASSEMBLY INSTRUCTION

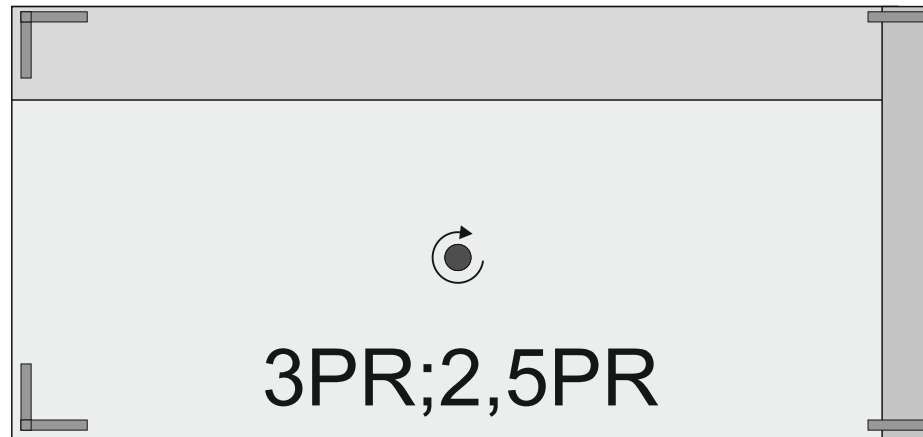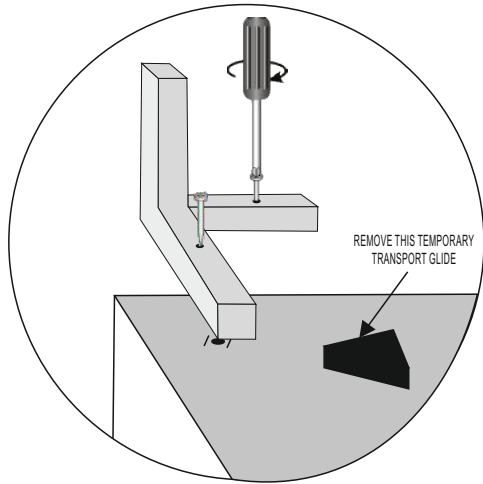



1x  H-115-160mm


4x 

 8x - 5x35


Packo

FOOT ASSEMBLY INSTRUCTION

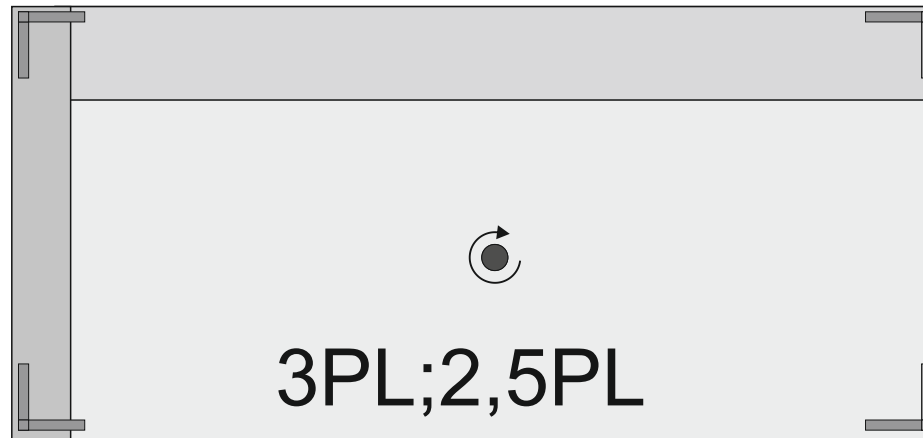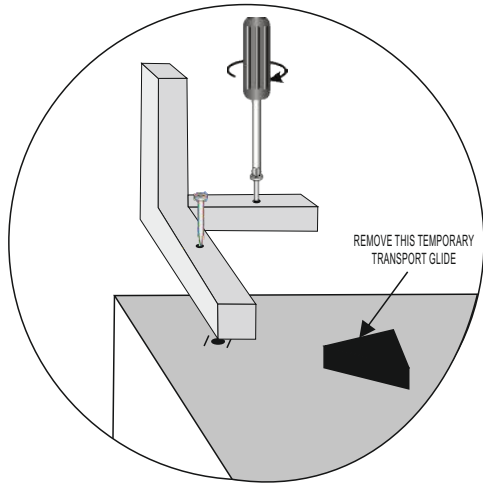



1x  H-115-160mm

4x 

 8x - 5x35

Packo




FOOT ASSEMBLY INSTRUCTION

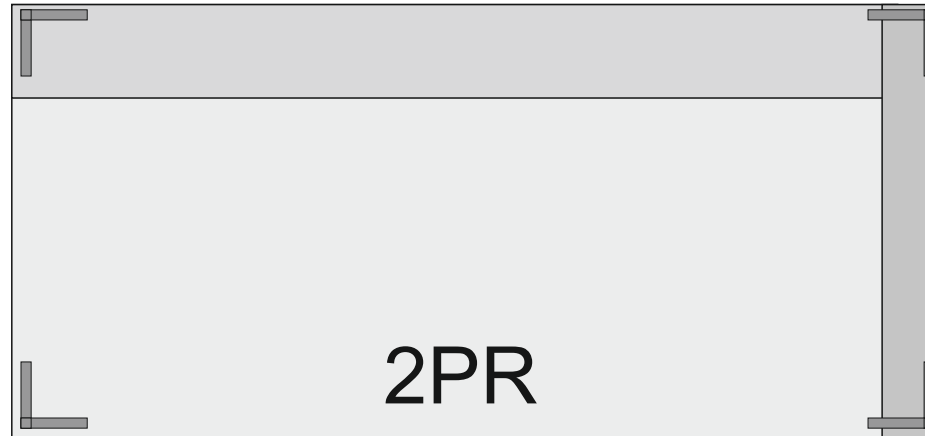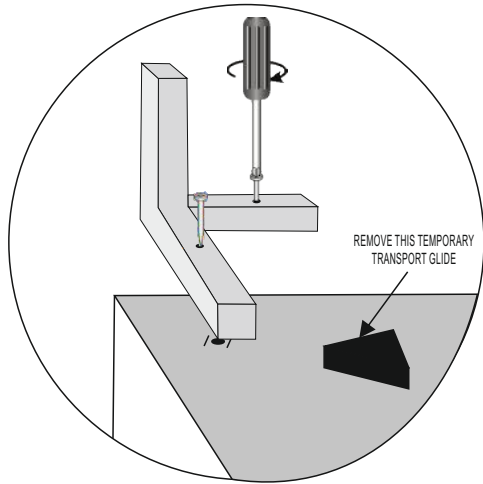

8x - 5x35




Packo

FOOT ASSEMBLY INSTRUCTION

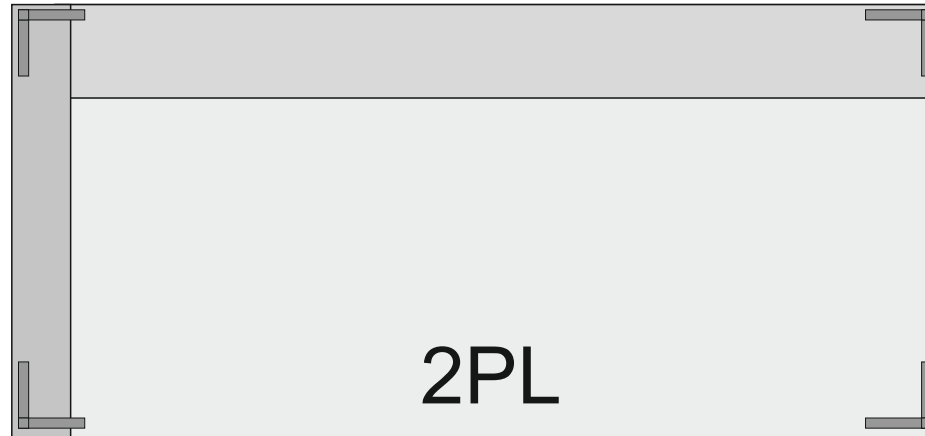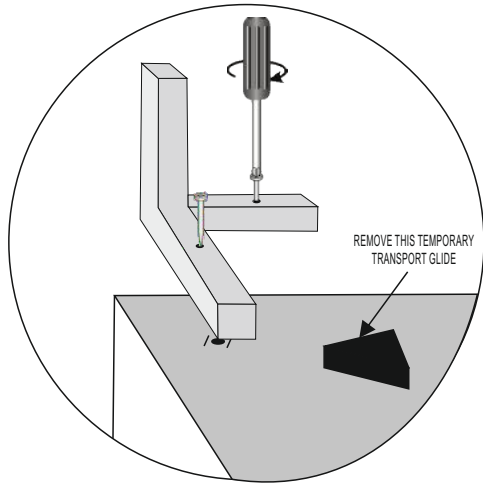



Packo

FOOT ASSEMBLY INSTRUCTION

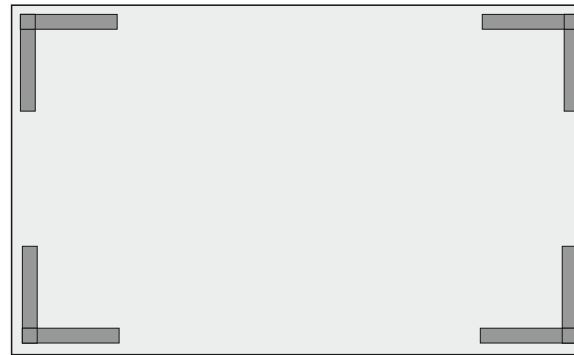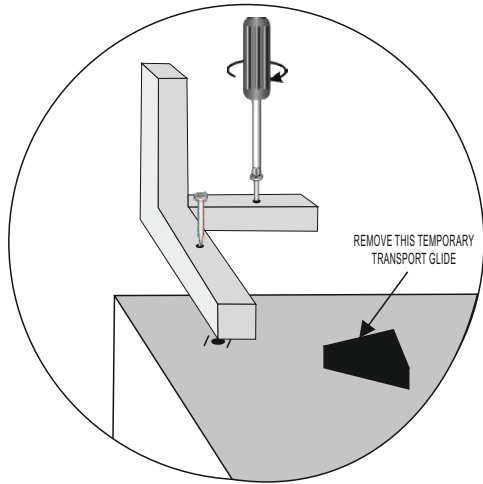

Packo

FOOT ASSEMBLY INSTRUCTION

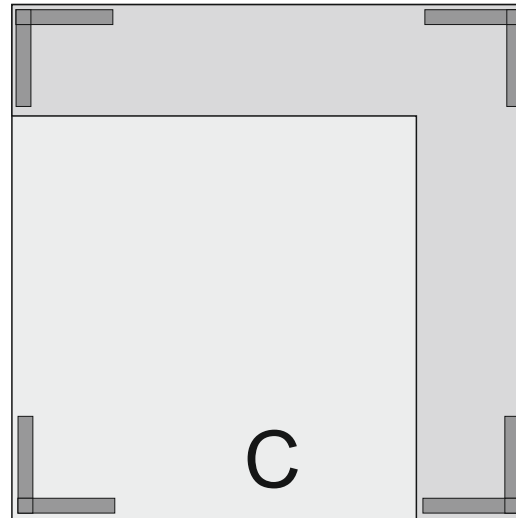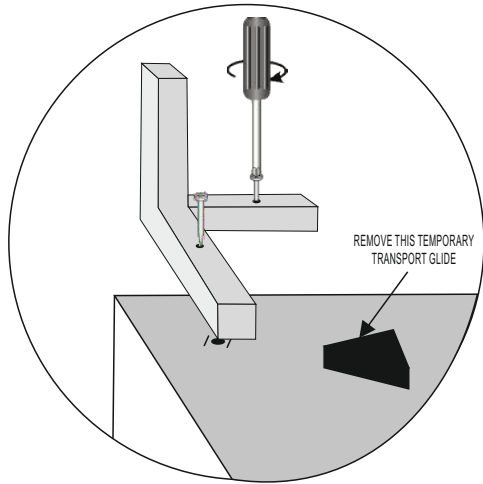

8x - 5x35