
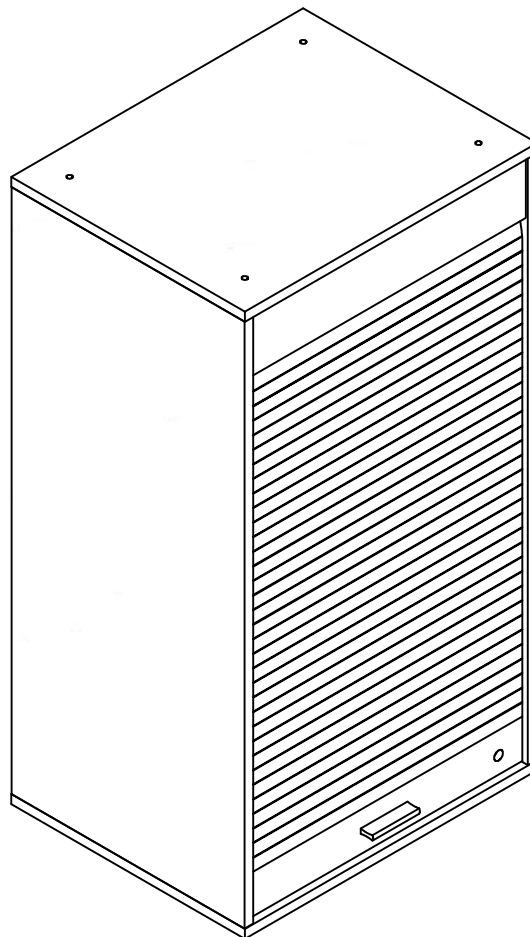


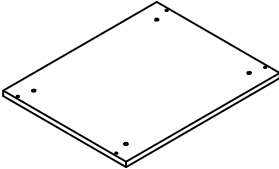
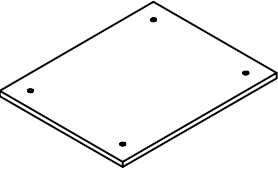
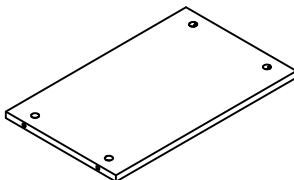
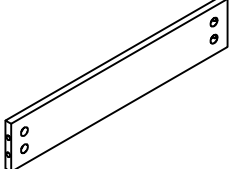
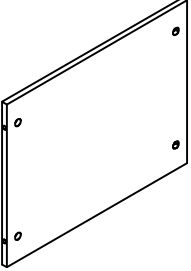
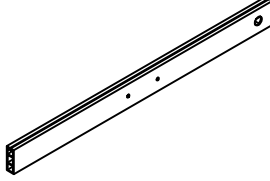
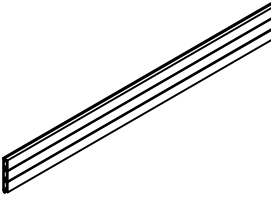














**Büroschrank Aktos
Montageanleitung
Instruction manual**

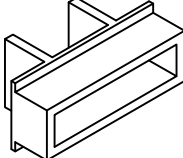


**VCM Morgenthaler GmbH
D-79346 Endingen am Kaiserstuhl
service@vcm-gruppe.de
www.vcm-gruppe.de**

A  x1	B  x1	C  x1
D  x1	E  x1	F  x1
G  x2	H  x1	I  x21
J  x2		

a	x24	b	x24	c	x4	d	x1
				 M3.5x16			
e	x2	f	x1	g	x4	h	x1
 M4x18							


i	x4	j	x1
 M6x25			

01

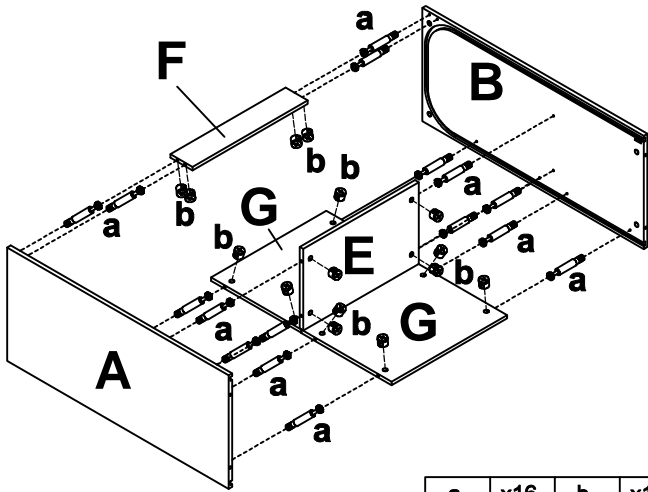


a	x16	b	x16

02

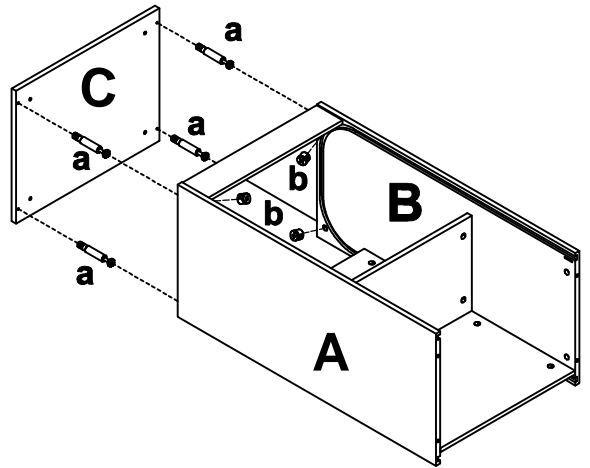


a	x4	b	x4

03

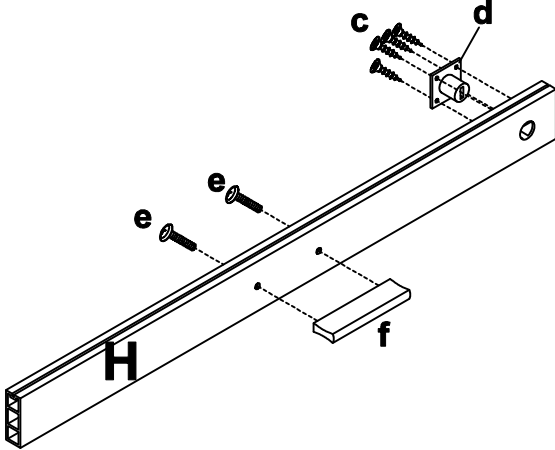


c	x4	d	x1	e	x2	f	x1
M3.5x16				M4x18			

04

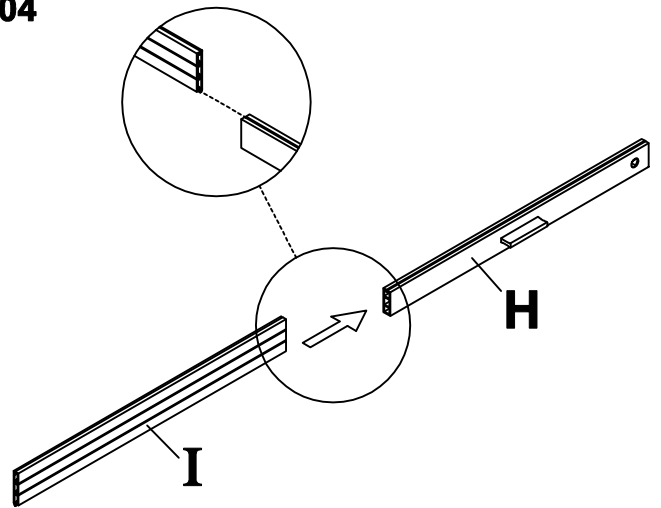


05

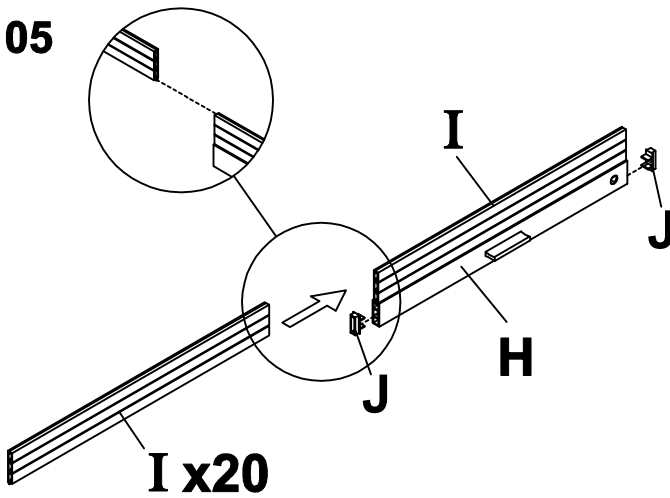


I x20

06

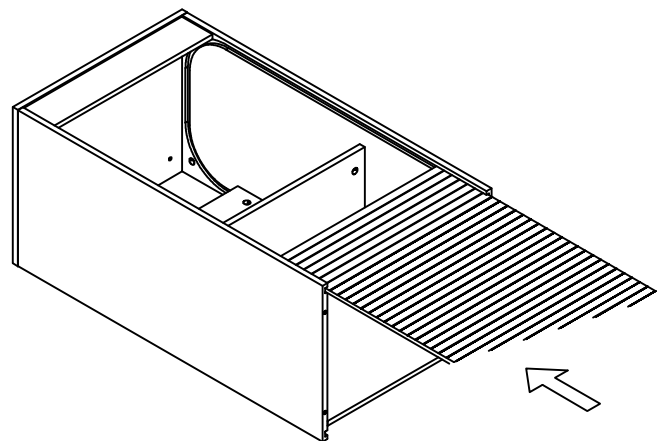


07

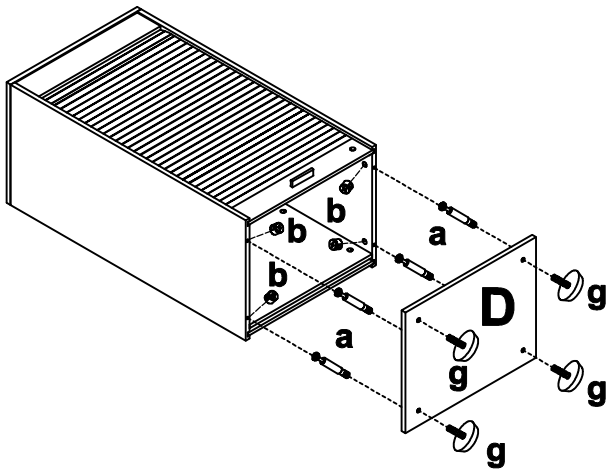


a	x4	b	x4	g	x4




08

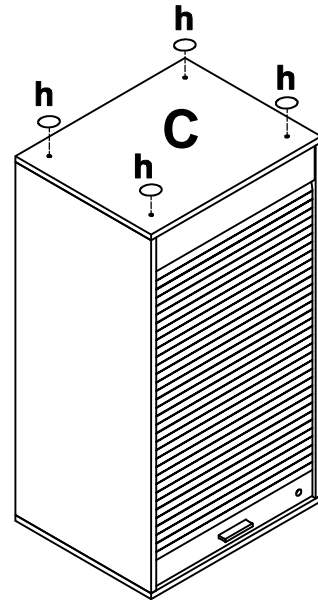


h	x1

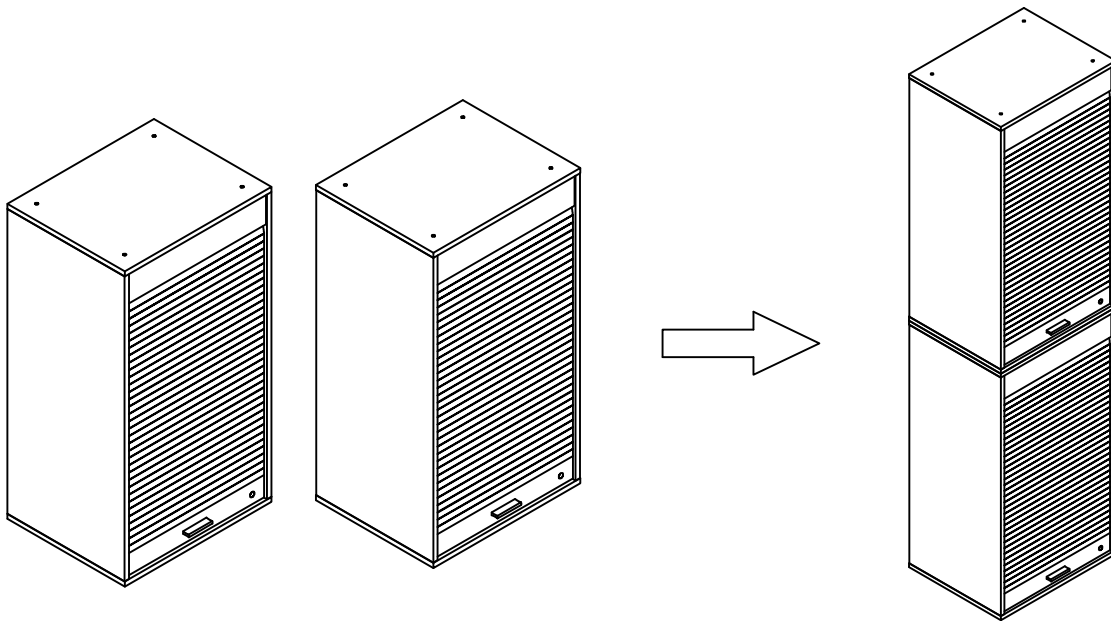


01

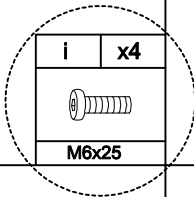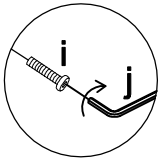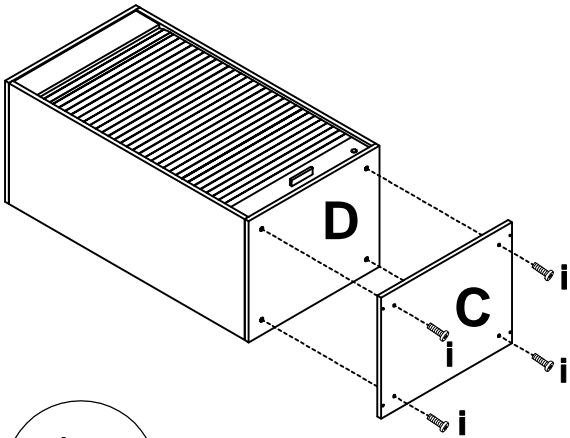

02

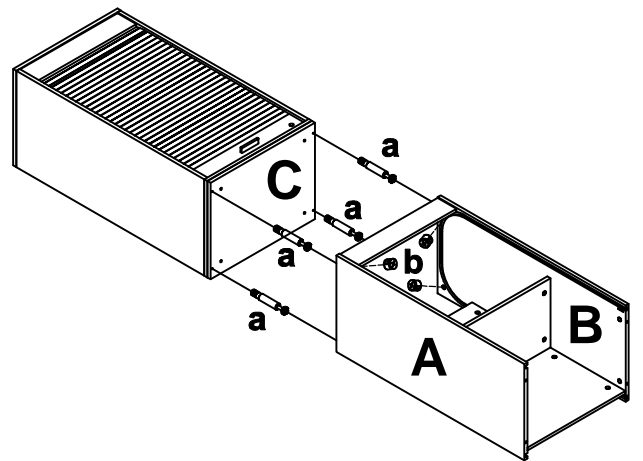

03

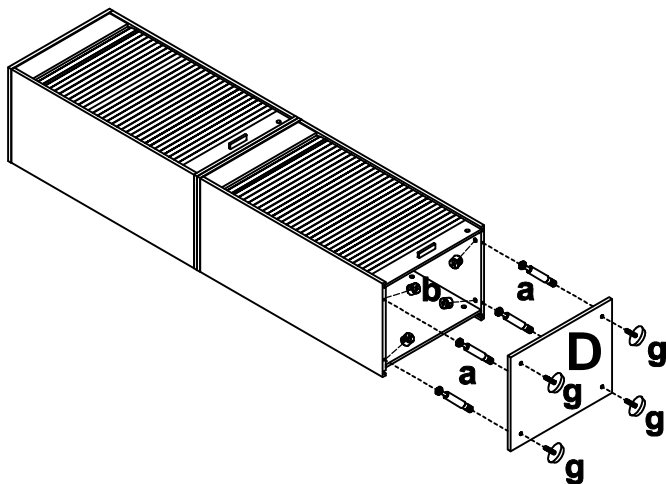

04

