





ASSEMBLY INSTRUCTION: 12540083/03



ambia. GARDEN

XXXLutz KG
Roemerstrasse 39
AT-4600 Wels, Austria

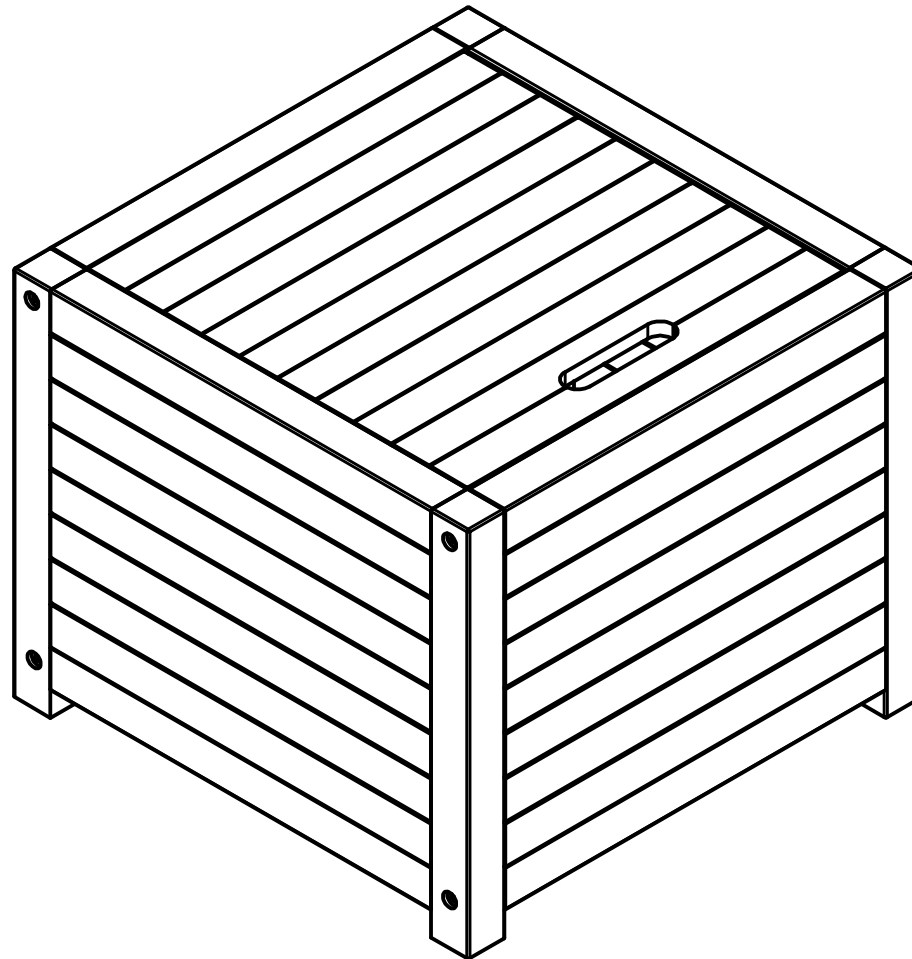


ASSEMBLY INSTRUCTION: 12540083/03

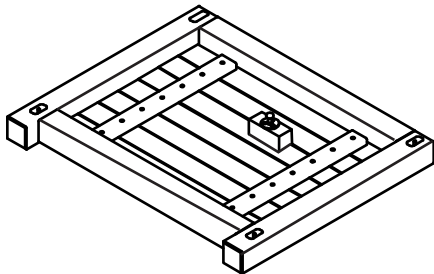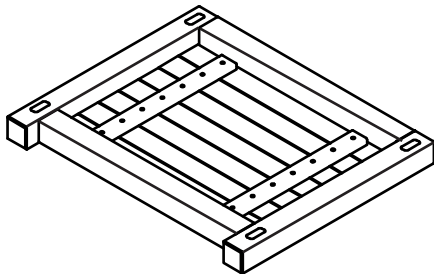No	Name of Hardware	Fix	Qty	A	B
1	Screw M6x80 mm		8	 x1	 x1
2	Piston		1		
3	Screw M4x15		6		
4	Allen Key		1		

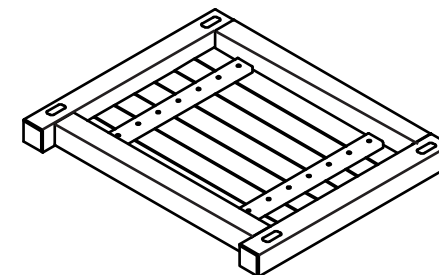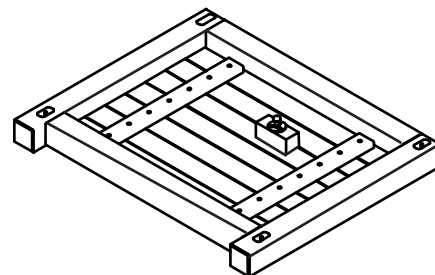


C

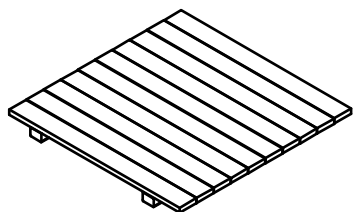


x1

D

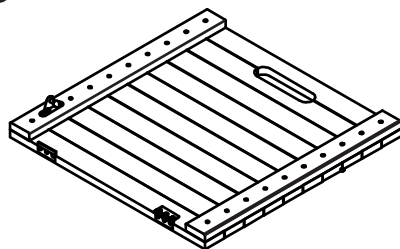


x1

E

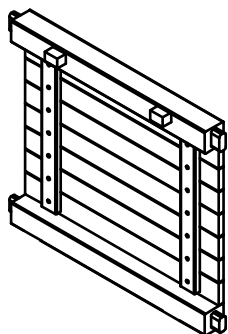


x1

F

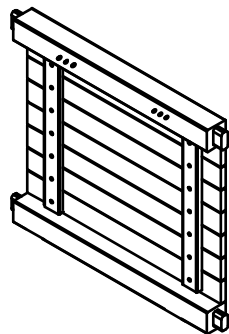


x1

Step 1:

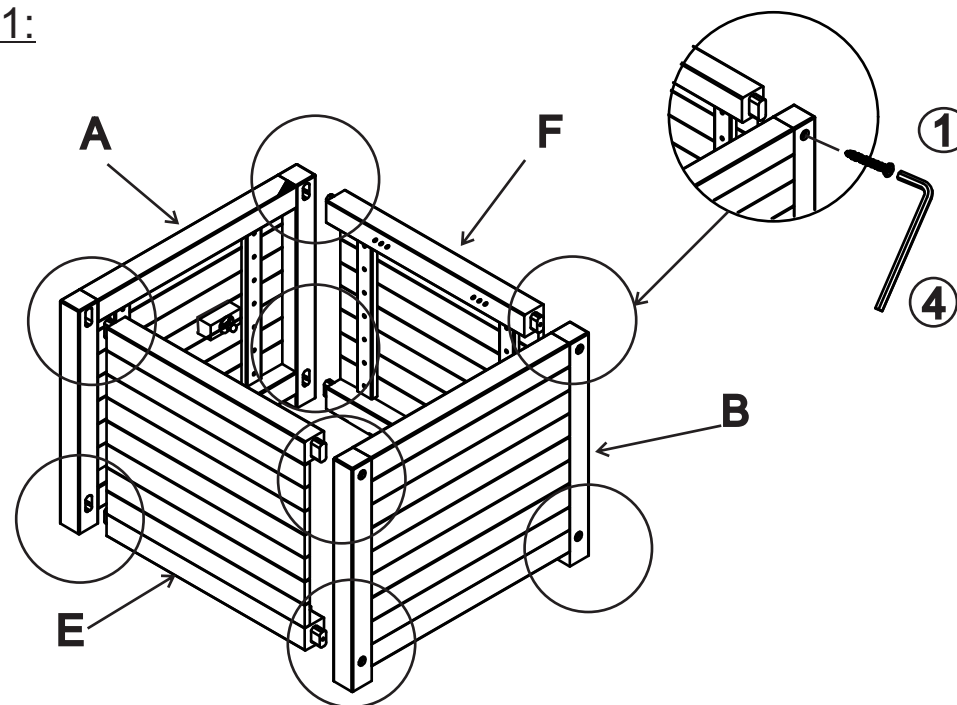


ASSEMBLY INSTRUCTION: 12540083/03



Step 2:

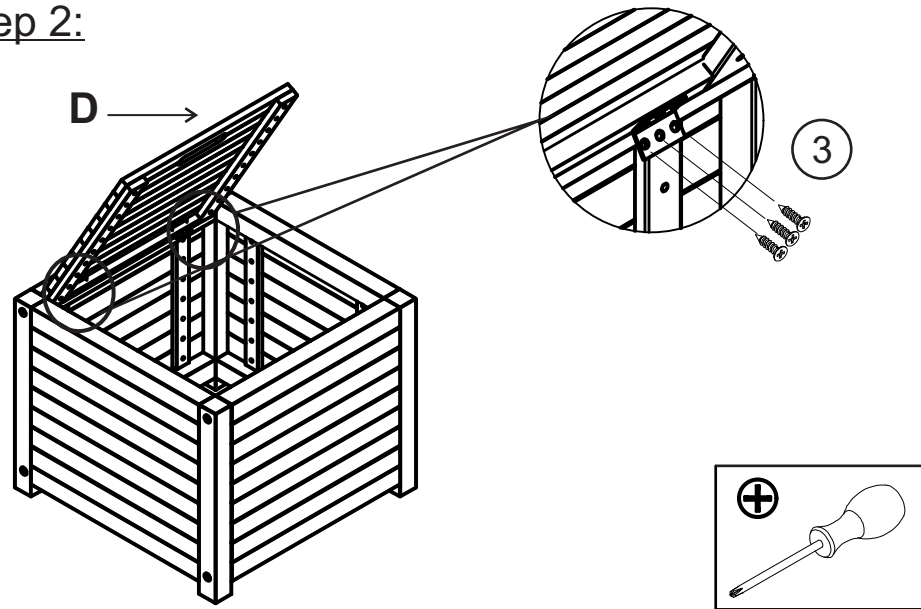

Step 3:

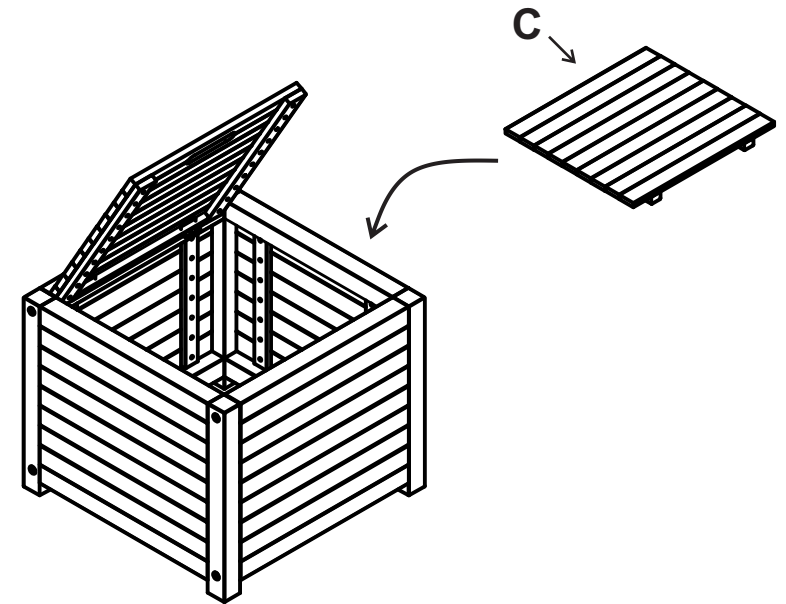

Step 4:

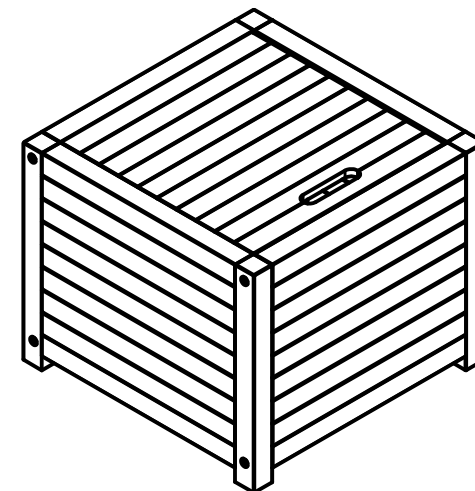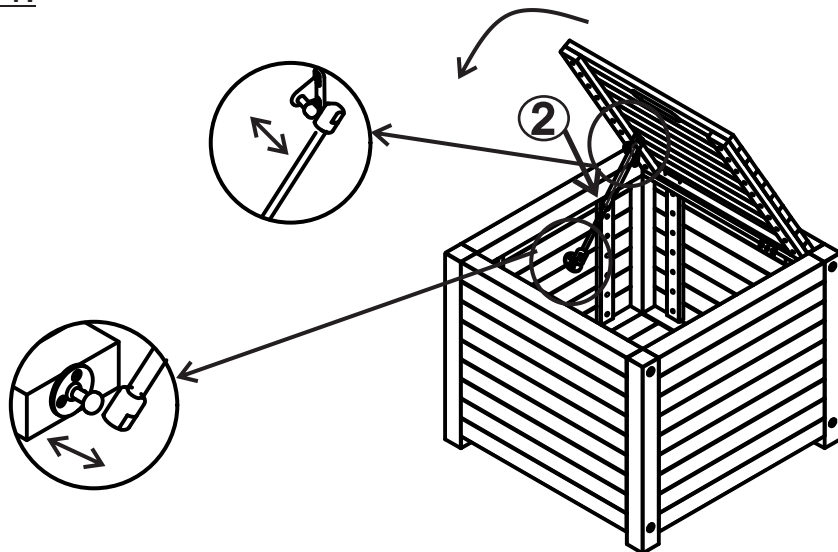

Finish.