




BETT 0276

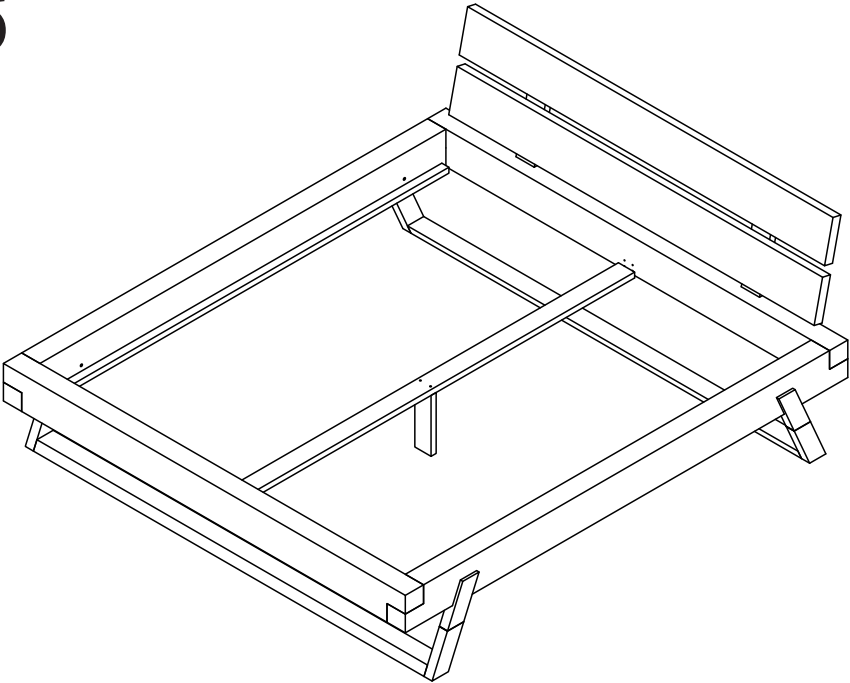





Aufbauzeit - 40 Minuten






1 10x50 x8	2 M6x60 x16	3 12x100 x4	4 6x120 x8	5 35x35x90 x4	6 3,5x30 x36
7 x2	8 x2	9 x4	10 x1	11 x1	12 SW4 x1
13 5x55 x2	14 3,5x20 x14	15 8x100 x4	16 M8 x4	17 M8 x4	18 M8 x1












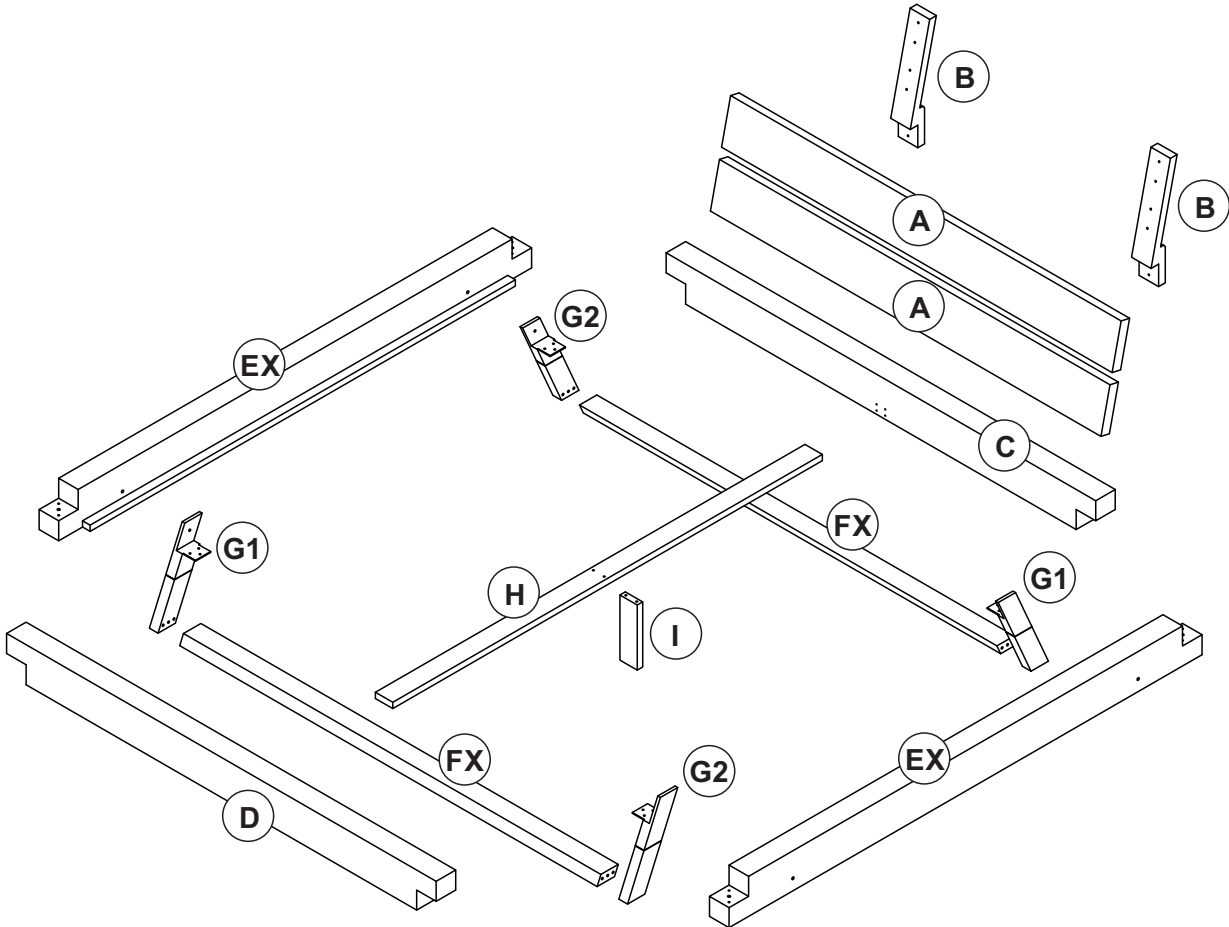


1

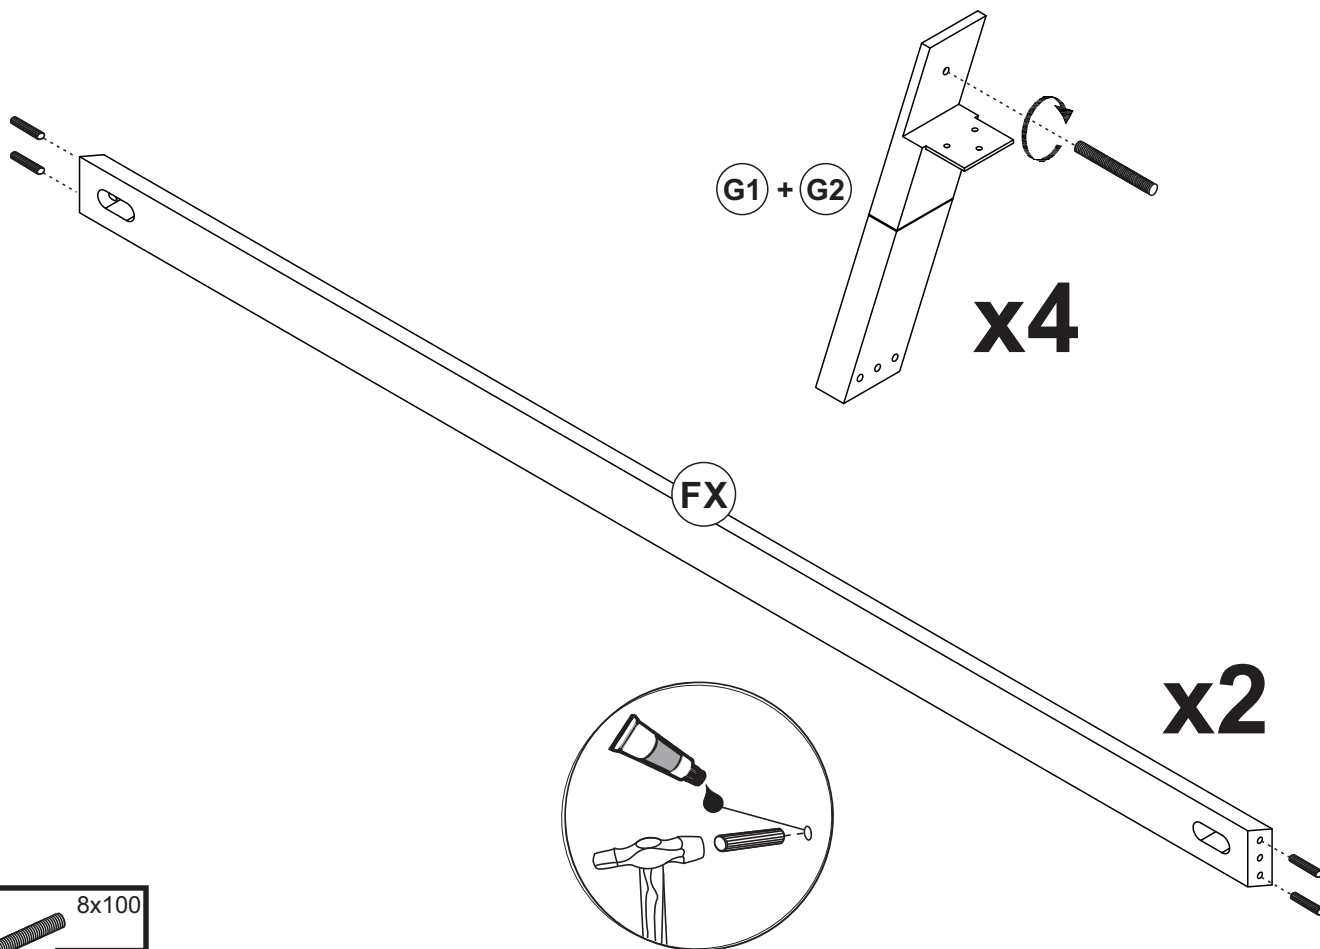








2

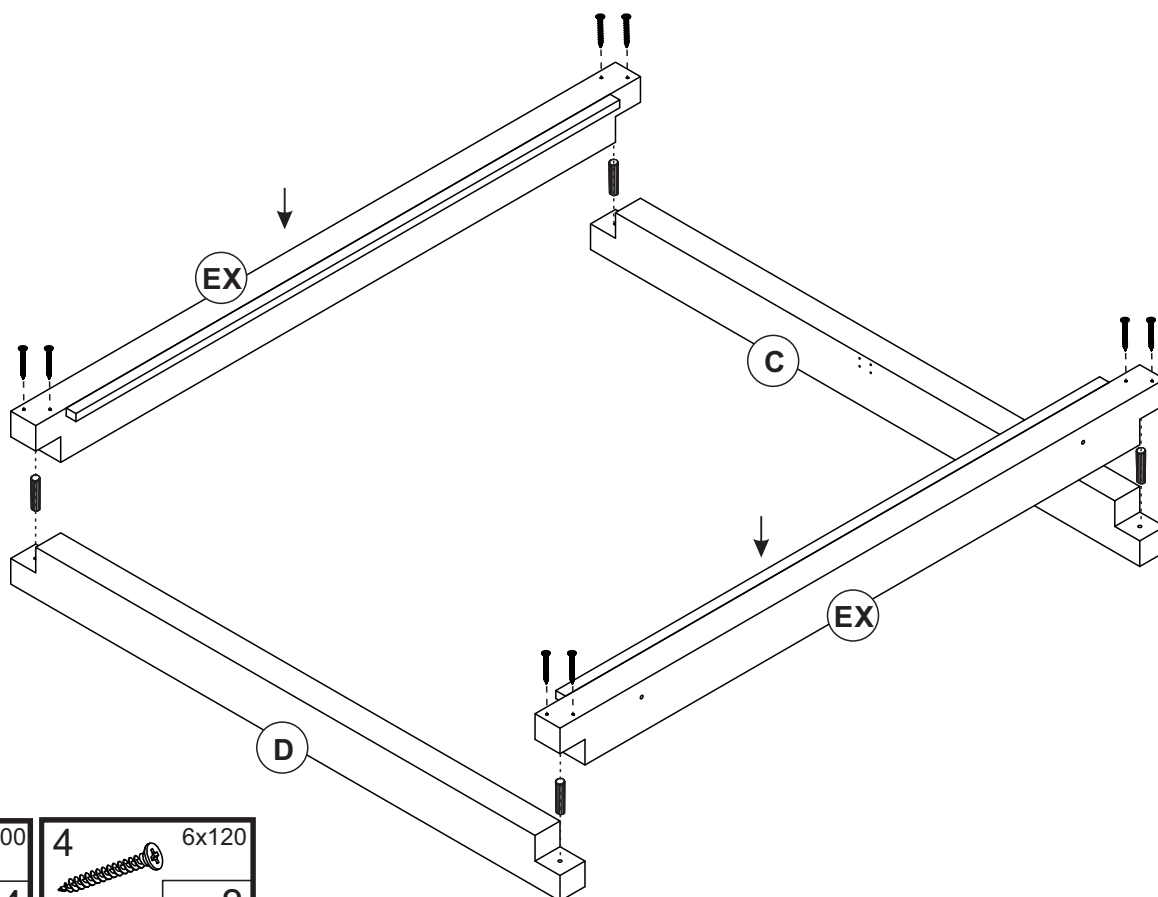

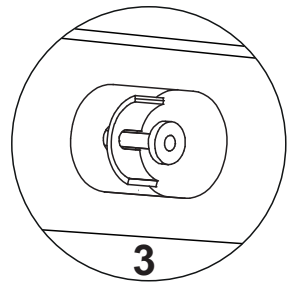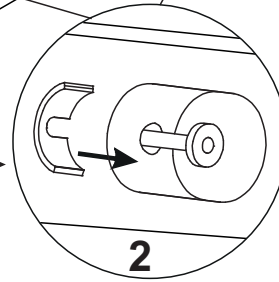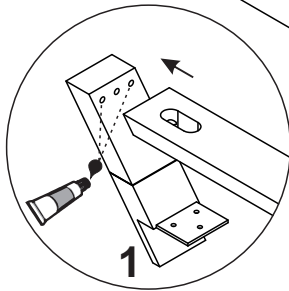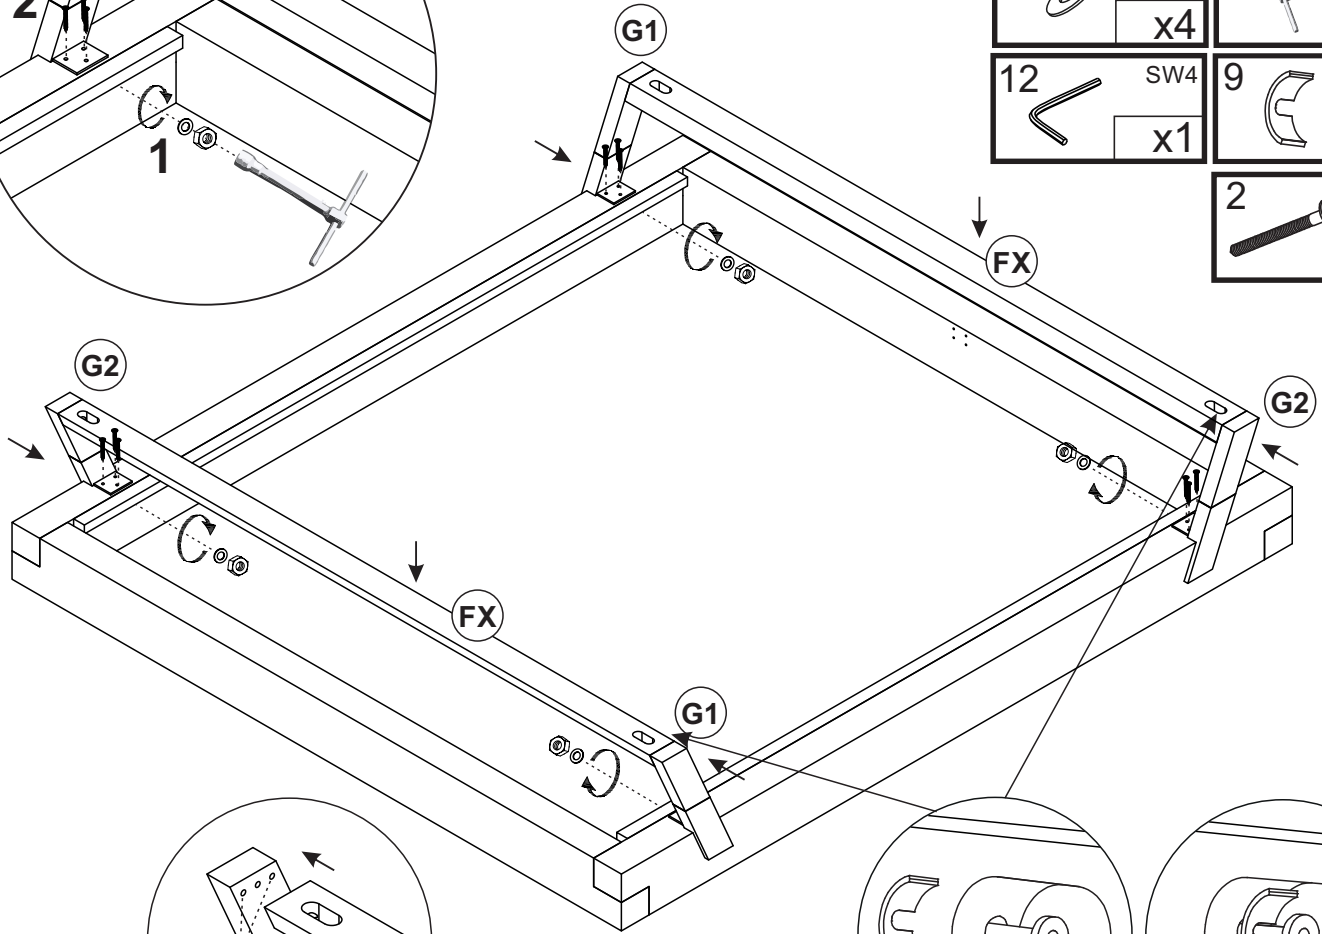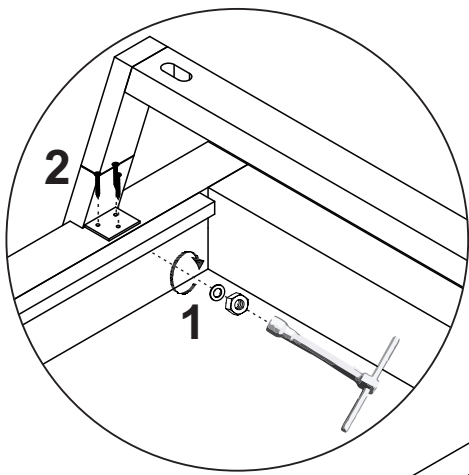


3

4

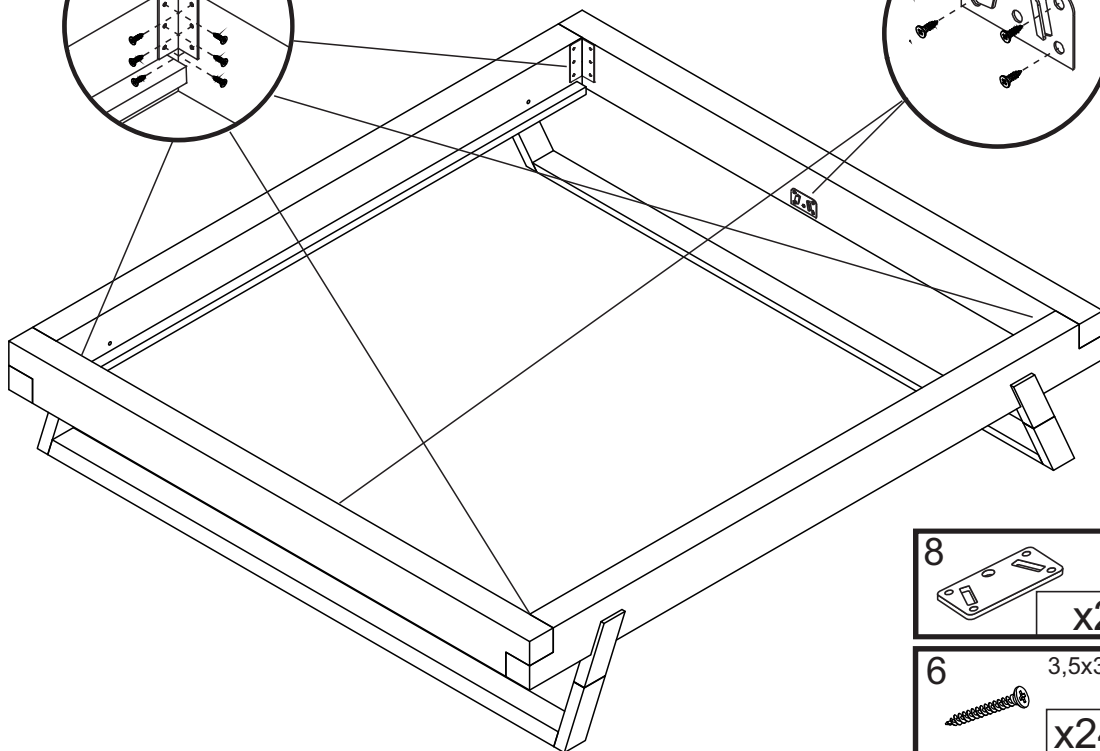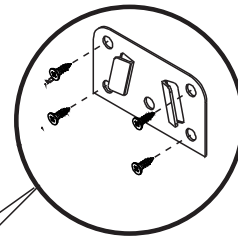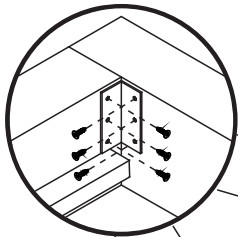


2	M6x60	12	SW4
	x12		x1

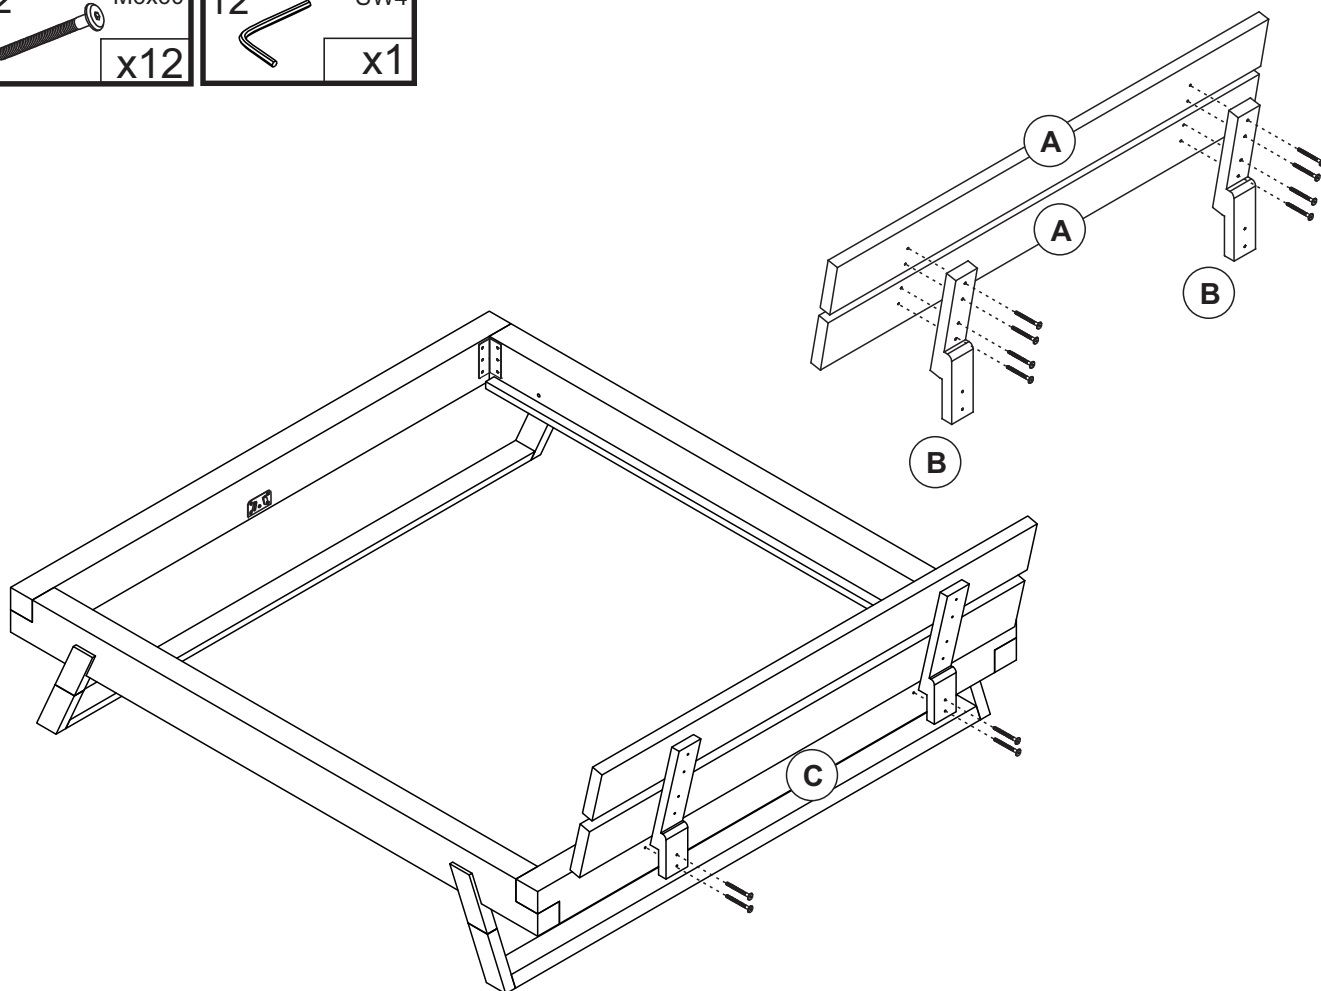

5

6

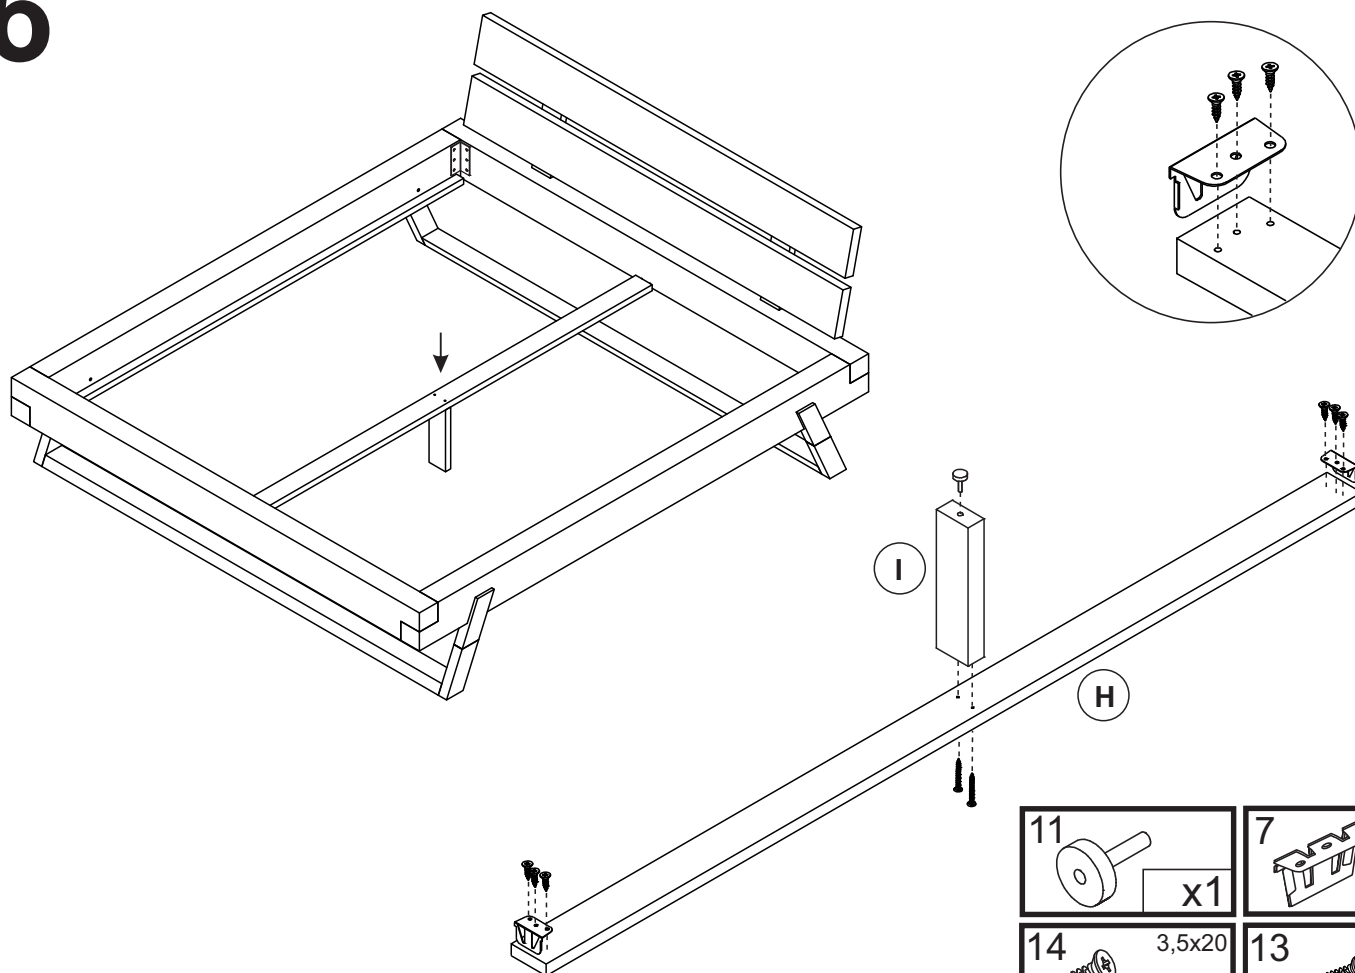

11		x1	7		x2
14	3,5x20	x6	13	5x55	x2