

EM00112XL / EM00107

AUFBAUANLEITUNG

INSTRUCTIONS MANUAL

LA INSTRUCCIÓN

INTRODUZIONE

TALIMATLAR

INSTRUÇÕES


تاميلت





Anleitung zum Einstellen der Schubladen

Tutorials / Tutoriels / Tutoriales

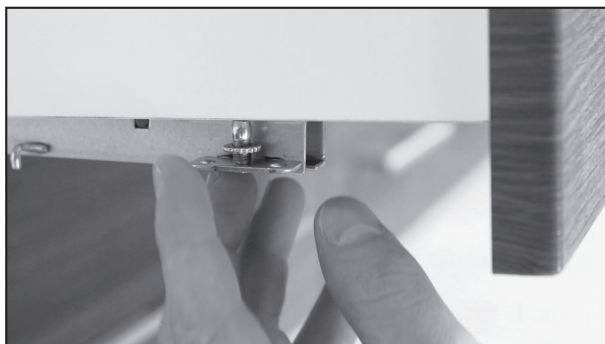


92x
WA 020




92x
WA 021



60x
WA 022




12x
WA 023



24x
WA 024



4x
WA 028

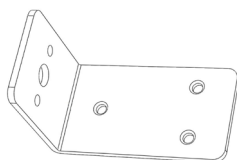


16x
WA 030




32x
WA 031




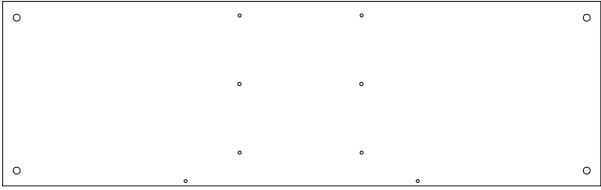


1x
RO 001

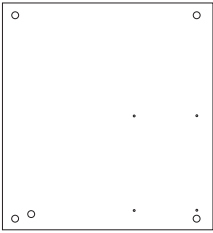


1x
RO 002

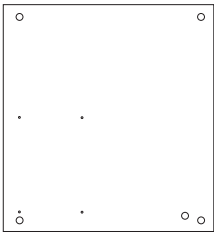

1x
RO 003

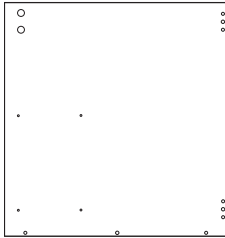

1x
RO 004

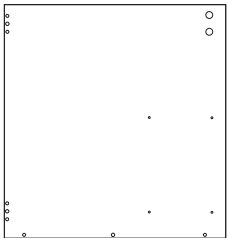

1x
RO 005




1x
RO 006




1x
RO 007




1x
RO 008

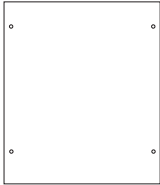


1x
RO 009



2x
RO 010 R



2x
RO 010 L



2x
RO 011



6x
RO 012



6x
RO 013



2x
RO 014




2x
RO 015



2x
RO 016



2x
RO 017



2x
RO 018



2x
RO 019




2x
RO 020




2x
RO 021




2x
RO 022




2x
RO 023




2x
RO 024

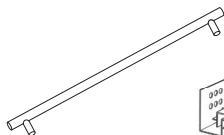

4x
RO 025

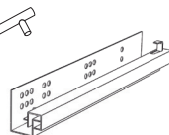


6x
RO 026 L





6x
RO 027 R

92x


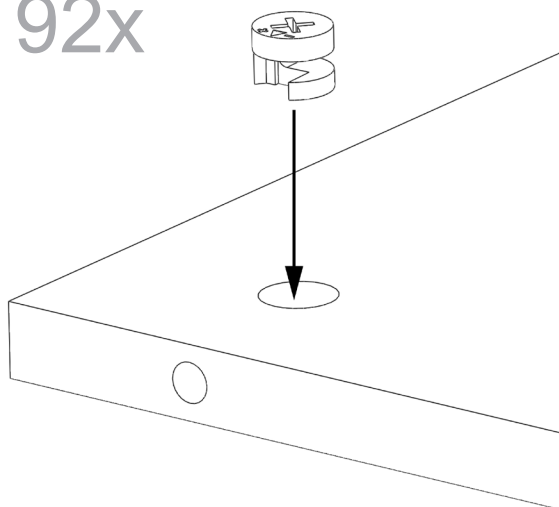





!

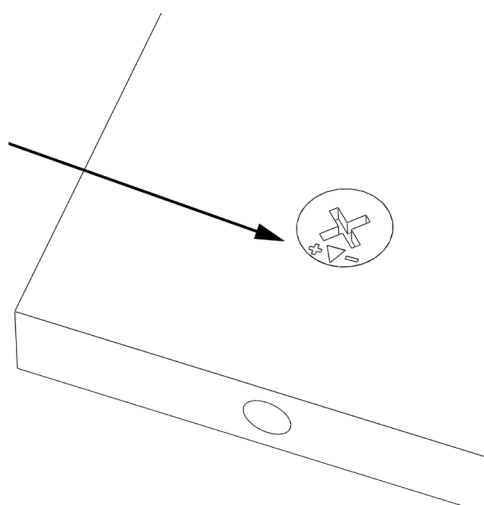



92x

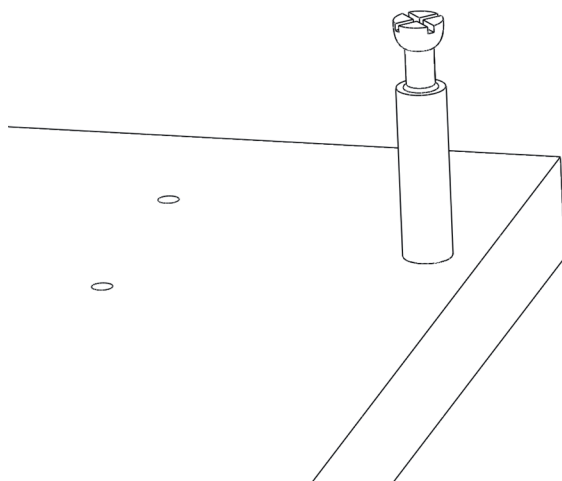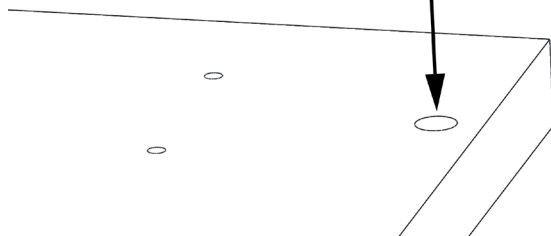

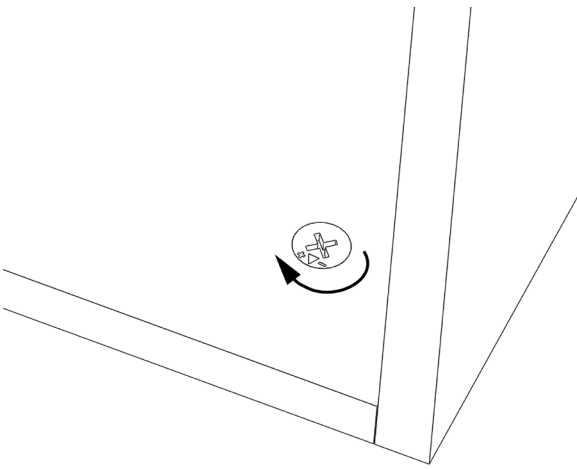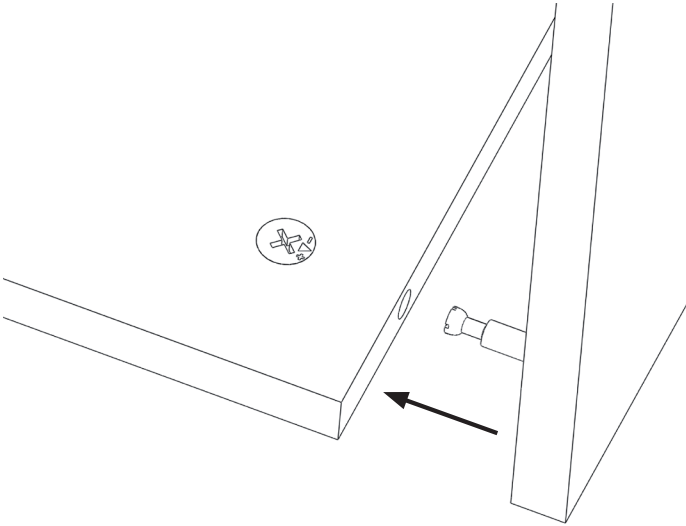

ZUSAMMENBAU

ASSEMBLY

ASSEMBLAGE

ASAMBLEA

MONTAJ

MONTAGEM


تجميع




4x
WA 030



2x
WA 030

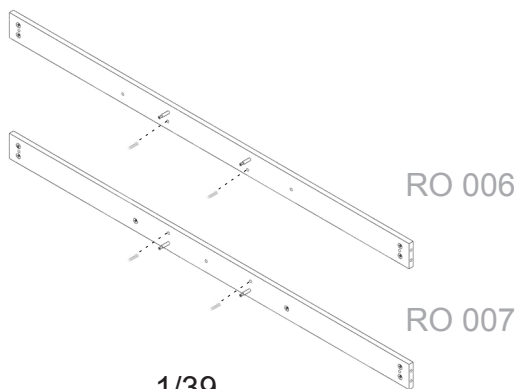


1/39

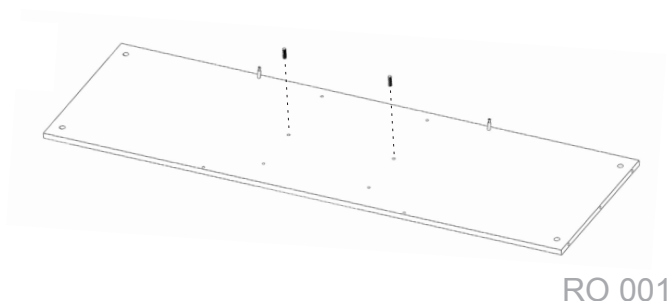

RO 001


2/39

RO 002

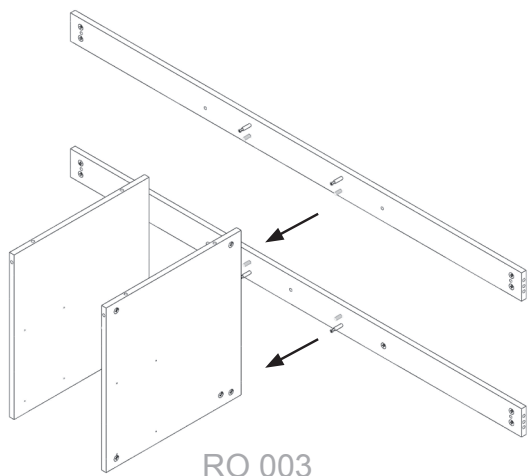



RO 003

3/39

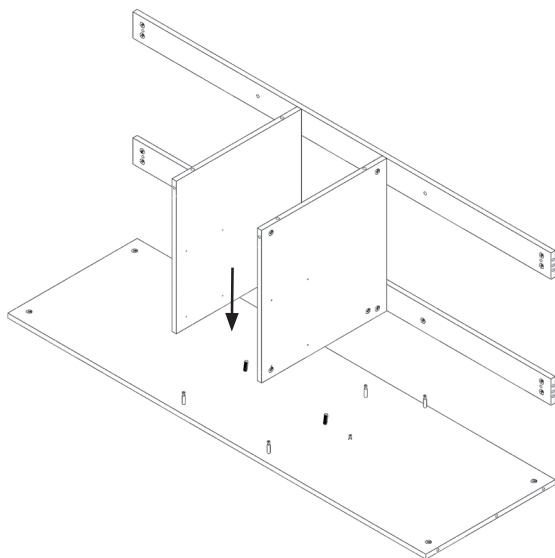


4/39






3x
WA 030


RO 004

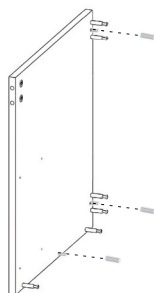

5/39

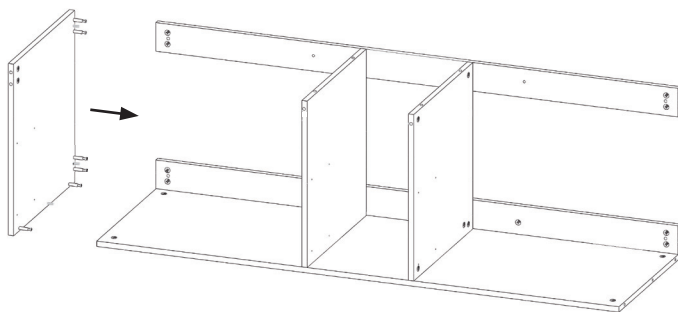

6/39

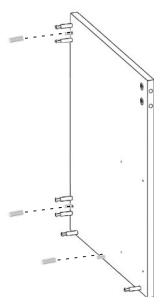


RO 005



7/39




3x
WA 030

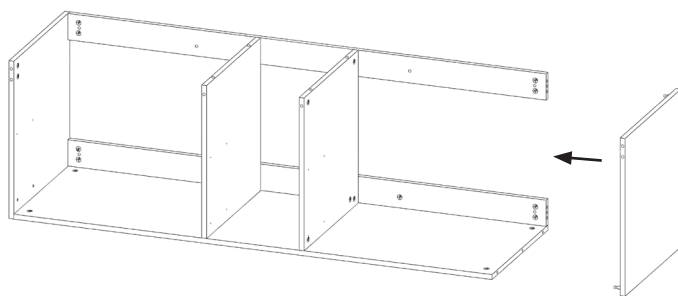


8/39

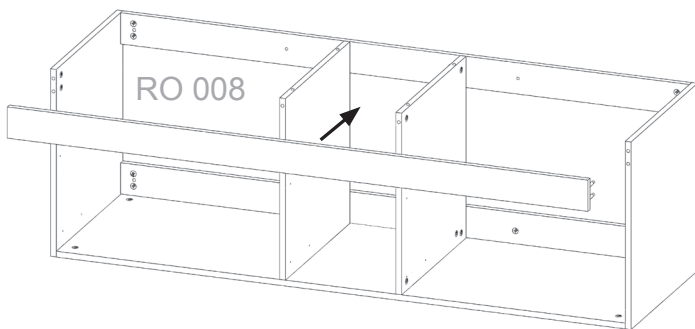



9/39

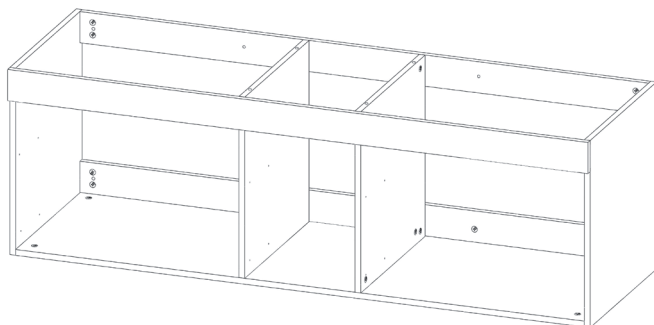


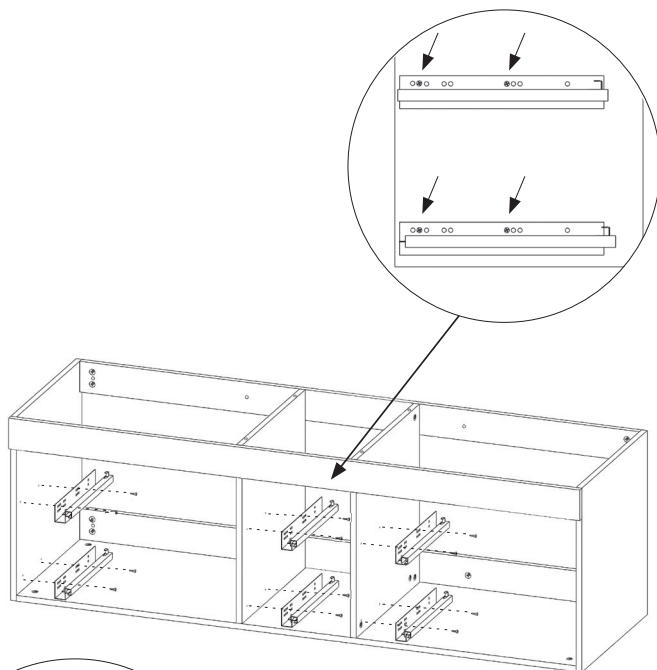


10/39

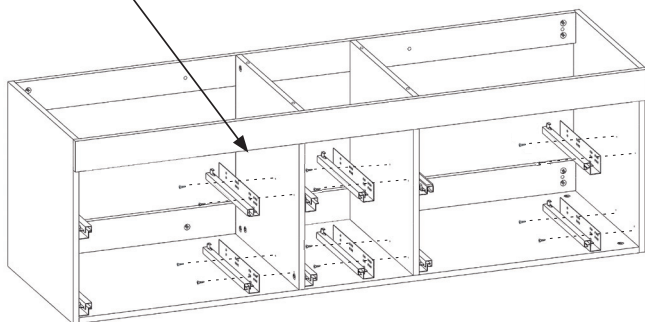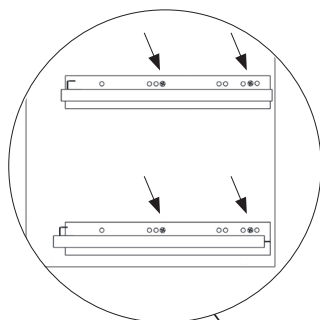

11/39




12x
WA 024




6x
RO 026 L




12x
WA 024




6x
RO 027 R





4x
WA 028

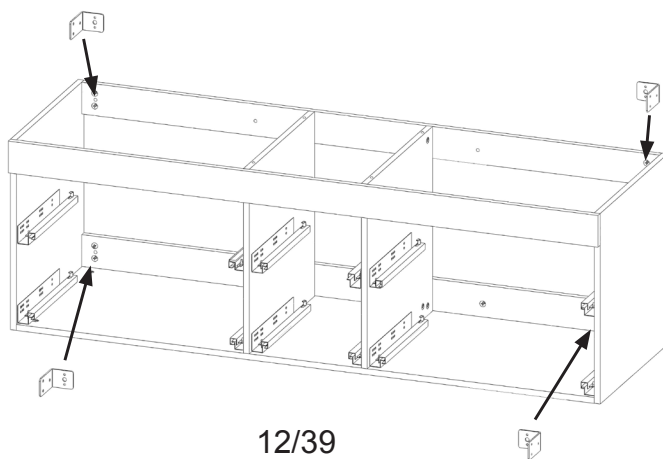


12/39

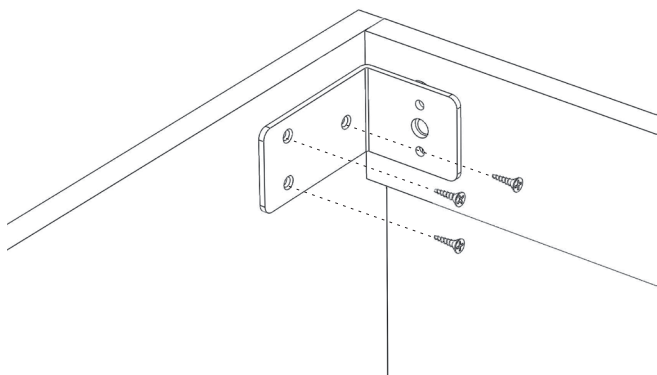


13/39





3x
WA 022

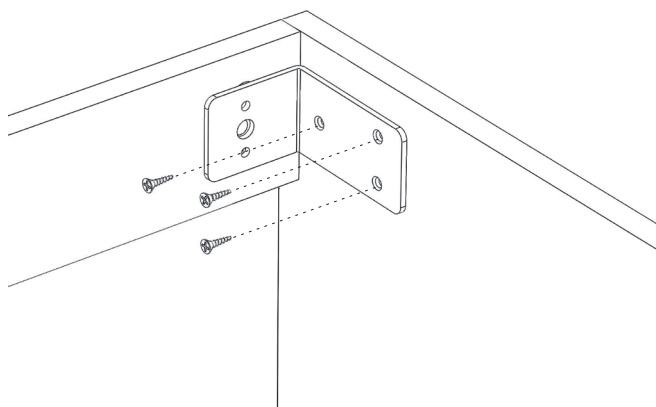


14/39



3x
WA 022




3x
WA 022

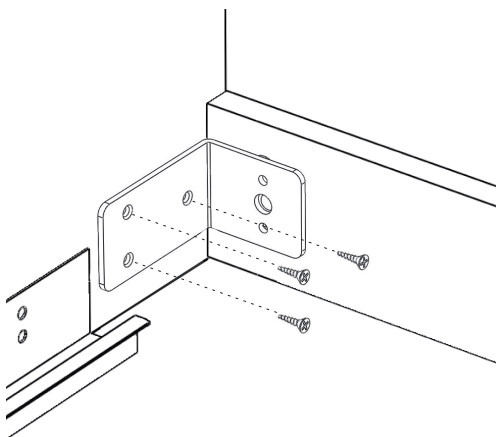


15/39



3x
WA 022

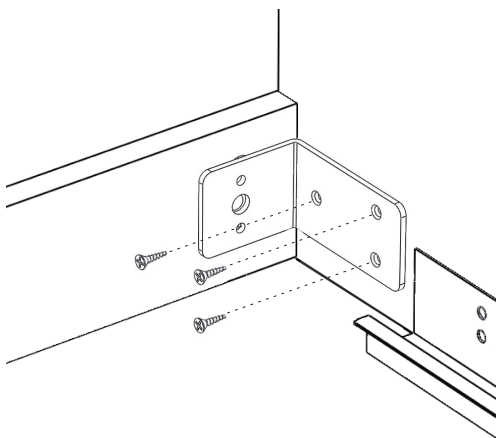

16/39




4x
WA 030





RO 009

17/39

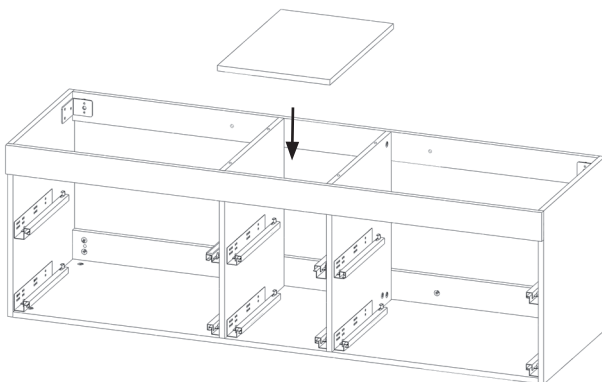


18/39

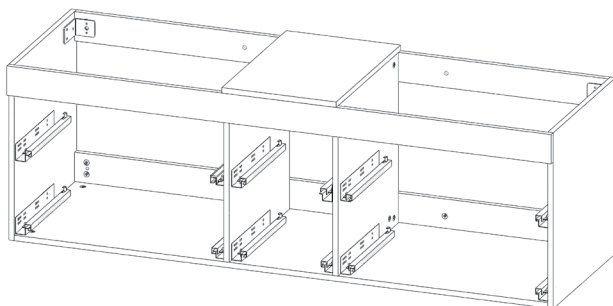


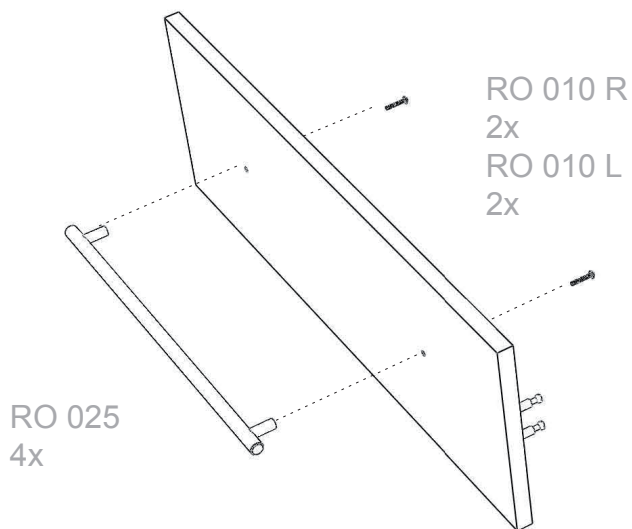



19/39



8x
WA 023

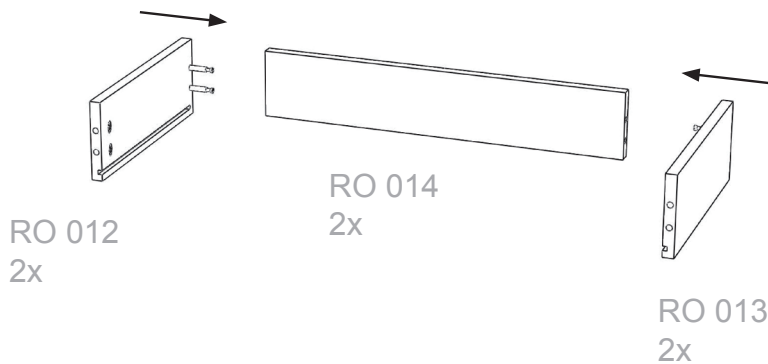


20/39

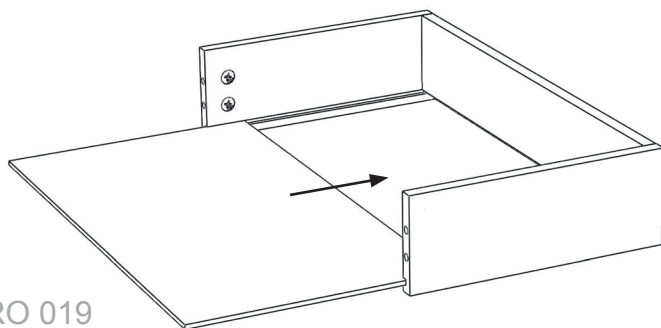


RO 019
2x

21/39





6x
WA 022

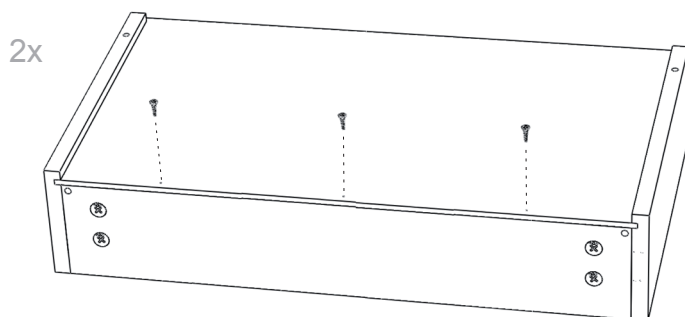

22/39


RO 010 R
1x
RO 010 L
1x


2x

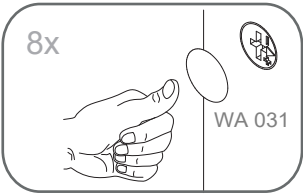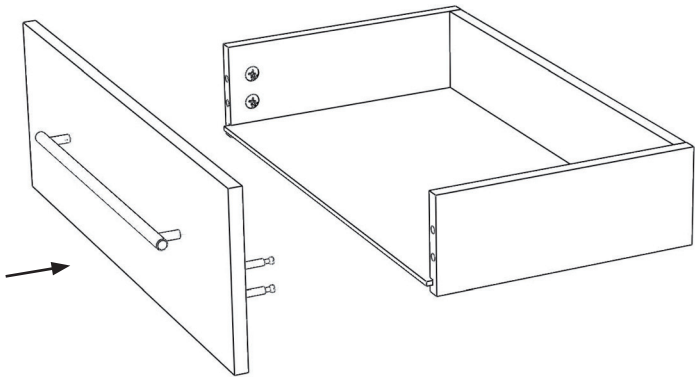


8x
WA 031

23/39

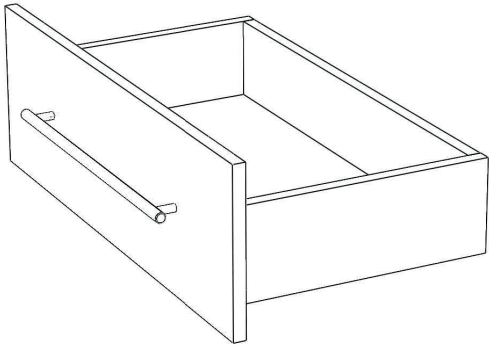





RO 012
2x

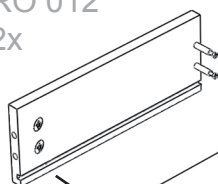




RO 018
2x


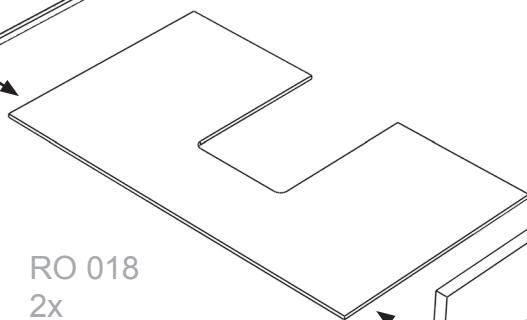


RO 013
2x

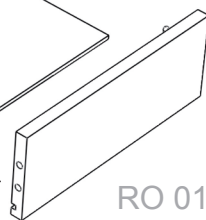


24/39

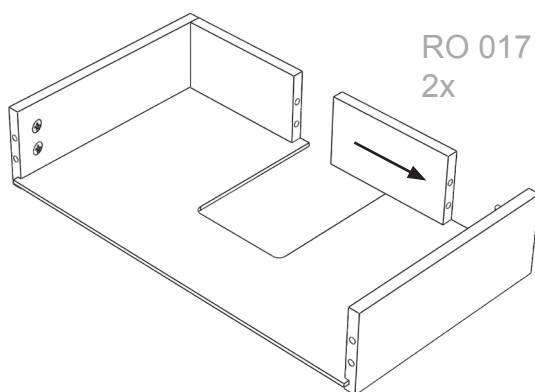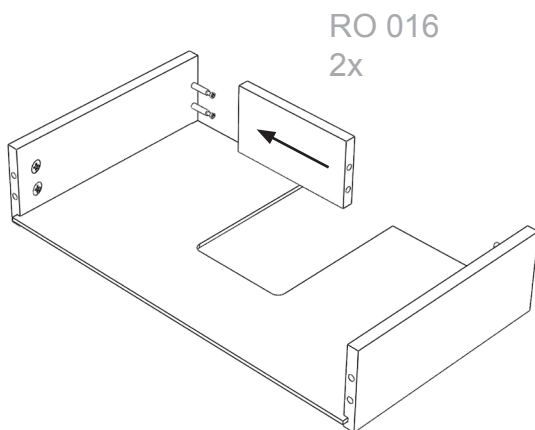


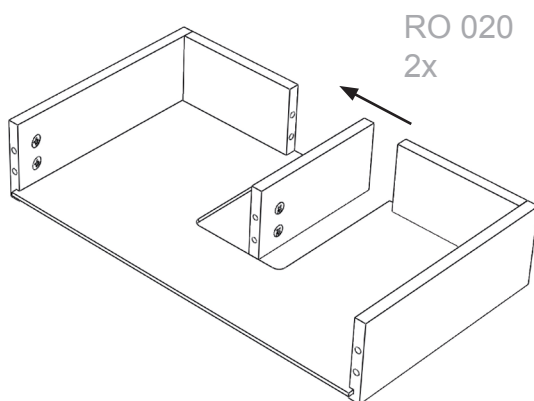


27/39

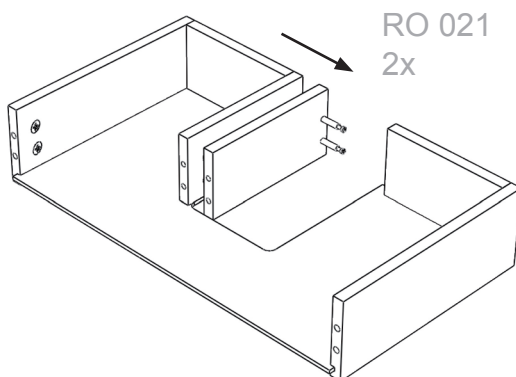



28/39

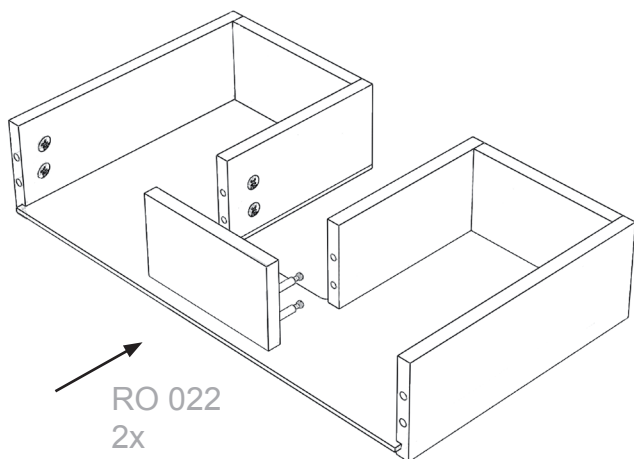

29/39




2x

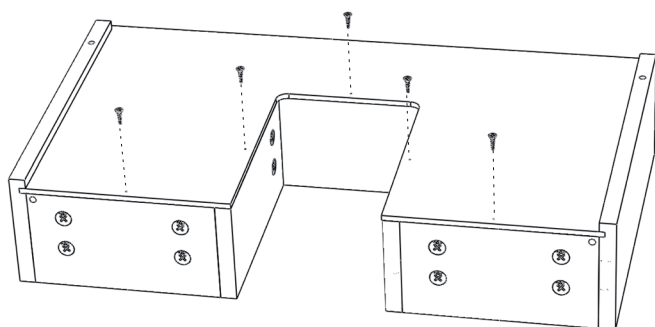


10x
WA 022

30/39




2x

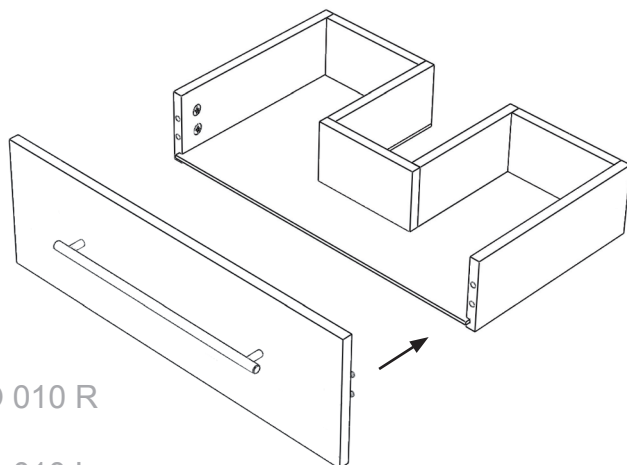


RO 010 R
1x
RO 010 L
1x




16x
WA 031

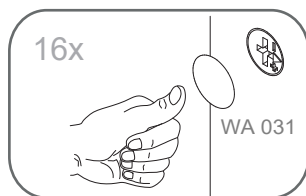


31/39

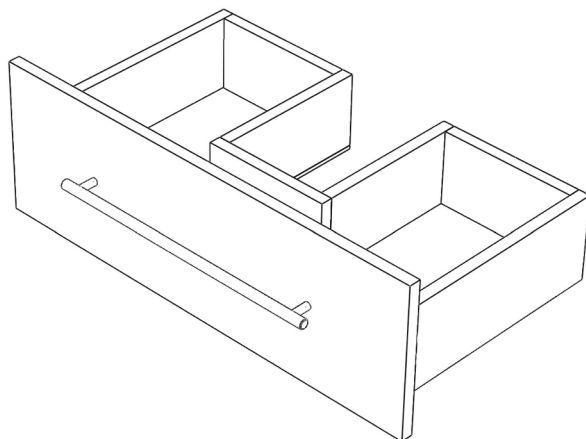


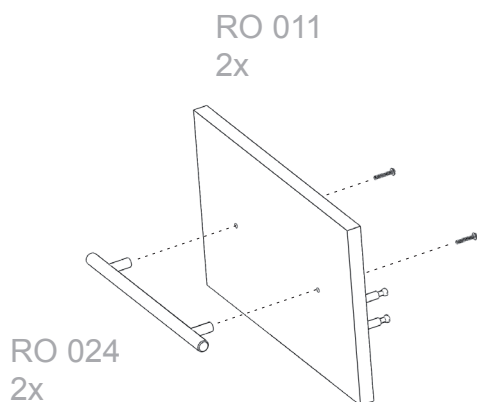



32/39

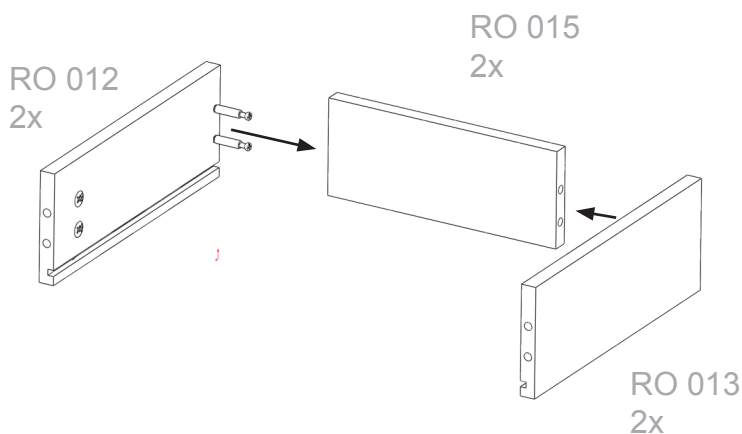

33/39




4x
WA 023

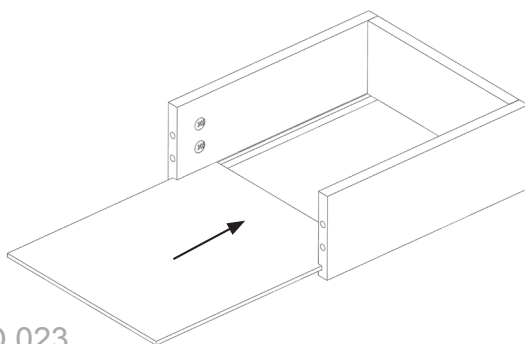


RO 023
2x

34/39





4x
WA 022

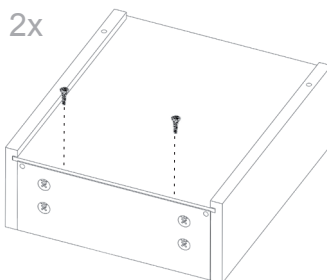

2x


35/39


2x

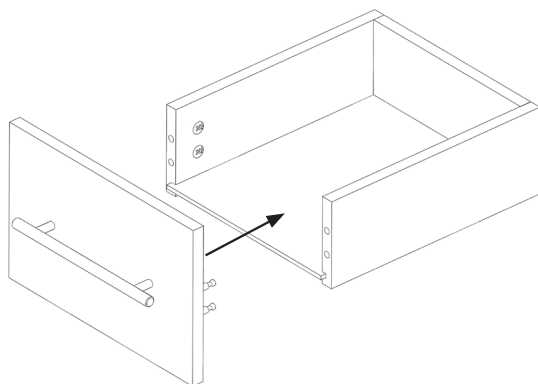

8x
WA 031


36/39

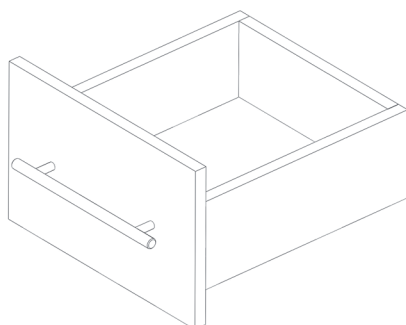





SILIKON
SILICONE
SILICONA

نوكيليس


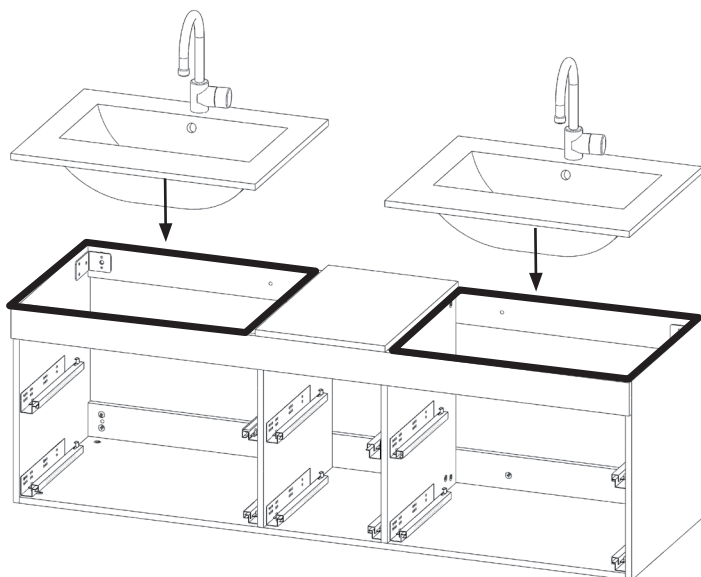


37/39

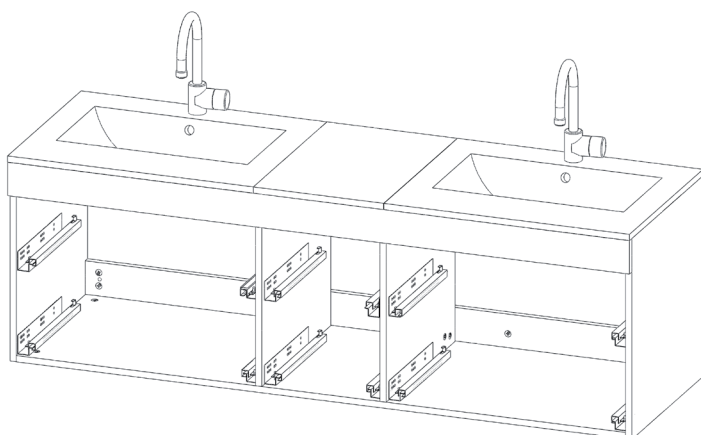



24x
WA 022

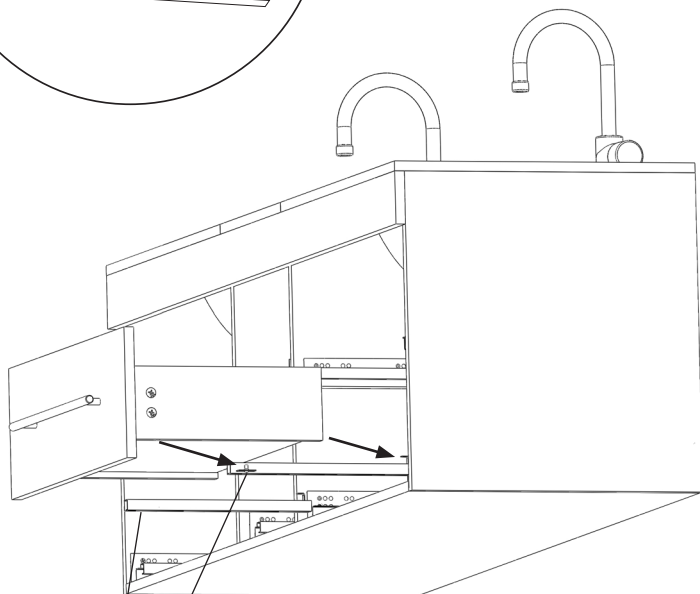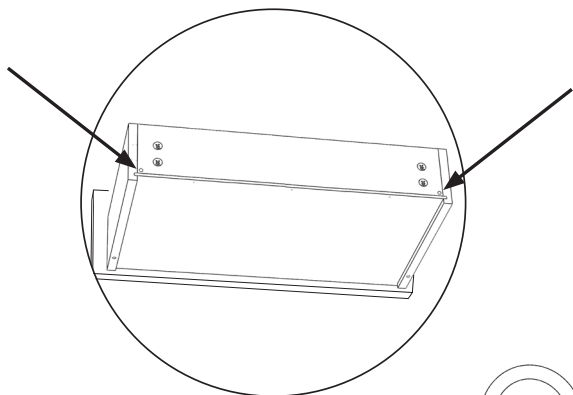

38/39

