


20 MIN **2 X**

(D) AUFBAUANLEITUNG
(NL) HANDLEIDING VOOR DE MONTAGE
(TR) MONTAJ TALIMATI
(RO) INSTRUCTIUNI DE ASAMBLARE
(F) INSTRUCTION D'ASSEMBLAGE
(CZ) POKYNY K MONTÁŽI
(BG) ИНСТРУКЦИИ ЗА МОНТАЖ
(HR) UPUTSTVA ZA MONTAŽU

(GB) ASSEMBLY INSTRUCTIONS
(PL) INSTRUKCJA MONTAŻU
(RU) Инструкция по монтажу
(I) PROCEDURA DI ASSEMBLAGGIO
(SK) POKYNY K MONTÁŽI
(HU) ÖSSZESZERELÉSI ÚTMUTATÓ
(SLO) NAVODILA ZA MONTAŽO
(S) MONTERINGSANVISNING
(LT) DIEGIMO INSTRUKCIJOS
(E) INSTRUCCIONES DE MONTAJE

MODEL "MM BERGAMO"

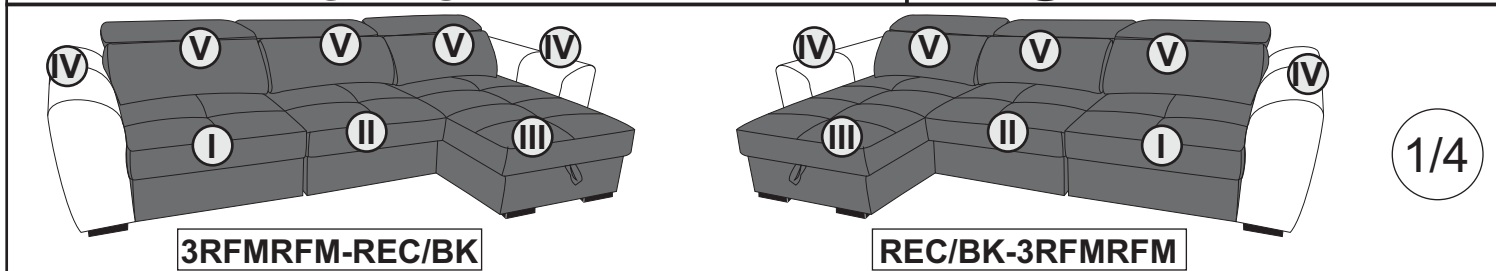

G x1	H 8MM x1	x3	A CORDOBA H45 x6	C LG 45 x5	D M8X40 x3	E x3	F H35 x1
---------------------	-------------------------	------------	---------------------------------	---------------------------	---------------------------	---------------------	-------------------------

hardware bag/ sachet materiel/ zubehorbeutel/ sacchetti materiale/bolsa de materiales/ worek materialowy

pre-assembled /pre assemble /vormontiert /premontato /wstępnie /zamontowane

0

10

20

30

40

50

60

70

80

90

100

110

120

130

140

150

160

170

180

1

2

3

4

5

6


20 MIN

2 X

(D) AUFBAUANLEITUNG
(NL) HANDLEIDING VOOR DE MONTAGE
(TR) MONTAJ TALIMATI
(RO) INSTRUCTIUNI DE ASAMBLARE
(F) INSTRUCTION D'ASSEMBLAGE
(CZ) POKYNY K MONTÁŽI
(BG) ИНСТРУКЦИИ ЗА МОНТАЖ
(HR) UPUTSTVA ZA MONTAŽU

(GB) ASSEMBLY INSTRUCTIONS
(PL) INSTRUKCJA MONTAŻU
(RU) Инструкция по монтажу
(I) PROCEDURA DI ASSEMBLAGGIO
(SK) POKYNY K MONTÁŽI
(HU) ÖSSZESZERELÉSI ÚTMUTATÓ
(SLO) NAVODILA ZA MONTAŽO
(S) MONTERINGSANVISNING
(LT) DIEGIMO INSTRUKCIJOS
(E) INSTRUCCIONES DE MONTAJE



MODEL "MM BERGAMO"

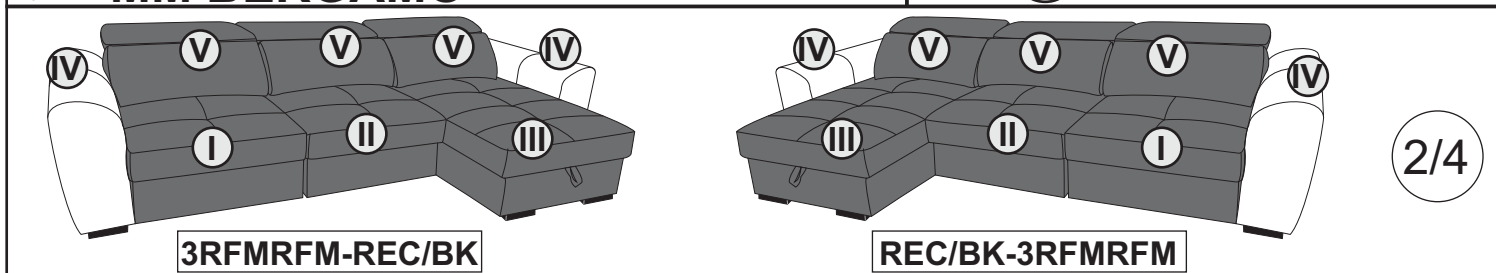

G x1	H 8MM x1	I x3	A CORDOBA H45 x6	C LG 45 x5	D M8X40 x3	E x3	F H35 x1
----------------	--------------------	----------------	----------------------------	----------------------	----------------------	----------------	--------------------

hardware bag/ sachet materiel/ zubehorbeutel/ sacchetti materiale/bolsa de materiales/ worek materiałowy

pre-assembled /pre assemble /vormontiert /premontato /wstępnie /zamontowane

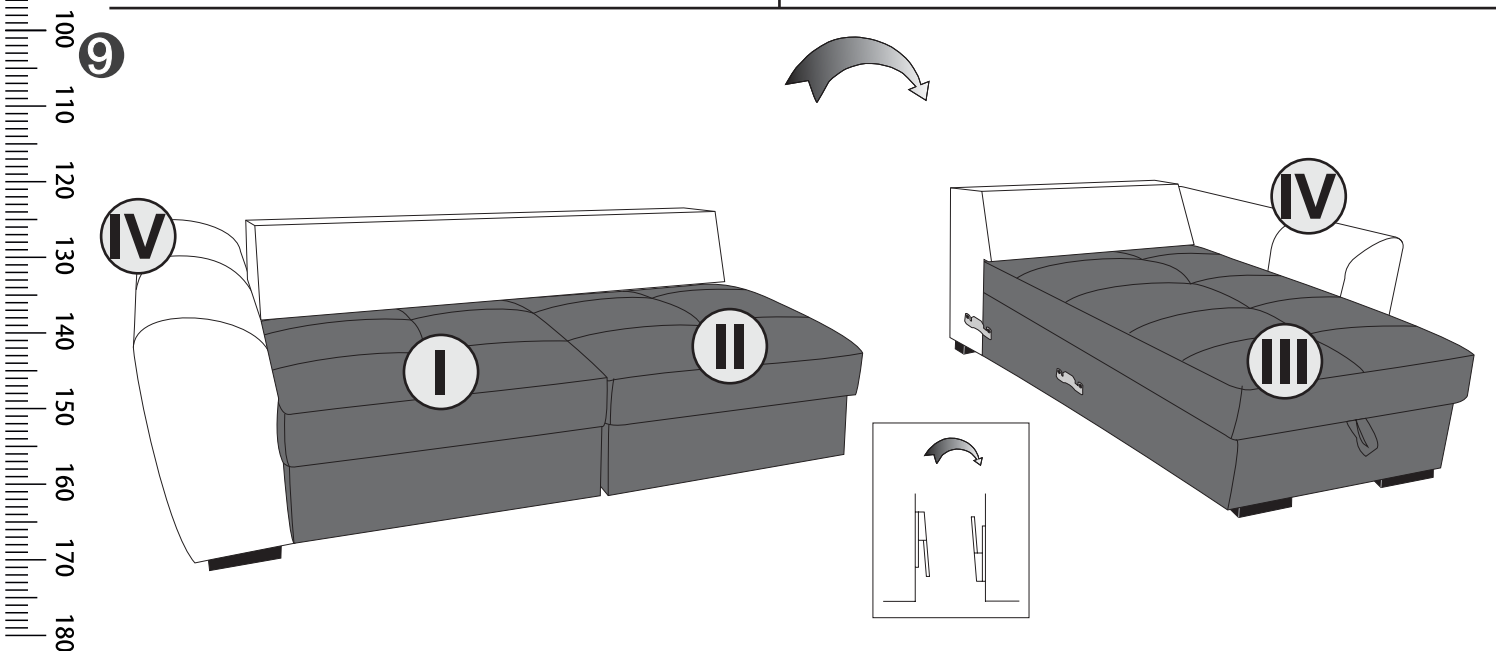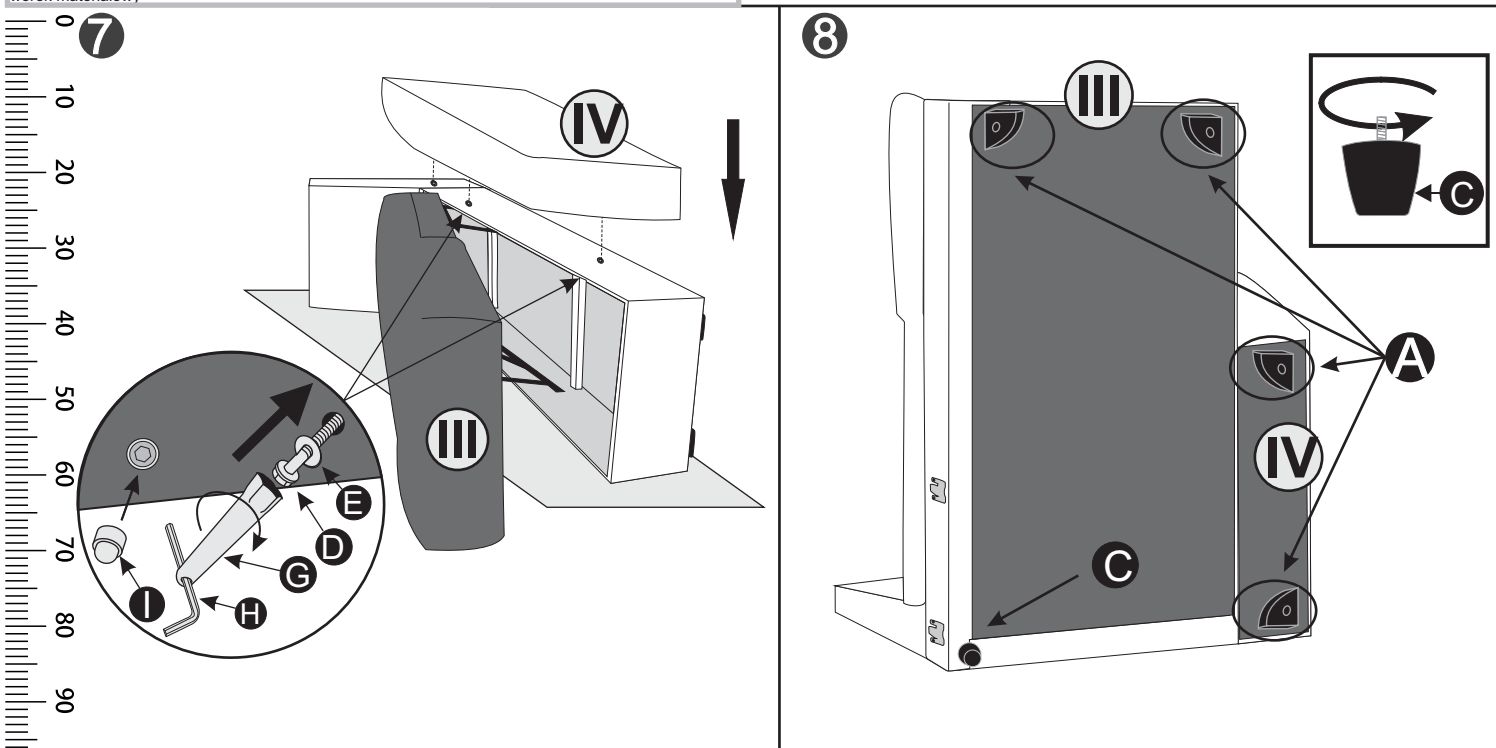

20 MIN



2 X




- (D) AUFBAUANLEITUNG
 (NL) HANDLEIDING VOOR DE MONTAGE
 (TR) MONTAJ TALIMATI
 (RO) INSTRUCTIUNI DE ASAMBLARE
 (F) INSTRUCTION D'ASSEMBLAGE
 (CZ) POKYNY K MONTÁŽI
 (BG) ИНСТРУКЦИИ ЗА МОНТАЖ
 (HR) UPUTSTVA ZA MONTAŽU

- (GB) ASSEMBLY INSTRUCTIONS
 (PL) INSTRUKCJA MONTAŻU
 (RU) Инструкция по монтажу
 (I) PROCEDURA DI ASSEMBLAGGIO
 (SK) POKYNY K MONTÁŽI
 (HU) ÖSSZESZERELÉSI ÚTMUTATÓ
 (SLO) NAVODILA ZA MONTAŽO
 (S) MONTERINGSANVISNING
 (LT) DIEGIMO INSTRUKCIJOS
 (E) INSTRUCCIONES DE MONTAJE

MODEL

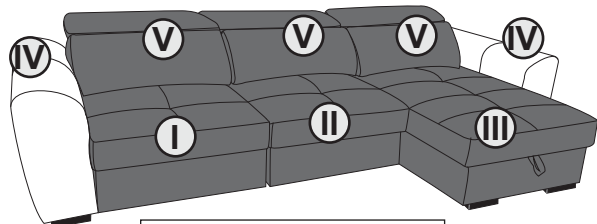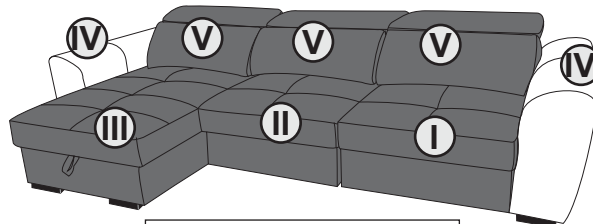“MM BERGAMO”**3RFMRFM-REC/BK****REC/BK-3RFMRFM**

3/4

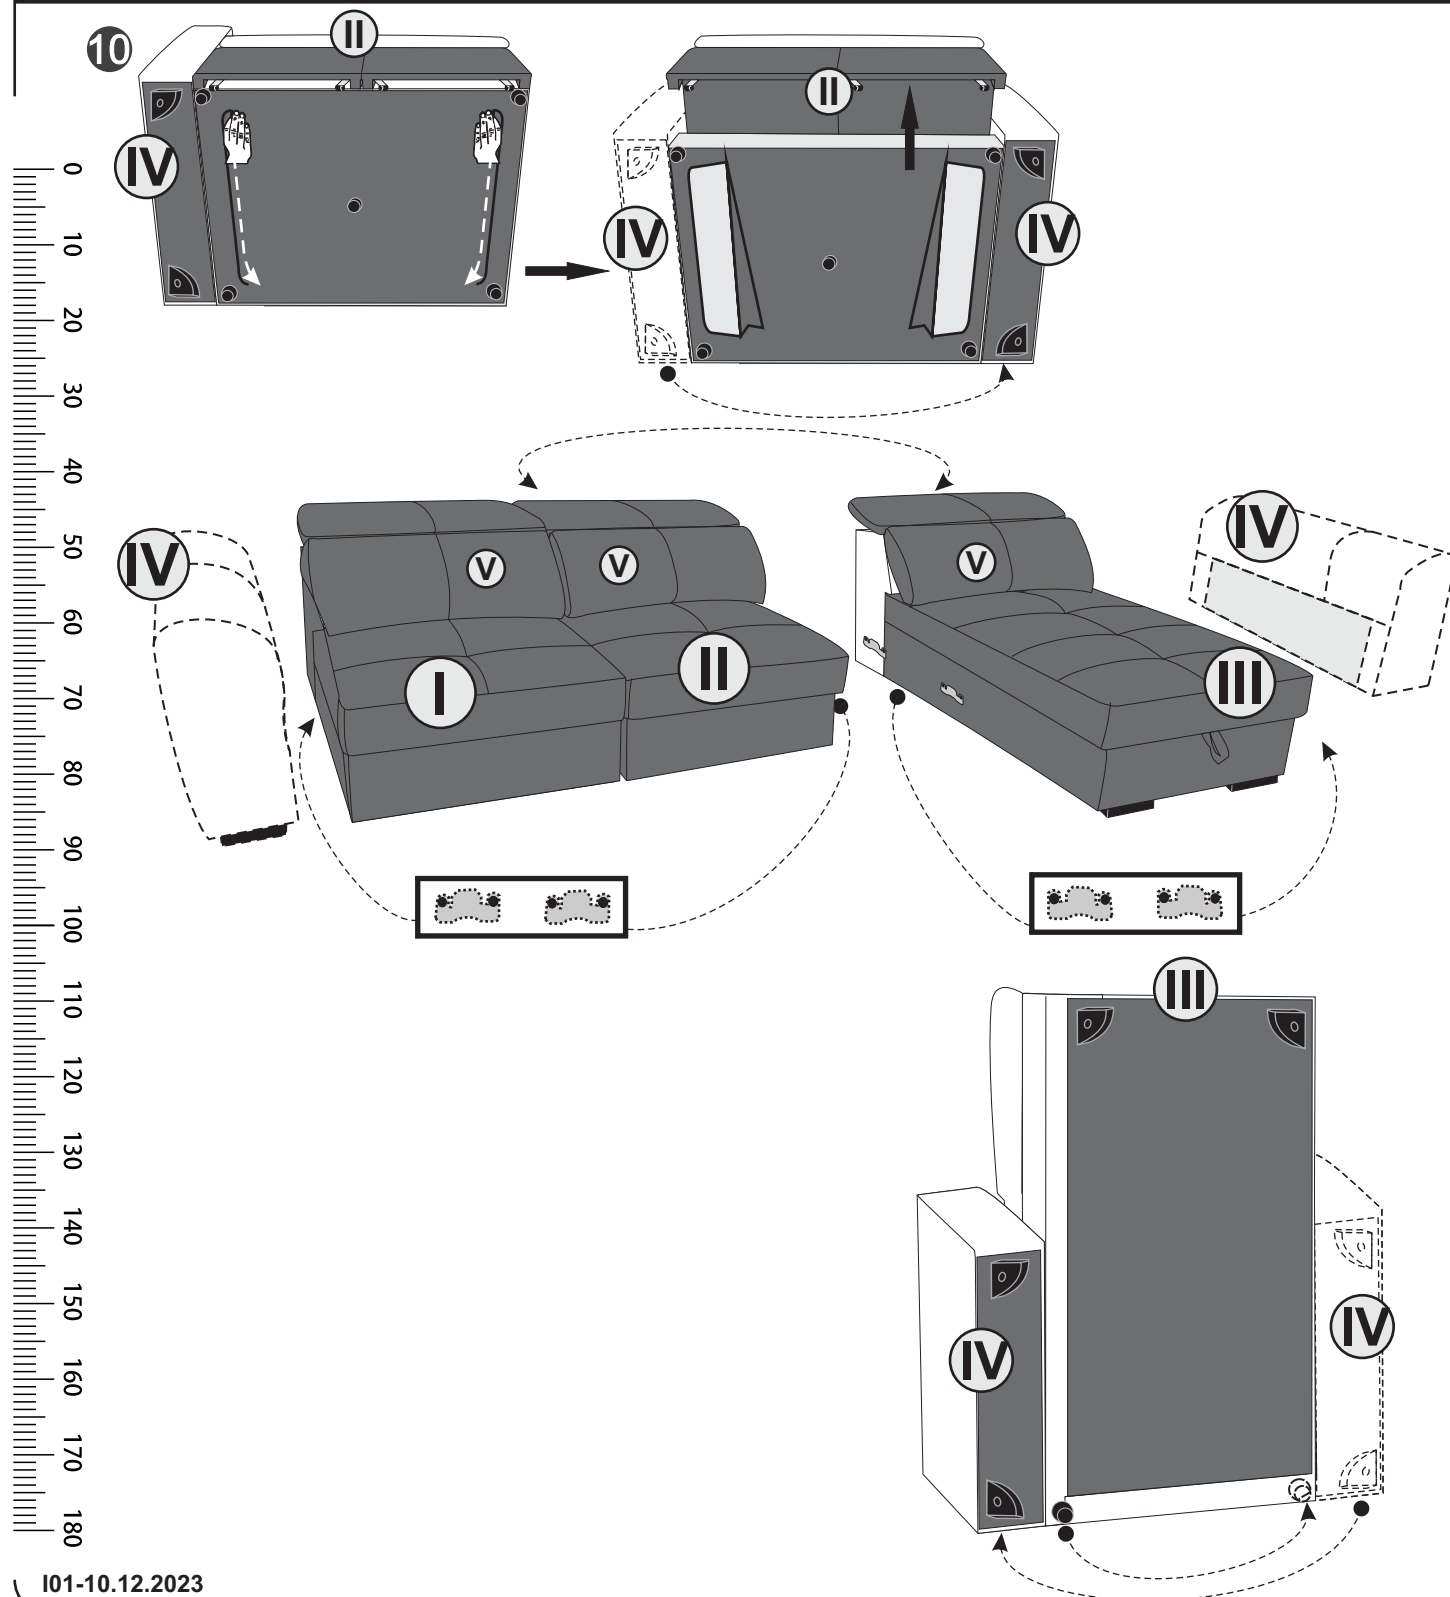

20 MIN



2 X



(D) AUFBAUANLEITUNG
(NL) HANDLEIDING VOOR DE MONTAGE
(TR) MONTAJ TALIMATI
(RO) INSTRUCTIUNI DE ASAMBLARE
(F) INSTRUCTION D'ASSEMBLAGE
(CZ) POKYNY K MONTÁŽI
(BG) ИНСТРУКЦИИ ЗА МОНТАЖ
(HR) UPUTSTVA ZA MONTAŽU

(GB) ASSEMBLY INSTRUCTIONS
(PL) INSTRUKCJA MONTAŻU
(RU) Инструкция по монтажу
(I) PROCEDURA DI ASSEMBLAGGIO
(SK) POKYNY K MONTÁŽI
(HU) ÖSSZESZERELÉSI ÚTMUTATÓ
(SLO) NAVODILA ZA MONTAŽO
(S) MONTERINGSANVISNING
(LT) DIEGIMO INSTRUKCIJOS
(E) INSTRUCCIONES DE MONTAJE


MODEL

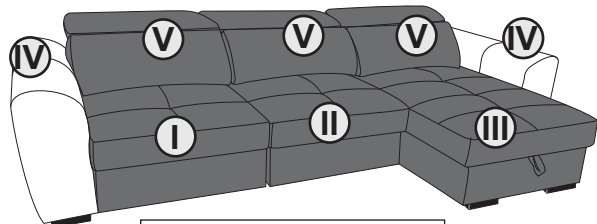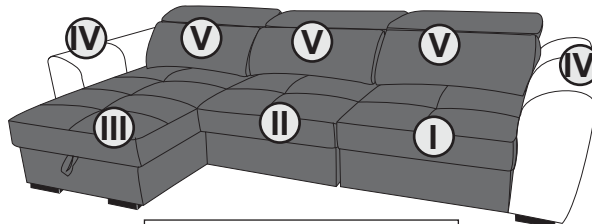“MM BERGAMO”**3RFMRFM-REC/BK****REC/BK-3RFMRFM**



4/4

12




1/2

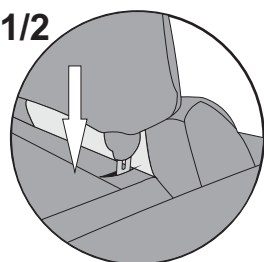

2/2

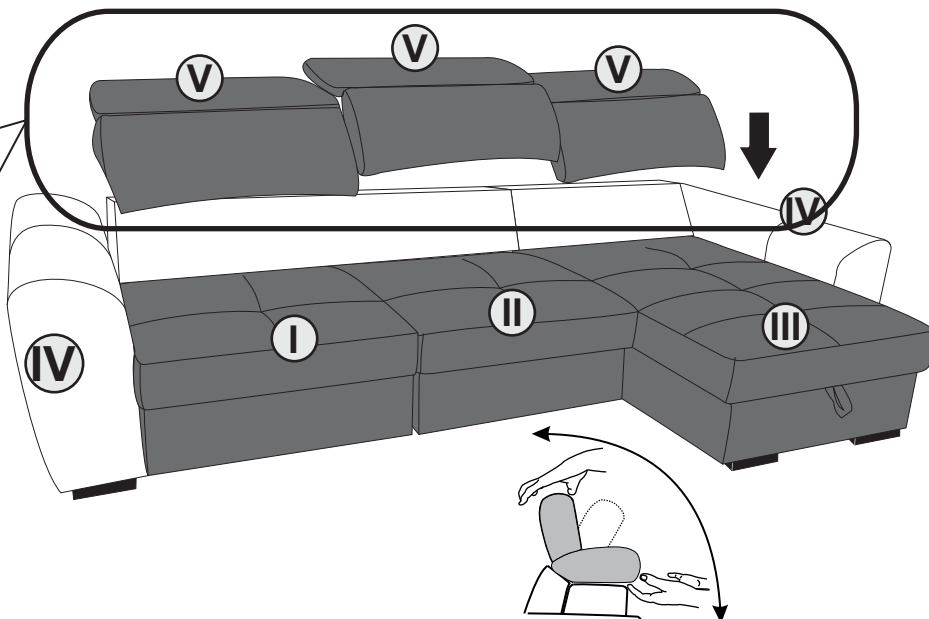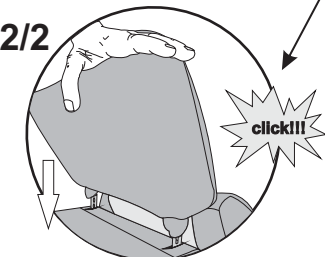

13

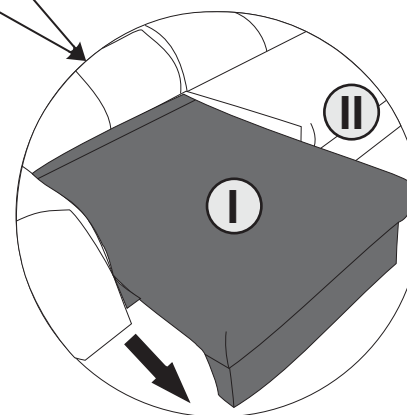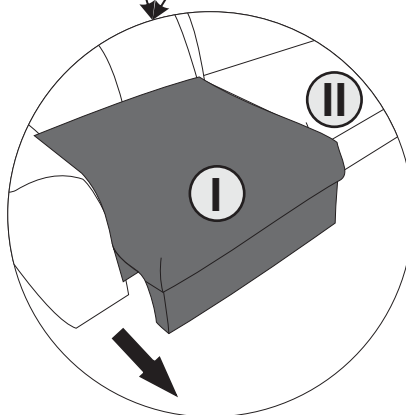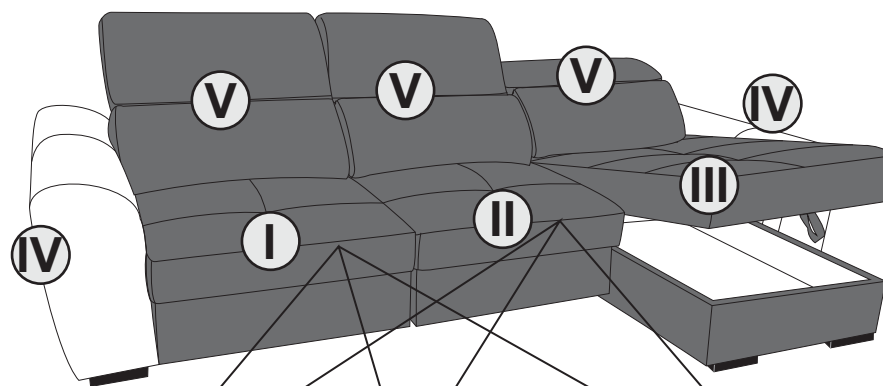

20 MIN

2 X

(D)

AUFBAUANLEITUNG

(NL)

HANDLEIDING VOOR DE MONTAGE

(TR)

MONTAJ TALIMATI

(RO)

INSTRUCTIUNI DE ASAMBLARE

(F)

INSTRUCTION D'ASSEMBLAGE

(CZ)

POKYNY K MONTÁŽI

(BG)

ИНСТРУКЦИИ ЗА МОНТАЖ

(HR)

UPUTSTVA ZA MONTAŽU

(GB)

ASSEMBLY INSTRUCTIONS

(PL)

INSTRUKCJA MONTAŻU

(RU)

Инструкция по монтажу

(I)

PROCEDURA DI ASSEMBLAGGIO

(SK)

POKYNY K MONTÁŽI

(HU)

ÖSSZESZERELÉSI ÚTMUTATÓ

(SLO)

NAVODILA ZA MONTAŽO

(S)

MONTERINGSANVISNING

(LT)

DIEGIMO INSTRUKCIJOS

(E)

INSTRUCCIONES DE MONTAJE

MODEL "MM BERGAMO"

