






ROSELLA

KOMODA 3 DRZ / 3 SZUF

SKROS05





- | | |
|----------------------------------|------------------------------|
| (D) Montageanleitung | (GB) Assembly instructions |
| (FR) Notice de montage | (IT) Istruzioni di montaggio |
| (NL) Handleiding voor de montage | (PL) Instrukcja montażu |
| (CZ) Montážní návod | (SK) Návod na montáž |
| (HU) Szerelési útmutató | (RO) Instrucțiuni de montaj |
| (TR) Montaj talimatı | (RU) ИНСТРУКЦИЯ ПО МОНТАЖУ |

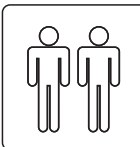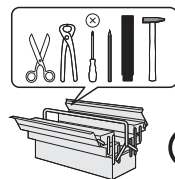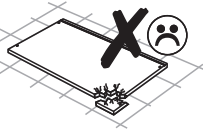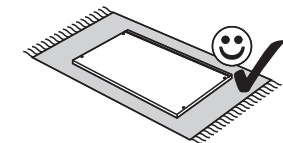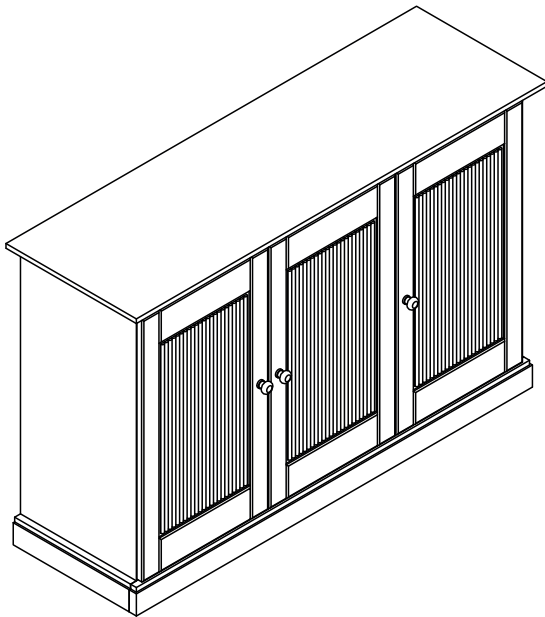

3 - 3,5





1




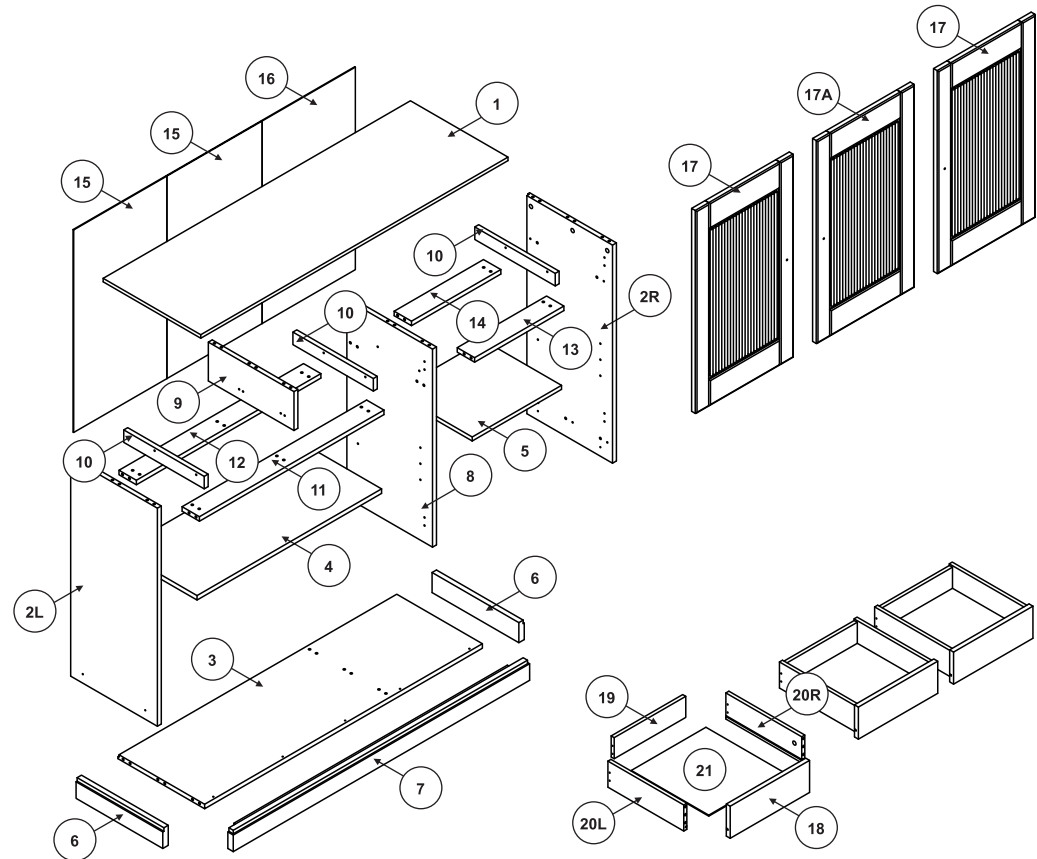


							MA  x6	
AB 5x32  x12	AD 8x60  x2	BF  x2	S  x1	PB  x2	G L=350  x3	H 6,3x11  x12	N 3x16  x12	
A 8x32  x33	B 34mm  x28	C 15x10  x32	Y 5mm  x8	PA  x4	RA  x6	NA 3,5x16  x16	YA 7x50  x11	
NB 3,5x35  x17	NC 3,5x30  x4	KK  x2	YB 1x20  x60	MF  x2	YC M4x25  x3	O  x3	W 4mm  x1	







2

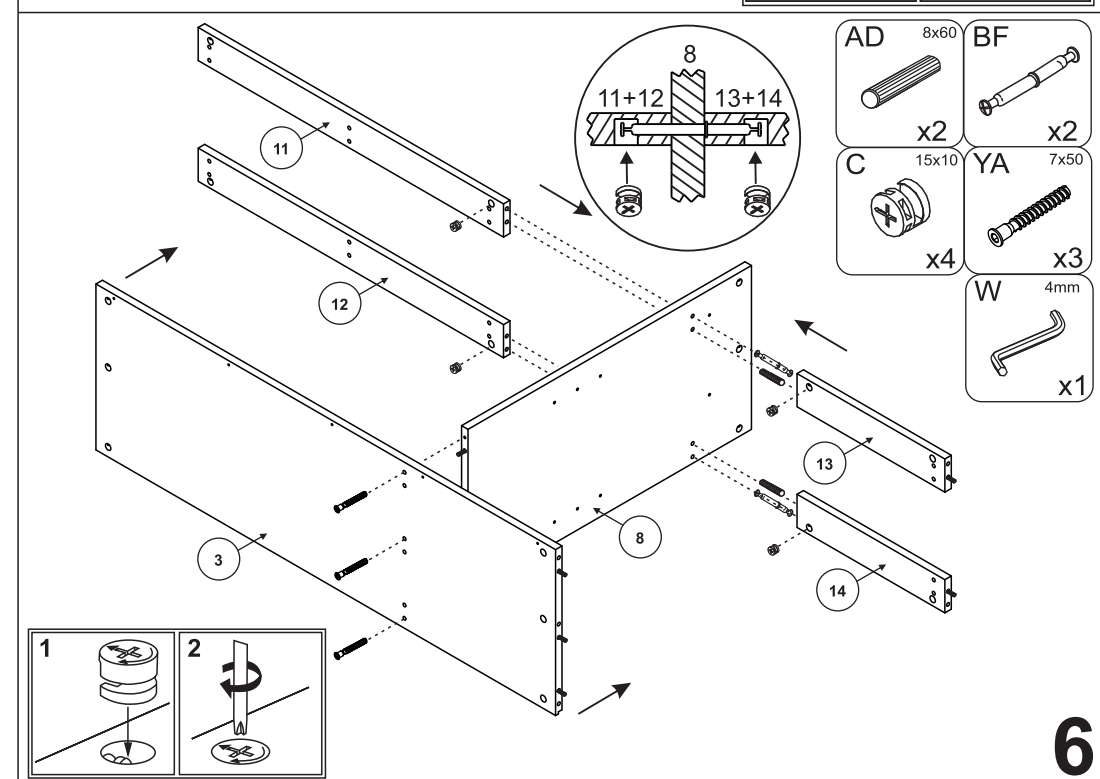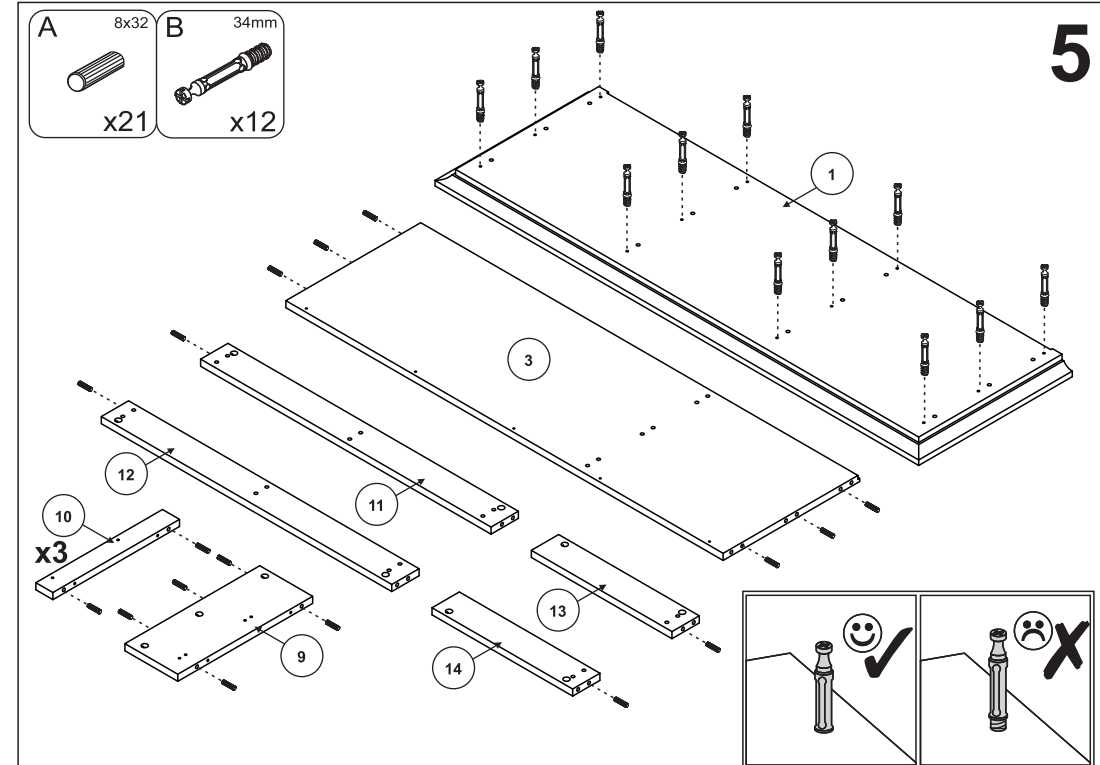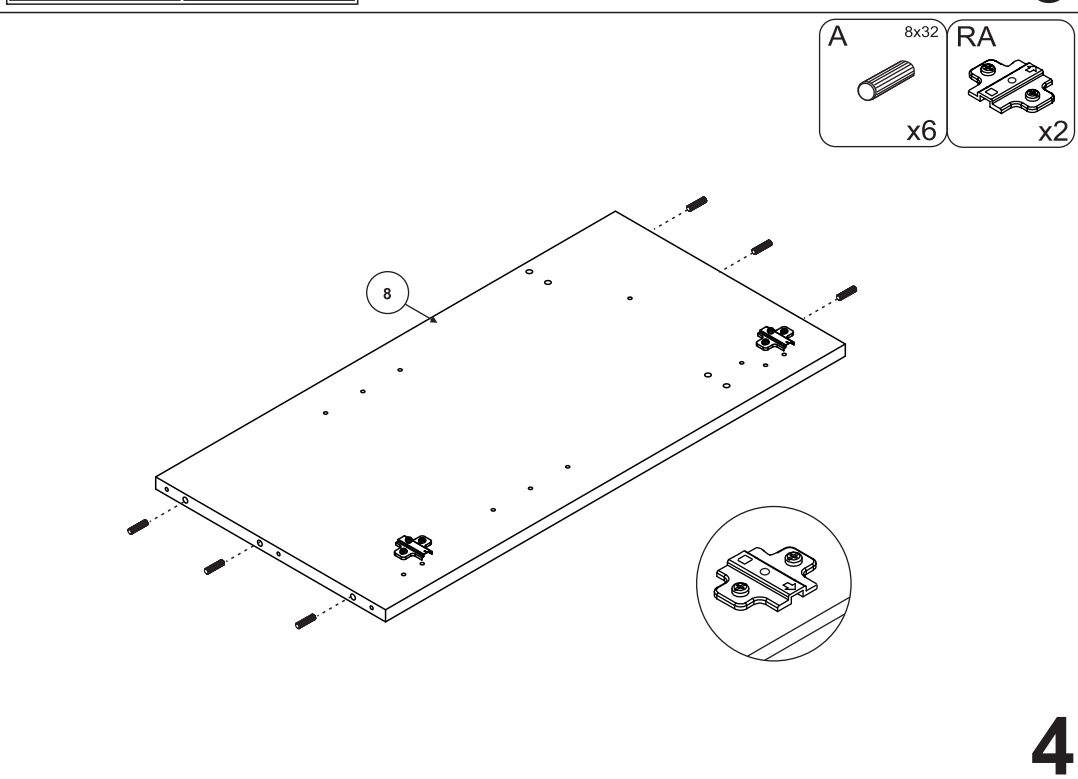
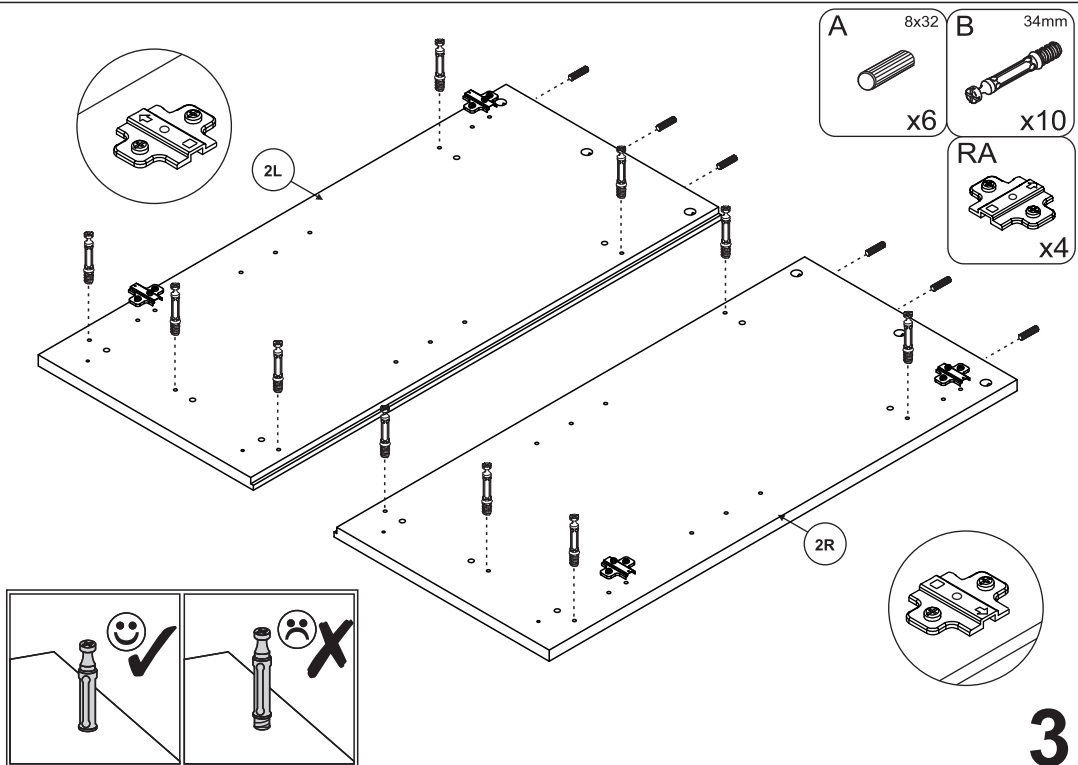


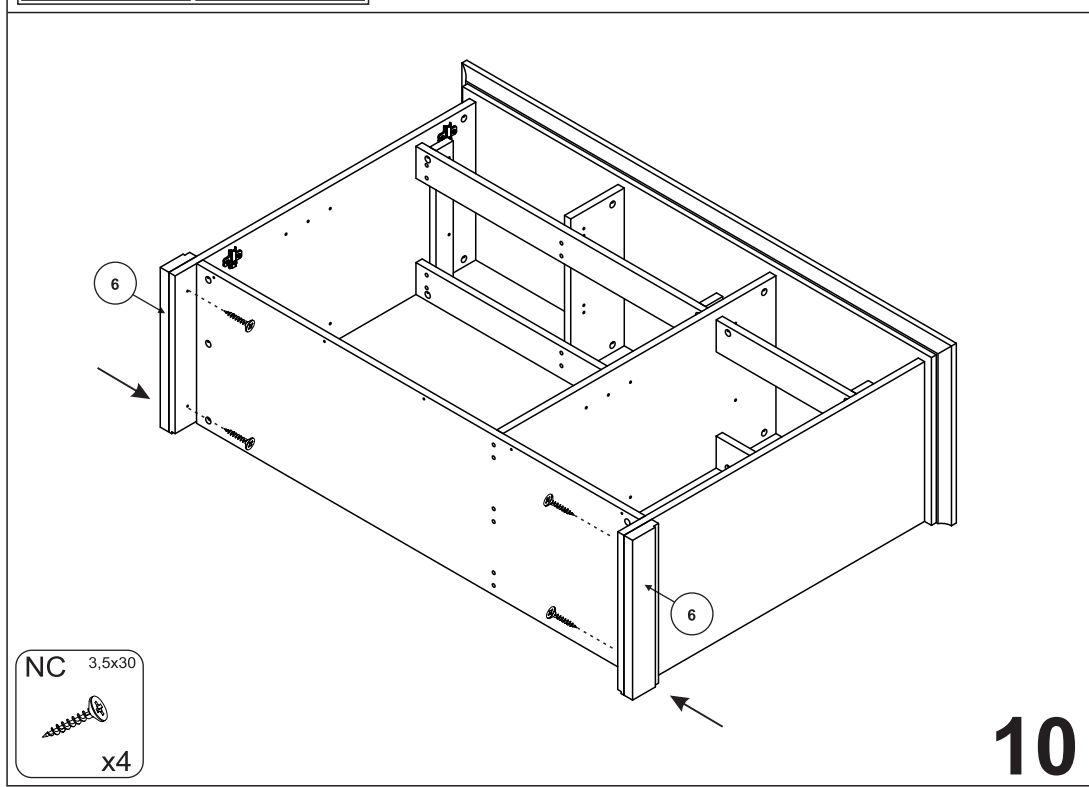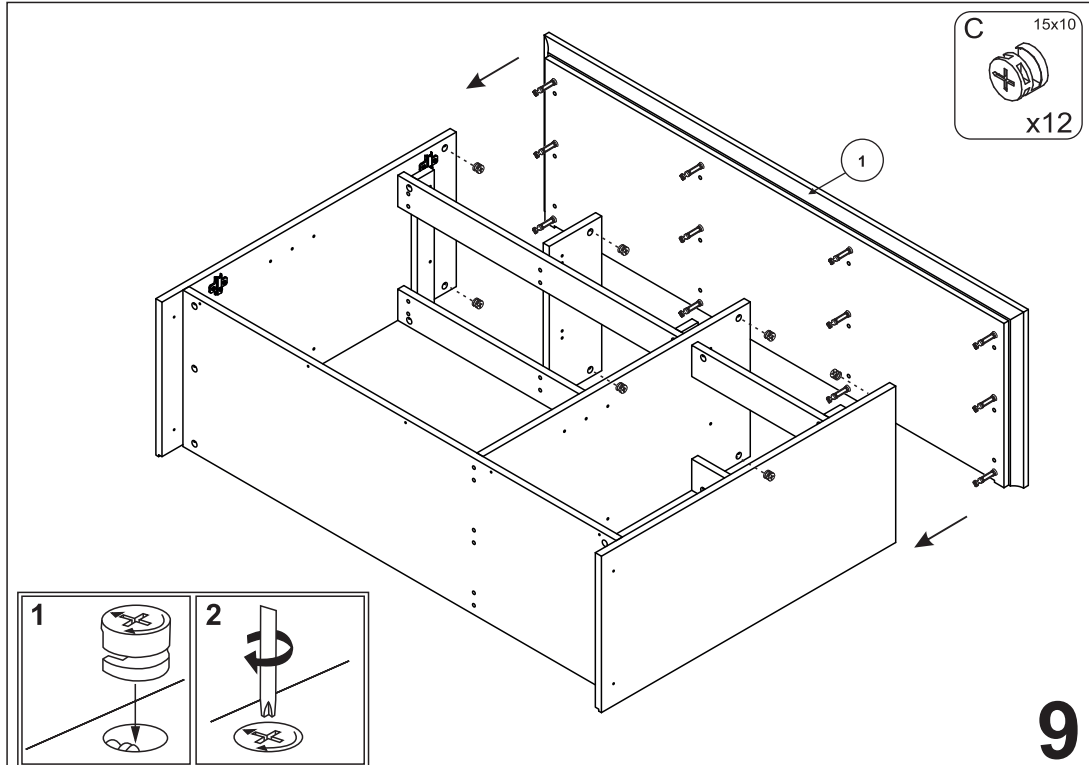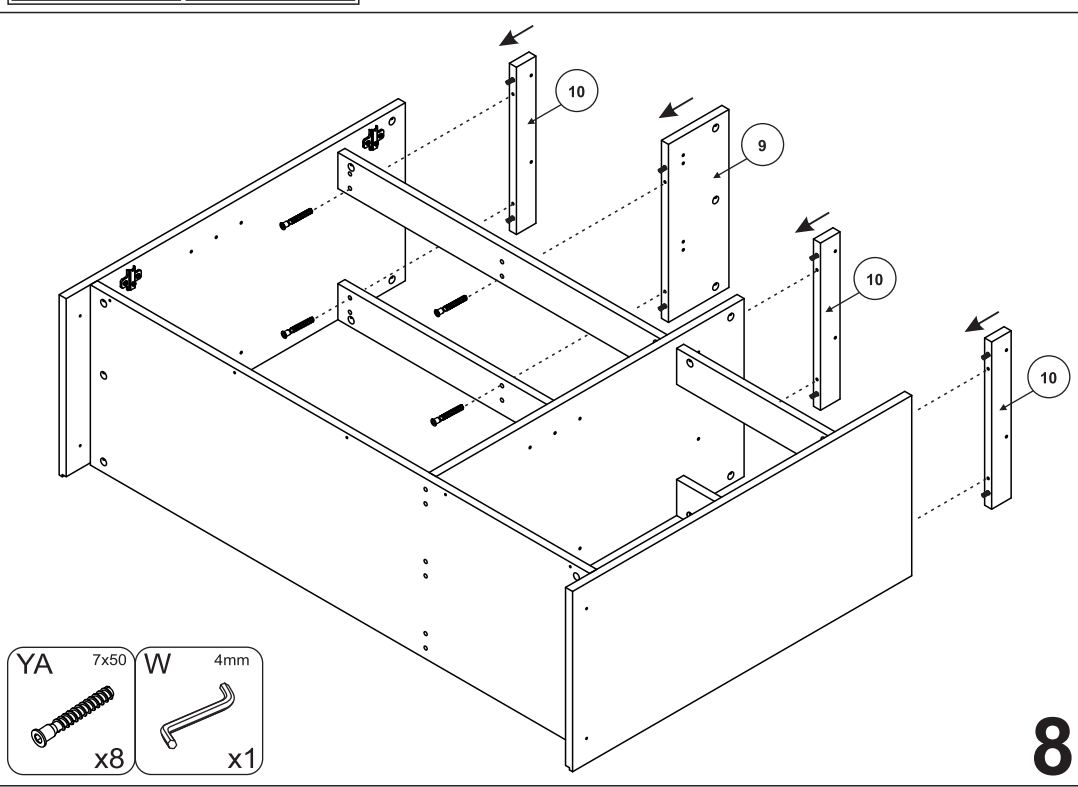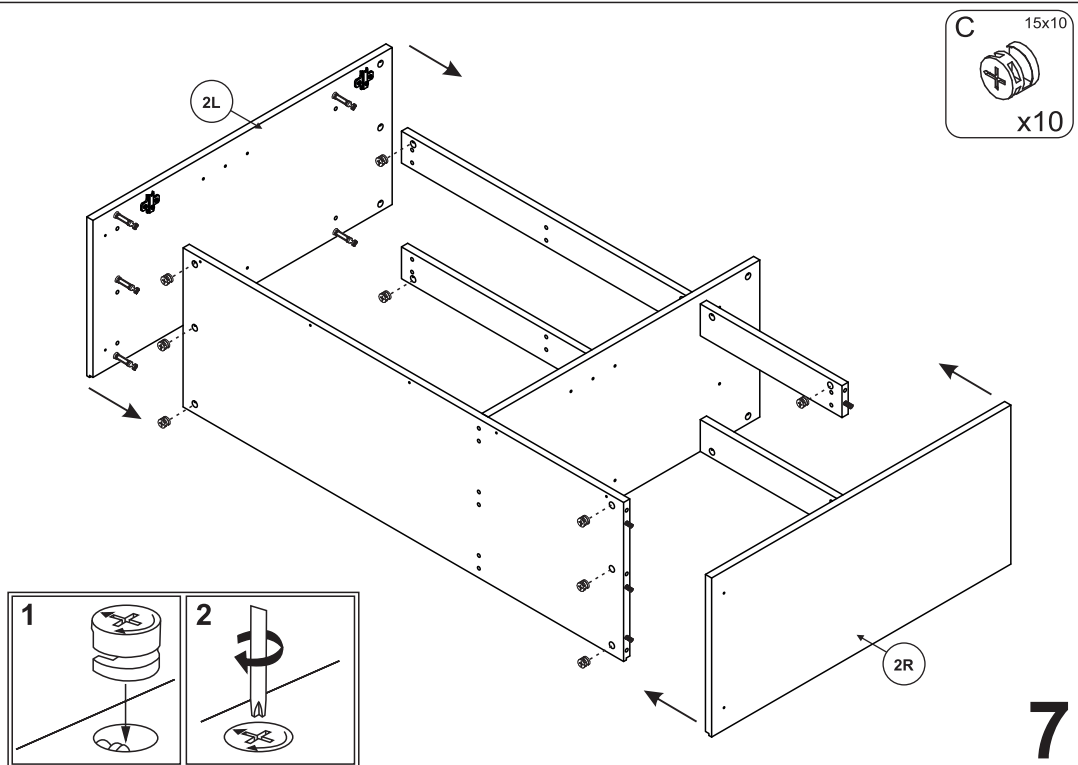




11

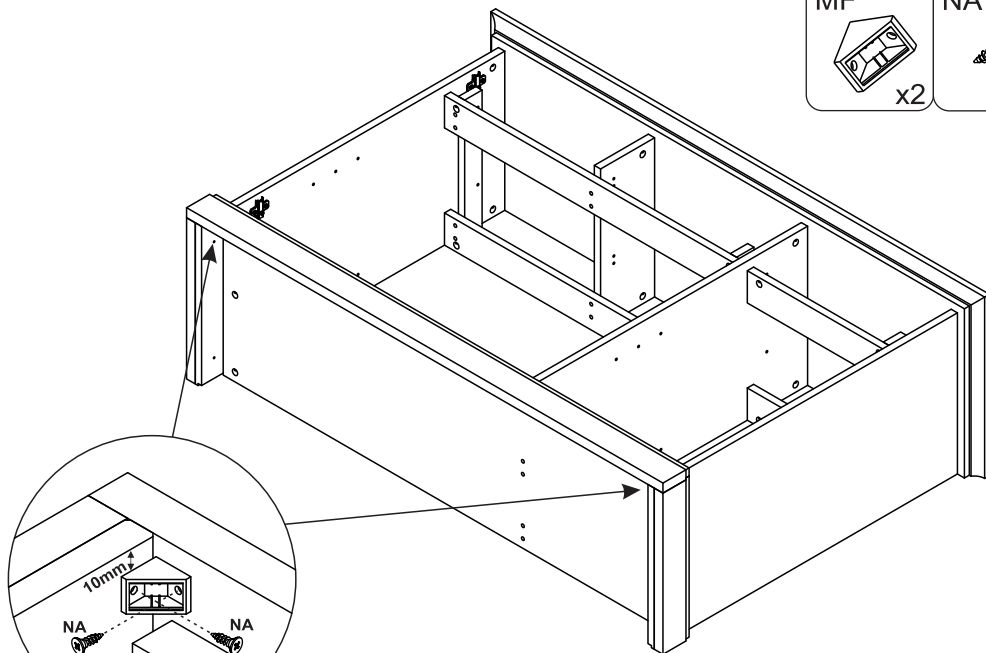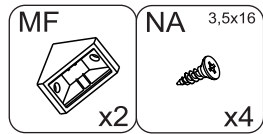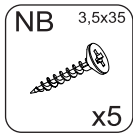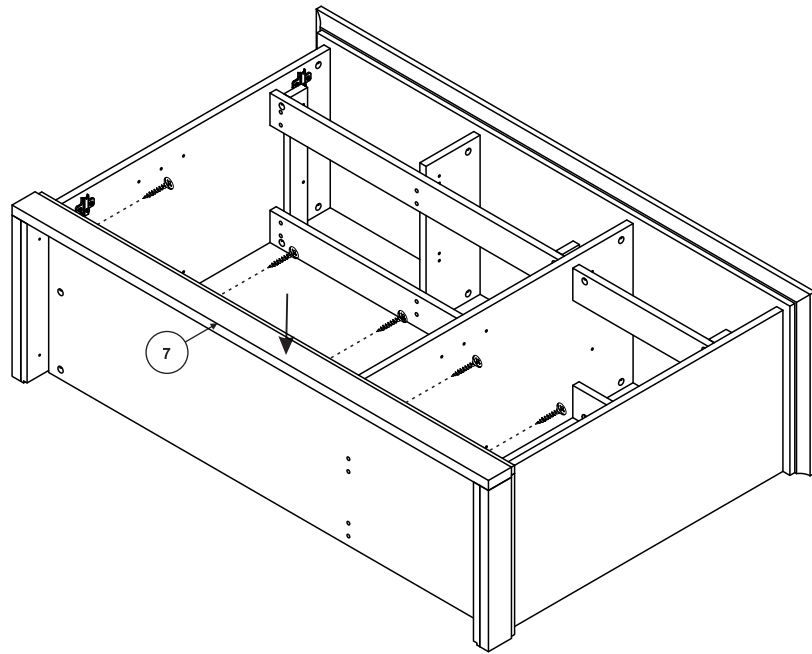




12

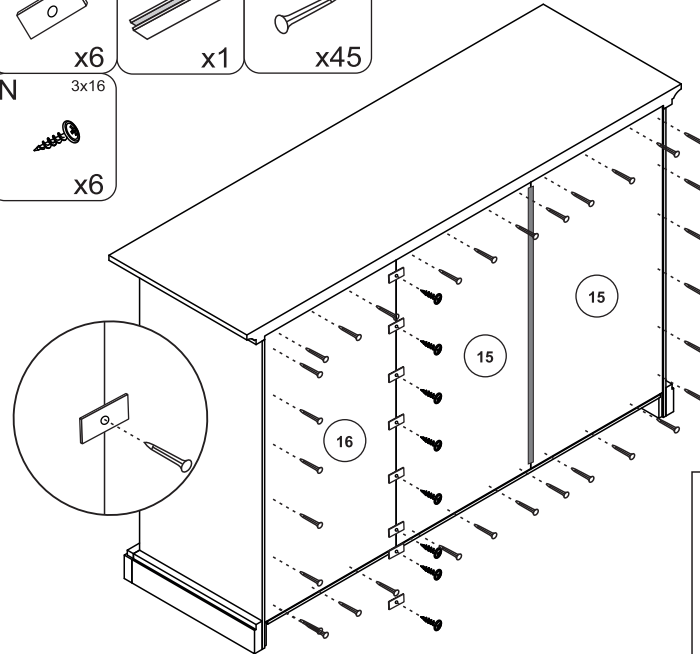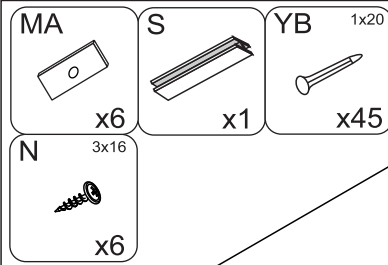



13

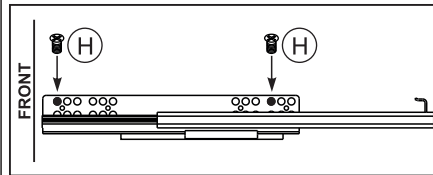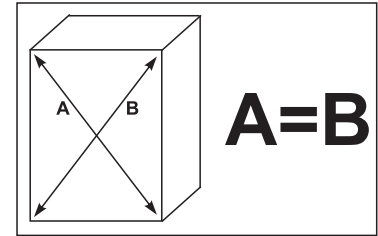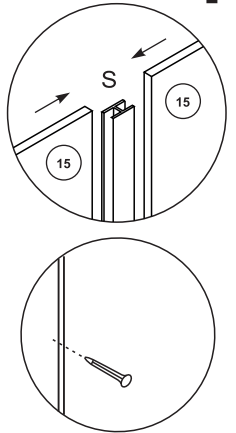



14

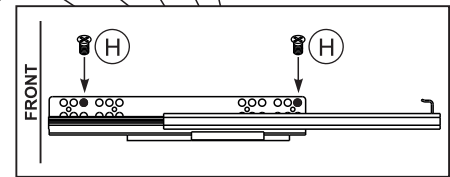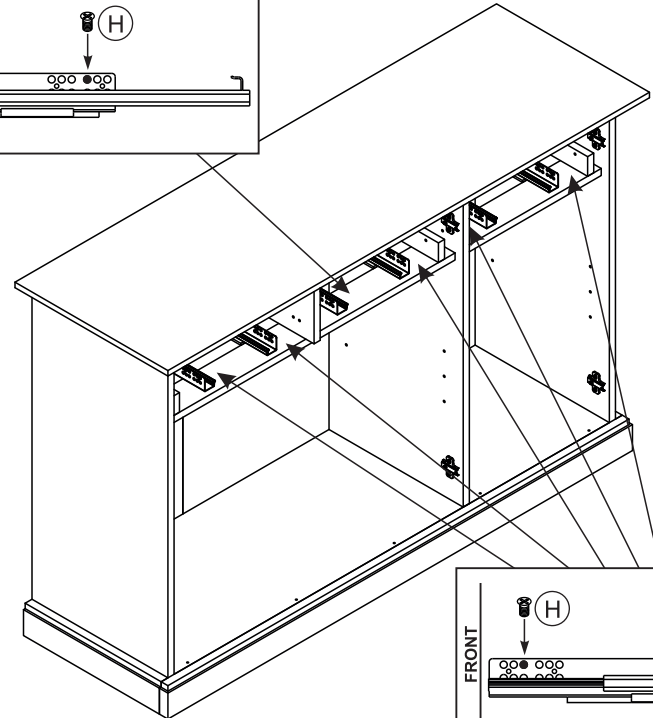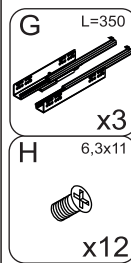


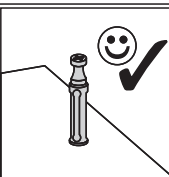


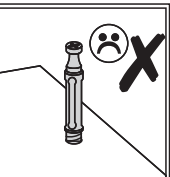


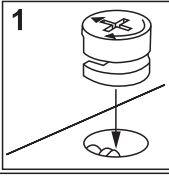


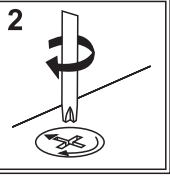

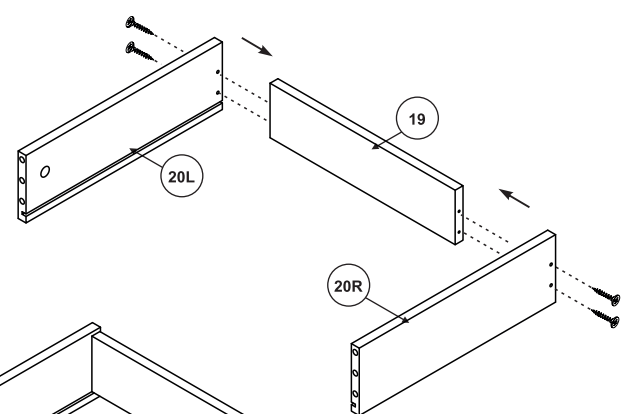

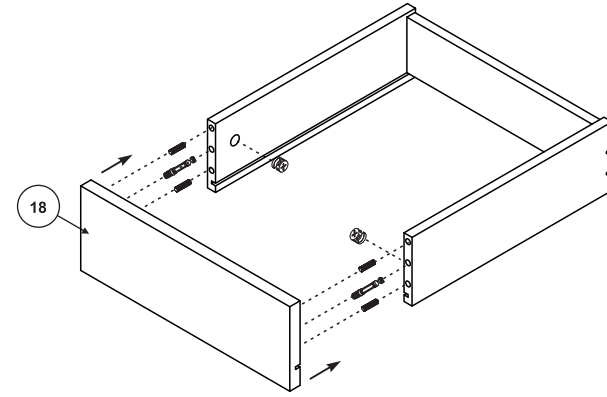

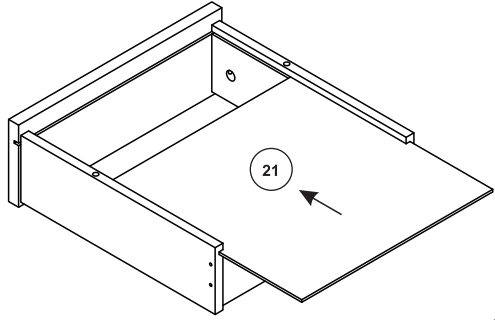

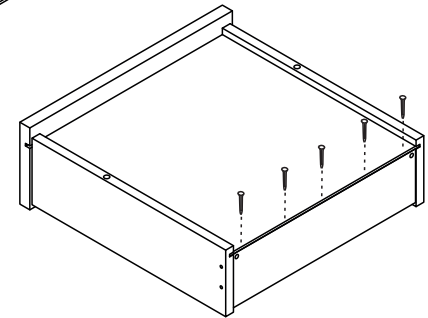

AB 5x32




x12

YB 1x20



x15

B 34mm



x6

C 15x10




x6

NB 3,5x35




x12

15

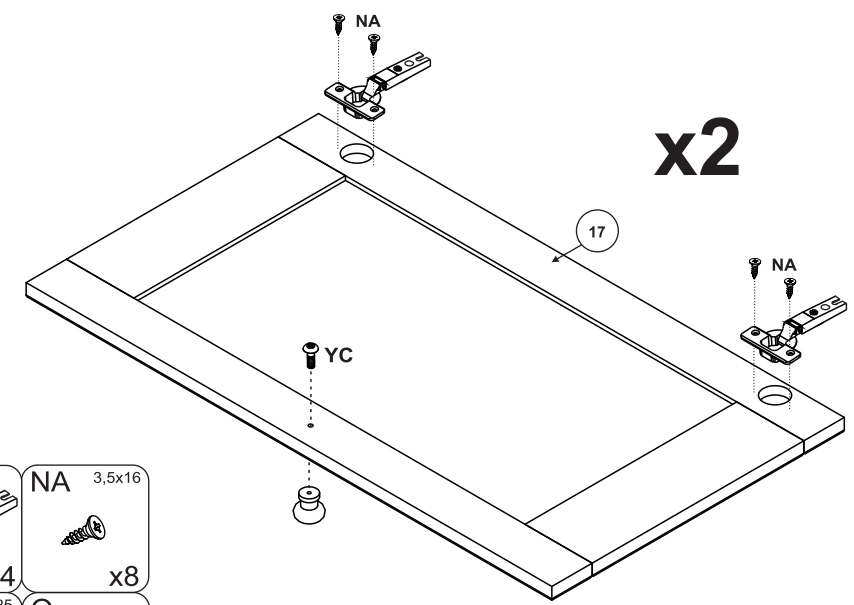

PA



x4

YC M4x25



x2

NA 3,5x16




x8

O



x2

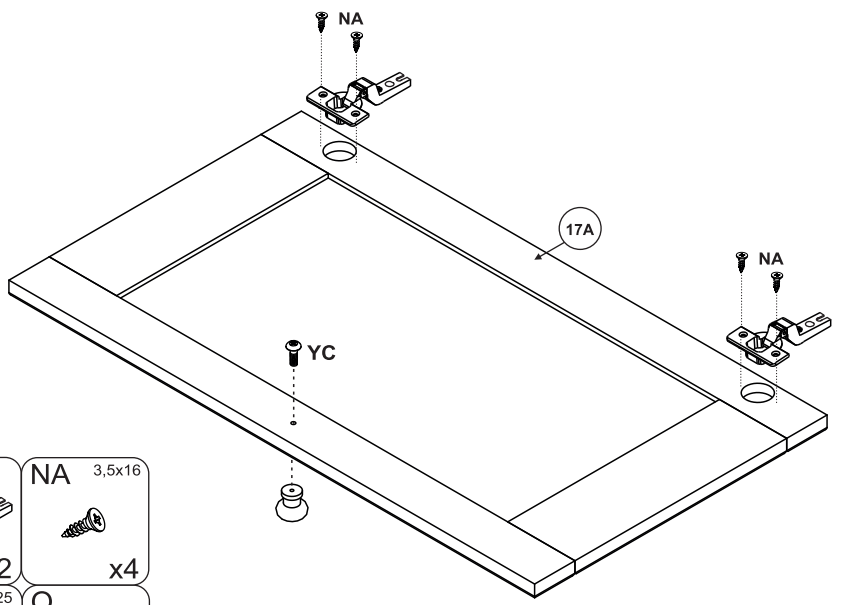

PB



x2

YC M4x25



x1

NA 3,5x16



x4


O




x1

16


17

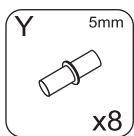

18

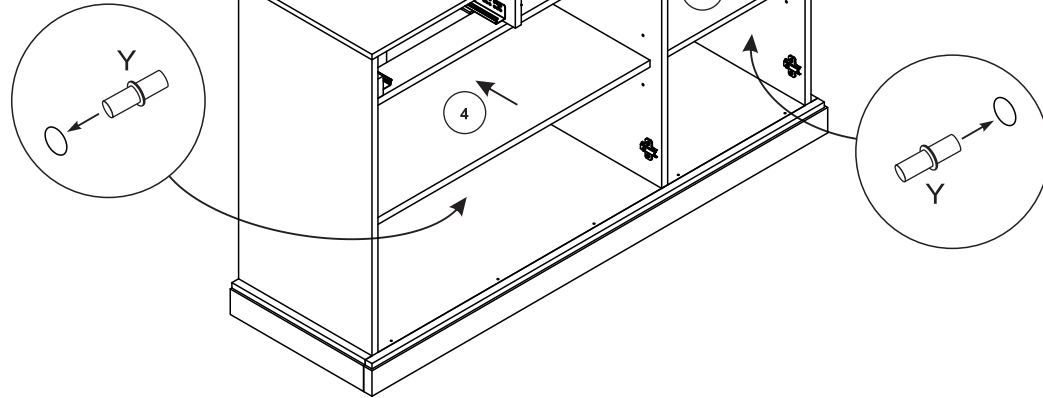

19

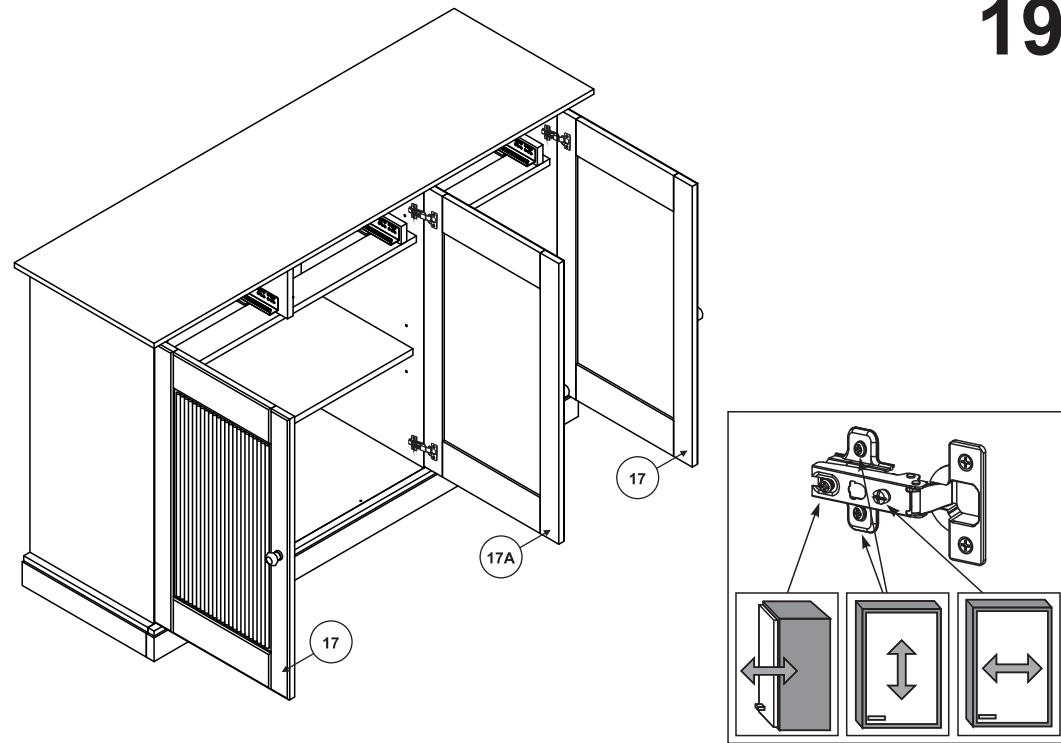

20

